


Anatomy of a Plan Set: reading a sheet number

US drawing sets follow the National CAD Standard: a **discipline letter**, a **sheet-type digit**, and a **sequence number**. Learn the code, then go straight to the sheet that carries the APs.

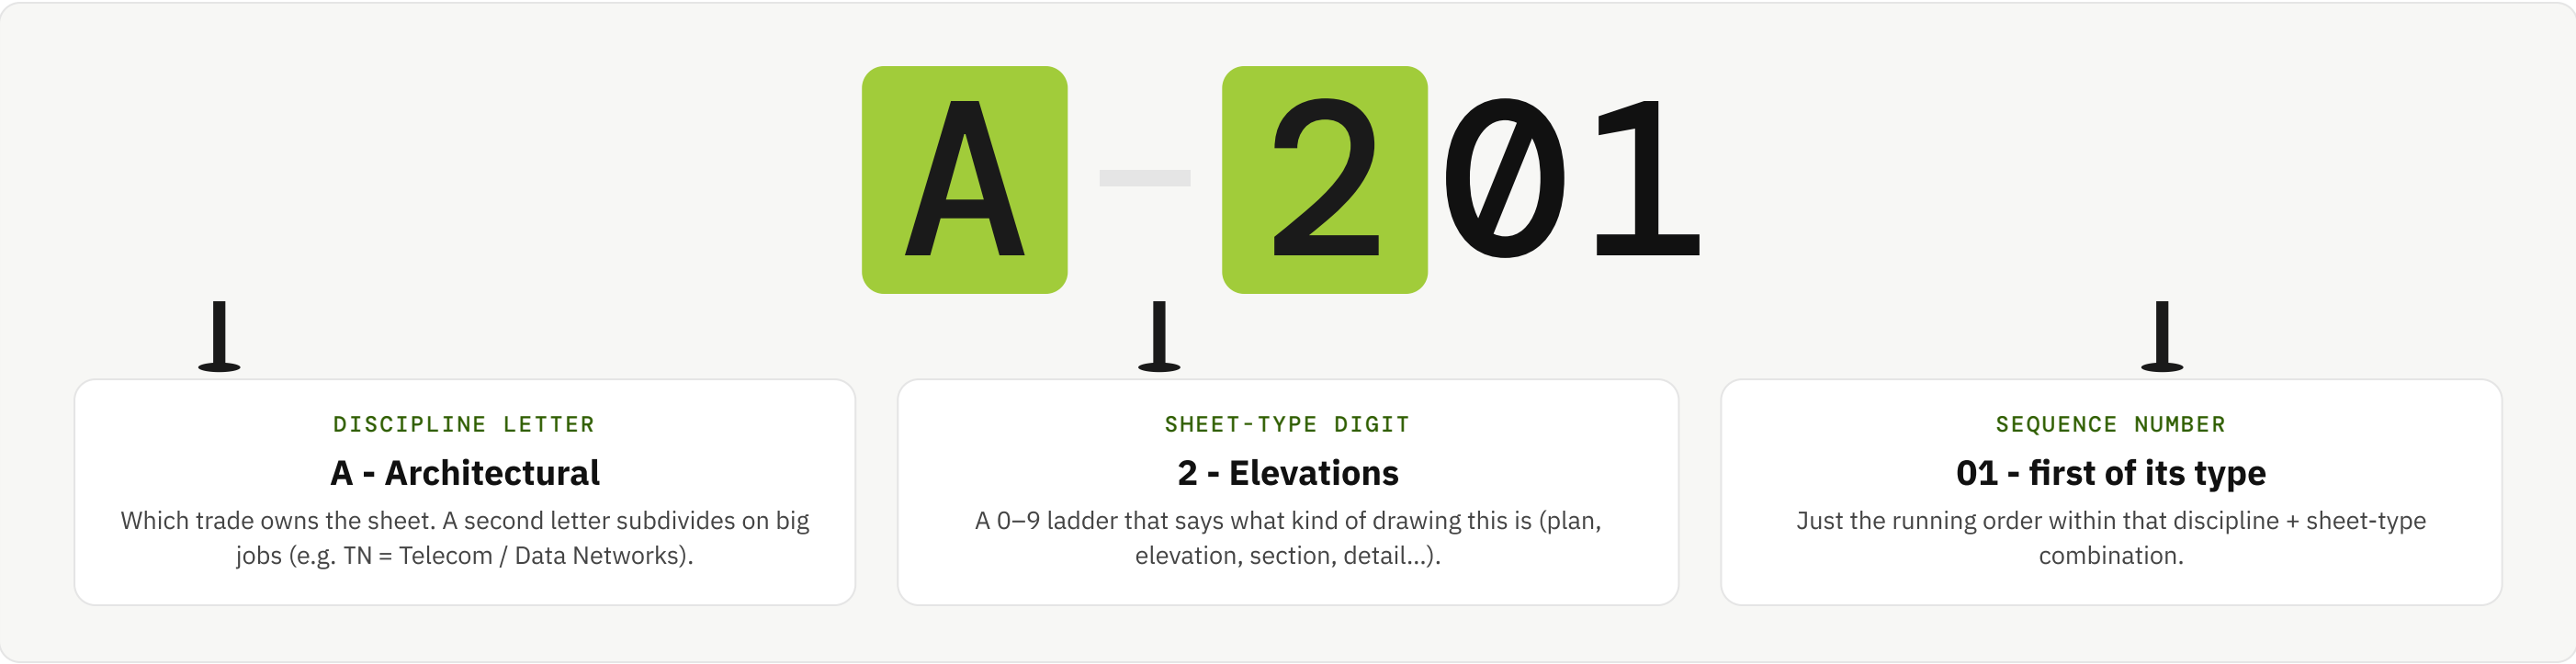

Discipline designators - who owns the sheet

G General	C Civil	L Landscape	S Structural
A Architectural	I Interiors	F Fire Protection	P Plumbing
M Mechanical	E Electrical	T Telecom	Q Equipment

Coordinate with A, E, T, M. Structured cabling and often the WLAN live on the **Telecom (T)** sheets - its own discipline with a Level-2 set (**TA** A/V, **TN** data networks, **TY** security). Highlighted cells are the trades a WLAN designer routinely coordinates against.

Sheet-type digit - 0 to 9

0	General - legends, notes, symbols
1	Plans the RCP lives here
2	Elevations
3	Sections
4	Large-scale views
5	Details
6	Schedules & diagrams
7	User-defined
8	User-defined
9	3D / isometric

THE ONE SHEET TO OPEN FIRST

The Reflected Ceiling Plan is the AP sheet

An **RCP** (an architectural **A-1xx** plan) is drawn as if a mirror on the floor reflects the ceiling upward - same left/right as the floor plan. It shows the **ceiling grid, mounting heights, and every ceiling element**. Placing APs on the floor plan alone and never opening the RCP is the classic miss.

MOUNTING HEIGHT

A 9 ft grid ceiling vs a 22 ft open-to-deck warehouse changes coverage and **AP selection** entirely.

PHYSICAL CONFLICTS

An AP dead-center of a room can collide with a **diffuser, light troffer, sprinkler, or soffit** - resolve it on paper, not at rough-in.

CEILING CONSTRUCTION

Lay-in grid vs hard-lid drywall vs open plenum vs clouds drives the **mounting method** and back-box coordination.