

Jobsite PPE - the badge-on baseline

The four items a general contractor most often requires before you badge onto an active construction site - each with the standard it is rated to and what it actually protects.

BASELINE **Hard hat + safety-toe + hi-vis + eye protection** is the common "let me on the site" set (gloves and hearing protection as the task warrants). OSHA sets the duty to provide and wear PPE - 29 CFR 1910.132 (general industry) and 1926.95 (construction) - and points to these consensus standards for the gear itself.

ANSI/ISEA Z89.1



Hard hat / helmet

Head impact and falling objects - the constant hazard under other trades working overhead.

WHAT THE RATING MEANS

- Type I** Top impact only
- Type II** Top + lateral impact
- G / E / C** Electrical (proof-test): General ≤2.2 kV / Electrical ≤20 kV / Conductive = none

ASTM F2413




Safety-toe footwear

Toes from **impact and compression** - dropped tools, gear, and rolling loads.

WHAT THE RATING MEANS

- I/75, C/75** Impact / compression protection class
- EH** Electrical-hazard shock resistance near energized gear

ANSI/ISEA 107

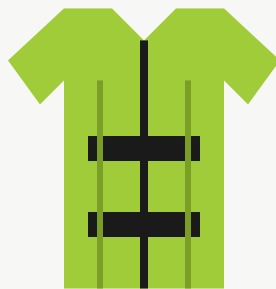

High-visibility apparel

Makes you **seen** in traffic and vehicle zones - forklifts, lifts, and roadway-adjacent work.

WHAT THE RATING MEANS

- Class 1** Low-traffic, off-road
- Class 2** Common jobsite / roadway-adjacent bar
- Class 3** High-speed traffic / low light

ANSI Z87.1



Safety glasses

Eyes from **impact debris** during the drilling and cutting a WLAN install involves.

WHAT THE RATING MEANS

- Z87+** High-impact-rated lens and frame
- Side shields** Guard against debris from the side