
RIGSTA

Rigsta User Manual

PC · Tablet · Phone — Merge · Convert · Samples · SongBook · Live Control · Harmony · Tuning

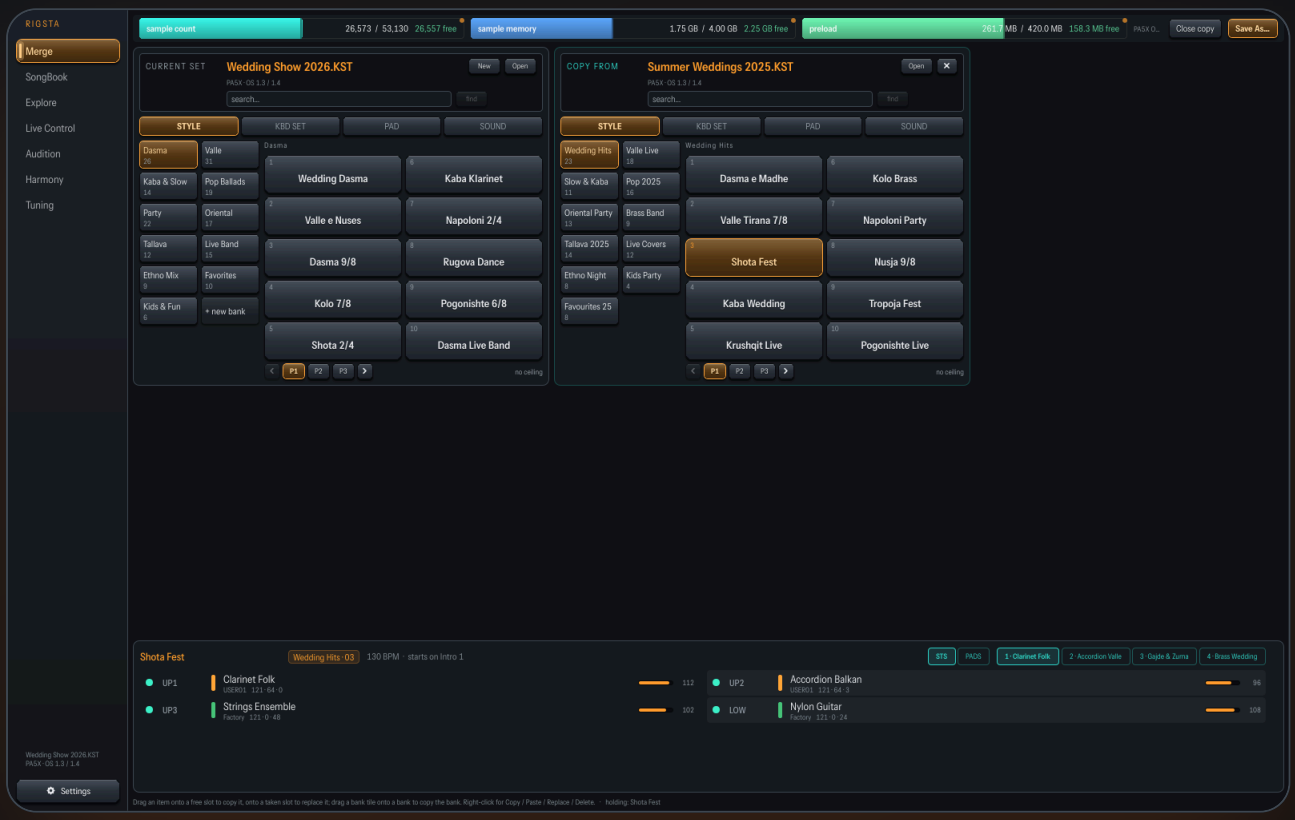

For Korg Pa4X & Pa5X · Windows · Android · Version 1.0

Quick links

Start here
Install, open your first set, make your first merge

Phone, tablet and PC
What each screen shows, and every gesture

Merge sets
Copy styles, keyboard sets, pads and sounds between sets

Convert Pa4X → Pa5X
Bring a Pa4X set onto a Pa5X, edits and all

Save As
Write a new set; the one you opened is never touched

Samples & sounds
See and hear every sample, zone and drum key

Connect the keyboard
The cable, the ports, the keyboard's MIDI settings

Play live
Styles, STS and elements from your phone, tablet or PC

Harmony & Tuning
A live second voice; oriental scales in one tap

Something wrong?
The common problems and what to do

Contents

1. Welcome to Rigsta
2. Getting started
3. Phone, tablet and PC
4. Opening a set
5. The Merge page
6. Converting a Pa4X set to Pa5X
7. Save As
8. The SongBook page
9. The Explore page
10. Connecting your keyboard
11. Live Control

12. Harmony

13. Tuning

14. Audition

15. Settings

16. Troubleshooting

17. Glossary

1. Welcome to Rigsta

IN SHORT

- Rigsta is **one app for your Korg Pa sets**: merge them, convert Pa4X sets to Pa5X, explore and hear every style and sound, and play live from a phone, tablet or PC.
- **Your sets are safe.** A set you open is only read. Every change happens in memory, and **Save As always writes a new set folder**.
- It runs on **Windows** and **Android**, with a layout made for each screen.

What you can do with Rigsta:

- **Merge sets.** Open the set you work on and a second set to copy from. Drag styles, keyboard sets, pads and sounds across. Everything an item needs comes with it: its sounds, samples, keyboard sets and pads. → The Merge page
- **Convert Pa4X sets to Pa5X.** Convert the set as you have edited it, in one step, or convert the set you copy from and merge its best parts into your Pa5X set. → Converting
- **Explore and hear.** Every style's tracks, STS, pads and chord variations. Every sound's multisample zones and drum keys, drawn on a piano. Every sample, played on your device. → The Explore page
- **Edit.** Swap a sound, rename an STS, edit SongBook songs and set lists. → SongBook
- **Play live.** Live Control puts up styles, STS and style elements from your screen, with the lights following the keyboard. → Live Control
  - **Harmony** adds a second voice, a scale-true third or sixth from your melody. → Harmony
  - **Tuning** sends oriental, Balkan and historic scales to the keyboard in one tap. → Tuning

THE GOLDEN RULE

A set you open is only ever **read**. Every change happens in memory. **Save As** writes a **new** set folder. Your original set on disk is never written. → Save As

1.1 Supported keyboards

KEYBOARD	SET FOLDER	WHAT RIGSTA DOES
Pa5X (OS 1.0 – 1.4)	`.KST`	Read, merge, edit, SongBook, Live Control, Save As
Pa4X (OS 1.x, 2.x, 3 / OS Next)	`.SET`	Read, merge, edit, SongBook, **convert to Pa5X**, Save As
Pa3X, Pa800, Pa600, Pa1X, Pa700, Pa1000	`.SET`	Recognised and opened for viewing. Merging is not offered yet.

Rigsta recognises the keyboard model and OS generation from the files in the set, and says what it found under the set's name, for example `pa4x-v3 (PA4X, OS V3 / OS Next; detected …)`.

2. Getting started

IN SHORT

1. **Install** Rigsta on your PC or Android device.
2. **Open a set**: a `.SET` or `.KST` folder, from your disk, an SD card or a USB stick.
3. **Work**: merge, convert, edit, or play live.
4. **Save As** writes your result as a new set, ready to load on the keyboard.

2.1 Installing on Windows

1. Run **Rigsta-Setup.exe** and follow the installer.
2. Start **Rigsta** from the Start menu.
3. If Windows asks the first time, allow Rigsta to run.

Nothing else needs installing. The keyboard's USB-MIDI connection works with Windows' own driver. → Connecting your keyboard

2.2 Installing on Android

1. Install the Rigsta APK on your phone or tablet.
2. The first time you start it, Rigsta asks: **"Allow Rigsta to read and write your sets"**. A set is a folder of many files, which Rigsta reads and writes whole. Tap **Allow**, switch on **Allow access to manage all files** for Rigsta, then come back. Rigsta carries on by itself.
3. On a phone or tablet, Rigsta opens on **Live Control**. On a PC it opens on **Merge**.

> NOTE
>
> You can answer **Not now**. Rigsta asks again the moment you open or save a set, and carries on once access is allowed.

2.3 Your first merge, in five steps

1. Open the set you want to build: **Merge** → **Open a set...** → Opening a set
2. Open the set to take from: **Copy from...**
3. Pick **STYLE**, then drag a style from **COPY FROM** onto a free slot of your set. (On a touch screen, long-press it and choose **Copy**, then long-press a free slot and choose **Paste**.) → Copying
4. Watch the report: what moved, what was reused, what was refused and why.
5. **Save As...** writes the new set. Copy it to a USB stick and load it on the keyboard. → Save As

2.4 While Rigsta works, and when it is done

- **While it works** (opening, copying, converting, saving), a cover shows what it is doing and how long it has taken. Rigsta reads a set whole into memory, samples and audio included, so a large set takes a little while. Leave the app open until the cover goes.

- **When it is done**, a result box says **DONE** (green) or **NOT DONE** (red), with a plain report of exactly what happened. Close it with **Close**.


3. Phone, tablet and PC

IN SHORT


- **One app, three layouts.** A PC gets a rail of pages down the left. A tablet gets the same rail, narrower, with finger-sized keys. A phone gets tabs along the bottom, and a column of tabs down the left when it lies on its side.
- **On a phone, the stage pages come first:** Live, Harmony, Audition and SongBook are tabs; everything else is under **More**.
- **Touch and mouse do the same things.** A long press is a right-click. A sideways swipe turns a page of tiles.

3.1 The same page on every screen

Rigsta decides the layout from the size of the window or screen, so a small PC window can look like a tablet. You can also choose the layout yourself. → Settings → LAYOUT

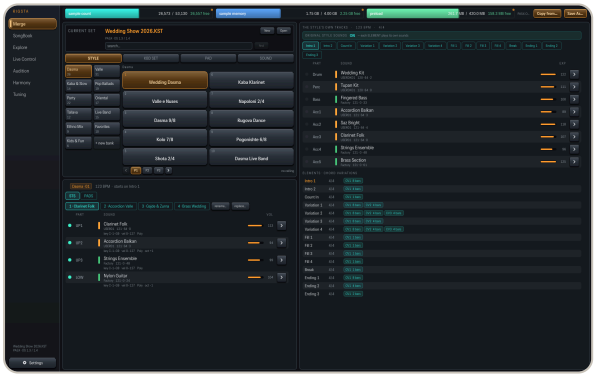


PC: the rail on the left, the set and the item's detail side by side

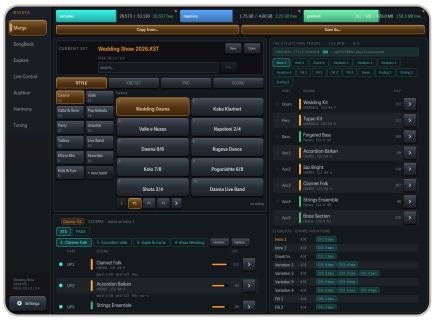


Tablet: the same rail, narrower; finger-sized keys




Phone: tabs along the bottom; the page scrolls

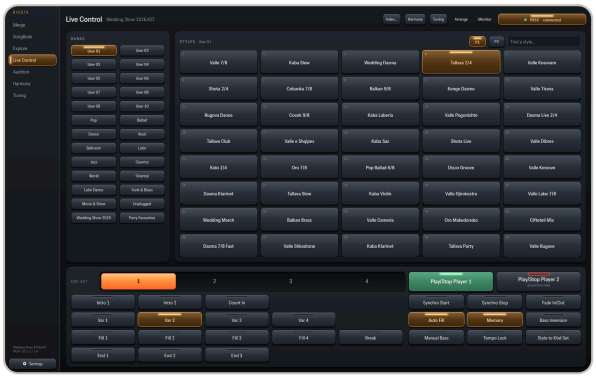

PC: banks, styles and the deck on one screen

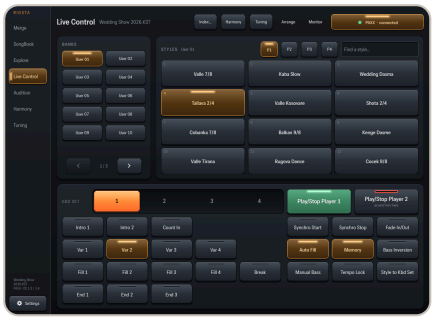

Tablet on its side

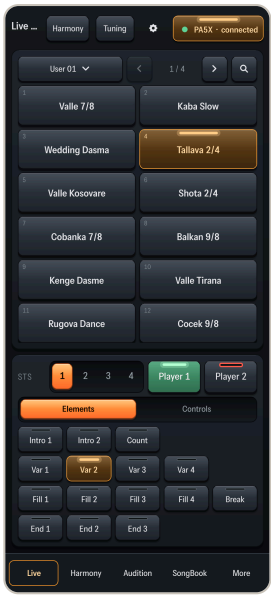

Phone upright: styles above, the deck at your thumbs

	PC (DESKTOP)	TABLET	PHONE UPRIGHT	PHONE ON ITS SIDE
Which layout	a window 1200 px wide or more	narrower than 1200 px, and every Android tablet	narrower than 720 px	wider than tall and under 560 px high
Pages	the rail, left	the rail, left (narrower)	tabs along the bottom + **More**	a column of tabs, left, + **More**
Settings	⚙ **Settings**, foot of the rail	⚙ **Settings**, foot of the rail	**More** → **Settings**	**More** → **Settings**
Opens on	Merge	Live Control	Live Control	Live Control
Keys	mouse-sized	finger-sized	finger-sized	finger-sized
Details of an item	beside the list	beside the list	its STS under the set; **Details** for the rest	**Details**
Two sets on Merge	side by side	side by side (stacked when narrow)	one above the other; scroll	side by side, half each

3.2 Getting around

On a PC or tablet: the rail. The pages run down the left edge:

PAGE	WHAT IT IS FOR
Merge	Open sets, copy between them, delete, convert, Save As → 5
SongBook	The SongBook's songs and set lists → 8
Explore	Everything inside a style, keyboard set, pad or sound, and the sample library → 9

PAGE	WHAT IT IS FOR
Live Control	Play from the app: styles, STS, elements, transport → 11
Audition	Hear a style's phrases on the keyboard, try other sounds → 14
Harmony	A live second voice from your melody → 12
Tuning	Scales and quarter tones, sent to the keyboard → 13
⚙ **Settings**	Look, layout, memory, keyboard, MIDI OUT → 15


The name of the set you work on sits at the foot of the rail, above **Settings**.

On a phone: the tabs. The pages you use on stage are one tap away:

- **Live · Harmony · Audition · SongBook** along the bottom.
- **More** opens a menu with **Open a set…** (or **Open another set…**), **Tuning**, **Merge**, **Explore** and **Settings**. **More** stays lit while you are on one of its pages.



Phone on its side: the tabs run down the left edge

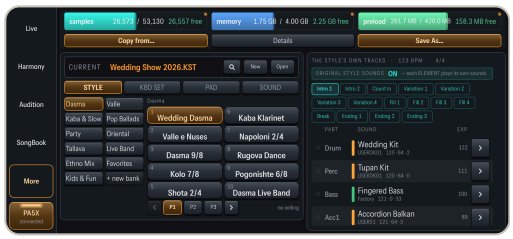

Merge on a phone on its side: the two sets side by side

On a phone on its side, the same tabs run down the left edge, with **More** below them and the keyboard's connection key at the foot. The pages put things side by side instead of stacking them.

Sheets. Where a screen has no room for an item's detail, it slides in from the right as a **sheet** with a **Close** button:

PAGE	THE SHEET	OPENS WHEN
Merge	the item's detail	you press **Details** (after picking a slot)
Explore	the item or record	you pick a row
SongBook	**SONG**	you tap a song
Audition	**THE STYLE**	you tap a style

Panels such as Harmony and Tuning on Live Control open over the page. A tap outside closes them, unless you choose **Stay until closed**. → Settings → PANELS

3.3 Touch and mouse: every gesture

TO…	WITH A MOUSE	WITH A FINGER
Pick a slot, tile, key or row	click	tap
Open a slot's or bank's menu (Copy, Paste, Replace, Delete)	**right-click**	**long press**
Copy an item or a bank between sets	drag it from COPY FROM onto your set	long press → **Copy**, then long press → **Paste** (or drag)
Turn a page of style tiles, banks, chords or scales	the arrows, the page keys, or drag sideways	**swipe sideways**: left for the next page, right for the one before
Scroll a page that does not fit	the wheel	drag up or down
Move along a sound's piano	drag the range bar	swipe the piano sideways, or drag the range bar
Show more or fewer piano keys	drag an edge of the range bar	drag an edge of the range bar
Hear a key, zone or sample	click it	tap it
Change a tempo, transpose or selection number	drag up or down, or the wheel; double-click to type	drag up or down; double-tap to type
Choose in a picker (sound, style, pad)	click, then **Select**; or double-click	tap, then **Select**; or double-tap
Switch a tuning key's quarter tone	—	**long press** the key
Close a sheet, panel or dialog	**Esc**, or click outside	tap outside, or **Close** / ×
Bring back the phone's system bars in full screen	—	swipe in from the screen's edge

HOW A SWIPE TURNS A PAGE

Swipe at least a fifth of the width (60 px is always enough) and let go: the next page slides in. A short or slow move stays a tap, so you never pick a tile by accident while swiping. Swiping works wherever the tiles have more than one page: styles and banks on Live Control, chords and presets on Harmony, scales on Tuning.

NOTE


There is no swiping between pages or between the two sets. Use the rail or tabs to change page; on a phone upright, scroll down to reach the set you copy from.

3.4 Where things are


I WANT TO…	PC / TABLET	PHONE
Open a set	**Merge** → **Open a set…**, or **Open** on the set's panel	**More** → **Open a set…**
Open a set to copy from	**Merge** → **Copy from…**	**More** → **Merge** → **Copy from…**
Save As	**Save As…** on Merge or SongBook	the same, via **More** → **Merge** or the **SongBook** tab
See an item's full detail	pick it: it shows beside the list	pick it, then **Details**
Connect the keyboard	**Settings** → **KEYBOARD**, or the connection key on Live Control and Harmony	tap the connection pill: the **KEYBOARD** sheet opens
Make the Pa5X Live Control index	**Index…** on Live Control	tap the ⚠ notice → **Make the index…**
Harmony or Tuning while playing	**Harmony** / **Tuning** on Live Control	the same keys; the panel covers the styles, the deck stays
Change the theme, text size or layout	**Settings**	**More** → **Settings**

3.5 Page by page


- **Merge.** On a PC the two sets sit side by side, with the detail along the bottom and the gesture hints under it. On a phone upright they stack; scroll to the second. Pane titles shorten to **CURRENT** and **FROM**, search hides behind 🔍, and the item's detail opens with **Details**.
- **Live Control.** On a PC and tablet: banks on the left, styles in the middle, the deck below. On a phone: a bank button ▾ opens the banks; the deck sits under the styles, with **Elements** and **Controls** to switch its keys. On its side: styles left, deck right. The **Monitor** is on PC and tablet only.
- **Harmony.** Two columns on PC and tablet. On a phone, **Play** and **Setup** switch between playing and the sounds and routing.
- **Tuning.** On a tall screen the piano sits on top and the scales below; on a short one, scales left and piano right.
- **Explore, SongBook, Audition.** On narrow screens the detail becomes a sheet. The SongBook opens a song, a genre or a set list as its own page, with a back arrow.
- **Pickers** (sounds, styles, pads) fill the whole screen on a phone.

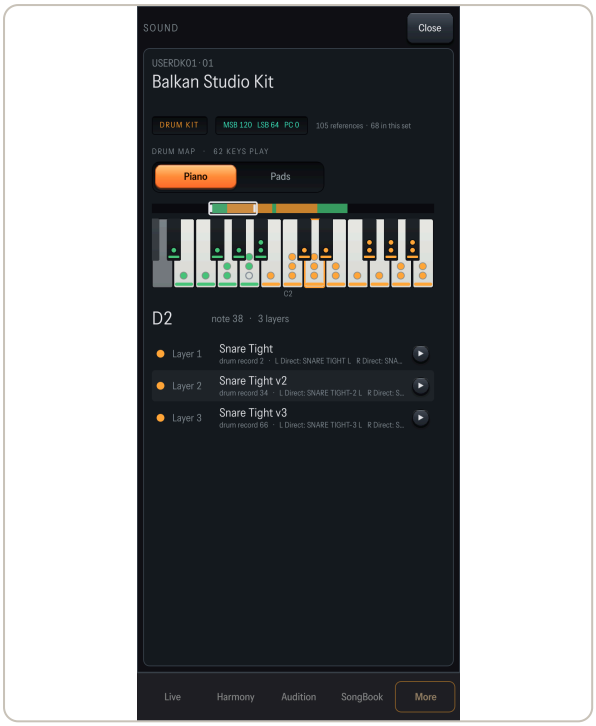

Explore on a phone: a drum kit's map in its sheet

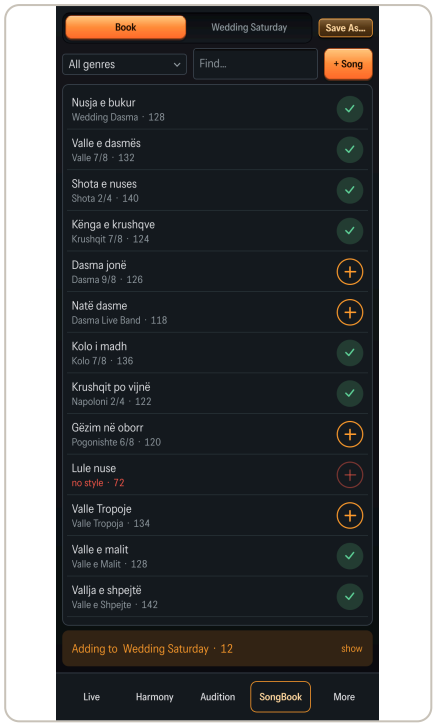

The SongBook on a phone

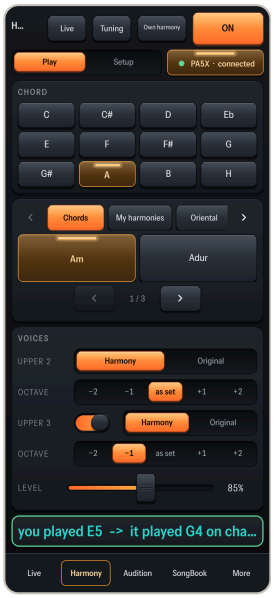

Harmony on a phone


4. Opening a set

IN SHORT

- A Korg set is a **folder**: `.SET` (Pa4X) or `.KST` (Pa5X). You open the folder itself.
- Rigsta checks the **memory** first and asks before letting **unsaved changes** go.
- A set is **read whole into memory**. If part of it cannot be read, Rigsta opens the rest and says which part.

To open one:

1. On **Merge**, press **Open a set…** (or **Open** on the *Current set* panel). On a phone: **More** → **Open a set…**.
2. Choose the set folder and confirm.

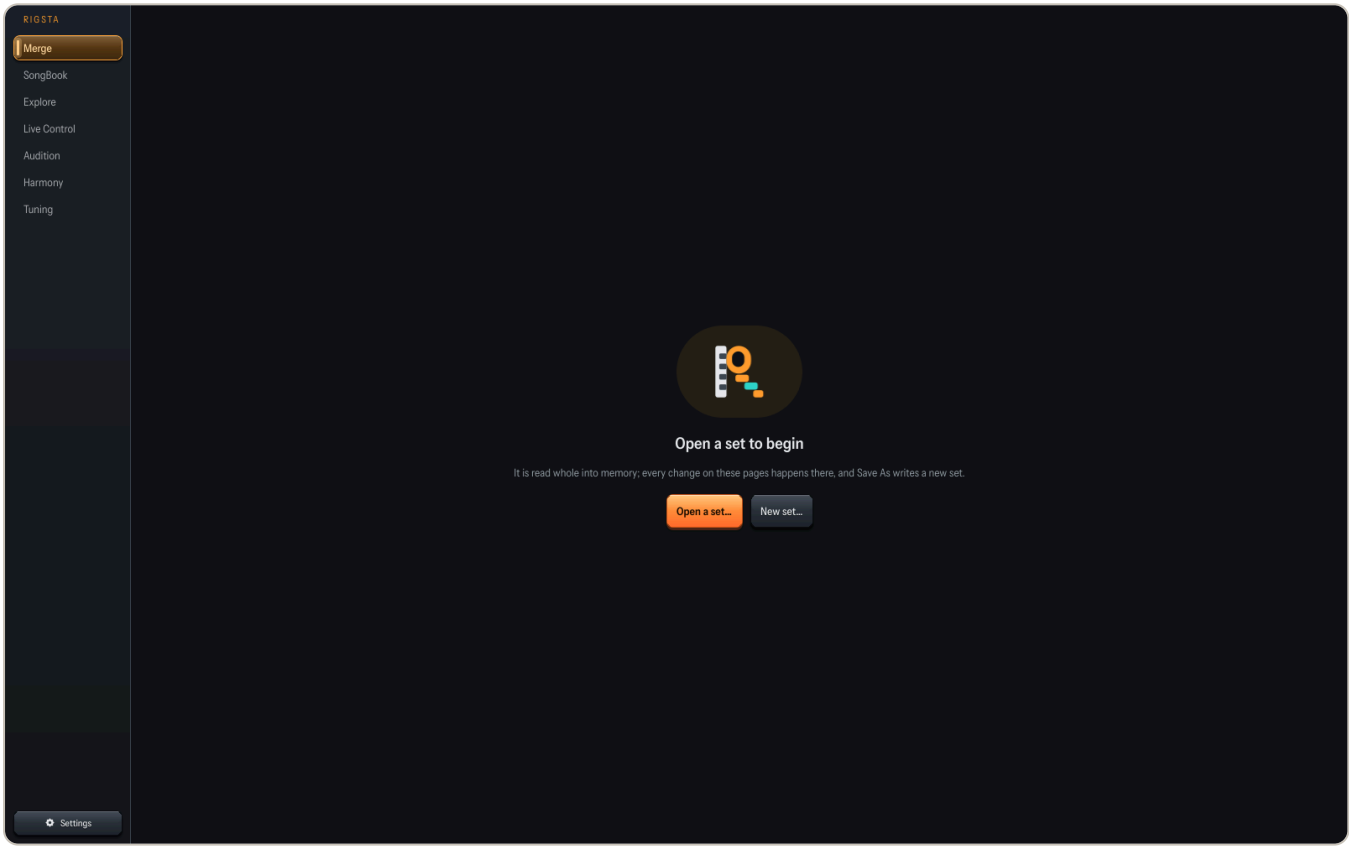

Rigsta with no set open

4.1 Protections when you open

- **Memory check.** If the set may not fit in your device's free memory, Rigsta says so before reading it: *"This set may not fit in memory."* It shows how large the set is, how much it needs and how much is free. Choose **Cancel** or **Open anyway**.
- **Unsaved changes.** If the set you work on has changes no Save As has written yet, Rigsta asks: *"The set has changes that are not saved."* Choose **Keep working on it** or **Lose the changes**. It asks before opening another set or making a new one.

- **Honest reading.** If part of a set cannot be read (a damaged bank, say), Rigsta opens the rest and names what did not read. It never guesses at it and never writes into it.

4.2 Large sets on small devices

Under **Settings** → **MEMORY** → **SET AUDIO**, **Auto** keeps a set's audio in memory when it fits, and otherwise leaves the audio on disk and reads it only when a merge or Save As needs it. Two large sets then fit side by side, even on a phone. → Settings

> **CAREFUL**
> With audio read from disk, keep the SD card or USB stick in until you have saved.

4.3 "Read as"

Some Pa4X sets do not say clearly which OS generation made them. Rigsta then shows **read as** buttons, such as `PA4X V2` or `PA4X V3 / OS Next`, so you can choose. It only offers the detected generation or a newer one.

5. The Merge page

IN SHORT

- **Manage** one set: its banks and slots, and the full detail of the item you pick.
- **Copy** between two sets: open a second set with **Copy from…**, then drag items or whole banks across. Their sounds, samples, STS and pads come with them; nothing is copied twice.
- The **memory gauges** keep the set within the keyboard's limits.
- Every copy, replace and delete is **whole or nothing**, and reported in plain words.


5.1 The memory gauges

Across the top, three gauges measure the set against the keyboard's own limits:

GAUGE	MEANING	PA4X LIMIT	PA5X LIMIT (OS 1.3+)
samples	how many samples the set holds	15,048	53,130
memory	how much sample RAM they use	1.5 GB	4 GB
preload	the part of the audio loaded at start-up	300 MB	420 MB

- A gauge turns **orange** above 90 % and **red** with **OVER by …** when the set would not load on the keyboard.
- A small dot means the limit is assumed from the OS, not stated by the set.
- Rigsta never lets a copy push the set past a limit. It stops and says *which* limit ran out.

5.2 The set panel

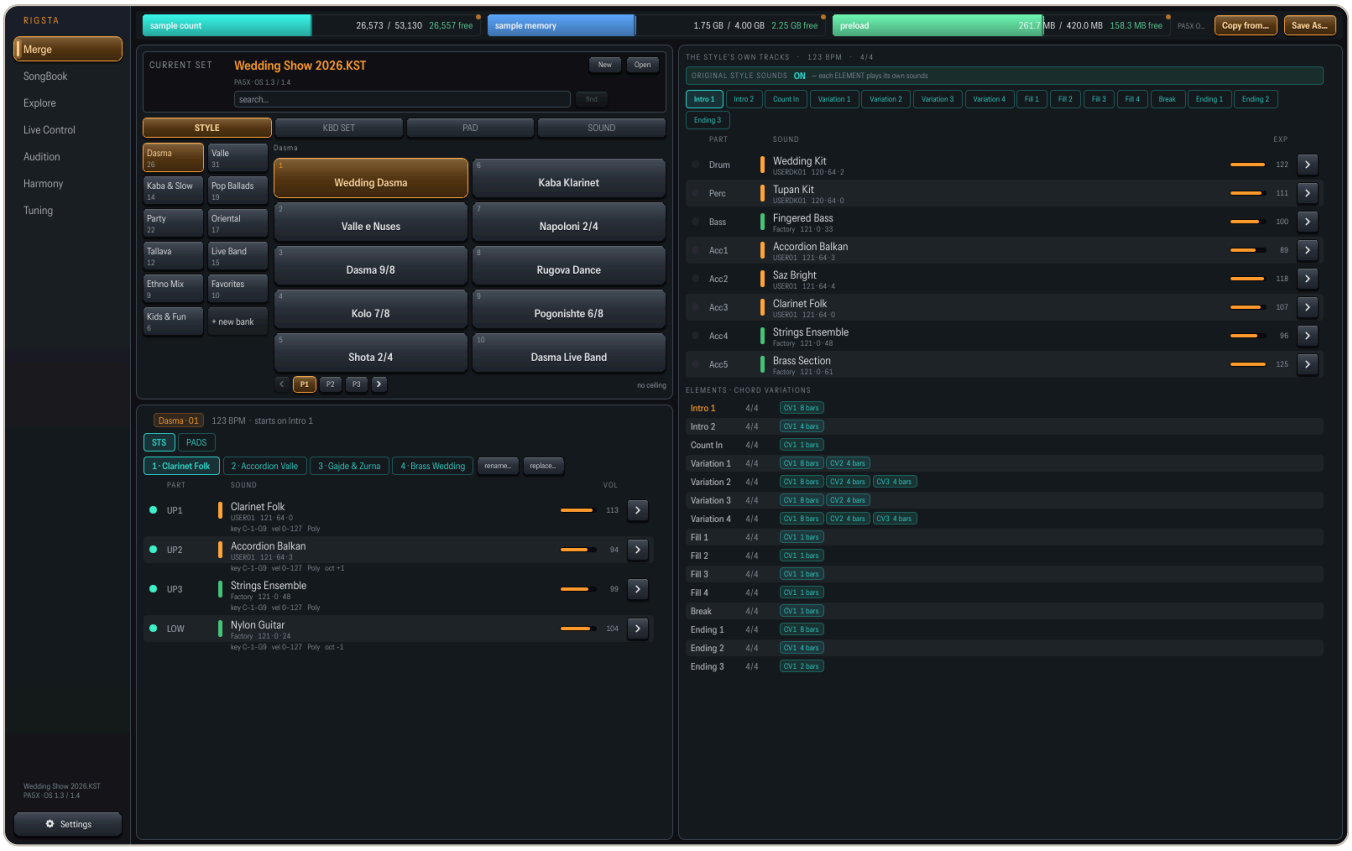

Manage mode: a style picked, with its STS, parts and chord variations

The **CURRENT SET** panel shows:

- **The set's name**, with **New** and **Open**, and the model and OS it was made for.
- **search…** — type part of a name and press **find**. Rigsta searches every bank of the kind shown and jumps from match to match (*i of N*).
- **Kind tabs: STYLE · KBD SET · PAD · SOUND**.
- **Bank groups:** Styles *Factory · Fav/User · Local*; Keyboard sets *Factory · User · Local*; Pads *HIT · SEQUENCE · Local · User*; Sounds *User sounds · Drum kits*.
- **Bank tiles**, each with *used/capacity*. A full bank's count is red.
- **The slot grid:** ten slots a page, numbered down the left column and then the right. Page with **P1 P2 …** and the arrows.

Pick a slot to see everything about the item:

- **A style:** tempo and starting element; its four **STS**, each part with its sound, bank, MSB/LSB/PC, volume, key range and octave; its **pads**; **the style's own tracks** (Drum, Perc, Bass, Acc 1–5); and **Elements · Chord Variations**.
- **A pad:** the sound it plays and its settings.
- **A sound:** what it is and where it is stored. → Explore: a sound


Quick edits (in the set you work on, never in the copy-from set):

- ••• on an STS part, a pad or a style track opens a picker: *Choose a sound* or *Choose a pad*.
- **rename…** renames an STS (16 characters on a Pa4X, 20 on a Pa5X).

- **replace…** (Pa5X) puts a whole keyboard set into an STS, nested the way the keyboard does it.

Every edit is made in memory and reported: "*Changed in memory -- Save As writes it.*"

5.3 Copying between two sets

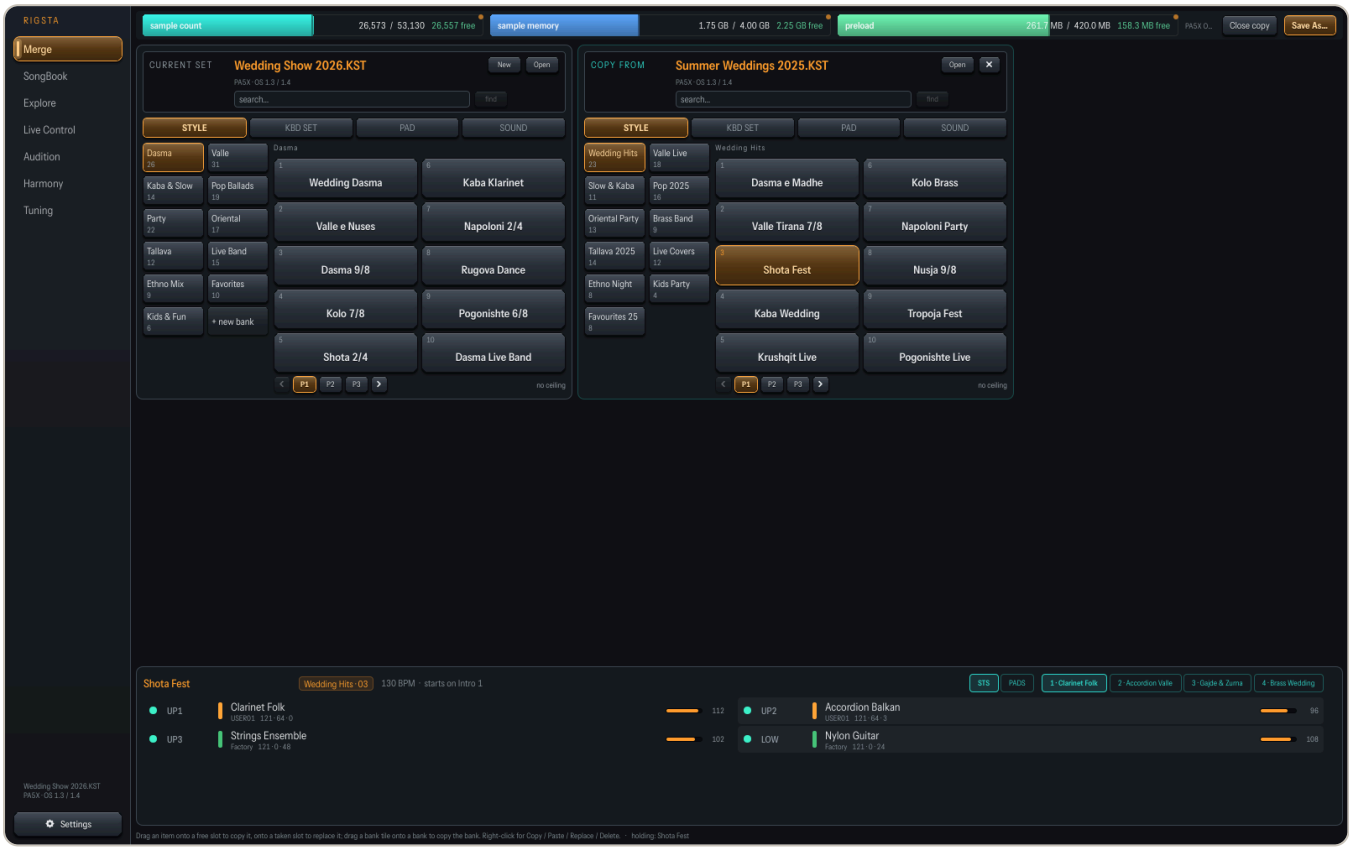

Copy mode: the set you work on and the set you copy from, side by side

1. Open the set you want to **build** (the *current set*).
2. Press **Copy from…** and open the set you want to **take from**. It appears as **COPY FROM**.
3. Pick the kind: **STYLE**, **KBD SET**, **PAD** or **SOUND**. Both panels switch together.
4. **Drag** an item from COPY FROM:
   - onto a **free slot**: it is copied at once;
   - onto a **taken slot**: Rigsta asks whether to **Replace** it;
   - while you drag, a ring shows what will happen: **amber** = copy, **warning colour** = replace, **red** = no room.
5. **Drag a bank tile** onto a bank to copy the whole bank.

Or use the menus: **right-click** with a mouse, **long press** on a touch screen.

WHERE	WHAT YOU GET
A slot in COPY FROM	**Copy**
An empty slot in your set	**Paste** *name*
A taken slot in your set	**Replace with** *name* · **Delete…**

WHERE	WHAT YOU GET
A bank in COPY FROM	**Copy whole bank**
A bank in your set	**Paste bank** *name* · **Delete every item of** *bank*…
The **+ new bank** tile (Pa5X)	**New empty bank…** · **Paste** *name* **as a new bank**



Two sets on a tablet



Two sets on a phone: the copy-from set is below; scroll to reach it

What travels with an item

When you copy a **style**:

- **Its sounds come with it**, with every multisample, drum record and sample they need. Each sound is repointed to its new address.
- **Its keyboard sets (STS) and pads come with it.** A pad keeps its slot if it is free, otherwise it takes the next free one and the style is repointed.
- **Nothing is copied twice.** Sounds and samples your set already holds are reused, so more styles fit.
- **Name clashes are never overwritten.** A second *Ballad* arrives as *Ballad(1)*, as the keyboard names it.
- **Generations go up, never down.** Copy from an older-generation set into a newer one and the samples are upgraded the way the keyboard upgrades them.

Each item moves **whole or not at all**. If one item cannot move, only that one is refused, with the reason; the rest go on. If the set runs out of room, Rigsta stops and names the limit.

> **NOTE**
>
> Items move between two sets **of the same keyboard** (Pa4X ↔ Pa4X, Pa5X ↔ Pa5X). To take from a Pa4X set into a Pa5X set, convert the copy-from set first: **Convert copy-from to PA5X…** → 6.2

Replacing an item

Drop onto a taken slot and Rigsta asks *Slot N of BANK holds 'X'. Replace it with 'Y'?* Then choose what happens to the old item's data:

- **Delete the slot entry only**: its sounds, multisamples and samples stay in the set.
- **Delete it with its own data**: its sounds, multisamples, drum records and samples go too, but only those **no other** style, keyboard set or pad uses.

Copying a whole bank


Drop a bank on a bank. If every target slot is free, it is copied at once. If not, choose **Replace only the items in the way** or **Delete everything in the bank, then copy**. On a Pa5X, drop a bank on **+ new bank** to make a new bank of the same name.

5.4 Deleting

Right-click (or long-press) a slot and choose **Delete…**, or a bank and choose **Delete every item of…**. Choose *slot entry only* or *with its own data*, as for a replace. The report lists what went, what was **kept** because something else uses it, and a **WARNING** naming anything that still points at what you deleted: songs, pad buttons, keyboard sets.

5.5 A new set, a new bank

- **New** makes an **empty set in memory**, for *PA4X V3 / OS Next* (saved as `.SET`) or *PA5X 1.3 / 1.4* (saved as `.KST`). Copy into it from as many sets as you like, then **Save As**. It is the cleanest way to build a best-of set.
- **+ new bank** (Pa5X) adds an empty bank folder with the name you choose.

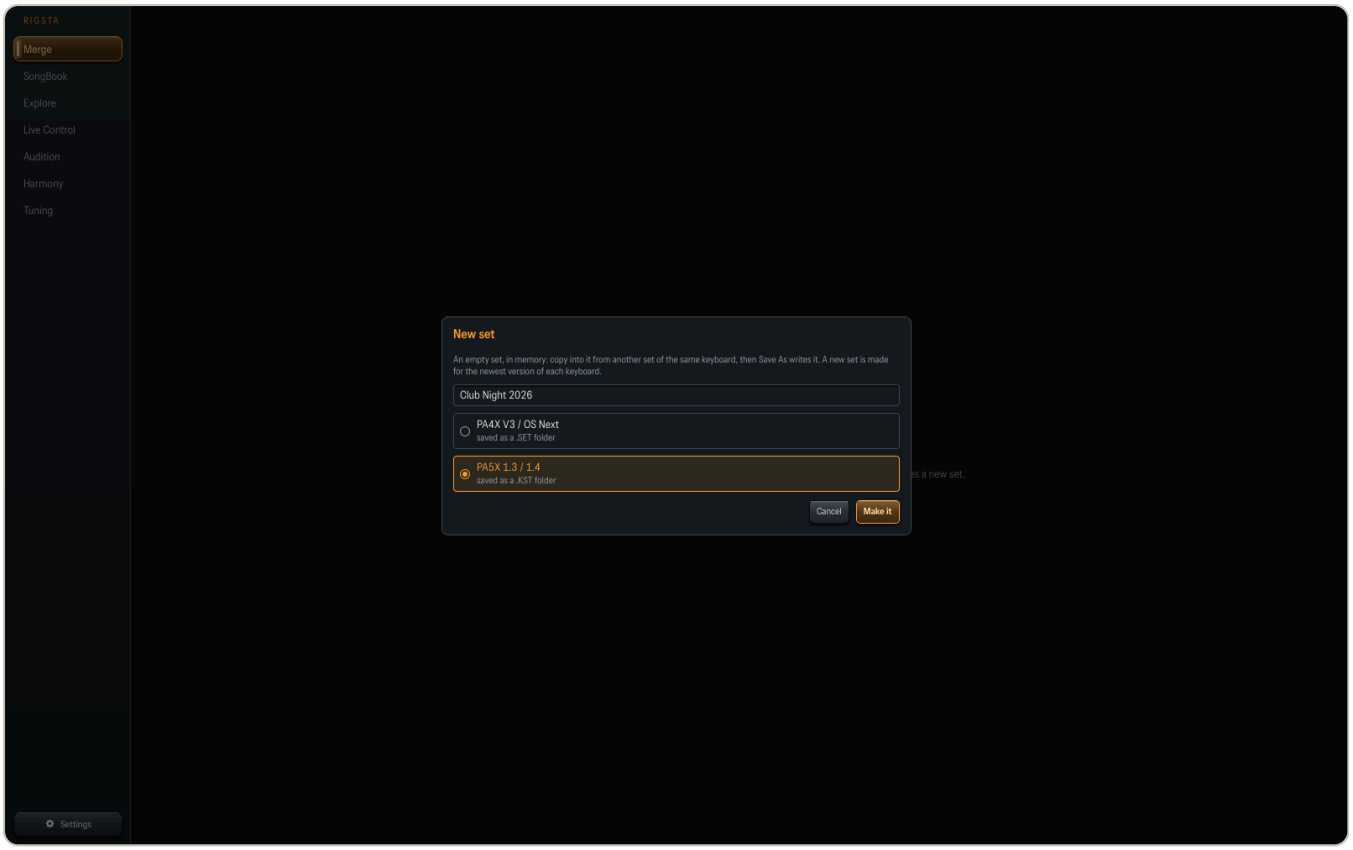

A new, empty set


6. Converting a Pa4X set to Pa5X

IN SHORT

- **The set you work on is a Pa4X? To PA5X…** turns it into its Pa5X form, every edit kept. Save As writes it as a `.KST`.
- **You work on a Pa5X and copy from a Pa4X? Convert copy-from to PA5X…** converts the copy-from set **where it stands**, and you carry on merging from it. Your Pa5X set is not touched.
- The Pa4X folder on disk is **never changed**.

6.1 Converting the set you work on

With a Pa4X set open as your current set, press **To PA5X…** (**Convert to PA5X…** on wide screens).

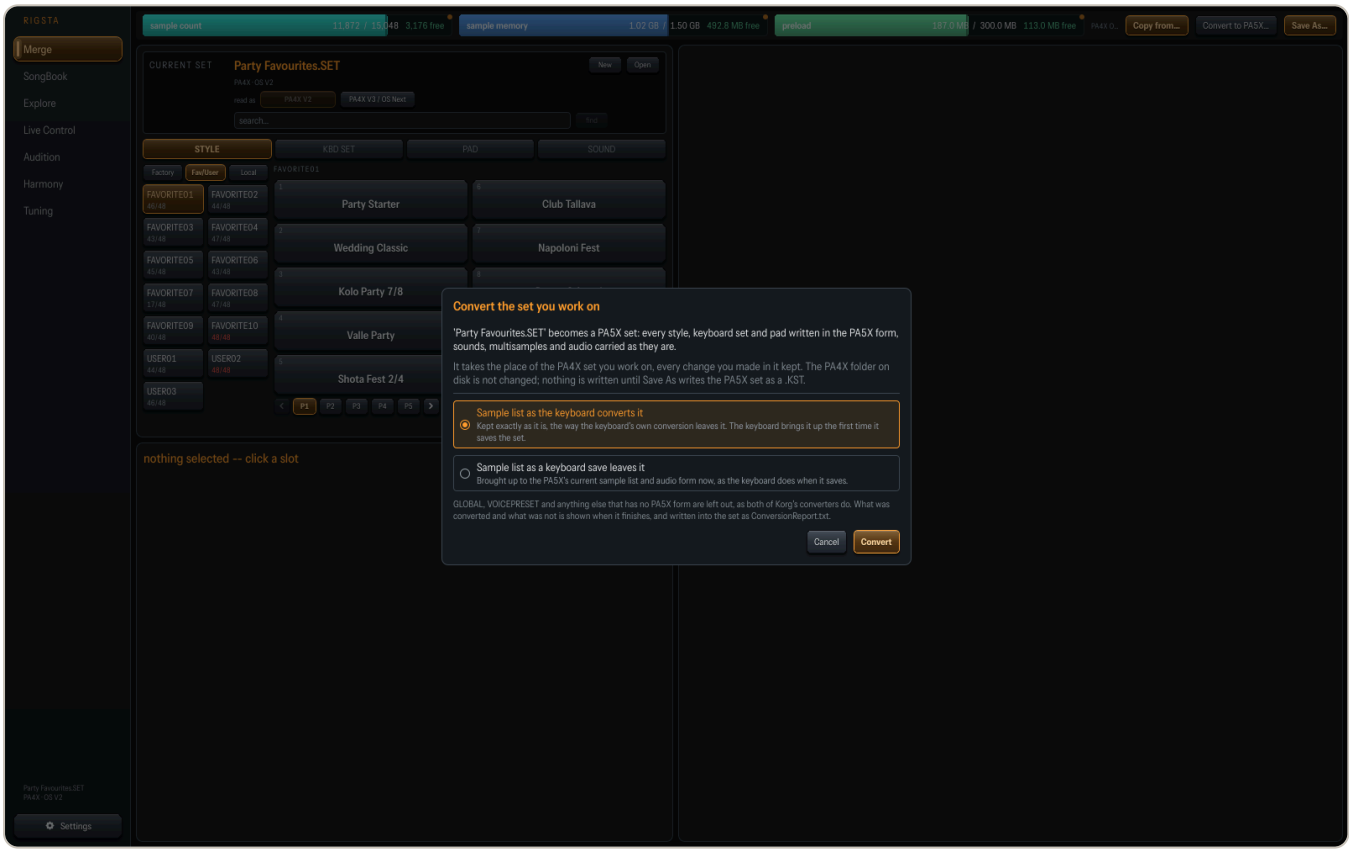


Converting the set you work on

1. Choose the **sample list**:
   - **Sample list as the keyboard converts it** (the default): exactly what the Pa5X's own *Convert* leaves.
   - **Sample list as a keyboard save leaves it**: brought up to the newest generation now, as the Pa5X does the first time it saves the set.
2. Press **Convert**.

The converted set takes the place of the Pa4X set you work on, **with every change you made in it**. Merge more into it if you like, then **Save As** writes a `.KST`. Until then it counts as unsaved, so Rigsta asks before you open another set.

6.2 Converting the set you copy from

When your current set is a Pa5X and the copy-from set is a Pa4X, the button reads **Copy-from to PA5X...** (**Convert copy-from to PA5X...** on wide screens).

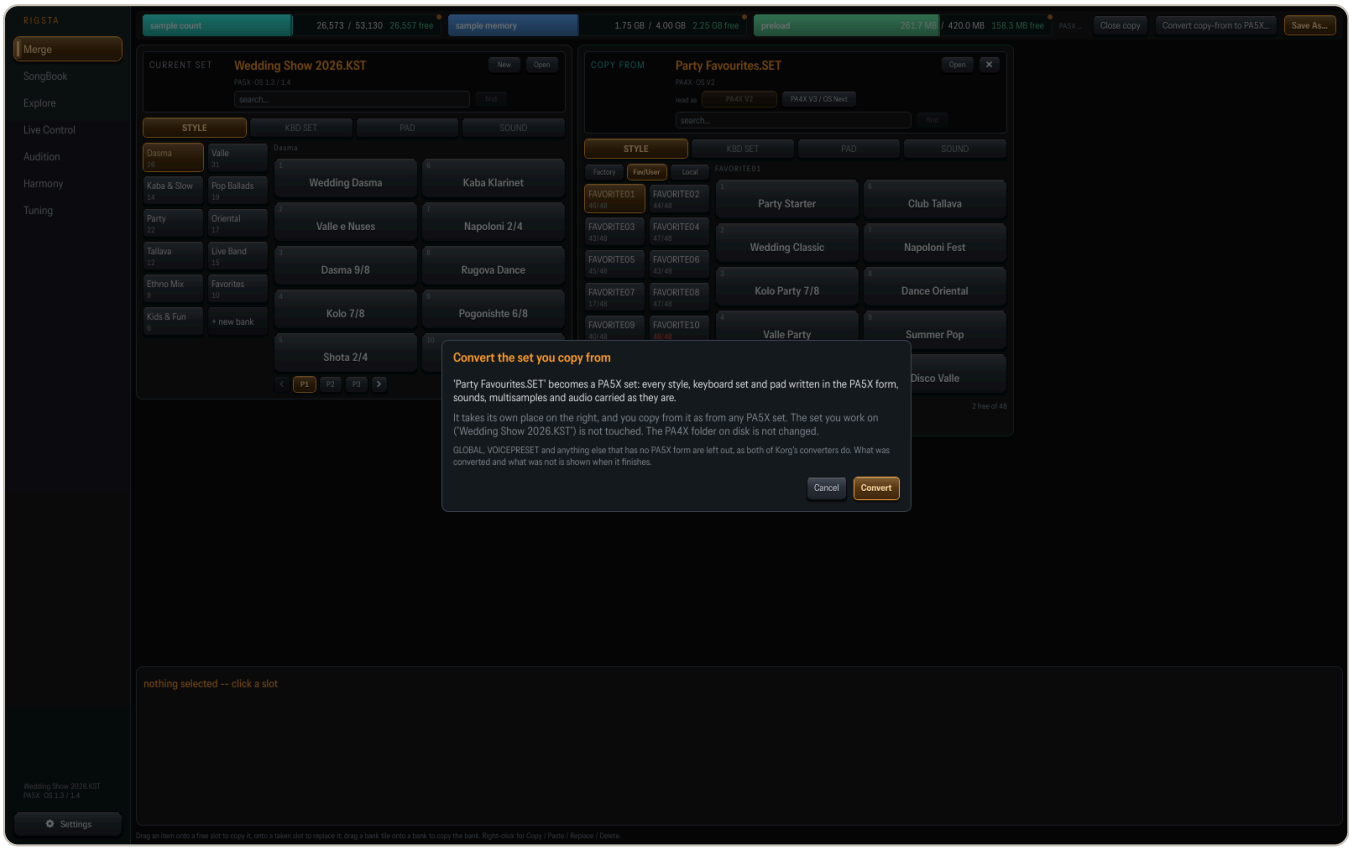

Converting the set you copy from: the dialog says which set changes, and which does not

Press **Convert**. The copy-from set becomes its Pa5X form in its own place on the right, and you copy from it as from any Pa5X set. Your current set is not touched.

6.3 What a conversion does

- **Every style** is written in the Pa5X form, one file per style.
- **Every keyboard set and pad** is written in the Pa5X form.
- **Sounds, multisamples and audio** are carried exactly as they are.
- **Bank names** come from the set's own display names.
- **The SongBook** is converted. References to factory styles point at the Pa5X's own factory styles, using Korg's correspondence.
- **What has no Pa5X form is left out**: GLOBAL and VOICEPRESET, as both of Korg's converters do, and anything else that cannot be converted. Each is **named** in the report, never dropped silently.
- A **ConversionReport.txt** goes into the set, as the keyboard writes one.

> **CONVERT WHAT YOU EDITED**
>
> Rigsta converts the set *as it is now*, with every copy, delete and edit. Clean up a Pa4X set, merge in favourites from other Pa4X sets, then convert the result, all in one session.

6.4 On a phone or a small tablet


A conversion briefly holds a second copy of the set. Rigsta checks the room first:

- **The copy-from set:** if a second copy of its audio does not fit, Rigsta reads the set again from its folder with its audio left on disk, and converts that. Only a few tens of MB are needed; the audio is read when a copy needs it.
- **The set you work on:** its edits are only in memory, so it cannot be read again. If it does not fit, Rigsta says so and shows the way: Save As first, choose **Settings** → **SET AUDIO** → **Read from disk**, open the saved set, and convert it.

7. Save As

IN SHORT

- **Save As…** (on Merge and SongBook) writes a **new** set folder: the whole set, or the SongBook alone.
- It copies **every folder and file** of the set, plus your changes. It never overwrites anything, and a failed save leaves nothing behind.

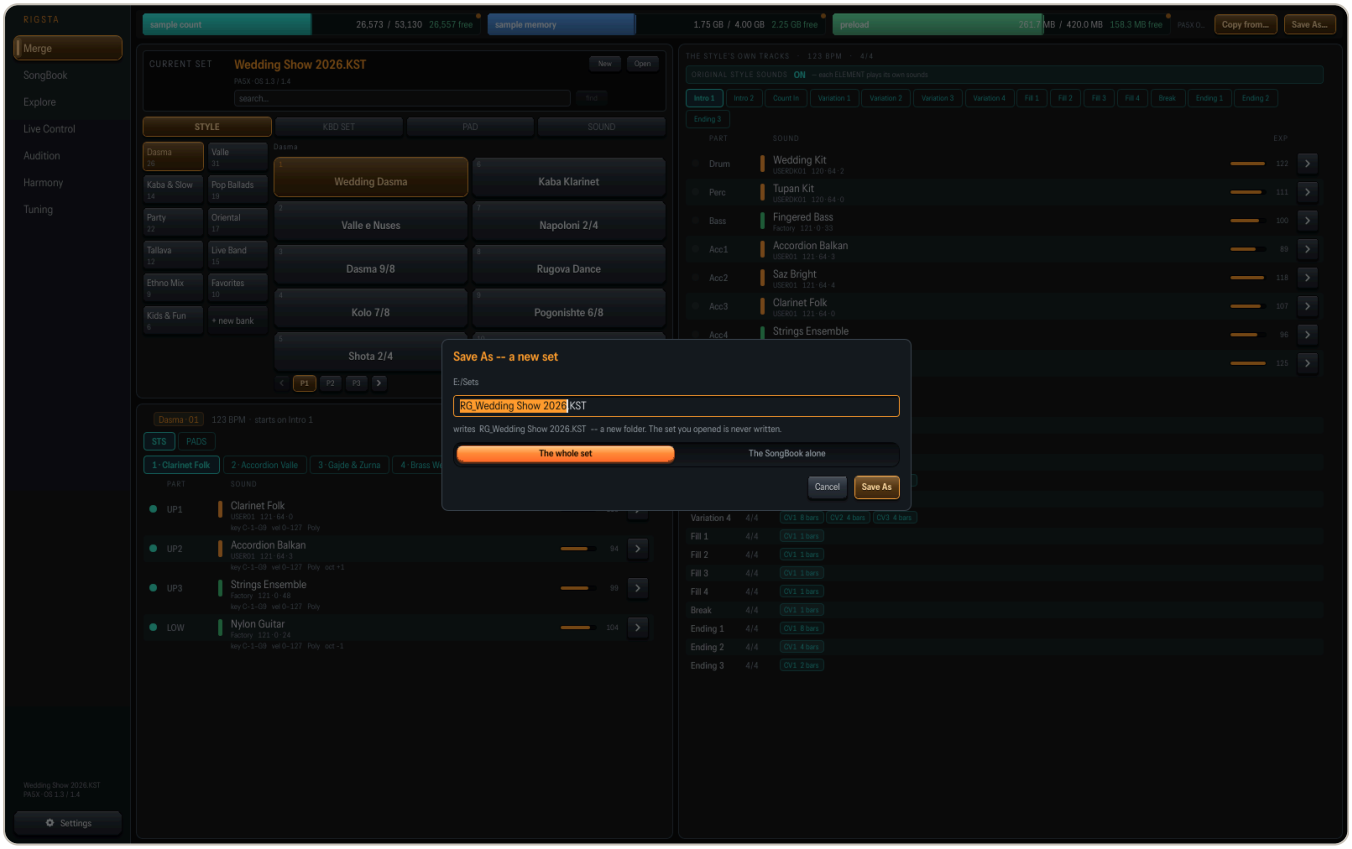

Save As: a new set

1. Choose the folder the new set goes into (your USB stick, for example).
2. Give it a name. Rigsta suggests `RG_` and your set's name, with its extension: `RG_My Show.KST`. Once the Live Control index is in the set, it suggests `RG_Index_`: `RG_Index_My Show.KST`. → 11.3
   - The extension is in the box, and the line under it shows exactly the folder that will be written.
   - Type the extension or leave it off: either way the folder gets one, the right one for the keyboard (`.KST` for a Pa5X, `.SET` for a Pa4X), never two.
3. Choose **The whole set** or **The SongBook alone**.
4. Press **Save As**.

What makes Save As safe:

- **Nothing is overwritten.** Save As refuses an existing folder, and never writes into the set you opened, the set you copied from, or any set you took items from.
- **All or nothing.** Rigsta writes into a hidden folder and gives it its name only when every file is complete.

- **Checked before it is named.** Every file is read back and compared byte for byte; every sample is checked to name its own audio.
- **Untouched stays untouched.** A set opened and saved without changes comes out identical, file for file. Every folder and file of the set goes into the new one, including the ones Rigsta does not edit.

The SongBook alone writes only the SONGBOOK folder, the fastest way to update songs on a keyboard that already holds the rest of the set.

To load the result, copy the new folder to a USB stick; on the keyboard use **Media** → **Load** and load the whole set (or just the SongBook).

8. The SongBook page

IN SHORT

- **One list of your songs**, searched by name, artist, genre or style -- however many banks the set holds.
- **Add a song** from a style, then set its name, key, meter, tempo and more.
- **Set lists**: make a list, add songs to it, and put the rows in order for the night.
- **Save As** → **The SongBook alone** loads new songs onto the keyboard fast.




The SongBook, laid out as the Builder

Rigsta keeps a SongBook as one list of songs, the way the keyboard shows it -- not as separate banks. The search at the top matches a song's **name, artist, genre or style**. Down the side are **All songs**, your **genres**, and your **set lists**.

8.1 A song's fields

Pick a song to see its fields -- in a side panel on a PC, a full page on a phone:

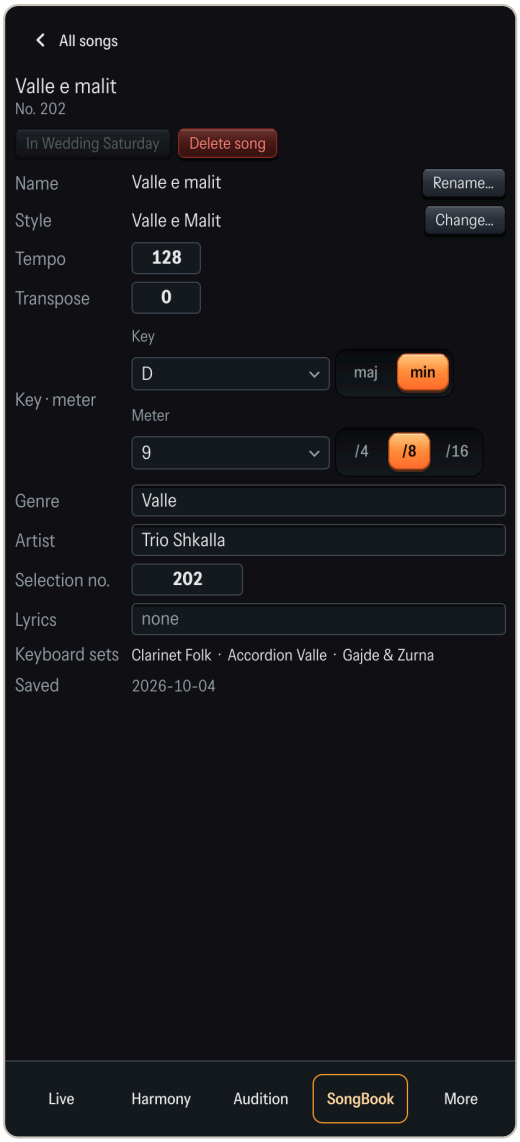

A song's fields on a phone

- **Name** -- **Rename...**. Rigsta fixes any set-list rows that would break, since set lists find songs by name.
- **Style** -- **Change...** points the song at another style of the set. A song with no style reference shows **no style** in red.
- **Tempo** (30-300), **Transpose** (±24), **Selection no.** (0-9999).
- **Key** -- a root (C ... B) and **maj** / **min**, or none. It is chosen, not typed, so it is always a key the keyboard can store.
- **Meter** -- the beats (1-16) and the note value (/4, /8 or /16).
- **Genre**, **Artist**, **Lyrics** -- these save as you type: a moment after the last key, or when you move to another field.

8.2 Add a song

+ New song opens a picker of styles -- the styles in this set, plus the Pa5X factory styles, in banks and pages like the keyboard. Pick one, and a new song is made with that style and its settings, named after the style. Then edit its name, tempo and the rest.

8.3 Set lists

Make a list with **+ New** beside SET LISTS, name it, then add songs to it. In the **Builder** layout the song list and the open set list sit side by side: the **arrow** beside a song adds it to the list, and you drag the rows into order. A song that cannot go in -- it has no style, or a name the keyboard would not find -- shows a **faded red** arrow; hover or long-press it to see why.

8.4 The layout, and the banks

Choose how the SongBook looks in **Settings** → **SONGBOOK**: **Builder** (the default -- the list and a set list side by side), **Library** (the list with the song in a side panel), **Sheet** (every field a column, edited in place), or **Classic**.

Behind the scenes a SongBook is kept in banks of fifty songs, but you do not need to think about them. For advanced use, **Settings** → **SONGBOOK** → **Show the song files (banks)** brings the banks back as a FILES rail.


9. The Explore page

IN SHORT

- **Every item of the set you work on**, as it is now: styles, keyboard sets, pads and sounds, with edits.
- **A sound drawn as its shape**: a multisample's zones or a drum kit's keys on a piano. Tap a key to hear it.
- **The sample library**: every sample, multisample and drum record of the set, coloured by where it lives, and who plays it.

Pick the kind with the chips at the top: **STYLE · KBD SET · PAD · SOUND · SAMPLES**. The list is on the left; the item picked is on the right (in a sheet on a narrow screen).

9.1 A style

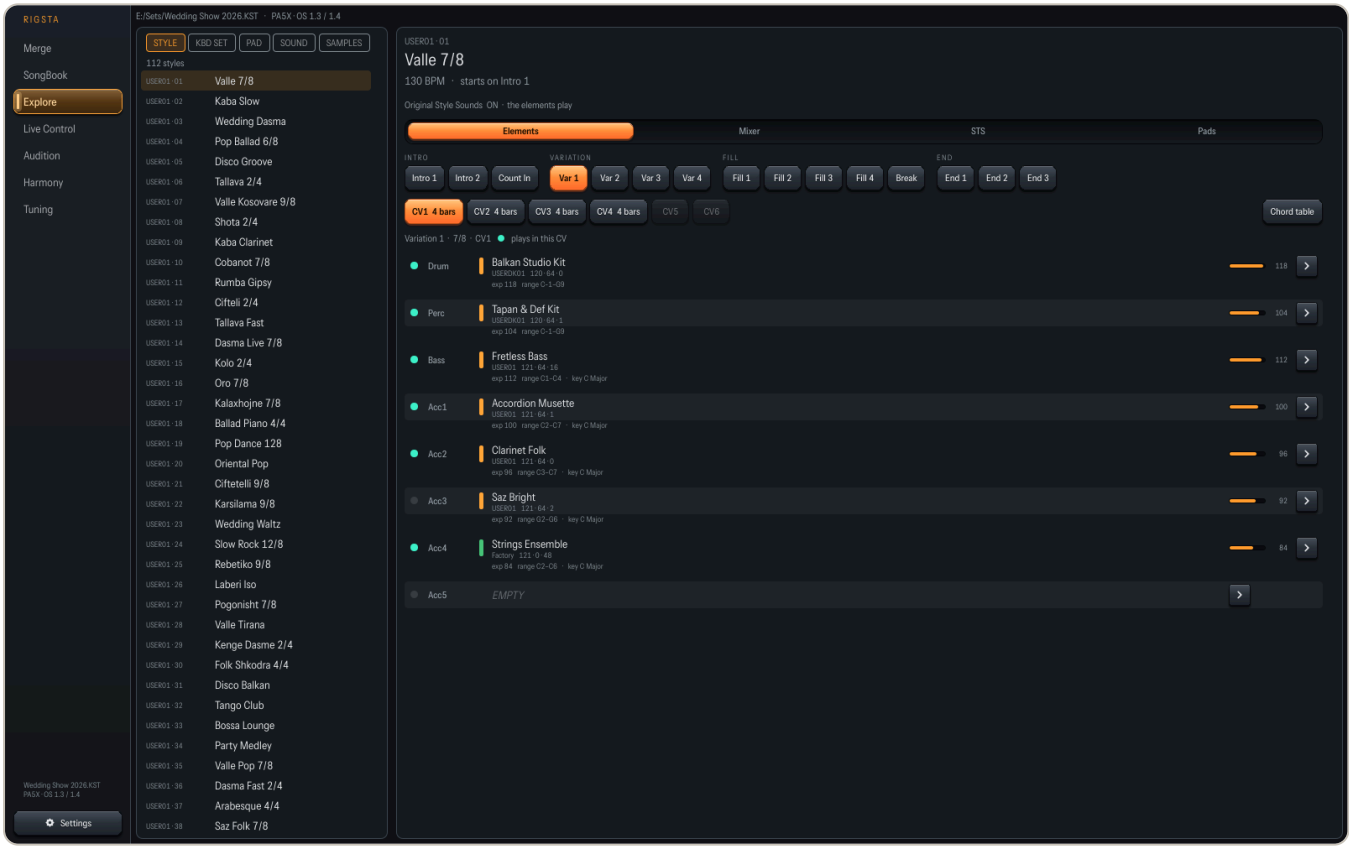

Explore: a style's elements, each track's sound, and the Mixer, STS and Pads tabs

A style opens on four tabs:


- **Elements**: pick an element (**Intro · Variation · Fill · End**) and a chord variation (**CV1–CV6**). Each track shows the sound it plays there, with its level, range and key; **›** changes the sound. **Chord table** shows which chord variation plays for each chord.
- **Mixer**: the style's eight tracks as channel strips.
- **STS**: the four keyboard sets, each part with its sound, with **change…**, **rename…**, and on a Pa5X **replace with a keyboard set…**.

- **Pads**: the style's pads, with **change…**.

> **EXPLORE AND MERGE**
>
> A sound changed on Explore changes **every place** that sound is stored in the style. The ••• on a track in Merge changes only the table shown.


9.2 A sound: its zones and drum keys

A **melodic sound** shows its oscillators and each multisample as a map on a piano: every zone is a span over its keys, in the colour of where its sample lives. The zones are listed below with their key range and sample. **Tap a key or a zone to hear its sample.**

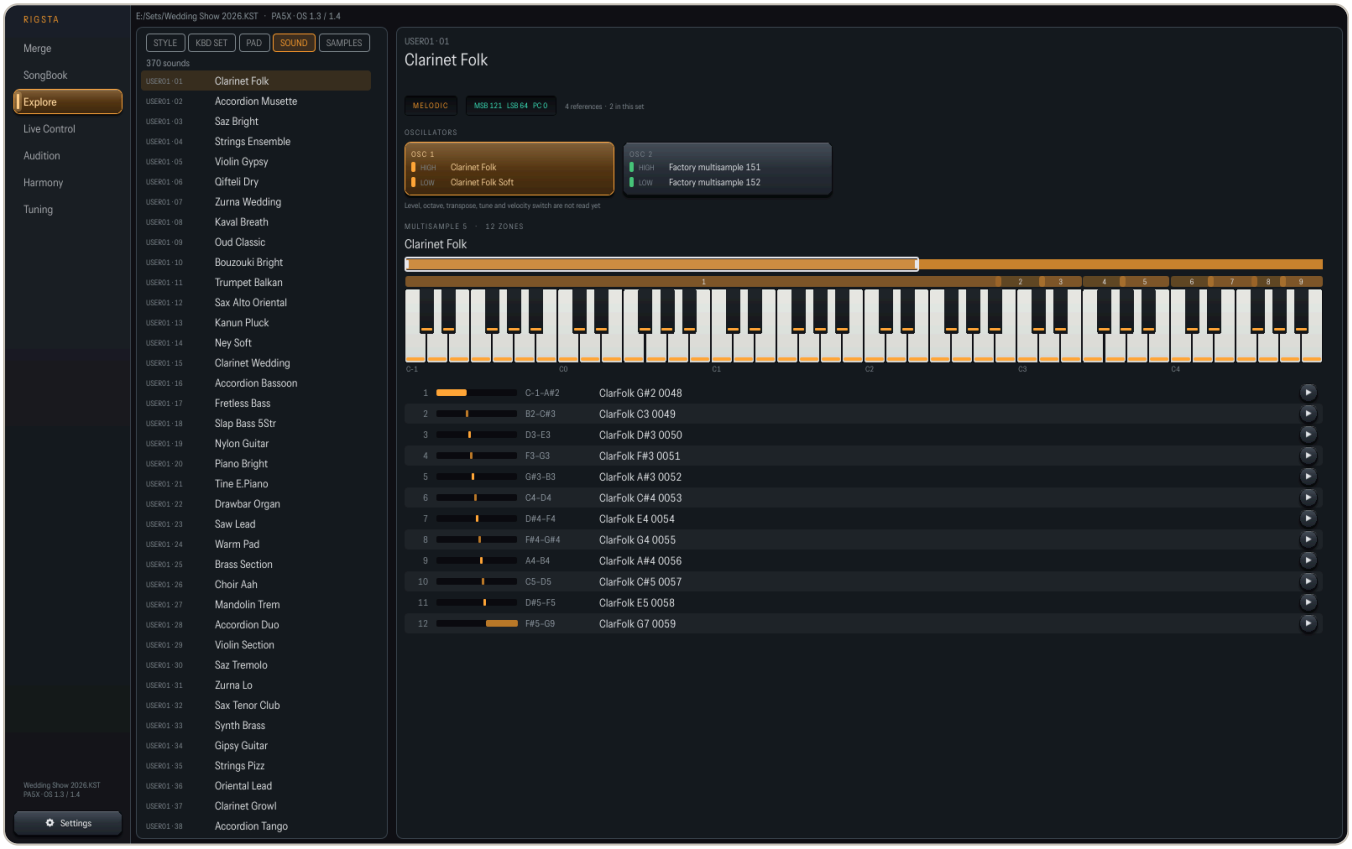


A melodic sound: its multisample's zones on the piano

A **drum kit** shows its **DRUM MAP**: which keys play, and what each plays. Switch between **Piano** and **Pads**. Tap a key to see its layers and hear them.

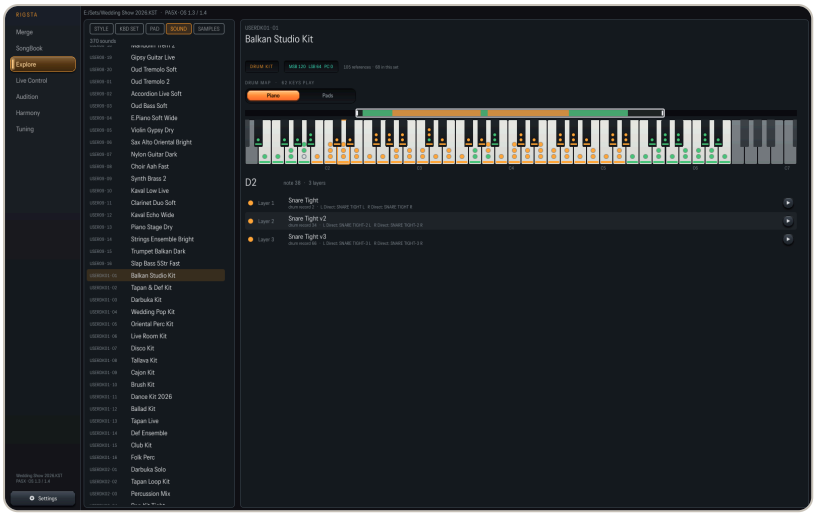

A drum kit on the piano

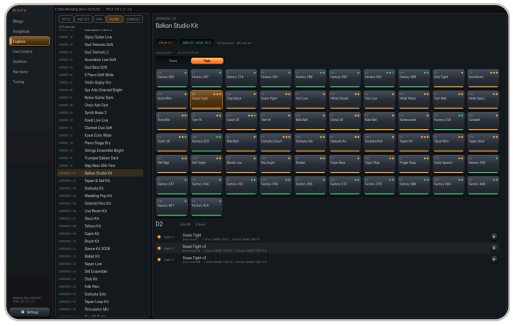

The same kit as pads


The piano and its range bar. The bar above the piano shows the part of the keyboard in view:

- drag inside the box to move along the keyboard;
- drag an edge to show more or fewer keys (never fewer than an octave);
- tap outside the box to jump there;
- or swipe the piano itself sideways.

9.3 The sample library

Choose **SAMPLES**, then **SAMPLES · MULTISAMPLES · DRUMS · KITS**:


LIST	EACH ENTRY	PICKED, IT SHOWS
SAMPLES	a sample: its audio	its waveform, loop, rate and length, and a key to play it
MULTISAMPLES	a set of zones across the keyboard	its zones on the piano, and the sounds that play it
DRUMS	a drum record: up to four samples (direct and ambience, left and right)	its samples, played as a pair or one by one, and the sounds that play it
KITS	a drum-kit sound	its drum map

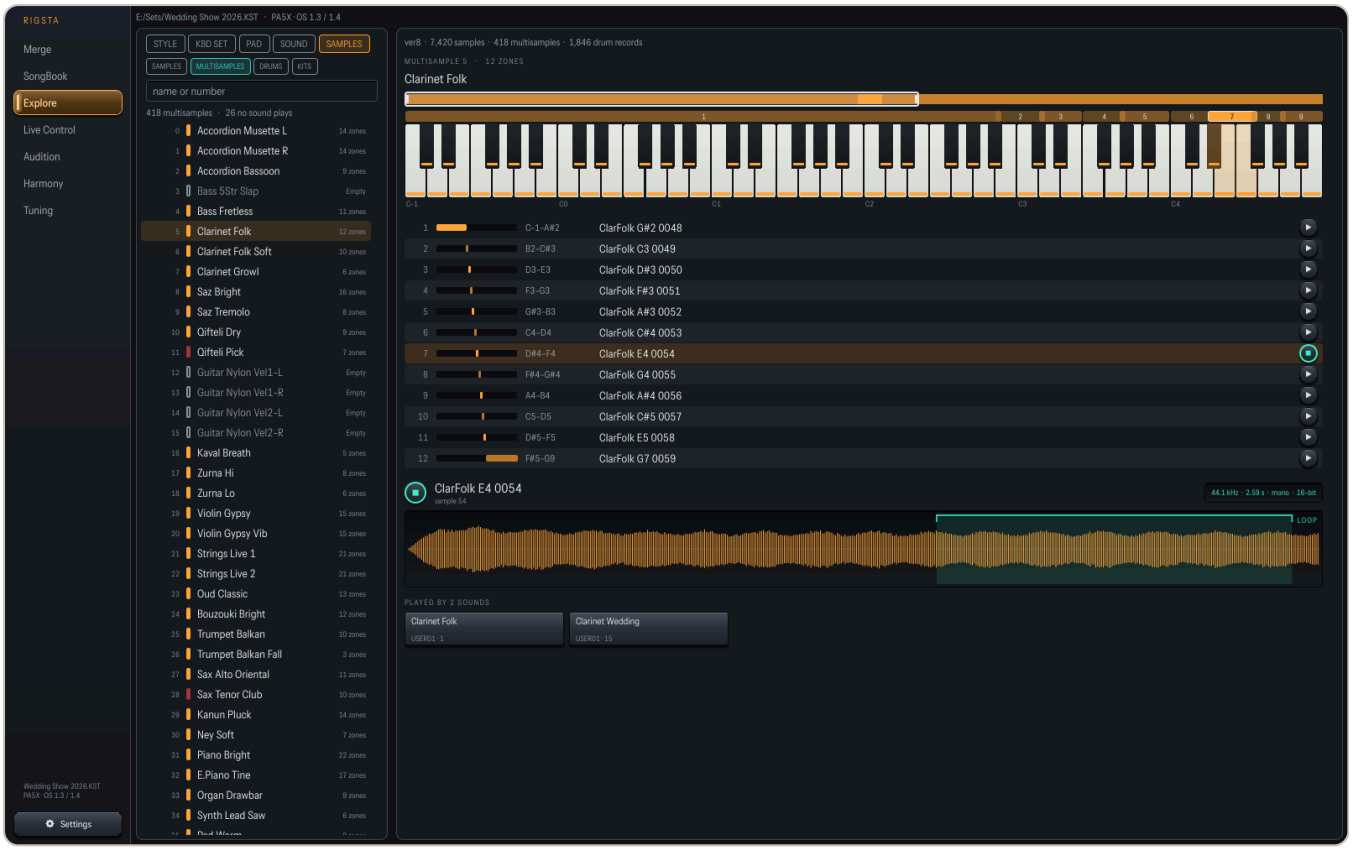


A multisample: its zones, the zone picked, and its sample

The colours say where a sample lives, the same on every list, piano and map:

COLOUR	MEANS
Green	factory: the keyboard's own ROM
Amber	your own: in this set
Red	locked: protected audio. The keyboard plays it; Rigsta cannot.
Deep red	unused: no sound of the set plays it
Outline only	empty: no sample at all. Those keys are silent (the keyboard shows *Empty*).

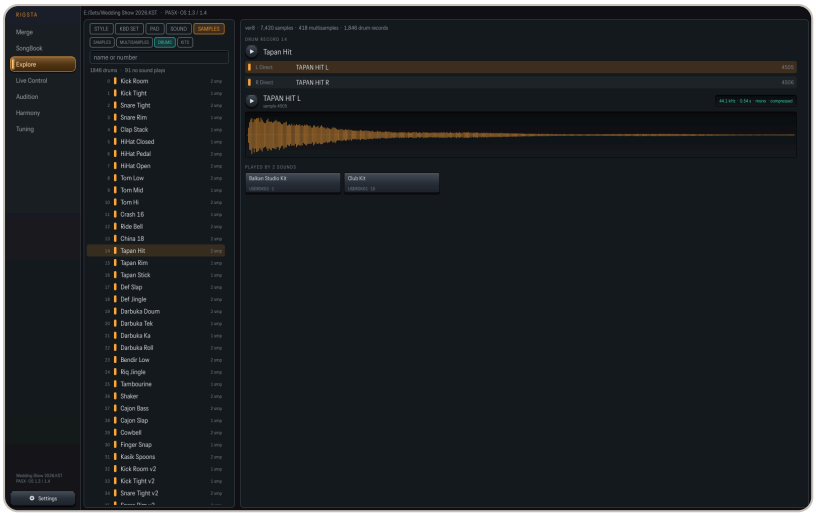

A drum record's samples

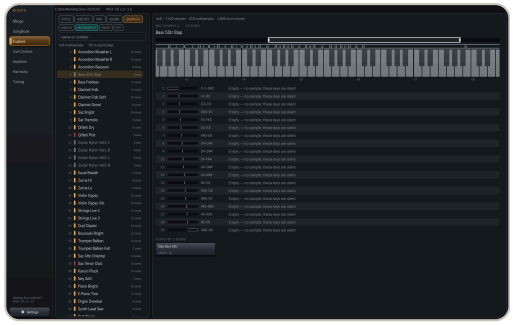

An empty multisample: its keys are silent

PLAYED BY lists the sounds that use a record. Tap one to open that sound. *No sound in this set plays it* marks a record nothing uses.

> **HEAR BEFORE YOU MERGE**
>
> Every sample plays on your PC, tablet or phone, straight away. Pick a sample, a zone or a drum key and listen.

10. Connecting your keyboard

IN SHORT

1. A **USB cable** from the keyboard's **USB Device** port to your PC, tablet or phone (an OTG adapter on a phone).
2. In Rigsta: **Settings** → **KEYBOARD**, choose **To keyboard** and **From keyboard**. The dot turns green.
3. On the keyboard: build the **Rigsta MIDI preset** (see 10.3), then **Clock Send** → **On**.

Live Control, Harmony, Tuning and Audition talk to the keyboard over MIDI. Set this up once; Rigsta remembers it.

10.1 The cable

- **PC or Android device ↔ keyboard:** a USB cable from the keyboard's **USB Device** port (the square "B" type).
  - A phone or tablet needs a **USB OTG adapter**. Android also sees Bluetooth MIDI devices.
- **Windows** sets the keyboard up by itself. Its ports appear with names like **Pa5X _ KEYBOARD**.
- On Windows, **only one program can use a MIDI port at a time.** Close other MIDI programs first.

10.2 Choose the ports in Rigsta

Open **Settings** → **KEYBOARD**. A small copy sits in the title row of Live Control and Harmony; on a phone, tap the connection pill and the **KEYBOARD** sheet opens.

1. **To keyboard**: the keyboard's MIDI **output** port (Rigsta → keyboard).
2. **From keyboard**: the keyboard's MIDI **input** port (keyboard → Rigsta). Harmony and the lights on Live Control need it.
3. **Control ch**: leave it at **5** (the default). It must stay **outside channels 9–16** — Audition plays the style tracks there, so a Control channel of **16** would clash with it.
4. **Rescan** if you plugged the keyboard in after starting Rigsta.

Rigsta asks the keyboard what it is, and the pill shows, for example, **PA5X · connected**:

DOT	MEANING
🟢 green	both directions open
🟠 amber	sending only: choose *From keyboard* too
🔴 red	nothing open

If the keyboard does not say what it is, choose **PA4X** or **PA5X** yourself, or press **Ask it**. Rigsta remembers your ports even when Windows renames them, and reconnects by itself when the keyboard comes back on.

10.3 Set up the keyboard

One MIDI preset serves every page. Rigsta's pages don't share one set of channels: **Harmony** plays the Upper and Lower parts on channels **1–4**, **Live Control** talks on a **Control** channel, and **Audition** plays a whole style on the style tracks, channels **9–16**. No stock Pa5X preset carries all three at once — *Studio Control* has the parts but not a Control channel, *Tablet* has Control but not the parts or the style tracks — so you build **one custom preset** and select it once.

On the Pa5X: **Settings** → **MIDI**. The quickest start is the **Studio Control** preset (it already puts Upper 1–3 and Lower on channels 1–4); set the channels below, then **save it** (page menu → *Save MIDI Preset*) under a name like **Rigsta**. On the Pa4X, the same channels live under **Global** → **MIDI**.

MIDI IN — what the keyboard accepts *from* Rigsta:

CHANNEL	ASSIGN TO	USED BY
1	Upper 1	Harmony — the melody sound
2	Upper 2	Harmony — the harmony voice
3	Upper 3	Harmony — the second voice
4	Lower	Harmony — the Lower sound
5	**Control**	Live Control
9	Style — **Bass**	Audition
10	Style — **Drum**	Audition
11	Style — **Percussion**	Audition
12–16	Style — **Acc 1 … Acc 5**	Audition

Leave channels 6, 7, 8 off. **The style order matters:** Bass on **9**, Drum on **10**, Percussion on **11** — Studio Control's own order is Drum/Perc/Bass, so change channels 9–11 to Bass/Drum/Perc or Audition will play the wrong tracks.

MIDI OUT — what the keyboard sends *back* to Rigsta:

CHANNEL	ASSIGN TO	USED BY
1	Upper 1	Harmony — your right hand becomes the melody it harmonizes
2	Upper 2 *(optional)*	lets Rigsta warn you if Upper 2 is still switched on
5	**Control**	Live Control — the deck's lights follow the keyboard's own buttons

Turn **Clock Send** → **On** so Live Control knows when a style plays and the Start key blinks in time. Leave every other OUT channel **Off** — in particular Upper 2 and Upper 3, so the harmony Rigsta sends is not echoed back.

Last, set Rigsta's **Control ch** (Settings → KEYBOARD) to **5**, matching the preset. That is the whole setup — the same preset now serves Live Control, Harmony and Audition with no switching.

Harmony — two ways to play (the Harmony page shows them under *How to set the keyboard…*):

- **ONE PART**: melody and harmony play in one sound — play Upper 1, Rigsta adds the harmony to the same part.
- **UPPER 2**: the harmony plays in its own sound (Upper 2, channel 2). Then **switch Upper 2 OFF** on the panel: Rigsta still plays it, your keys no longer do.

Keep the keyboard's **Scale** on *Equal*, unless you use Tuning.

> **IF SYSEX DOES NOT ARRIVE**
>
> For Tuning and the keyboard's identity: **Settings** → **MIDI** → **MIDI Filters**, turn every **OUT** filter off.


10.4 What Rigsta may send

Settings → **MIDI OUT** switches whole kinds of messages off, on every page: **Program Change · Bank Select · Control Change · Notes · Pitch Bend · SysEx**. Use it to be sure the app never changes a sound or a setting during a show.

11. Live Control

IN SHORT

- **Tap a style tile and the keyboard puts it up.** STS 1–4, Intros, Variations, Fills, Breaks, Endings and transport sit on one deck.
- **The lights follow the keyboard**, not guesses: pick a style on the keyboard and its tile lights here too.
- **Pa5X:** Rigsta builds the numbered **Live Control index** once, so every style works.

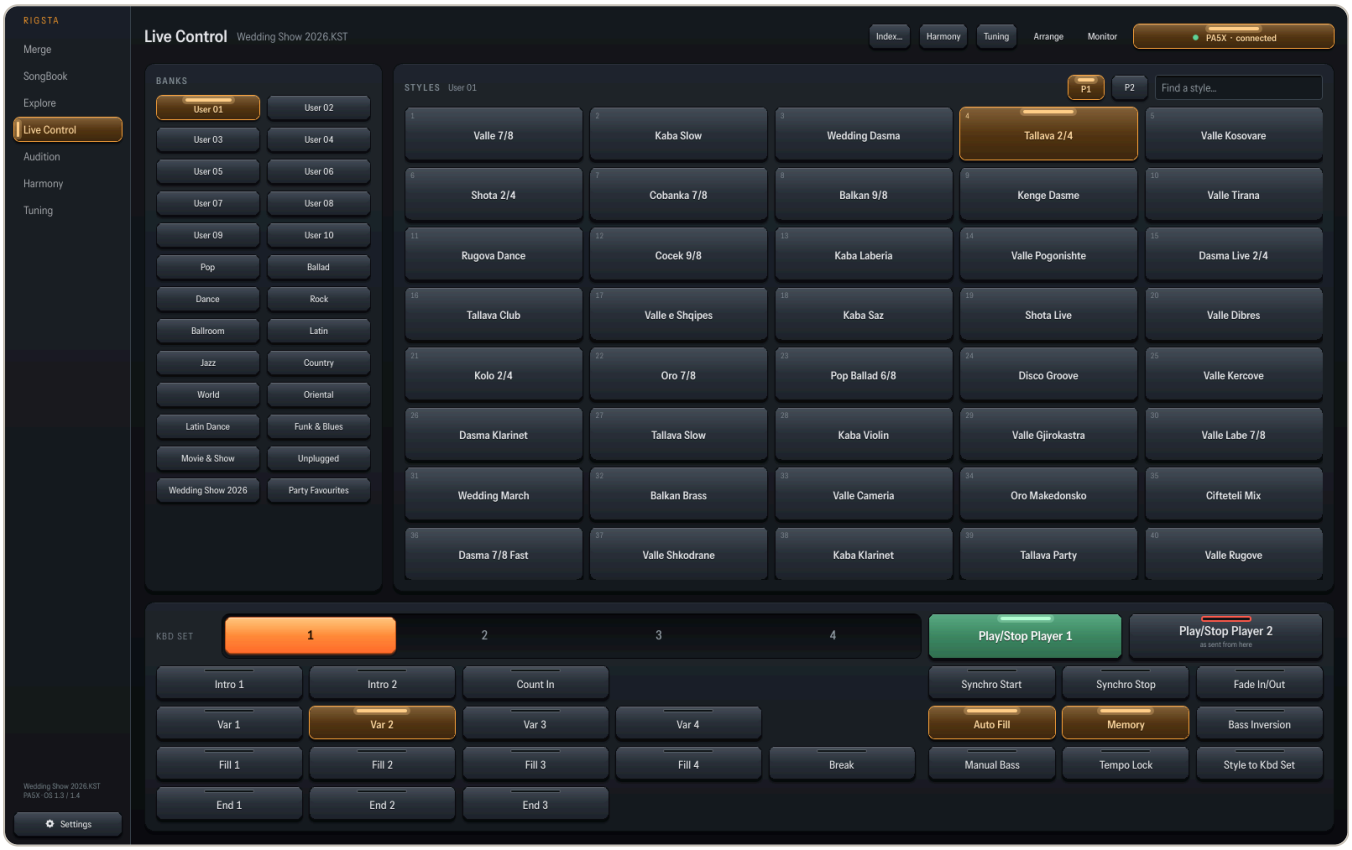

Live Control on a PC

11.1 Open the set that is on the keyboard

Live Control shows the styles of the set you have open. Open **the same set that is loaded on the keyboard**; if they differ, Rigsta tells you. The deck (elements, STS, transport) works with no set open.


11.2 The page

- **BANKS**: the style banks of the set. On a phone, the bank button ▾ opens them.
- **STYLES**: the styles of the bank picked. **Swipe** or use the arrows to turn pages; the find key searches every bank. **Tap a tile** and the keyboard puts that style up.
- **The deck:**
  - **STS 1 · 2 · 3 · 4**.
  - **Start/Stop** (Pa4X) or **Player 1 / Player 2** (Pa5X).

- **Intro 1, Intro 2, Count · Var 1–4 · Fill 1–4 · Break · End 1–3**.
- **Synchro Start, Synchro Stop, Fade In/Out, Auto Fill, Memory, Bass Inversion, Manual Bass, Tempo Lock, Style to Kbd Set**. On a phone, **Elements** and **Controls** switch between the two groups of keys.

The Start key turns green and blinks with the keyboard's clock while the style plays. The current Variation and any pending Intro, Fill or Ending are lit.


Arrange the deck. Arrange in the title row (a gear key on a phone) lets you drag any element or control key to another place in its group: onto another key they swap, onto an empty place it moves. The order is kept per keyboard (Pa5X / Pa4X); **Reset layout** puts the keyboard's own order back.

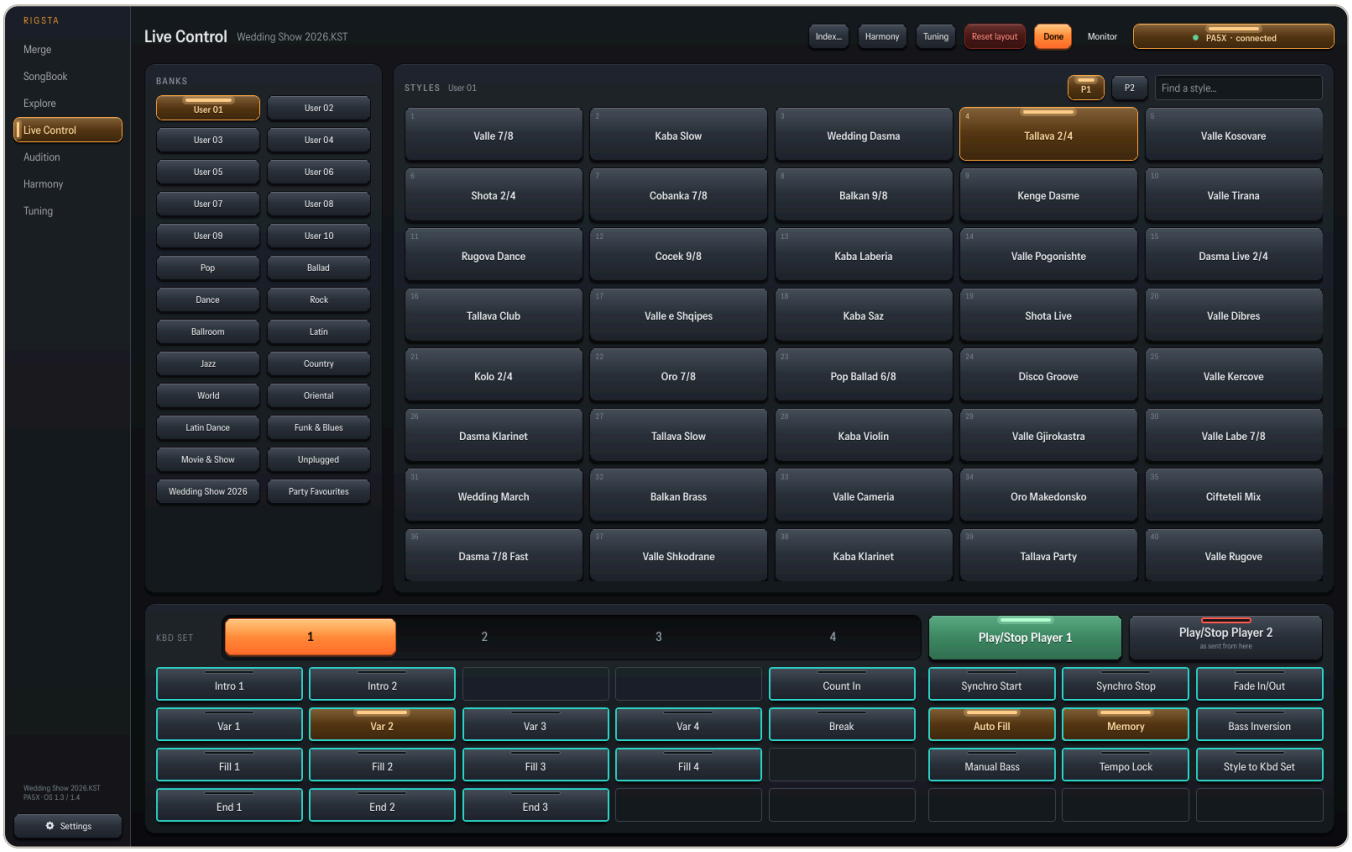

Arranging the deck: keys outlined to drag, empty places shown




Live Control on a tablet

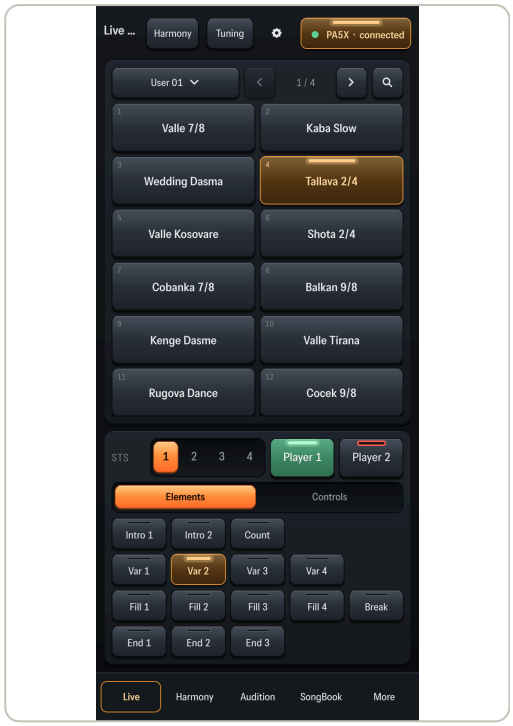

On a phone, the deck is at your thumbs

11.3 Pa5X: the Live Control index

The Pa5X takes a style from outside only through a **numbered SongBook entry**. Rigsta makes those entries for you:

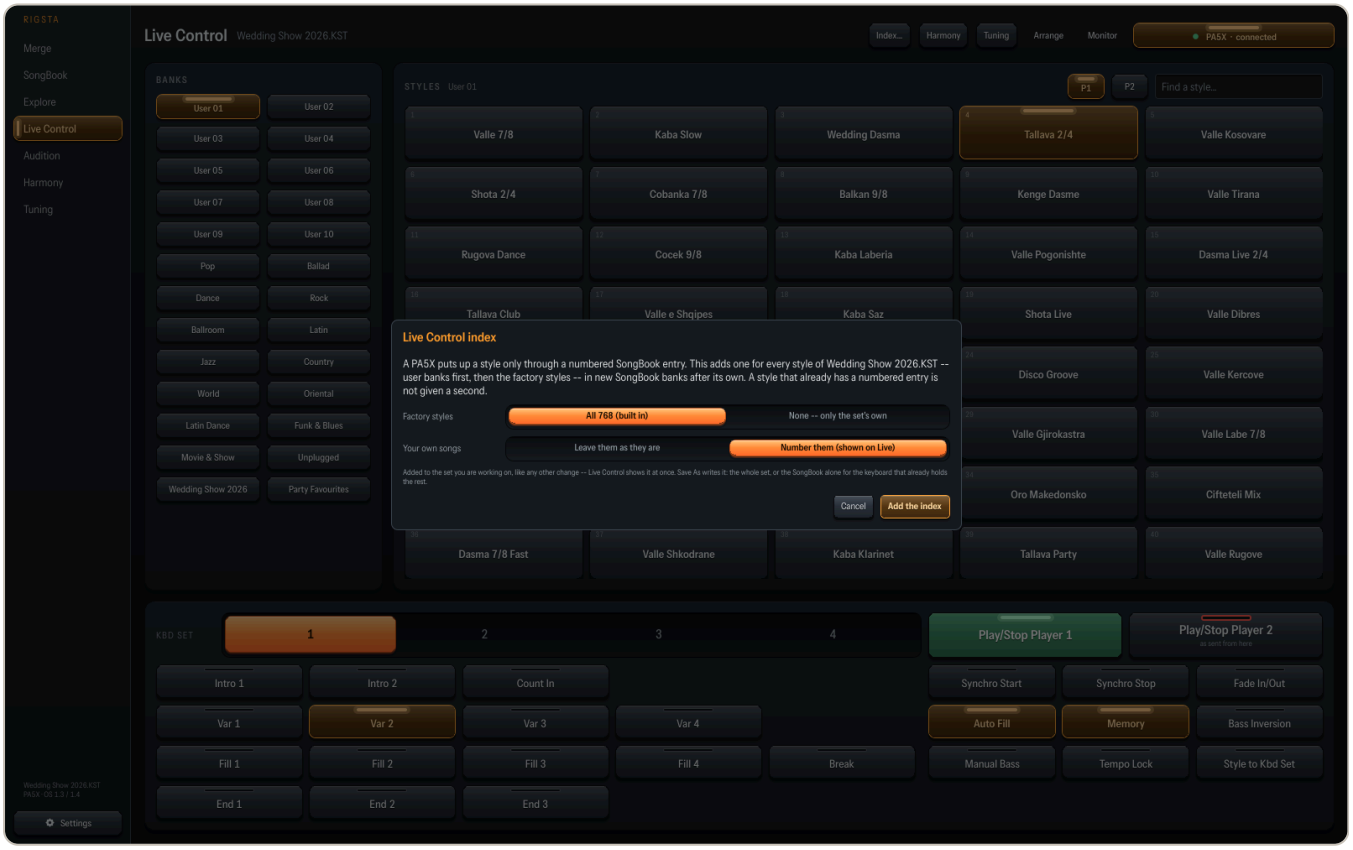


The Live Control index

1. Press **Index...** on Live Control (on a phone: tap the ⚠ notice, then **Make the index...**).
2. Choose **Factory styles** (*All (built in)* or *None -- only the set's own*) and **Your own songs** (*Leave them as they are* or *Number them*).
3. Press **Add the index**. Every style gets a numbered entry, in new SongBook banks after your own.
4. **Save As** → **The SongBook alone**, and load that SongBook onto the keyboard.


From then on, every style tile works on the Pa5X. You never see or type the numbers. A **Pa4X** needs no index.

11.4 Panels over Live Control

Harmony and **Tuning** open as panels, so you can change the harmony chord or the scale without leaving the styles. The Harmony panel lists the built-in harmonies and **your own**; the Tuning panel lists the set's scale memories and **your own scales** -- a tap puts one up. On a phone they cover the styles and leave the deck free.

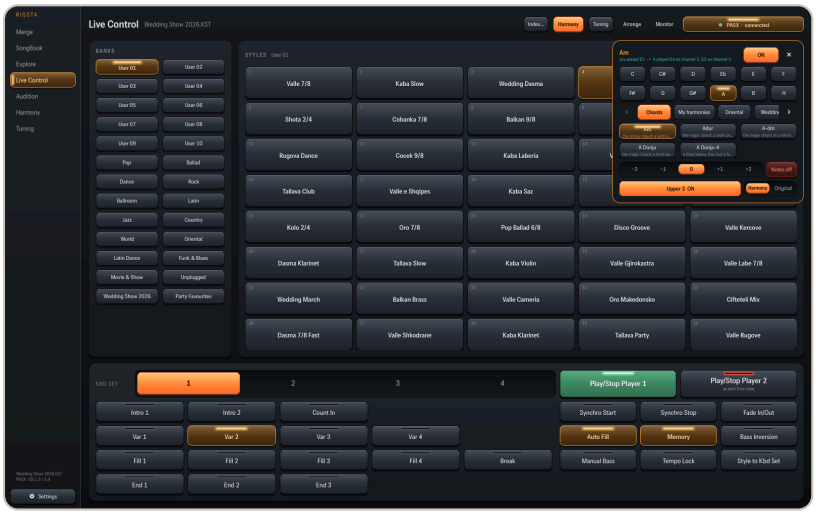

The Harmony panel over Live Control

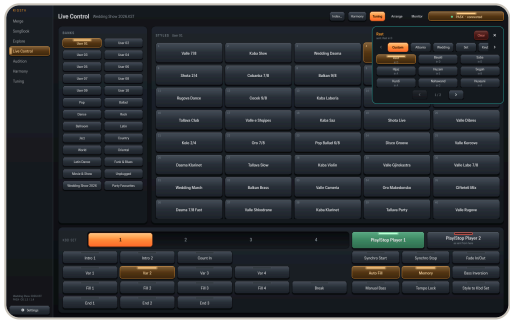


The Tuning panel over Live Control

Monitor (PC and tablet) shows every message sent and received.

12. Harmony

IN SHORT

- A **second voice** from your melody, live: a third or sixth above or below, true to the key and scale.
- **Your melody is never delayed.** The keyboard plays it directly; only the added harmony note passes through Rigsta.
- Choose the **chord**, press **ON**, and play.

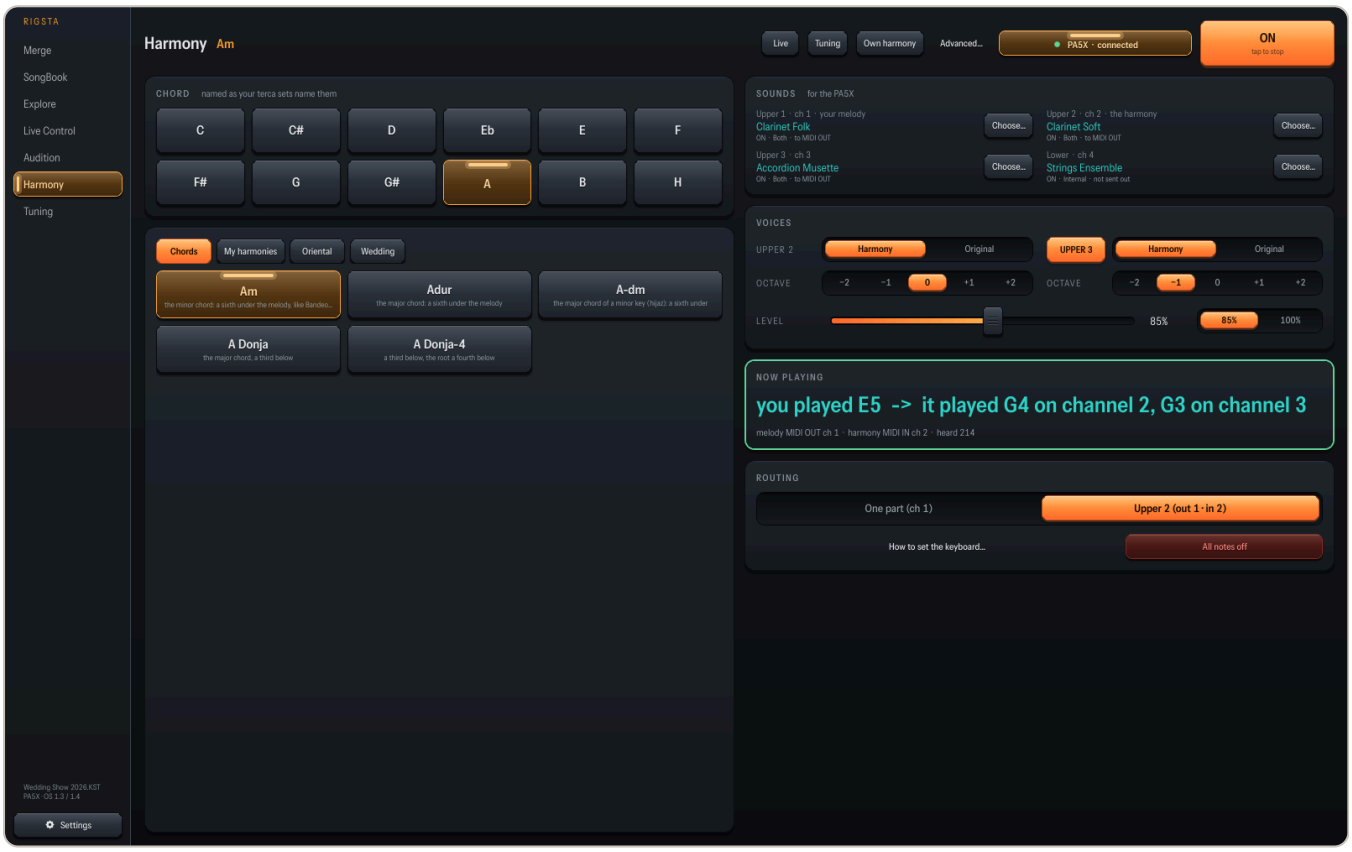

The Harmony page

12.1 How it works

1. You play a note. The keyboard plays it and sends it on MIDI OUT (channel 1).
2. Rigsta works out the harmony note for the key and scale, and sends it back on MIDI IN (channel 2 for Upper 2, or channel 1 in *One part*).

- Every note gets its own interval: harmony follows the scale, it is not a fixed shift.
- A released note always releases its harmony note.
- **Sustain, soft and sostenuto pedals, modulation, expression and pitch bend** follow the melody.
- The harmony's **level** is a share of your playing (10 %–150 %).

12.2 Playing

1. Set up the keyboard for **One part** or **Upper 2** and choose the same under **ROUTING**. → 10.3

2. Choose the **CHORD**: the root (Balkan spelling: H for B) and the type:

TYPE	WHAT YOU HEAR
m (e.g. Am)	the minor chord: a sixth under the melody
dur (e.g. Adur)	the major chord: a sixth under the melody
X-ym (e.g. E-am)	the major chord of a minor key (hijaz): a sixth under
Donja	the major chord, a third below
Donja-4	a third below, the root a fourth below


1. Press the big **ON** button and play.

- **NOW PLAYING** confirms it: *you played A4 -> it played C4 on channel 2*.
- **VOICE**: shift the harmony an octave (**−1 · as the set · +1**) and set its **LEVEL** (drag the fader).
- **SOUNDS** (Pa5X): choose Upper 1, 2, 3 and Lower with **Choose...**.
- **All notes off** silences any hanging note.

On a phone, **Play** shows the chord and voices; **Setup** shows the sounds and routing.

12.3 Your own harmonies

The built-in harmonies (**m**, **dur**, **Donja** ...) work in any key. You can build your own the same way and save them, on the **Own harmony** panel of the Harmony page.

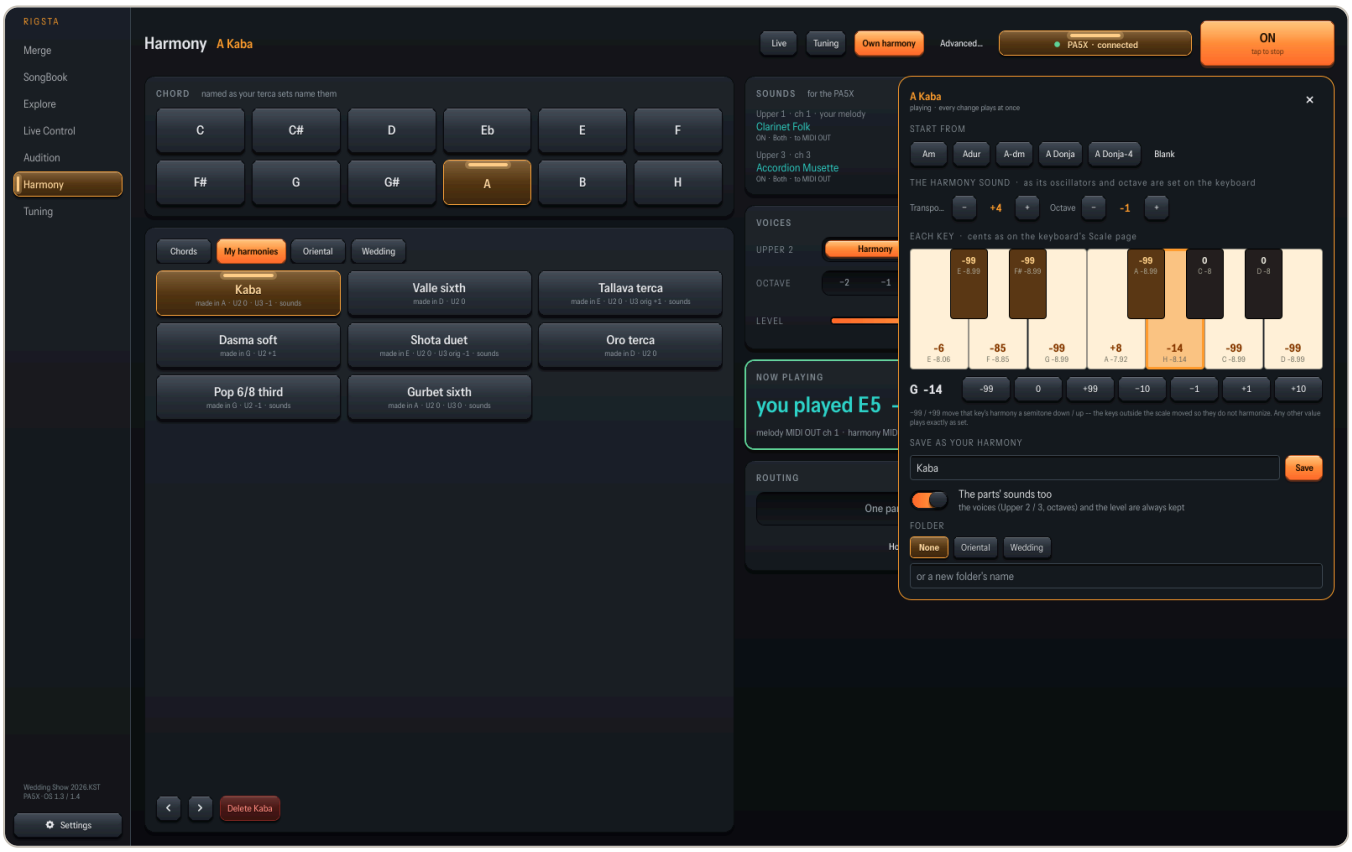


The Own harmony editor: transpose, octave and each key's cents

You build one as you would tune a terca keyboard set:

- Start from one of the built-in harmonies (copied exactly) or from blank.
- Set the harmony sound's **transpose** (its oscillators, −24…+24) and **octave**.
- Set **each key's cents**, as on the keyboard's Scale page -- any value −99…+99. Under each key, Rigsta shows the note it plays and the exact distance, so a value like −50 sounds a quarter tone off.

A saved harmony keeps the key it was made in and plays in any key, like the built-in ones -- together with the voices (Upper 2 and 3), the octaves, the level and, if you want, the sounds. Your harmonies appear under **My harmonies** with your folders, and the lit one moves earlier or later with **< >**.

The **Live** panel on the Harmony page lets you pick a style and press Start, Variations and STS without leaving Harmony.

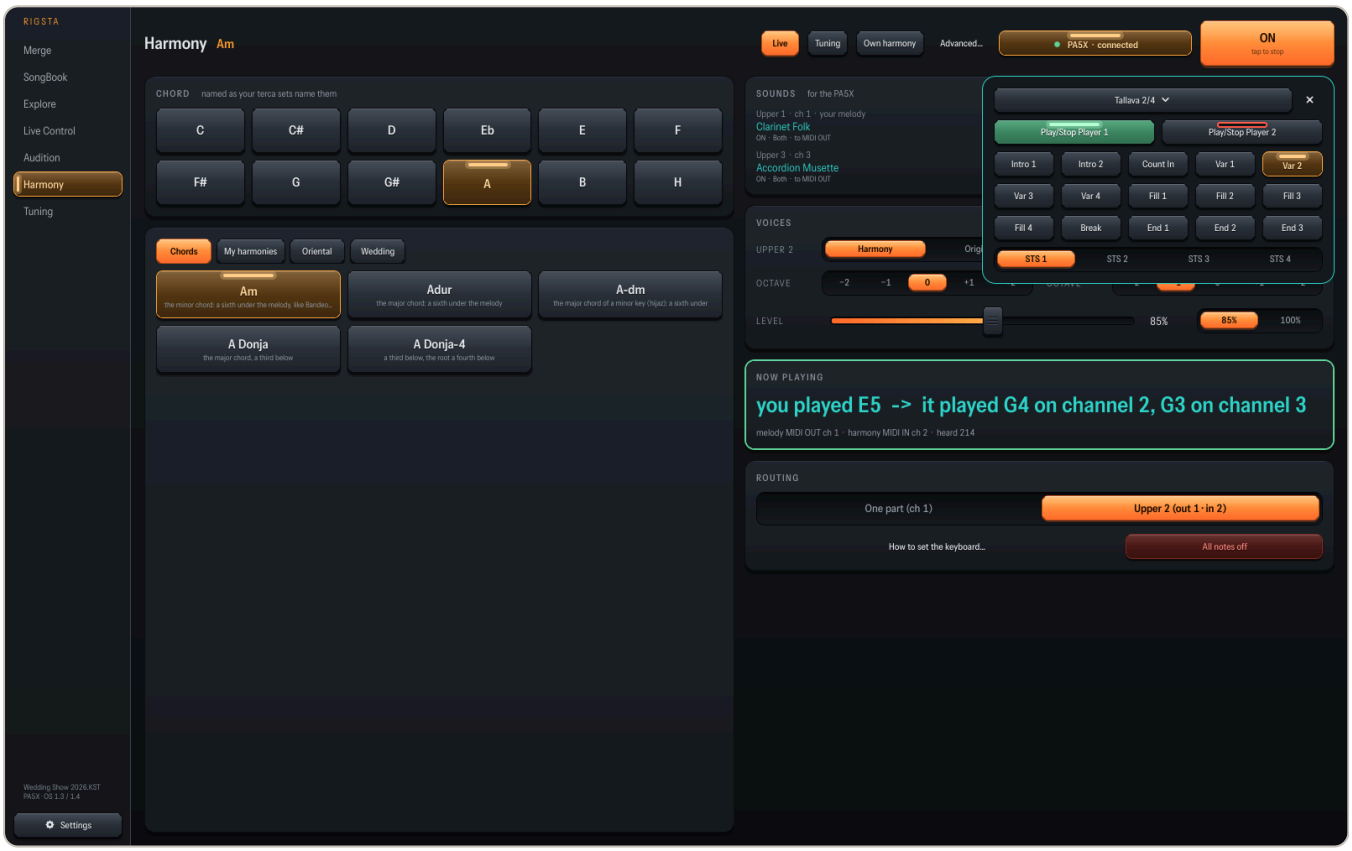


The Live panel over Harmony

13. Tuning

IN SHORT

- Send a **scale** to the keyboard: each of the 12 notes in cents, quarter tones included. For maqam, Balkan and oriental music, or historic temperaments.
- **Tap a scale** and it is on the keyboard. **Clear** returns to equal temperament in one tap.

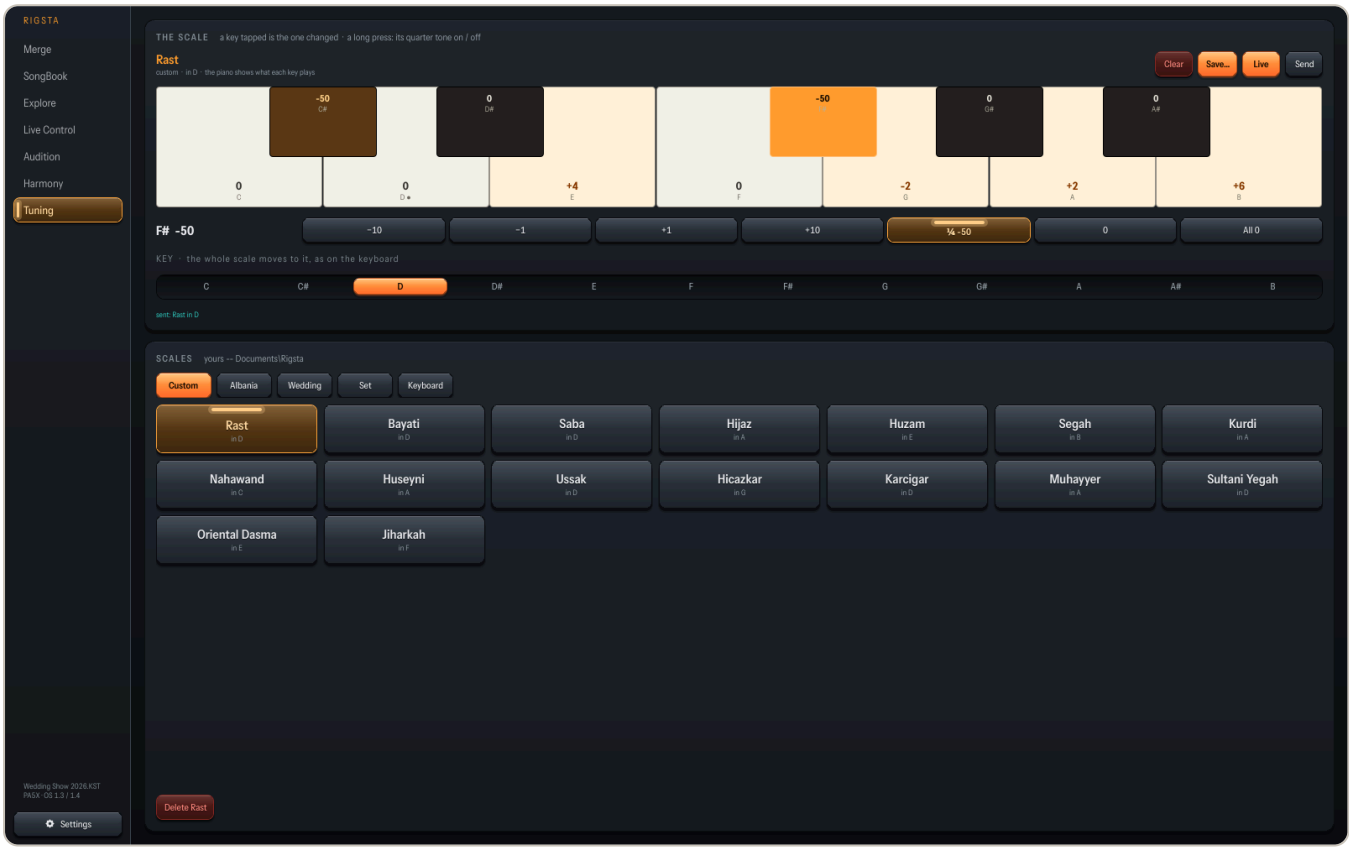

The Tuning page

13.1 Choosing a scale

The **SCALES** list has three tabs:


- **Custom**: your own scales, kept in Rigsta. It opens first.
- **Set**: the scale memories stored in the set you have open. **Save all as custom** keeps them in Rigsta for good.
- **Keyboard**: the keyboard's own scales, *Equal, Pure Major, Pure Minor, Arabic, Pythagorean, Werckmeister, Kirnberger, Slendro, Pelog, Stretch*.

With **Live** on, a scale tapped goes to the keyboard at once. Swipe the list sideways for more. A scale you save keeps the key it was written in, and the piano marks that key note with a dot.

13.2 Editing a scale

The **SCALE** card shows a piano with each key's cents (−99 … +99):

- **Tap a key** to choose it, then **−10 −1 +1 +10**, **¼ −50** (a quarter tone flat), **0**, or **All 0**.
- **Long-press a key** to switch its quarter tone on or off.
- **Save…** keeps it as a Custom scale by name. **Send** sends it now. **Take it** reads back what the keyboard plays.

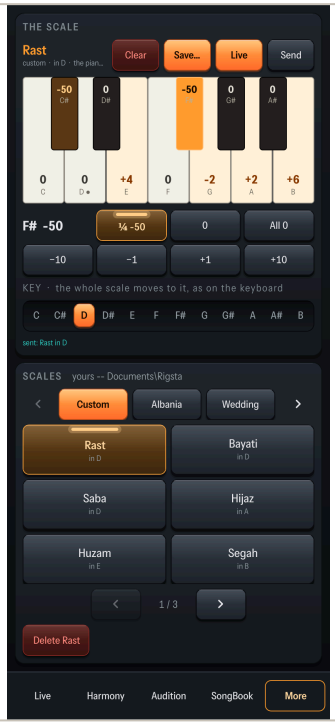

Tuning on a phone

13.3 Clear


Clear puts **Equal** back on the keyboard and every note to 0. It is one tap back to normal tuning, mid-show. The Tuning **panel** on Live Control and Harmony lists your scales; one tap puts a scale up.

> **NOTE**
>
> All Upper parts follow the scale. Sounds set to *Fixed Scale* on the keyboard ignore it, as on the keyboard itself.


14. Audition

IN SHORT

- Hear a style's phrases **on your keyboard**, with the sounds it holds, before you merge it.
- **Try another sound** on any track, and keep the ones you like.

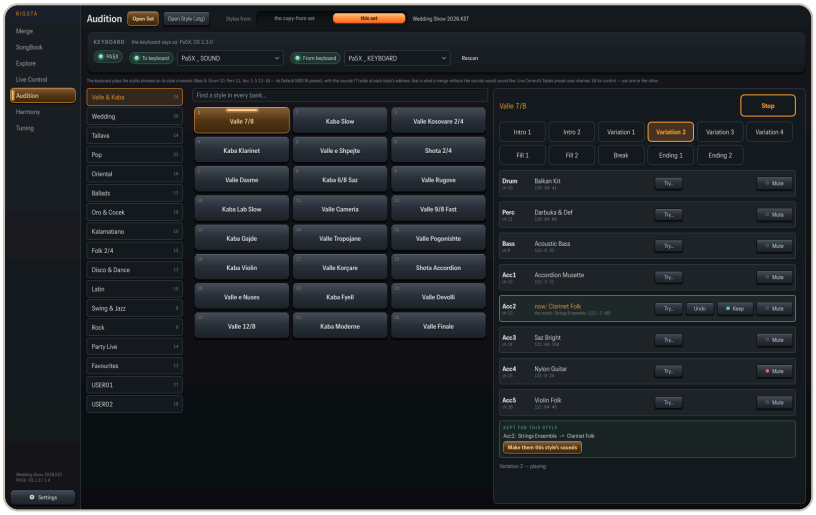

The Audition page

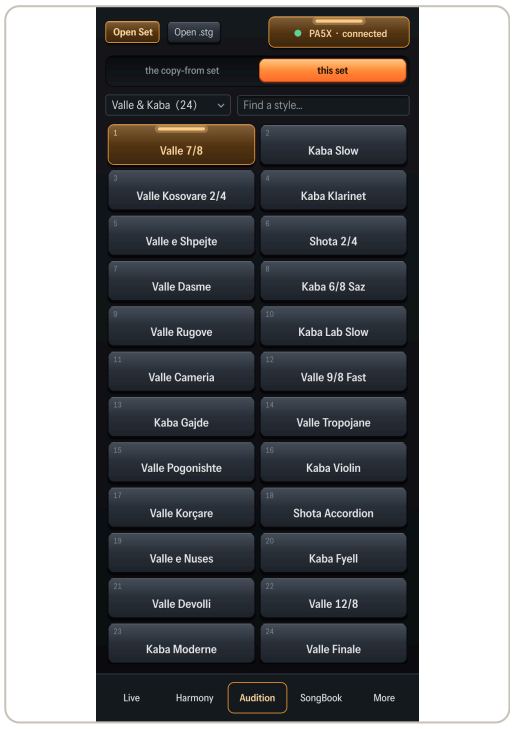

Audition on a phone

Audition plays on the style channels (Bass 9, Drum 10, Perc 11, Acc 1–5 on 12–16).


1. Choose **this set** or **the copy-from set**.
2. Pick a bank and a style. **Find a style in every bank…** searches everything.
3. Tap an **element** to play it; tap another and it switches at the next bar. **Stop** stops.
4. For each track: **Try…** another sound this set holds, **Undo**, **Mute**, **Keep**.
5. **Make them this style's sounds** writes the kept sounds into the style, in memory.

> **NOTE**
>
> Audition currently plays Pa5X styles. On a phone, the style opens in the **THE STYLE** sheet.

15. Settings

IN SHORT

On a PC or tablet: ⚙ **Settings** at the foot of the rail. On a phone: **More** → **Settings**.

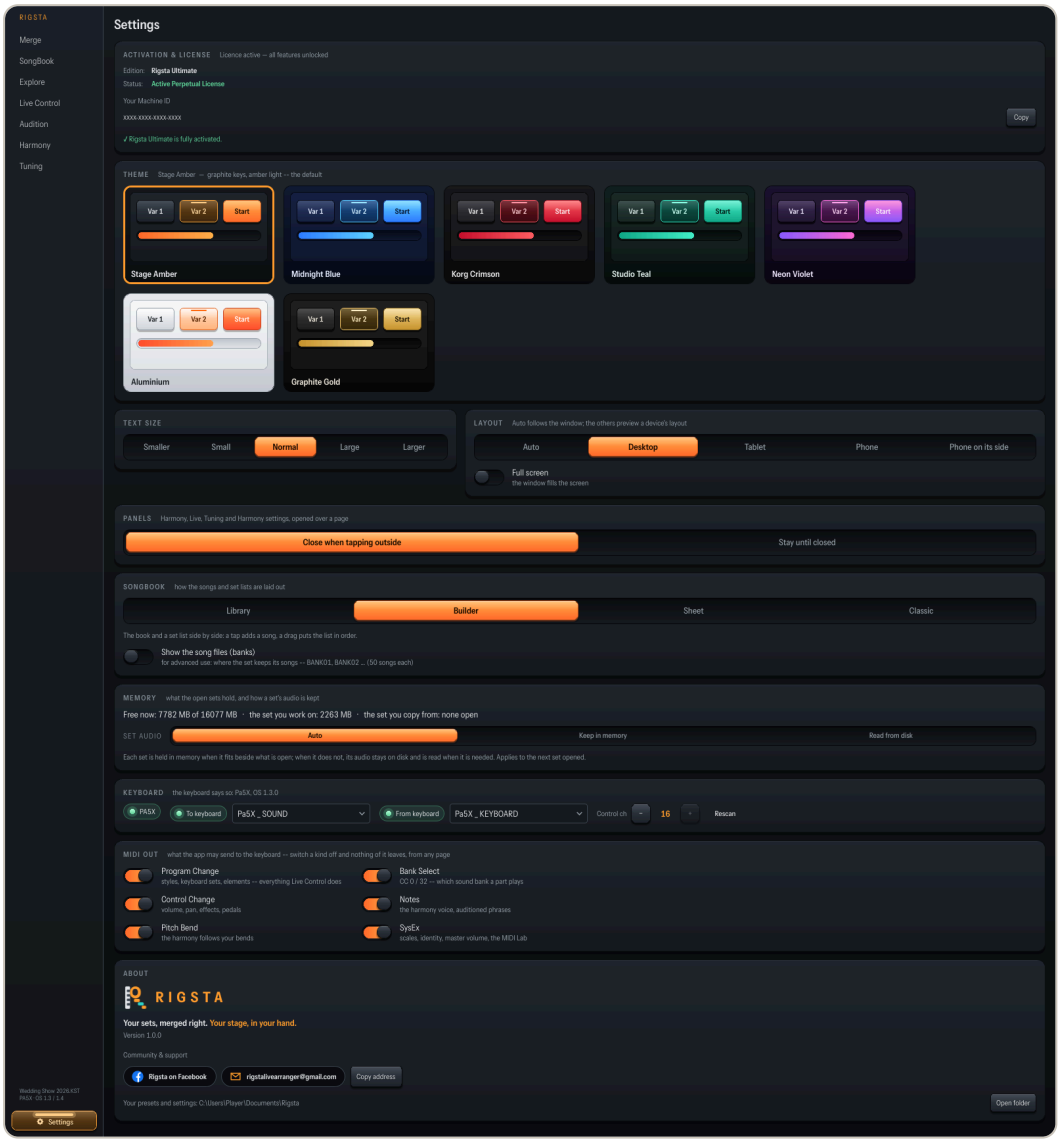


Settings

SETTING	CHOICES
THEME	Stage Amber (default) · Midnight Blue · Korg Crimson · Studio Teal · Neon Violet · Aluminium (for daylight) · Graphite Gold
TEXT SIZE	Smaller · Small · Normal · Large · Larger
LAYOUT	Auto (follows the window) · Desktop · Tablet · Phone · Phone on its side · **Full screen**
PANELS	Close when tapping outside · Stay until closed
SONGBOOK	Builder · Library · Sheet · Classic · Show the song files (banks) → 8.4

SETTING	CHOICES
MEMORY → SET AUDIO	Auto · Keep in memory · Read from disk
KEYBOARD	ports, Control channel, which keyboard → 10.2
MIDI OUT	Program Change · Bank Select · Control Change · Notes · Pitch Bend · SysEx → 10.4

- **LAYOUT.** *Auto* follows the window. The others show a device's layout: on a PC, a phone or tablet layout is drawn in a frame in the middle of the window. **Full screen** hides the phone's bars (a swipe from the edge brings them back), or fills the screen on a PC.
- **SET AUDIO.** *Keep in memory*: every set is read whole, the fastest. *Read from disk*: the audio stays in the set folder and is read when a merge or Save As needs it; two large sets fit even on a phone. *Auto*: in memory when it fits, otherwise on disk. It applies to the next set opened.

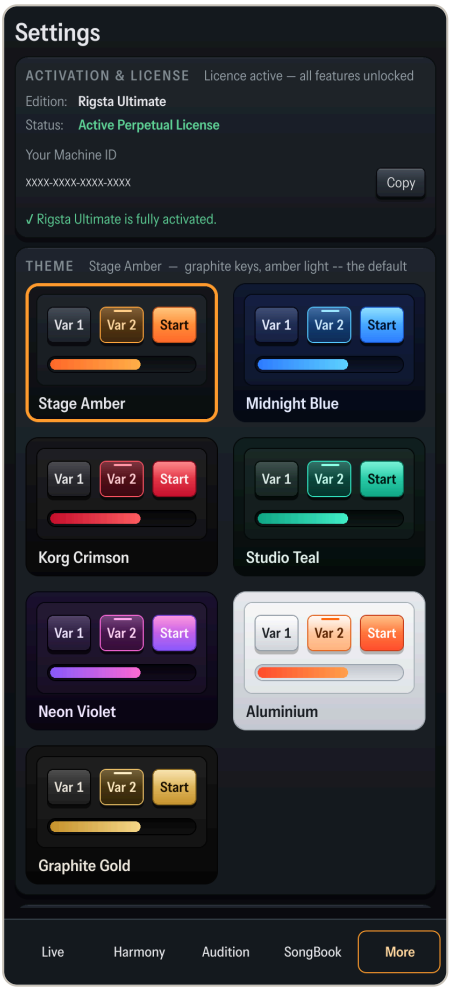

Settings on a phone

16. Troubleshooting

PROBLEM	WHAT TO DO
The style tiles do nothing on a Pa5X	The set needs the Live Control index, loaded on the keyboard → 11.3. Check the MIDI Preset is **Tablet**.
The Start light never shows	Turn **Clock Send** on at the keyboard, and choose **From keyboard** in Rigsta.
Harmony: "NOT HEARING THE KEYBOARD"	Choose **From keyboard** under **Settings** → **KEYBOARD**.
My keys play the harmony sound too	Switch **Upper 2 OFF** on the keyboard panel. Rigsta still plays it.
Tuning does not change the sound	The sound may be *Fixed Scale*. Turn the MIDI OUT filters off. Check **Settings** → **MIDI OUT** → **SysEx** is on.
"not sent -- no keyboard connected"	Choose **To keyboard** under **Settings** → **KEYBOARD**.
The ports are missing	Close other MIDI programs, reconnect the cable, press **Rescan**.
"This set may not fit in memory"	Close other apps, or choose **Settings** → **SET AUDIO** → **Read from disk**.
A copy is refused "set full"	The report names the limit. Delete unused items *with their own data*, or leave something out.
"items move only between two sets of the same keyboard"	Convert the Pa4X copy-from set first → 6.2.
"Not converted -- not enough memory"	Follow the steps it gives → 6.4.
A sample shows red, "locked"	It is protected audio. The keyboard plays it; Rigsta shows it but cannot play it.
Keys of a drum kit are silent	Their drum record holds no sample (outline only, *Empty*). The keyboard is silent there too.
Save As refuses the folder	Save As never overwrites. Choose a new name or folder.
I cannot find a page on my phone	Tuning, Merge, Explore and Settings are under **More**.

17. Glossary

TERM	MEANING
Set	A folder holding everything a keyboard loads: styles, keyboard sets, pads, sounds, samples, SongBook. `.SET` on Pa4X, `.KST` on Pa5X.
Current set / copy-from set	The set you work on, and the second set you take items from.
Style	An accompaniment: drums, bass and up to five accompaniment tracks, with Intros, Variations, Fills, Breaks and Endings.
STS / Keyboard set	Single Touch Settings: the sounds of Upper 1–3 and Lower, stored with a style (four per style) or on their own.
Pad	A one-shot or looping phrase on the keyboard's pad buttons.
Sound	An instrument, built from multisamples or drum records, which point at samples.
Multisample	Zones across the keyboard, each playing one sample.
Drum record	What one drum-kit key plays: up to four samples (direct and ambience, left and right).
Sample	A piece of audio. Factory samples live in the keyboard's ROM; your own live in the set.
Sample RAM / Preload	The keyboard's memory for your audio, and the part loaded at start-up.
SongBook	The keyboard's song database. Each entry recalls a style with its settings.
Selection number	A SongBook entry's number, used to call it up by MIDI.
Control channel	The MIDI channel on which the keyboard takes remote commands (16 in the Tablet preset).
Sheet	A detail that slides in from the right on a narrow screen, closed with **Close**.
Terca	A Balkan term for a harmony voice a third (or sixth) from the melody.

Rigsta is an independent product and is not affiliated with or endorsed by Korg Inc. Korg, Pa4X and Pa5X are trademarks of their respective owners.