
WAY4TECH

Facility Management for Odoo 19

User guide for the CAFM module and the Facility Management Enterprise add-on. Estate, assets, help desk, permits, contracts, billing and reporting, step by step.

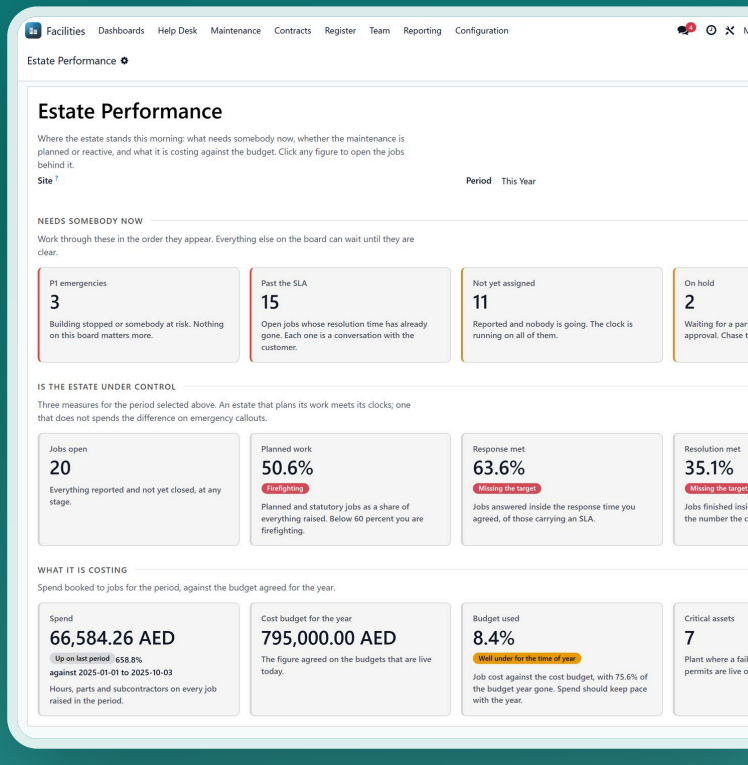

Facility Management (CAFM) wt_facility_management 19.0.1.2.0

Facility Management Enterprise wt_facility_enterprise 19.0.1.3.1

Edition 1, October 2026

www.way4tech.com | info@way4tech.com

Contents

Read chapters 1 to 3 once, in order, when you set the system up. After that, go straight to the chapter for the job in front of you. Chapter 11 has a one-page routine for each role, a short list of questions we are asked most, and a glossary.

1 What the system does — 3
The two products, features at a glance, the demo estate used in this guide

2 Logging in and who does what — 6
The Facilities app, the menus, the four roles and how to give them

3 Getting started — 10
Settings, sites, buildings, floors and rooms, skills, service levels, asset classes, technicians, rate cards

4 The asset register — 20
Assets and sub-assets, criticality, warranty, meters, commissioning, lifetime cost, history printout

5 Planned maintenance and statutory inspections — 28
Schedules on a date or a meter, raising jobs, certificates

6 Help desk and work orders — 32
A fault from first call to close, hold and resume, parts and labour, the job sheet, SLA clocks

7 Permit to work — 43
Request, issue by a second person, start, hand back, expiry

8 Contractors and technicians — 50
Approval, insurance, suspension, performance, contractor bills

9 Contracts and billing ENTERPRISE — 53
Cover, Scheduled contracts, invoicing, renewals, chargeable work, write-offs, service credits, cost budgets

10 Dashboards and reports — 66
Every card on the three boards, and the six reports

11 Day to day — 75
Checklists per role, questions and answers, glossary

Screens in this guide were taken from the Way4Tech demonstration database for Meridian Facilities Management LLC in October 2026. Your colours, company name and figures will differ. Features marked ENTERPRISE need the Facility Management Enterprise add-on. The system runs on Odoo 19 Community or Enterprise.

CHAPTER 1

What the system does

One place for the estate, the plant in it, every job done on it, the permits that keep people safe, and the money that comes in and goes out.

Most facility management teams we meet run on three things: a help desk mailbox, a spreadsheet of assets that was last updated at handover, and a finance team that finds out at year end which contracts lost money. This system replaces all three. A fault is logged against a real room and a real machine, the SLA clock starts on its own, the engineer works the job on a phone or a laptop, and the cost of every hour and every part lands against the asset, the building and the contract.

It comes as two modules that install into Odoo 19.

Facility Management (CAFM)

The maintenance system. Sites, buildings, floors and rooms. The asset register with meters and lifetime cost. Planned maintenance and statutory inspections. The help desk, work orders and SLA clocks. Permits to work. Technicians, skills and contractors. The job sheet and the asset history printout. Three reports.

Facility Management Enterprise

ENTERPRISE

The commercial half. Maintenance contracts and what they cover. Contract invoicing and renewals. Chargeable work outside the cover, invoiced or written off. Service credits for missed SLAs. Rate cards, cost budgets, cost per building. Three dashboards and three more reports.

Features at a glance

Area	What you can do	CAFM	Enterprise
Estate	Sites, buildings, floors and rooms. Access notes per building, restricted rooms, a permit type required in a given room.	**Yes**	**Yes**
Asset register	Assets and sub-assets, asset classes with defaults, criticality and condition, warranty, install and commission dates, expected life, state from Not Yet Commissioned to Decommissioned.	**Yes**	**Yes**
Meters	Meter readings by hand or from a job, use per day, meter replacement, backwards readings refused.	**Yes**	**Yes**
Lifetime cost	Parts, labour and callouts rolled up from sub-assets, spend against replacement value, asset history printout.	**Yes**	**Yes**
Planned maintenance	Schedules on a calendar interval, a meter, or whichever comes first. Jobs raised ahead of time, every night.	**Yes**	**Yes**

Area	What you can do	CAFM	Enterprise
Statutory inspections	Inspection intervals per asset class, certificate reference required to complete, next inspection date moved on.	**Yes**	**Yes**
Help desk	Report a fault, assign in house or to a contractor, skills check, log response, start, hold with a reason, resume, hand back, complete, close off.	**Yes**	**Yes**
SLA clocks	Response and resolution targets per priority, site or contractor. Around the clock or cover hours only, with time zone and working days. Stop the clock on hold. Breach flags and escalation every 15 minutes.	**Yes**	**Yes**
Parts and labour	Parts issued from stock, labour by technician or contractor, out of hours premium, job cost.	**Yes**	**Yes**
Permit to work	Hot work, confined space, electrical isolation, working at height. Second-person issue, type checks, time window, hand back, automatic expiry.	**Yes**	**Yes**
Contractors	Approval, trades and sites covered, insurance with a grace period, suspension with a reason, performance, vendor bills from the job.	**Yes**	**Yes**
Printouts	Job sheet with customer sign-off, permit, asset history.	**Yes**	**Yes**
Reports	SLA Performance, Planned Against Reactive, Asset Lifetime Cost.	**Yes**	**Yes**
Maintenance contracts	Cover lines per site, building or asset, what the fee includes, Scheduled and Running states, notice period, renewals, inclusive end dates.	No	**Yes**
Contract invoicing	Invoice the period by hand or overnight, one invoice per period, dates on the line, due date from payment terms.	No	**Yes**
Chargeable work	Cover decided as the job is raised, reason recorded, Bill To from contract or owner, priced off a rate card, invoiced or written off with a reason. Re-check Cover.	No	**Yes**
Service credits	Credit schedule per contract, monthly draft, agree or waive, deducted on the next invoice, statement for the monthly review.	No	**Yes**
Cost budgets	Annual cost budget per site, building or asset class, spend against it, verdict against the share of the year gone.	No	**Yes**
Dashboards	Estate Performance, Contracts and Billing, My Work. Trend against the previous period.	No	**Yes**
Commercial reports	Contract Profitability, Job Margin, Cost per Building. Analytic accounts per contract, site and building.	No	**Yes**

The demo estate used in this guide

Every example comes from the same demonstration company, so you can follow along on the demo site and see the same records.

- **Company:** Meridian Facilities Management LLC, Dubai, accounts in AED with UAE VAT at 5 percent.
- **Site:** Marina Gate Estate, code MGE, with three buildings: Marina Gate Tower 1 (offices), Marina Gate Tower 2 (warehouse) and the District Cooling Plant.
- **Plant:** twelve assets, including Chiller 1 with its Compressor A, AHU 03 on the Tower 1 roof, Passenger Lift A, the Main Distribution Board in the basement switch room and a standby generator.
- **Customers:** Marina Gate Owners Association (contract MC/2026/0001, AED 144,000 a year) and Gulf Logistics FZE (contract MC/2026/0002, AED 60,000 a year).
- **People:** in-house technicians Mahmoud Fayez (mechanical and HVAC), Priya Raman (electrical), Rashid Al Balushi and Angelo Reyes. Contractors Schindler Gulf LLC (lifts), Emrill Facilities Services and Al Futtaim Engineering.

> **TRY IT YOURSELF**
>
> The demo runs at facility-pro.way4tech.com. Log in with **demo** and password **CafmDemo2026**. It is shared, so you will see other people's test jobs next to ours. Nothing you do there touches a live company.

CHAPTER 2

Logging in and who does what

Two minutes to find your way around, and ten minutes for the administrator to give everybody the right role.

Log in and open the app

1. Open the address your administrator gave you in Chrome, Edge or Safari. It works on a laptop, a tablet and a phone.
   You see the login page.
2. Type your email or login and your password, then press **Log in**.
   You land on the grid of apps your company uses.
3. Click **Facilities**.
   The app opens on the Estate Performance board if you are a supervisor or manager.

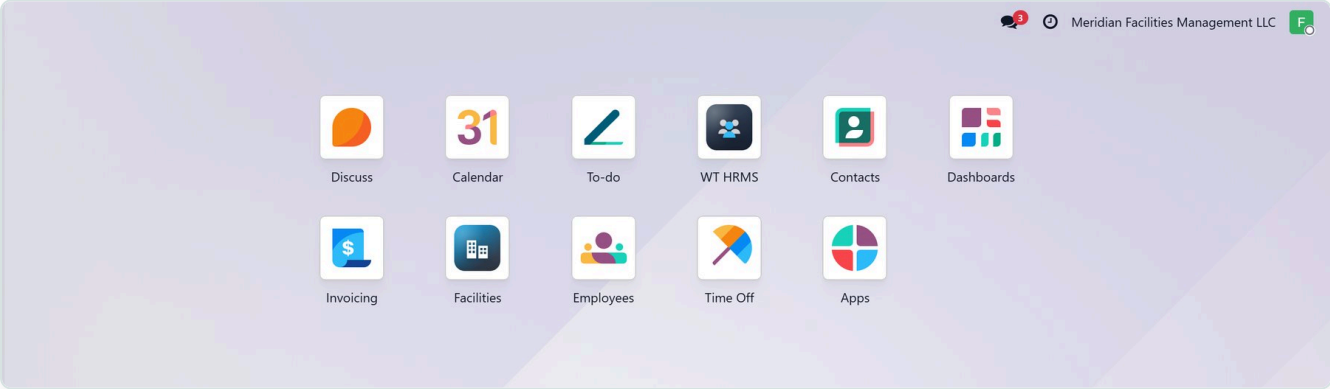


Figure 1. The app grid. Facilities sits next to the other Odoo apps the company uses, here Invoicing, Employees and Time Off.

The menu bar

Everything in this guide starts from the menu bar across the top of the Facilities app.

Menu	What is under it
Dashboards	Estate Performance, Contracts and Billing, My Work. ENTERPRISE
Help Desk	Work Orders, My Jobs, Permits to Work.
Maintenance	Schedules, Statutory Inspections, Meter Readings.
Contracts	Maintenance Contracts, Renewals, Chargeable Work, Service Credits, Cost Budgets. ENTERPRISE
Register	Assets, Rooms and Spaces, Buildings.
Team	Technicians, Contractors.

Menu	What is under it
Reporting	Planned Against Reactive, SLA Performance, Asset Lifetime Cost, and with Enterprise: Contract Profitability, Job Margin, Cost per Building.
Configuration	Settings, Sites, Floors, Asset Classes, Skills, Service Levels, Rate Cards.

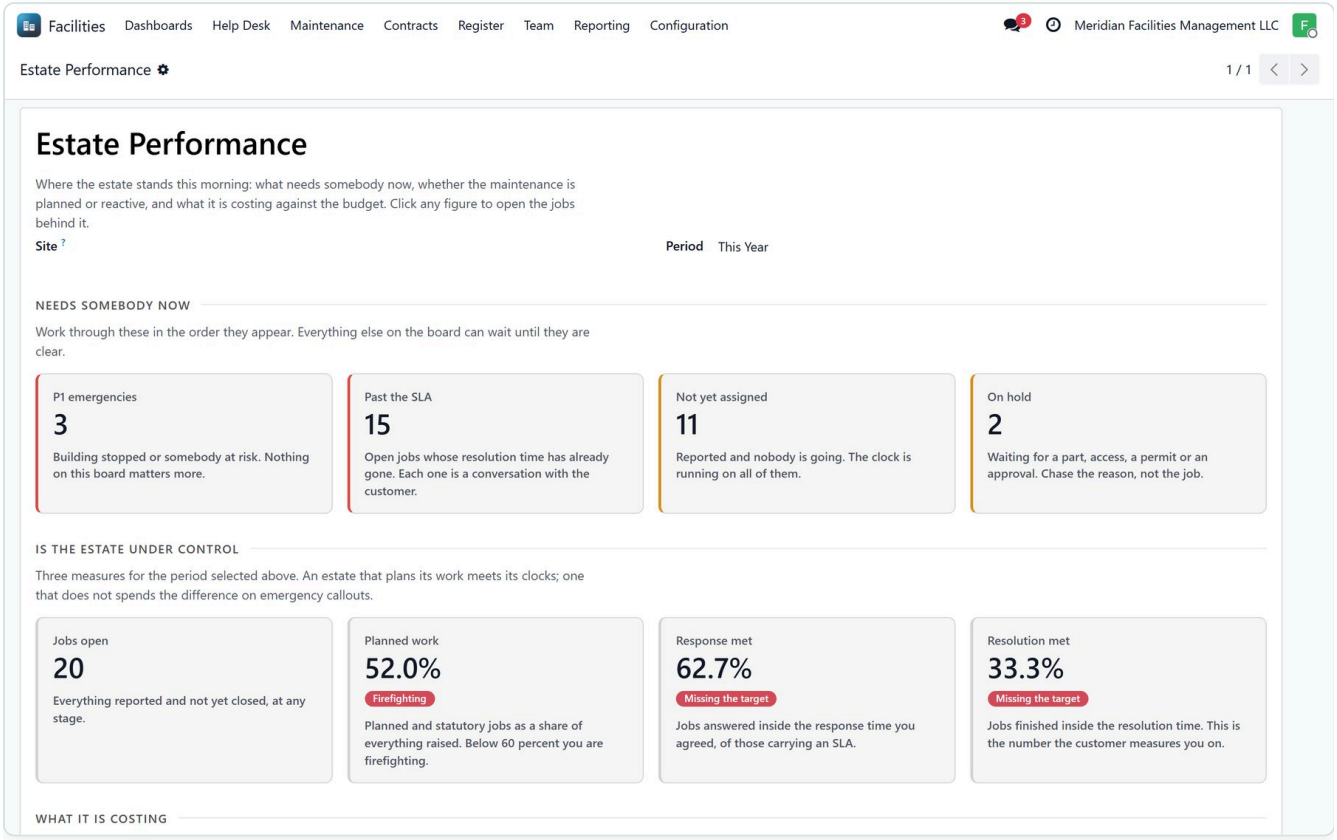


Figure 2. The Facilities menu bar with the Estate Performance board underneath.

> **TIP**
>
> Every list has a search box with filters, a group by option and, on most screens, a choice of views: list, cards (kanban), pivot and graph. The buttons sit at the top right of the list. Once you have a filter you use every day, save it as a favourite from the search box drop down.

The four roles

Each user gets one Facility Management role. A role includes everything below it, so a Facility Manager can do all that a Supervisor can, and a Supervisor all that a Technician can.

Role	Can do	Typical person
Technician	Works the jobs on their own name, books hours and parts against them, reads the asset register. Sees no rates and no contractor paperwork.	Mechanical, electrical and HVAC engineers

Role	Can do	Typical person
Maintenance Supervisor	Runs the help desk: raises and assigns every job on the estate, issues permits to work, closes jobs off. Sees Team, Buildings and live contracts, and the Estate Performance board.	Help desk lead, shift supervisor
Contracts and Billing ENTERPRISE	Maintenance contracts, what they cover, rate cards, chargeable work, write-offs, service credits and cost budgets. Sees cost and margin on every job and the Contracts and Billing board.	Contract manager, commercial manager
Facility Manager	Everything: the estate, the register, contractor approval, rates, reporting and configuration. Includes Contracts and Billing.	FM manager, operations manager

Give a user a role

1. Open the main Odoo **Settings** app, then **Users & Companies > Users**.
2. Open the user, or press **New** to add one.
3. On the **Access Rights** tab, find **Facility Management** under Services and pick the role.
4. For anybody who raises or checks invoices, set **Accounting** to Invoicing as well. Facility roles never grant accounting rights on their own.
5. Press **Save**. The user sees the change the next time they open the app.

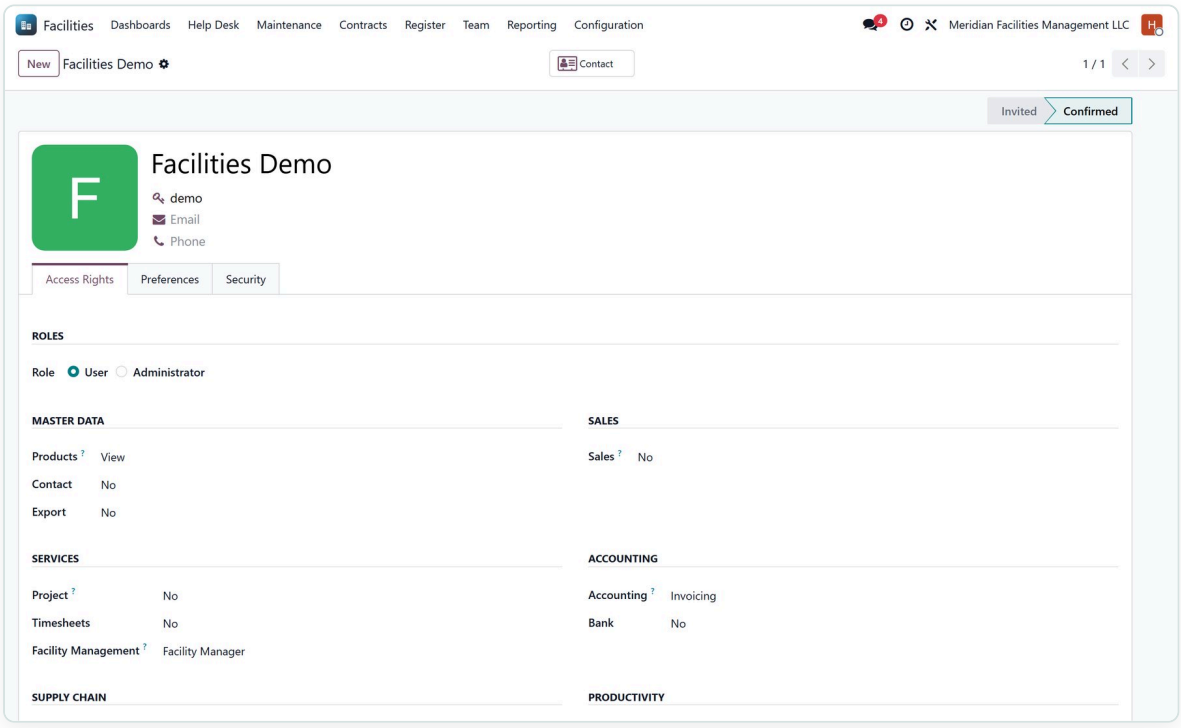


Figure 3. A user set up as Facility Manager with Invoicing rights in Accounting.

> WHY IT MATTERS
>
> Rates and margins are sensitive. A technician who can see the hourly charge-out rate will, sooner or later, quote it to a tenant. Keep engineers on the Technician role and let the boards and reports show the money to the people who need it. Each board only shows the figures your role can open, so nobody clicks a card and hits a dead end.

Link each technician to their login

A technician sees **Help Desk > My Jobs** and the My Work board only when their technician record is linked to their Odoo user. Do this once, in **Team > Technicians**, field **Odoo User**. Chapter 3 covers the technician record.

CHAPTER 3

Getting started

Do this once, in this order. Every job, report and invoice later on hangs off what you put in here.

In this chapter

- Company settings
- Sites
- Buildings and floors
- Rooms and access
- Skills
- Service levels
- Asset classes
- Technicians
- Rate cards ENTERPRISE
- A setup checklist

A fault should be reported against a room and a machine, not against a description of them. That only works if the estate is in the system first. On a typical tower this is half a day of work, and most of it can be imported from the handover documents.

1. Company settings

Settings need the Administrator right in Odoo. Open **Configuration > Settings**; the page opens on the Facility Management section.

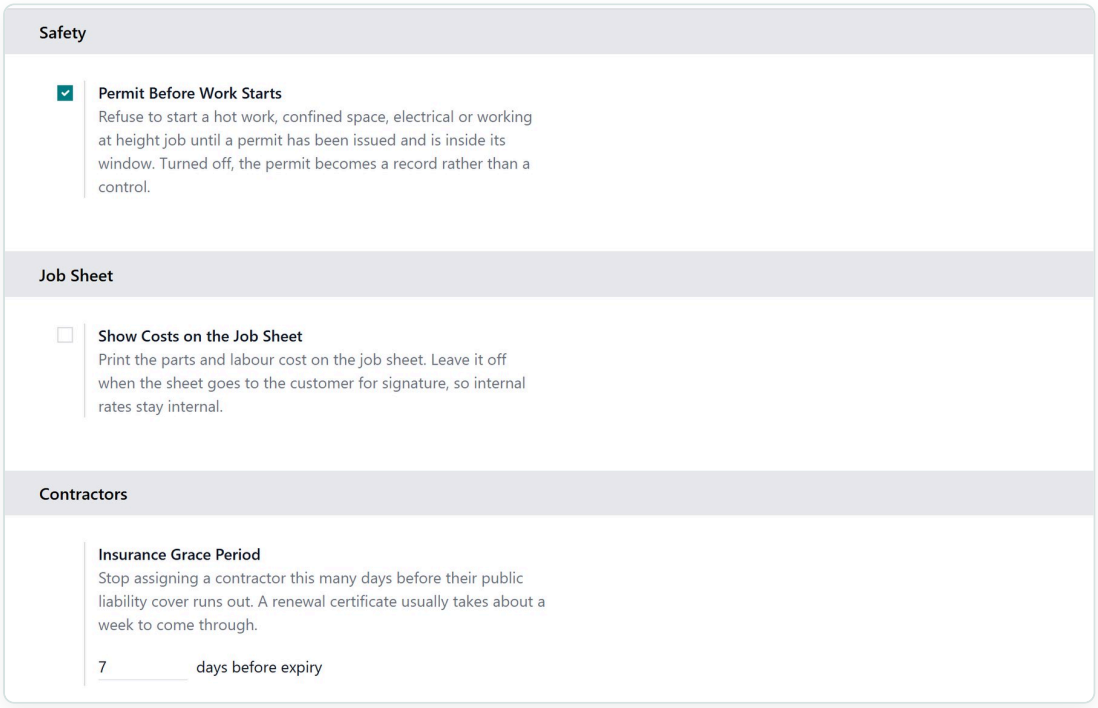


Figure 4. Facility Management settings, first half: safety, the job sheet and contractors.

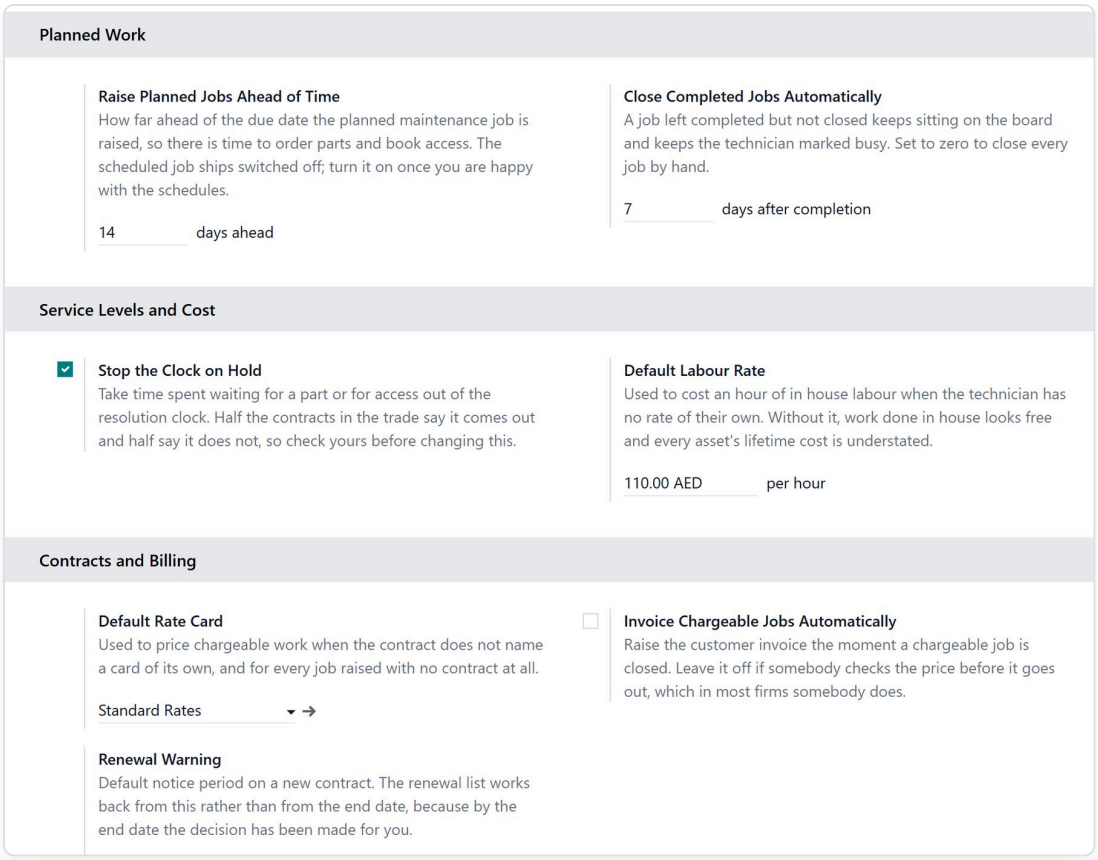


Figure 5. Second half: planned work, service levels and cost, and the Contracts and Billing block that comes with the Enterprise add-on.

Setting	What it does	Our advice
Permit Before Work Starts	Refuses Start Work on hot work, confined space, electrical or height jobs until a permit is issued and inside its window. On for new installs.	Leave it on. Turned off, the permit becomes a record rather than a control.
Show Costs on the Job Sheet	Prints parts and labour cost on the job sheet.	Off when the sheet goes to the customer for signature.
Insurance Grace Period	Stops assigning a contractor this many days before their public liability cover runs out.	7 days. A renewal certificate takes about a week.
Raise Planned Jobs Ahead of Time	How many days before the due date a planned job is raised.	14 days, so parts and access can be booked.
Close Completed Jobs Automatically	Closes jobs left in Completed after this many days. Zero means close every job by hand.	7 days.
Stop the Clock on Hold	Time on hold pushes the resolution due time out.	Check the contract wording. The trade is split on this.
Default Labour Rate	Cost of an in-house hour when the technician has no rate of their own.	Always set it. Without it in-house work looks free.
Default Rate Card ENTERPRISE	Prices chargeable work when the contract names no card, and every job with no contract.	Set it, or chargeable jobs show no price.

Setting	What it does	Our advice
Invoice Chargeable Jobs Automatically ENTERPRISE	Raises the customer invoice the moment a chargeable job is closed.	Off if somebody checks prices before invoices go out.
Renewal Warning ENTERPRISE	Default notice period on a new contract, in days.	90 days for annual contracts.

Also check, in the main Odoo settings, the company name, logo, address and TRN. They print on the job sheet, the permit and the statements.

2. Sites

A site is one estate or campus. It carries the address, the area and the short code that starts every job number raised on it, for example MGE/WO/2026/00097.

1. Go to **Configuration > Sites** and press **New**.
2. Type the **Name** and a short **Code**, three or four capital letters.
3. Fill in **Facility Manager**, **Handover Date** and **Gross Area (m2)**. The area drives cost per square metre on the reports.
4. Set **Owner (Bill To)** to the owner or owners association. ENTERPRISE chargeable work with no contract is billed to this party.
5. Under Contact, pick the address and fill in phone, email and the **Inspecting Authority** (your insurer's engineer surveyor, for example).
6. Press **Save**. The smart buttons at the top now count assets, open jobs, the planned work percentage and contracts.

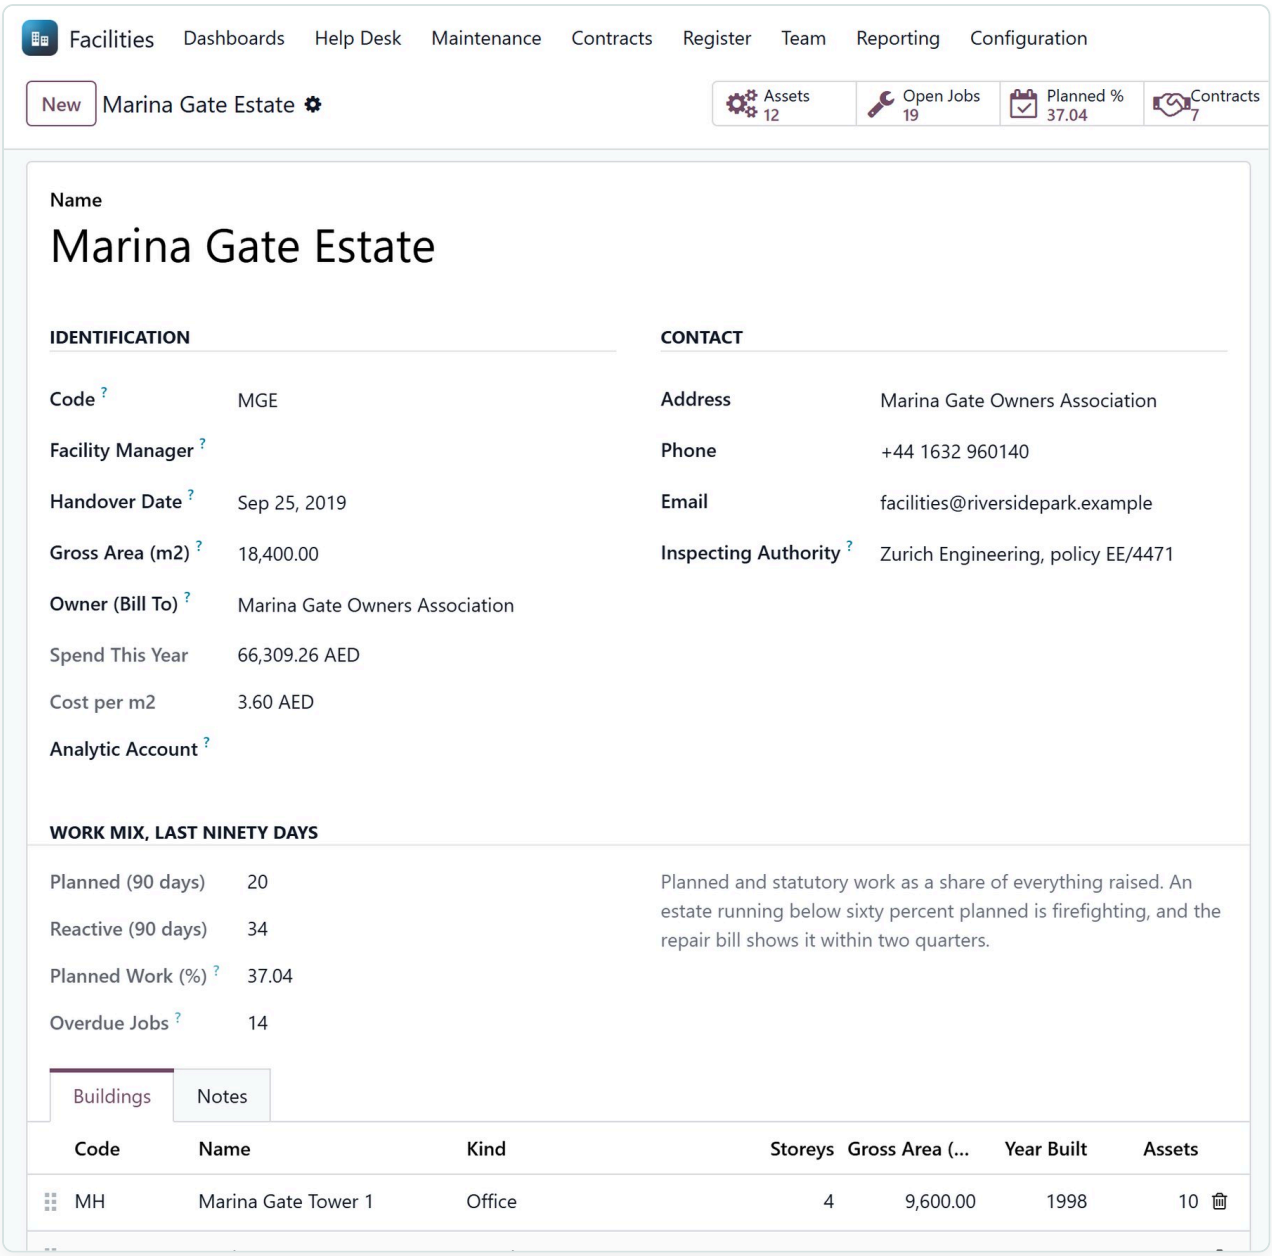


Figure 6. Marina Gate Estate. Work Mix, Last Ninety Days shows planned against reactive work on this site alone.

3. Buildings and floors

1. On the site, open the **Buildings** tab and add a line per block, or go to **Register > Buildings** and press **New**.
2. Fill in **Code**, **Kind** (office, warehouse, plant), **Storeys**, **Gross Area** and **Year Built**.
3. If a building has its own owner, set **Owner (Bill To)** here. It wins over the site owner. ENTERPRISE
4. On the **Floors** tab add each level with its real number. Basements are negative: -1, -2.
5. On the **Access** tab write how an engineer gets in: keys, codes, the security lodge number. This note is posted on every job the moment somebody is assigned.

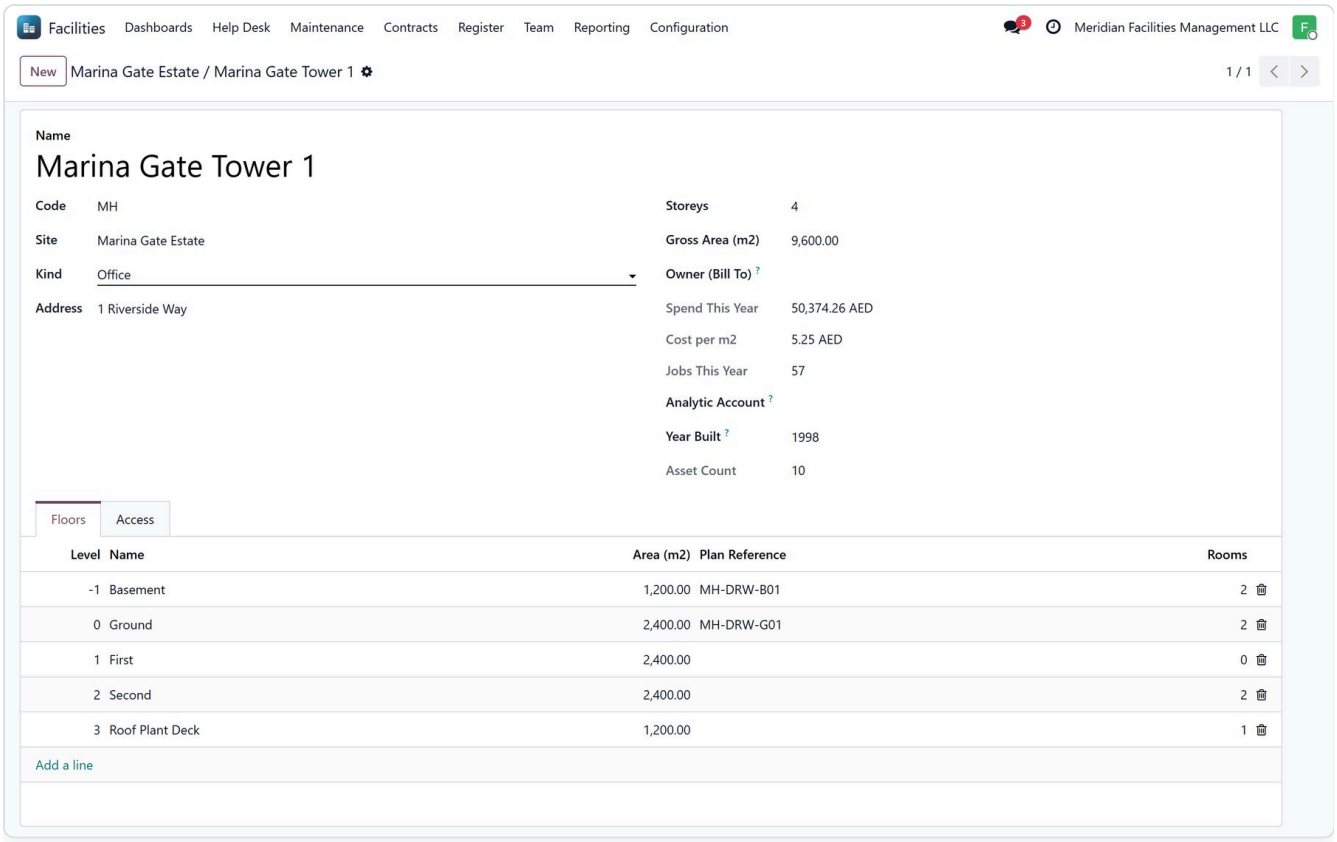


Figure 7. Marina Gate Tower 1 with its floors. Spend This Year and Cost per m2 come from the jobs and need no typing.

4. Rooms and spaces

Add the rooms you will raise jobs against: plant rooms, switch rooms, risers, roof decks, the reception. You do not need every office.

1. Go to **Register > Rooms and Spaces** and press **New**.
2. Fill in **Name**, **Room Number**, **Floor** and **Kind**.
3. For plant and switch rooms tick **Restricted Access** and write the **Access Note**. Jobs in the room then carry a Restricted room banner.
4. If nobody may work in the room without a permit, set **Permit Needed in This Room**, for example Working at Height on a roof deck. Every job in that room then needs that permit before work starts.

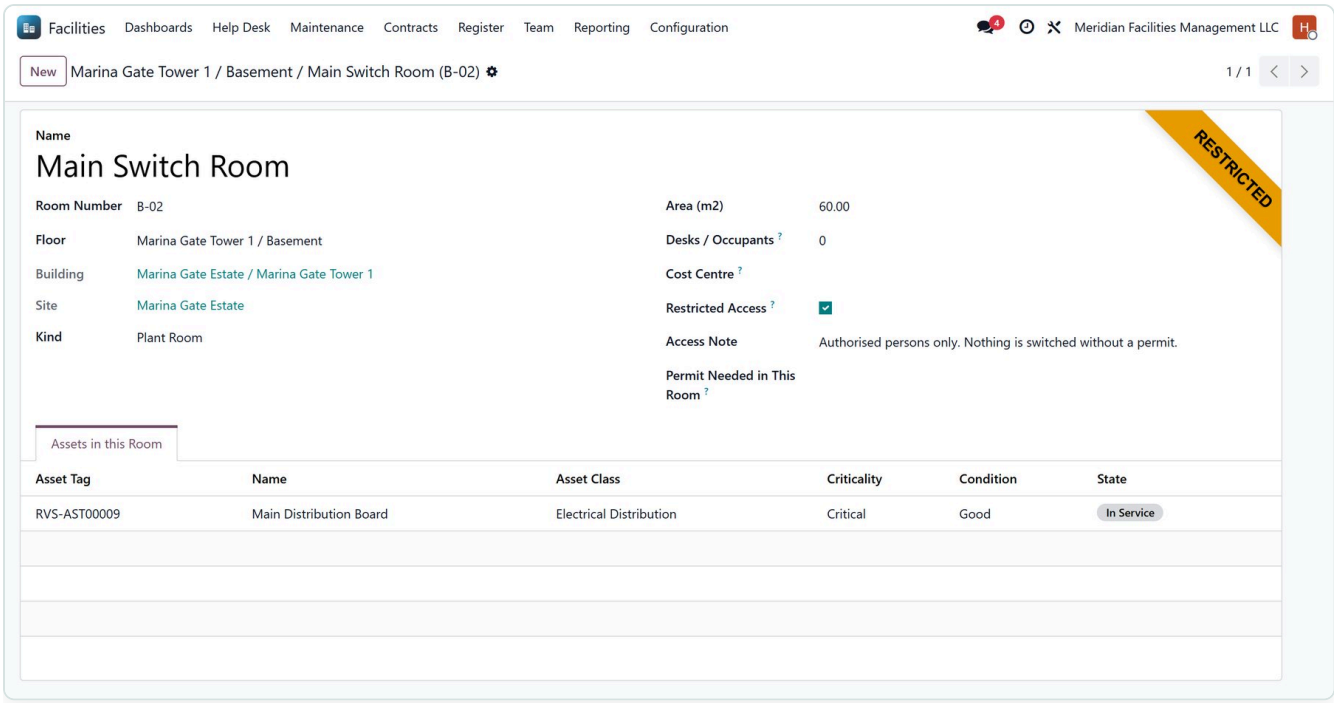


Figure 8. The Main Switch Room in the Tower 1 basement, marked restricted, with the asset that lives in it.

5. Skills

Configuration > Skills lists the trades: Electrical, High Voltage, HVAC and Refrigeration, Fire Systems, Lifts and Hoists and so on. Tick **Requires Certificate** where the trade needs a card, such as refrigerant handling. A technician whose card has run out cannot be assigned work needing that skill.

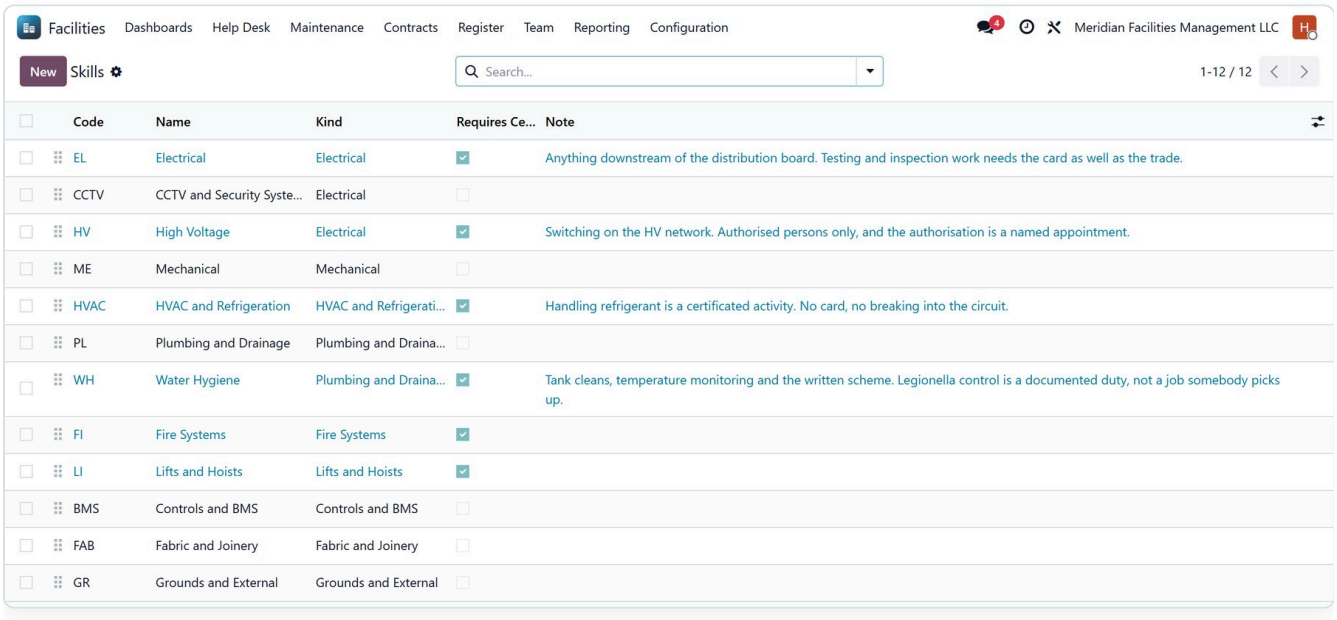


Figure 9. Skills. The note explains to the help desk why a card is needed.

6. Service levels

A service level is the clock you agreed: how fast somebody responds and how fast the fault is fixed. Set one per priority. You can add more specific ones for a single site or a single contractor; the most specific one wins.

1. Go to **Configuration** > **Service Levels** and press **New**.
2. Pick the **Priority**, and a **Site** or **Contractor** only if this level applies to them alone.
3. Set **Response Hours** and **Resolution Hours**.
4. Choose **Cover**: Around the Clock, or Cover Hours Only.
5. For Cover Hours Only, set **Cover Starts** and **Cover Ends**, the **Cover Days** (Every Day, Monday to Friday, Sunday to Thursday, Monday to Saturday or Saturday to Thursday) and the **Time Zone**. Left empty, the company time zone is used.
6. Set **Escalate To**: the person told when a job on this level breaches.

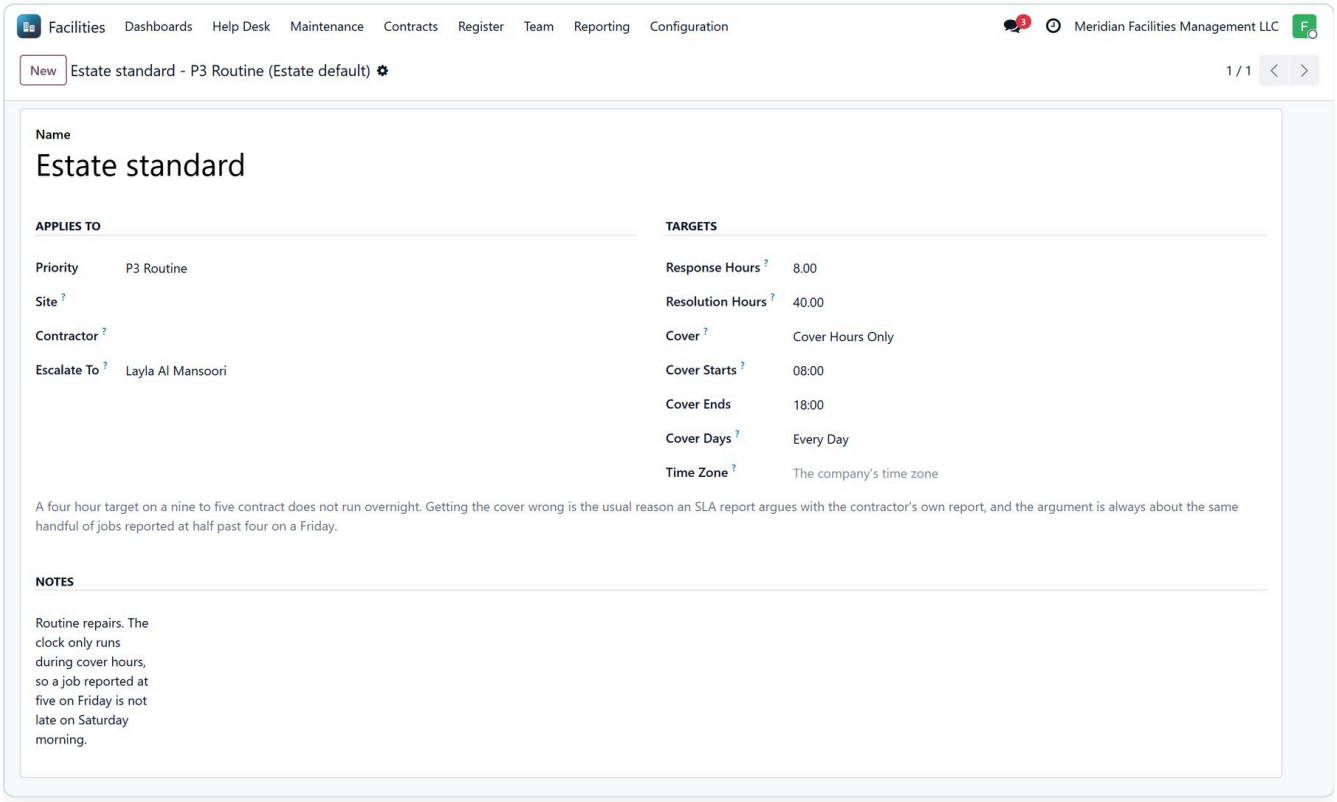


Figure 10. The P3 Routine level at Meridian: 8 hours to respond, 40 to resolve, counted 08:00 to 18:00 only.

> WHY IT MATTERS
>
> A fault reported at 17:30 on a Thursday against a Sunday to Thursday, 8 to 6 contract is not late on Friday morning. Its clock starts again at 08:00 on Sunday. Get the cover right and the SLA report agrees with the customer's own count. Get it wrong and every monthly review becomes an argument about the same handful of jobs.

The system checks the clocks every 15 minutes. When a job passes its response or resolution time, it is flagged, shows an SLA Breached ribbon, and the Escalate To person is told.

7. Asset classes

Give every asset a class first. The class carries the defaults: criticality, expected life, the skills needed, whether there is a meter and whether it is subject to a statutory examination.

1. Go to **Configuration** > **Asset Classes** and press **New**.
2. Fill in **Code**, **Default Criticality**, **Expected Life (years)** and **Skills Needed**.
3. If the plant runs on hours or cycles, tick **Has a Meter**.
4. For lifts, boilers, pressure systems and fire alarms tick **Statutory Inspection**, set the **Inspection Interval (months)** and the **Inspection Authority**, and write what the certificate must show.

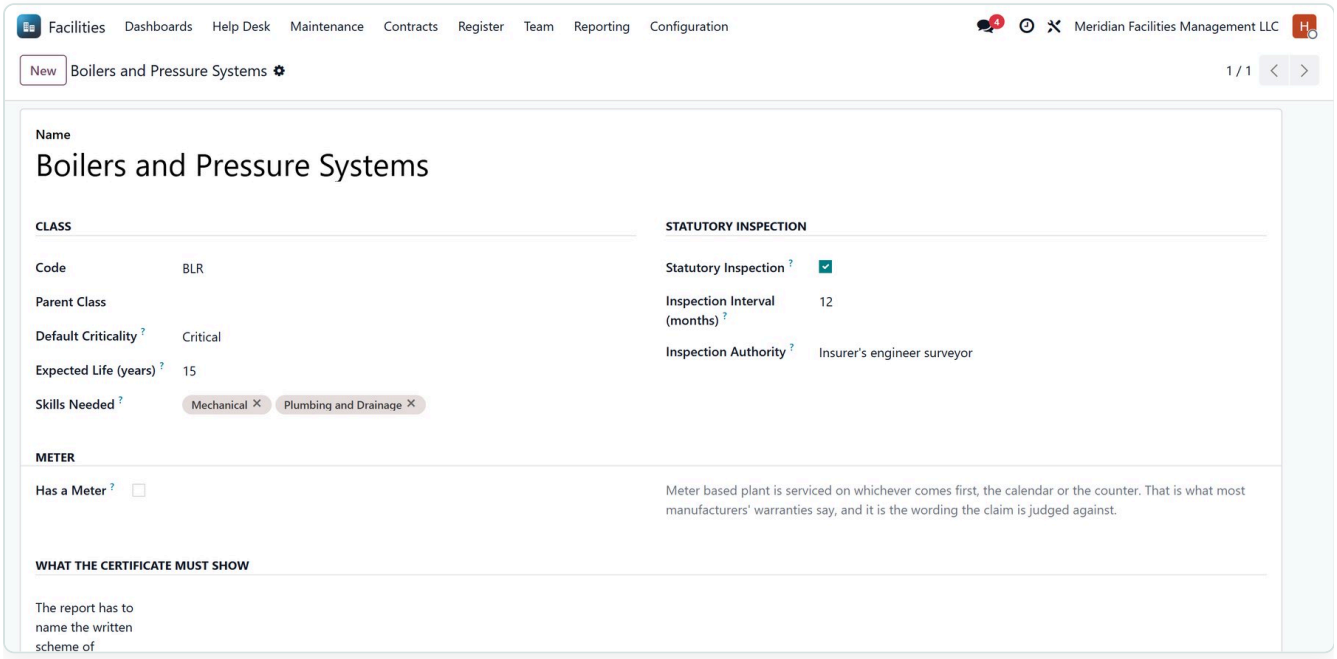


Figure 11. Boilers and Pressure Systems: critical, 15 years, examined every 12 months by the insurer's engineer surveyor.

8. Technicians

1. Go to **Team** > **Technicians** and press **New**.
2. Fill in the name, **Odoo User**, phone, **Based At** and **Shift**.
3. Set the **Hourly Rate**. This is the cost of an hour to you, not the charge to the customer.
4. Add the **Skills**, and the **Card Number** and **Certificate Expiry** if a skill needs a card.

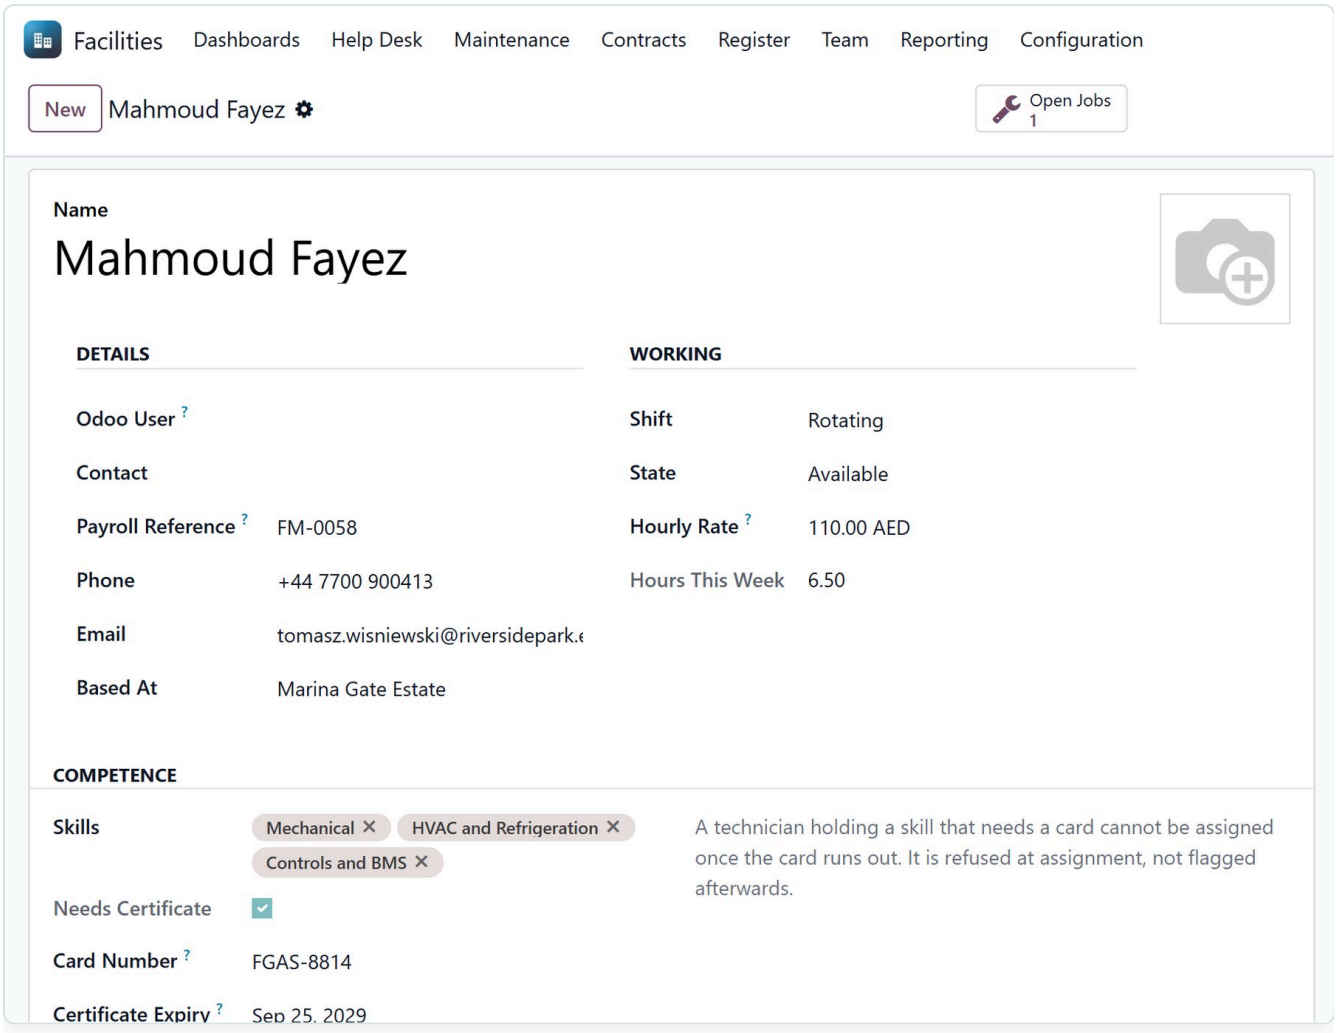


Figure 12. Mahmoud Fayez: mechanical, HVAC and BMS, AED 110 an hour, refrigerant card valid to September 2029.

9. Rate cards ENTERPRISE

A rate card holds what the customer is charged for work outside the contract. It is not what the work costs you; that stays on the technician and the contractor.

1. Go to **Configuration > Rate Cards** and press **New**.
2. Set **Labour, per Hour**, the **Out of Hours Premium** (1.5 means time and a half) and the **Minimum Charge (hours)**.
3. Set **Subcontractor Markup %**. A subcontracted hour is charged at their cost plus this margin, because a lift engineer costs more than your own team.
4. Set **Parts Markup %**, the **Callout Charge** and the **Taxes** (5% VAT in the UAE).

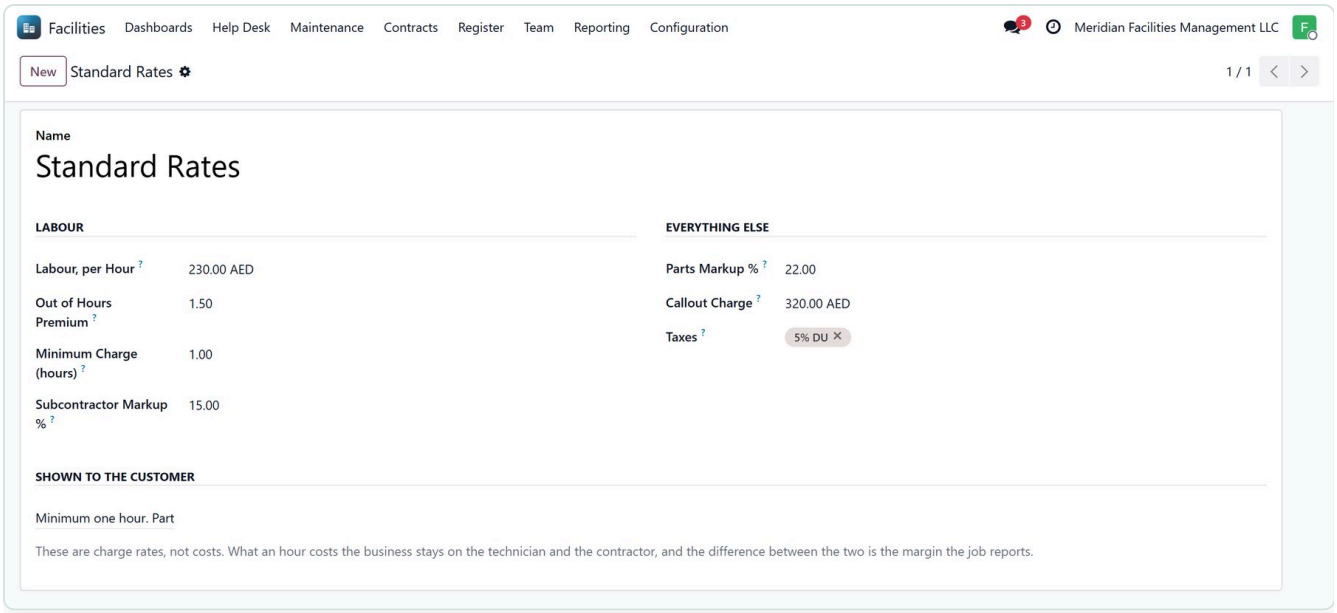


Figure 13. Standard Rates: AED 230 an hour, 1.5 out of hours, 22 percent on parts, AED 320 callout.

Setup checklist

- [ ] Company logo, address and TRN set in the main Odoo settings.
- [ ] Facility settings reviewed, Default Labour Rate set.
- [ ] Sites with code, area and Owner (Bill To).
- [ ] Buildings with floors and an access note.
- [ ] Plant rooms, switch rooms and roofs added, restricted where needed.
- [ ] Skills reviewed. Service levels for P1 to P4 with cover and escalation.
- [ ] Asset classes with skills, meters and statutory intervals.
- [ ] Technicians with rates, skills, cards and their Odoo login.
- [ ] Contractors approved with insurance dates (chapter 8).
- [ ] Rate cards and the default rate card. **ENTERPRISE**
- [ ] Users given their roles.

CHAPTER 4


The asset register

The most useful half day you will spend. A good register is what turns "the chiller is broken again" into "Chiller 1 has cost AED 3,347 this year on a AED 142,000 replacement value".

In this chapter

- The asset list
- Adding an asset
- Criticality and condition
- Warranty and dates
- Sub-assets
- Meters and readings
- Lifetime cost
- Work history and the printout
- Commissioning and decommissioning
- Reporting a fault from the asset

An asset is anything you would repair rather than replace on the spot: a chiller, a lift, a fire panel, a pump set, a distribution board. Open **Register > Assets**.

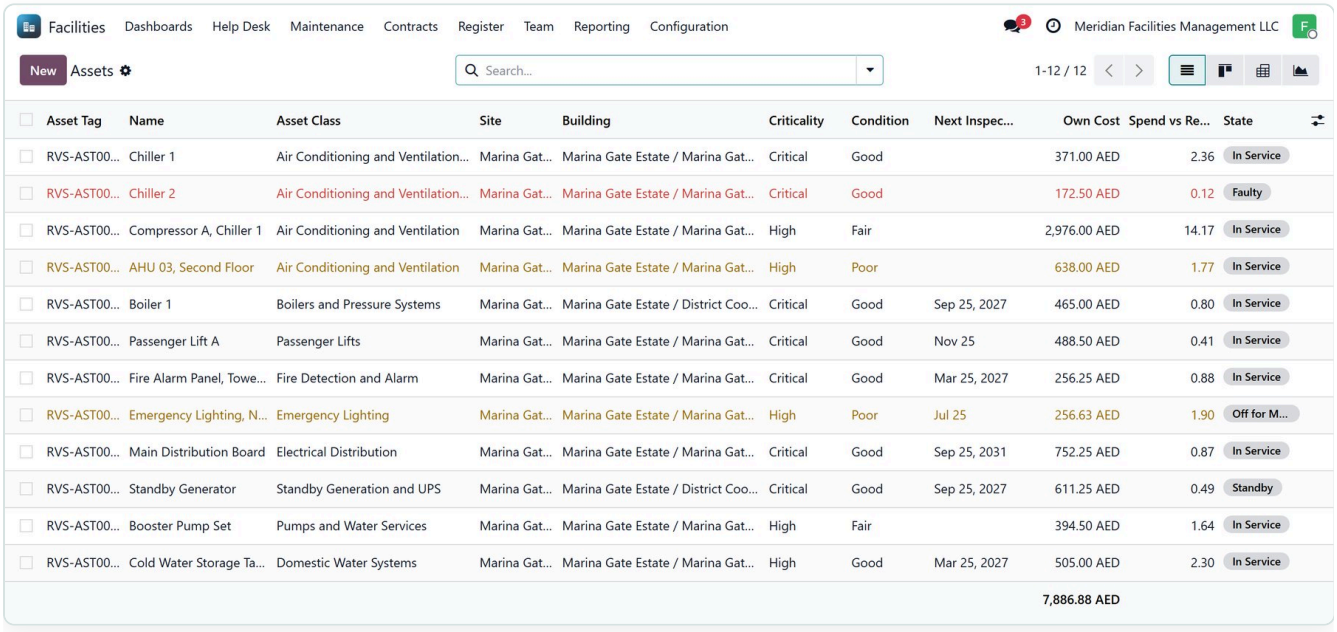

Asset Tag	Name	Asset Class	Site	Building	Criticality	Condition	Next Inspec...	Own Cost	Spend vs Re...	State
RVS-AST00...	Chiller 1	Air Conditioning and Ventilation...	Marina Gat...	Marina Gate Estate / Marina Gat...	Critical	Good		371.00 AED	2.36	In Service
RVS-AST00...	Chiller 2	Air Conditioning and Ventilation...	Marina Gat...	Marina Gate Estate / Marina Gat...	Critical	Good		172.50 AED	0.12	Faulty
RVS-AST00...	Compressor A, Chiller 1	Air Conditioning and Ventilation	Marina Gat...	Marina Gate Estate / Marina Gat...	High	Fair		2,976.00 AED	14.17	In Service
RVS-AST00...	AHU 03, Second Floor	Air Conditioning and Ventilation	Marina Gat...	Marina Gate Estate / Marina Gat...	High	Poor		638.00 AED	1.77	In Service
RVS-AST00...	Boiler 1	Boilers and Pressure Systems	Marina Gat...	Marina Gate Estate / District Coo...	Critical	Good	Sep 25, 2027	465.00 AED	0.80	In Service
RVS-AST00...	Passenger Lift A	Passenger Lifts	Marina Gat...	Marina Gate Estate / Marina Gat...	Critical	Good	Nov 25	488.50 AED	0.41	In Service
RVS-AST00...	Fire Alarm Panel, Towe...	Fire Detection and Alarm	Marina Gat...	Marina Gate Estate / Marina Gat...	Critical	Good	Mar 25, 2027	256.25 AED	0.88	In Service
RVS-AST00...	Emergency Lighting, N...	Emergency Lighting	Marina Gat...	Marina Gate Estate / Marina Gat...	High	Poor	Jul 25	256.63 AED	1.90	Off for M...
RVS-AST00...	Main Distribution Board	Electrical Distribution	Marina Gat...	Marina Gate Estate / Marina Gat...	Critical	Good	Sep 25, 2031	752.25 AED	0.87	In Service
RVS-AST00...	Standby Generator	Standby Generation and UPS	Marina Gat...	Marina Gate Estate / District Coo...	Critical	Good	Sep 25, 2027	611.25 AED	0.49	Standby
RVS-AST00...	Booster Pump Set	Pumps and Water Services	Marina Gat...	Marina Gate Estate / Marina Gat...	High	Fair		394.50 AED	1.64	In Service
RVS-AST00...	Cold Water Storage Ta...	Domestic Water Systems	Marina Gat...	Marina Gate Estate / Marina Gat...	High	Good	Mar 25, 2027	505.00 AED	2.30	In Service
								7,886.88 AED		

Figure 14. The register at Marina Gate. Red rows are faulty, amber rows are in poor condition. Own Cost adds up correctly because a sub-asset's spend is counted once.

Add an asset

1. In **Register > Assets** press **New**.
2. Type the **Name** people use on site, for example Chiller 1. The asset tag is given automatically when you save.

3. Under Where It Is, pick the **Site**, **Building**, **Floor** and **Room**, and add **Where Exactly** if the room is big: "North end of the deck, first unit past the mansafe line".
4. Under What It Is, pick the **Asset Class**. Criticality, expected life and skills come across from the class; change them if this unit is different.
5. Fill in **Manufacturer**, **Model** and **Serial Number**.
6. Under Dates and Warranty, fill in **Install Date**, **Commission Date** and **Warranty Expiry**. **Under Warranty** and **Age (years)** work themselves out.
7. Under Who Looks After It, set **Supplied By** and **Maintained By**. When a fault is reported, the firm that maintains the asset is offered as the contractor.
8. On the **Cost** tab, enter **Purchase Value** and **Replacement Value**.
9. Press **Save**.

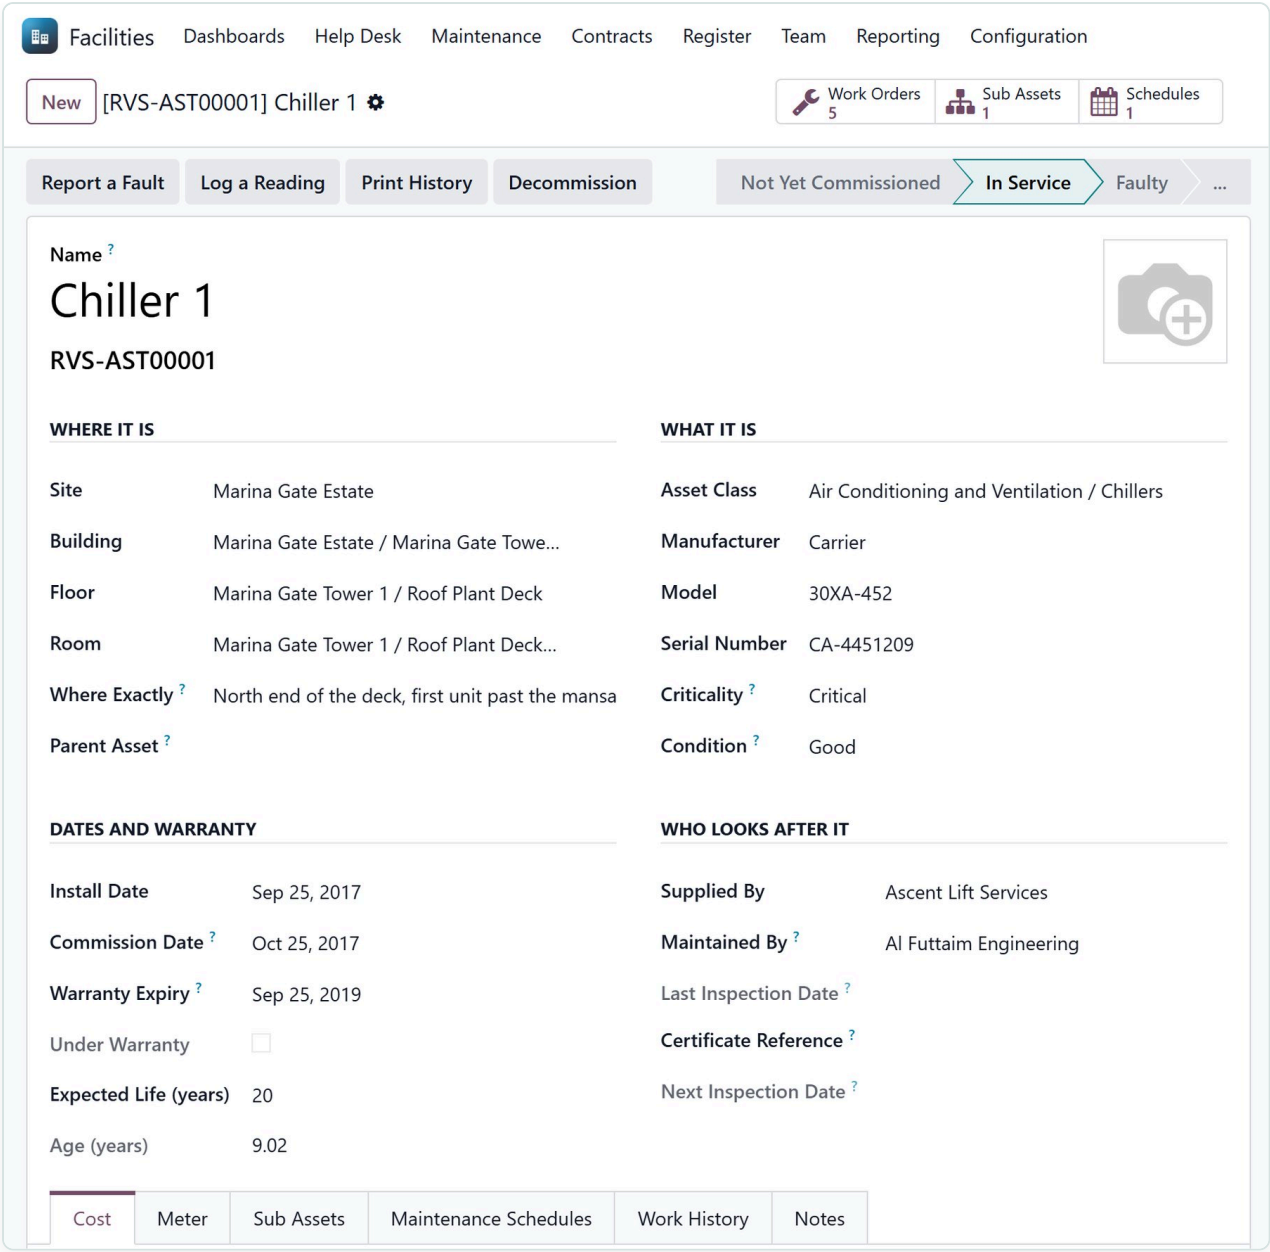


Figure 15. Chiller 1 on the Tower 1 roof. The buttons along the top run the asset's life; the smart buttons count its jobs, sub-assets and schedules.

> **TIP**
>
> Do not leave Warranty Expiry empty. A surprising amount of money is spent repairing plant that the installer is still liable for. With the date filled in, Under Warranty is ticked on the asset until it runs out, so the help desk can check before anybody orders a part. Completing a job on a faulty asset puts it back In Service and writes the engineer's Condition Now onto it.

Criticality and condition

Criticality (Critical, High, Medium, Low) says what a failure does to the building. It sets the default priority of a fault and decides which assets show on the Critical assets card. **Condition** (New, Good, Fair, Poor, and so on) is what the engineer saw last; it is updated from the job every time one is completed.

Sub-assets

Assets sit under one another. A compressor sits under its chiller, a chiller under the plant package. Set **Parent Asset** on the child. The parent's **Sub Assets** tab then lists it, and money spent on the child rolls up into the parent's lifetime cost.

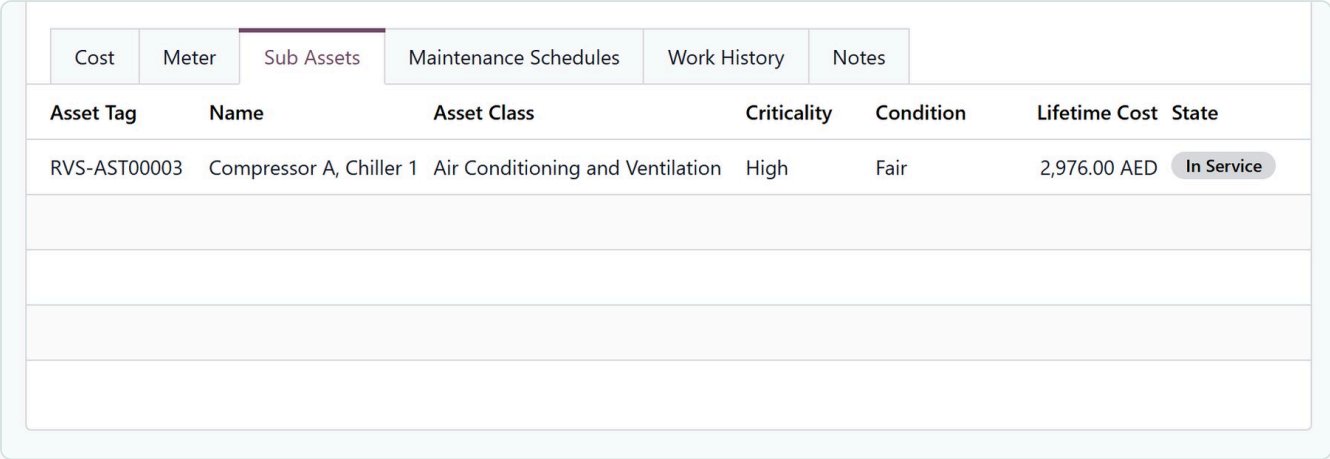


Figure 16. Chiller 1 has one sub-asset, Compressor A, which has cost AED 2,976 on its own.

Meters and readings

Plant that runs on hours or cycles is serviced on the meter as well as the calendar. With **Has a Meter** ticked, the **Meter** tab shows the latest reading, when it was read and the **Use per Day** over the last 90 days.

1. Open the asset and press **Log a Reading**.
2. Check the **Date**, type the **Reading** and set the **Source** (read by hand, building management system, logged on a job).
3. If the meter itself was changed, tick **Meter Was Replaced**. The new lower reading is then accepted and use per day starts again.
4. Press **Save**.

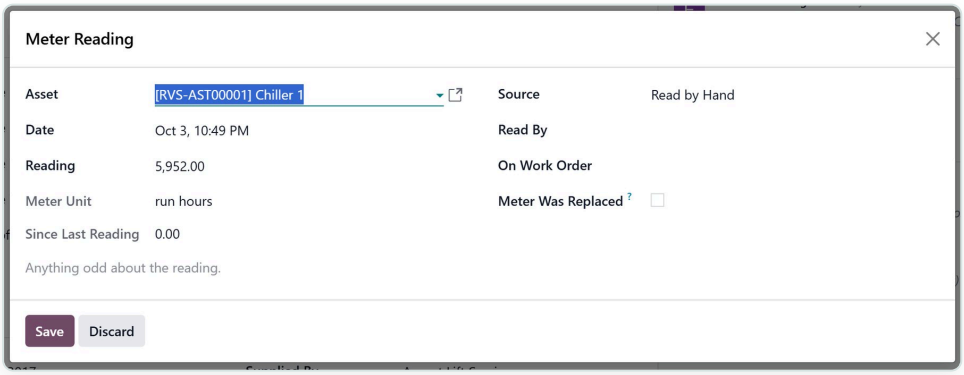


Figure 17. Logging a run-hours reading on Chiller 1.

A reading lower than the last one is refused with the date and figure it clashes with, unless the meter was replaced. Engineers also record a reading on the Completion tab of a job, which lands here with Source "Logged on a job". All readings are listed under **Maintenance > Meter Readings**.

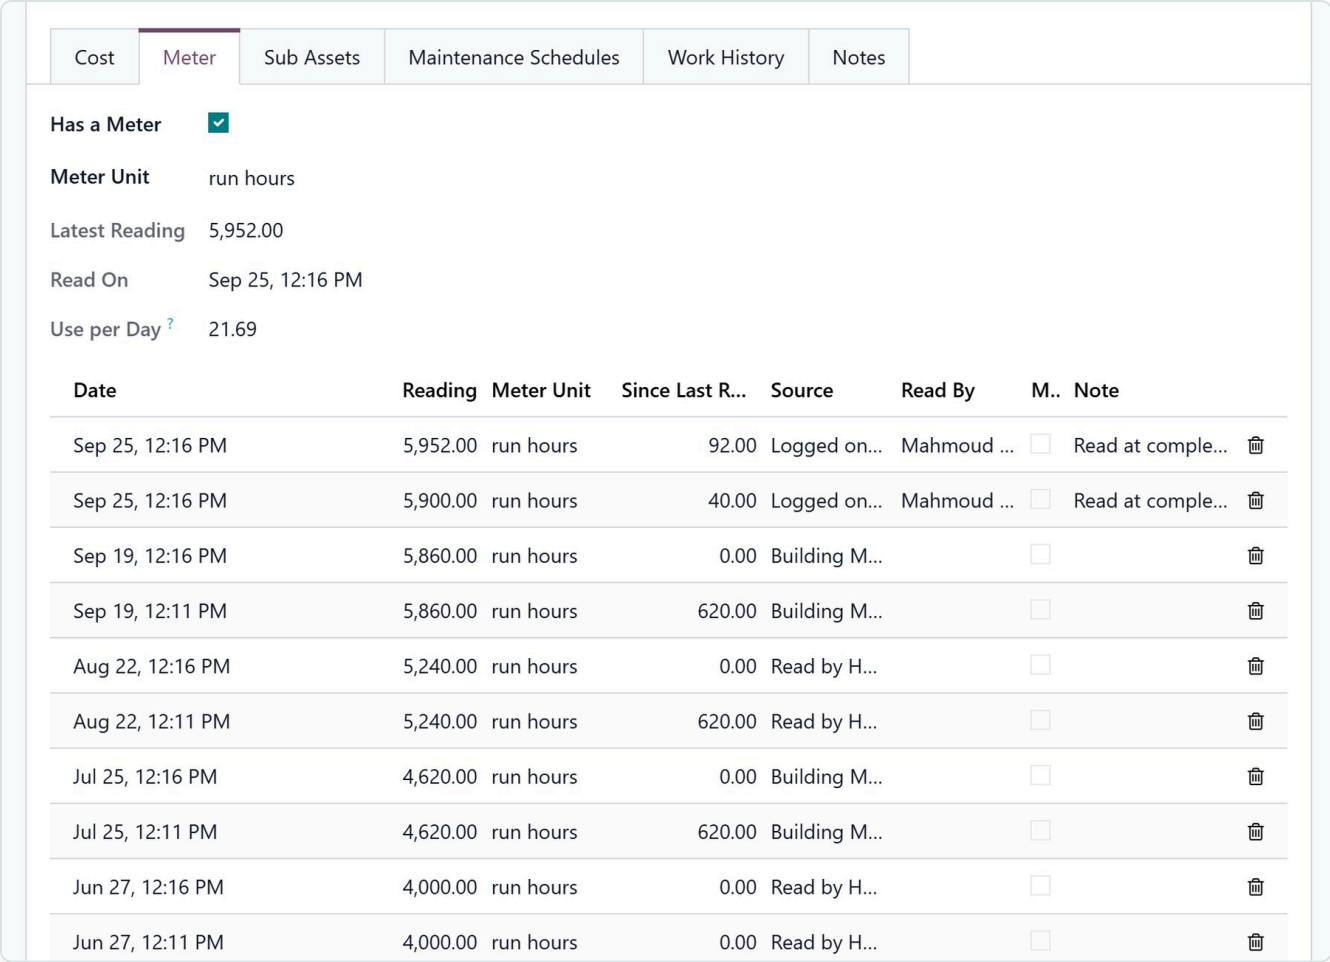


Figure 18. The Meter tab with the reading history: 5,952 run hours, about 22 a day.

Lifetime cost

The **Cost** tab adds up what the asset has cost since it was installed: parts, labour and callouts, including everything spent on its sub-assets. **Spend vs Replacement (%)** compares that with the replacement value. **Own Cost** is the asset's spend without its children; lists and reports add up Own Cost so nothing is counted twice.


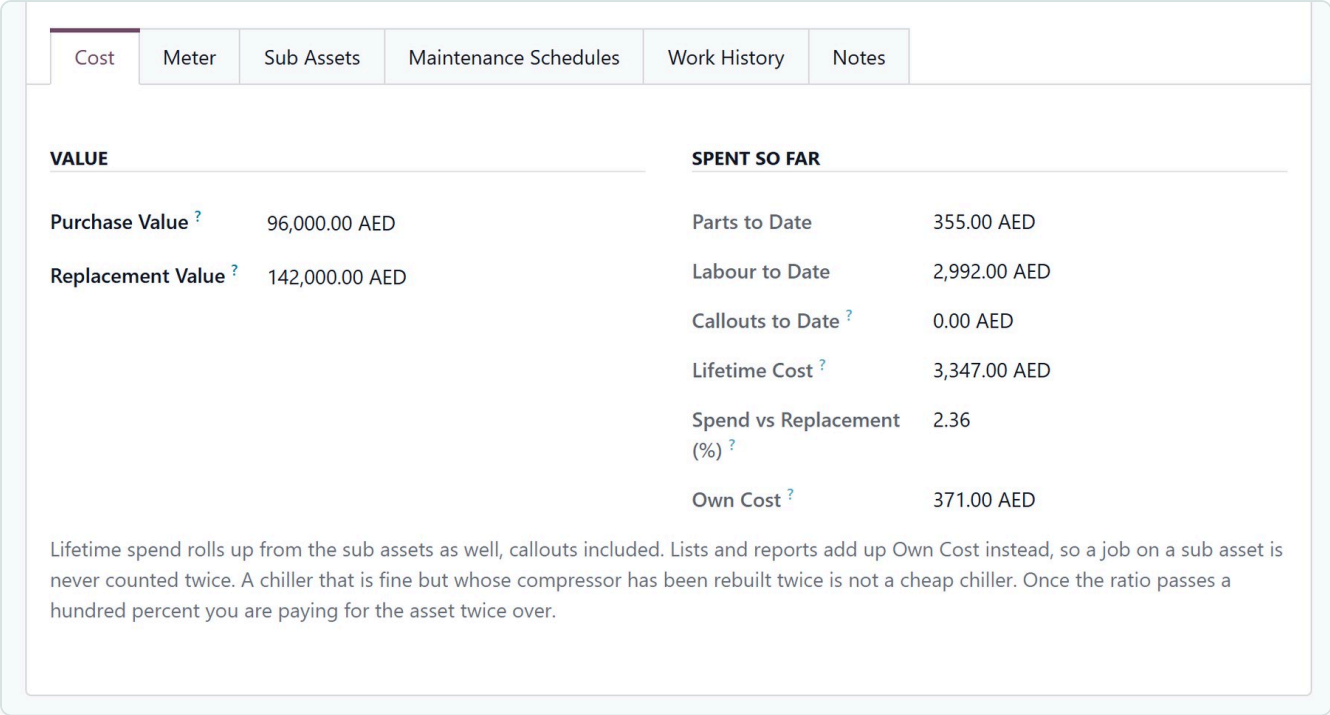


Figure 19. Chiller 1: AED 3,347 lifetime cost, 2.36 percent of its replacement value.

> WHY IT MATTERS
>
> Lifetime cost is the evidence behind a replacement bid. "It keeps breaking" does not get capital approved. "This chiller has cost 60 percent of a new one in three years" usually does.

Work history and the printout

The **Work History** tab lists every job on the asset. Press **Print History** for a PDF of finished jobs on the asset and its sub-assets, with a total that matches the lifetime spend. Handy for a warranty claim, an insurer or a handover pack.

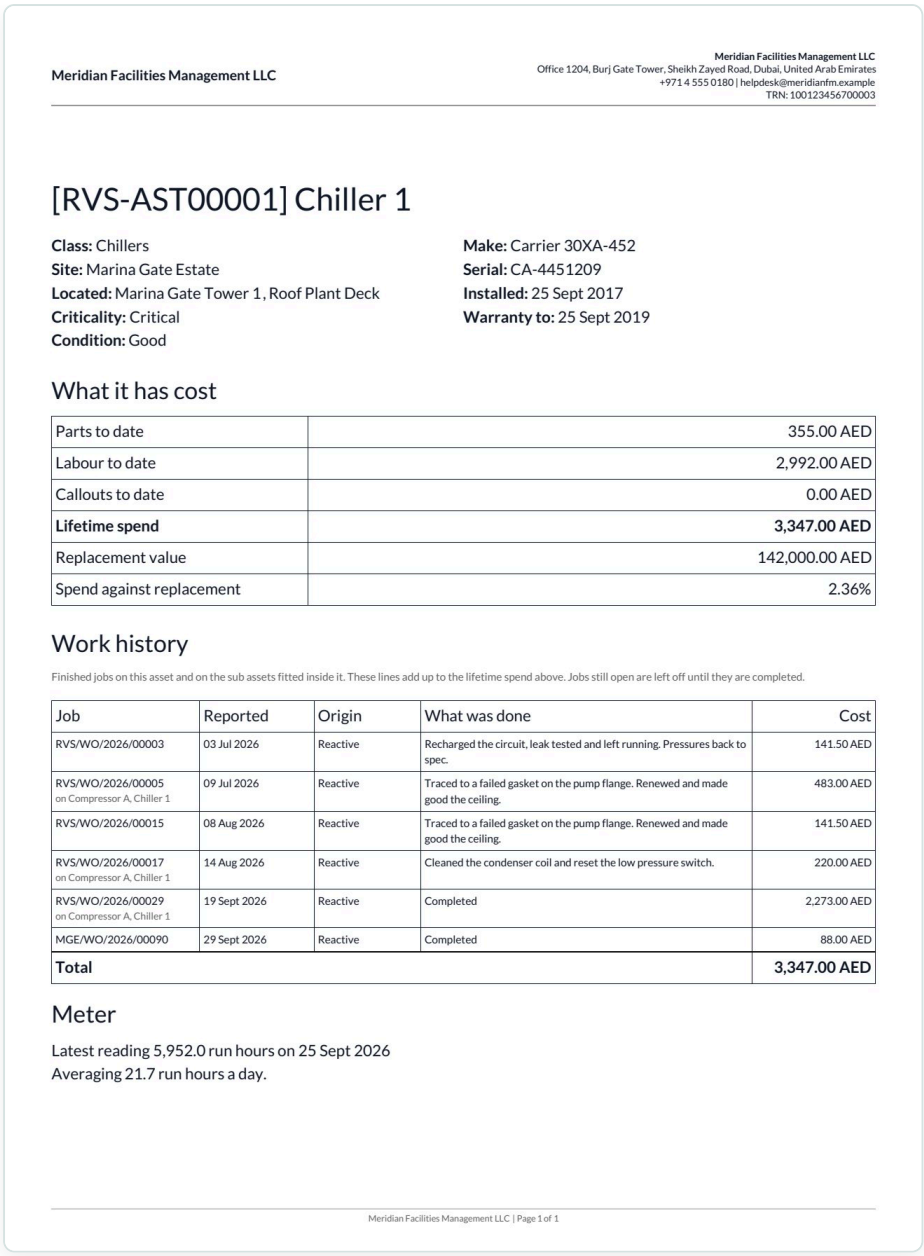

Meridian Facilities Management LLC

Meridian Facilities Management LLC
Office 1204, Burj Gate Tower, Sheikh Zayed Road, Dubai, United Arab Emirates
+971 4 555 0180 | helpdesk@meridianfm.example
TRN: 100123456700003

[RVS-AST00001] Chiller 1

Class: Chillers
Site: Marina Gate Estate
Located: Marina Gate Tower 1, Roof Plant Deck
Criticality: Critical
Condition: Good

Make: Carrier 30XA-452
Serial: CA-4451209
Installed: 25 Sept 2017
Warranty to: 25 Sept 2019

What it has cost

Parts to date	355.00 AED
Labour to date	2,992.00 AED
Callouts to date	0.00 AED
Lifetime spend	**3,347.00 AED**
Replacement value	142,000.00 AED
Spend against replacement	2.36%

Work history

Finished jobs on this asset and on the sub assets fitted inside it. These lines add up to the lifetime spend above. Jobs still open are left off until they are completed.

Job	Reported	Origin	What was done	Cost
RVS/WO/2026/00003	03 Jul 2026	Reactive	Recharged the circuit, leak tested and left running. Pressures back to spec.	141.50 AED
RVS/WO/2026/00005 on Compressor A, Chiller 1	09 Jul 2026	Reactive	Traced to a failed gasket on the pump flange. Renewed and made good the ceiling.	483.00 AED
RVS/WO/2026/00015	08 Aug 2026	Reactive	Traced to a failed gasket on the pump flange. Renewed and made good the ceiling.	141.50 AED
RVS/WO/2026/00017 on Compressor A, Chiller 1	14 Aug 2026	Reactive	Cleaned the condenser coil and reset the low pressure switch.	220.00 AED
RVS/WO/2026/00029 on Compressor A, Chiller 1	19 Sept 2026	Reactive	Completed	2,273.00 AED
MGE/WO/2026/00090	29 Sept 2026	Reactive	Completed	88.00 AED
Total				**3,347.00 AED**

Meter

Latest reading 5,952.0 run hours on 25 Sept 2026
Averaging 21.7 run hours a day.

Meridian Facilities Management LLC | Page 1 of 1

Figure 20. The asset history printout.

Commissioning and decommissioning

Button	When it shows	What it does
Commission	Not Yet Commissioned or Decommissioned. Supervisors and up.	Puts the asset In Service. Schedules paused by a decommission come back on; schedules you paused by hand stay paused.
Report a Fault	Any live state. Anybody, including technicians.	Marks the asset Faulty and opens a reactive job with the location filled in.
Back in Service	Faulty, Off for Maintenance or Standby. Supervisors and up.	Puts it back In Service.
Decommission	Any state but Decommissioned. Facility Manager only.	Asks you to confirm, refuses while the asset has open jobs, pauses its schedules and archives it.

The state also moves on its own: a planned job started on an asset in service sets it to Off for Maintenance, and completing the job brings it back.

CHAPTER 5

Planned maintenance and statutory inspections

Set the schedule once and the jobs raise themselves, ahead of time, with the task list on them.

In this chapter

- Schedules on a date, a meter, or both
- Creating a schedule
- How jobs are raised
- Raise now, pause, put back on
- Statutory inspections
- Certificates and next inspection date

Planned work as a share of all work is the headline measure of whether an estate is under control. Below about 60 percent a team is firefighting, and the repair bill shows it within two quarters. Every schedule you set up here moves that number in the right direction.

Three kinds of trigger

Trigger	Use it for
On a Calendar Interval	Every so many days, weeks, months or years. Filter changes, fire alarm tests, tank cleans.
On the Meter	Every so many run hours or cycles. Generators, compressors, lifts.
Whichever Comes First	Both run, and the job is raised as soon as either is reached. This is the wording most manufacturers' warranties use.

Create a schedule

1. Go to **Maintenance** > **Schedules** and press **New**.
2. Type a **Name** people will recognise on a job list: "Chiller 1 quarterly service".
3. Pick the **Asset**. Site and class fill in from it. Set the **Permit Type** if the visit needs one, and the **Priority** (P4 Scheduled for most planned work).
4. Under When It Falls Due, pick the **Trigger**, then **Every** with its unit, and for meters the **Every (meter units)** figure.
5. Set **Last Done Date** (and **Last Done Meter**) from the last service sticker. Next due counts from there. Left empty, a new schedule counts from the later of the commission date and today, so it never falls due years in the past.
6. Under Who Does It, choose In House or Contractor, the usual technician or contractor, the **Skills Needed** and the **Planned Hours**.

7. On the **What the Visit Covers** tab, write the task list. It prints on the job sheet the engineer takes.
8. Press **Save**. The schedule is **Live**.

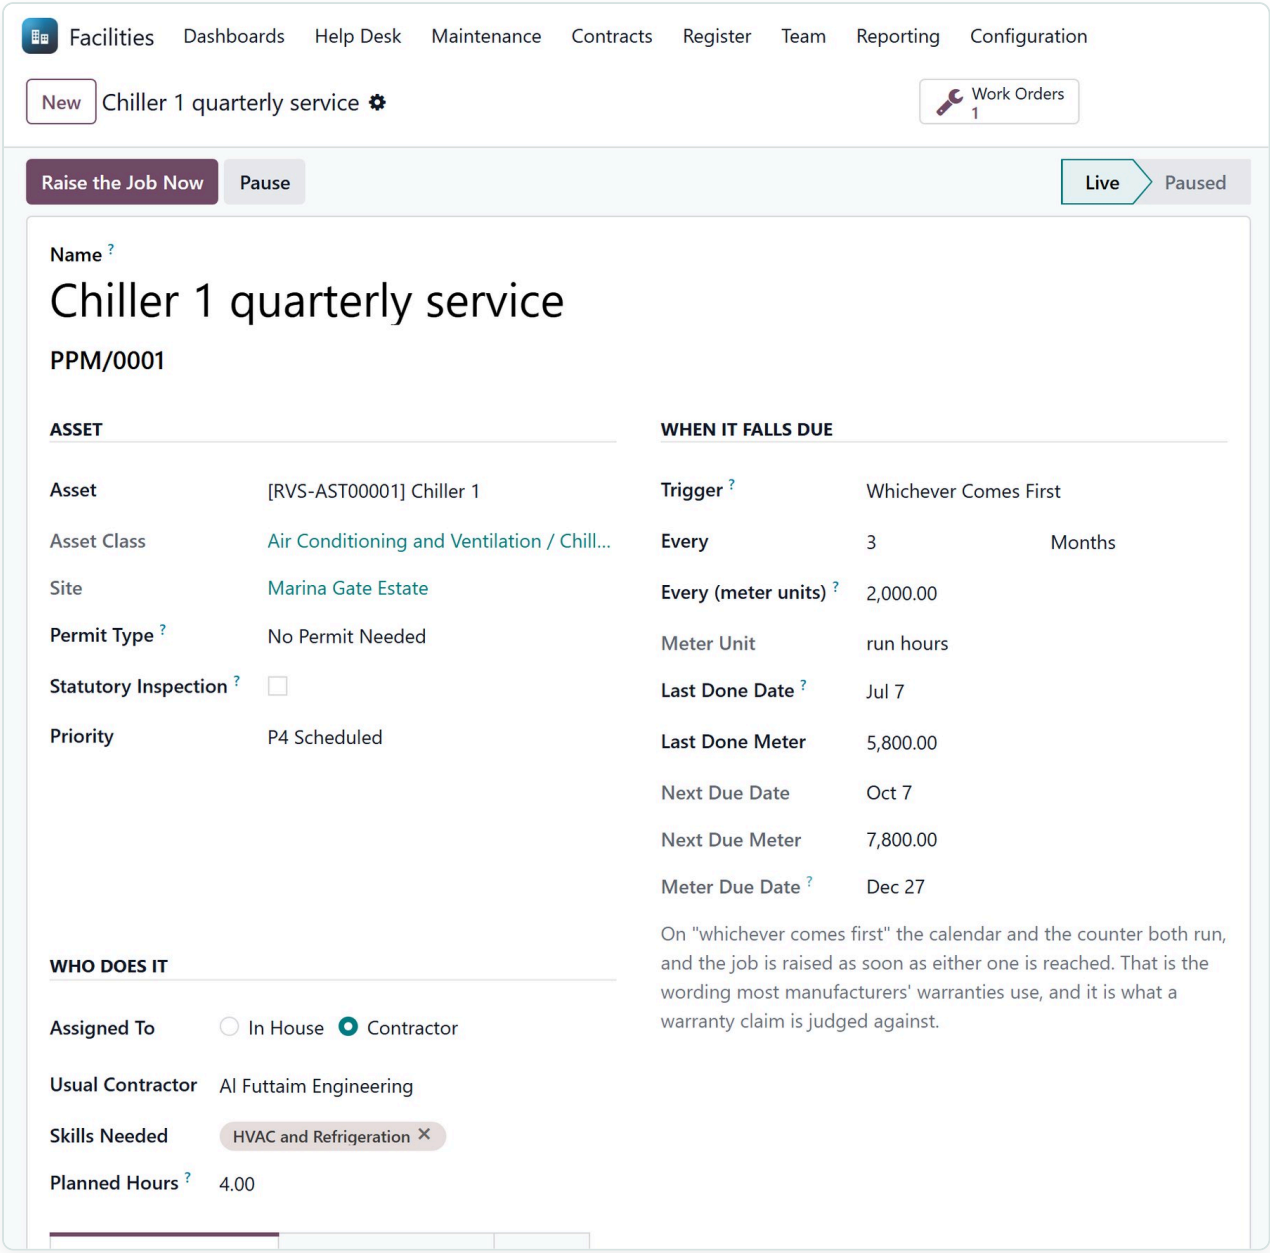


Figure 21. Chiller 1 quarterly service: every 3 months or 2,000 run hours, whichever comes first, done by Al Futtaim Engineering.

How the jobs are raised

Every night the system raises a job for each live schedule that falls due within the lead time in Settings (14 days by default). The job is a Planned job, with the task list under What the Visit Covers, the schedule's due date in **Due on the Schedule**, and the resolution clock set to the end of that day. A schedule only ever has one open job at a time.

> **BEFORE YOU GO LIVE**
>
> The nightly run, called "Facility: raise planned maintenance", ships switched off so you can check your schedules first. When the list looks right, ask your administrator to switch it on under Settings, Technical, Scheduled Actions.

Button	What it does
Raise the Job Now	Raises the next job straight away, without waiting for the nightly run.
Pause	Stops raising jobs, for example while a plant room is being refurbished.
Put Back On	Makes a paused schedule live again.

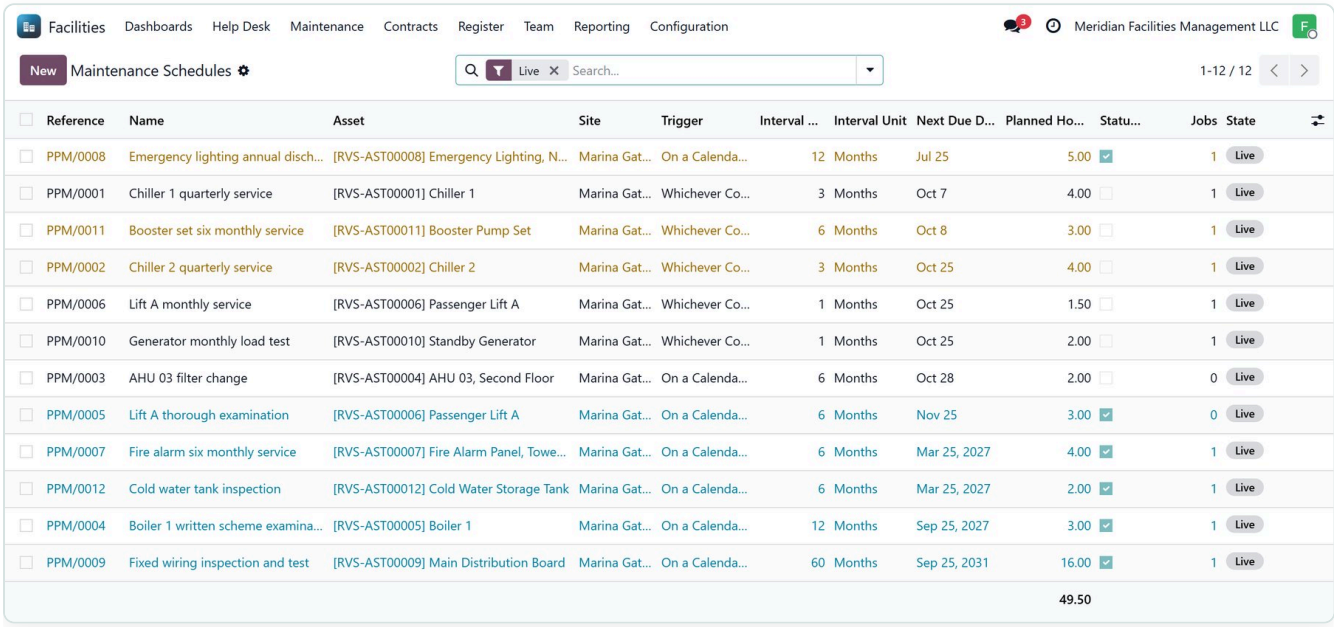


Figure 22. The live schedules at Marina Gate, with the next due date and the jobs each one has raised. Ticked rows are statutory.

When a planned job is completed, the schedule's Last Done Date and Last Done Meter move on and the next due date is worked out again.

Statutory inspections

Some work has to be proved, not just done: lift thorough examinations, boiler and pressure system examinations, fire alarm and emergency lighting tests, water hygiene. Mark the asset class as statutory (chapter 3), then give each asset a schedule with **Statutory Inspection** ticked.

1. Open **Maintenance > Statutory Inspections**. It lists every statutory asset by class with its **Next Inspection** date. Group by Next Inspection to see what falls due this month.
2. Open the inspection job when it is raised, assign it and do the work as normal (chapter 6).
3. On the **Completion** tab, type the examiner's **Certificate Reference** and set **Condition Now**.
4. Press **Complete**. The asset's Last Inspection Date and Certificate Reference are stamped and its Next Inspection Date moves on by the interval.

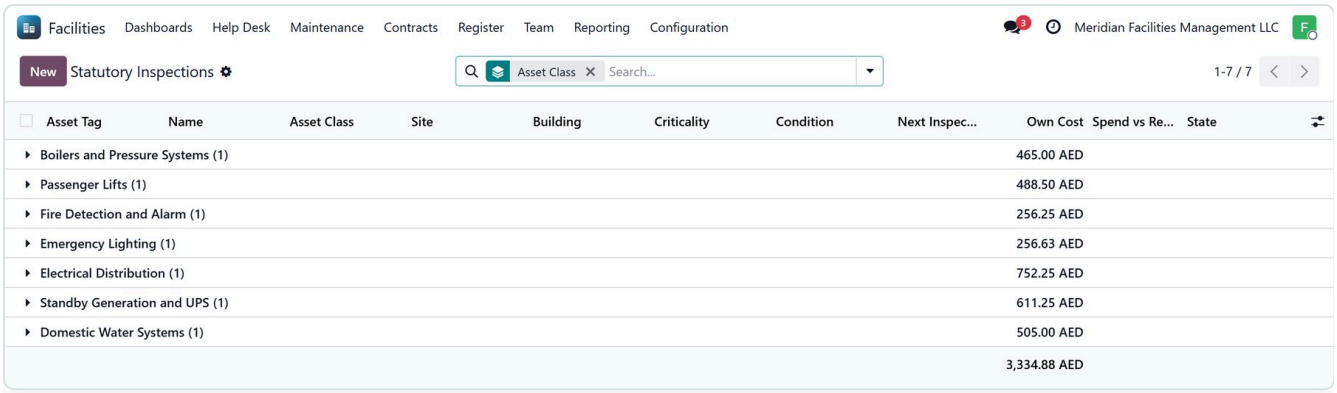


Figure 23. Statutory Inspections, grouped by asset class. Open a group to see the assets and their next inspection dates.

> **WHY IT MATTERS**
>
> An inspection job will not complete without the certificate reference and the condition, and the message names exactly what is missing. That is deliberate. When the civil defence inspector or the insurer asks for proof, the certificate number is on the asset, on the job and on the asset history printout.

CHAPTER 6

Help desk and work orders

One fault, followed from the phone call to the signed job sheet. This is where the help desk and the engineers spend most of their day.

In this chapter

- The help desk board
- Report a fault
- Assign: in house or contractor
- Log response and start
- Hold and resume
- Parts and labour
- Complete and close off
- The job sheet
- SLA clocks and breaches
- Hand back, cancel, reset
- The banners on a job

The example in this chapter is a real call at Marina Gate. At 22:32 reception rings: the second floor open plan in Tower 1 is warm and AHU 03 on the roof is squealing. We follow job MGE/WO/2026/00097 from that call to the close.

The help desk board

Open **Help Desk > Work Orders**. It opens on the open jobs. Switch to the card view with the button at the top right to see them as columns by status.

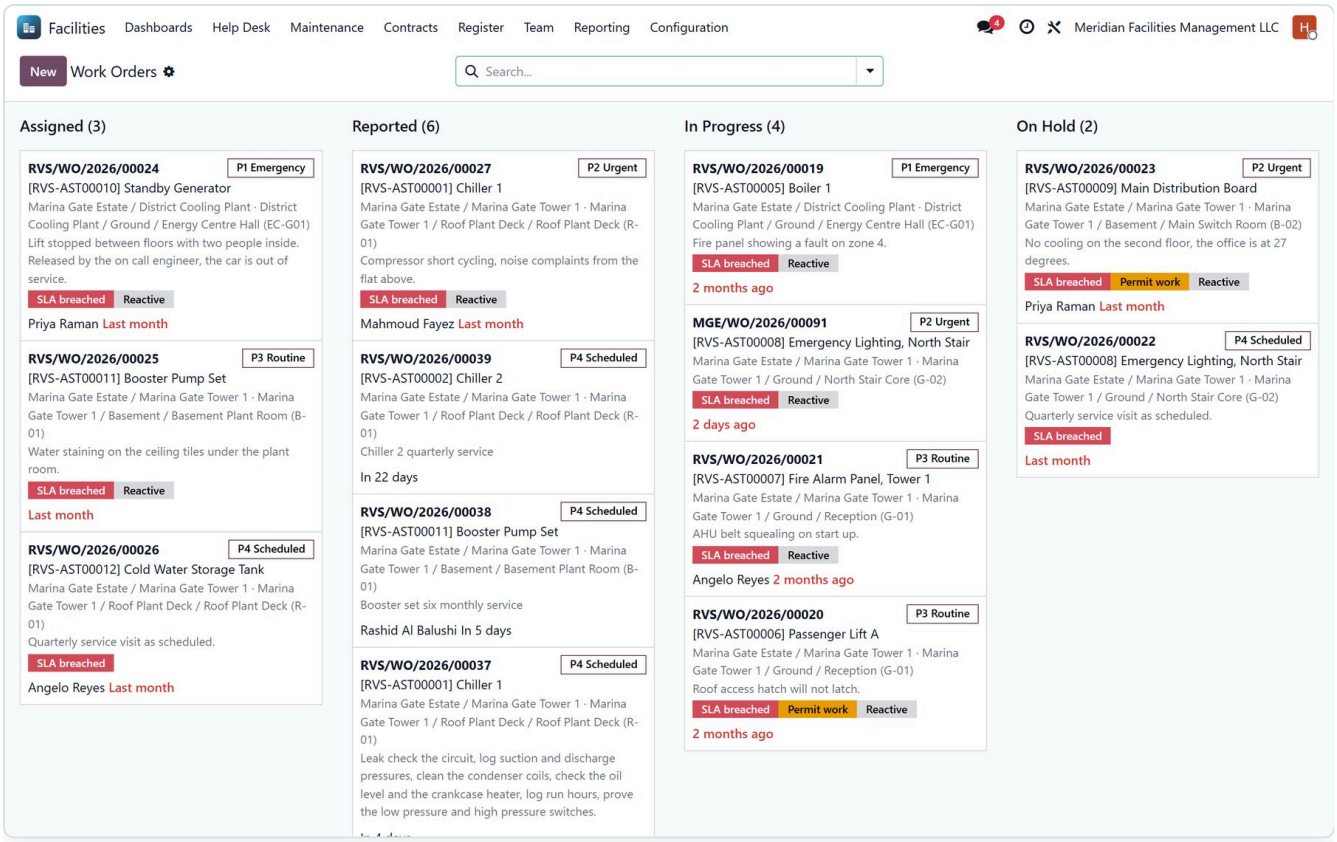


Figure 24. Open jobs by status. Each card shows the priority, the asset and location, the fault, who has it, and red tags for SLA breaches and permit work.

Useful filters in the search box: **Not Assigned**, **My Jobs**, **Reactive**, **Planned**, **Permit Work**, **Response Missed**, **Resolution Missed**, **P1 and P2** and **Reported This Month**. Technicians use **Help Desk > My Jobs**, which shows only their own.

The life of a job

Status	Meaning	Buttons you will see
Reported	Logged, nobody going yet. The clocks are running.	Assign, Log Response, Cancel
Assigned	A technician or contractor has it.	Start Work, Log Response, Assign, Hand Back, Cancel
In Progress	Somebody is on the job.	Put on Hold, Complete, Issue Parts
On Hold	Stopped for a reason: a part, access, a permit, the contractor, an approval.	Resume, Complete, Hand Back
Completed	Work finished and written up.	Close Off, Bill the Contractor
Closed	Paperwork done. Off the board.	Print Job Sheet
Cancelled	Raised in error or a duplicate.	Reset to Reported

Step 1. Report a fault

1. In **Help Desk > Work Orders** press **New**.
   An empty job opens with Origin set to Reactive.
2. Under Where, pick the **Site** and **Building**, then the **Asset** if the caller can name it. Picking the asset fills in the floor, the room, the skills needed and the priority from its criticality.
3. Check the **Priority**: P1 Emergency, P2 Urgent, P3 Routine or P4 Scheduled. AHU 03 is high criticality, so the system proposed P2.
4. If the work is hot work, confined space, electrical isolation or at height, set the **Permit Type**. The job then needs a permit (chapter 7).
5. Type the **Reported Fault** in the caller's own words, and fill in **Reported By** and **Caller** with a name and extension.

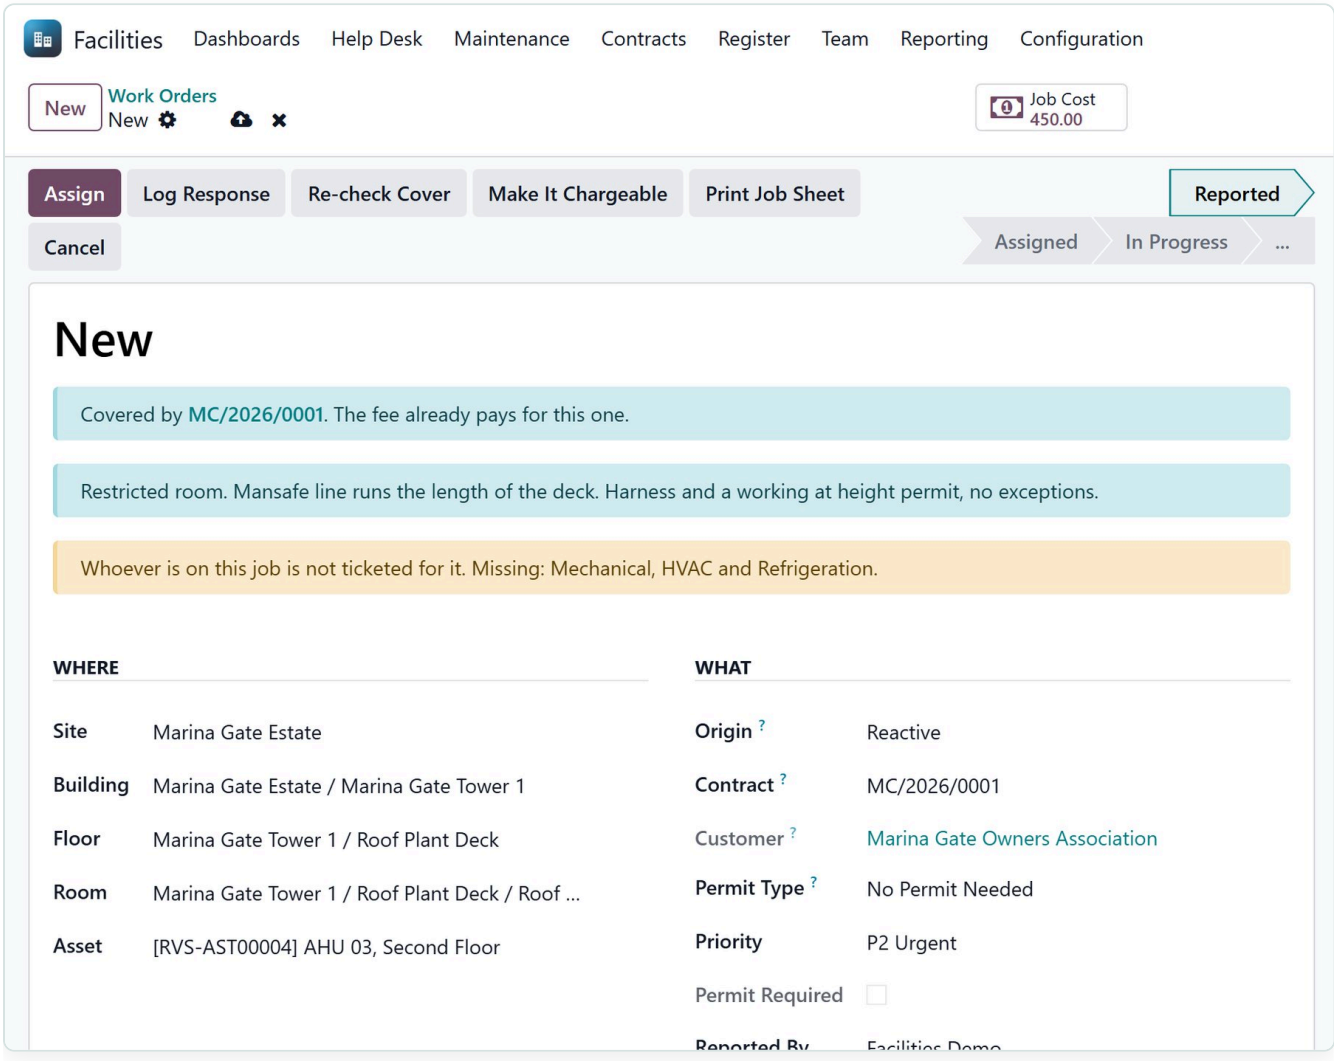


Figure 25. The fault as reception gave it. The banners at the top already say it is covered by contract MC/2026/0001 and that the roof is a restricted area.

> **TIP**
> Do not rewrite the caller's words into engineering language. "The air from the grilles feels warm and there is a squeal from the roof" tells the engineer to bring a belt set. "AHU fault" tells them nothing.

You can also raise a fault from the asset itself with **Report a Fault** (chapter 4). The location is filled in and the asset is marked Faulty.

Step 2. Choose who goes

1. Under Assigned To, choose **In House** or **Contractor**.
   Picking an asset proposes the firm that maintains it. Switch to In House if your own team is going.
2. Pick the **Technician** or **Contractor**. The **Skills Matched** tick shows whether they hold every skill the job needs.
3. For a contractor, **Charge Callout** says whether their callout fee applies.
4. Press **Save**. The job gets its number and its clocks start.

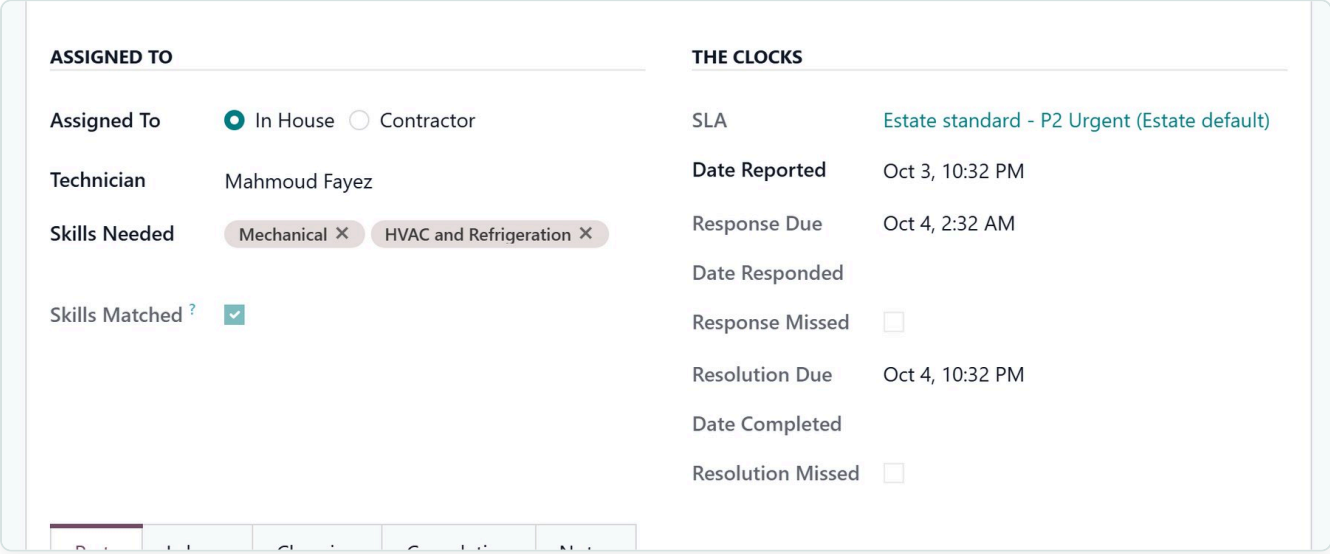


Figure 26. Saved as MGE/WO/2026/00097, in house with Mahmoud Fayez, skills matched. The P2 service level gives 4 hours to respond and 24 to resolve, so the response is due at 02:32.

Step 3. Assign

Press **Assign**. The system checks before it lets the job go:

- a technician or contractor is named;
- they hold every skill on the job (with a valid card where one is needed);
- a contractor is approved, not suspended, insured beyond the grace period, and covers this site.

If any check fails the message says which, in plain words. Otherwise the job moves to Assigned, the technician shows as On a Job, and the access arrangements for a restricted room are posted on the job so the engineer sees the keys and phone numbers.

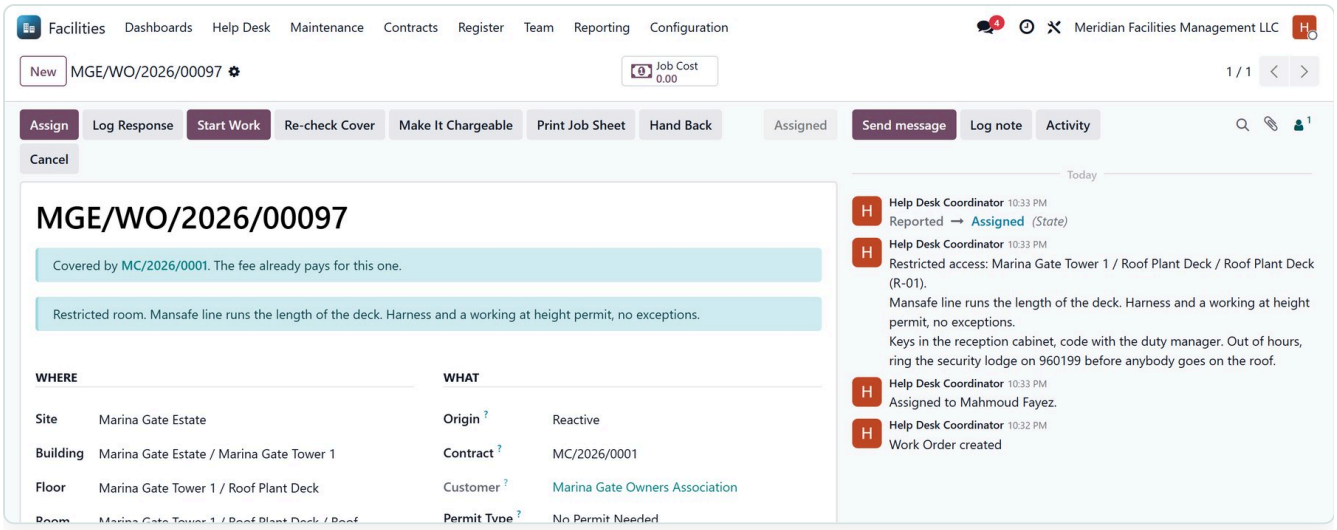


Figure 27. Assigned to Mahmoud Fayez. The chatter on the right keeps every step with the time and the person.

Step 4. Log the response and start work

1. When somebody has actually attended, press **Log Response**. This stops the response clock.
2. When work begins, press **Start Work**. If nobody logged a response, starting work counts as the response.

   The job moves to In Progress. On permit work, Start Work is refused until a valid permit is issued (chapter 7).

> WHY IT MATTERS
>
> Response time is the number the customer measures you on, and it is easy to game. Log it when somebody is standing at the plant, not when the job was read on a phone. The monthly service credit statement (chapter 9) is built from these times.

Step 5. Put on hold, and resume

1. On a job in progress, press **Put on Hold**.
2. In the dialog, choose **Why**: Waiting for a Part, No Access, Waiting for a Permit, Waiting for the Contractor, Waiting for Approval or Other.
3. Add a **Note**: which part, from whom, and when it is due in.
4. Press **Put on Hold**.

   The job shows an On Hold section with the reason, when the hold started and minutes held so far.
5. When the part arrives, open the job and press **Resume**. It goes back to In Progress.

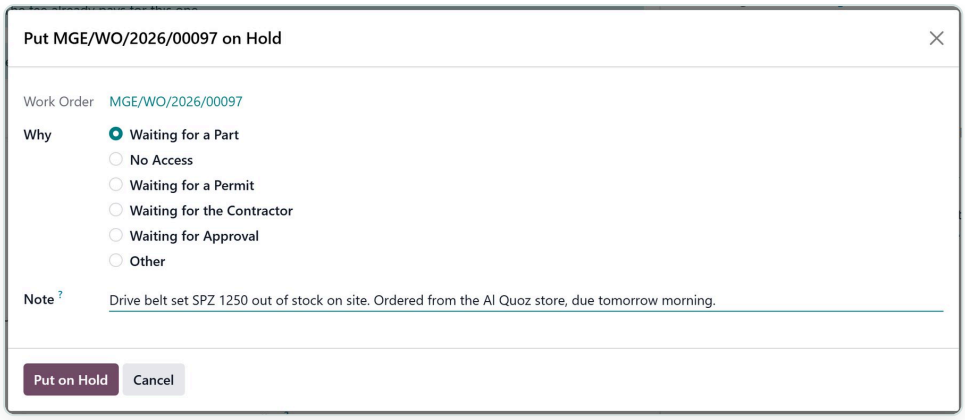


Figure 28. Putting the AHU job on hold for a belt set.

With **Stop the Clock on Hold** on in Settings, the time on hold is added to the resolution due time. While the job is on hold its clock is frozen.

Step 6. Parts and labour

Parts and hours are where the cost of a job comes from. Book them on the day.

1. On the **Parts** tab, press **Add a line**, pick the part, the quantity and **Taken From** (the stock location).
2. Press **Issue Parts** at the top. The parts leave the store properly and the **Issued** box is ticked.
3. On the **Labour** tab, add a line per person: **Date**, **Kind** (In House or Contractor), **Technician**, **Hours**, and a short description. Tick the out of hours box where it applies; the premium is added.



Figure 29. A drive belt set and two bag filters, issued from WH/Stock.



Figure 30. 2.5 hours in house at AED 110: AED 275 on the Job Cost button.

> **TIP**
> If more hours are booked than the job has been running, an amber banner says so. It is there to catch typing errors, such as 25 hours for 2.5. If two people worked, say so in the labour description and carry on.

Step 7. Complete

1. Open the **Completion** tab.
2. Write **Work Done** properly: what you found, what you did, what you left.
3. Set the **Root Cause** (Fair Wear, End of Life, Misuse, Design Fault, Poor Installation, Environmental, No Fault Found, Not Established) and **Condition Now**.
4. Enter the **Meter at Completion** if the asset has a meter, the customer's name in **Signed Off By**, and the downtime hours if the plant was down.
5. If something else needs doing, tick **Follow Up Needed** and say what.
6. Press **Complete**.

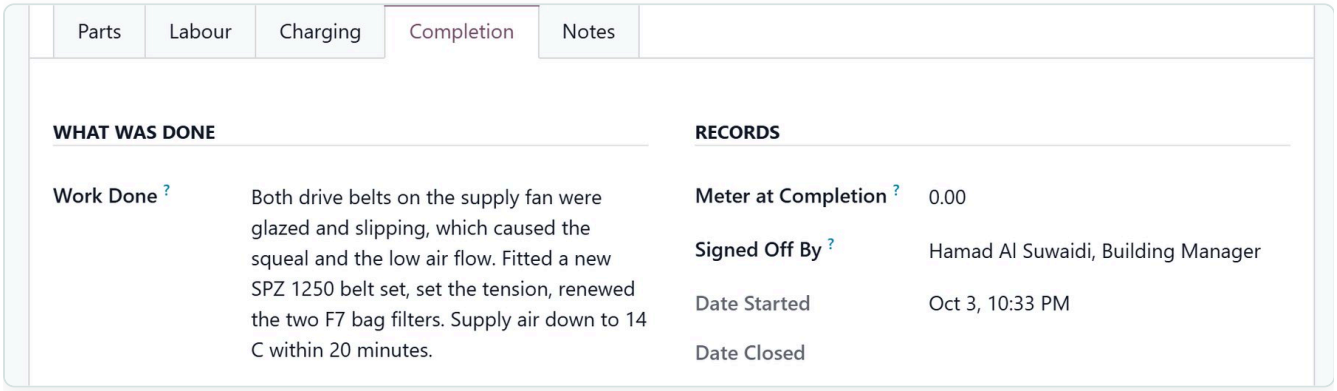


Figure 31. The Completion tab on job 00097, signed off by the building manager.

Complete is refused, with a message naming the problem, when:

- Work Done is empty;
- parts on the job were never issued from the store;
- a permit on the job is still issued or expired and has not been handed back;
- it is a statutory inspection without a Certificate Reference and Condition Now.

A permit still in draft or requested is cancelled when the job completes. For a reactive job on a critical or faulty asset with no downtime entered, the system fills in the time from report to fix and says so in the chatter, so you can correct it.

Step 8. Close off

When the paperwork is done, press **Close Off**. The job leaves the board and the technician is free again. Jobs left in Completed are closed automatically after the number of days in Settings.


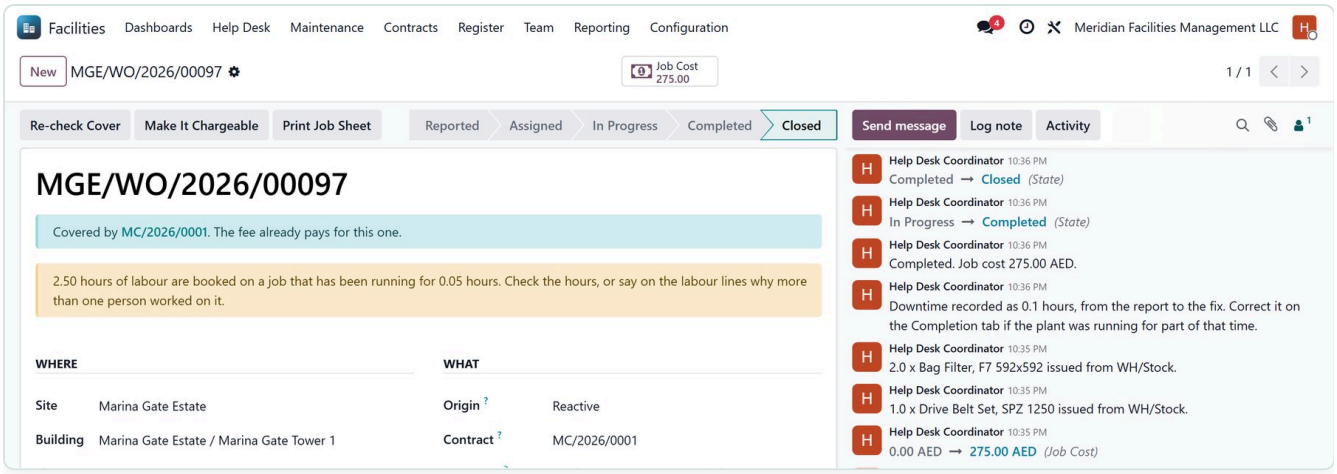


Figure 32. Job 00097 closed. The chatter shows the whole story: assigned, attended, on hold for a part, parts issued, completed, closed.

The job sheet

Press **Print Job Sheet** at any stage. Before the visit it is the engineer's instruction; after it, the customer's record. It carries the company header and TRN, the location and restricted access notes, the fault, parts and labour, the work done, the engineer's name and a customer sign-off block. Costs are hidden unless **Show Costs on the Job Sheet** is on.

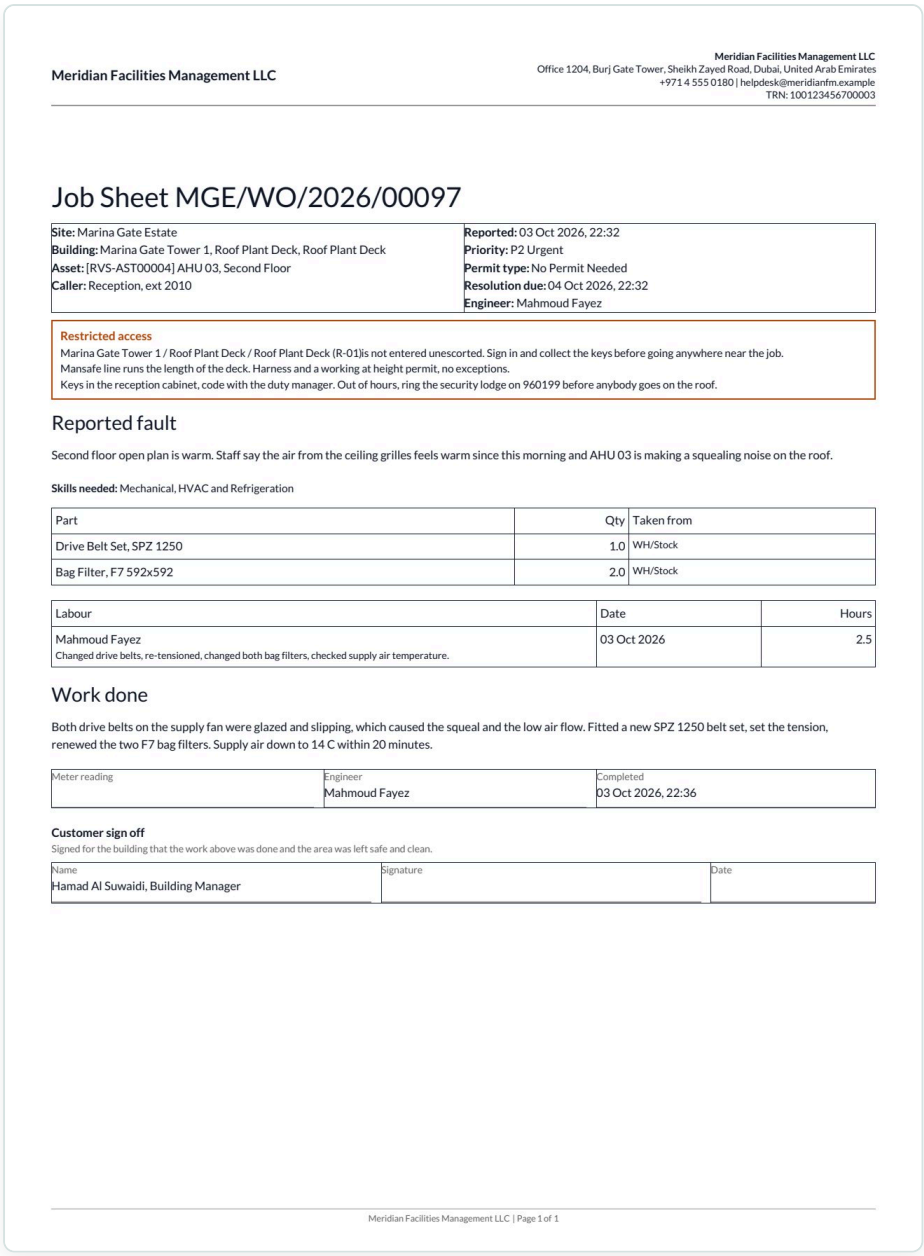

Meridian Facilities Management LLC

Meridian Facilities Management LLC
Office 1204, Burj Gate Tower, Sheikh Zayed Road, Dubai, United Arab Emirates
+971 4 555 0180 | helpdesk@meridianfm.example
TRN: 100123456700003

Job Sheet MGE/WO/2026/00097

Site: Marina Gate Estate **Building:** Marina Gate Tower 1, Roof Plant Deck, Roof Plant Deck **Asset:** [RVS-AST00004] AHU 03, Second Floor **Caller:** Reception, ext 2010	**Reported:** 03 Oct 2026, 22:32 **Priority:** P2 Urgent **Permit type:** No Permit Needed **Resolution due:** 04 Oct 2026, 22:32 **Engineer:** Mahmoud Fayez

Restricted access
Marina Gate Tower 1 / Roof Plant Deck / Roof Plant Deck (R-01)is not entered unescorted. Sign in and collect the keys before going anywhere near the job.
Mansafe line runs the length of the deck. Harness and a working at height permit, no exceptions.
Keys in the reception cabinet, code with the duty manager. Out of hours, ring the security lodge on 960199 before anybody goes on the roof.

Reported fault

Second floor open plan is warm. Staff say the air from the ceiling grilles feels warm since this morning and AHU 03 is making a squealing noise on the roof.

Skills needed: Mechanical, HVAC and Refrigeration

Part	Qty	Taken from
Drive Belt Set, SPZ 1250	1.0	WH/Stock
Bag Filter, F7 592x592	2.0	WH/Stock

Labour	Date	Hours
Mahmoud Fayez Changed drive belts, re-tensioned, changed both bag filters, checked supply air temperature.	03 Oct 2026	2.5

Work done

Both drive belts on the supply fan were glazed and slipping, which caused the squeal and the low air flow. Fitted a new SPZ 1250 belt set, set the tension, renewed the two F7 bag filters. Supply air down to 14 C within 20 minutes.

Meter reading	Engineer	Completed
	Mahmoud Fayez	03 Oct 2026, 22:36

Customer sign off
Signed for the building that the work above was done and the area was left safe and clean.

Name	Signature	Date
Hamad Al Suwaidi, Building Manager		

Meridian Facilities Management LLC | Page 1 of 1

Figure 33. The job sheet for MGE/WO/2026/00097.

SLA clocks and breaches

The Clocks section on every job shows the service level used, when it was reported, **Response Due**, when somebody responded, **Resolution Due** and when it was completed. Two boxes, **Response Missed** and **Resolution Missed**, are ticked by the system when a clock runs out.

- The clocks are checked every 15 minutes. A breach puts a red SLA Breached ribbon on the job and tells the Escalate To person on the service level.
- On a Cover Hours Only level, the clock only runs inside the cover hours and days, in the level's time zone, and rolls over nights and weekends.
- A planned or statutory job is due on the schedule's date, not on the P4 clock.

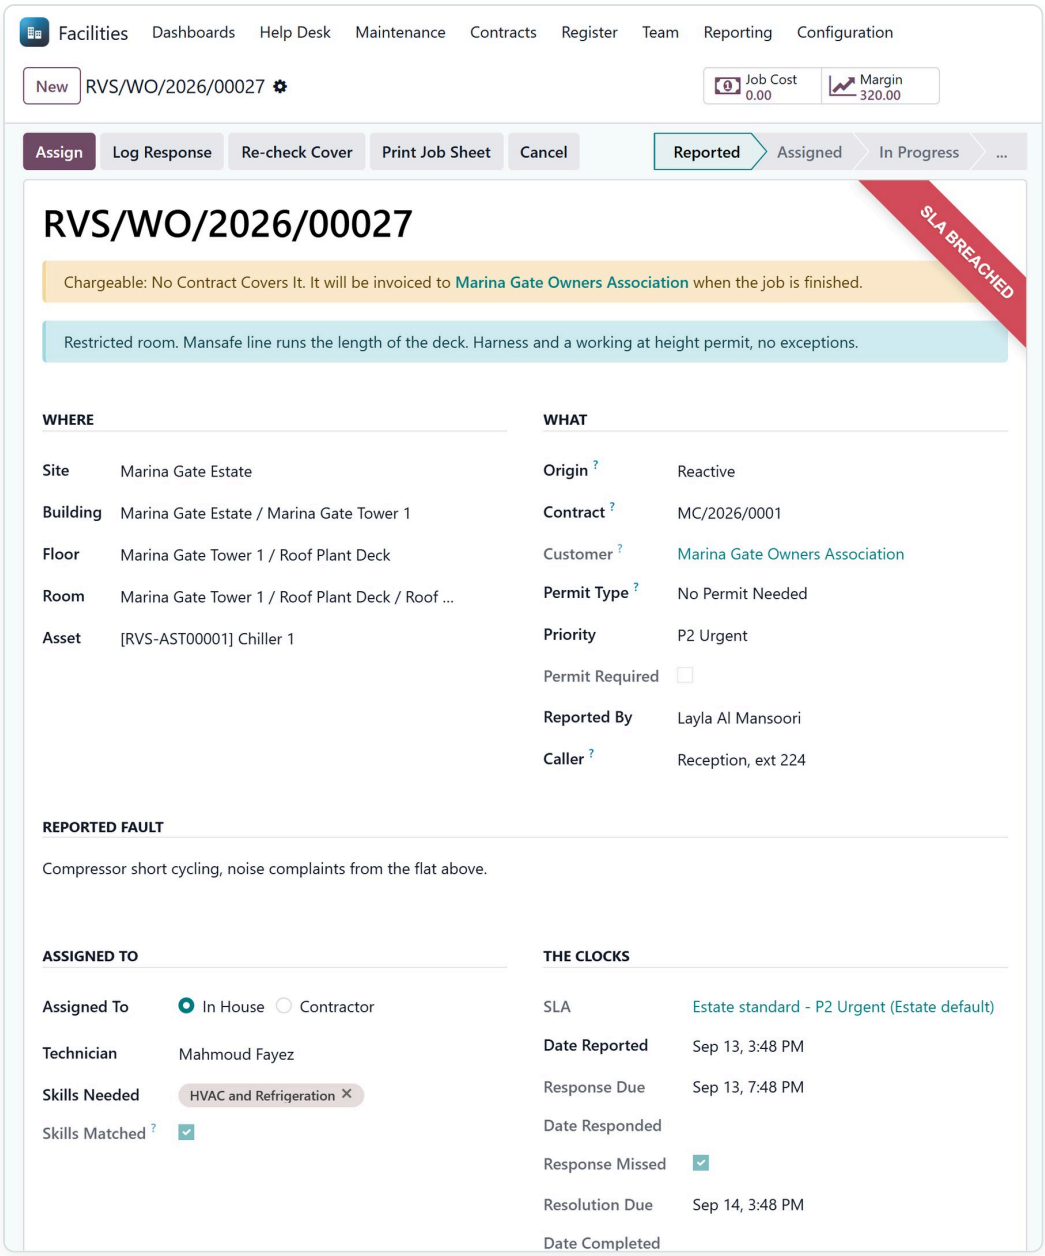


Figure 34. A P2 job on Chiller 1 that missed both clocks. The ribbon stays on the record and on the reports.

Hand back, cancel and reset

Button	When	What it does
Hand Back	Assigned or On Hold	Sends the job back to the help desk as Reported, takes the technician and contractor off it, and keeps the clocks running.
Cancel	Any open job	Cancels it. Refused while a permit on the job is issued.
Reset to Reported	Cancelled	Brings a cancelled job back.
Bill the Contractor	Completed or Closed contractor job. Facility Manager.	Raises the vendor bill from the contractor's labour, parts and callout, with the job number as reference and the vendor's payment terms and purchase tax.

The banners on a job

Coloured banners at the top of the job tell everybody what matters before they read anything else.

Banner	Meaning
Red: This is permit work	Nothing starts until the named permit is issued and inside its window.
Amber: needs a permit, setting lets it start	Permit Before Work Starts is off; check a permit exists before anybody begins.
Blue: Restricted room	The room's access note. Also posted on assignment.
Amber: Nobody assigned yet	Shows the skills needed.
Amber: not ticketed for it	The person on the job is missing a skill or card.
Amber: hours booked exceed time running	Check the labour lines.
Blue: Covered by ENTERPRISE	The contract that pays for this job.
Amber or red: Chargeable ENTERPRISE	Why it will be invoiced and to whom; red when there is nobody to bill.
Green: Invoiced, grey: Written off ENTERPRISE	What happened to the charge.

CHAPTER 7

Permit to work

For hot work, confined spaces, electrical isolation and working at height. The permit is the control that keeps people alive, so the system treats it as one.

In this chapter

- When a permit is needed
- Raise the permit
- Send for issue
- Issue by a second person
- Start the work
- Hand back
- Expiry
- The permit register and printout

When a permit is needed

A job needs a permit when its **Permit Type** is Hot Work, Confined Space, Electrical Isolation or Working at Height, or when it is raised in a room marked **Permit Needed in This Room**. The job then shows a red banner and a **Raise a Permit** button. With **Permit Before Work Starts** on, Start Work is refused until a permit of the right type is issued and inside its window, and the refusal says exactly why: wrong permit type, window not open yet, permit ran out, or none issued.

The example: on job MGE/WO/2026/00098 the outgoing breaker for the Tower 1 second floor sub board keeps tripping. Priya Raman has to replace it, which means isolating a section of the Main Distribution Board in the basement switch room.

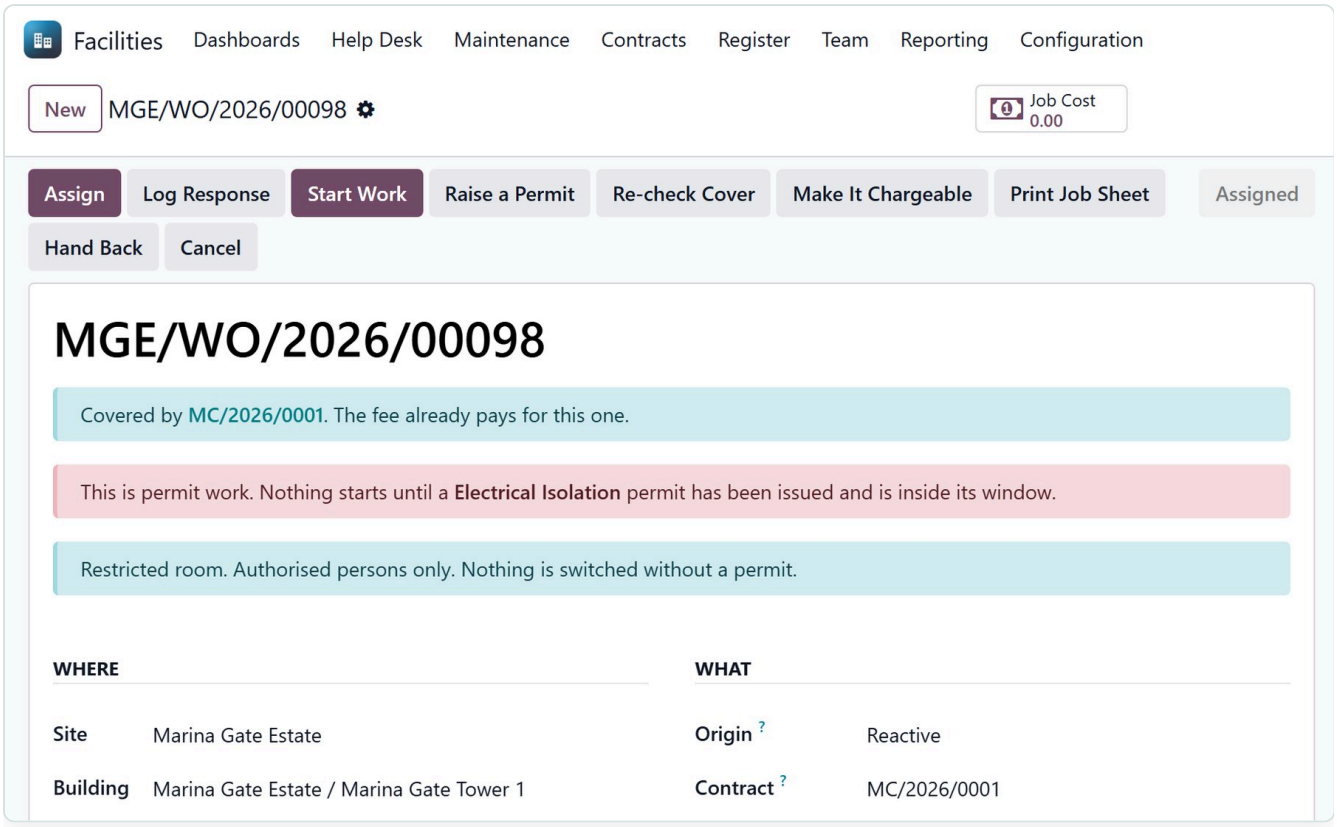


Figure 35. The job is assigned but cannot start. Red banner: an Electrical Isolation permit is needed. Blue banner: the switch room is restricted.

Step 1. Raise the permit

1. On the job, press **Raise a Permit**.
   A new permit opens with the job, permit type, site, building, room, asset and technician filled in, and an 8 hour window starting now.
2. Adjust **Valid From** and **Valid To** to the real working window.
3. Under Who Is Covered, check the **Technician** or **Contractor** and list everybody in **People Working**. A permit is issued to named people.
4. Under Paperwork, type the **Risk Assessment** and **Method Statement** references.
5. Under **Precautions Taken**, write what has actually been done to make the job safe.
6. Fill in the section for the permit type:
   - **Hot Work:** the fire watch in minutes after the last spark;
   - **Confined Space:** oxygen reading, gas test time and the standby person at the entry;
   - **Electrical Isolation:** the isolation point, and tick Locked and Tagged once the padlock is on;
   - **Working at Height:** the anchor point or edge protection.
7. Press **Save**.

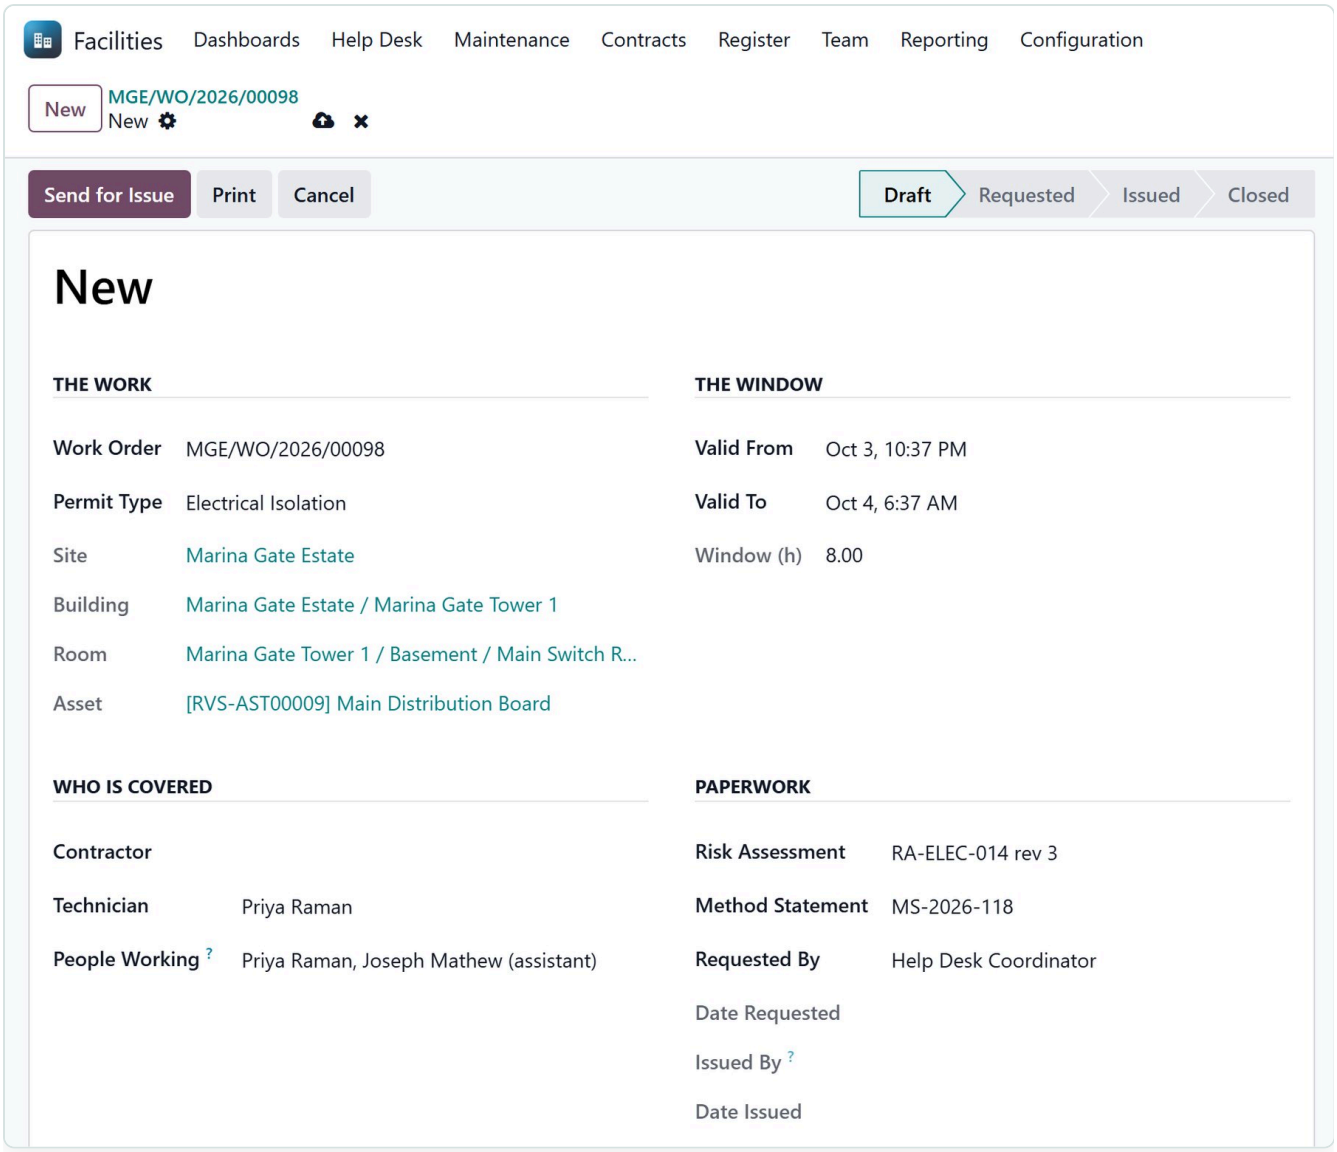


Figure 36. The electrical isolation permit filled in: section 2 isolated, proved dead, locked and tagged, two people named.

Step 2. Send for issue

Press **Send for Issue**. The permit moves to Requested. If the precautions, the risk assessment or the people working are missing, one message lists everything still to fill in.

Step 3. Issue, by somebody else

A Maintenance Supervisor or Facility Manager who did **not** request the permit opens it, checks the precautions on the ground and presses **Issue**.

1. Open the permit from **Help Desk > Permits to Work** or from the Permits button on the job.
2. Press **Issue**.
   The system asks: "Issuing a permit says the work has been made safe. Have you checked the precautions on the ground?"
3. Press **Ok**. The permit is Issued, with Issued By and Date Issued stamped and Hours Left counting down. A note is posted on the job.

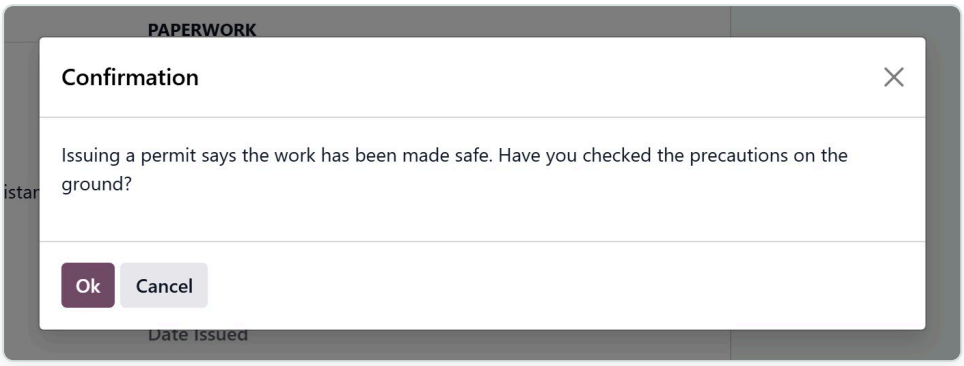


Figure 37. The confirmation before a permit is issued.

Issue is refused when:

- the person issuing it is the person who requested it;
- a check for the permit type is missing (fire watch, gas test, standby person, isolation point and lock, anchor point);
- nobody is assigned to the job;
- the contractor is unapproved, suspended or uninsured;
- the window has already passed.

> **WHY IT MATTERS**
>
> A permit you sign for yourself is checking your own homework. The second pair of eyes is the whole control, so the system will not let the requester issue it, whatever their role.

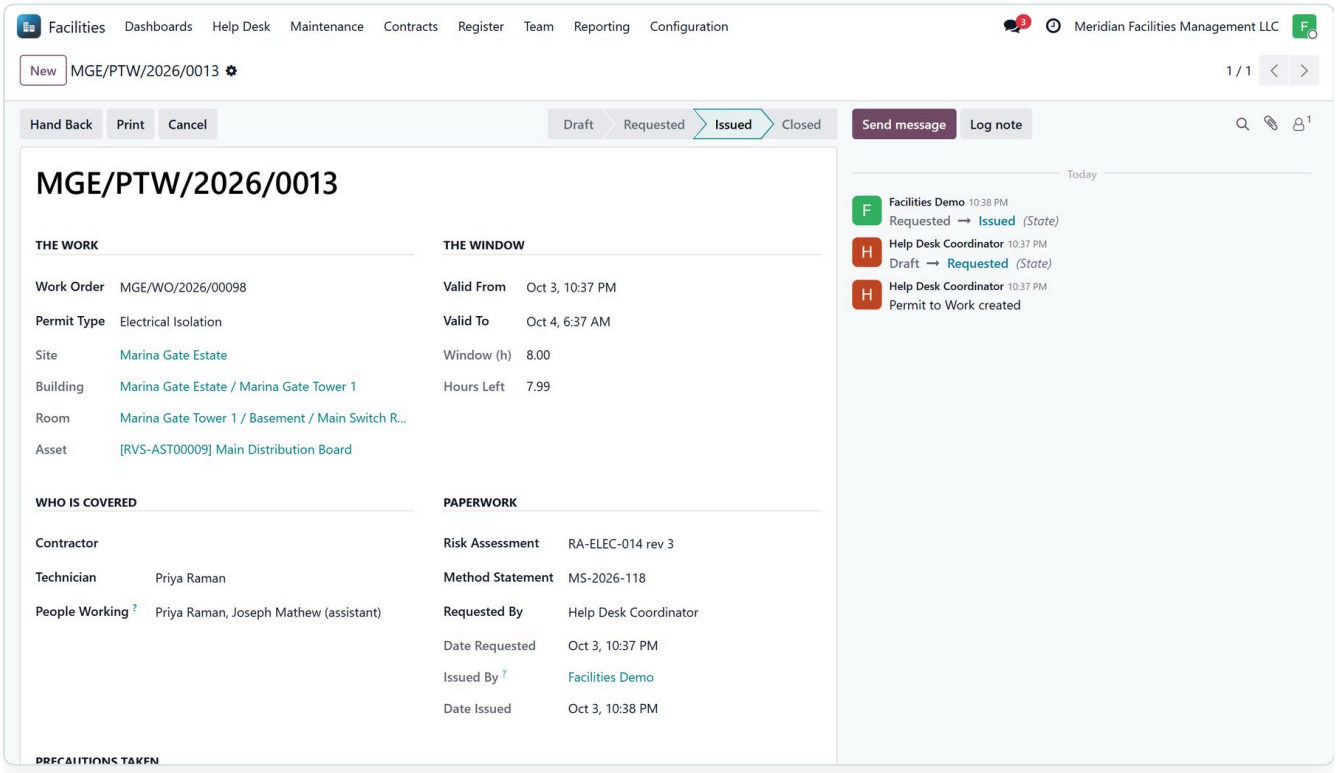


Figure 38. MGE/PTW/2026/0013 issued by a second person, valid to 06:37, with 7.99 hours left.

Step 4. Start the work

Back on the job, **Start Work** now goes through. The red banner disappears while the permit is live.

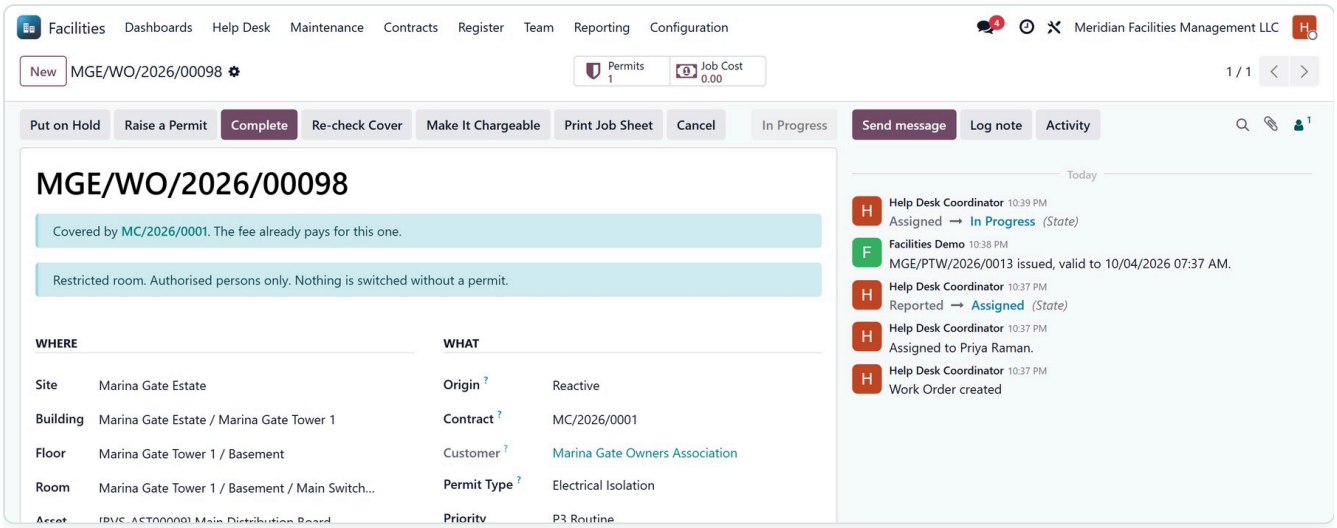


Figure 39. Job 00098 in progress under a live permit.

Step 5. Hand back

The job is not finished until the area has been handed back. A job cannot be completed or cancelled while its permit is still issued.

1. Open the permit.
2. In the **Handback** section, write the **Handback Note**: what state the area was left in, and that the isolation and guards are back as they were.
3. Press **Hand Back**.
   The permit is Closed, Closed By and Date Closed are stamped, Locked and Tagged is cleared, and the handback note is posted on the job.
4. Go back to the job and complete it as in chapter 6.

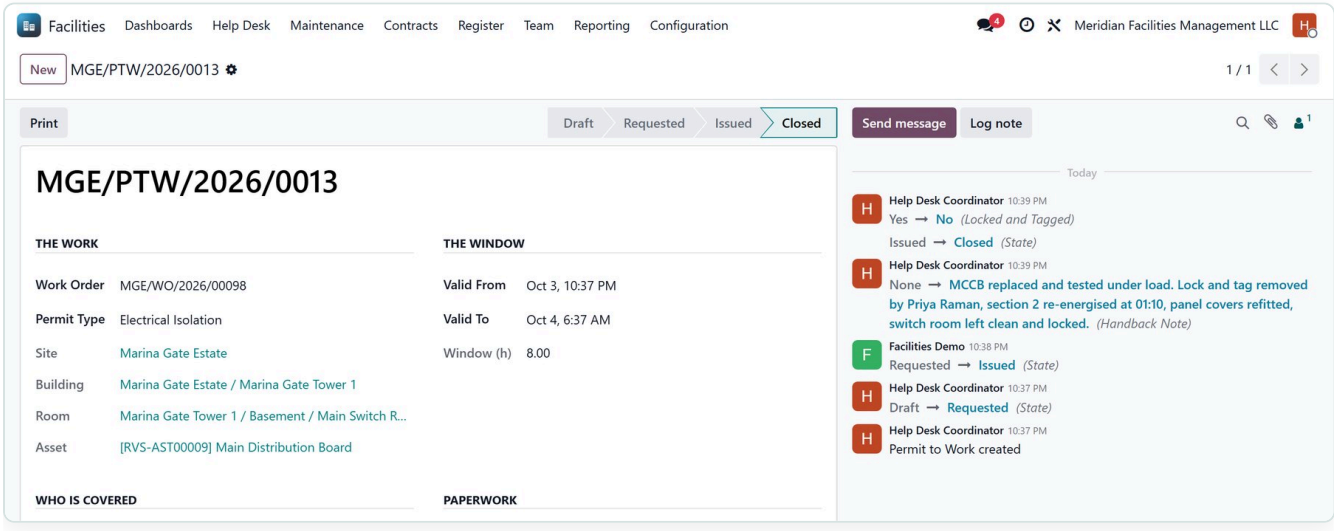



Figure 40. The permit closed with its handback note. The chatter records who requested, who issued and who handed back.

Expiry

Every 30 minutes the system checks open permits. One whose window has passed moves to **Expired**, and a note goes on the job: re-issue it before anybody goes back. An expired permit still has to be handed back, or reset to draft with **Reset to Draft** and issued again for a fresh window. A permit that was never used is cancelled, never shown as closed.


The permit register and printout

Help Desk > Permits to Work opens on the permits that are open now. Remove the Open filter to see the full register. **Print** on a permit produces the paper copy for the permit board at the plant room door.

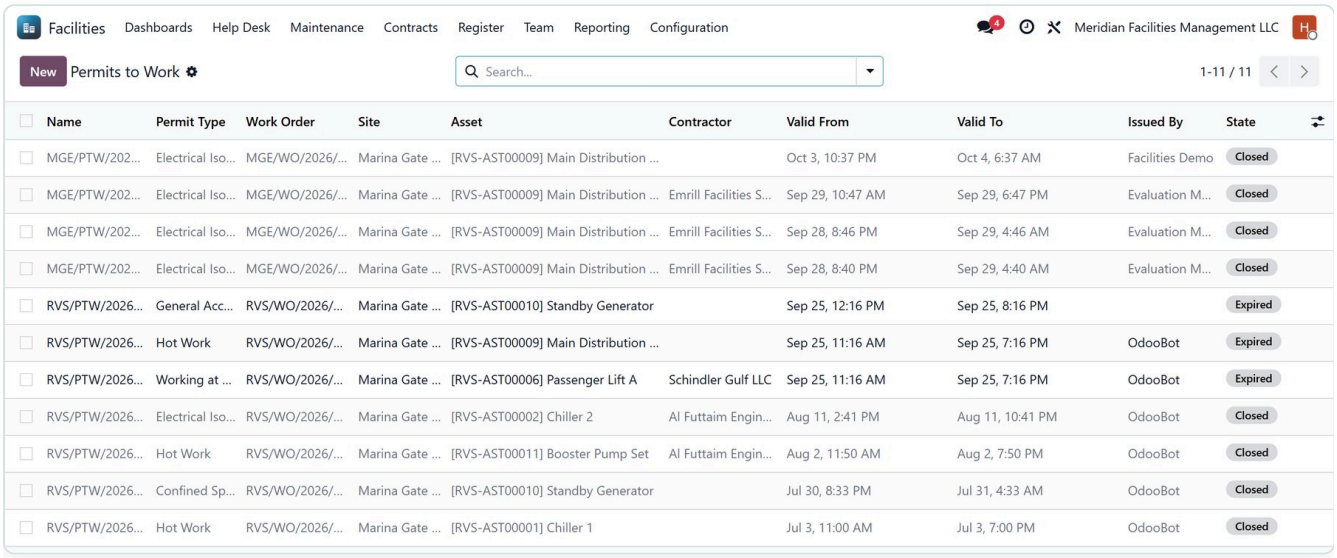

Name	Permit Type	Work Order	Site	Asset	Contractor	Valid From	Valid To	Issued By	State
MGE/PTW/202...	Electrical Iso...	MGE/WO/2026/...	Marina Gate ...	[RVS-AST00009] Main Distribution ...		Oct 3, 10:37 PM	Oct 4, 6:37 AM	Facilities Demo	Closed
MGE/PTW/202...	Electrical Iso...	MGE/WO/2026/...	Marina Gate ...	[RVS-AST00009] Main Distribution ...	Emrill Facilities S...	Sep 29, 10:47 AM	Sep 29, 6:47 PM	Evaluation M...	Closed
MGE/PTW/202...	Electrical Iso...	MGE/WO/2026/...	Marina Gate ...	[RVS-AST00009] Main Distribution ...	Emrill Facilities S...	Sep 28, 8:46 PM	Sep 29, 4:46 AM	Evaluation M...	Closed
MGE/PTW/202...	Electrical Iso...	MGE/WO/2026/...	Marina Gate ...	[RVS-AST00009] Main Distribution ...	Emrill Facilities S...	Sep 28, 8:40 PM	Sep 29, 4:40 AM	Evaluation M...	Closed
RVS/PTW/2026...	General Acc...	RVS/WO/2026/...	Marina Gate ...	[RVS-AST00010] Standby Generator		Sep 25, 12:16 PM	Sep 25, 8:16 PM		Expired
RVS/PTW/2026...	Hot Work	RVS/WO/2026/...	Marina Gate ...	[RVS-AST00009] Main Distribution ...		Sep 25, 11:16 AM	Sep 25, 7:16 PM	OdooBot	Expired
RVS/PTW/2026...	Working at ...	RVS/WO/2026/...	Marina Gate ...	[RVS-AST00006] Passenger Lift A	Schindler Gulf LLC	Sep 25, 11:16 AM	Sep 25, 7:16 PM	OdooBot	Expired
RVS/PTW/2026...	Electrical Iso...	RVS/WO/2026/...	Marina Gate ...	[RVS-AST00002] Chiller 2	Al Futtaim Engin...	Aug 11, 2:41 PM	Aug 11, 10:41 PM	OdooBot	Closed
RVS/PTW/2026...	Hot Work	RVS/WO/2026/...	Marina Gate ...	[RVS-AST00011] Booster Pump Set	Al Futtaim Engin...	Aug 2, 11:50 AM	Aug 2, 7:50 PM	OdooBot	Closed
RVS/PTW/2026...	Confined Sp...	RVS/WO/2026/...	Marina Gate ...	[RVS-AST00010] Standby Generator		Jul 30, 8:33 PM	Jul 31, 4:33 AM	OdooBot	Closed
RVS/PTW/2026...	Hot Work	RVS/WO/2026/...	Marina Gate ...	[RVS-AST00001] Chiller 1		Jul 3, 11:00 AM	Jul 3, 7:00 PM	OdooBot	Closed

Figure 41. The permit register at Marina Gate: types, jobs, windows, who issued each one and how it ended.

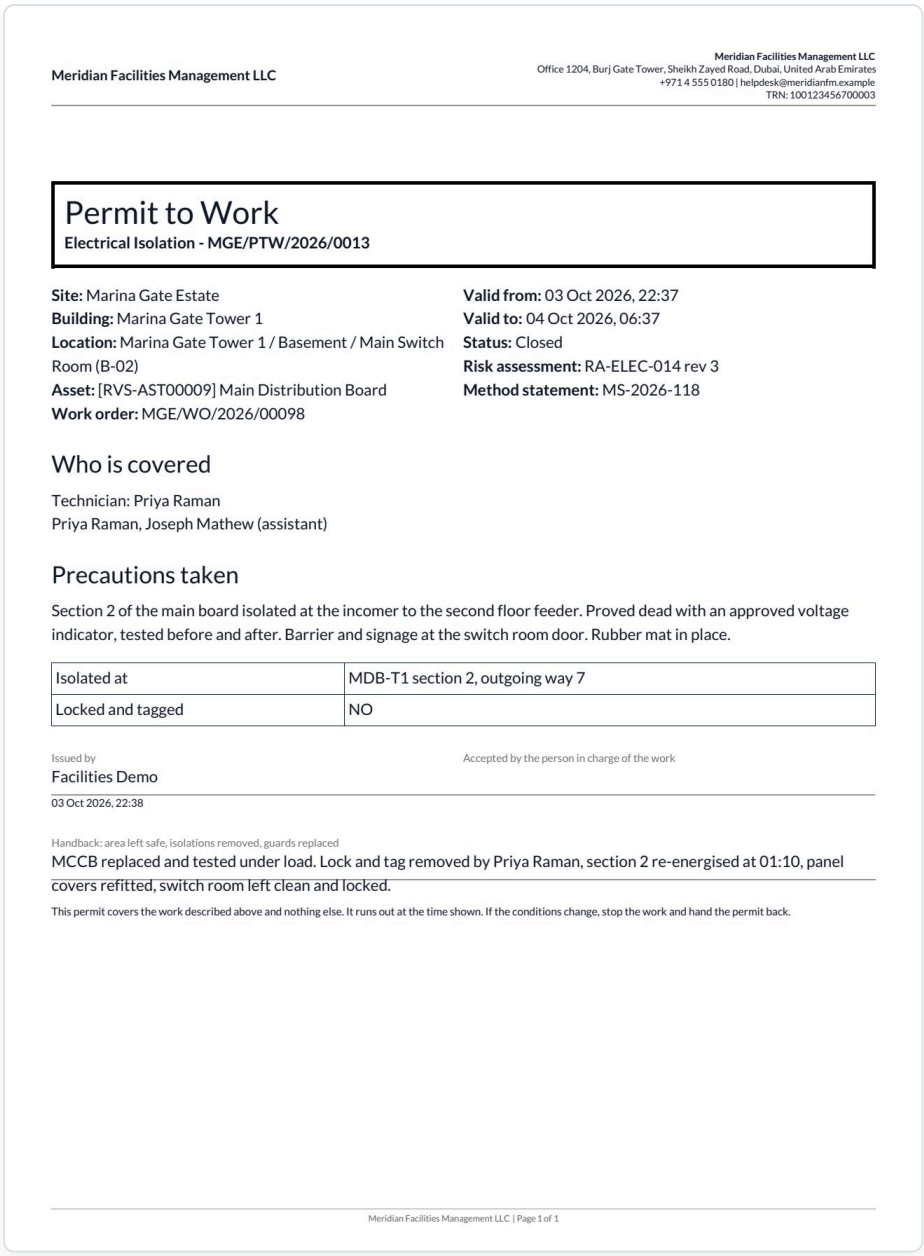

Meridian Facilities Management LLC

Meridian Facilities Management LLC
Office 1204, Burj Gate Tower, Sheikh Zayed Road, Dubai, United Arab Emirates
+971 4 555 0180 | helpdesk@meridianfm.example
TRN: 100123456700003

Permit to Work

Electrical Isolation - MGE/PTW/2026/0013

Site: Marina Gate Estate
Building: Marina Gate Tower 1
Location: Marina Gate Tower 1 / Basement / Main Switch Room (B-02)
Asset: [RVS-AST00009] Main Distribution Board
Work order: MGE/WO/2026/00098

Valid from: 03 Oct 2026, 22:37
Valid to: 04 Oct 2026, 06:37
Status: Closed
Risk assessment: RA-ELEC-014 rev 3
Method statement: MS-2026-118

Who is covered

Technician: Priya Raman
Priya Raman, Joseph Mathew (assistant)

Precautions taken

Section 2 of the main board isolated at the incomer to the second floor feeder. Proved dead with an approved voltage indicator, tested before and after. Barrier and signage at the switch room door. Rubber mat in place.

Isolated at	MDB-T1 section 2, outgoing way 7
Locked and tagged	NO

Issued by
Facilities Demo
03 Oct 2026, 22:38

Accepted by the person in charge of the work

Handback: area left safe, isolations removed, guards replaced
MCCB replaced and tested under load. Lock and tag removed by Priya Raman, section 2 re-energised at 01:10, panel covers refitted, switch room left clean and locked.

This permit covers the work described above and nothing else. It runs out at the time shown. If the conditions change, stop the work and hand the permit back.

Meridian Facilities Management LLC | Page 1 of 1

Figure 42. The printed permit.

CHAPTER 8

Contractors and technicians

An uninsured firm on site is the estate's problem, not theirs. The system keeps the paperwork honest so the help desk does not have to.

The contractor register

Open **Team > Contractors**. Each firm shows its state, insurance expiry and performance.

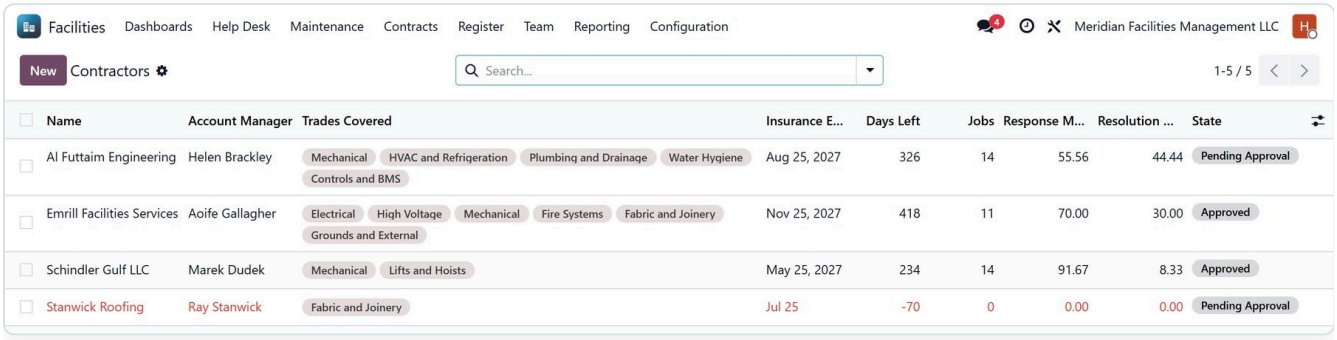


Figure 43. Contractors at Meridian. Pending firms cannot be given work yet.

Add and approve a contractor

1. In **Team > Contractors** press **New**.
2. Pick the **Supplier Record**: the company contact that vendor bills go to. If you leave it empty, one is created in the firm's own name.
3. Fill in **Account Manager**, phone, email and the **Out of Hours Number**.
4. Under What They Cover, add the **Trades Covered** (skills) and the **Sites Covered**. A firm cannot be assigned a job on a site it does not cover.
5. Under Insurance, enter the **Insurance Expiry**, **Policy Number** and **Cover Amount**.
6. Under Rates, enter their **Day Rate** and **Callout Charge**. These are what they charge you.
7. Press **Save**, then **Approve** once the pre-qualification is done.

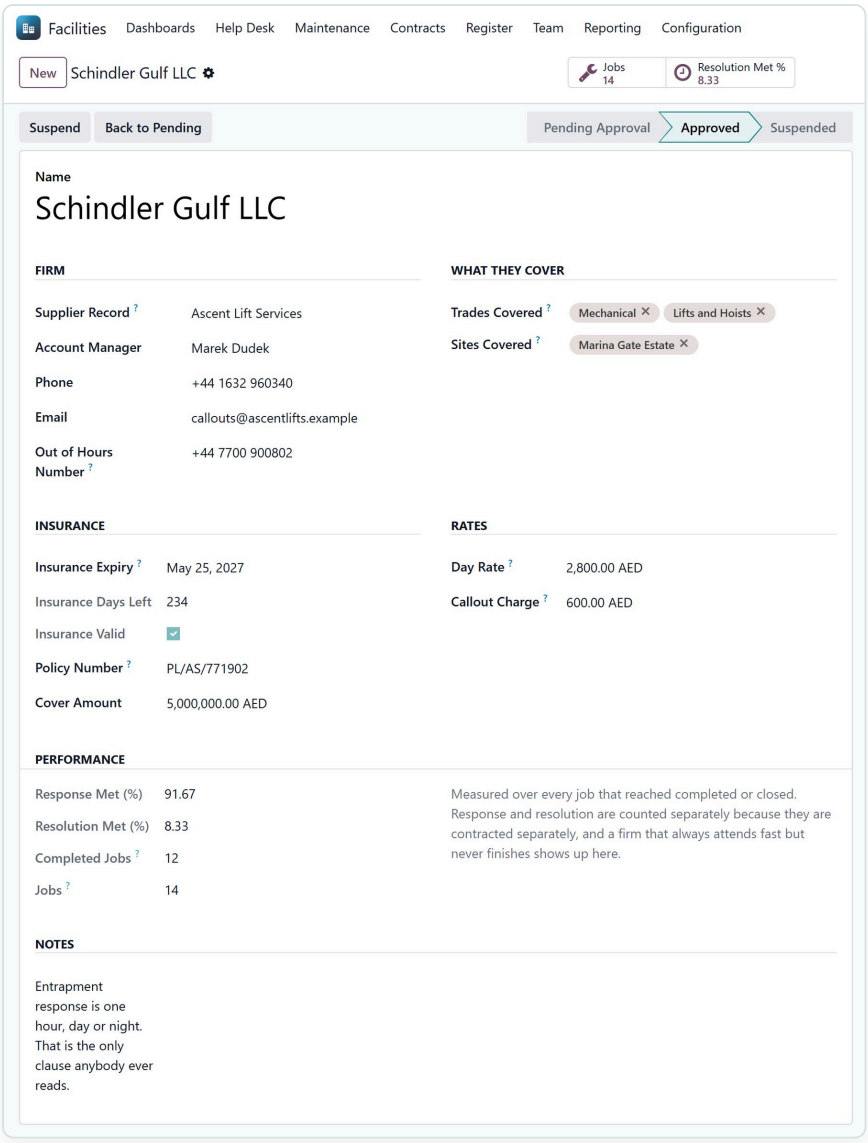


Figure 44. Schindler Gulf LLC: approved for mechanical and lift work at Marina Gate, insured to May 2027, with response met on 91.67 percent of completed jobs.

Insurance and the grace period

A contractor cannot be assigned work once their insurance is inside the grace period set in Settings, 7 days by default. Each night the system checks every approved firm; one whose cover has expired is suspended, with the reason "insurance expired" and the date. Put the renewed expiry date on the record and press **Approve** to bring them back.

Suspend a contractor

1. Open the contractor and press **Suspend**.
2. Write the **Reason for Suspension**, for example "Safety breach on Tower 2 roof, 12 Oct, pending investigation". If you leave it, the system records who suspended them and when.
3. The reason shows as a banner on the contractor and is quoted in every refusal when somebody tries to assign or issue a permit to them.

4 To lift it, press **Approve**, or **Back to Pending** if they need to re-qualify. Either clears the reason.

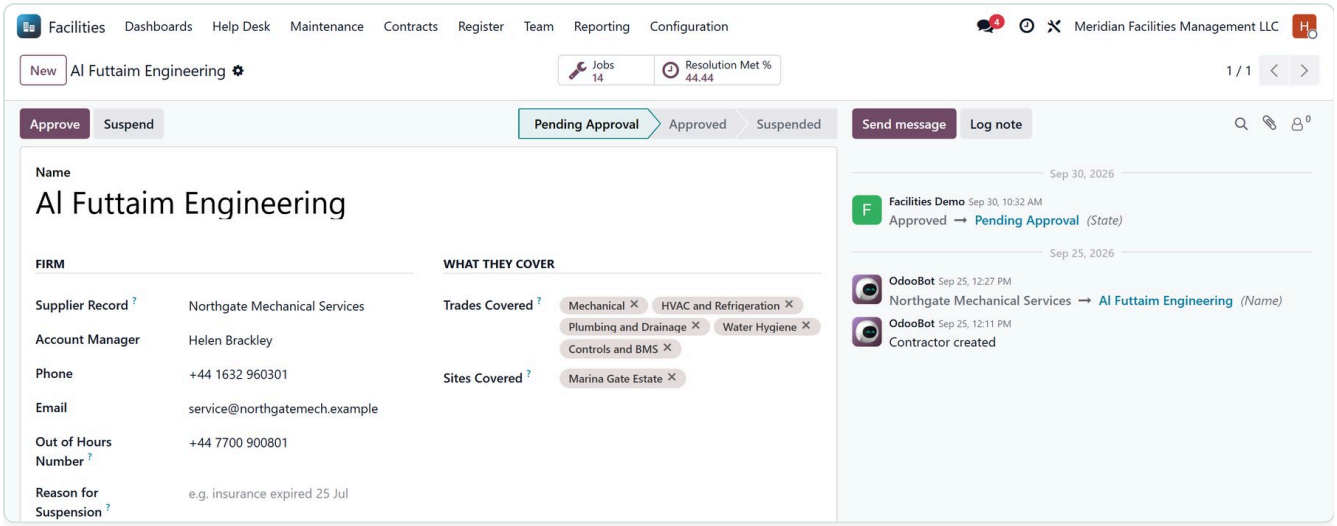


Figure 45. Al Futtaim Engineering is still Pending Approval. Approve and Suspend sit at the top left.

Performance

The Performance section shows **Response Met (%)** and **Resolution Met (%)** over every job the firm has completed, with the count of jobs. They are kept apart on purpose: a firm that always turns up fast but never finishes shows up here, and so does one that is slow to come but fixes it first time. Use these figures at the quarterly review, not the firm's own report.

Contractor bills

When a contractor job is completed, a Facility Manager presses **Bill the Contractor** on the job. The vendor bill is raised from what was booked: the contractor's labour, parts and callout, with the job number as the bill reference, the firm's payment terms and the right purchase tax. The **Vendor Bill** button on the job opens it. Check it against their invoice when it arrives.

Technicians

Team > Technicians lists your own engineers with their state (Available, On a Job), open jobs and hours booked this week. Chapter 3 covers setting one up. Two things to keep current:

- **Certificate Expiry.** When a card runs out, the technician cannot be assigned work needing that skill.
- **Hourly Rate.** It costs every hour they book. Without it, the company's Default Labour Rate is used.

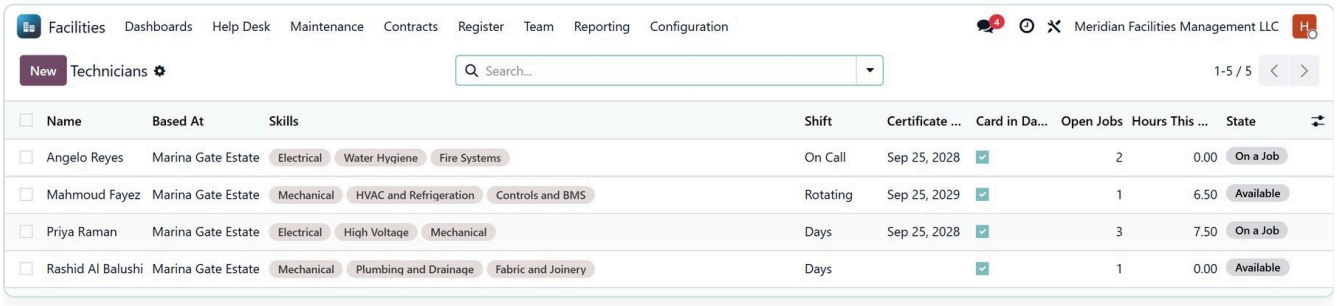


Figure 46. The in-house team with their open jobs and hours this week.

CHAPTER 9 ENTERPRISE

Contracts and billing

A facilities business is not paid per work order. It signs an annual contract, agrees what the fee covers, invoices on a cycle, bills what falls outside, and gives credits when it misses the clock. This chapter is all of that.

In this chapter

- Set up a contract
- Put on Cover, Scheduled and Running
- Invoicing the period
- Renewals
- Covered or chargeable
- Re-check Cover
- Bill To
- Chargeable work and invoices
- Writing work off
- Service credits
- Cost budgets
- Cost per building and analytic accounts

The contract list

Open **Contracts > Maintenance Contracts**. Each line shows the term, the next invoice date, the annual value, what has been invoiced, the cost to serve and the margin. Amber rows are inside their notice period; red rows have run past their end date.

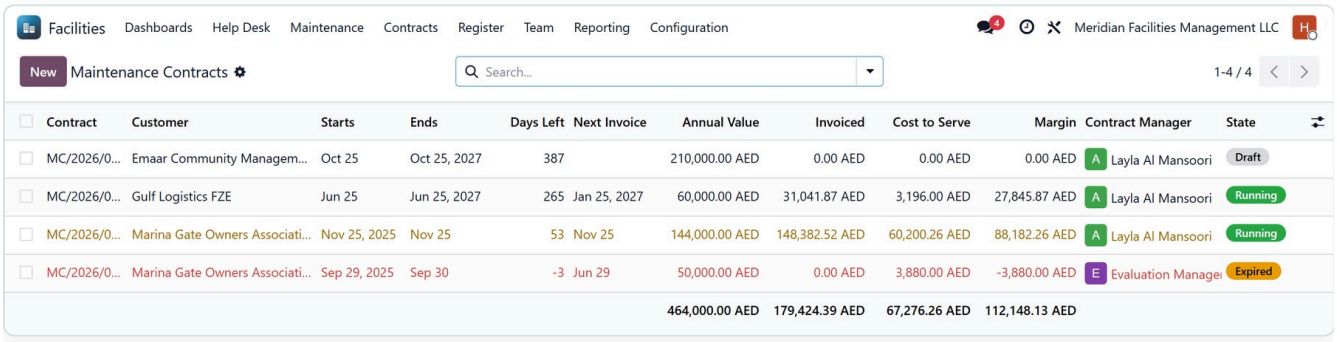


Figure 47. Contracts at Meridian. MC/2026/0001 has billed AED 148,383 against AED 60,200 of cost.

Set up a contract

1. In **Contracts > Maintenance Contracts** press **New**.
2. Under Who, pick the **Customer**, the **Site Contact**, the **Customer Reference** (their PO number) and the **Contract Manager**.
3. Under The Term, set **Starts**. **Ends** fills in a year less a day later: a contract from 1 January ends on 31 December. Set the **Notice Period (days)**; Notice By works itself out.
4. On **What Is Covered**, add a line per site, building or single asset, with a description, the planned visits per year and the **Annual Value** it was priced at.

5. Under Included in the Fee, tick what the fee pays for: **Planned Maintenance**, **Reactive Calls**, **Callout Charge Included**, **Out of Hours Included**, and set **Parts Included Up To** (per job).
6. Under Anything Else, choose the **Charge Rates** card that prices work outside the cover.
7. On **Money**, check the **Annual Value** (the sum of the lines) and choose **Invoiced Every**: Monthly, Quarterly, Half Yearly or Annual. **Each Invoice** is worked out.
8. On **Terms**, write what was actually agreed: response times, exclusions, access. It is what everybody will read when there is an argument.
9. Press **Save**.

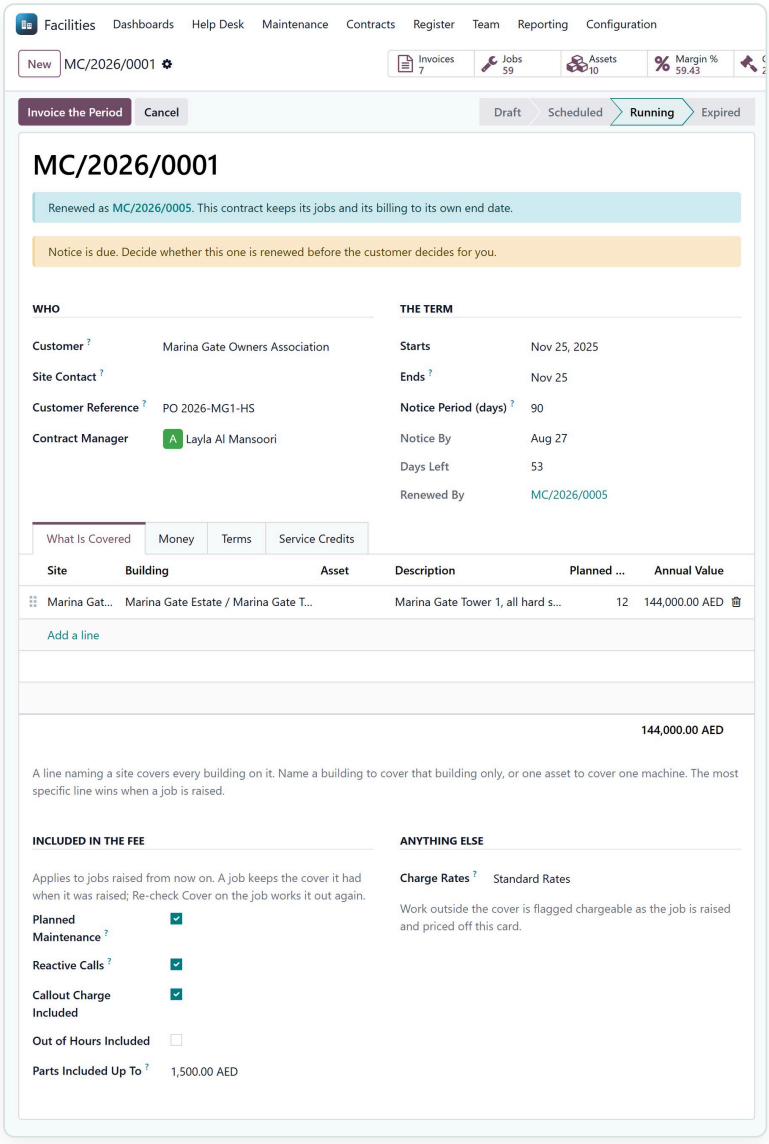


Figure 48. MC/2026/0001 for Marina Gate Owners Association: Tower 1 hard services, AED 144,000 a year, planned, reactive and callouts included, parts up to AED 1,500 per job.

HOW A JOB FINDS ITS CONTRACT

A line naming a site covers every building on it. A line naming a building covers that building only, and a line naming an asset covers one machine. When a job is raised, the most specific line wins: asset first, then building, then site. The job also has to fall inside the contract's term.

Put on Cover: Scheduled and Running

Press **Put on Cover**. The contract gets its analytic account and its first invoice date.

- If the start date is today or earlier, the contract is **Running**. Jobs already raised on those buildings inside the term are put on it.
- If the start date is in the future, the contract is **Scheduled**. A blue banner says cover starts on that date and nothing is invoiced before then. It becomes Running by itself on the start date.

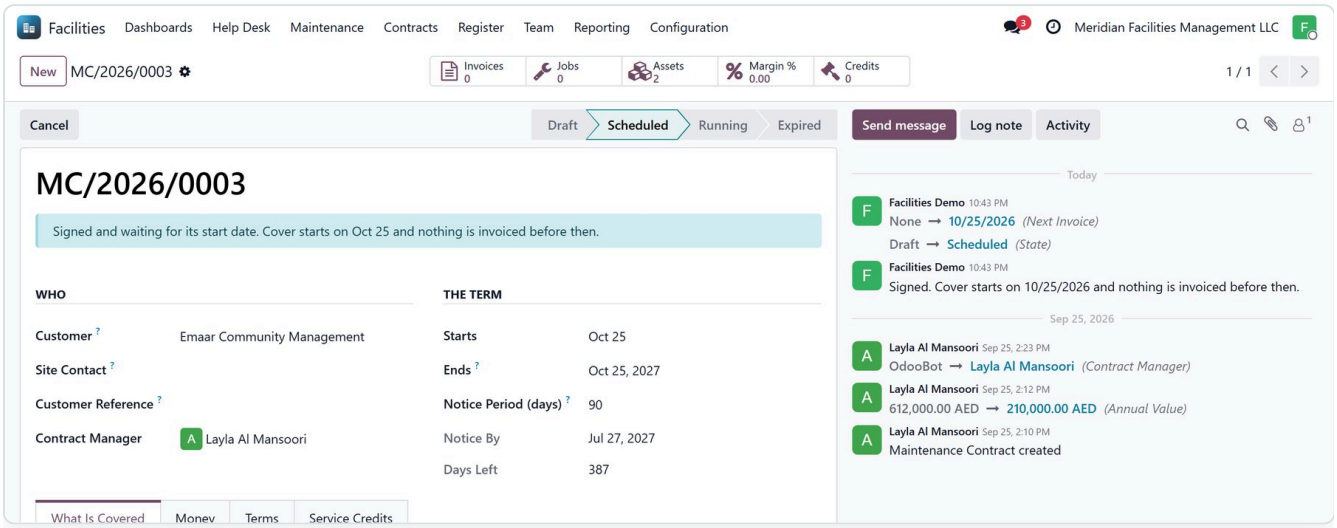


Figure 49. MC/2026/0003 for Emaar Community Management, signed early and waiting for its start on 25 October.

The statuses are Draft, Scheduled, Running, Expired, Renewed and Cancelled. **Cancel** and **Reset to Draft** are there for mistakes.

Invoicing the period

1. Open a Running contract and press **Invoice the Period**.
   An invoice for the next period is raised, with the dates it covers on the line, dated the first day of the period.
2. The due date comes from the customer's payment terms. Next Invoice moves on to the following period.
3. Any agreed service credit not yet applied is taken off on the same invoice as its own line (see Service credits below).

Nothing is ever invoiced twice: the contract remembers where it got to, and pressing the button before the next period starts tells you the date it does. A nightly job does the same for every contract that is due, oldest period first, so a catch-up run produces invoices in date order. The **Money** tab lists them with their payment status for users with invoicing rights.

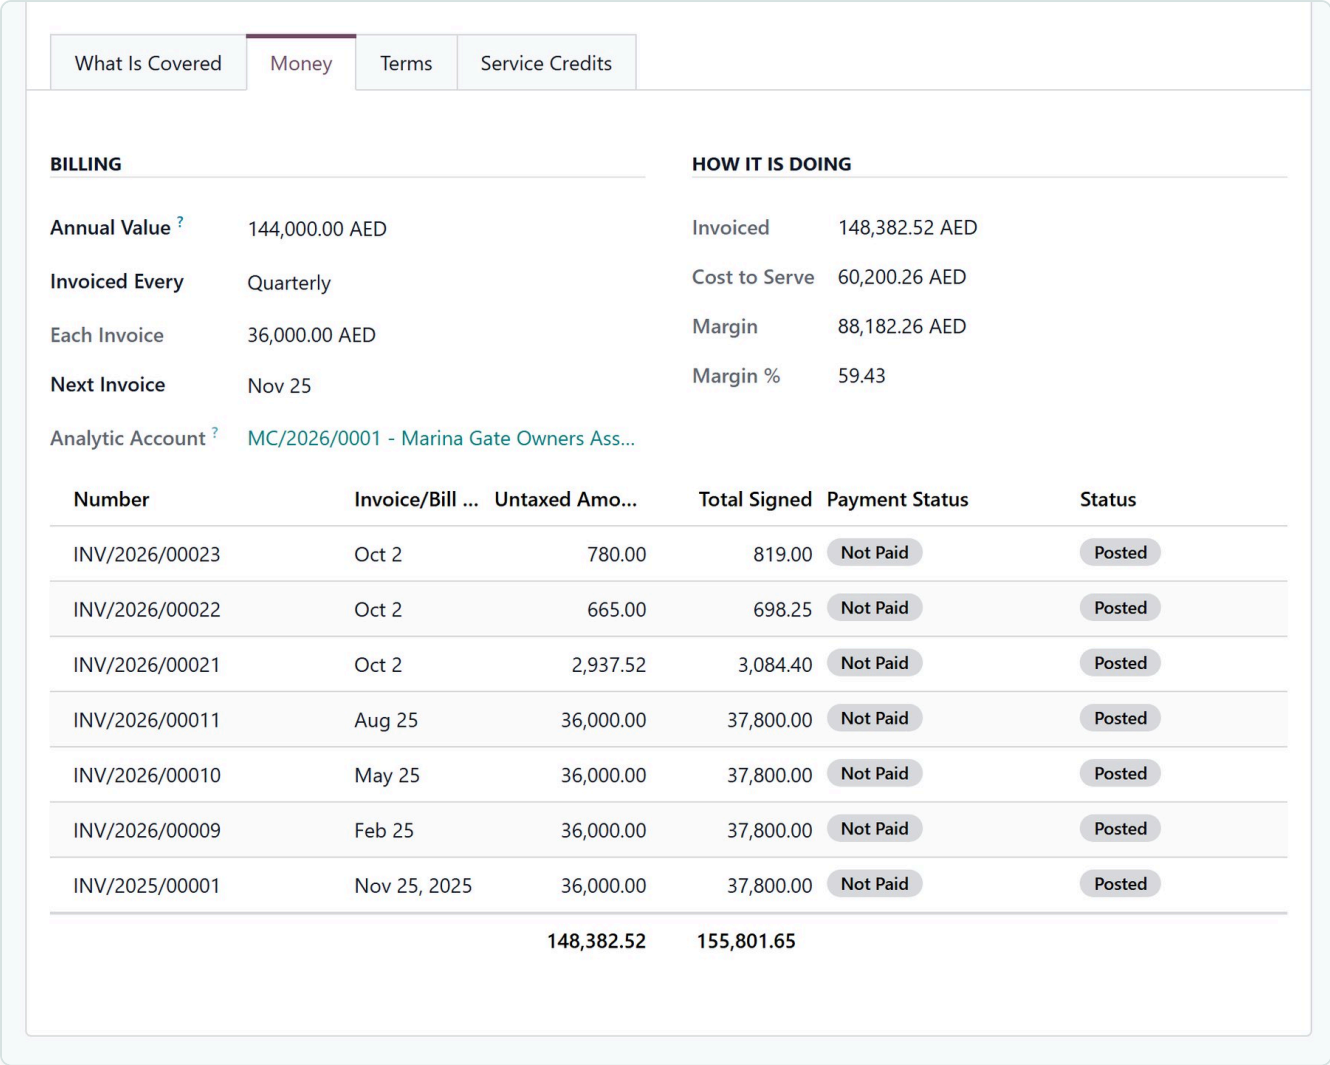


Figure 50. The Money tab: billing set-up, how the contract is doing, and every invoice raised on it.

The Print menu on a contract produces a contract statement: what was covered, what was done and what was charged on top. Most disputes over a maintenance invoice are settled by that one page.

Renewals

When a contract enters its notice period, the contract manager gets an activity, the contract shows "Notice is due" and it appears under **Contracts > Renewals**.

1. Open the contract and press **Renew**.
   A draft copy is created, starting the day after the current end date, with the same cover lines and terms.
2. Set the new price on the copy, agree it with the customer, then press **Put on Cover**. It waits as Scheduled until its start date.
3. The old contract keeps its jobs and its billing to its own end date, then becomes Renewed.

The amber "Notice is due" banner on MC/2026/0001, in the contract screen at the start of this chapter, is what a contract inside its notice period looks like.

Covered or chargeable

The cover is decided when the job is raised, not argued about at month end. The job takes the contract that covers it and checks what the fee includes. Work outside is flagged chargeable, with the reason:

Why Chargeable	When
No Contract Covers It	No running contract covers the site, building or asset on that date.
Outside What the Contract Covers	Planned or reactive work the fee does not include.
Parts Over the Allowance	Parts past the per-job allowance. Only the excess is charged.
Out of Hours	Out of hours labour when the contract does not include it. If callouts are included, no callout is charged; only the out of hours labour is.
Damage or Misuse	Set by hand when a tenant broke it.
Project Work	Jobs with Origin Project Work.
Marked Chargeable by Hand	Set with **Make It Chargeable** on the job.

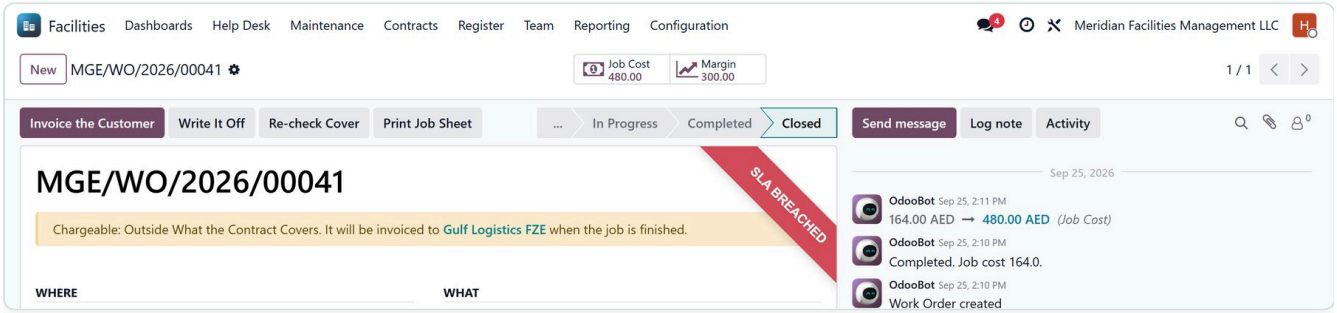


Figure 51. Chilled water work in Tower 2 that the Gulf Logistics contract does not include. The amber banner says why and who will be invoiced.

The **Charging** tab, for Contracts and Billing users, shows the price side: labour, parts and callout charged, the total to invoice, the rate card used and the job margin against the cost on the Parts and Labour tabs.

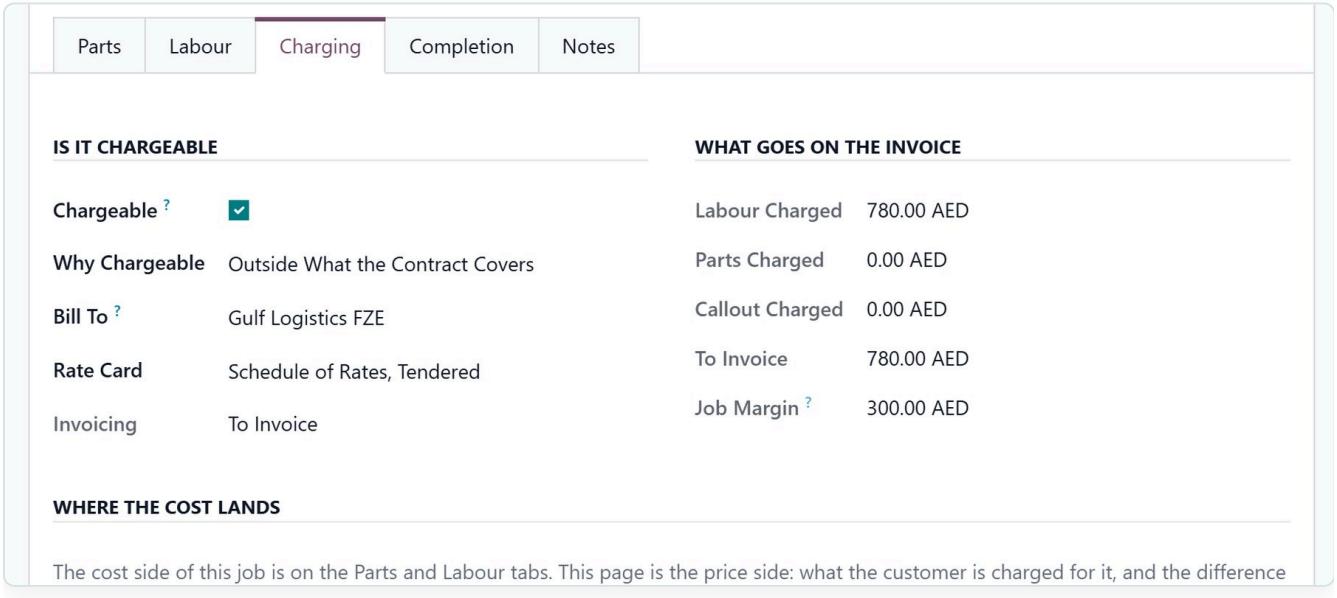


Figure 52. AED 780 to invoice at the tendered schedule of rates, AED 300 margin.

Re-check Cover

Changing what a contract includes applies to jobs raised from then on. Jobs already raised keep the cover they had, so nobody's invoice changes behind their back. If a job really should be priced again, a Facility Manager or Contracts and Billing user presses **Re-check Cover** on it. The job is matched against the contracts as they are now, and the chatter records the before and after.

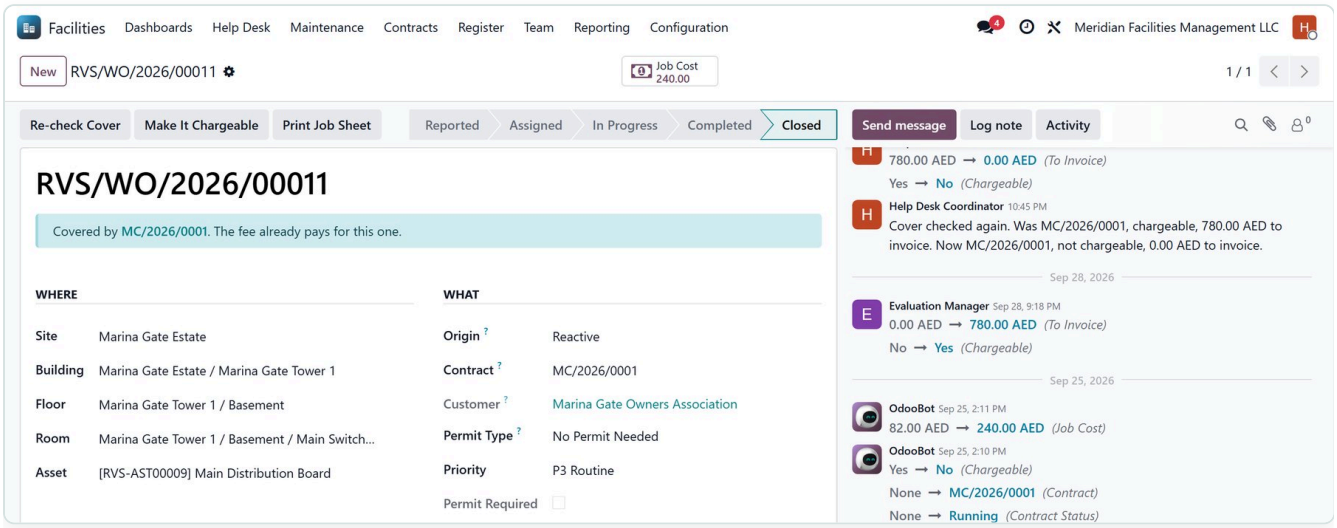


Figure 53. Re-check Cover on RVS/WO/2026/00011: it was AED 780 chargeable, it is now covered by MC/2026/0001 with nothing to invoice.

Re-check Cover is refused on a job already invoiced (credit the invoice first) or written off.

Bill To

Every chargeable job needs somebody to bill. The system takes the contract's customer; with no contract, the building's **Owner (Bill To)**; failing that, the site's. When none is set the banner turns red and says so, and the job cannot be invoiced until you set **Bill To** on the Charging tab or an owner on the building or site.

Chargeable work and invoices

Contracts > Chargeable Work is the billing run. It opens on the To Invoice filter. Remove it to see what was invoiced and written off as well.

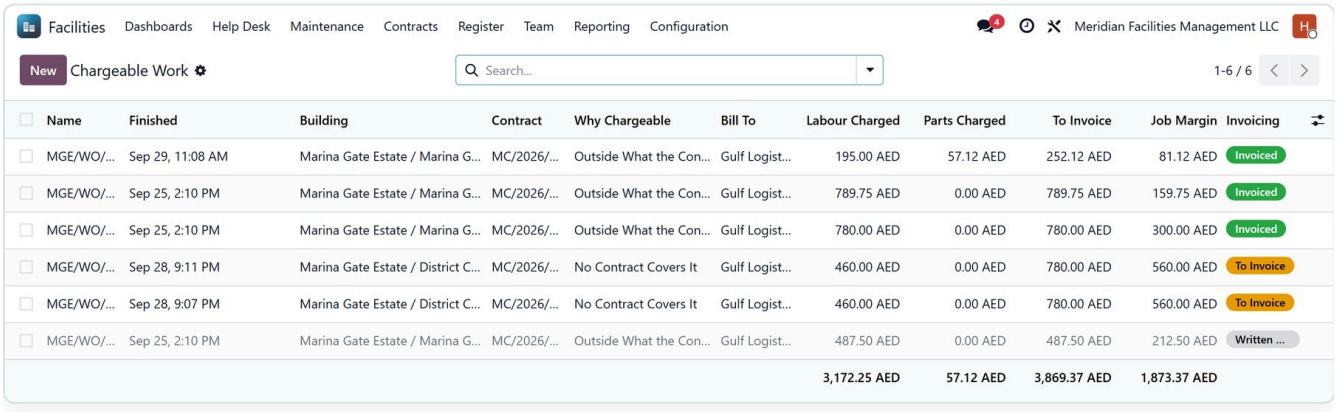


Figure 54. Finished chargeable work for Gulf Logistics FZE: three invoiced, two waiting, one written off.

1. Check the figures. Labour, parts and callout are priced from the rate card on each job.
2. Open a finished job and press **Invoice the Customer**, or tick several in the list and use the Actions menu.
   A draft customer invoice opens: quantity is the hours, the price is the rate, the job number and building are on the line.
3. Check it and press **Confirm** on the invoice.

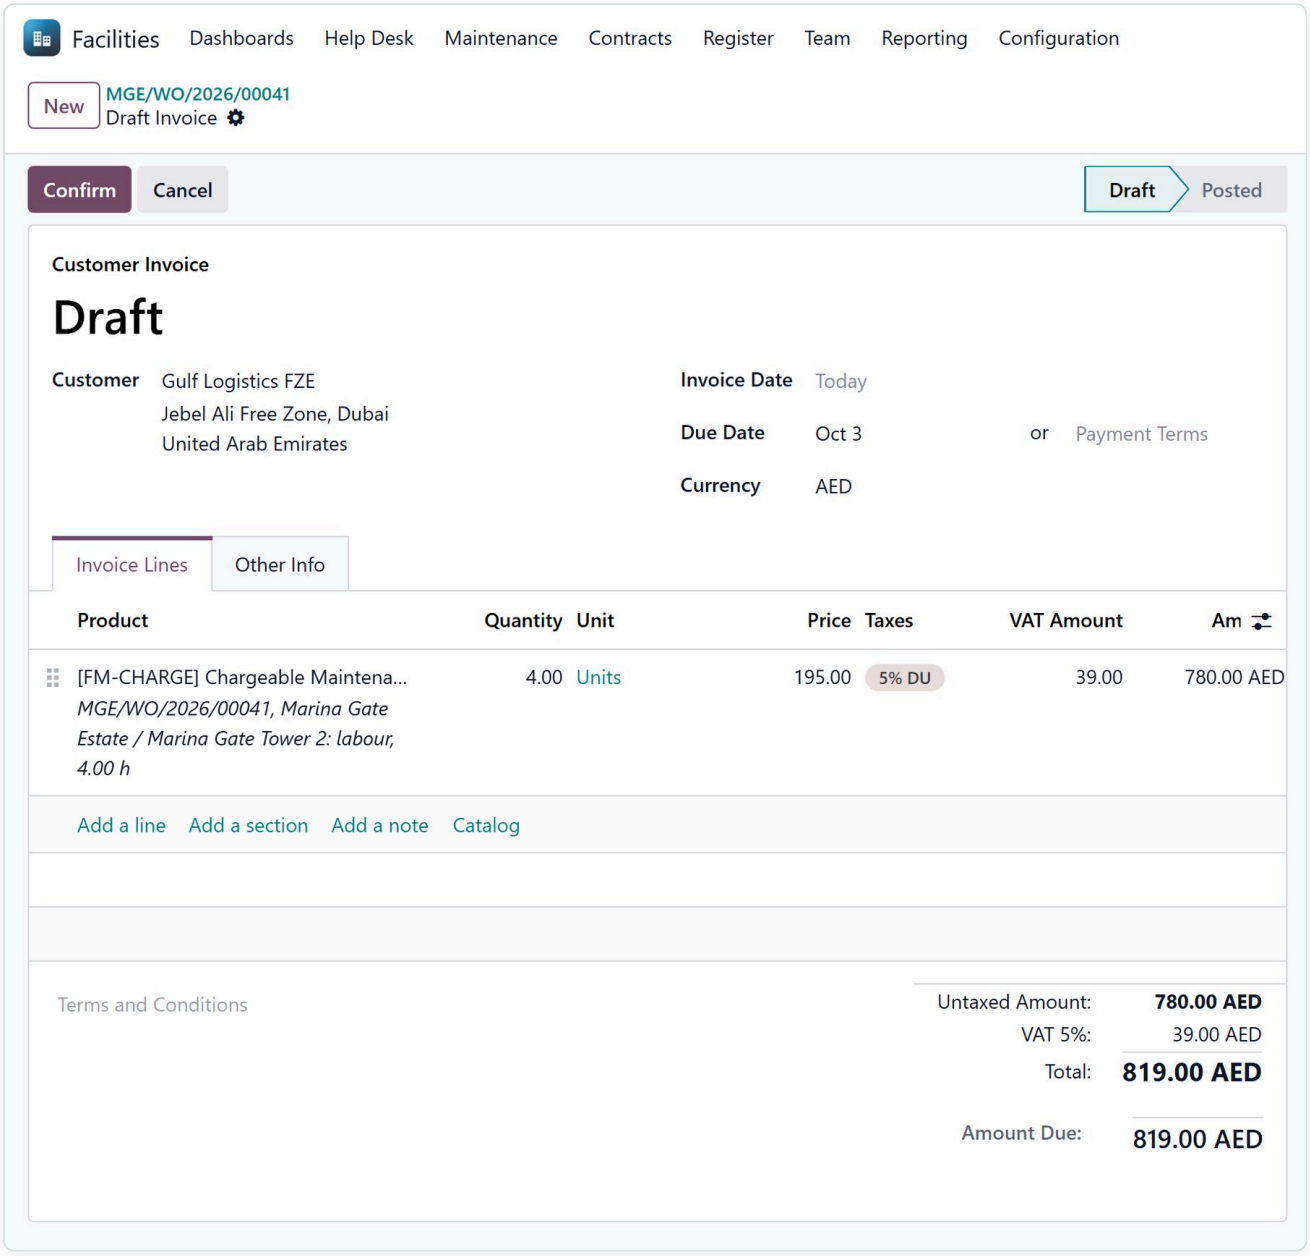


Figure 55. The draft invoice for job 00041: 4 hours at AED 195 plus VAT, AED 819.

Back on the job, a green banner says "Invoiced to Gulf Logistics FZE on" the invoice, and an Invoice button opens it. With **Invoice Chargeable Jobs Automatically** on in Settings, closing a chargeable job raises the invoice by itself.

Writing work off

Sometimes you decide not to bill: goodwill after a complaint, a disputed call, warranty rework. Do it properly, so the amount is still visible.

1. Open the finished job and press **Write It Off**, or select several jobs in Chargeable Work and use the Actions menu.
2. Check the **Being Written Off** amount and write **Why**. The reason is required.
3. Press **Write It Off**.
   The job's invoicing status becomes Written Off, a grey banner shows the amount and reason, and the chatter records who did it.

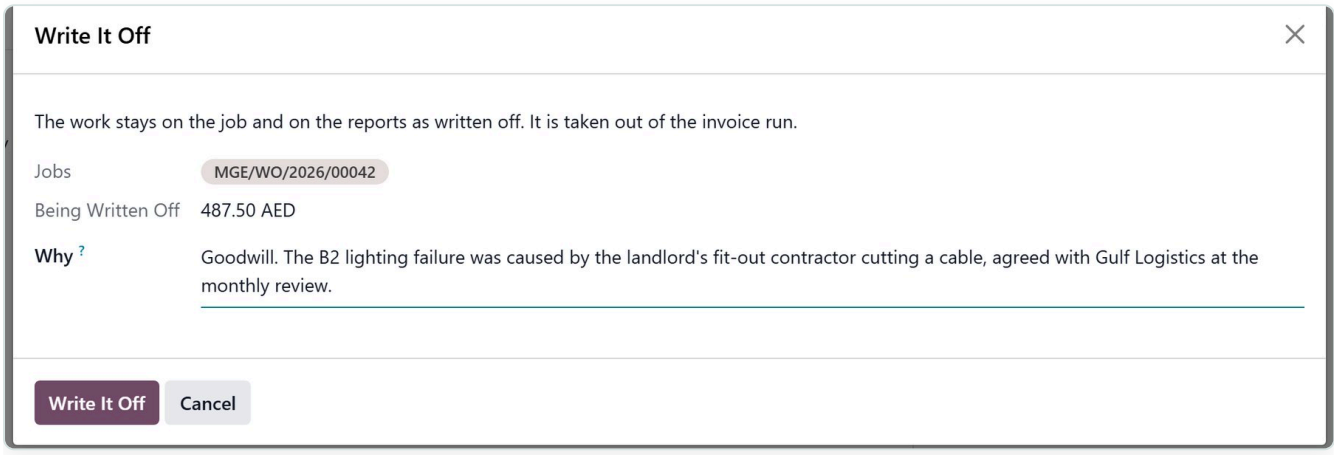


Figure 56. Writing off AED 487.50 of car park lighting work, agreed with the customer at the monthly review.

Written-off work stays on the reports. Use the Written Off filter in Chargeable Work, and watch the Written off card on the Contracts and Billing board.

> WHY IT MATTERS
>
> Most FM firms lose more money to chargeable work that was never billed than to anything else. The two habits that fix it: clear Chargeable Work every Friday, and never let anything vanish quietly. A write-off with a reason is a decision. A job nobody invoiced is a leak.

Service credits

Most FM contracts say what a missed SLA costs: a fixed sum per breach, or a percentage of the monthly charge, with a few breaches forgiven and a cap. The system works that out every month, with the workings, so both sides can see how the figure was reached.

Set the schedule on the contract

1. Open the contract and the **Service Credits** tab.
2. Add a line per rule: a **Name**, the **Priority** (or Any Priority), the **Breach** (Response Missed, Resolution Missed or Either) and the **Basis**: Fixed Amount per Breach with the amount, or Percent of the Period Charge per Breach with the percent.

3. Set **Allowed**: how many breaches a month are forgiven.
4. Set **Capped At (%)** of the period charge. Every real schedule has a cap.

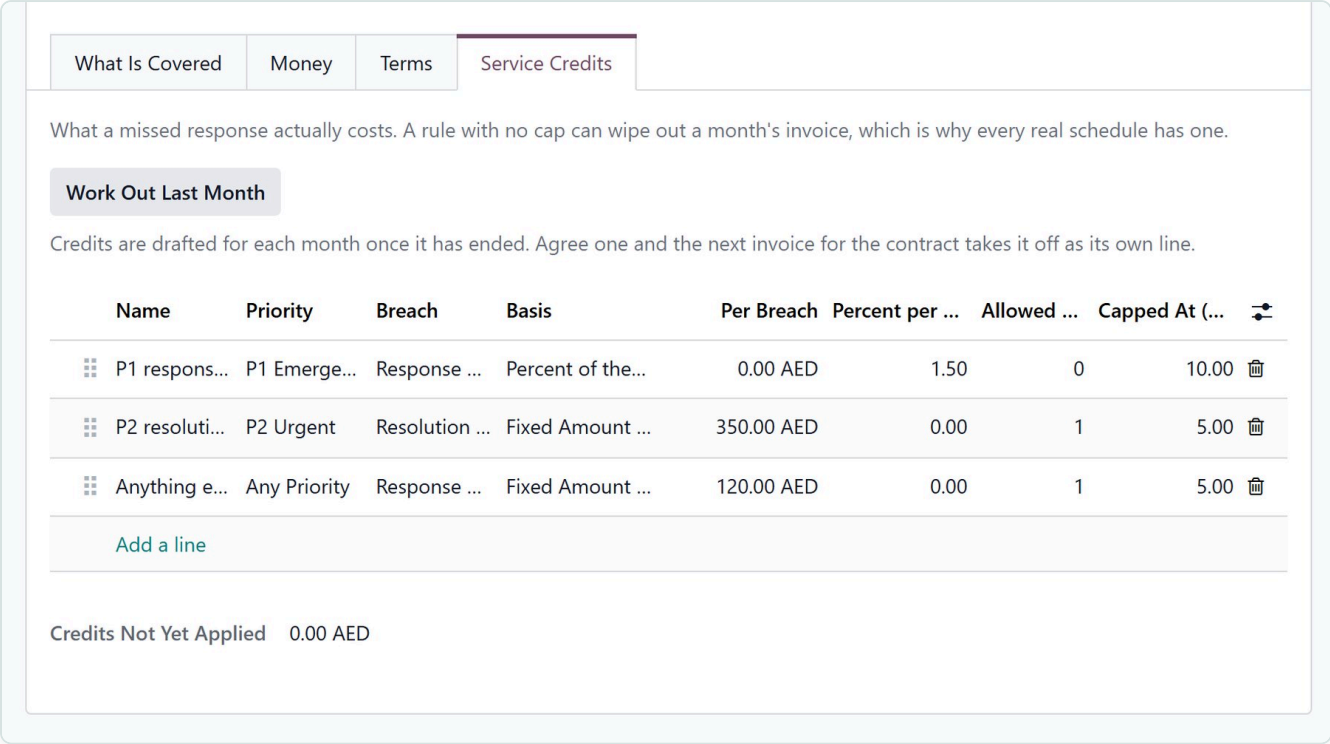


Figure 57. The credit schedule on MC/2026/0001: 1.5 percent per missed P1 response, AED 350 per missed P2 resolution after one free, AED 120 for anything else, each capped.

The monthly cycle

1. After each month ends, a draft credit is worked out for every contract by itself. To do it by hand, press **Work Out Last Month** on the contract, or use the same action in **Contracts > Service Credits**.
2. Open the draft. How the Month Went shows the jobs, misses and met percentages. **Period Charge** is a month's share of the annual value (annual divided by 12), whatever the invoicing cycle. The Workings tab has one row per rule.
3. If jobs were corrected since, press **Work It Out** to recalculate.
4. Press **Print the Statement** and take it to the monthly review with the customer.
5. When agreed, press **Agree the Credit**. If the customer lets it go, write the **Waive Reason** and press **Waive**.
6. The next contract invoice deducts every agreed credit as its own line, and the credit becomes **Applied** with a link to that invoice.


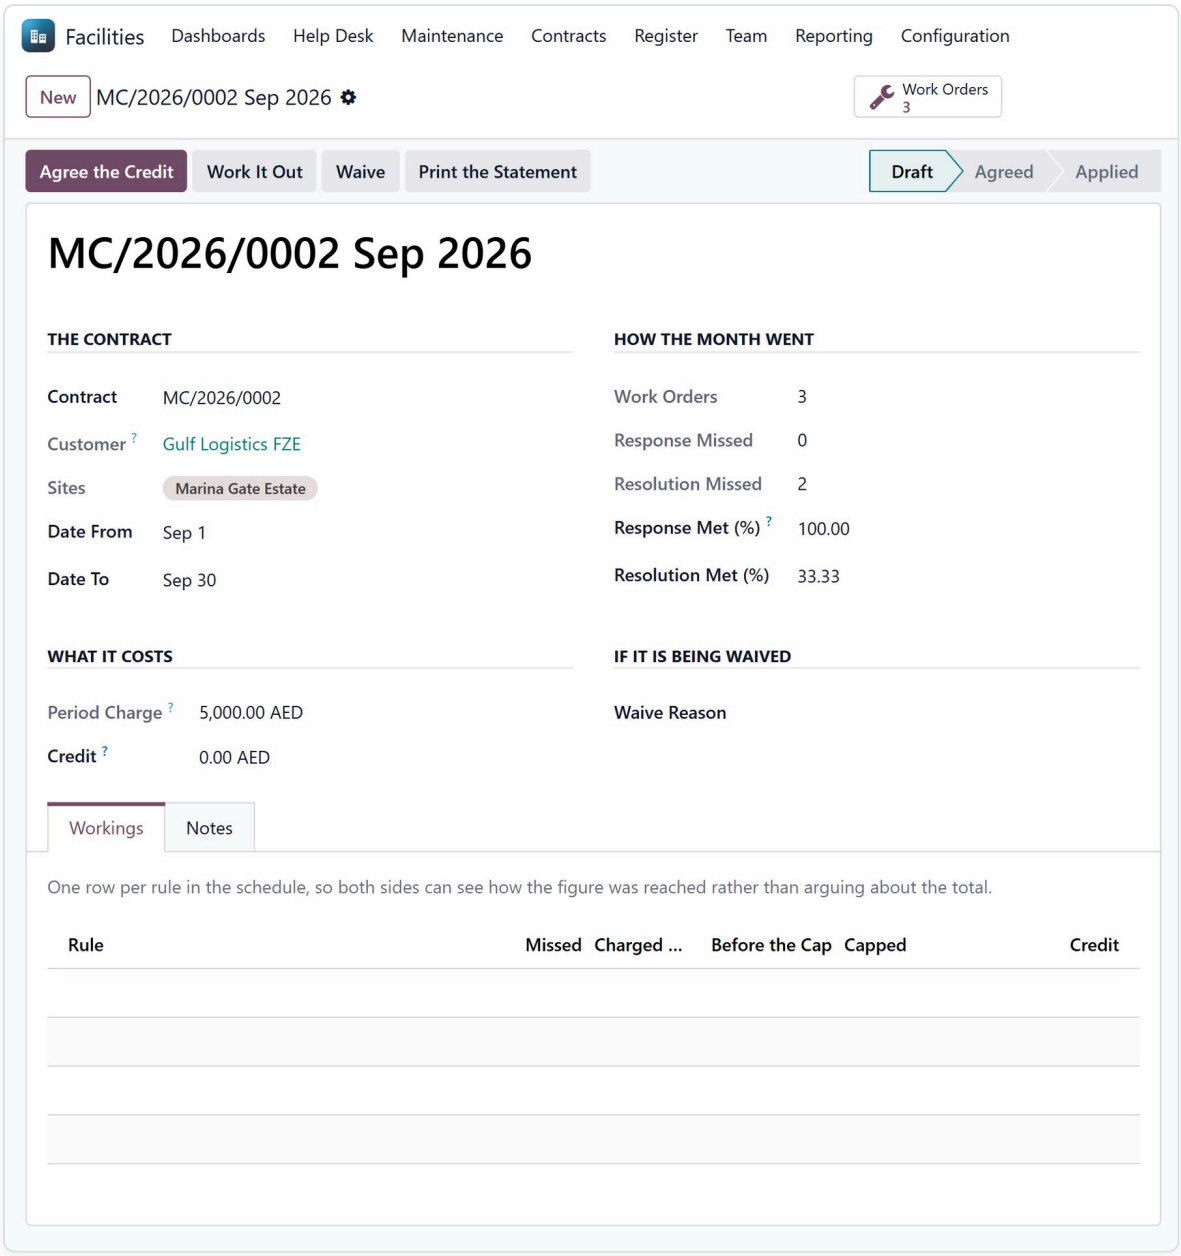


Figure 58. The September draft for Gulf Logistics: AED 60,000 a year gives a period charge of AED 5,000. The month's misses stayed inside the allowances, so the credit is nil.

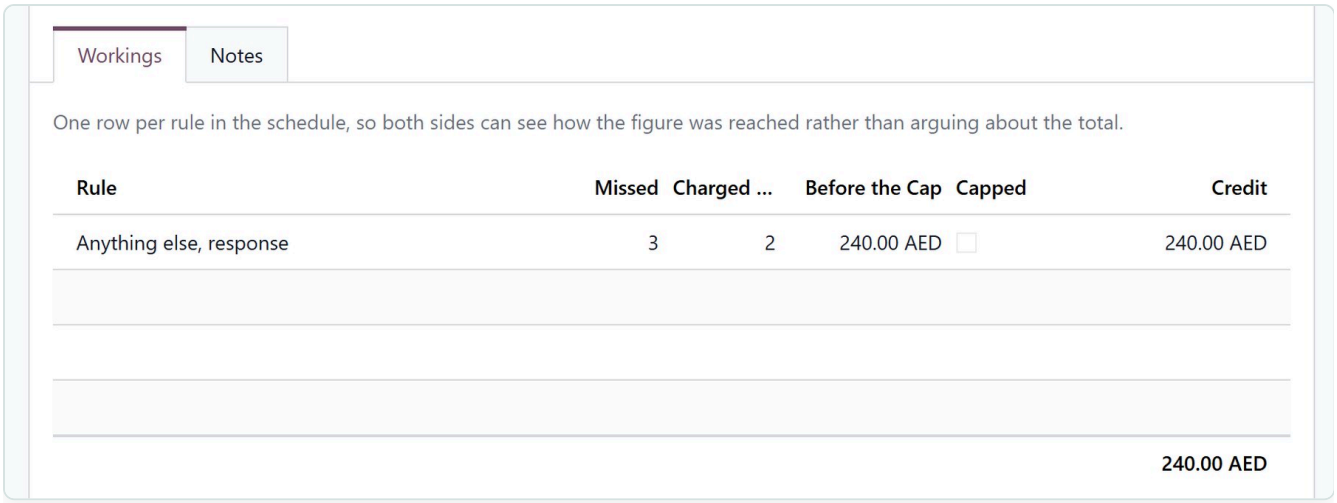


Workings | Notes

One row per rule in the schedule, so both sides can see how the figure was reached rather than arguing about the total.

Rule	Missed	Charged ...	Before the Cap	Capped	Credit
Anything else, response	3	2	240.00 AED	☐	240.00 AED
					240.00 AED

Figure 59. The August credit on MC/2026/0001, agreed: three responses missed under the "anything else" rule, one allowed, two charged at AED 120, AED 240 off the next invoice.

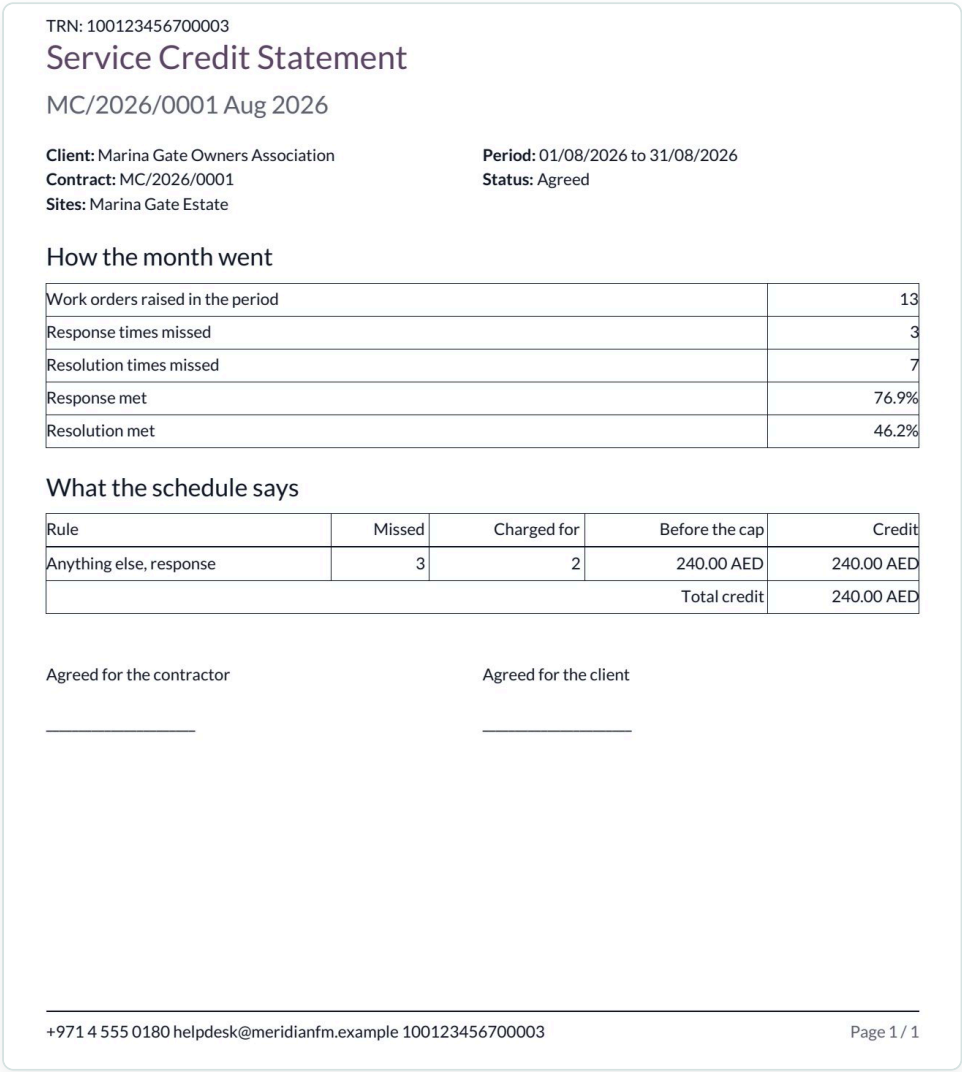

TRN: 100123456700003

Service Credit Statement

MC/2026/0001 Aug 2026

Client: Marina Gate Owners Association
Contract: MC/2026/0001
Sites: Marina Gate Estate

Period: 01/08/2026 to 31/08/2026
Status: Agreed

How the month went

Work orders raised in the period	13
Response times missed	3
Resolution times missed	7
Response met	76.9%
Resolution met	46.2%

What the schedule says

Rule	Missed	Charged for	Before the cap	Credit
Anything else, response	3	2	240.00 AED	240.00 AED
			Total credit	240.00 AED

Agreed for the contractor _____

Agreed for the client _____

+971 4 555 0180 helpdesk@meridianfm.example 100123456700003 Page 1 / 1

Figure 60. The Service Credit Statement, with signature lines for both sides.

The Credits Not Yet Applied figure on the contract shows what is agreed and still to come off.

Cost budgets

A cost budget is your own budget for running an estate: hours, parts and subcontractors. It is not what the customer pays. Open **Contracts > Cost Budgets**.

1. Press **New**. Name it, pick the **Site** and the dates of the year.
2. Add a line per building or per asset class with the agreed figure. Press **Fill from Last Year** to start from what actually happened.
3. Press **Agree the Budget**. The figures lock; Spent fills in from job cost as work is done.
4. At year end press **Close the Year**. **Reopen** unlocks it if a line has to change.

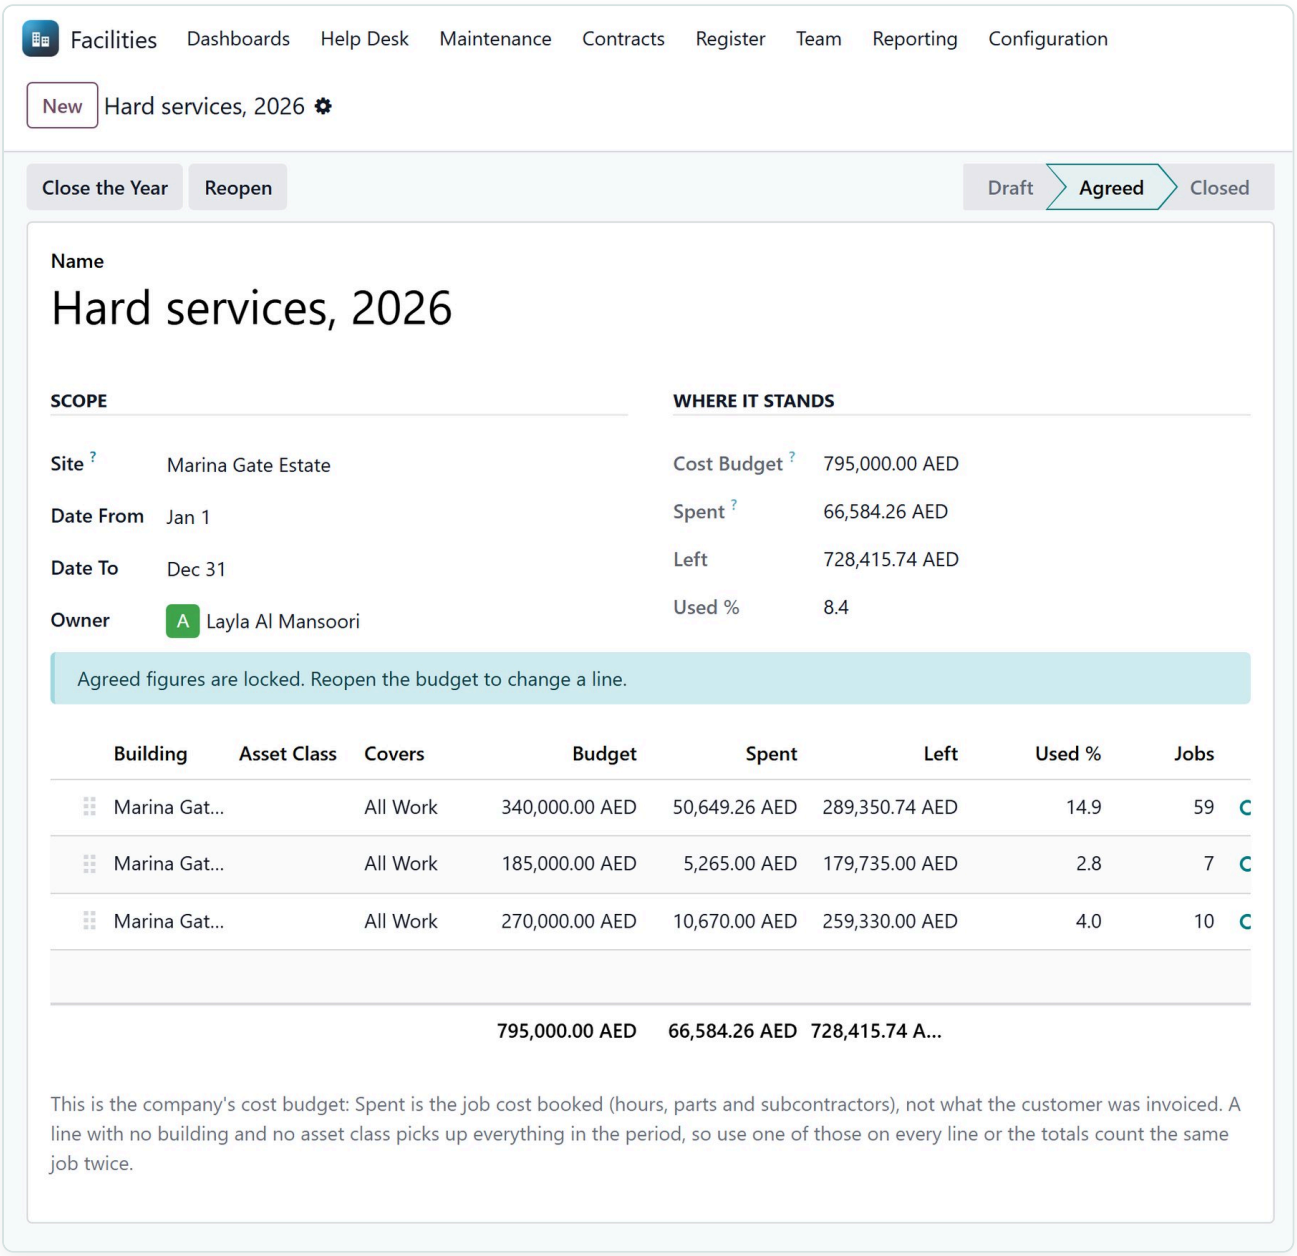


Figure 61. Hard services 2026 at Marina Gate: AED 795,000 budget, 8.4 percent used.

> **TIP**
>
> Put a building or an asset class on every line. A line with neither picks up all the spend in the period, and the total then counts the same job twice. The magnifying glass at the end of a line opens the jobs behind its figure.

Cost per building and analytic accounts

Reporting > Cost per Building lists each building with jobs and spend this year and cost per square metre. Each contract gets an analytic account when put on cover, and sites and buildings can carry one too. Every job's cost lands on the right account (the Where the Cost Lands field, visible to users with Analytic Accounting rights), so your accountant can see contract and building profitability in the normal Odoo accounting reports.

CHAPTER 10

Dashboards and reports

One board per job, not one for everybody. Every figure opens the records behind it, because a number nobody can drill into is decoration.

Using the boards ENTERPRISE

Open **Dashboards** and pick a board. Two boxes at the top filter everything on it: **Site** (empty means all sites) and **Period** (this month, this quarter, this year and so on). Click any card to open the jobs, contracts or invoices behind it. Money figures show the change against the same span of the previous period; early in a period the comparison is left out, so nothing jumps by 100 percent on the first of the month. Each role sees only the cards it can open.

Estate Performance

For the facility manager and supervisors. The sections are in the order you should deal with them.

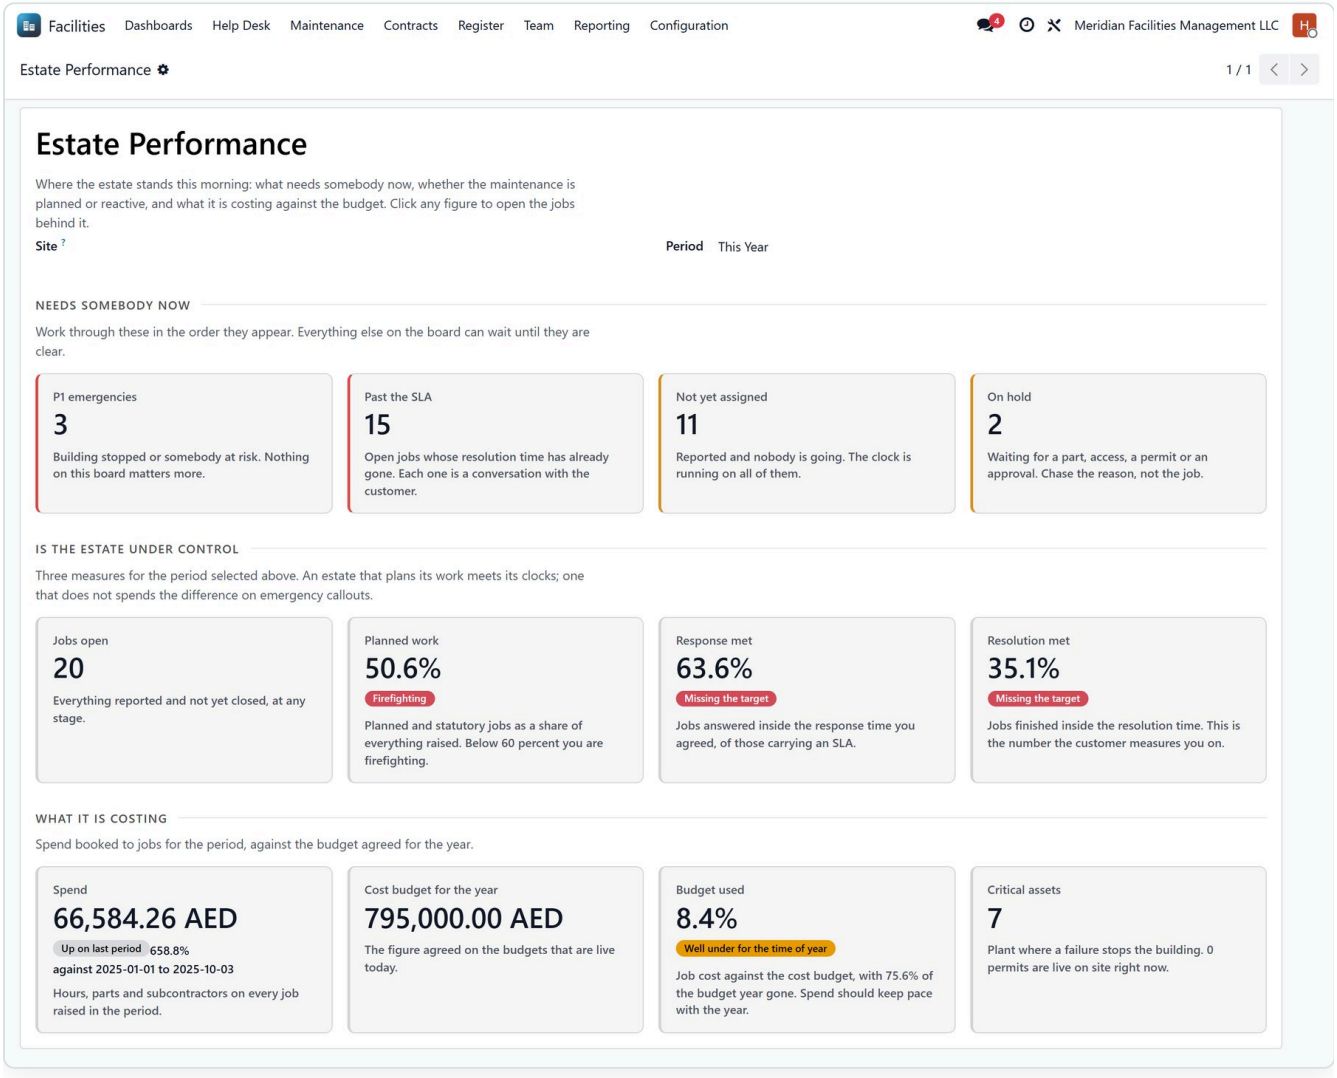


Figure 62. Estate Performance for Marina Gate this year. Planned work at 50.6 percent carries the Firefighting badge.

Card	What it counts
Needs somebody now	
P1 emergencies	Open P1 jobs: building stopped or somebody at risk.
Past the SLA	Open jobs whose resolution time has gone. Each one is a conversation with the customer.
Not yet assigned	Reported and nobody going. The clock is running on all of them.
On hold	Waiting for a part, access, a permit or an approval. Chase the reason, not the job.
Is the estate under control	
Jobs open	Everything reported and not yet closed.
Planned work	Planned and statutory jobs as a share of all jobs raised in the period. Below 60 percent shows Firefighting.
Response met	Jobs answered inside the response time, of those carrying an SLA.
Resolution met	Jobs finished inside the resolution time. The number the customer measures you on.
What it is costing	
Spend	Hours, parts and subcontractors on every job raised in the period, with the trend.
Cost budget for the year	The total of the agreed cost budgets live today.
Budget used	Spend against the budget, judged against how much of the year has gone.
Critical assets	Plant where a failure stops the building, and how many permits are live on site now.

Contracts and Billing

For the contract manager and finance.

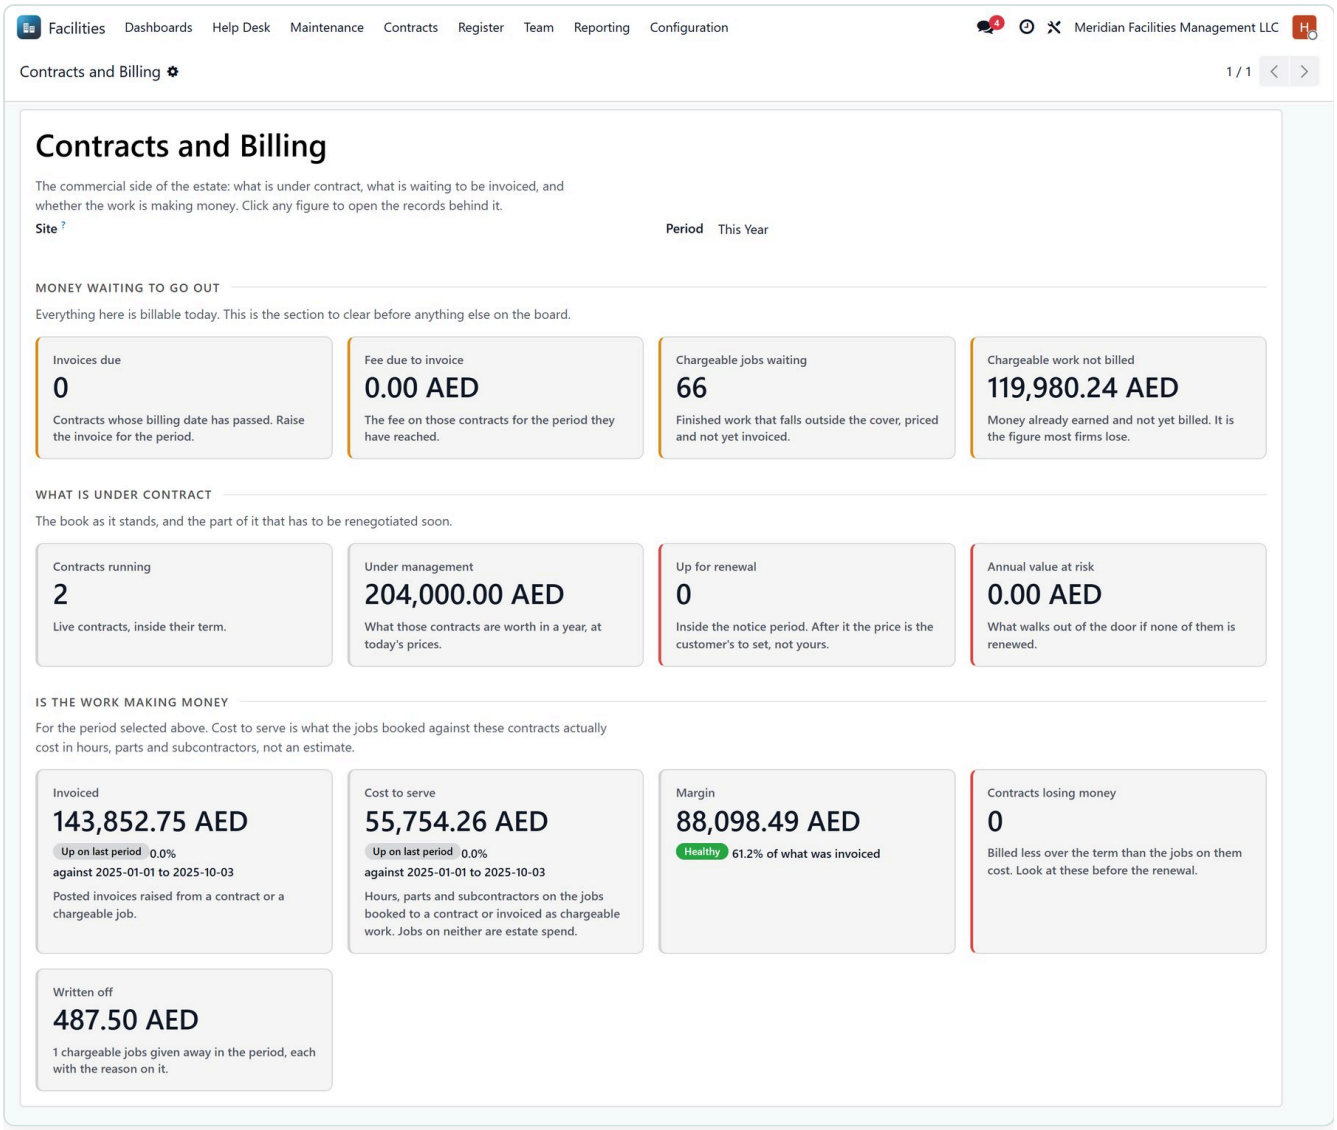


Figure 63. Contracts and Billing. The first row is money already earned and not yet billed.

Card	What it counts
Money waiting to go out	
Invoices due	Contracts whose billing date has passed.
Fee due to invoice	The fee on those contracts for the periods they have reached.
Chargeable jobs waiting	Jobs outside the cover, priced and not yet invoiced.
Chargeable work not billed	The value of those jobs.
What is under contract	
Contracts running	Live contracts inside their term.
Under management	What they are worth in a year at today's prices.
Up for renewal	Contracts inside their notice period.
Annual value at risk	What walks out if none of them is renewed.

Card	What it counts
Is the work making money	
Invoiced	Posted invoices from contracts and chargeable jobs in the period, with the trend.
Cost to serve	Hours, parts and subcontractors on jobs booked to a contract or invoiced as chargeable work.
Margin	Invoiced less cost to serve, with a verdict badge.
Contracts losing money	Contracts that billed less over the term than their jobs cost.
Written off	Chargeable work given away in the period, each with its reason.

My Work

For the engineer, on a phone as well as a laptop. Overdue, due today, open jobs and jobs closed this month, with the hours booked this week. If it is empty, the user is not linked to a technician record yet.

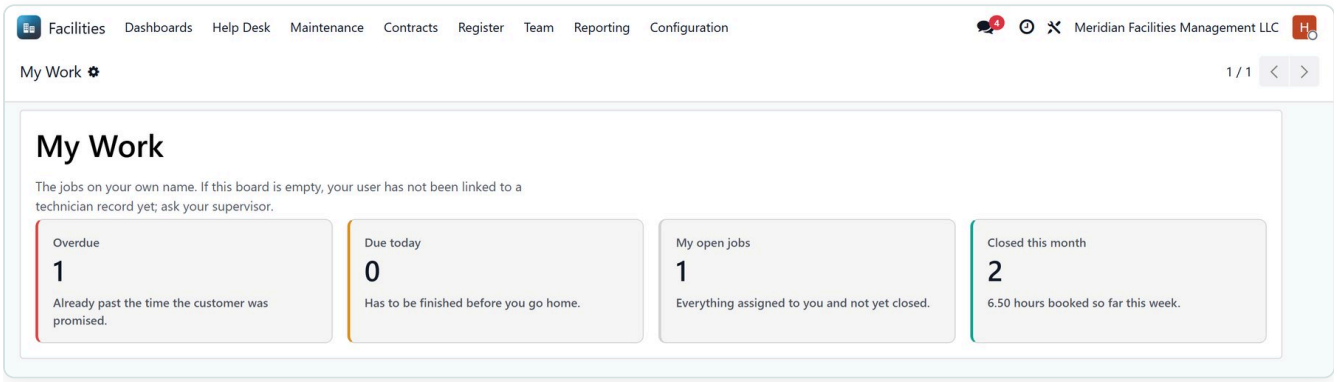



Figure 64. My Work for an engineer.

The reports

Reports live under **Reporting** and open as pivot tables. Use **Measures** to choose figures, click a header to break it down further, switch to graph or list with the buttons at the top right, and download to Excel with the download button.

SLA Performance

Jobs, Response Met (%) and Resolution Met (%), by contractor and priority. The percentages are worked out from the totals, so a total row is right even when the rows have different numbers of jobs.

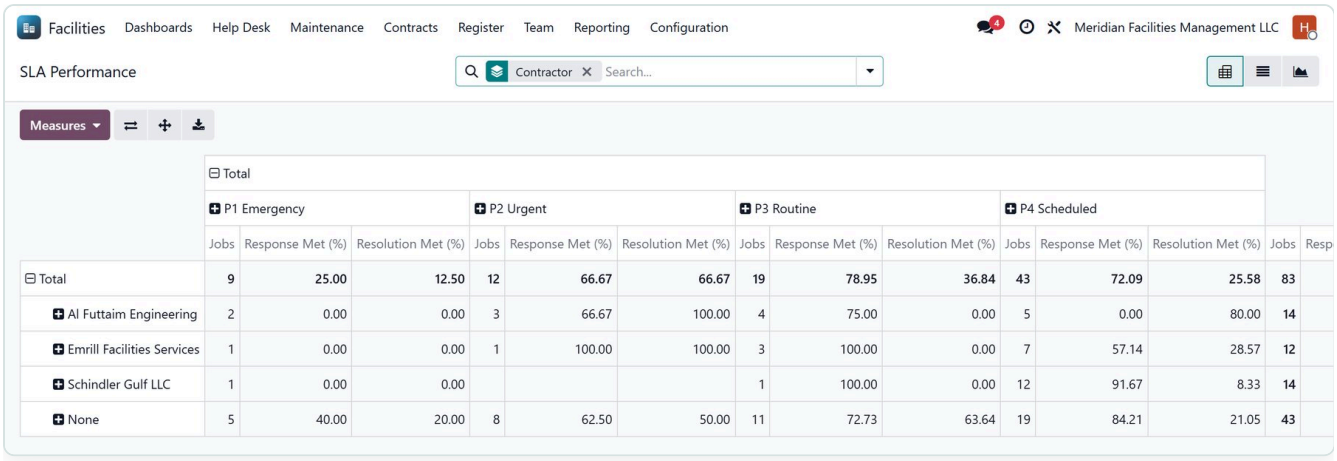


	Total			P1 Emergency			P2 Urgent			P3 Routine			P4 Scheduled			
	Jobs	Response Met (%)	Resolution Met (%)	Jobs	Response Met (%)	Resolution Met (%)	Jobs	Response Met (%)	Resolution Met (%)	Jobs	Response Met (%)	Resolution Met (%)	Jobs	Response Met (%)	Resolution Met (%)	Resp
Total	**9**	**25.00**	**12.50**	**12**	**66.67**	**66.67**	**19**	**78.95**	**36.84**	**43**	**72.09**	**25.58**	**83**			
Al Futtaim Engineering	2	0.00	0.00	3	66.67	100.00	4	75.00	0.00	5	0.00	80.00	**14**			
Emrill Facilities Services	1	0.00	0.00	1	100.00	100.00	3	100.00	0.00	7	57.14	28.57	**12**			
Schindler Gulf LLC	1	0.00	0.00				1	100.00	0.00	12	91.67	8.33	**14**			
None	5	40.00	20.00	8	62.50	50.00	11	72.73	63.64	19	84.21	21.05	**43**			

Figure 65. SLA Performance at Marina Gate by contractor and priority.

Planned Against Reactive

Jobs, Planned Jobs and Planned (%) by month and site. The graph view shows the mix as stacked bars.

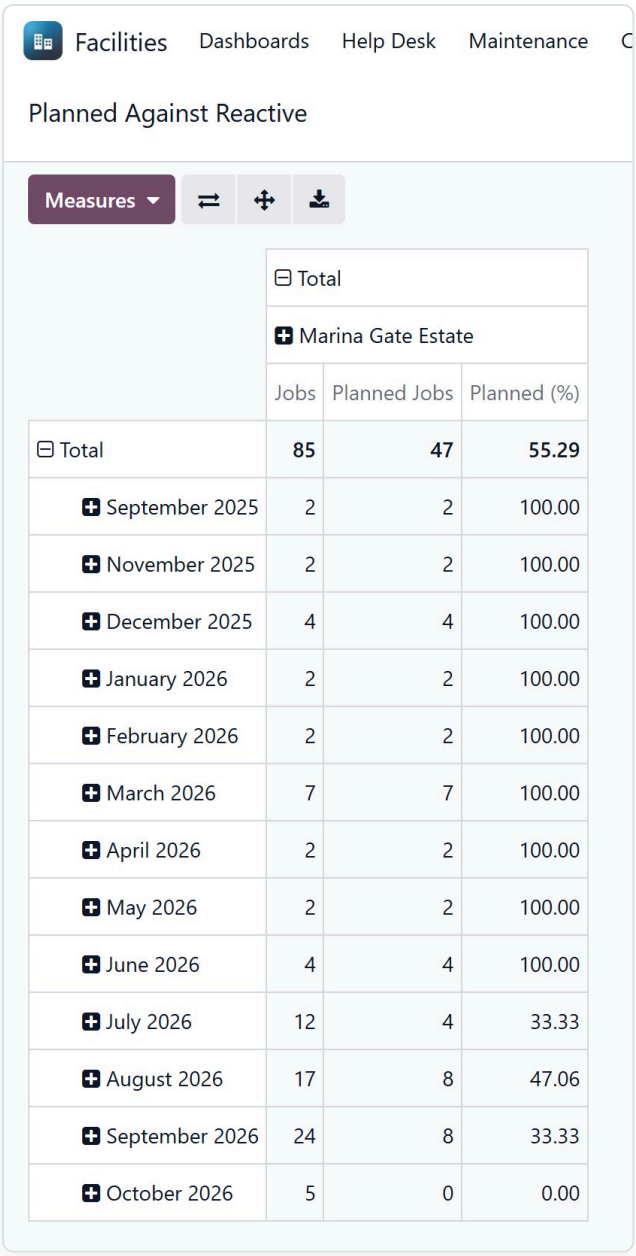


	Total		
	Marina Gate Estate		
	Jobs	Planned Jobs	Planned (%)
Total	**85**	**47**	**55.29**
September 2025	2	2	100.00
November 2025	2	2	100.00
December 2025	4	4	100.00
January 2026	2	2	100.00
February 2026	2	2	100.00
March 2026	7	7	100.00
April 2026	2	2	100.00
May 2026	2	2	100.00
June 2026	4	4	100.00
July 2026	12	4	33.33
August 2026	17	8	47.06
September 2026	24	8	33.33
October 2026	5	0	0.00

Figure 66. The work mix by month. July and September ran at about a third planned work; that is the conversation for the next quarterly review.

Asset Lifetime Cost

Own Cost, Replacement Value and Own Spend vs Replacement (%) by asset class and asset. The evidence behind a replacement bid.

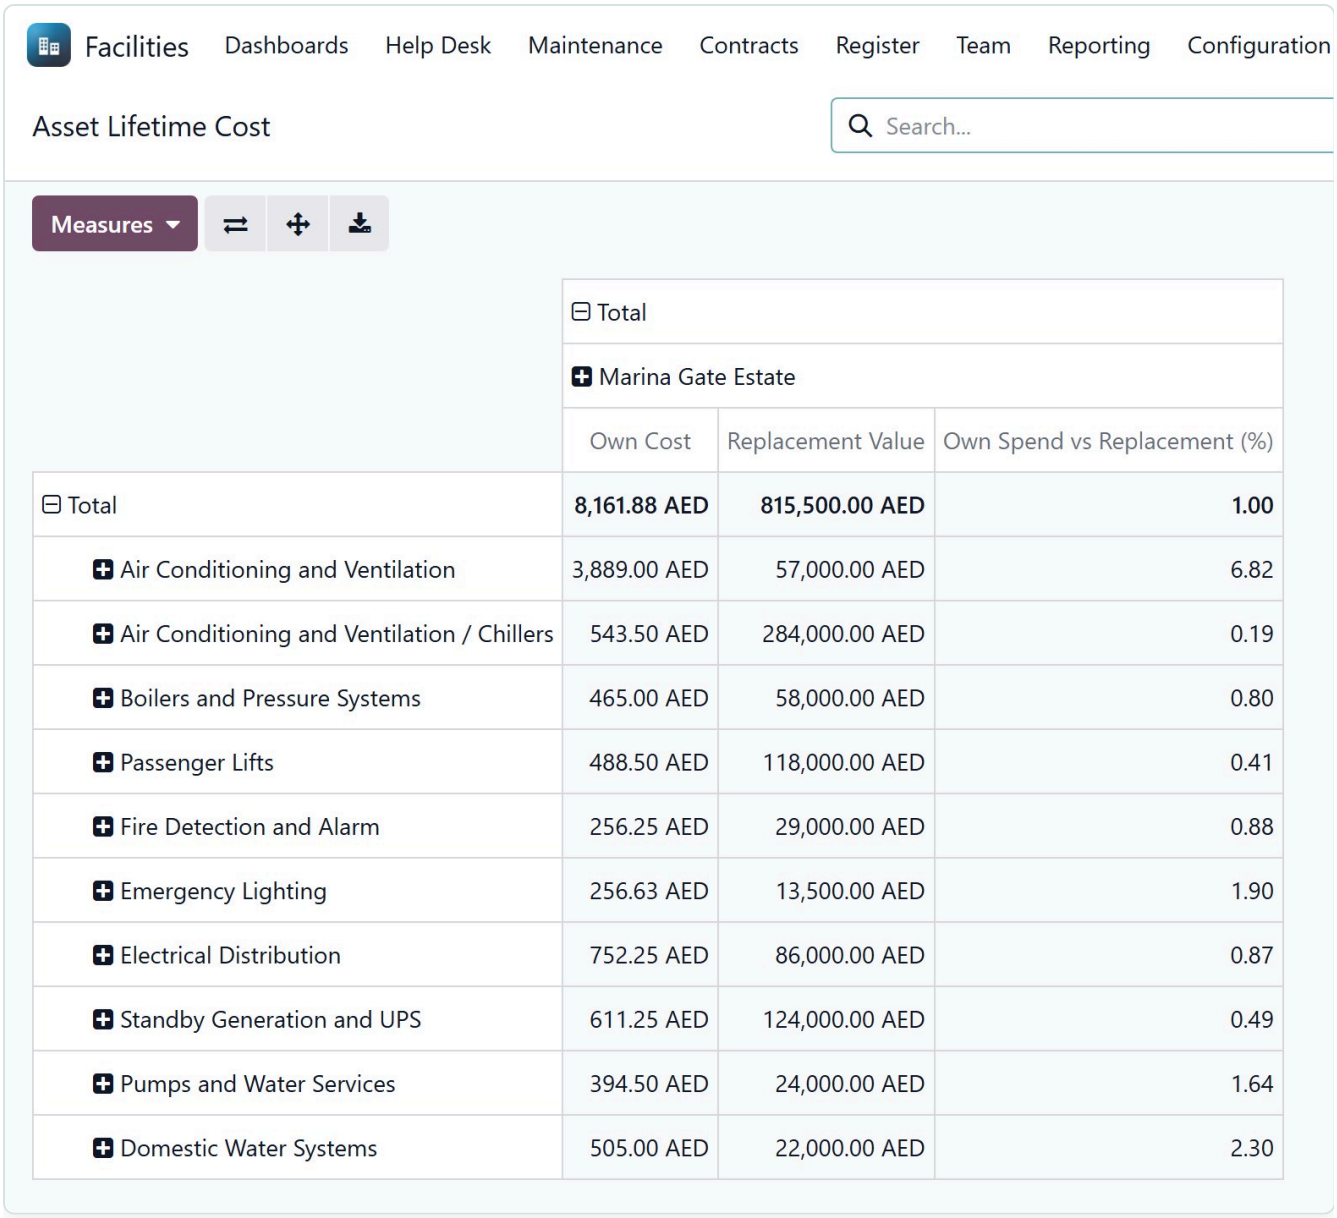


	Total		
	Marina Gate Estate		
	Own Cost	Replacement Value	Own Spend vs Replacement (%)
Total	**8,161.88 AED**	**815,500.00 AED**	**1.00**
Air Conditioning and Ventilation	3,889.00 AED	57,000.00 AED	6.82
Air Conditioning and Ventilation / Chillers	543.50 AED	284,000.00 AED	0.19
Boilers and Pressure Systems	465.00 AED	58,000.00 AED	0.80
Passenger Lifts	488.50 AED	118,000.00 AED	0.41
Fire Detection and Alarm	256.25 AED	29,000.00 AED	0.88
Emergency Lighting	256.63 AED	13,500.00 AED	1.90
Electrical Distribution	752.25 AED	86,000.00 AED	0.87
Standby Generation and UPS	611.25 AED	124,000.00 AED	0.49
Pumps and Water Services	394.50 AED	24,000.00 AED	1.64
Domestic Water Systems	505.00 AED	22,000.00 AED	2.30

Figure 67. Lifetime cost by asset class.

Contract Profitability ENTERPRISE

Annual Value, Invoiced, Cost to Serve and Margin by customer and contract.

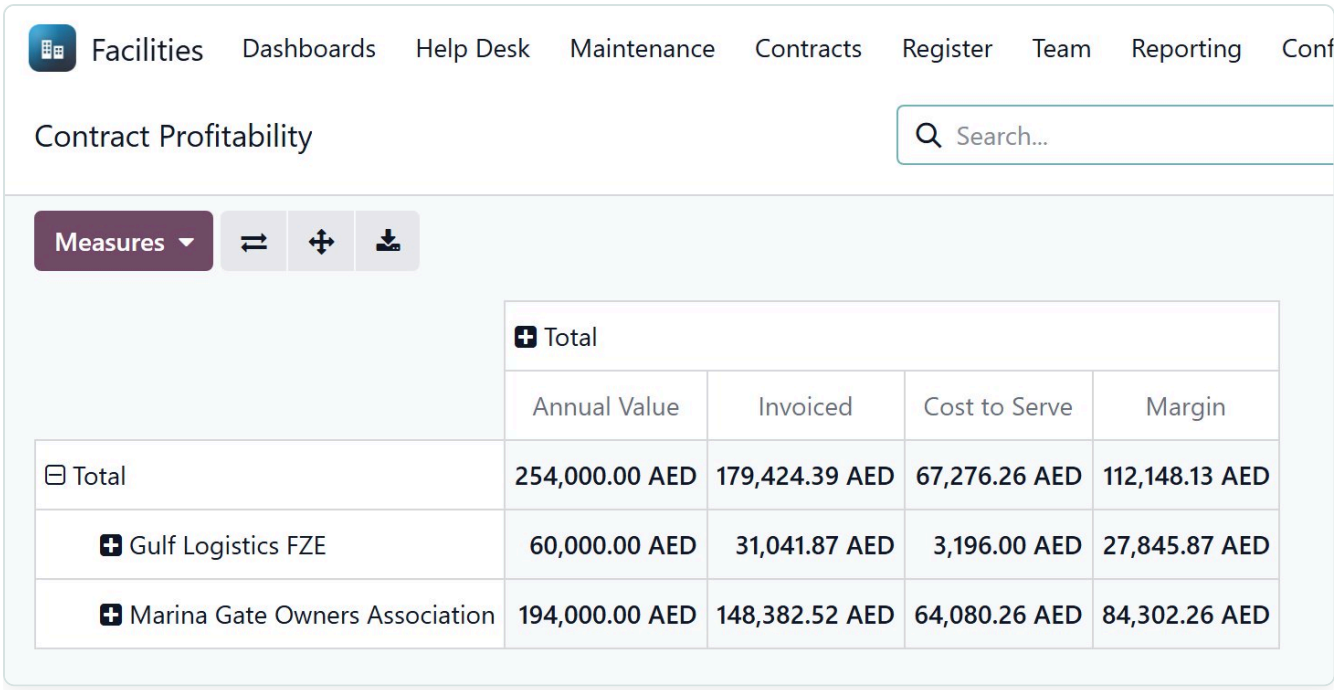


	Total			
	Annual Value	Invoiced	Cost to Serve	Margin
Total	254,000.00 AED	179,424.39 AED	67,276.26 AED	112,148.13 AED
Gulf Logistics FZE	60,000.00 AED	31,041.87 AED	3,196.00 AED	27,845.87 AED
Marina Gate Owners Association	194,000.00 AED	148,382.52 AED	64,080.26 AED	84,302.26 AED

Figure 68. Contract Profitability by customer.

Job Margin ENTERPRISE

Job cost (parts and labour), what was charged and the margin, by origin and contract. Useful to see whether reactive callouts or planned visits make the money.

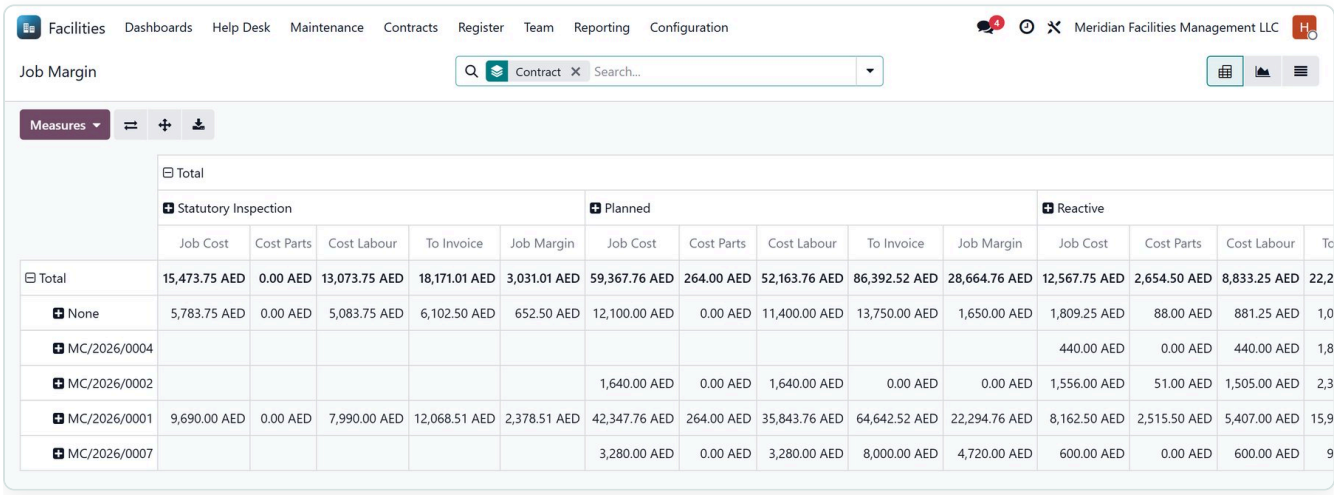


	Total					Statutory Inspection					Planned					Reactive			
	Job Cost	Cost Parts	Cost Labour	To Invoice	Job Margin	Job Cost	Cost Parts	Cost Labour	To Invoice	Job Margin	Job Cost	Cost Parts	Cost Labour	To Invoice	Job Margin	Job Cost	Cost Parts	Cost Labour	To
Total	15,473.75 AED	0.00 AED	13,073.75 AED	18,171.01 AED	3,031.01 AED	59,367.76 AED	264.00 AED	52,163.76 AED	86,392.52 AED	28,664.76 AED	12,567.75 AED	2,654.50 AED	8,833.25 AED	22,2					
None	5,783.75 AED	0.00 AED	5,083.75 AED	6,102.50 AED	652.50 AED	12,100.00 AED	0.00 AED	11,400.00 AED	13,750.00 AED	1,650.00 AED	1,809.25 AED	88.00 AED	881.25 AED	1,0					
MC/2026/0004											440.00 AED	0.00 AED	440.00 AED	1,8					
MC/2026/0002						1,640.00 AED	0.00 AED	1,640.00 AED	0.00 AED	0.00 AED	1,556.00 AED	51.00 AED	1,505.00 AED	2,3					
MC/2026/0001	9,690.00 AED	0.00 AED	7,990.00 AED	12,068.51 AED	2,378.51 AED	42,347.76 AED	264.00 AED	35,843.76 AED	64,642.52 AED	22,294.76 AED	8,162.50 AED	2,515.50 AED	5,407.00 AED	15,9					
MC/2026/0007						3,280.00 AED	0.00 AED	3,280.00 AED	8,000.00 AED	4,720.00 AED	600.00 AED	0.00 AED	600.00 AED	9					

Figure 69. Job Margin by origin and contract.

Cost per Building ENTERPRISE

Jobs this year, spend this year and cost per square metre for each building.

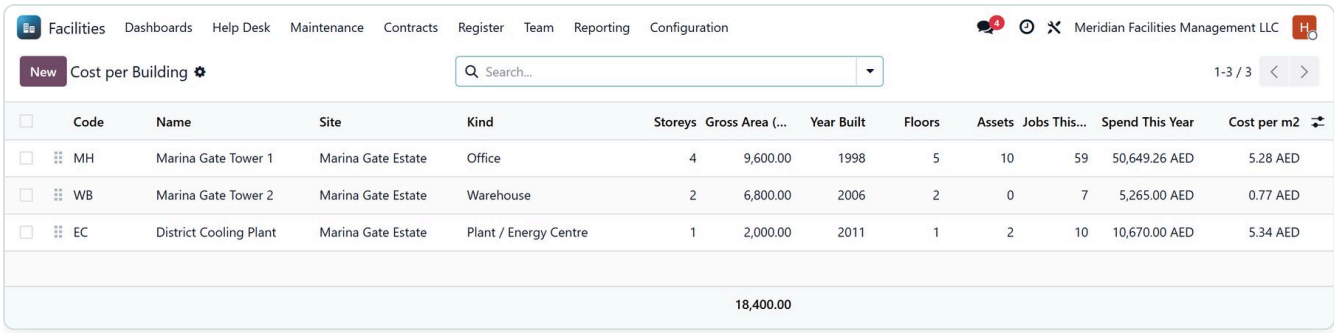

Code	Name	Site	Kind	Storeys	Gross Area (...	Year Built	Floors	Assets	Jobs This...	Spend This Year	Cost per m2
MH	Marina Gate Tower 1	Marina Gate Estate	Office	4	9,600.00	1998	5	10	59	50,649.26 AED	5.28 AED
WB	Marina Gate Tower 2	Marina Gate Estate	Warehouse	2	6,800.00	2006	2	0	7	5,265.00 AED	0.77 AED
EC	District Cooling Plant	Marina Gate Estate	Plant / Energy Centre	1	2,000.00	2011	1	2	10	10,670.00 AED	5.34 AED
					18,400.00						

Figure 70. Cost per Building. Tower 1 runs at AED 5.28 per square metre this year.

CHAPTER 11

Day to day

Once the estate is in, this is the whole job. Print the page for your role and keep it by the desk for the first month.

Help desk

- [ ] **Start of shift.** Open Help Desk, Work Orders, filter Not Assigned. Assign every one, P1 first.
- [ ] **Every call.** New job, real room and asset, caller's own words, name and extension. Save before you hang up so the clock starts.
- [ ] **Contractor jobs.** If Assign is refused, read the message: insurance, approval, site cover or skills. Pick another firm rather than overriding.
- [ ] **Through the day.** Watch Response Missed and the P1 and P2 filter. Phone the engineer before the clock runs out, not after.
- [ ] **On hold jobs.** Chase the reason in the hold note. A part due "tomorrow" three days ago is a call to the supplier.
- [ ] **End of shift.** No job left in Reported without a name on it.

Technician

- [ ] **Start of day.** Open Dashboards, My Work, or Help Desk, My Jobs. Overdue first, then due today.
- [ ] **On arrival.** Log Response, then Start Work. Permit work: no permit, no start.
- [ ] **Stopped.** Put on Hold with the real reason and a note. Resume when you go back.
- [ ] **Before you leave the job.** Parts added and issued, hours booked, Work Done written so the next engineer can use it, meter reading taken, customer name in Signed Off By.
- [ ] **Permits.** Hand back with a proper note before you complete.
- [ ] **Before you go home.** Every job you touched today has its hours on it.

Facility manager and supervisor

- [ ] **Every morning.** Estate Performance: P1s, Past the SLA, Not yet assigned, On hold, in that order.
- [ ] **Permits.** Issue only after you have seen the precautions on the ground. Check Permits to Work for anything expired and not handed back.
- [ ] **Weekly.** Close Off completed jobs. Look at Statutory Inspections due in the next month and book access.
- [ ] **Monthly.** Planned Against Reactive and SLA Performance by contractor. Approve or suspend contractors on the evidence.
- [ ] **Quarterly.** Asset Lifetime Cost: list the assets whose spend is climbing towards replacement value and start the capital conversation.

Contracts and billing ENTERPRISE

- [ ] **Every Friday.** Chargeable Work: check prices, invoice, or write off with a reason. Nothing left without a decision.
- [ ] **Start of each month.** Contracts and Billing board, Invoices due. Invoice the Period on each, or check the overnight run did it.
- [ ] **First week of the month.** Service Credits: open each draft, Work It Out if jobs changed, print the statement for the review, then Agree or Waive.
- [ ] **Monthly.** Renewals: every contract inside notice gets a decision and a renewal price. Cost budgets: Budget used against the year gone.
- [ ] **At renewal.** Renew, set the price, Put on Cover. It waits as Scheduled until its start.

Questions we are asked most

The Facilities icon is missing after I log in.

Your user has no Facility Management role yet. Ask the administrator to set one (chapter 2).

Assign says the technician is not ticketed for the job.

They are missing a skill on the job, or their card for it has expired. Pick somebody who holds it, or update their certificate expiry on the technician record.

A contractor cannot be assigned.

They are pending, suspended, inside the insurance grace period, or do not cover this site. The message says which. Fix it on the contractor record in Team, Contractors.

Start Work is refused.

It is permit work and no permit of the right type is issued and inside its window. The message names the problem. Raise or re-issue the permit.

I cannot issue the permit I raised.

That is by design. A second authorised person has to issue it.

Complete is refused.

The message lists what is missing: Work Done, parts not issued, a permit not handed back, or the certificate reference and condition on an inspection.

Planned jobs are not appearing.

The nightly run "Facility: raise planned maintenance" ships switched off. Ask the administrator to switch it on once the schedules are right. Use Raise the Job Now in the meantime.

The job says chargeable but the customer says it is covered. ENTERPRISE

Open the contract: check the cover lines include that building or asset, the ticks under Included in the Fee, and the dates. If the contract was changed after the job was raised, press Re-check Cover on the job.

A chargeable job shows a red banner and cannot be invoiced. ENTERPRISE

Nobody to bill. Set Bill To on the Charging tab, or an Owner (Bill To) on the building or site.

Chargeable work shows no price. ENTERPRISE

No rate card on the contract and no default in Settings. Set one, then Re-check Cover on the job.

Invoice the Period says nothing is due. ENTERPRISE

The next period has not started yet; the message gives the date. A Scheduled contract is never invoiced before its start date.

An SLA figure looks wrong for a job reported late in the day.

Check the service level's Cover, Cover Days and Time Zone. On cover hours only, the clock stops outside them.

Anything else: write to **info@way4tech.com** with the job or contract number and a screenshot.

Glossary

Asset

A piece of plant you maintain. Assets can sit under other assets.

Asset class

A family of plant that carries defaults: criticality, life, skills, meter, statutory interval.

Bill To

Who a chargeable job is invoiced to: the contract customer, otherwise the building or site owner.

Callout

The charge for attending, separate from the hours. Included in some contracts.

Chargeable

Work the contract fee does not pay for, so the customer is invoiced for it.

Contract (maintenance contract)

What the customer pays for: which sites, buildings or assets, what the fee includes and the annual value.

Cost budget

Your own annual budget for running an estate, compared with job cost.

Cost to serve

What the jobs on a contract actually cost you in hours, parts and subcontractors.

Cover hours

The hours and days an SLA clock runs on a Cover Hours Only service level.

Criticality

What a failure of the asset does to the building. Sets the default priority.

Escalate To

The person told when a job on a service level breaches.

Hand back (permit)

Closing a permit once the area is made good, with a note.

Hand Back (job)

Returning an assigned or held job to the help desk without a name on it.

Lifetime cost

Everything an asset and its sub-assets have cost since installation.

Margin

What was invoiced less the cost to serve.

Permit to work

The written authorisation for dangerous work, issued by a second person for a set window.

Planned (PPM)

Work raised by a schedule rather than a fault.

Priority

P1 Emergency, P2 Urgent, P3 Routine, P4 Scheduled. Picks the service level.

Rate card

The prices charged to the customer for work outside the contract.

Reactive

Work raised because something failed.

Re-check Cover

Working out a job's contract and charge again against the contracts as they are now.

Scheduled (contract)

Signed and waiting for its start date. Not invoiced until then.

Service credit

The amount taken off the customer's invoice for missed SLAs, under the contract's schedule.

Service level (SLA)

The response and resolution times agreed for a priority.

Site, building, floor, room

The estate tree every job and asset hangs off.

Statutory inspection

An examination required by law or the insurer, proved by a certificate reference.

Stop the clock

A setting that adds time on hold to the resolution due time.

Written off

Chargeable work you decided not to bill, kept on record with its reason.