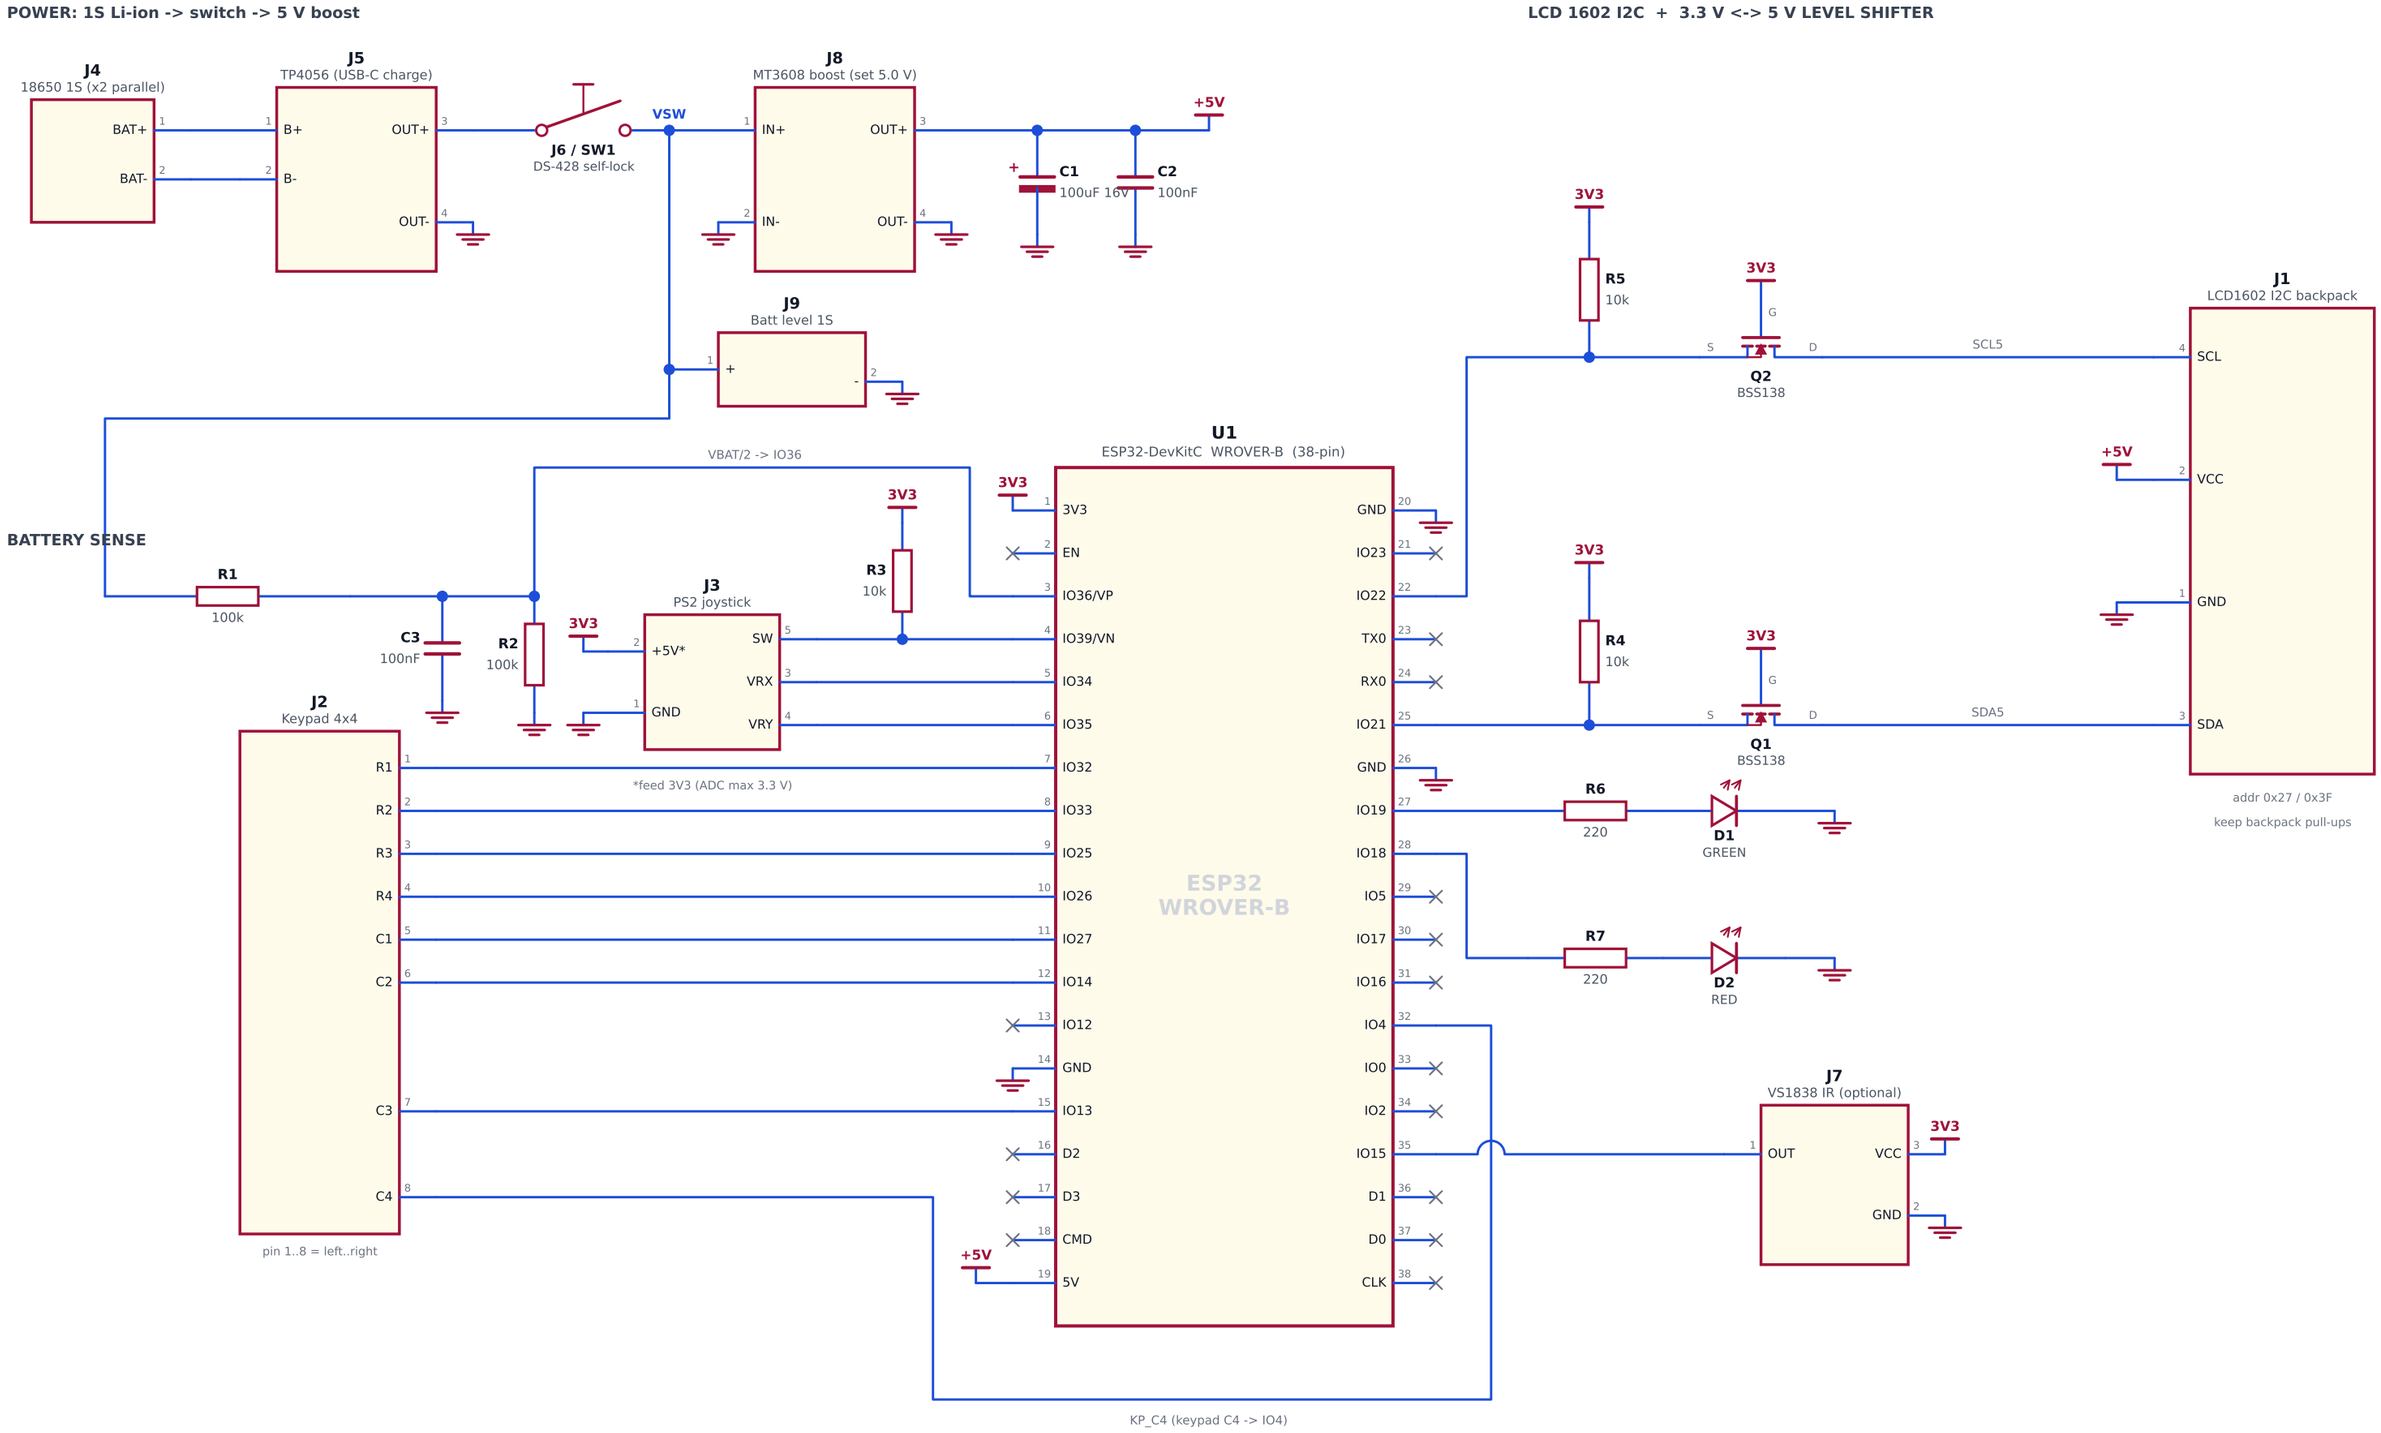


NOTES

1. Wires = signals. GND / +5V / 3V3 symbols with the same name are the same net. Dot = junction; hop = wires cross without connecting.

2. Keypad R1-R4 -> IO32, IO33, IO25, IO26 | C1-C4 -> IO27, IO14, IO13, IO4 | Joystick X/Y/SW -> IO34/IO35/IO39 | LCD SDA/SCL -> IO21/IO22 (via Q1/Q2).

3. Only ADC1 pins (IO32-39) are used for analog; ADC2 stops working while WiFi is on. IO0, IO2, IO12 (strapping) and IO16/17 (PSRAM) are unused.

4. 2x18650 in PARALLEL only (TP4056 = 1S charger). On a protected TP4056, B- (battery) and OUT- (GND) are different nets.

AutoXing Remote - Main Board (full schematic)

Rev 1.0 | 2026-09-28 | Sheet 1/1 | A3

PCB: AutoxingRemote.kicad_pcb (100 x 80 mm, 2 layers)

Nets checked against the PCB netlist