

Watoom

TRAKTOR PRO 4 PERFORMANCE SYSTEM

TRAKTOR KONTROL S3 + Korg padKONTROL

Complete beginner-to-performance user manual for the custom v18 mapping

How the two controllers work together

TRAKTOR KONTROL S3

- Browse + load tracks
- Play / Cue / Sync
- Jog / beatmatch
- 4-channel mixer
- Gain / EQ / faders
- Headphone cue
- Hotcues + normal loops
- Main transition control

Korg padKONTROL

- Scene 1: FX Unit 1
- Scene 2: FX Unit 2
- Scene 3: Loop Recorder
- Scene 4: Freeze / Stutter
- Scenes 5-6: Remix samples
- Scene 7: live layer mixer
- Scene 8: capture + latch/gate
- Knobs / X-Y performance

**S3 keeps the mix safe.
padKONTROL adds the performance layer.**

Mapping: Watoom-padKONTROL-S3-v18-SCENE8-LATCH-GATE-DW.tsi

Designed so a beginner can start with normal S3 DJ controls, then add FX, loops, samples, live capture, freeze/stutter and layer mixing one scene at a time.

0. How to use this manual

You do not need to learn all eight padKONTROL scenes at once. The fastest path is S3 basics -> Scene 1 FX -> Scene 3 Loop Recorder -> Scene 5 samples -> Scene 8 capture -> Scene 7 arrangement. Scene 4 Freeze and Scene 2 FX2 can be added when the core workflow feels natural.

Beginner rule If you ever become unsure what the padKONTROL is doing, stop touching it and continue the mix on the S3. The S3 remains the recovery surface for transport, EQ, levels and cueing.

Sections 1-12	Sections 13-23
1. System concept and responsibilities	13. Remix Deck preparation and sample behavior
2. Hardware setup and startup checklist	14. Working with the S3 and padKONTROL together
3. S3 essentials for a complete beginner	15. Beginner practice course
4. padKONTROL scenes, channels and saving	16. Song build example 1 - Psytrance live build
5. Scene 1 - FX Unit 1	17. Song build example 2 - Progressive live remix
6. Scene 2 - FX Unit 2	18. Performance recipes
7. Scene 3 - Loop Recorder	19. Troubleshooting
8. Scene 4 - Freeze / Stutter	20. Pre-gig validation checklist
9. Scene 5 - Live Sampler A	21. Quick reference
10. Scene 6 - Live Sampler B	22. Mapping status and technical notes
11. Scene 7 - Live Layer Mixer	23. Source manuals and terminology
12. Scene 8 - Capture + Latch/Gate	

1. System concept and responsibilities

How the two controllers work together

TRAKTOR KONTROL S3

- Browse + load tracks
- Play / Cue / Sync
- Jog / beatmatch
- 4-channel mixer
- Gain / EQ / faders
- Headphone cue
- Hotcues + normal loops
- Main transition control

Korg padKONTROL

- Scene 1: FX Unit 1
- Scene 2: FX Unit 2
- Scene 3: Loop Recorder
- Scene 4: Freeze / Stutter
- Scenes 5-6: Remix samples
- Scene 7: live layer mixer
- Scene 8: capture + latch/gate
- Knobs / X-Y performance

**S3 keeps the mix safe.
padKONTROL adds the performance
layer.**

The design deliberately separates reliable DJ work from experimental performance work. The S3 performs the tasks that must remain immediately available. The padKONTROL adds a scene-based performance layer without replacing normal S3 transport and mixing.

Controller	Primary responsibility	Use it for
TRAKTOR KONTROL S3	Core DJ surface	Browse/load, play/cue/sync, jog, tempo, channel gain/EQ/faders, headphone cue, normal hotcues and normal loops.
Korg padKONTROL	Performance companion	FX units, Loop Recorder, Freeze slices, Remix Deck sample cells, live capture, slot mute/retrigger/FX and gated performance.
Traktor Pro 4	Software engine	Decks A-D, Remix Deck C, Loop Recorder, FX Units 1-2, quantize, sample properties and audio routing.

Mental model Think of the S3 as the band mixer and decks. Think of the padKONTROL as the instrument and live-loop workstation.

2. Hardware setup and startup checklist

2.1 Physical setup

- Connect the S3 and select it as the Traktor audio device.
- Connect the padKONTROL by USB.
- Connect headphones to the S3 and verify cue monitoring.
- Connect speakers/main output to the S3.
- Open Traktor Pro 4 only after both controllers are connected when possible.


2.2 Controller Manager

- Keep the Native Instruments S3 mapping active.
- Import/select the custom v18 Generic MIDI mapping for the padKONTROL.
- Set the padKONTROL In-Port specifically to the Korg MIDI input rather than All Ports.
- Disable the In-Port of old experimental Generic MIDI mappings so one pad press cannot trigger duplicate commands.
- After importing a new TSI, restart Traktor if a scene appears completely inactive.

Before soundcheck Test S3 Play/Cue, Scene 1 Pad 1, Scene 3 Pad 1 and Scene 8 Knob 2 before relying on the system live.

3. S3 essentials for a complete beginner

S3 beginner map - what stays under your hands

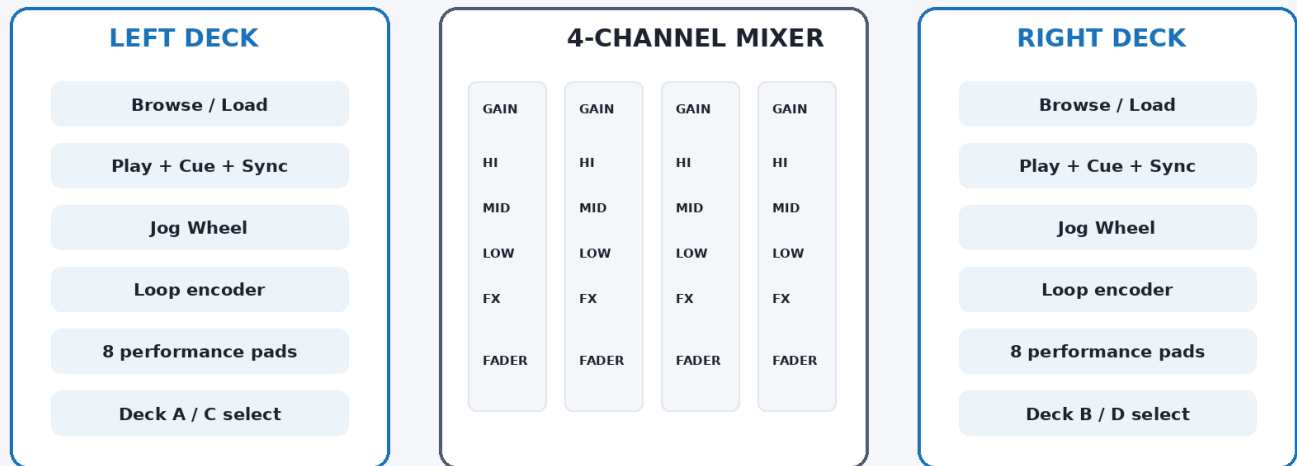

The official S3 design gives you two physical Deck sections that control four Traktor Decks: the left side controls A/C and the right side controls B/D. The center is a four-channel mixer. This manual assumes Decks A and B are your main tracks and Deck C is usually the Remix Deck.

3.1 Load and play a track

- Turn the BROWSE encoder to select a track.
- Press the BROWSE encoder on the desired deck to load it.
- Press Play/Pause to start playback.
- Use CUE to preview/start from the floating cue point when preparing a track.
- Use SYNC if you want the deck synchronized to the current Tempo Master, or use the jog and tempo fader to beatmatch manually.

3.2 Basic two-deck mix

- Play Deck A to the audience.
- Press Mixer CUE on Deck B and prepare Deck B in headphones.
- Match tempo/phase using SYNC or manual beatmatching.
- At a phrase boundary, start Deck B.
- Use EQ/filter and the channel faders to exchange bass, mids and highs cleanly.
- Finish the transition by lowering Deck A and removing any FX routing you added.

3.3 Hotcues, SAMPLES mode and loops

- HOTCUES mode on the S3 stores and triggers cue points and stored loops on Track/Stem Decks.
- SAMPLES mode is available when the selected Deck is a Remix Deck and controls Remix sample slots.
- The S3 LOOP encoder is the preferred control for routine track loops. The padKONTROL Loop Recorder is for recording a new loop of audio from a selected source.

Do not confuse these A Track Deck loop, a Remix Deck sample loop and the global Loop Recorder are three different things. The manual calls them out explicitly.

4. padKONTROL scenes, channels and saving

A padKONTROL scene stores the messages sent by the 16 pads, X-Y pad and two assignable knobs. Traktor does not know that you selected “Scene 7”; it simply receives the MIDI messages stored in that scene.

Scene	MIDI channel	Role
1	Ch10	FX Unit 1
2	Ch11	FX Unit 2
3	Ch12	Loop Recorder
4	Ch13	Freeze / Stutter
5	Ch14	Live Sampler A
6	Ch15	Live Sampler B
7	Ch16	Live Layer Mixer
8	Ch1	Capture + Latch/Gate

4.1 Recall a scene

- Hold SCENE and press Pad 1-8 for the scene you want.
- Release SCENE to return to Play mode.

4.2 Save a scene after changing its MIDI channel or controller assignments

- Make the edit in Setting mode and press SETTING/ENTER to apply it.
- Hold PROG CHANGE/WRITE/ALL PAD and press SCENE.
- Choose the destination scene with the matching scene pad (or the encoder).
- Press SETTING/ENTER to write the scene into user memory.

Why channels were reverting Applying an edit is not the same as writing the scene. If you switch scenes before saving, the padKONTROL recalls the previously stored version.


4.3 X-Y release and HOLD

- With HOLD off, the X-Y pad sends its configured Release Value when your finger leaves the pad.
- For CC-based X/Y mappings, Release Value 64 is approximately the MIDI midpoint (about 50%).
- With HOLD on, the padKONTROL retains the point where your finger left the X-Y pad instead of returning to the Release Value.

5. Scene 1 - FX Unit 1

Scene 1 - FX Unit 1

Ch10 - custom Traktor Pro 4 companion mapping

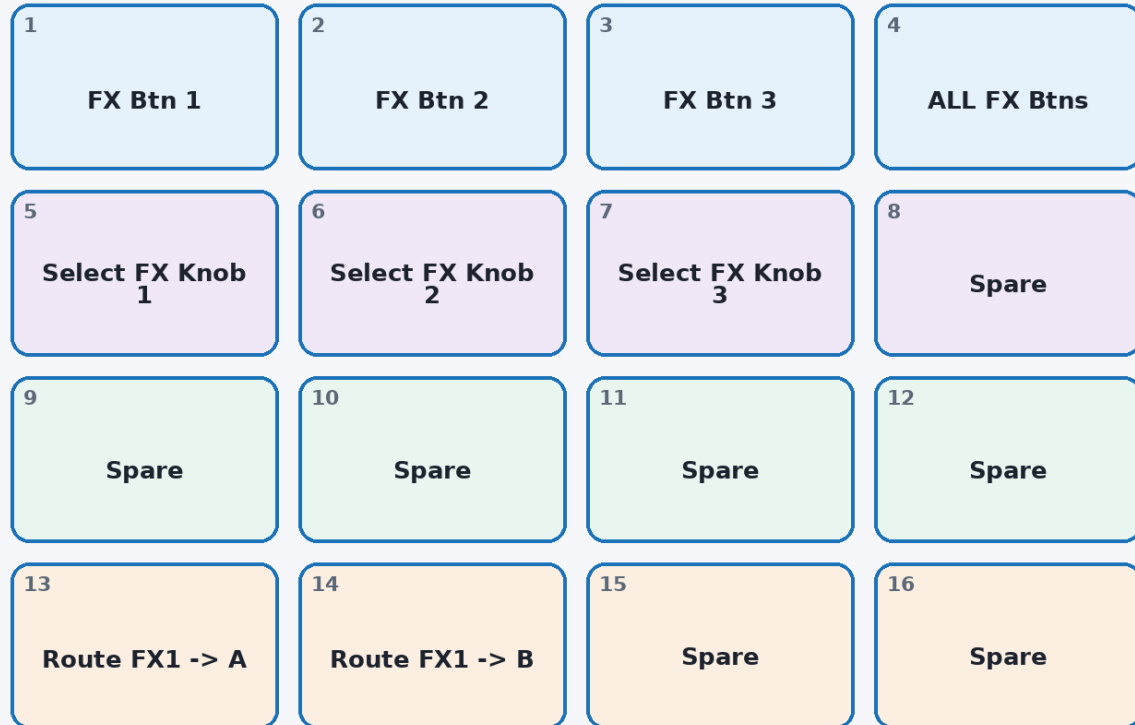

Pad numbers are physical padKONTROL pads. Scene changes alter the MIDI messages Traktor receives.

Control	Function
Pads 1-3	FX Buttons 1-3 toggle
Pad 4	Toggle FX Buttons 1+2+3 together
Pad 5 + Knob 1	Control FX Knob 1
Pad 6 + Knob 1	Control FX Knob 2
Pad 7 + Knob 1	Control FX Knob 3
Knob 2	FX Unit 1 Dry/Wet
X	FX Knob 1
Y	FX Knob 2
Pad 13	Route FX1 to Deck A
Pad 14	Route FX1 to Deck B


5.1 What this scene is for

Use Scene 1 when you want a dedicated performance surface for FX Unit 1 while the S3 continues handling the deck and mixer. Route the unit only to the deck you intend to process.

5.2 Basic FX workflow

- Choose Deck A or B as the target using Pad 13 or Pad 14.
- Select/prepare the desired effect(s) in FX Unit 1 in Traktor.
- Use Pads 1-3 to enable individual effect buttons.
- Use Pad 4 when you deliberately want to toggle all three effect buttons together.
- Use Knob 2 for Dry/Wet.
- Use X/Y and/or Pad 5-7 + Knob 1 to shape effect parameters.
- When the transition is complete, reduce Dry/Wet and unroute/disable the FX.

FX transition - outgoing track

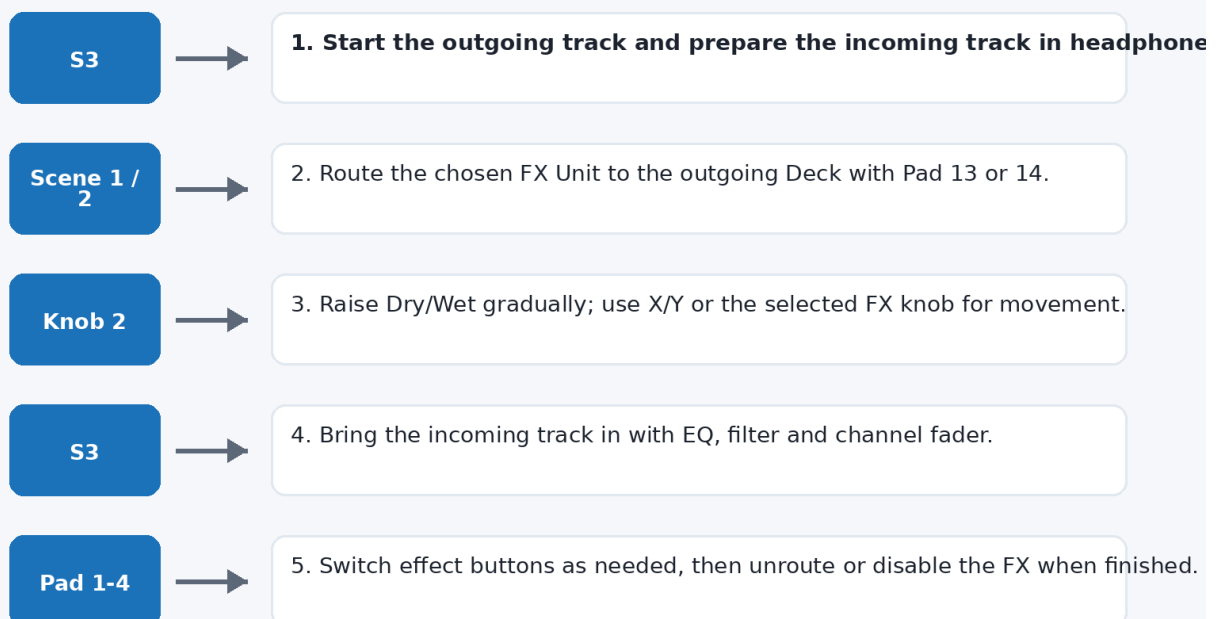


Example sequence: FX transition while the S3 handles the actual blend.

Pad 4 caveat Pad 4 toggles each of FX Buttons 1, 2 and 3. If they begin in mixed states it inverts each state; it does not guarantee “all on” or “all off”.

6. Scene 2 - FX Unit 2

Scene 2 - FX Unit 2

Ch11 - custom Traktor Pro 4 companion mapping

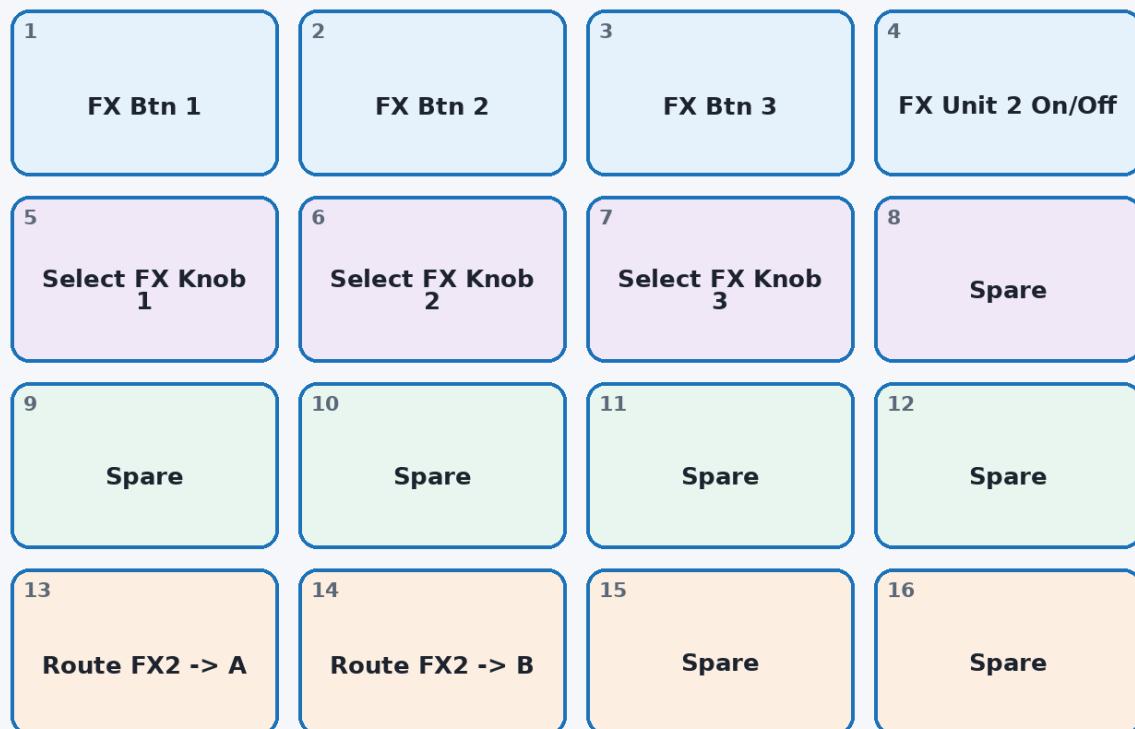

Pad numbers are physical padKONTROL pads. Scene changes alter the MIDI messages Traktor receives.

Control	Function
Pads 1-3	FX Buttons 1-3 toggle
Pad 4	FX Unit 2 On/Off
Pad 5/6/7 + Knob 1	Control FX Knobs 1/2/3
Knob 2	FX Unit 2 Dry/Wet
X	FX Knob 1
Y	Unused

Control	Function
Pad 13	Route FX2 to Deck A
Pad 14	Route FX2 to Deck B

Scene 2 mirrors the FX workflow but targets FX Unit 2. Use FX2 for a second effect chain, for the incoming deck, or to keep a different effect ready while FX1 is already busy.


6.1 Example - two-FX transition

- Scene 1: route FX1 to Deck A and prepare an echo/delay-type transition effect.
- Scene 2: route FX2 to Deck B and keep Dry/Wet low.
- Use the S3 to start Deck B on a phrase boundary.
- Raise FX1 on the outgoing Deck A while reducing its channel level/EQ.
- Use FX2 sparingly on Deck B for texture if desired.
- Disable/unroute both FX Units once the transition has landed.

7. Scene 3 - Loop Recorder

Scene 3 - Loop Recorder

Ch12 - custom Traktor Pro 4 companion mapping

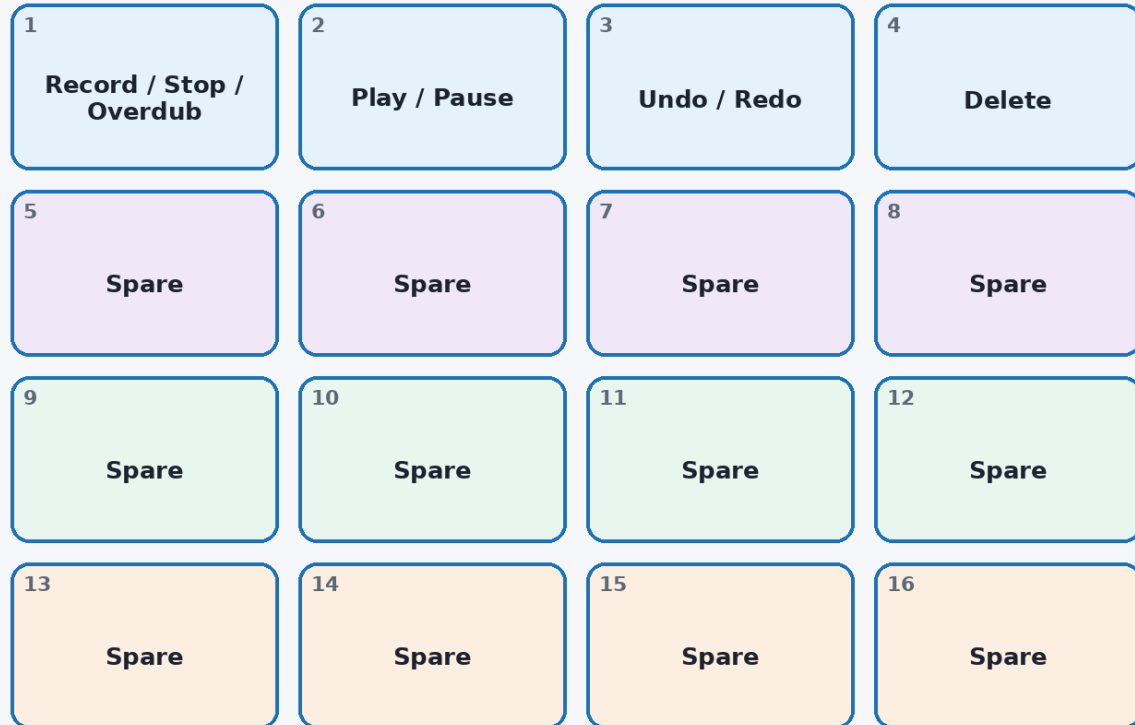


Pad numbers are physical padKONTROL pads. Scene changes alter the MIDI messages Traktor receives.

Control	Function
Pad 1	Record / Stop / Overdub
Pad 2	Play / Pause
Pad 3	Undo / Redo
Pad 4	Delete
X / Knob 1	Dry/Wet
Y / Knob 2	Loop Size

The Loop Recorder records audio from its selected source and can then play, overdub, undo/redo or delete that loop. The Record control starts/stops recording and overdubbing; the Play control starts/stops playback.

Record a clean Loop Recorder layer

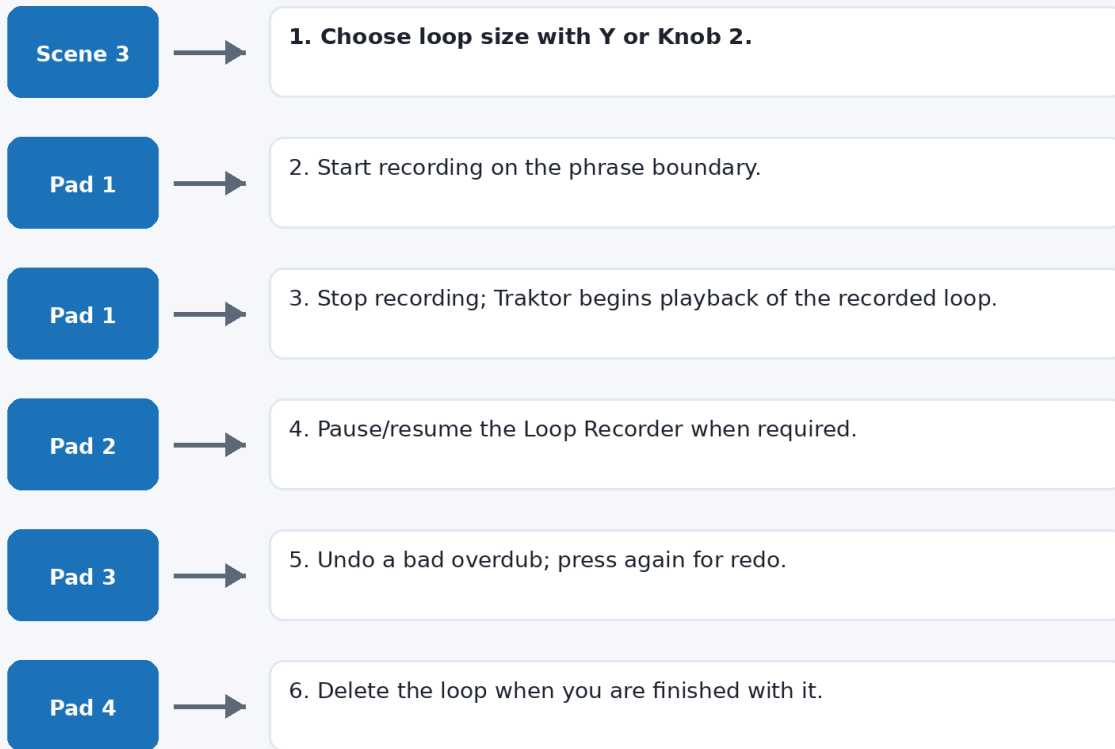

Important: Record does not automatically clear an old loop. Delete before recording a completely new layer if you do not want to overdub.

7.1 Make a new loop rather than overdubbing the old one

- If an old loop is present, press Delete first.
- Set the desired loop size.
- Press Record on the phrase boundary.
- Press Record again to finish the take.
- The recorded loop can begin playback automatically; use Play/Pause if you need silence.
- Overdub by pressing Record again while the loop exists.
- Undo/Redo restores or removes the most recent overdub.

Dry/Wet The Loop Recorder Dry/Wet controls the ratio between the main signal and the recorded loop. At high Wet values the loop becomes much more prominent.

8. Scene 4 - Freeze / Stutter

Scene 4 - Freeze / Stutter

Ch13 - custom Traktor Pro 4 companion mapping




Pad numbers are physical padKONTROL pads. Scene changes alter the MIDI messages Traktor receives.

Control	Function
Pads 1-15	Freeze Slice 1-15
Pad 16	Freeze Mode toggle
Knob 1	Slice Size
Knob 2	Slice Count
X/Y	Reserved

Freeze turns a section of audio into slices that can be retriggered as a rhythmic instrument. Use it as a short fill, glitch transition or breakdown tool rather than leaving it active accidentally.

Freeze / stutter fill

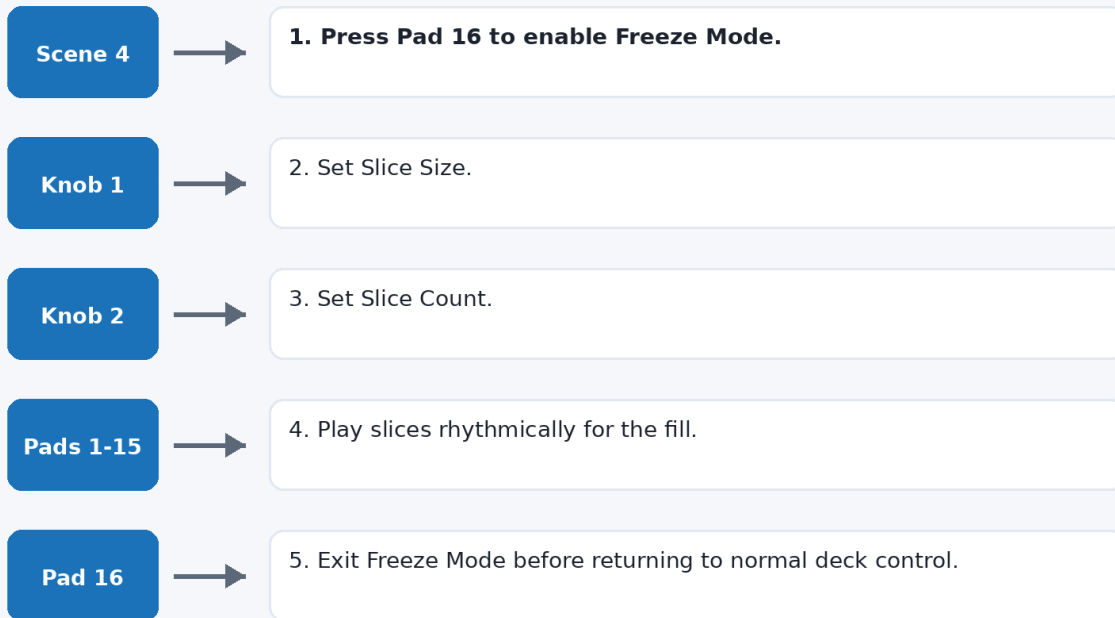

8.1 Beginner exercise

- Play a steady track on the S3.
- Enable Freeze with Pad 16.
- Set a moderate slice size and count.
- Tap Pads 1-4 in a simple repeating rhythm.
- Try Pads 5-8 for variation.
- Exit Freeze with Pad 16 before returning to normal deck work.

9. Scene 5 - Live Sampler A

Scene 5 - Live Sampler A

Ch14 - custom Traktor Pro 4 companion mapping




Pad numbers are physical padKONTROL pads. Scene changes alter the MIDI messages Traktor receives.

Control	Function
Pads 1-4	Slots 1-4 Cell 1
Pads 5-8	Slots 1-4 Cell 2
Pads 9-12	Slots 1-4 Cell 3
Pad 13	Loop Recorder Record/Stop/Overdub
Pad 14	Loop Recorder Play/Pause
Pad 15	Undo/Redo
Pad 16	Delete

Scene 5 is the first 3x4 Remix Deck performance bank. Think of the top three rows as a four-column instrument: each column is a Remix Slot and each row addresses Cell 1, Cell 2 or Cell 3 within that Slot.

Scene 5 - finger-drum a simple groove

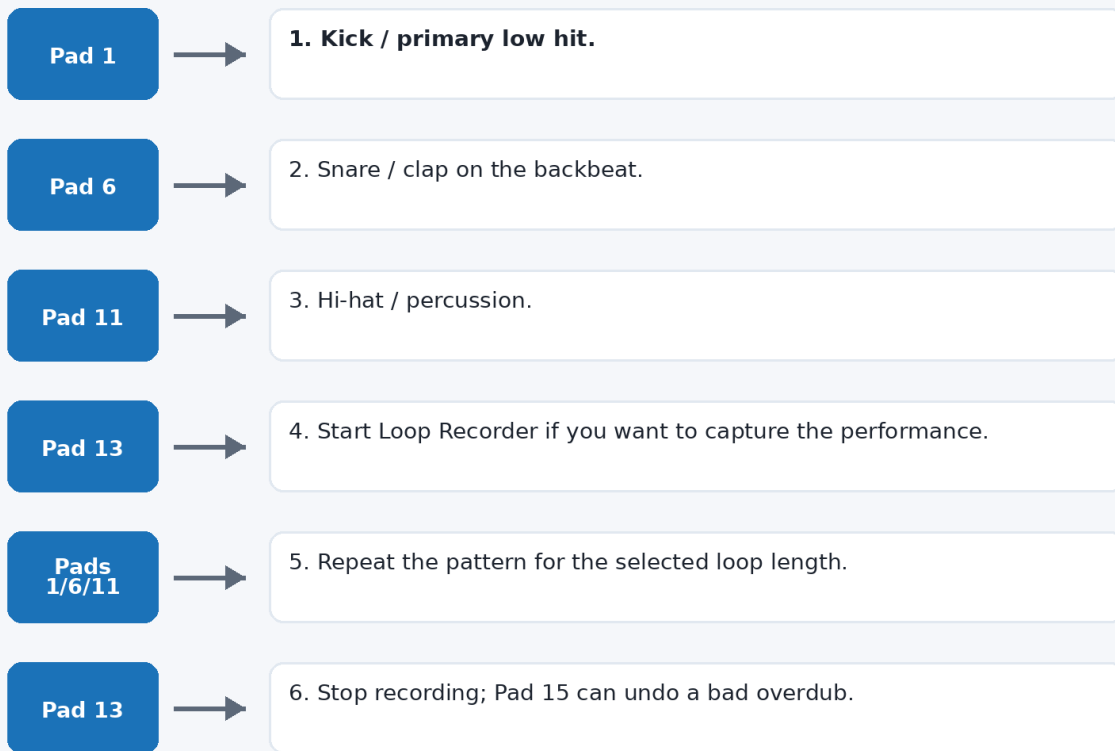

9.1 Suggested sample organization

Row	Pads	Suggested use
Cell 1 row	1-4	Kick / bass / primary groove loops
Cell 2 row	5-8	Snare / clap / vocals / secondary hits
Cell 3 row	9-12	Hats / fills / textures / FX
Looper row	13-16	Record / Play / Undo / Delete

Mapping status Scene 5 Pad 1 was live-confirmed after the hardware channel was corrected. The rest of the 4-column cell grid follows the Traktor Direct Mapping command pattern and should be validated before a live set.

10. Scene 6 - Live Sampler B

Scene 6 - Live Sampler B

Ch15 - custom Traktor Pro 4 companion mapping



Pad numbers are physical padKONTROL pads. Scene changes alter the MIDI messages Traktor receives.

Control	Function
Pads 1-4	Slots 1-4 Cell 1
Pads 5-8	Slots 1-4 Cell 2
Pads 9-12	Slots 1-4 Cell 3
Pad 13	Loop Recorder Record/Stop/Overdub
Pad 14	Loop Recorder Play/Pause
Pad 15	Undo/Redo
Pad 16	Delete

Scene 6 deliberately has the same physical layout as Scene 5 so your hands do not need to relearn the controller. Use it as a second content bank - for example vocals, atmospheres, synth shots and longer musical loops.

10.1 Example division of labor


- Scene 5: drums, percussion and groove fragments.
- Scene 6: bass, synth, vocal, atmospheric and transition material.
- Keep the same pad categories in the same rows wherever possible. Consistent placement is more valuable than filling every cell.

Current design note Scene 6 currently mirrors the same Deck C cell target pattern on MIDI Ch15. It is a second hardware scene/bank, not automatically a separate Remix Deck.

11. Scene 7 - Live Layer Mixer

Scene 7 - Live Layer Mixer

Ch16 - custom Traktor Pro 4 companion mapping

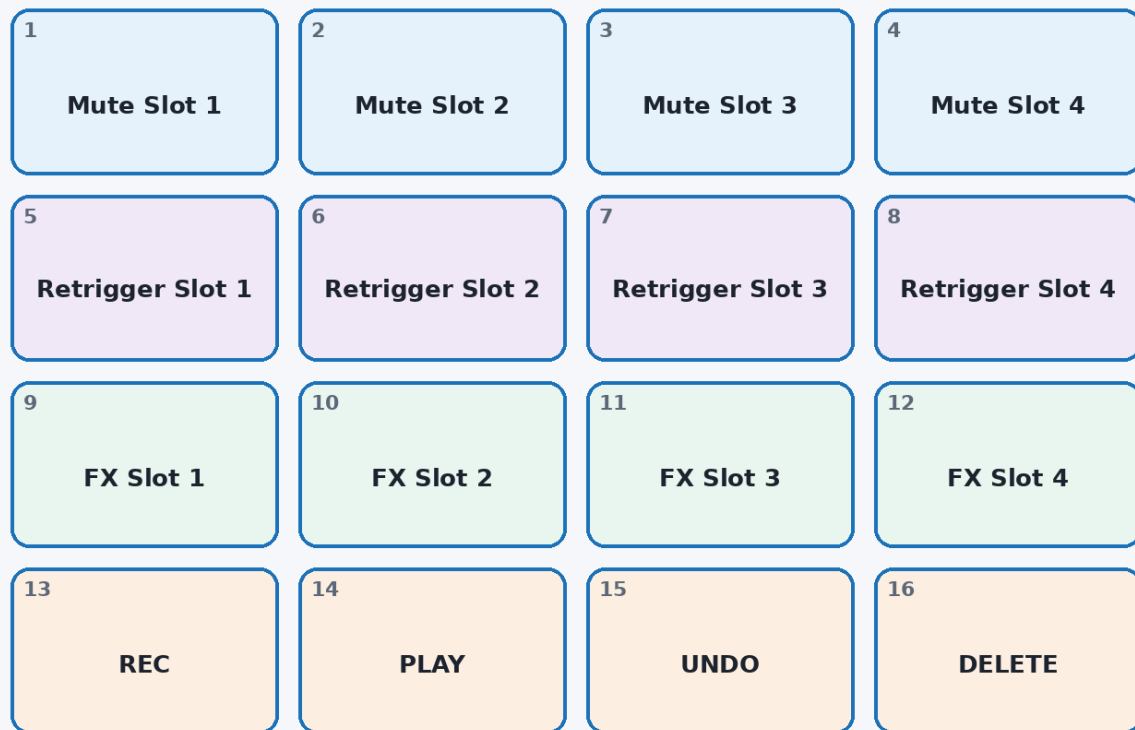

Pad numbers are physical padKONTROL pads. Scene changes alter the MIDI messages Traktor receives.

Control	Function
Pads 1-4	Mute/unmute Deck C Slots 1-4

Control	Function
Pads 5-8	Retrigger Deck C Slots 1-4
Pads 9-12	Slot FX routing On while held
Pad 13	Loop Recorder Record/Stop/Overdub
Pad 14	Loop Recorder Play/Pause
Pad 15	Undo/Redo
Pad 16	Delete

Scene 7 is the arrangement/performance scene after you have loaded or captured layers into Deck C. It lets you remove layers, restart them and route individual slots to FX without using the mouse.

Scene 7 - perform four live layers



11.1 Arrangement exercise

- Start four layers in Deck C.
- Mute Slots 2-4 so only Slot 1 remains.
- Unmute Slot 2 after four or eight bars.
- Unmute Slot 3 for the next phrase.
- Hold the Slot 3 FX pad for a short effect moment.

- Retrigger Slot 4 on the next downbeat and unmute it.
- Remove layers in reverse order to create a breakdown.

Loop Recorder in Scene 7 When you stop an initial Loop Recorder recording, the recorded loop can immediately be audible. Pad 14 controls Loop Recorder Play/Pause and Pad 16 deletes the recorder buffer.

12. Scene 8 - Capture + Latch/Gate

Scene 8 - Capture + Latch/Gate

Ch1 - custom Traktor Pro 4 companion mapping




Pad numbers are physical padKONTROL pads. Scene changes alter the MIDI messages Traktor receives.

Control	Function
Pads 1-4	Capture Loop Recorder -> Deck C Slots 1-4
Pads 5-8	Trigger Slot 1-4 Cell 1 - use as Latch versions
Pads 9-12	Trigger Slot 1-4 Cell 2 - use as Gate versions

Control	Function
Pad 13	Loop Recorder Record/Stop/Overdub
Pad 14	Loop Recorder Clear/Delete
Pad 15	Undo/Redo
Pad 16	Spare
Knob 2	Loop Recorder Dry/Wet

Scene 8 is the live-composition bridge between the Loop Recorder and Remix Deck C. The top row stores independent Loop Recorder phrases into the four Remix Slots. The second and third rows provide two performance styles for the same musical material.

Scene 8 - build independent Remix layers

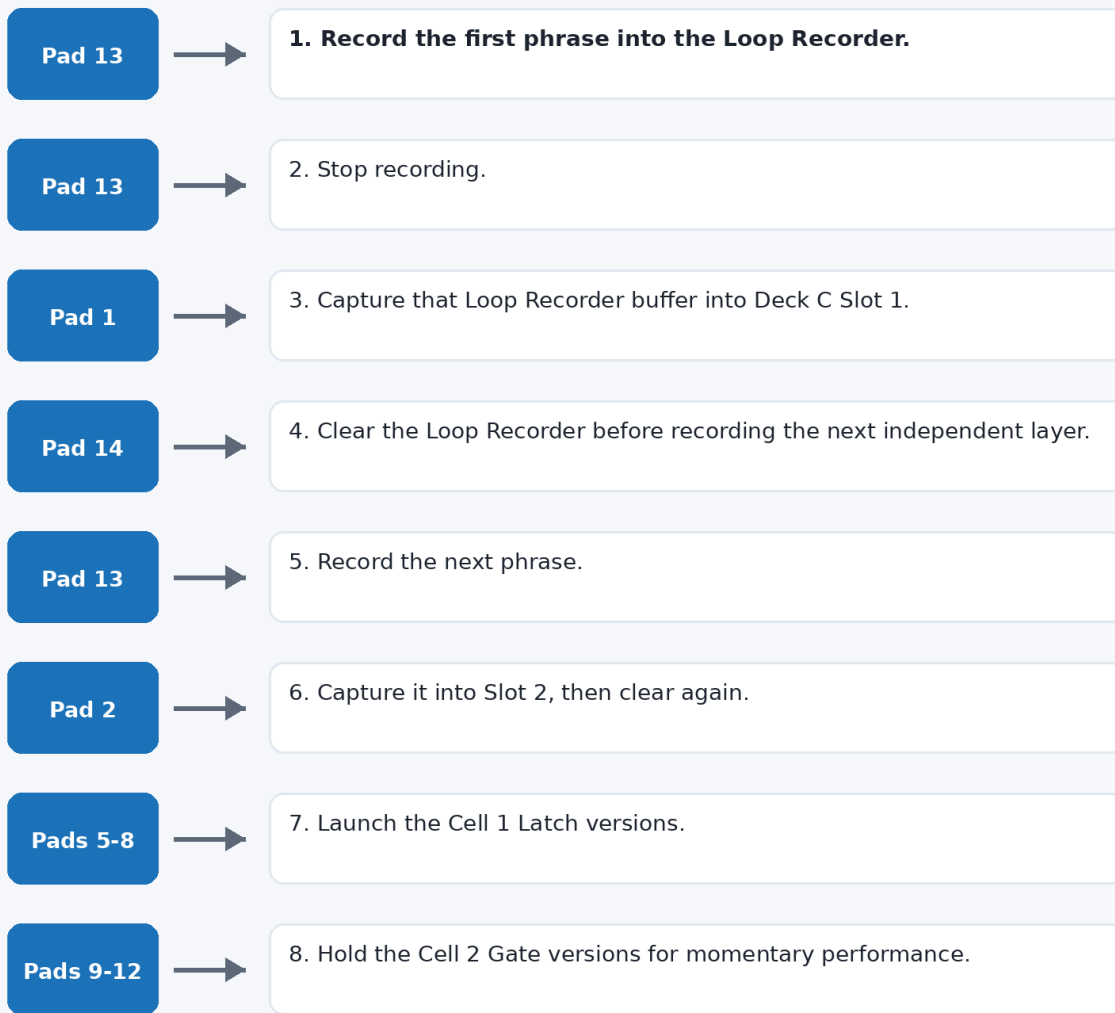

12.1 Latch versus Gate

Mode	Behavior	Best for
Latch	The sample keeps playing after you release the trigger until it is stopped or replaced.	Running loops, basslines, percussion beds, sustained layers.
Gate	The sample plays only while the trigger is held. Release stops it.	Stabs, chops, rhythmic gating, vocal fragments, temporary fills.

12.2 How to have both behaviors for one sound

- Capture/store the musical layer in Cell 1 of the desired Slot.
- Duplicate/copy that sample into Cell 2 of the same Slot.
- Set Cell 1 Trigger Type to Latch and normally use Loop playback for running layers.
- Set Cell 2 Trigger Type to Gate. Use Loop or One-shot according to the material.
- Pads 5-8 trigger the Cell 1 versions. Pads 9-12 trigger the Cell 2 versions.

Knob 2 Scene 8 Knob 2 controls Loop Recorder Dry/Wet. This lets you balance the recorder while capturing layers without leaving Scene 8.

Why the recorder must be cleared Capturing a loop into a Remix Slot copies the audio; it does not clear the Loop Recorder. If you Record again without deleting the old loop, you can enter overdub behavior instead of starting an independent fresh loop.

13. Remix Deck preparation and sample behavior

A Remix Deck contains four Sample Slots, each with multiple Sample Cells. The v18 performance mapping focuses heavily on Deck C and assumes the cells are deliberately prepared before performance.

13.1 Prepare Deck C

- Set Deck C to Remix Deck type in Traktor.
- Load or capture samples into the required Sample Cells.
- Enable Remix Deck Quantize if you want launches aligned to the internal timeline/downbeat.
- For loop layers, set Sample Play Type to Loop.
- Choose Latch or Gate Trigger Type for each cell based on how you want the pad to behave.
- Enable Sync for samples that should follow the Remix Deck tempo.

13.2 Sample behavior matrix

Play Type	Trigger Type	Result
Loop	Latch	Press once; it keeps looping. Excellent for layers.
Loop	Gate	Loops only while the pad is held. Excellent for rhythmic gating.
One-shot	Latch	Plays to the end after one press unless otherwise stopped.
One-shot	Gate	Plays only while held; release cuts it immediately.

13.3 Quantize

Remix Deck Quantize delays a trigger until the configured quantize boundary so samples enter musically. For beginners, a one-beat or phrase-friendly quantize setting is easier than completely free triggering. Remember that the trigger can flash/wait before the sample actually starts.

14. Working with the S3 and padKONTROL together

14.1 Recommended hand discipline

- S3 left hand: mixer EQ/faders/cue, depending on your normal technique.
- S3 right hand: jog, browse/load or opposite mixer channel as required.
- padKONTROL: only leave the S3 when the musical action needs a performance scene.
- Return to the S3 immediately after the effect/fill/layer action is complete.

14.2 Safe transition recipe

- Prepare Deck B in headphones on the S3.
- Set Scene 1 or 2 only if you need an FX transition.
- Start Deck B at the phrase boundary using the S3.
- Use S3 EQ/filter/faders for the actual mix.
- Use the padKONTROL for a short FX, sample or Freeze gesture.
- Return to S3 and finish the transition.
- Clear or stop any Loop Recorder material that should not remain audible.

14.3 Four-deck awareness

The S3 can address Decks A/C on the left physical Deck and B/D on the right. This manual normally reserves A/B for tracks and C for Remix content, so check the selected software Deck before using S3 deck controls that could affect C instead of A.


15. Beginner practice course

Practice these in order. Do not move on until the earlier stage feels automatic.

Stage	Goal
Level 1 - S3 only	Load two tracks, cue Deck B, sync/beatmatch, make a clean 32-bar transition using only mixer controls.
Level 2 - Add one FX scene	Repeat the transition and add Scene 1 Dry/Wet plus one FX button. Always finish by removing the FX.
Level 3 - Record one loop	Use Scene 3 to record a clean phrase, pause it, play it, undo an overdub and delete it.
Level 4 - Finger drum	Prepare four simple samples in Scene 5 and play a basic kick/snare/hat pattern.
Level 5 - Capture independent layers	Use Scene 8 to record/capture two layers, clearing the recorder between them.
Level 6 - Arrange layers	Use Scene 7 mute/retrigger controls to create an intro, full groove and breakdown.
Level 7 - Add Freeze	Use Scene 4 for a two-beat or one-bar fill and return cleanly to the S3.
Level 8 - Full performance	Use both S3 decks, two FX scenes, live samples, capture, layer mixer and Freeze in one 5-10 minute practice set.

16. Song build example 1 - Psytrance live build

Example performance 1 - Psytrance live build

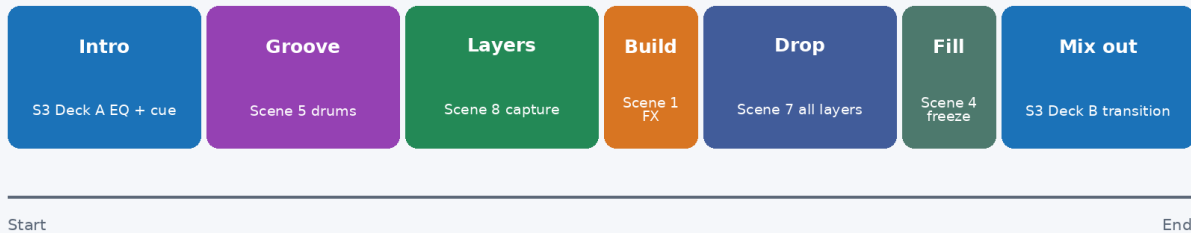

Goal: turn a normal Deck A psytrance track into a live build with extra percussion, a captured groove layer, an FX tension build, a Freeze fill and a transition into Deck B.

16.1 Preparation

- Deck A: main track.
- Deck B: next track, cued in headphones.
- Deck C Remix: kick/percussion loop in Slot 1, bass/tonal layer in Slot 2, texture in Slot 3, fill/vocal in Slot 4.
- Scene 5: percussion-friendly samples. Scene 8: capture cells prepared with Cell 1 Latch / Cell 2 Gate.

16.2 Performance walkthrough

Section	Controller	Action
Bars 1-16	S3	Play Deck A normally. Establish the groove and make sure Deck B is prepared.
Bars 17-32	Scene 5	Add one or two percussion hits. Do not fill every space.
Bars 33-48	Scene 8	Record a short complementary rhythm with Pad 13, capture to Slot 1 with Pad 1, clear with Pad 14.
Bars 49-64	Scene 8	Record/capture a second tonal or percussion layer into Slot 2, then clear again.
Build	Scene 1	Route FX1 to Deck A. Increase Dry/Wet with Knob 2 and manipulate FX parameters. Keep the S3 channel under control.


Section	Controller	Action
Drop	Scene 7	Unmute Slots 1-3 progressively. Use Retrigger on the downbeat if a layer needs a hard restart.
Fill	Scene 4	Enable Freeze, play a short slice pattern, then disable Freeze.
Transition	S3 + Scene 1	Start Deck B, exchange EQ/faders, tail Deck A with FX if desired, then remove FX routing.

16.3 What you learned

- The S3 carried the actual DJ mix at all times.
- Scene 5 added transient performance without forcing a new arrangement.
- Scene 8 converted live recorder phrases into independent Remix layers.
- Scene 7 became the arranger once the layers existed.
- Scene 1 and Scene 4 were temporary transition/fill tools, not permanent modes.

17. Song build example 2 - Progressive live remix

Example performance 2 - Progressive live remix

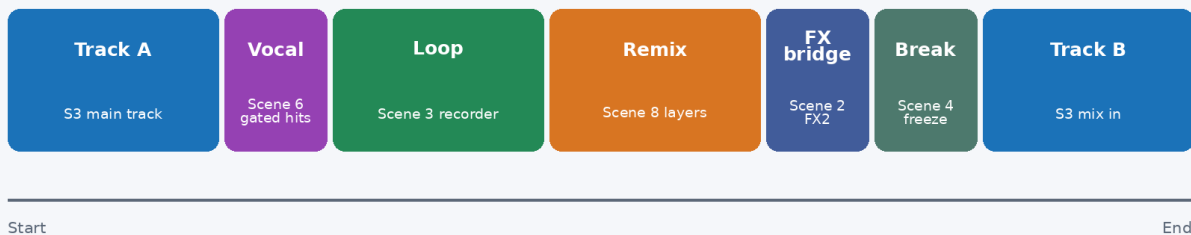

Goal: create a slower, more spacious live remix around a Track Deck using vocals, gated sample performance, a Loop Recorder phrase and a second FX chain.

17.1 Preparation

- Deck A: main progressive track.
- Deck B: next track or alternate groove.
- Scene 6: vocal and atmospheric material.
- Scene 8 Cell 1: latched versions; Cell 2: gated versions for rhythmic chopping.

17.2 Performance walkthrough

Section	Controller	Action
Opening	S3	Play Deck A and leave space in the mix. Cue Deck B but do not rush the transition.
Vocal tease	Scene 8	Use Pads 9-12 Gate cells to hold short vocal/texture fragments, releasing between phrases.
Recorder layer	Scene 3	Record a 4- or 8-beat phrase. Use Dry/Wet to keep it underneath the main track.
Store it	Scene 8	Capture the recorder into a free Remix Slot, then clear the recorder.
Arrange	Scene 7	Mute/unmute the new layer against the original track. Retrigger it only at a musically useful point.
FX bridge	Scene 2	Route FX2 to the outgoing or incoming deck, add a controlled effect movement.
Break fill	Scene 4	Use a short Freeze pattern, then exit Freeze.
Mix to B	S3	Bring Deck B in and complete the transition with EQ/faders. Remove any padKONTROL FX routing after the transition.

18. Performance recipes

Recipe	Controls	Sequence
Echo-style transition	S3 + Scene 1	Route FX1 -> outgoing deck; increase D/W; bring incoming deck up; lower outgoing deck; disable routing.
Loop tension build	S3 loop + Scene 1	Create a track loop on S3; shorten if desired; add FX; release loop on downbeat.
Live drum overdub	Scene 5 + Scene 3	Finger drum samples; record with Loop Recorder; overdub one extra layer; undo if it muddies the groove.
Four-layer drop	Scene 7	Begin with Slot 1; add Slots 2, 3 and 4 every 4/8 bars; use a single retrigger on the drop.

Recipe	Controls	Sequence
Momentary vocal chop	Scene 8	Use Gate row Pads 9-12 with Cell 2 set Gate; hold only for the desired syllable/phrase.
Glitch fill	Scene 4	Freeze on; play slices 1-4; vary Slice Size; Freeze off before the next phrase.
Capture-and-release	Scene 8 + Scene 7	Record phrase -> capture to Slot -> clear recorder -> launch/mute from the Remix Deck.
Two-FX handoff	Scenes 1 + 2	Keep FX1 on outgoing deck and FX2 prepared for incoming deck; avoid routing both heavily at once until comfortable.

19. Troubleshooting

Symptom	What to check
A scene sends Ch10 again	Scene was edited but not written to memory. Apply the edit, then use the scene Write/Store procedure.
A sample keeps playing after I release the pad	The Sample Cell is in Latch mode. Use a Gate-configured Cell for hold-to-play behavior.
Changing Traktor Interaction Mode to Hold did not create Gate behavior	Cell Trigger Type is a Sample Cell property. Direct Cell Trigger obeys the cell playback settings.
Second Loop Recorder recording contains the old loop	The previous recorder buffer still exists; Record is entering overdub behavior. Delete/Clear before a completely new independent recording.
I hear the loop immediately after recording	The Loop Recorder can play the recorded take after the recording ends. Use Play/Pause or Delete as appropriate.
I hear doubled audio after capturing	Both the Loop Recorder and the captured Remix sample may be playing. Pause/delete the recorder after capture if you only want the Remix layer.
Scene 8 does nothing after importing	Restart Traktor, then confirm Scene 8 hardware is saved on Ch1 and the Generic MIDI In-Port is correct.
Pad triggers the wrong function	Look for duplicate Generic MIDI mappings with the same input enabled. Disable old mappings.
X-Y will not return to center	Turn HOLD off and set the X/Y Release Value to 64 for CC-based mappings.
Remix sample starts late	Remix Quantize may be waiting for the configured beat boundary. This is expected when Quantize is enabled.

20. Pre-gig validation checklist

- ☐ S3 loads and plays Deck A and Deck B.
- ☐ Headphone CUE works for both main mixer channels.
- ☐ Scene 1 is Ch10; Scene 2 Ch11; Scene 3 Ch12; Scene 4 Ch13; Scene 5 Ch14; Scene 6 Ch15; Scene 7 Ch16; Scene 8 Ch1.
- ☐ Scene 1 Pad 1 and Knob 2 move the expected FX controls.
- ☐ Scene 2 routing Pads 13/14 toggle correctly.
- ☐ Scene 3 Record/Play/Undo/Delete work.
- ☐ Scene 4 Freeze Pad 16 and at least several slice pads work.
- ☐ Scene 5 Pads 1-12 trigger the expected Remix cells.
- ☐ Scene 6 Pads 1-12 trigger the expected Remix cells.
- ☐ Scene 7 Mute, Retrigger and Slot FX rows work for all four Slots.
- ☐ Scene 8 capture Pads 1-4 put audio in the intended Slots.
- ☐ Scene 8 Latch row triggers Cell 1 and Gate row triggers Cell 2.
- ☐ Scene 8 Knob 2 moves Loop Recorder Dry/Wet.
- ☐ No duplicate Generic MIDI mapping has the Korg input enabled.
- ☐ Loop Recorder is empty or intentionally loaded before starting the set.

21. Quick reference

Scene 1 - FX Unit 1 (Ch10)

1: FX Btn 1	2: FX Btn 2	3: FX Btn 3	4: ALL FX Btns
5: Select FX Knob 1	6: Select FX Knob 2	7: Select FX Knob 3	8: Spare
9: Spare	10: Spare	11: Spare	12: Spare
13: Route FX1 -> A	14: Route FX1 -> B	15: Spare	16: Spare

Scene 2 - FX Unit 2 (Ch11)

1: FX Btn 1	2: FX Btn 2	3: FX Btn 3	4: FX Unit 2 On/Off
5: Select FX Knob 1	6: Select FX Knob 2	7: Select FX Knob 3	8: Spare
9: Spare	10: Spare	11: Spare	12: Spare
13: Route FX2 -> A	14: Route FX2 -> B	15: Spare	16: Spare

Scene 3 - Loop Recorder (Ch12)

1: Record / Stop / Overdub	2: Play / Pause	3: Undo / Redo	4: Delete
5: Spare	6: Spare	7: Spare	8: Spare

1: Record / Stop / Overdub	2: Play / Pause	3: Undo / Redo	4: Delete
9: Spare	10: Spare	11: Spare	12: Spare
13: Spare	14: Spare	15: Spare	16: Spare

Scene 4 - Freeze / Stutter (Ch13)

1: Freeze Slice 1	2: Freeze Slice 2	3: Freeze Slice 3	4: Freeze Slice 4
5: Freeze Slice 5	6: Freeze Slice 6	7: Freeze Slice 7	8: Freeze Slice 8
9: Freeze Slice 9	10: Freeze Slice 10	11: Freeze Slice 11	12: Freeze Slice 12
13: Freeze Slice 13	14: Freeze Slice 14	15: Freeze Slice 15	16: Freeze Mode

Scene 5 - Live Sampler A (Ch14)

1: S1 Cell 1	2: S2 Cell 1	3: S3 Cell 1	4: S4 Cell 1
5: S1 Cell 2	6: S2 Cell 2	7: S3 Cell 2	8: S4 Cell 2
9: S1 Cell 3	10: S2 Cell 3	11: S3 Cell 3	12: S4 Cell 3
13: REC	14: PLAY	15: UNDO	16: DELETE

Scene 6 - Live Sampler B (Ch15)

1: S1 Cell 1	2: S2 Cell 1	3: S3 Cell 1	4: S4 Cell 1
5: S1 Cell 2	6: S2 Cell 2	7: S3 Cell 2	8: S4 Cell 2
9: S1 Cell 3	10: S2 Cell 3	11: S3 Cell 3	12: S4 Cell 3
13: REC	14: PLAY	15: UNDO	16: DELETE

Scene 7 - Live Layer Mixer (Ch16)

1: Mute Slot 1	2: Mute Slot 2	3: Mute Slot 3	4: Mute Slot 4
5: Retrigger Slot 1	6: Retrigger Slot 2	7: Retrigger Slot 3	8: Retrigger Slot 4
9: FX Slot 1	10: FX Slot 2	11: FX Slot 3	12: FX Slot 4
13: REC	14: PLAY	15: UNDO	16: DELETE

Scene 8 - Capture + Latch/Gate (Ch1)

1: Capture Loop -> S1	2: Capture Loop -> S2	3: Capture Loop -> S3	4: Capture Loop -> S4
5: Latch S1 Cell 1	6: Latch S2 Cell 1	7: Latch S3 Cell 1	8: Latch S4 Cell 1

1: Capture Loop -> S1	2: Capture Loop -> S2	3: Capture Loop -> S3	4: Capture Loop -> S4
9: Gate S1 Cell 2	10: Gate S2 Cell 2	11: Gate S3 Cell 2	12: Gate S4 Cell 2
13: REC	14: CLEAR	15: UNDO	16: SPARE

S3 recovery controls

- Play/Pause, Cue, Sync, Jog, Tempo and mixer controls remain your main safety controls.
- Use Mixer CUE + headphones to prepare incoming tracks.
- Use S3 normal Hotcues and track Loop encoder for routine DJ tasks.

22. Mapping status and technical notes

This manual describes the custom v18 mapping as built from the user-tested and Traktor-generated mapping files. Some areas have stronger live confirmation than others. The distinction matters before using the mapping in a public performance.

Area	Status / note
Scene 1	Core FX behavior was live-confirmed during development. Pad 4 intentionally sends three Toggle commands.
Scene 2	FX2 routing was changed to Toggle; core layout follows the Scene 1 pattern.
Scene 3	Loop Recorder commands were based on a Traktor-exported learned mapping.
Scene 4	Freeze commands were based on a Traktor-exported learned mapping.
Scene 5	Pad 1 was live-confirmed after setting the hardware scene to Ch14. Remaining cell grid uses the known Direct Mapping command progression and should be tested.
Scene 6	Mirrors Scene 5 on Ch15. Test the whole bank before live use.
Scene 7	Slot Mute row was live-confirmed; Retrigger and Slot FX rows came from Traktor-generated learned rows.
Scene 8	Direct capture commands came from a Traktor export. Latch/Gate rows trigger separate Sample Cells; their behavior also depends on each Cell Trigger Type. Knob 2 controls Loop Recorder D/W.

Structural vs functional validation A TSI can be structurally valid and import correctly while a particular command still behaves differently than intended. The pre-gig checklist is part of the mapping, not optional documentation.

23. Source manuals and terminology

The operating descriptions in this manual were grounded in the supplied/official manuals and then adapted to the custom v18 mapping. Custom scene layouts are specific to this project and are not factory Korg or Native Instruments mappings.

Source	Used for
Korg padKONTROL Owner's Manual (KPC1_OM_EFG3.pdf)	Scene recall/save, Setting/Enter behavior, MIDI channels, X-Y HOLD and Release Value, assignable knobs.
Native Instruments Traktor Pro 4 Manual (Traktor-Pro-4-Manual-English-170724.pdf)	Loop Recorder behavior, Remix Deck sample cells, Latch/Gate, Loop/One-shot, Quantize, Direct Mapping cell triggers and capture behavior.
Native Instruments TRAKTOR KONTROL S3 Manual	S3 deck architecture, A/C and B/D deck switching, mixer channels, Browse/Load, Play/Cue/Sync, performance pads and loop controls.
Watoom padKONTROL v18 TSI + development exports	Exact custom scene responsibilities and current controller mapping design.

Official S3 manual source: Native Instruments - TRAKTOR KONTROL S3 MK1 Manual (English).

This manual is a performance guide, not a replacement for the full Traktor Pro 4 or hardware reference manuals. Use the official manuals for detailed audio routing, preferences, unsupported hardware modes and functions outside this custom mapping.

Appendix - Your padKONTROL hardware



Physical reference photo. The manual diagrams use the same 1-16 pad numbering shown on the hardware.