



# QuickChange 2.0


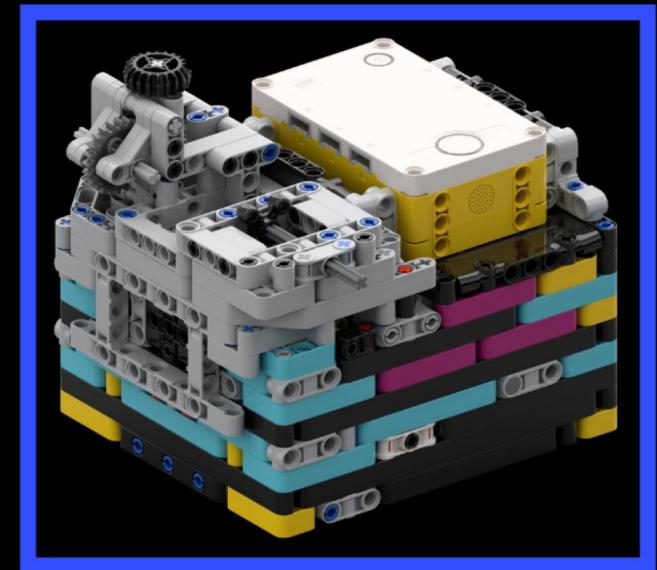


For PROJEKT ALPHA | 9 Configurations


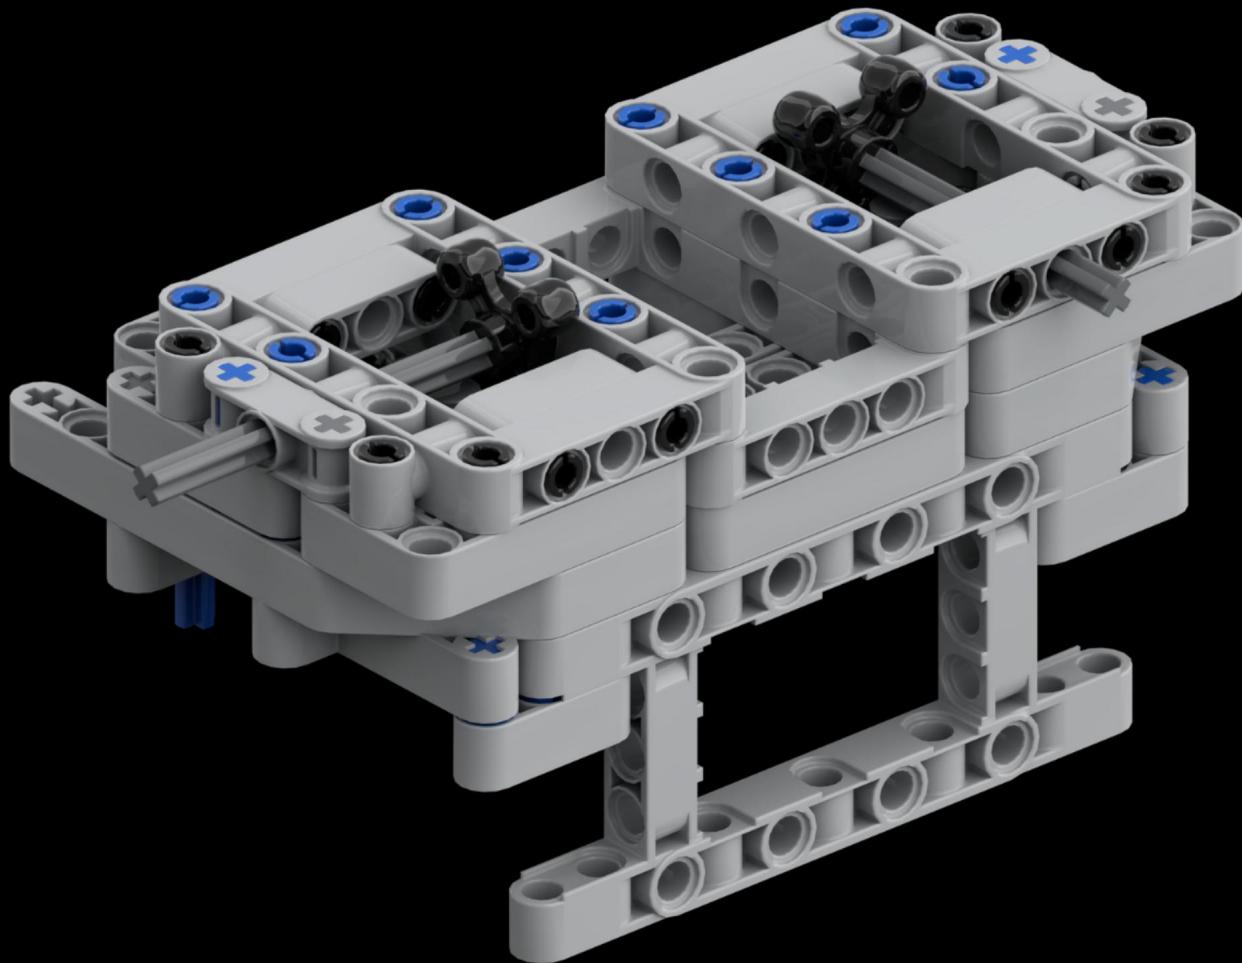


Design #004 | 176 pcs | 15w x 10l x 12h



**1**

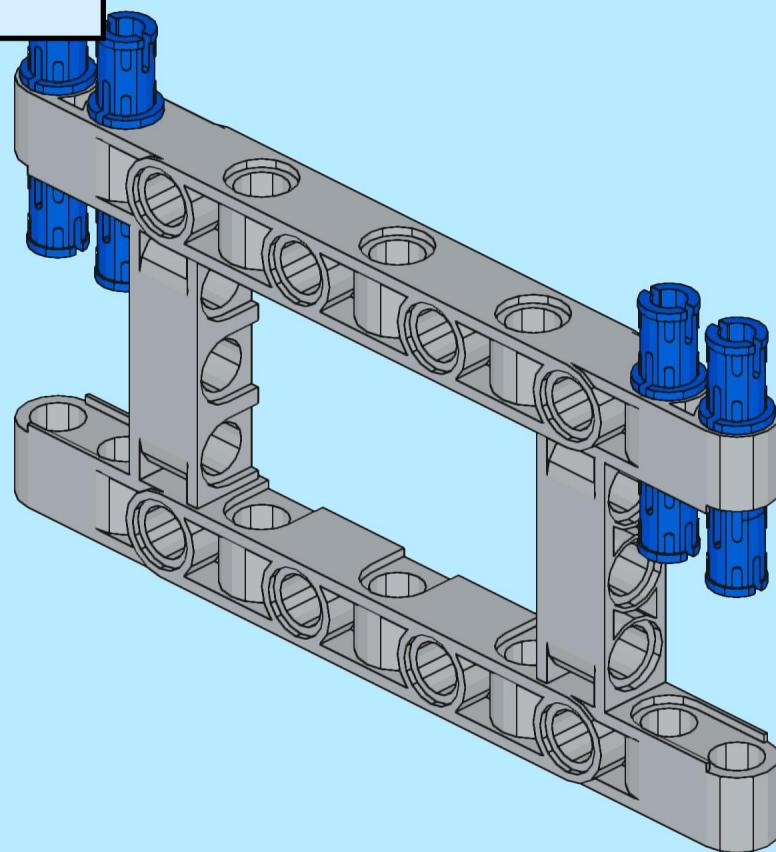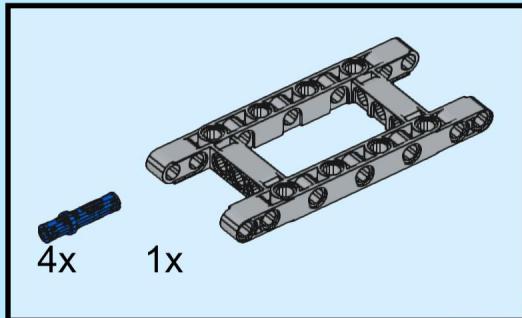



**2**

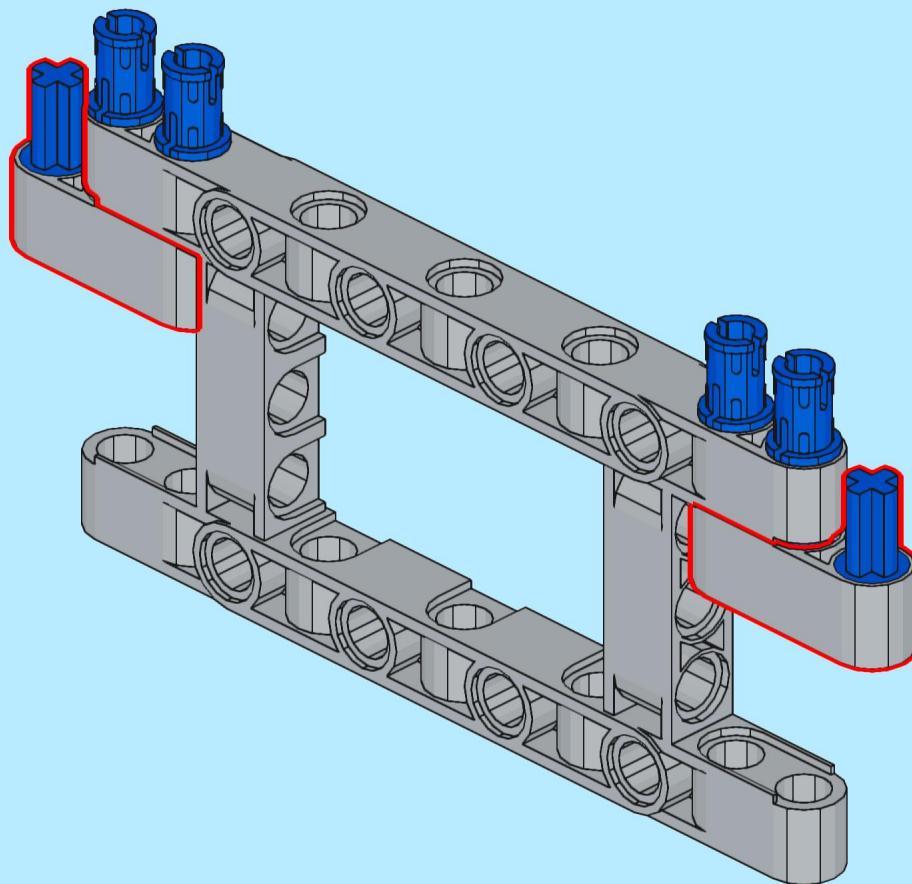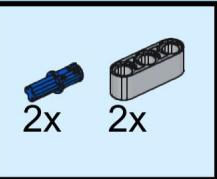



**3**

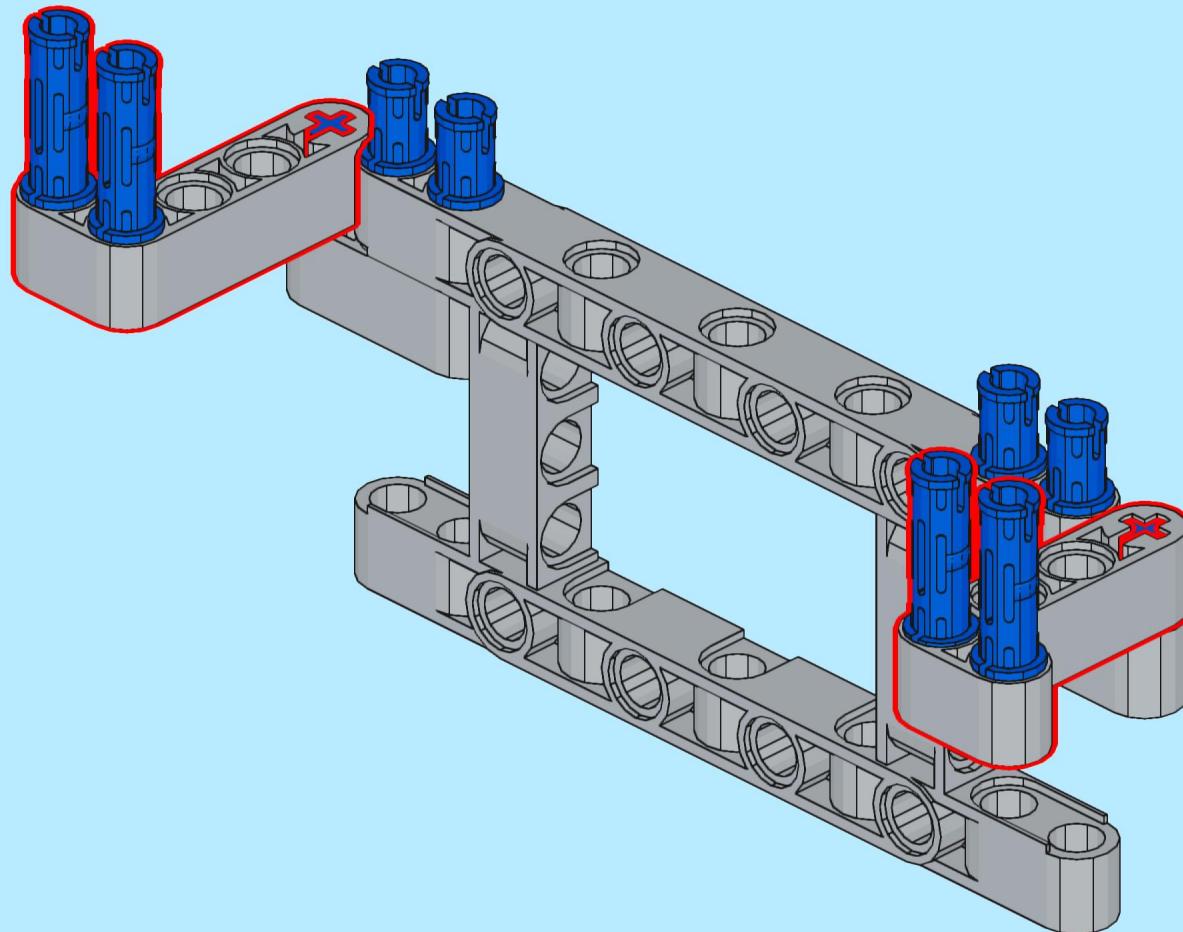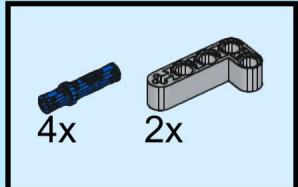



**4**

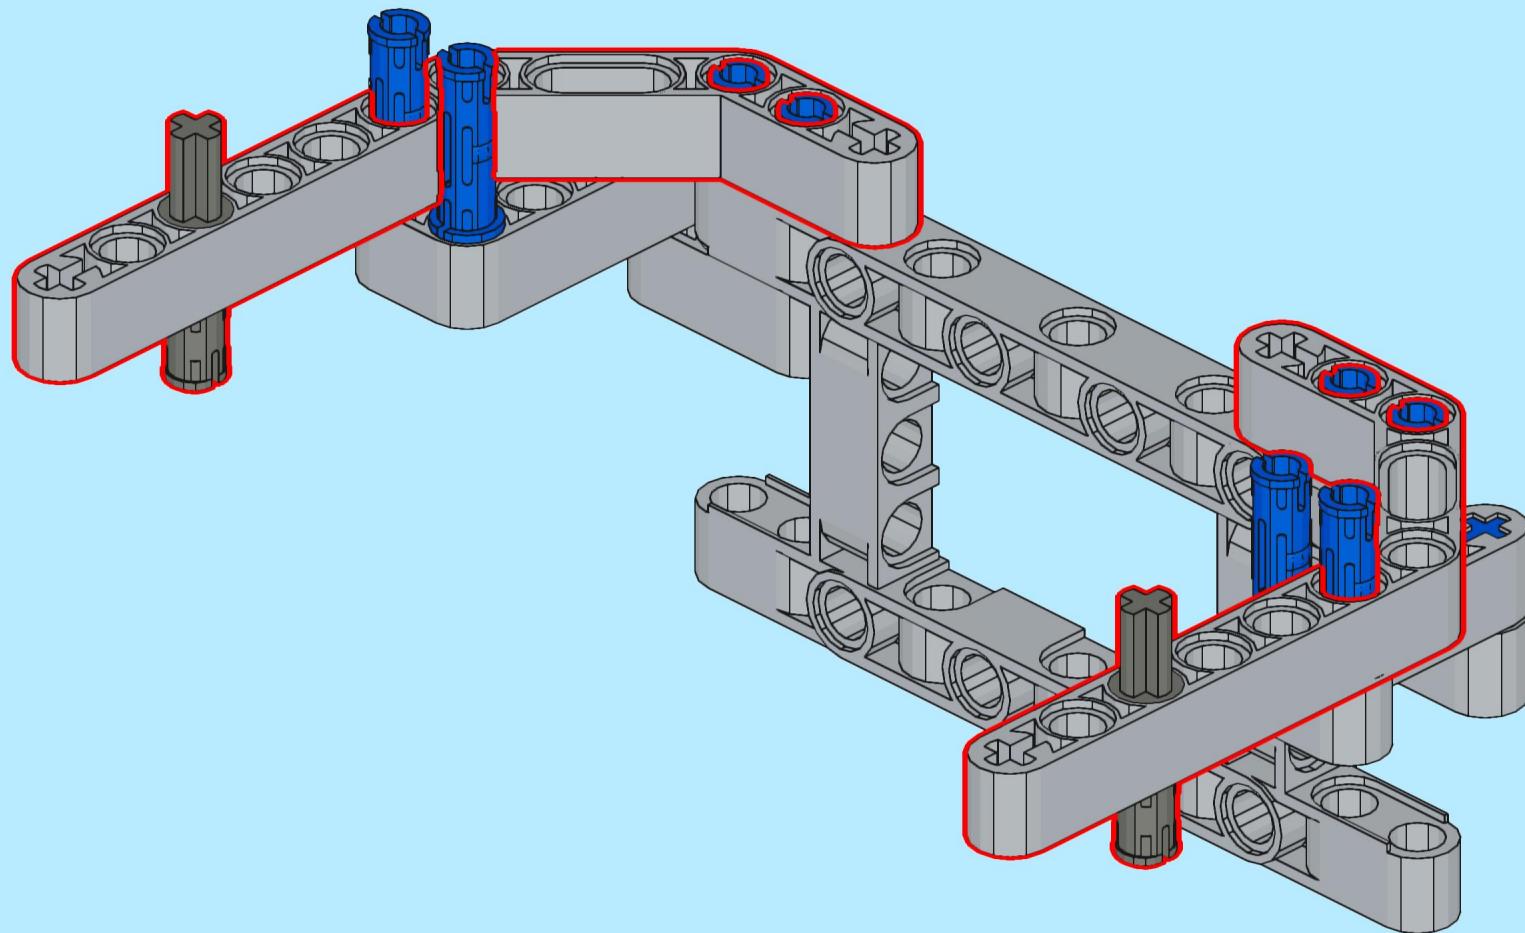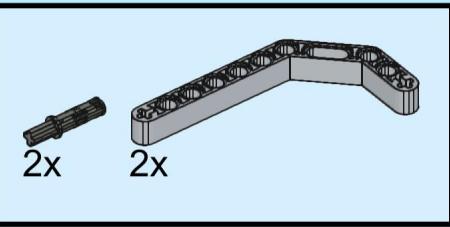



**5**

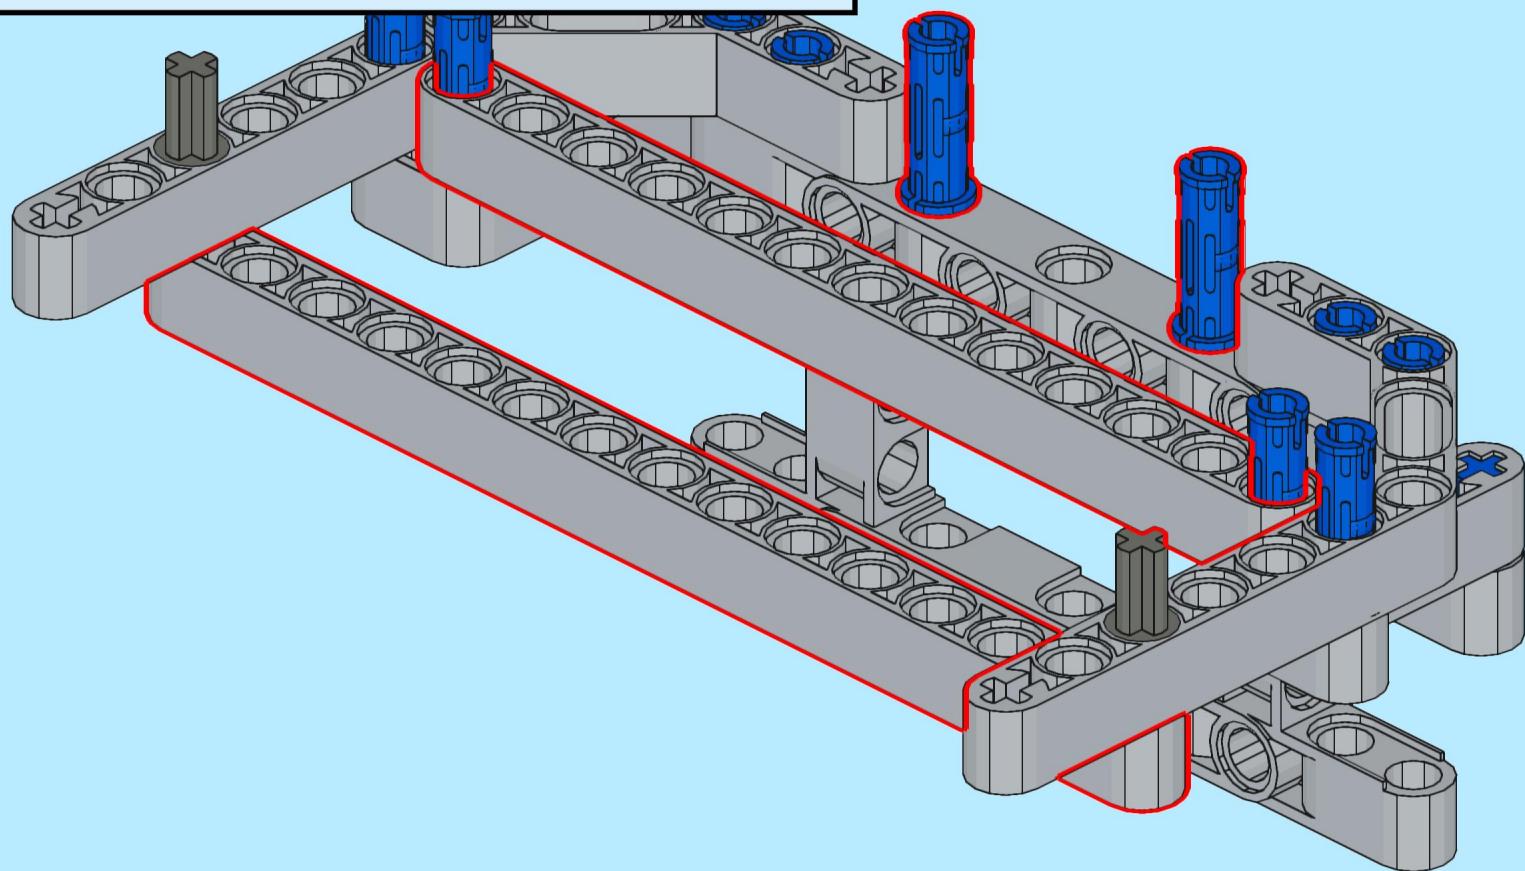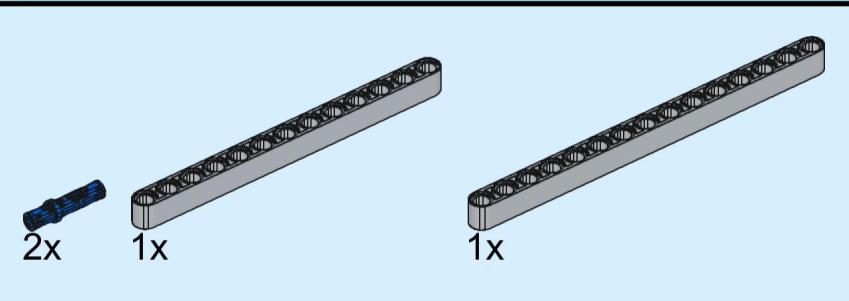



**6**

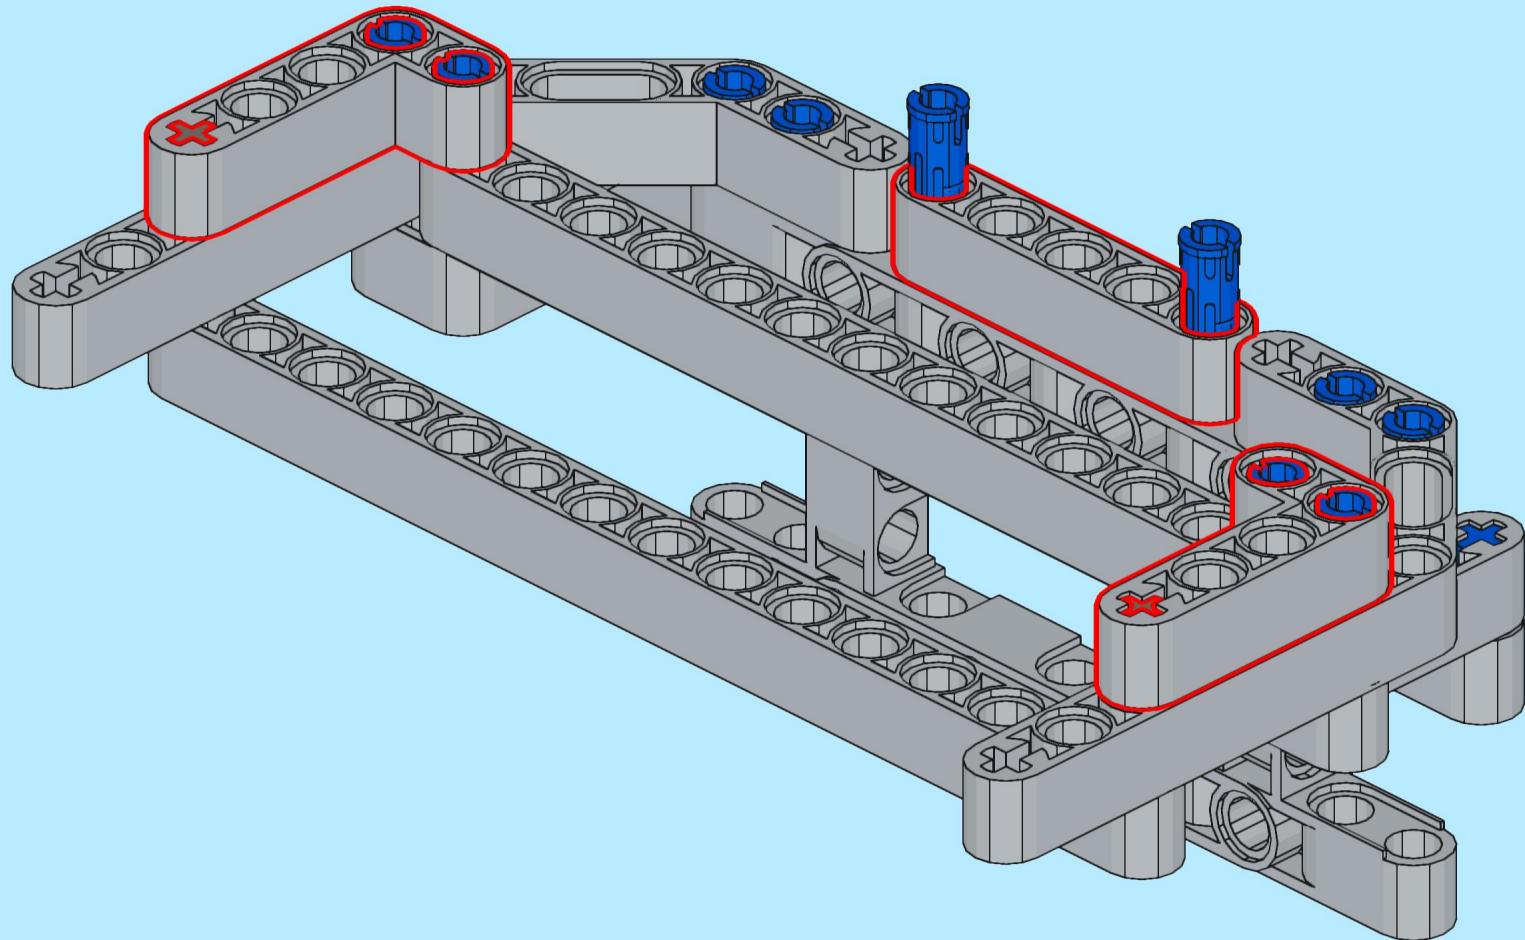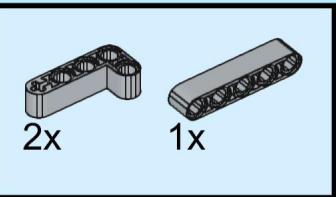



7

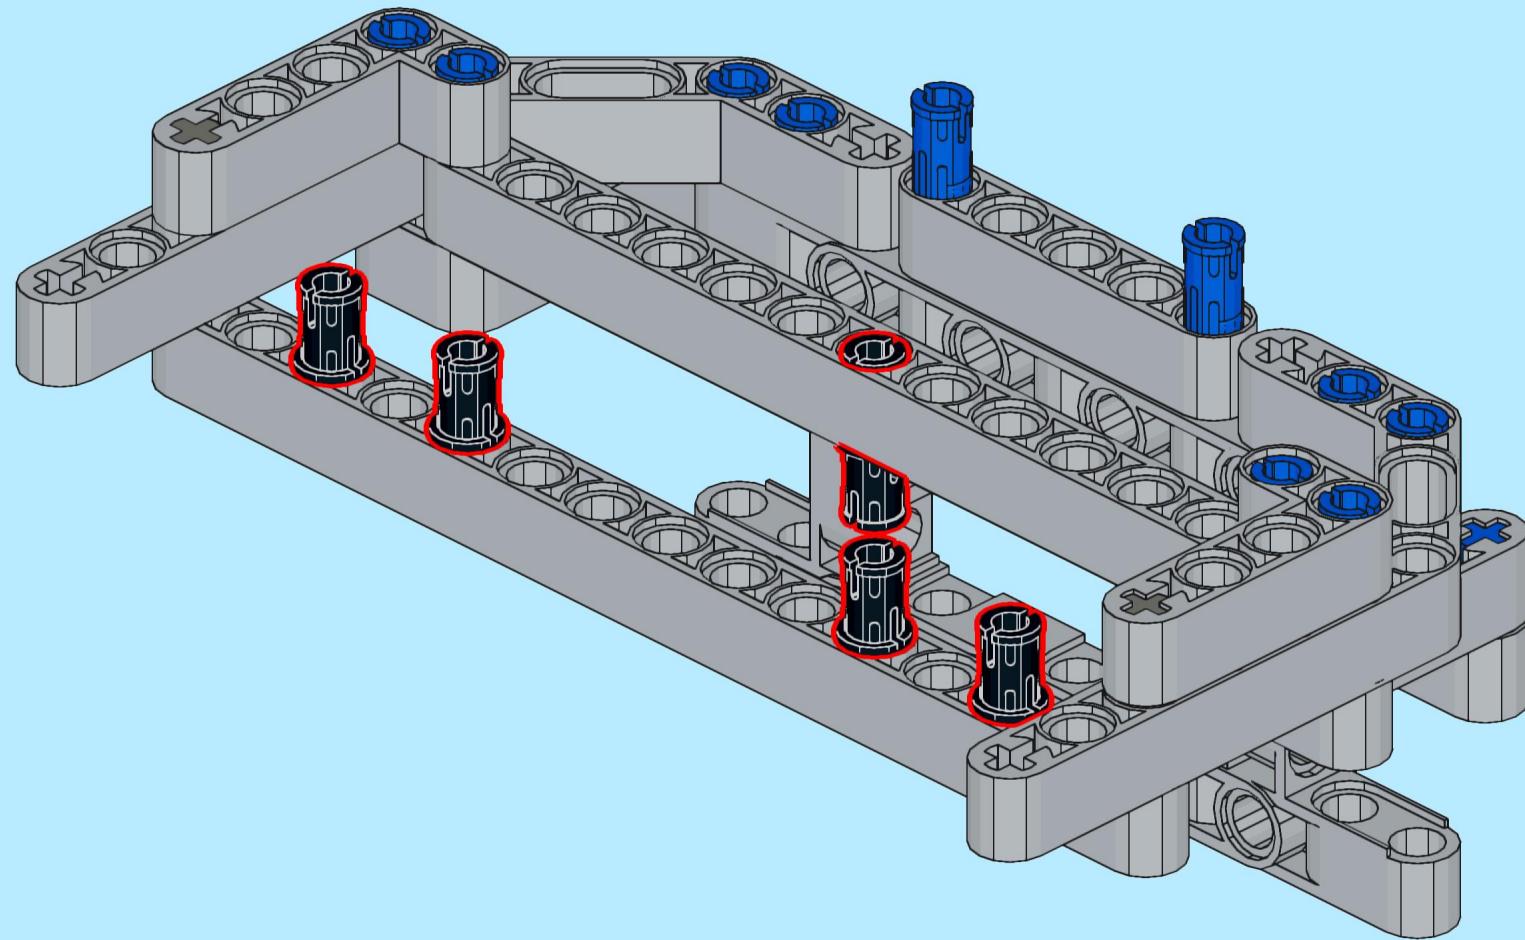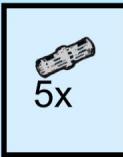



**8**

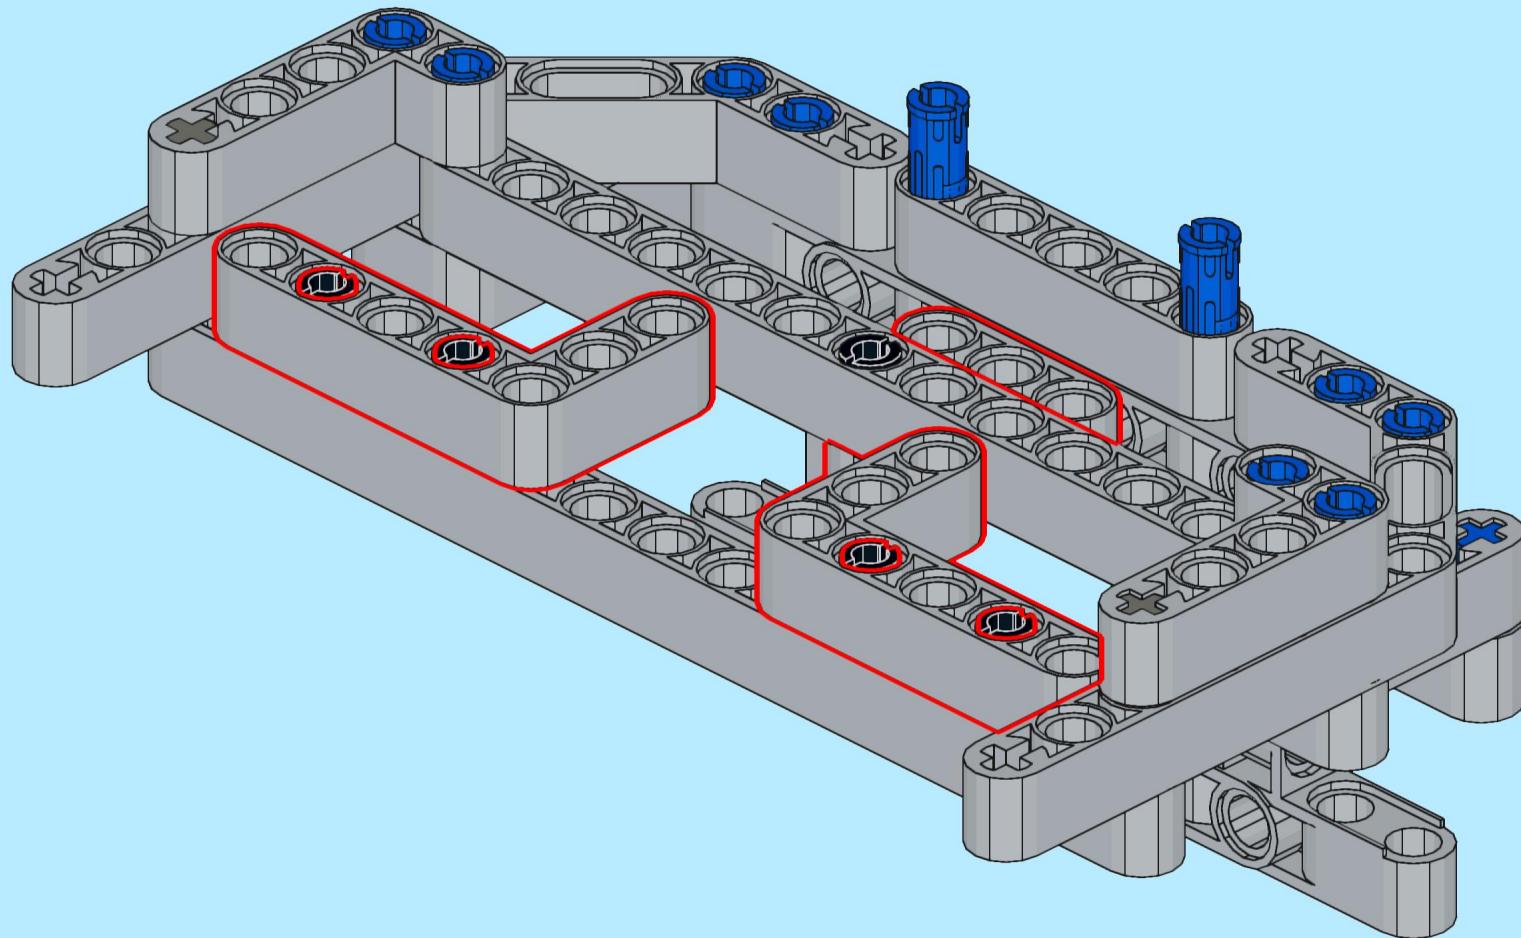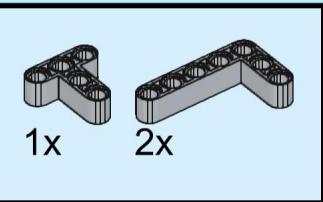


**9**

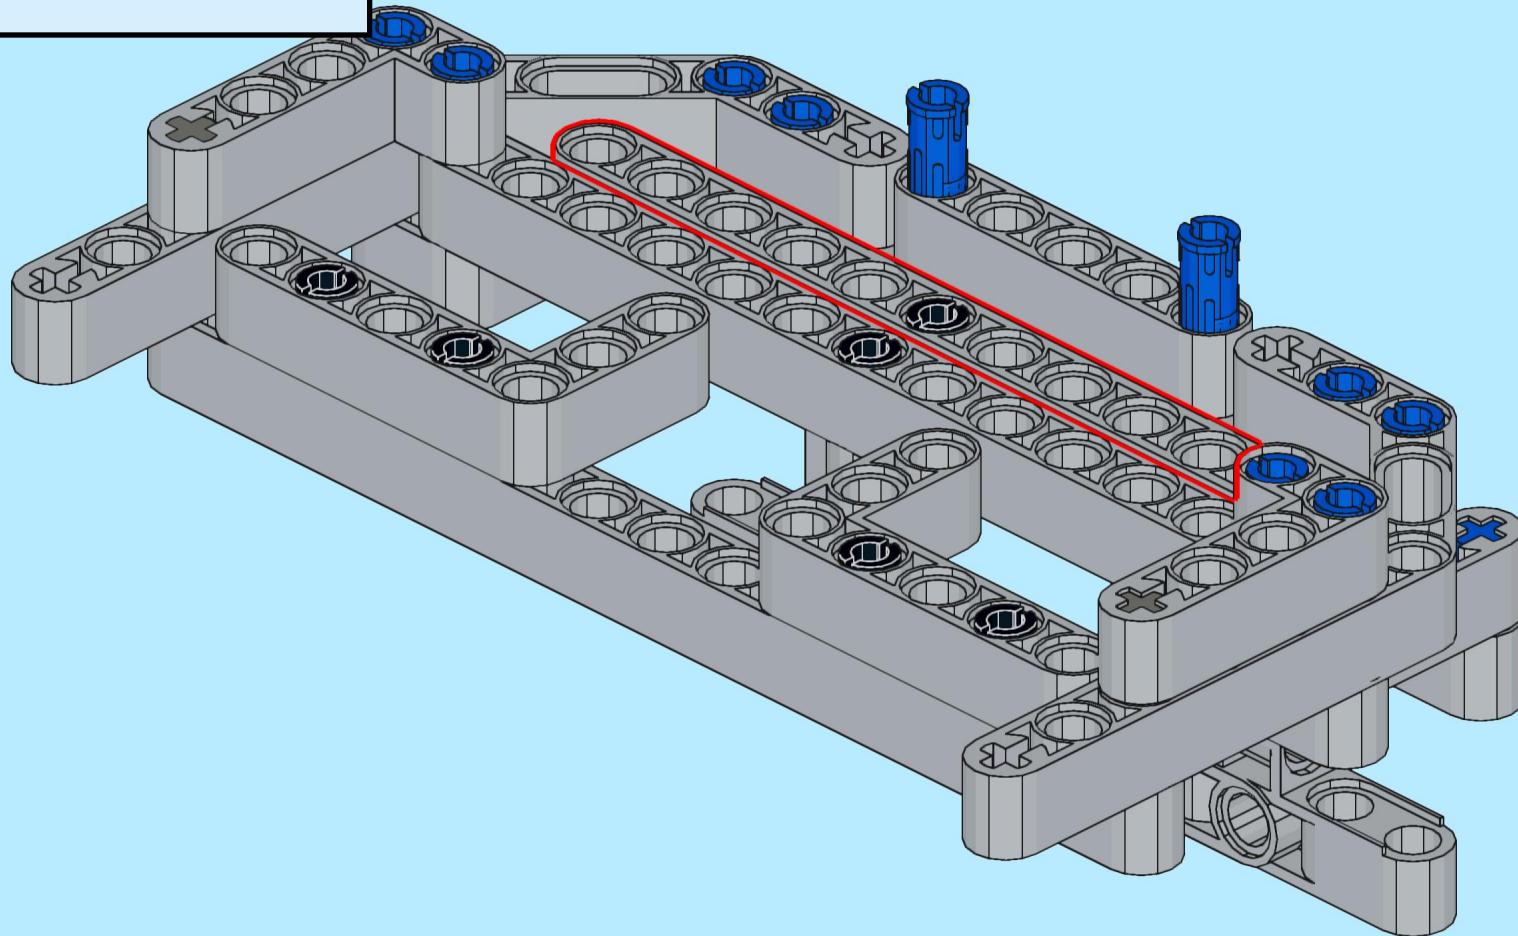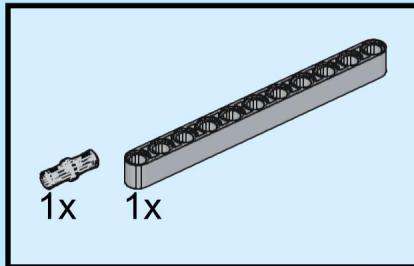



**10**

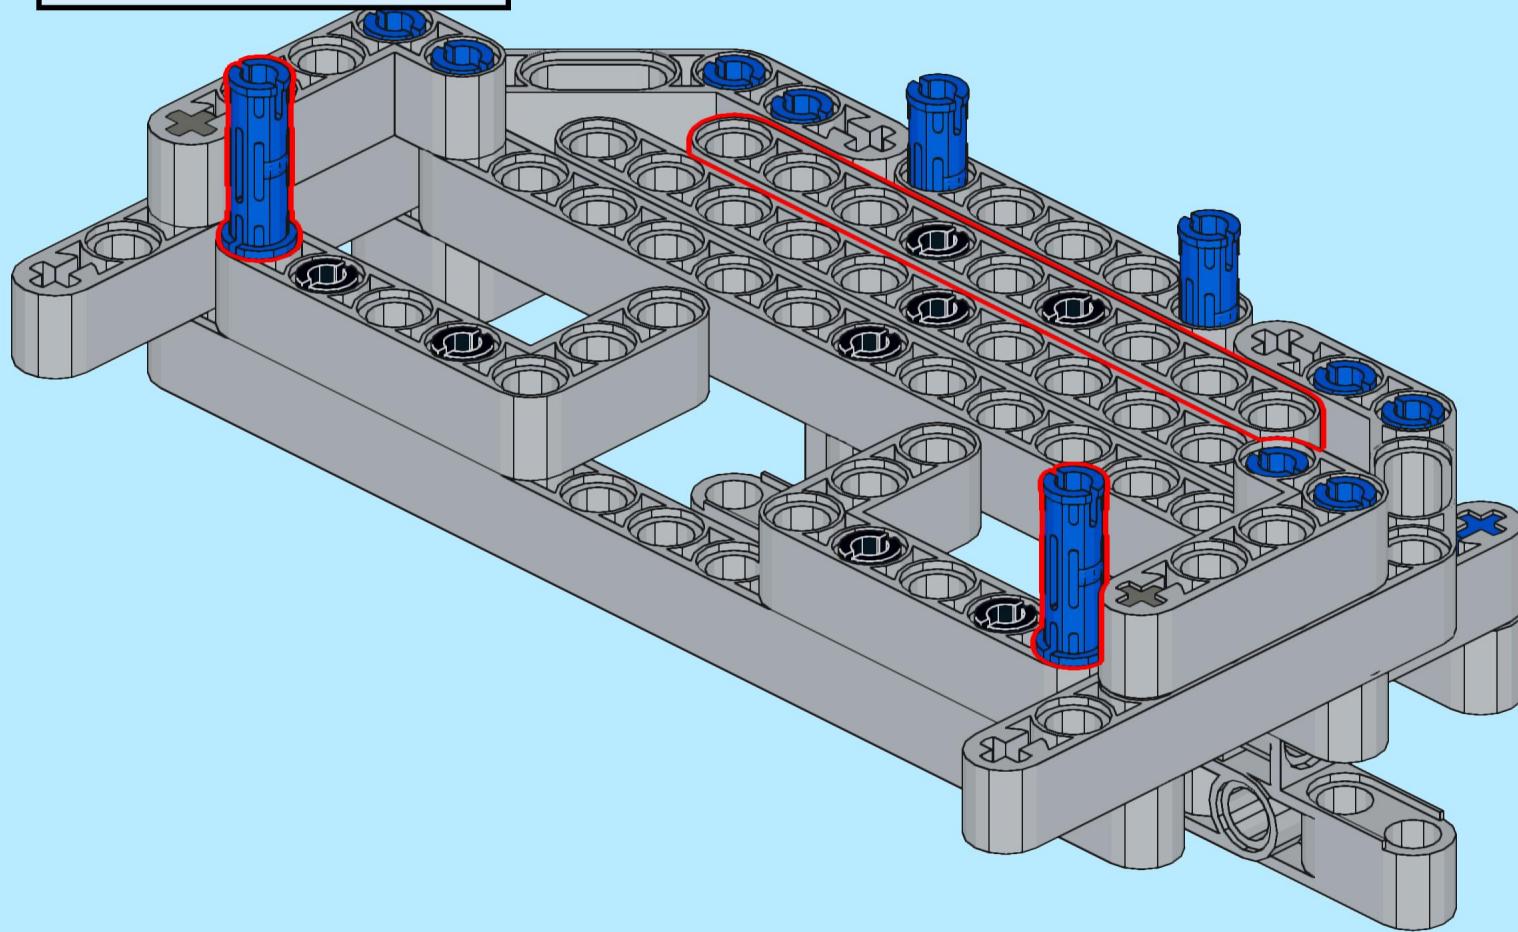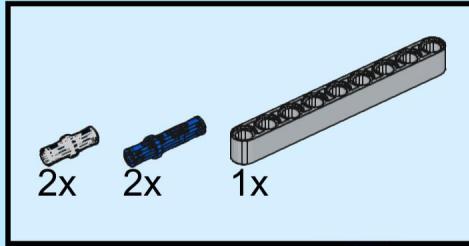



**11**

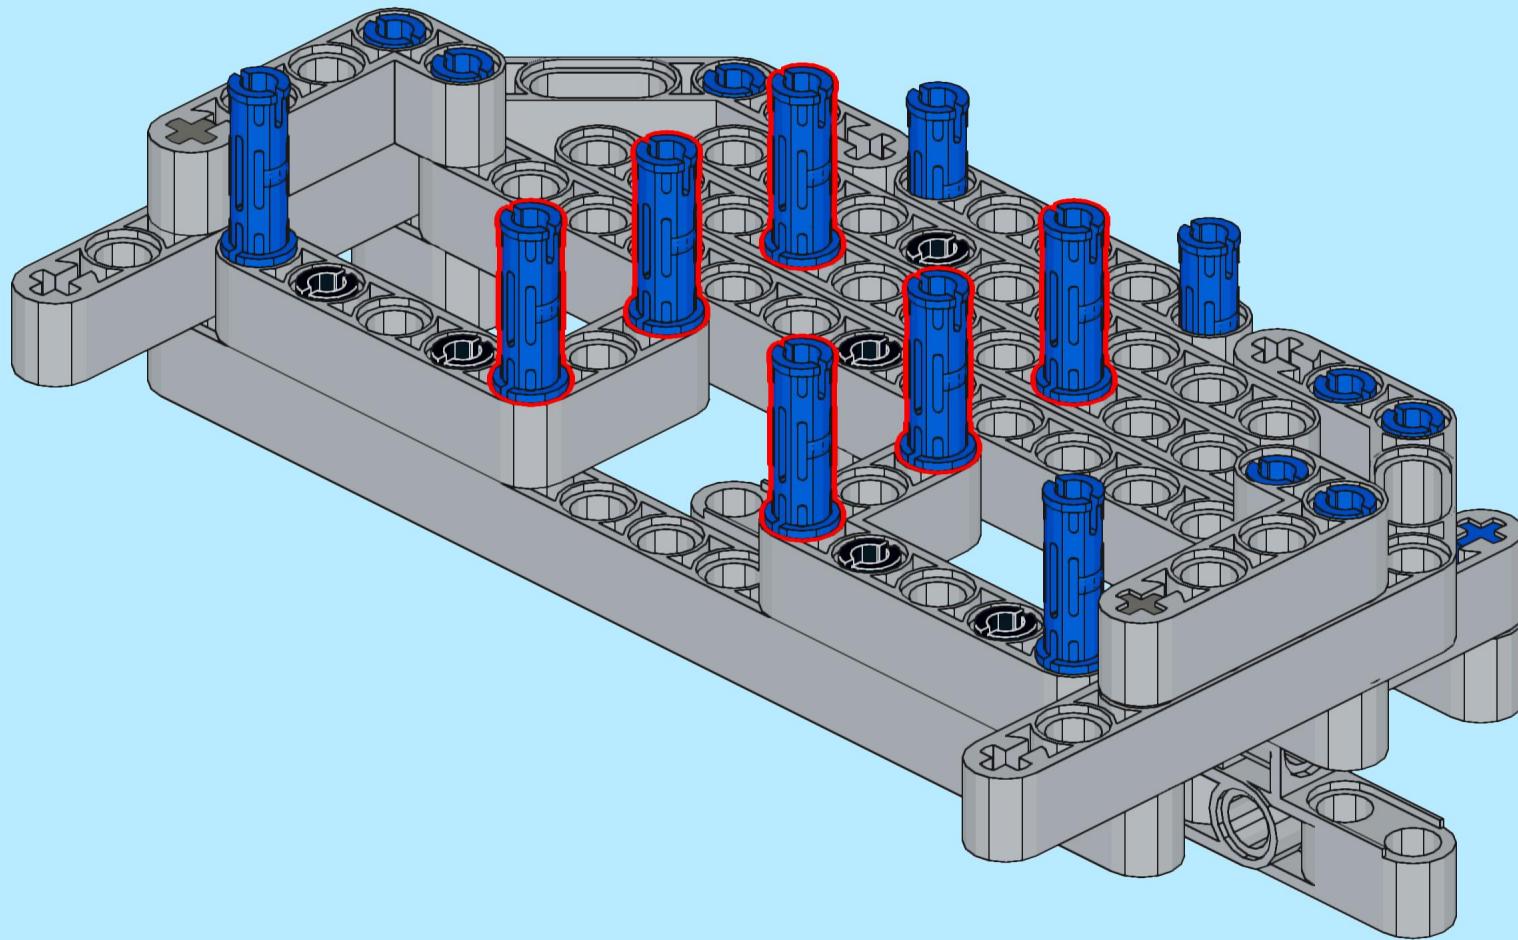



**12**

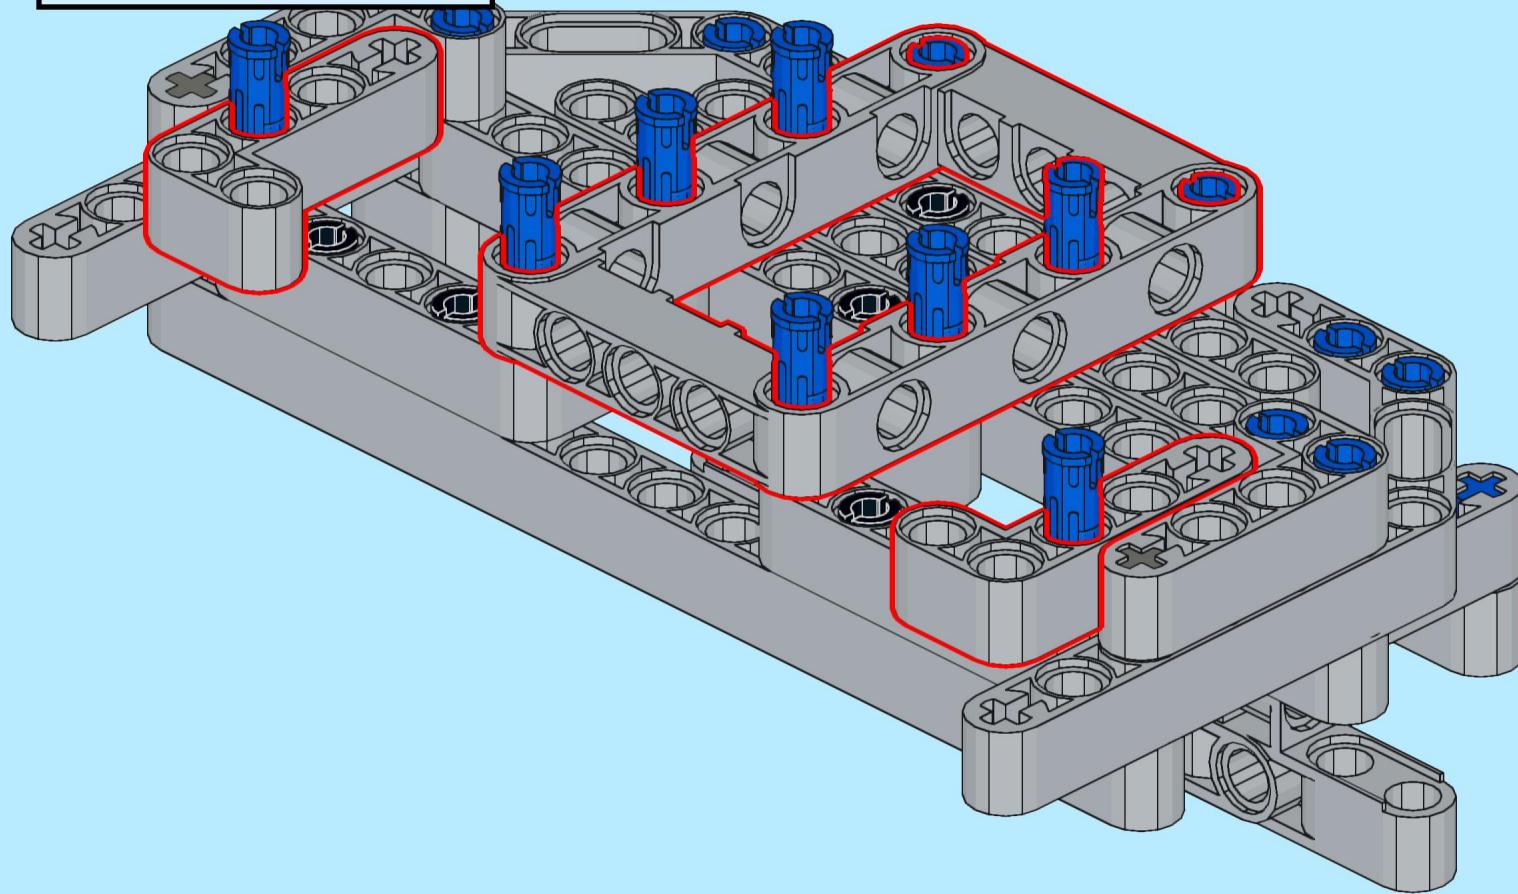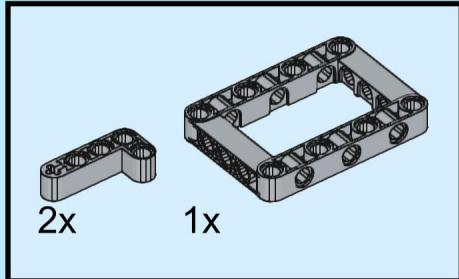

# 13

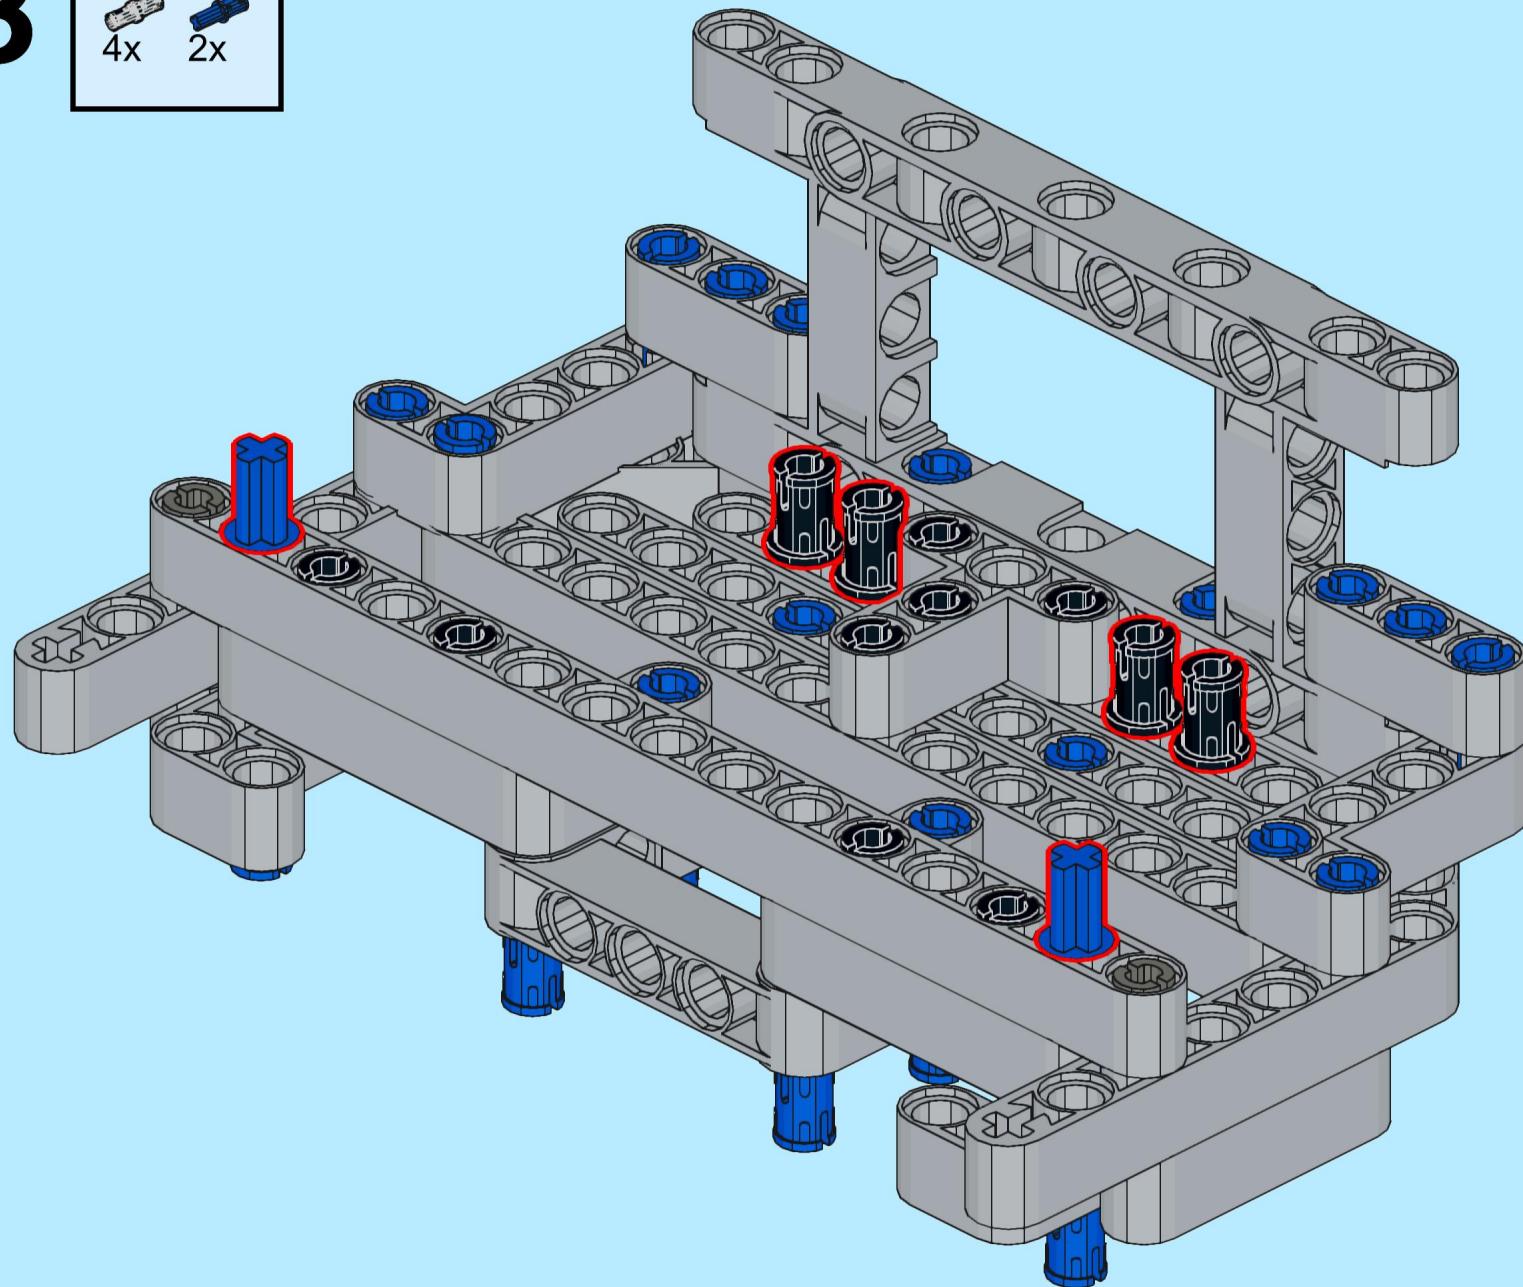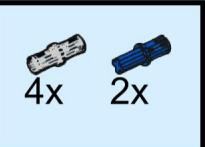

14

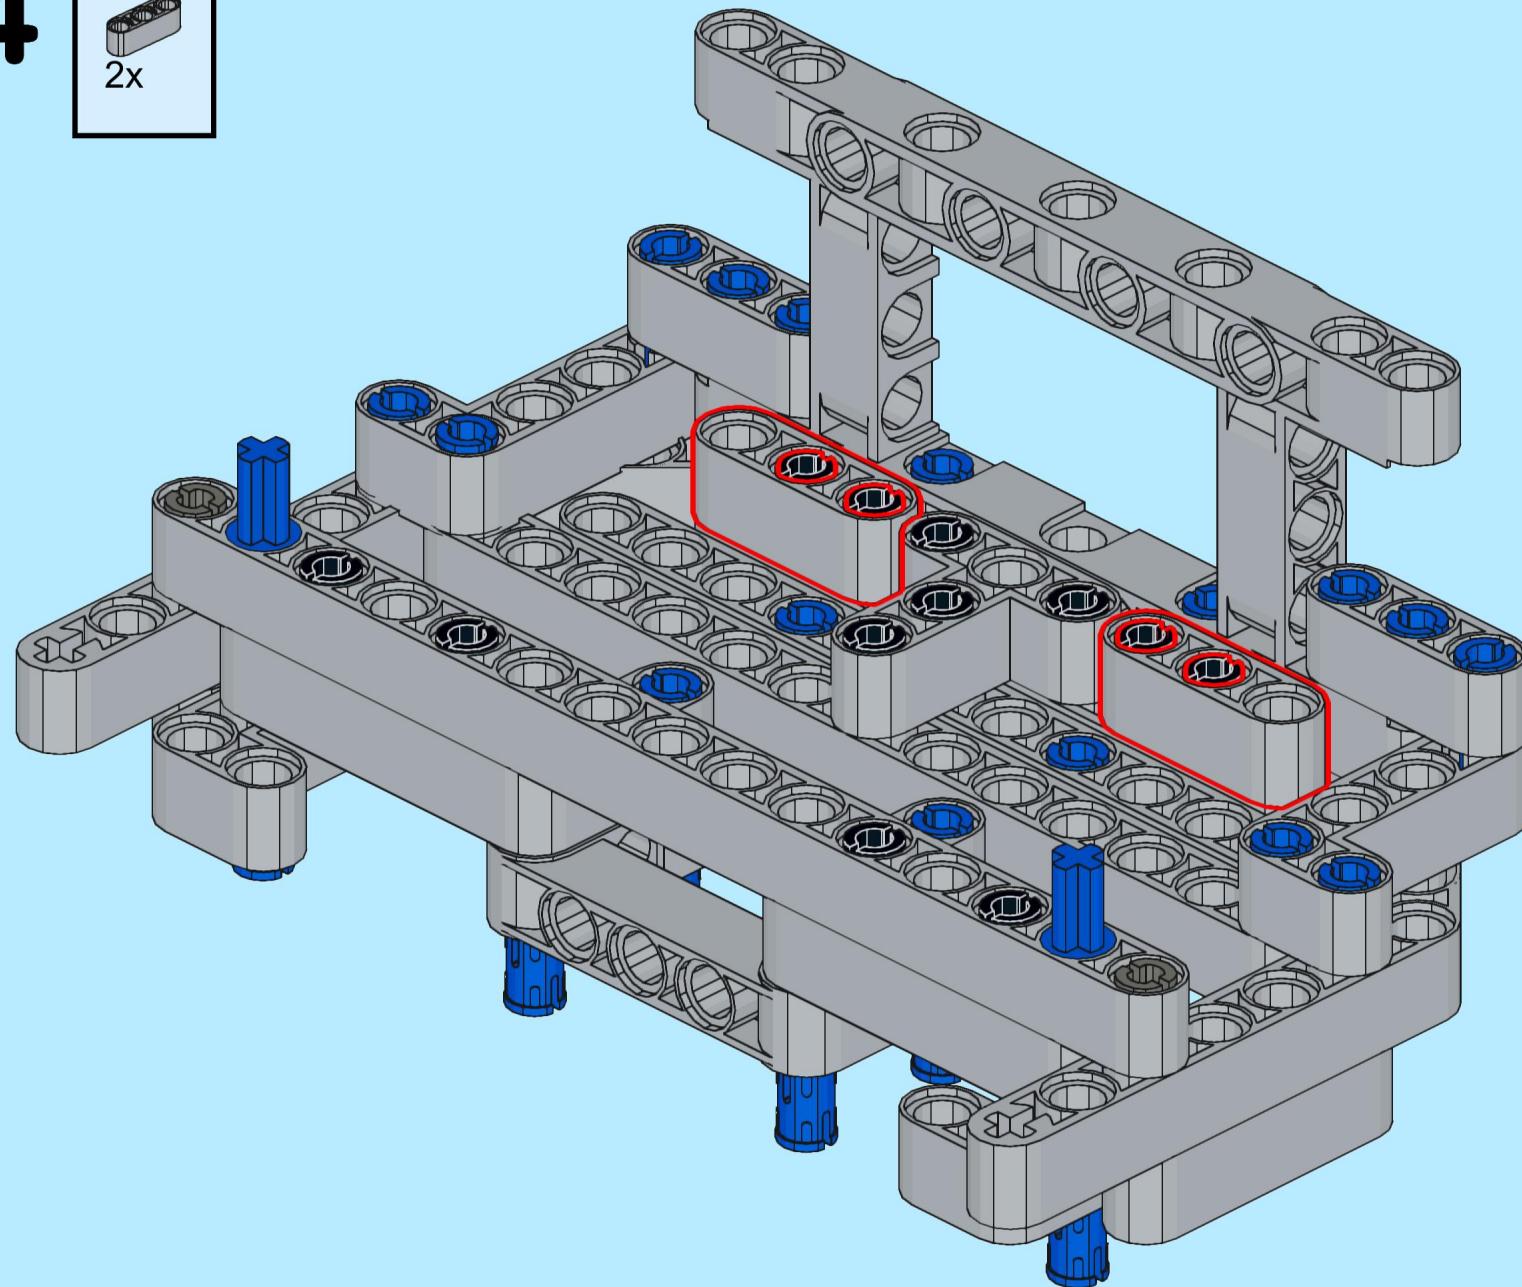
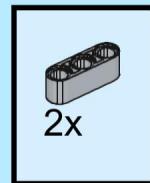


## **Right Gear System:**



**For the "Knob Gear Drive" proceed to Step 15 on the following page.**

**For the "Worm Gear Drive" jump to Step 36 in the instruction manual.**



**15**

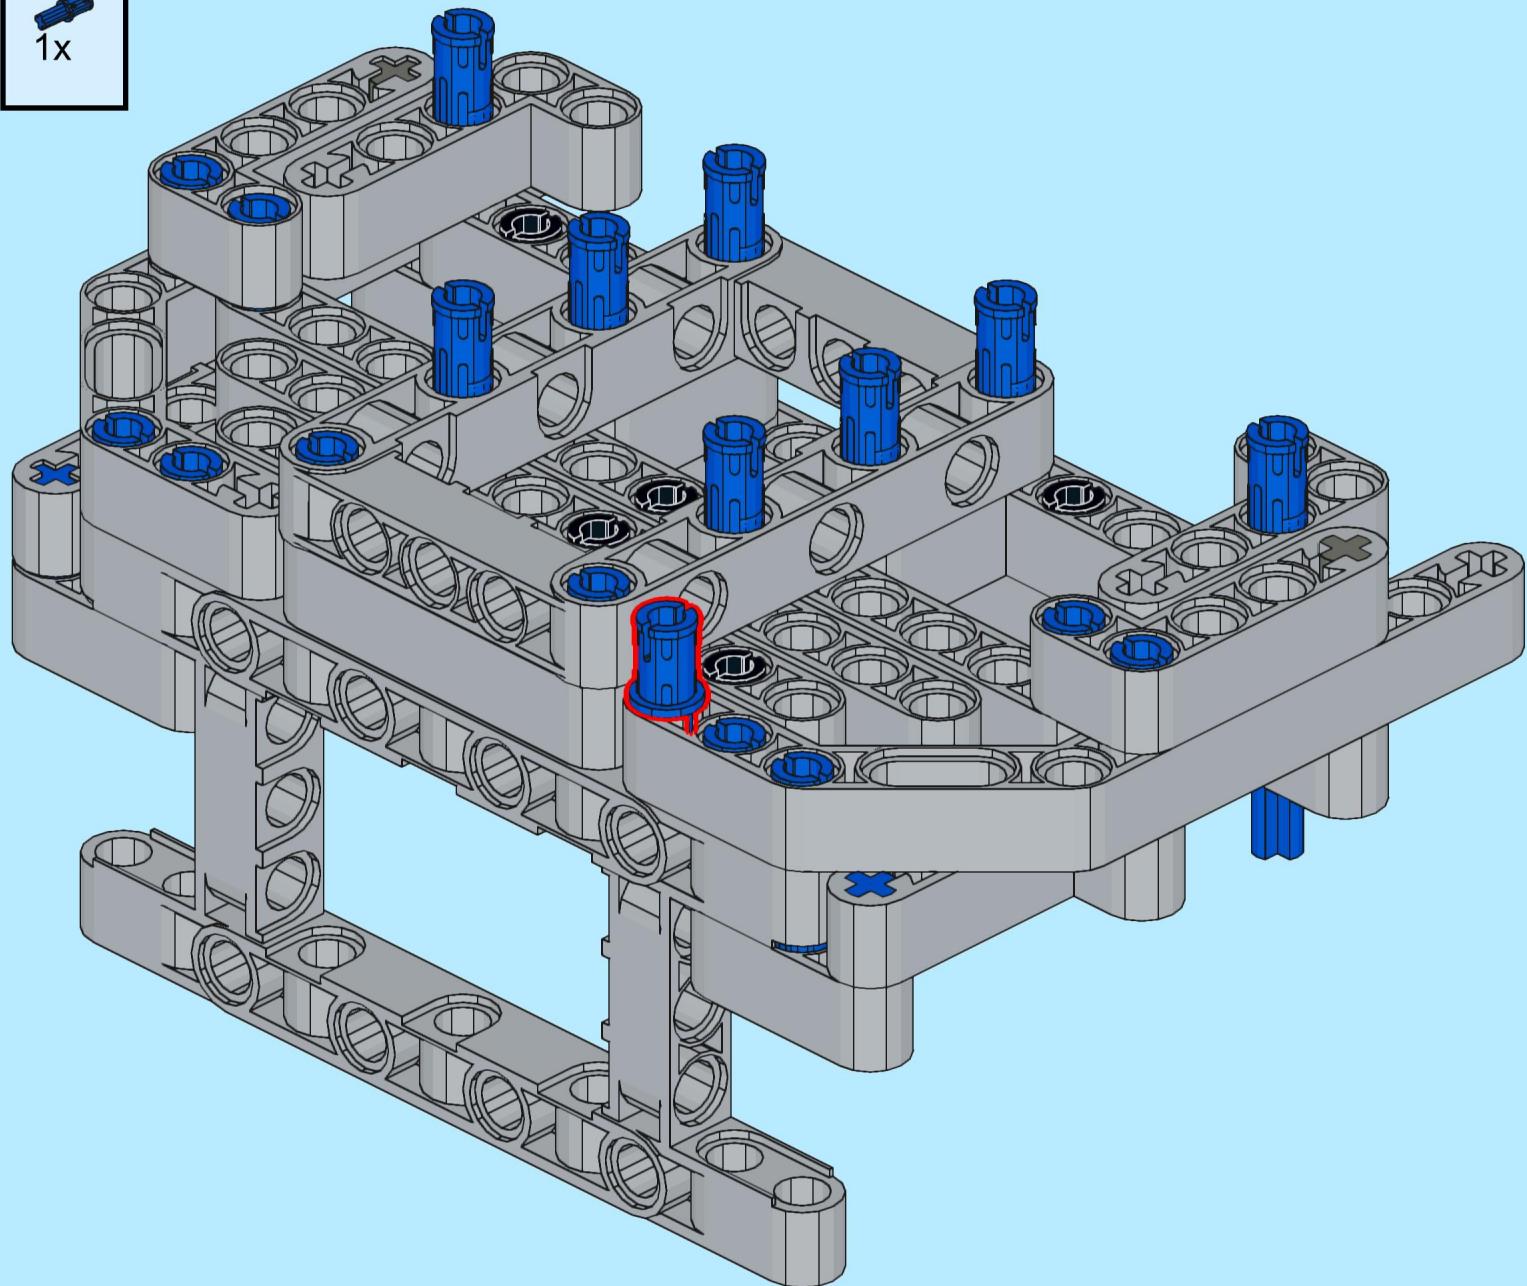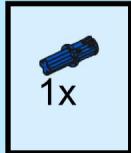



**16**

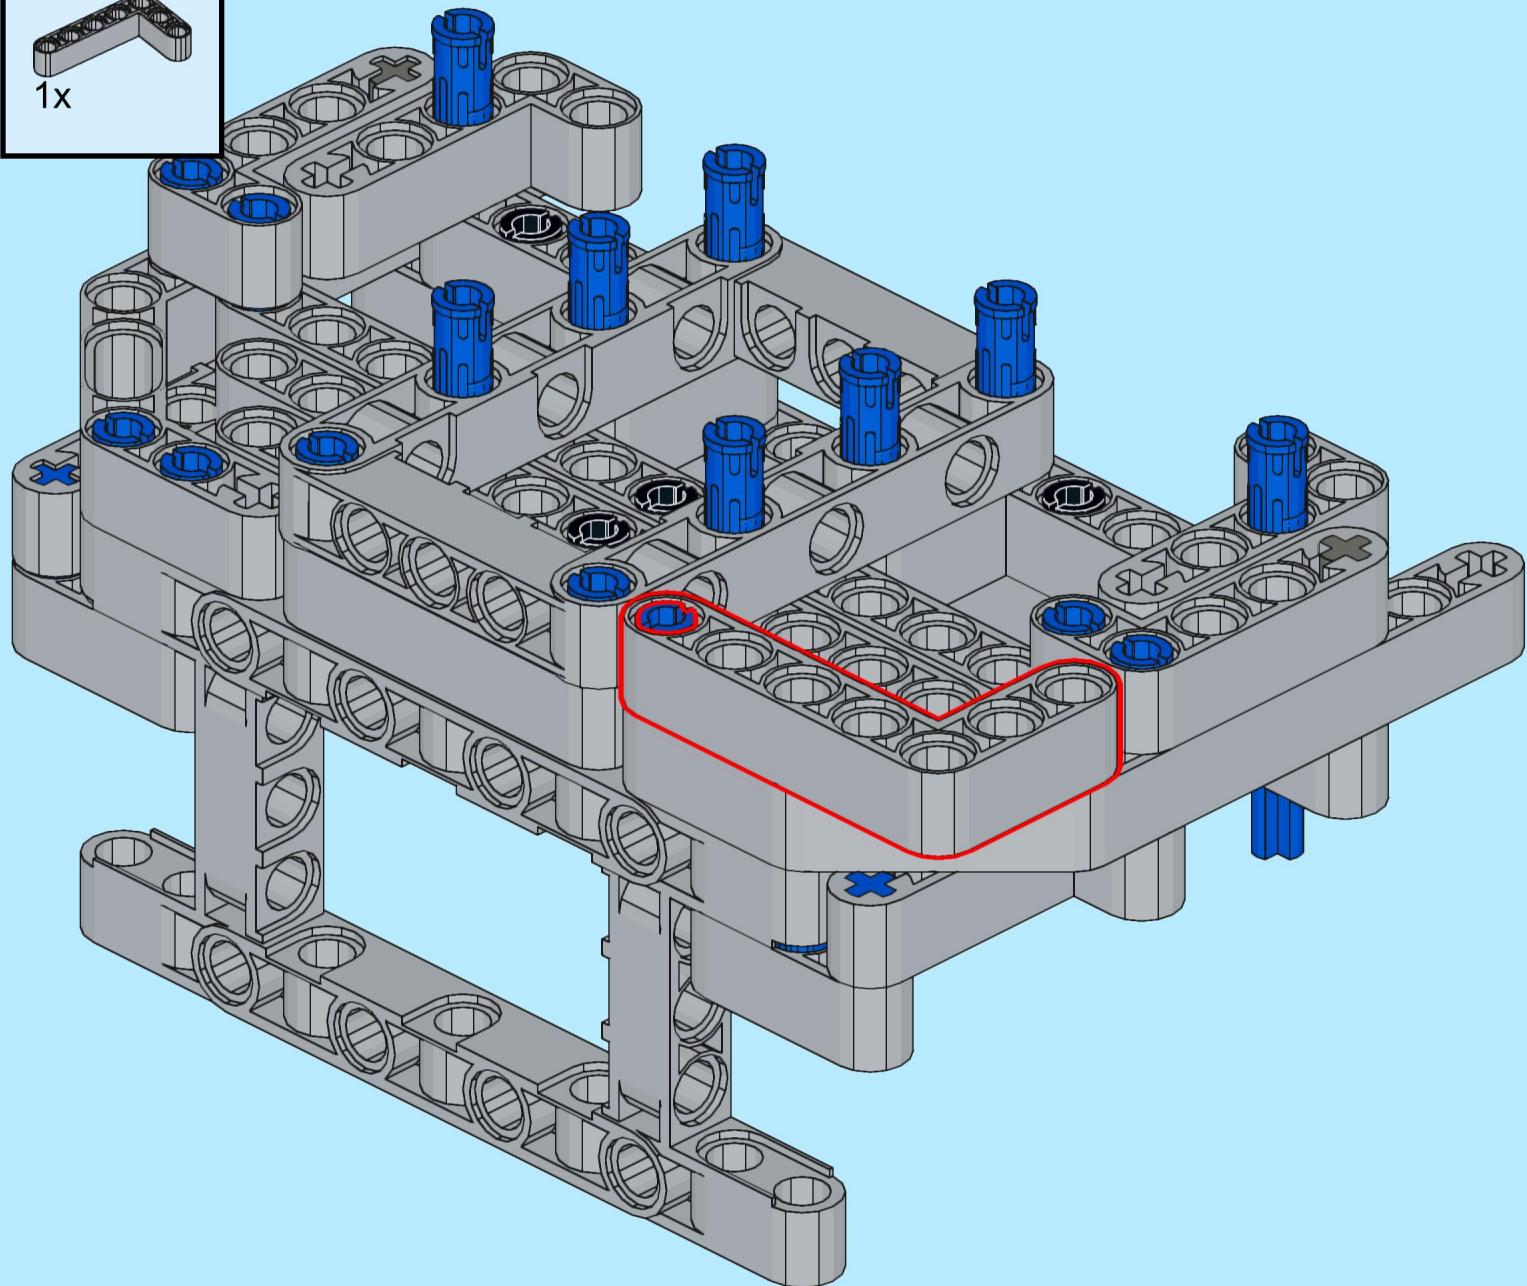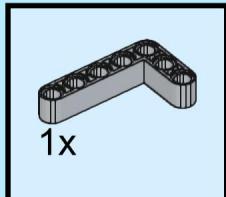



17

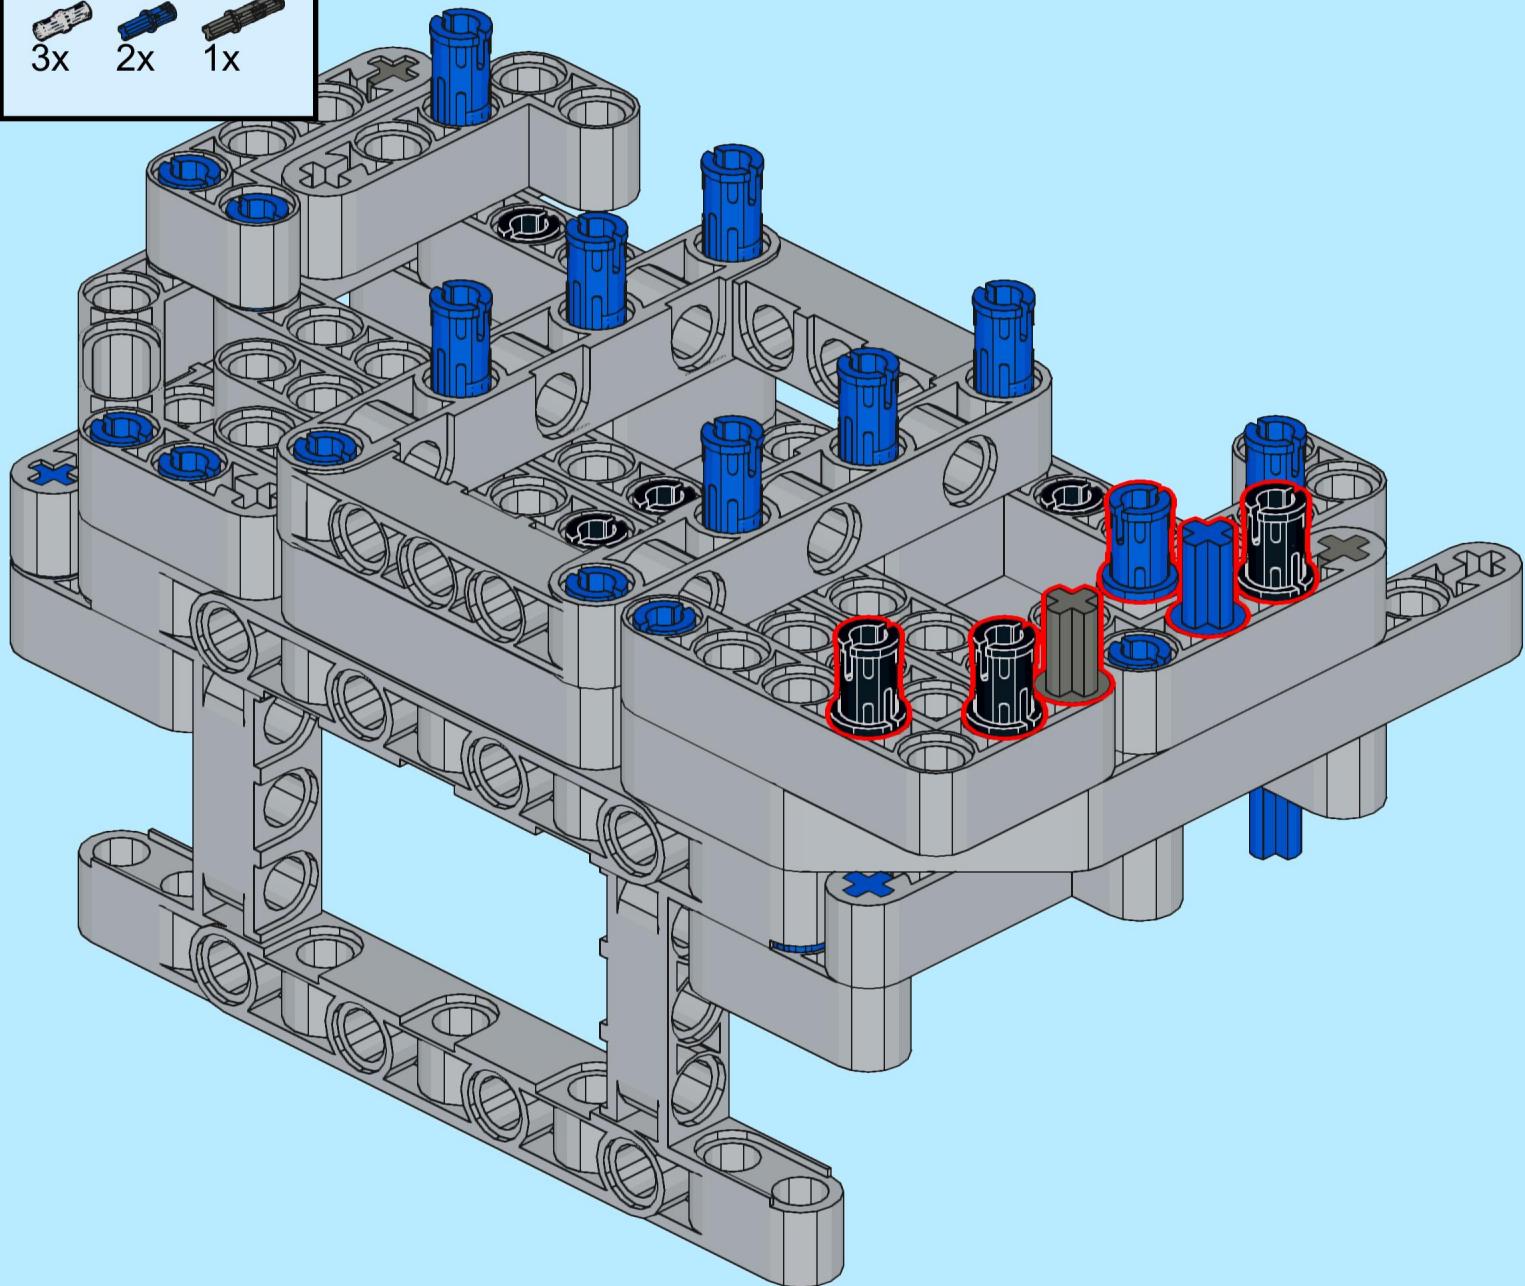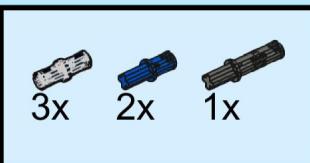



**18**

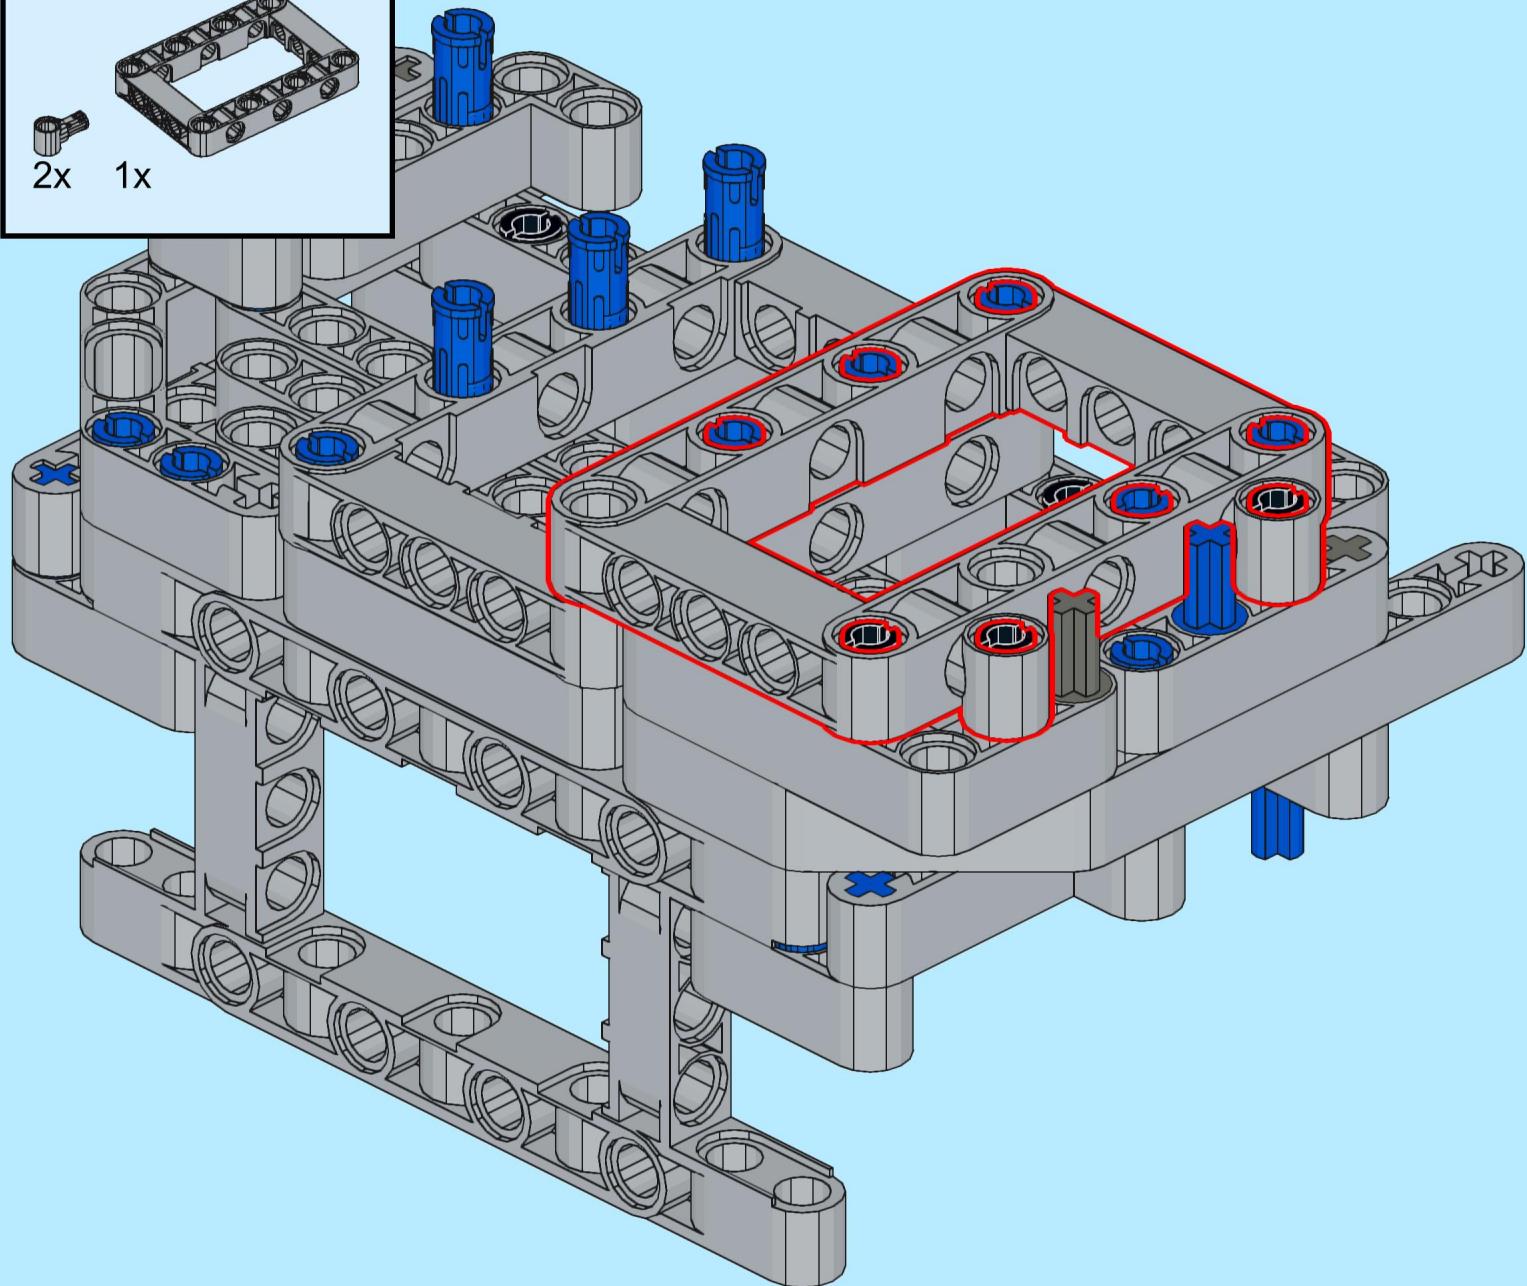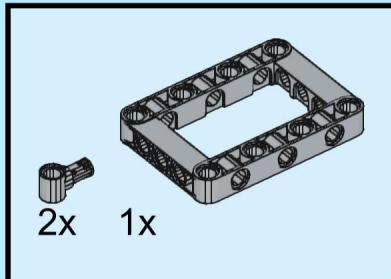


**19**

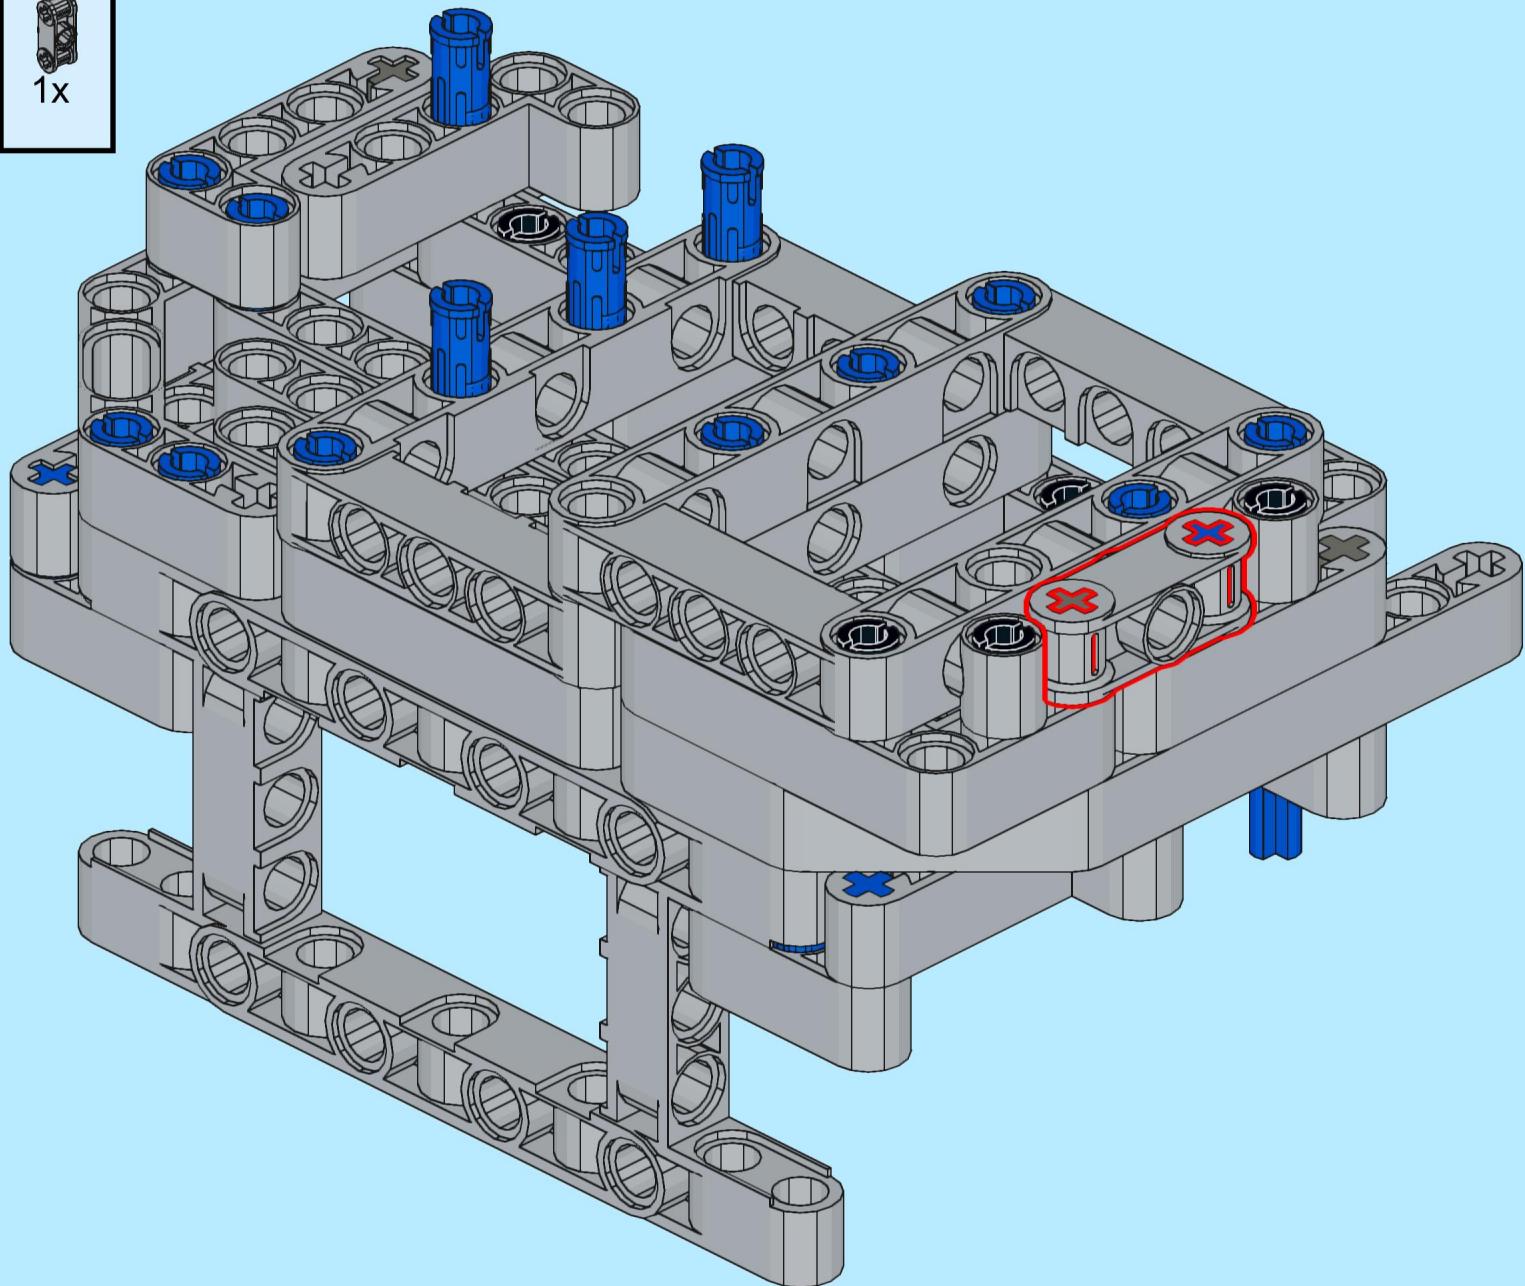



**20**

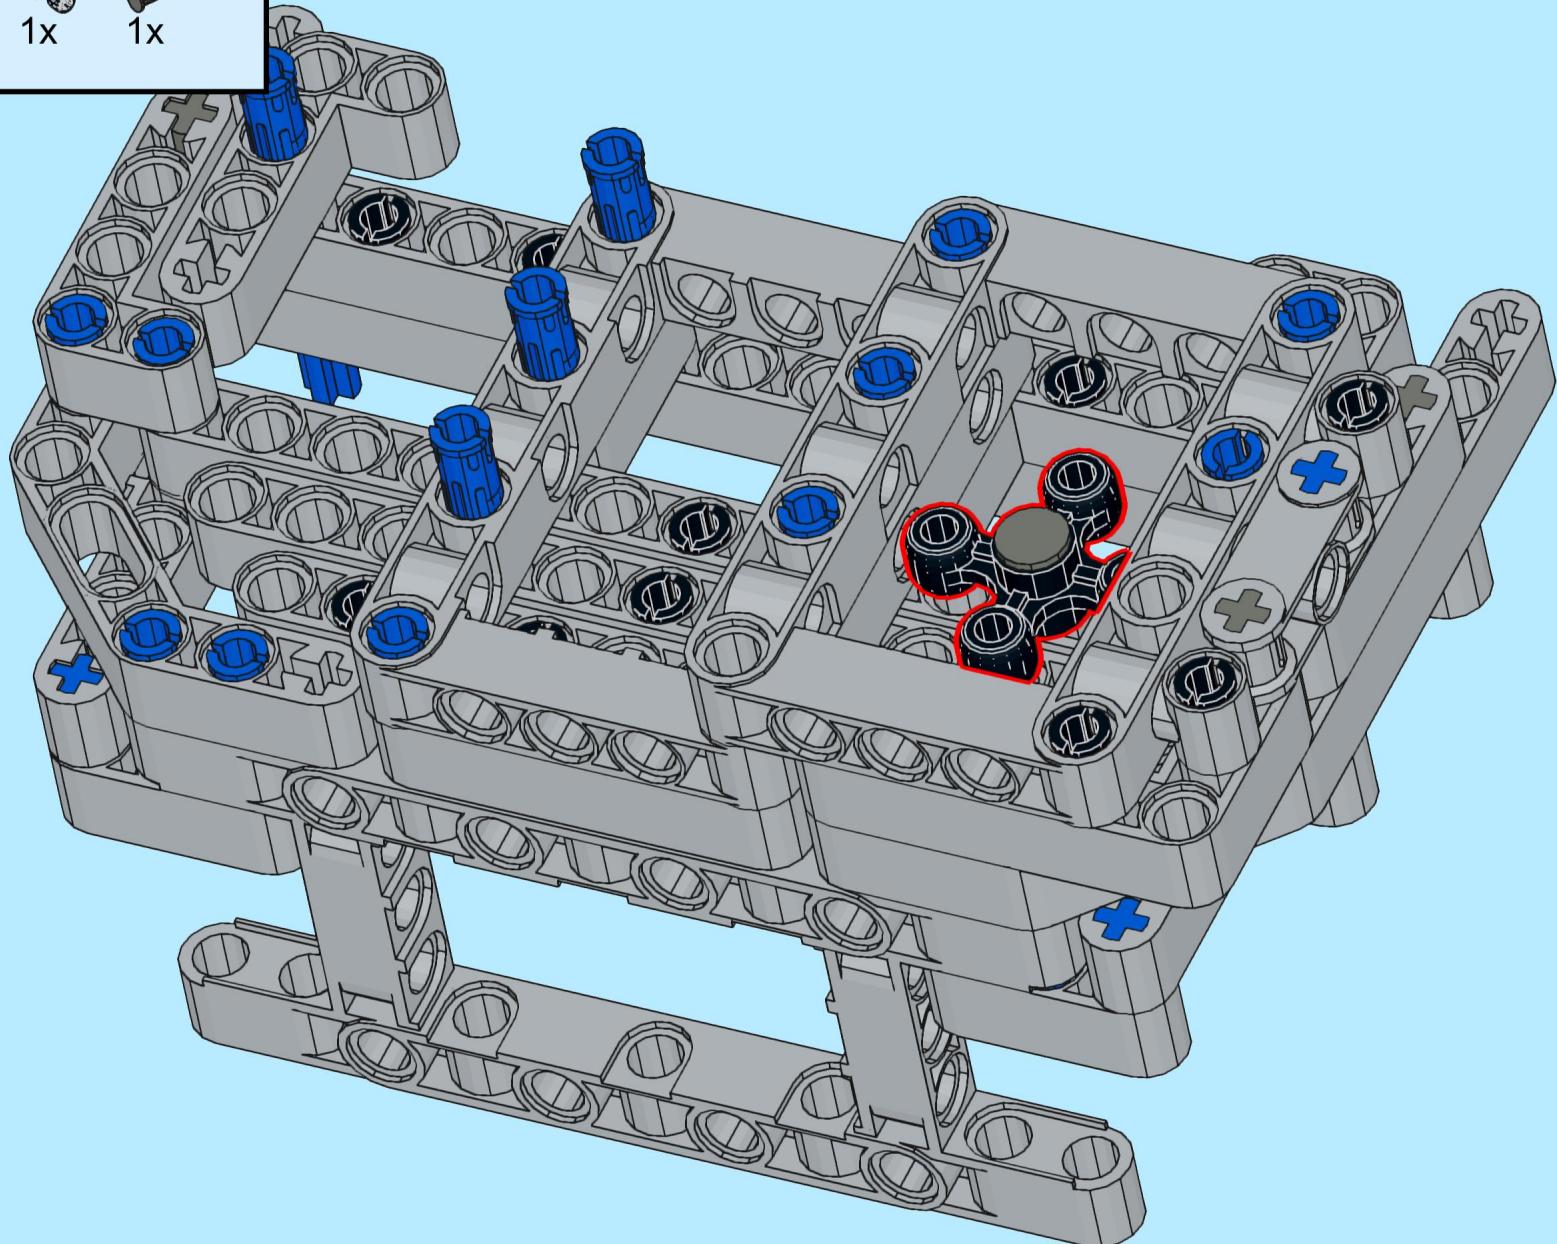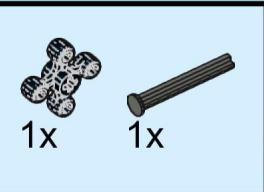



21

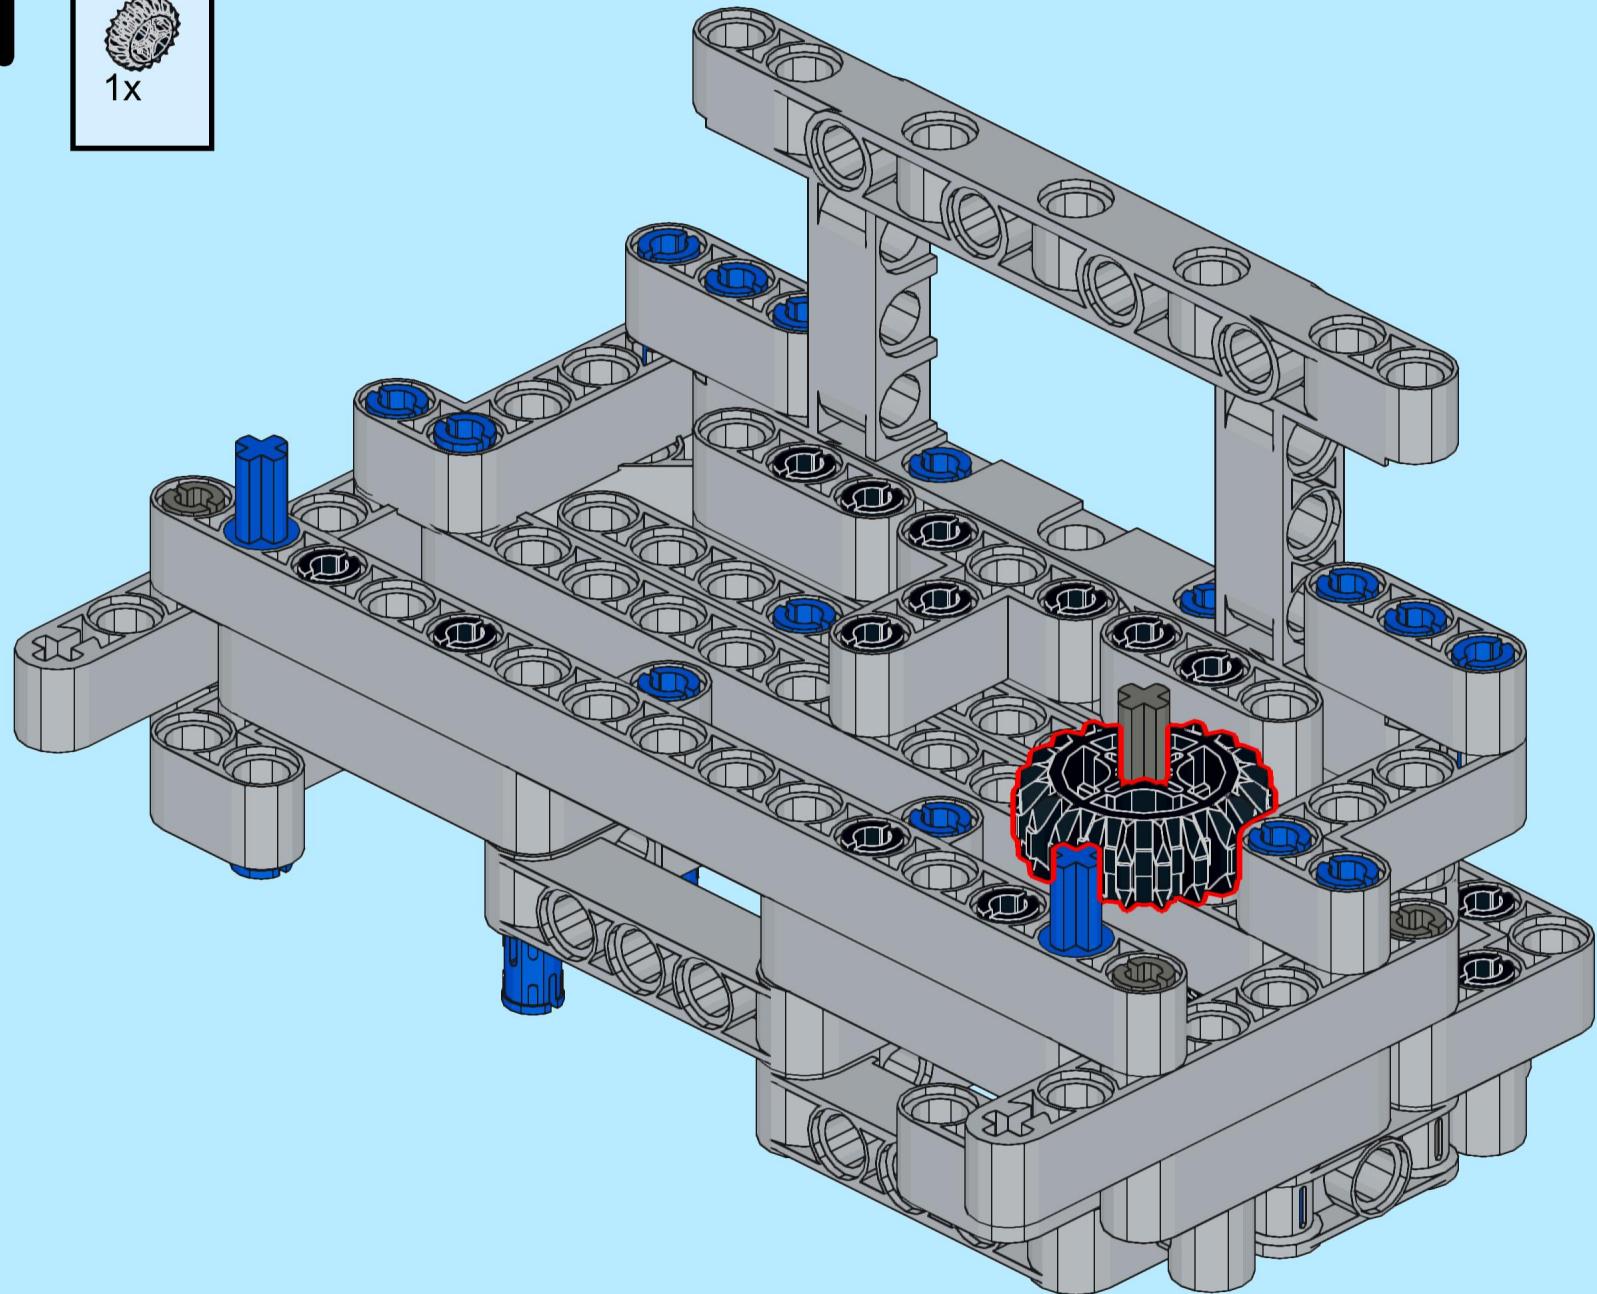


**22**

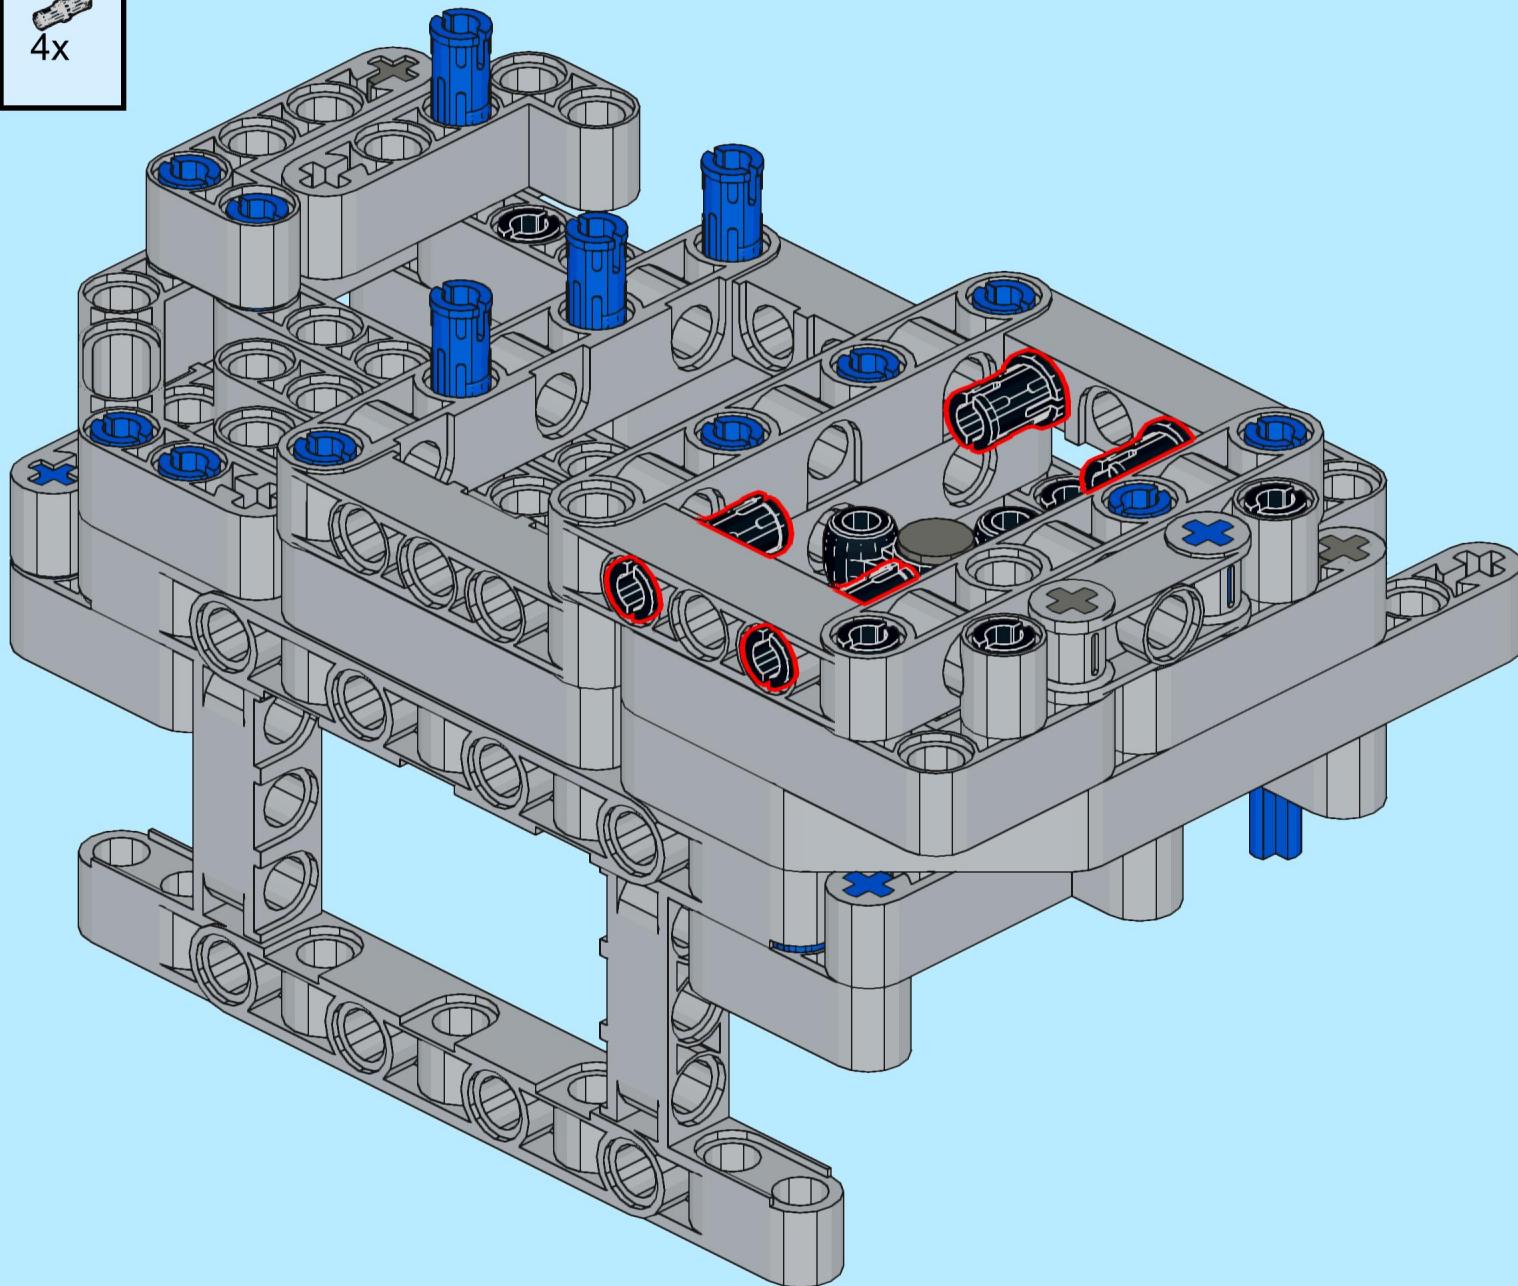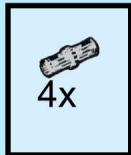


**23**

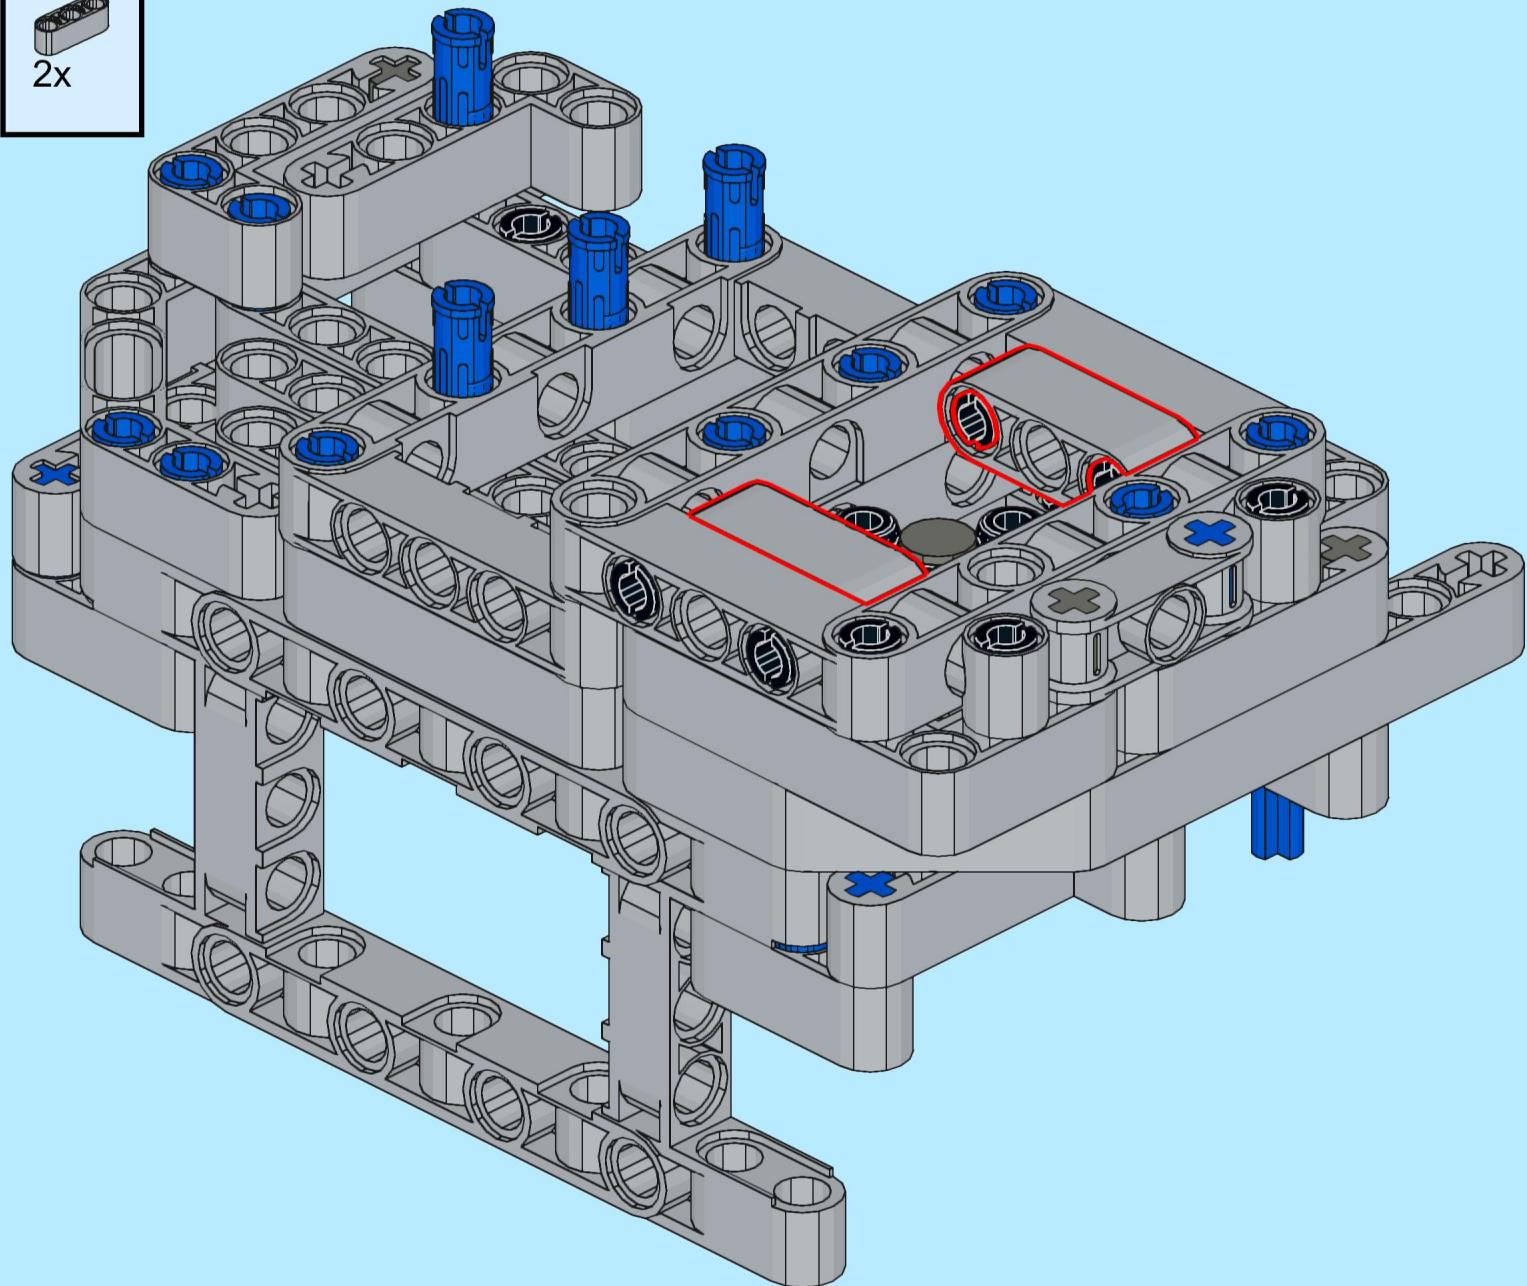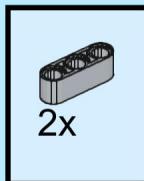

**24**

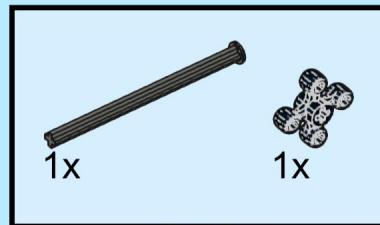


**FOR SIDE  
FACING AXLE**

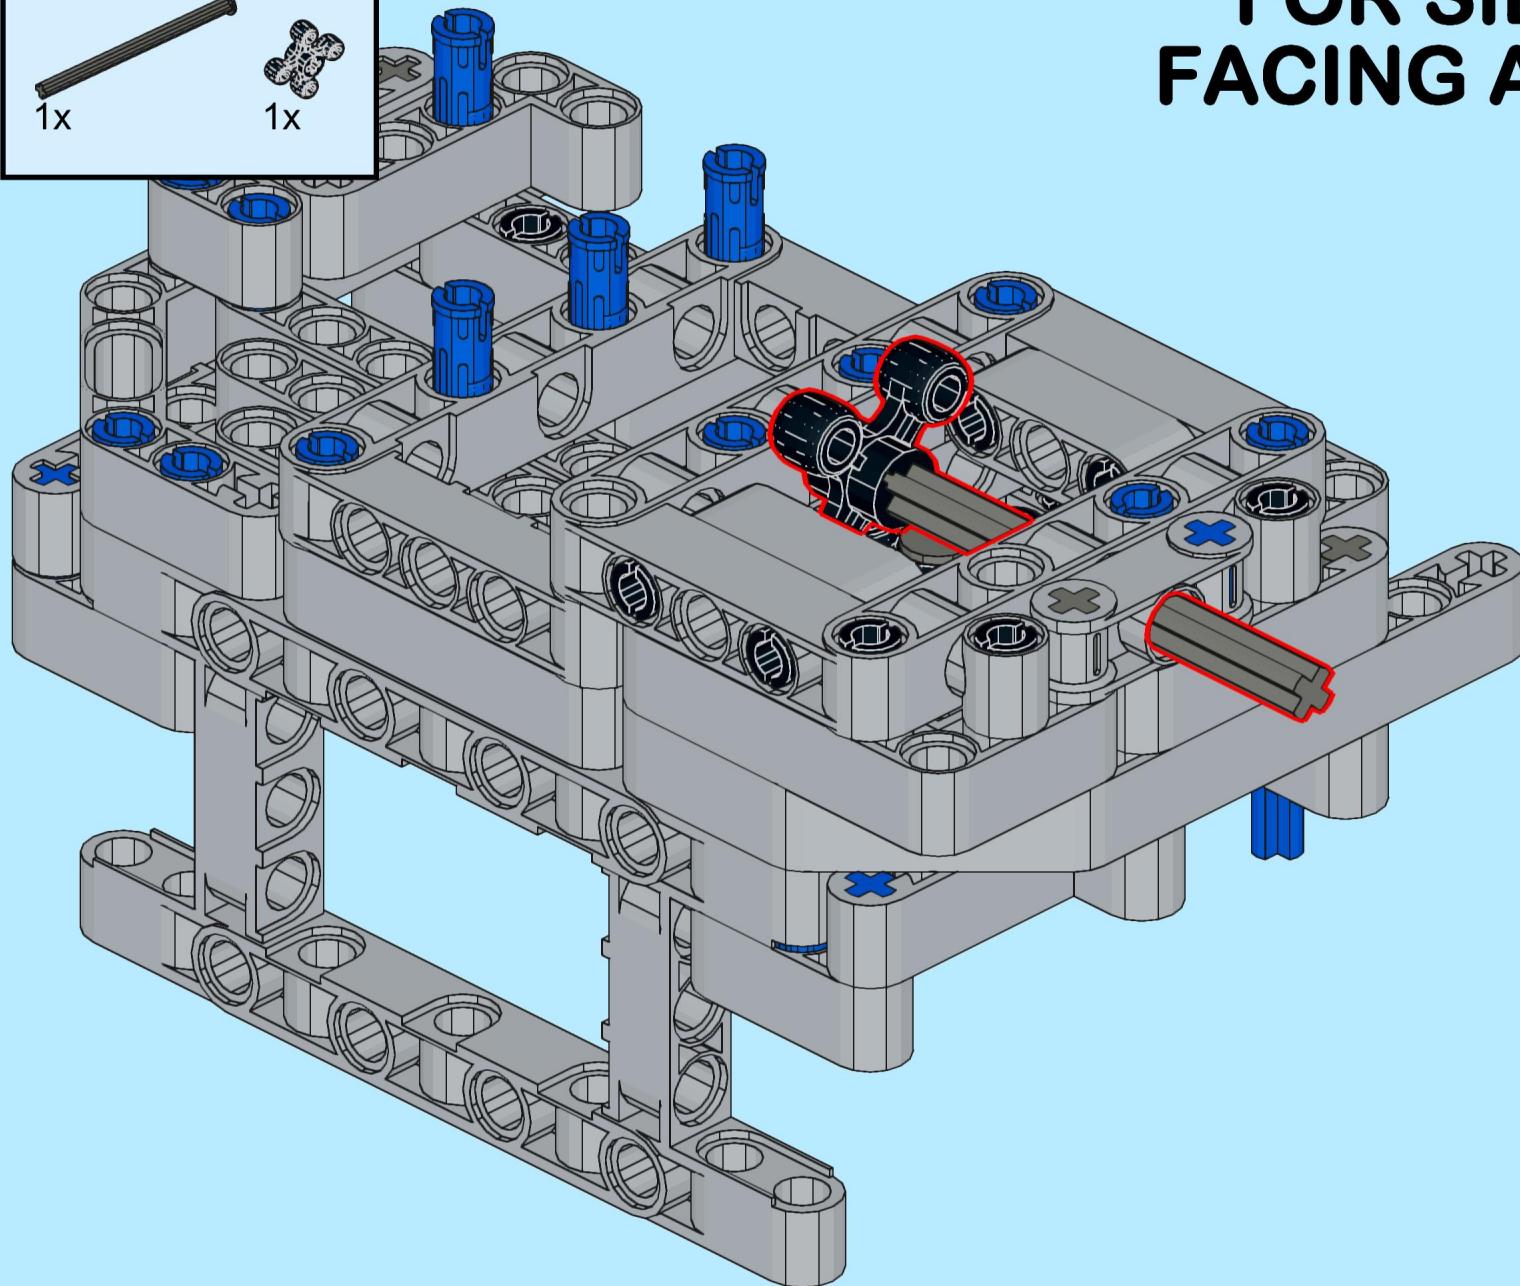

**24**



**FOR FRONT  
FACING AXLE**

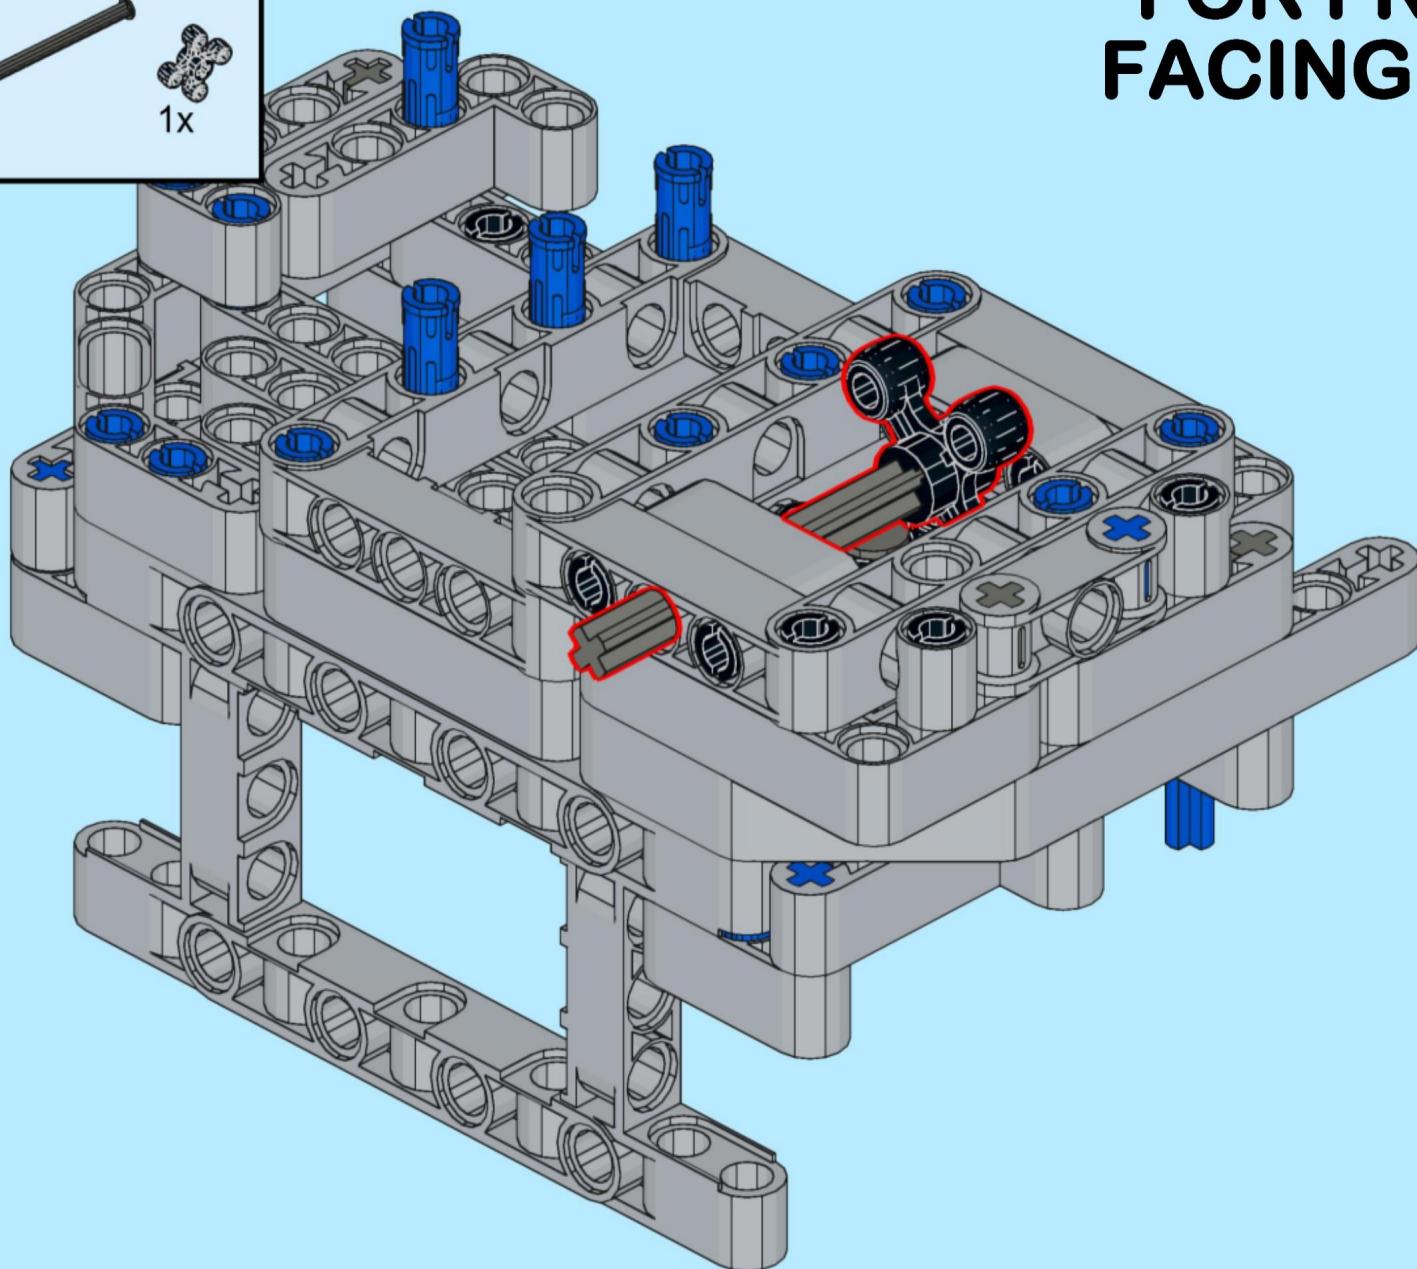


## **Left Gear System:**



**For the "Knob Gear Drive" proceed to Step 25 on the following page.**

**For the "Worm Gear Drive" jump to Step 56 in the instruction manual.**

**25**

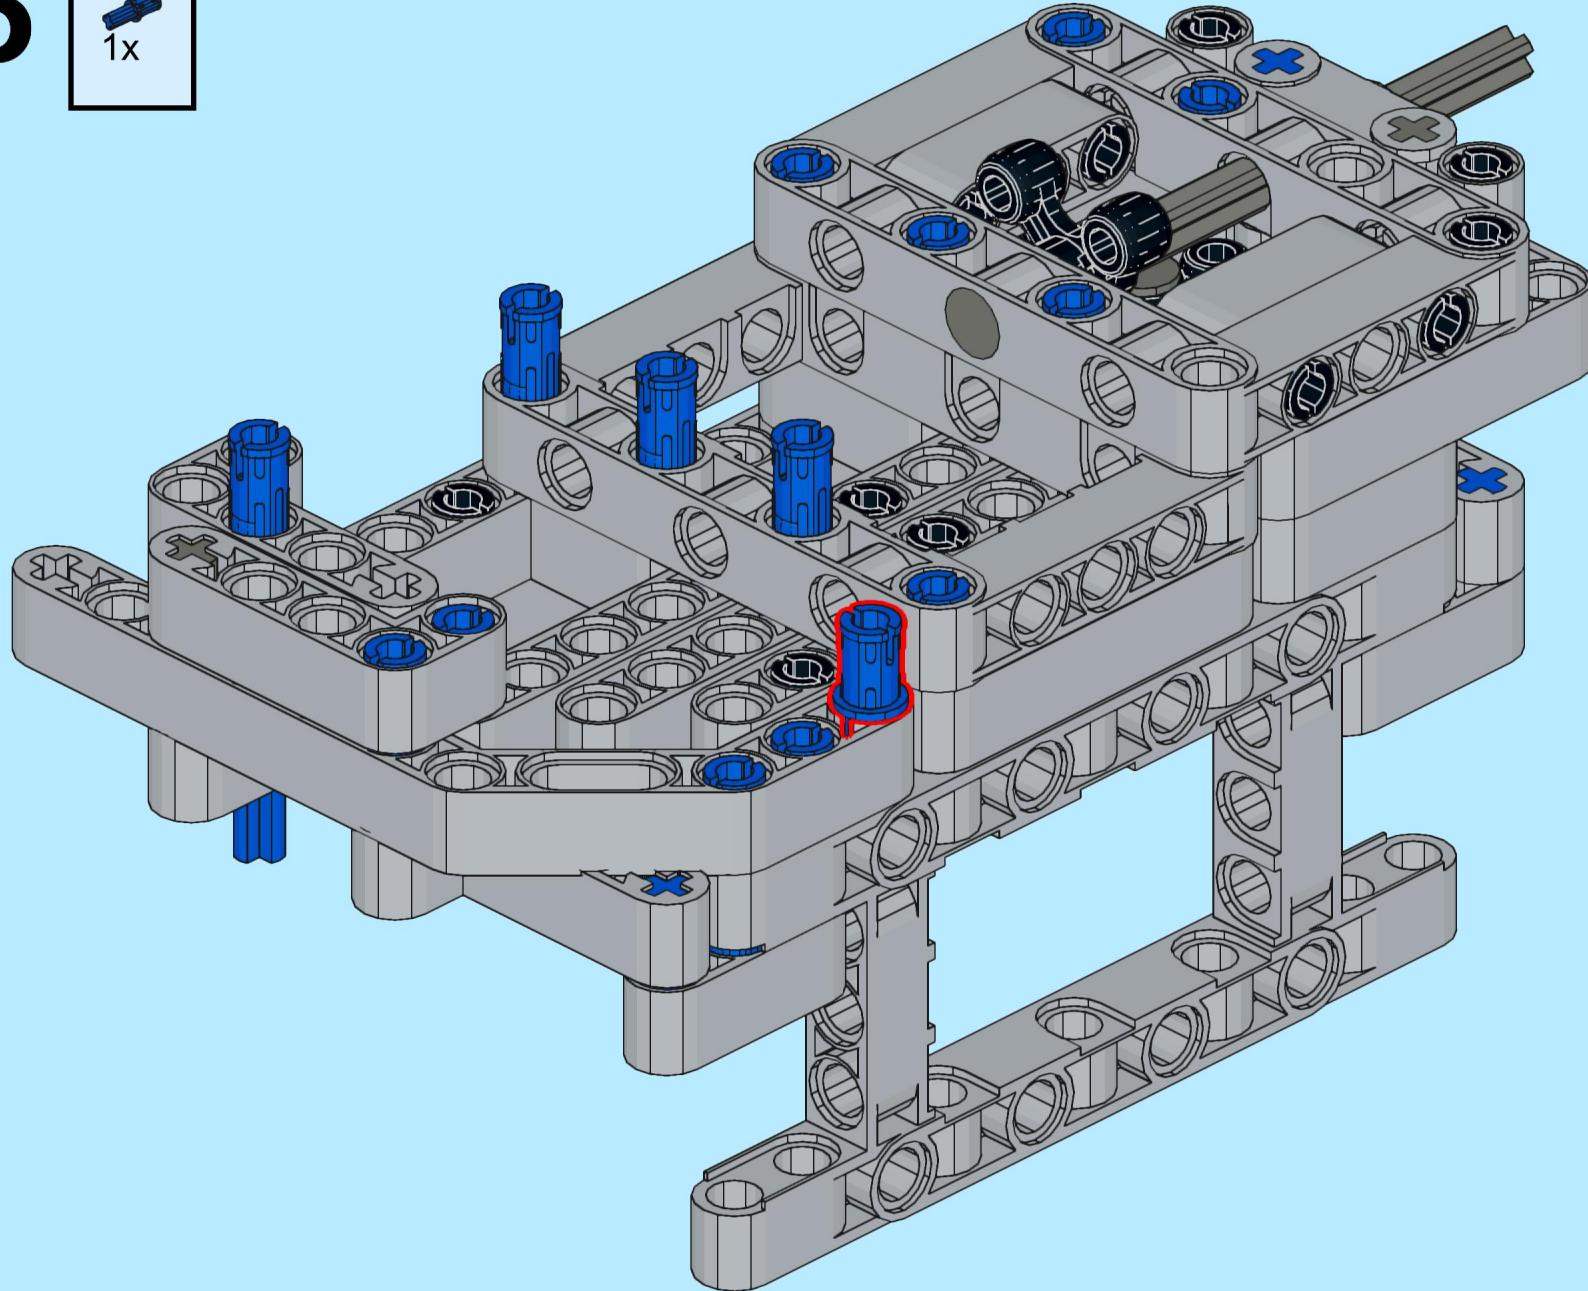


**26**

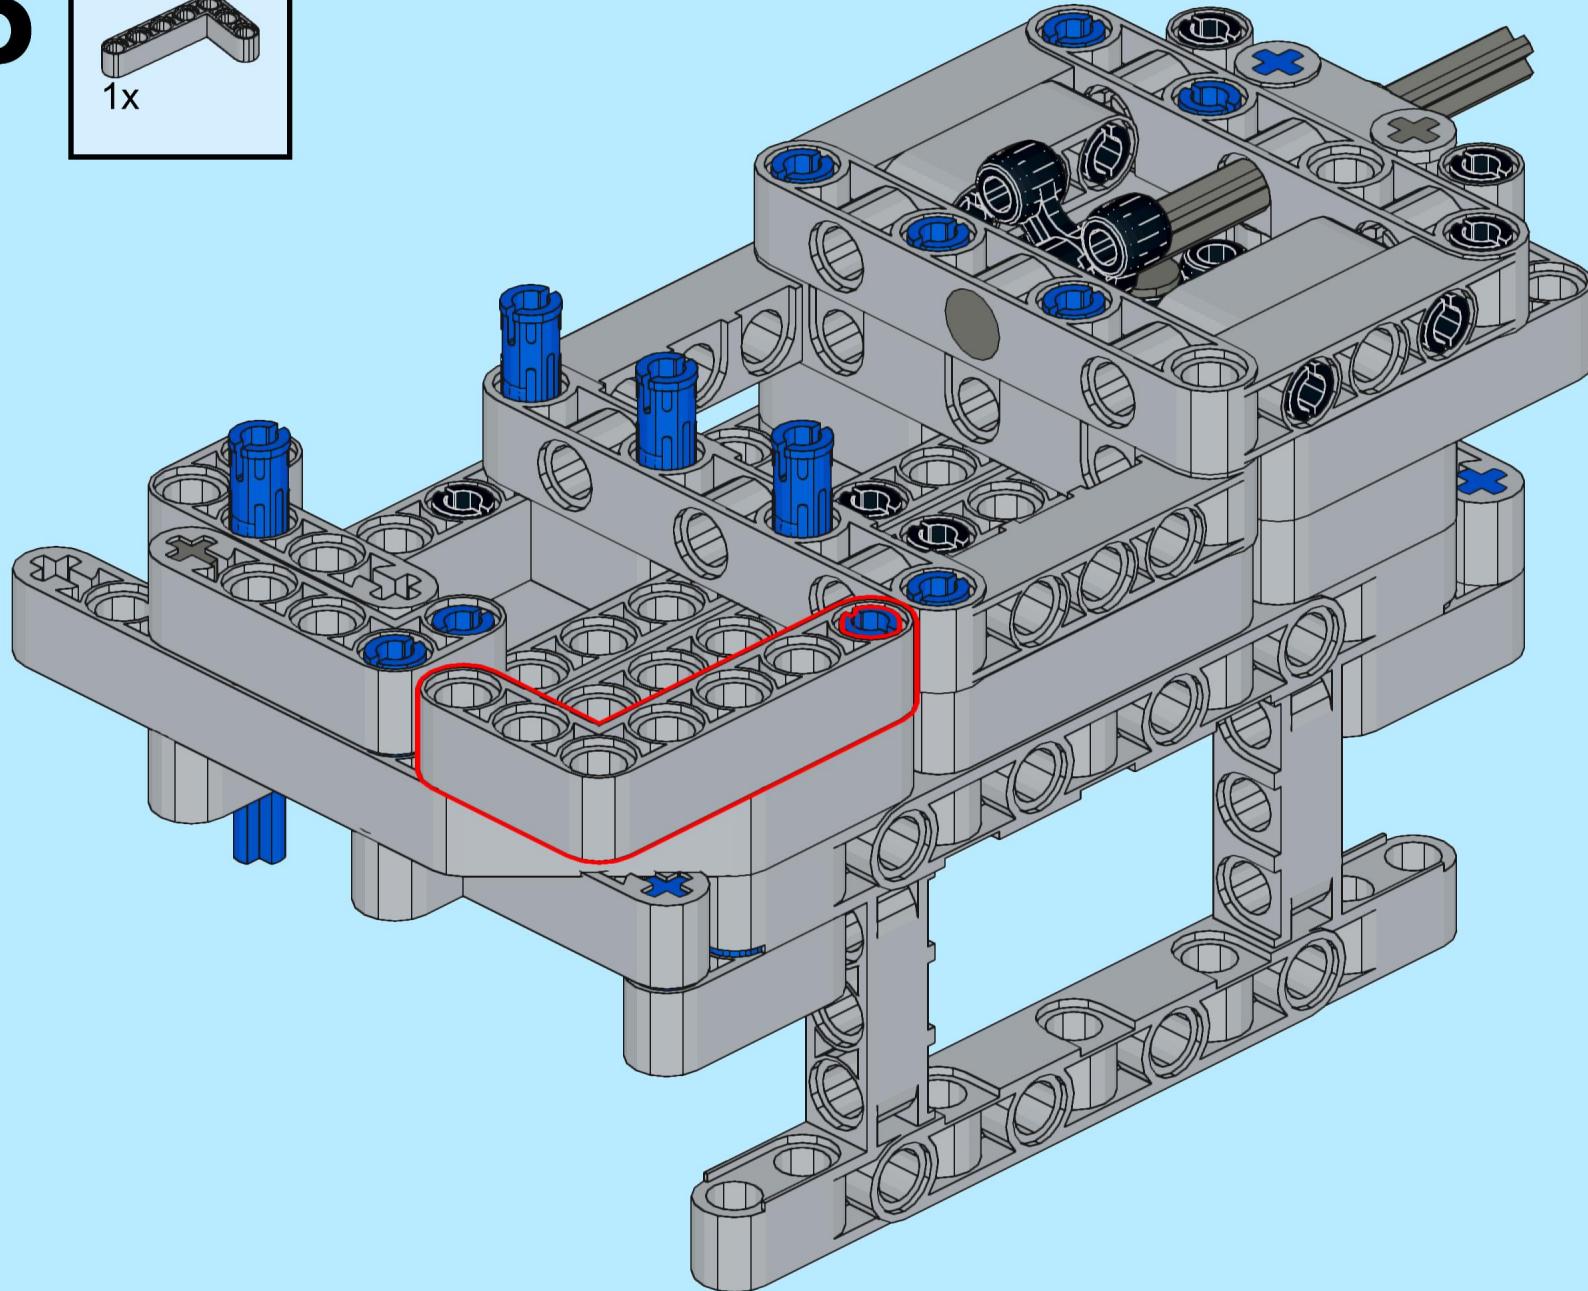
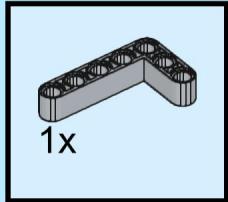


27



3x 2x 1x

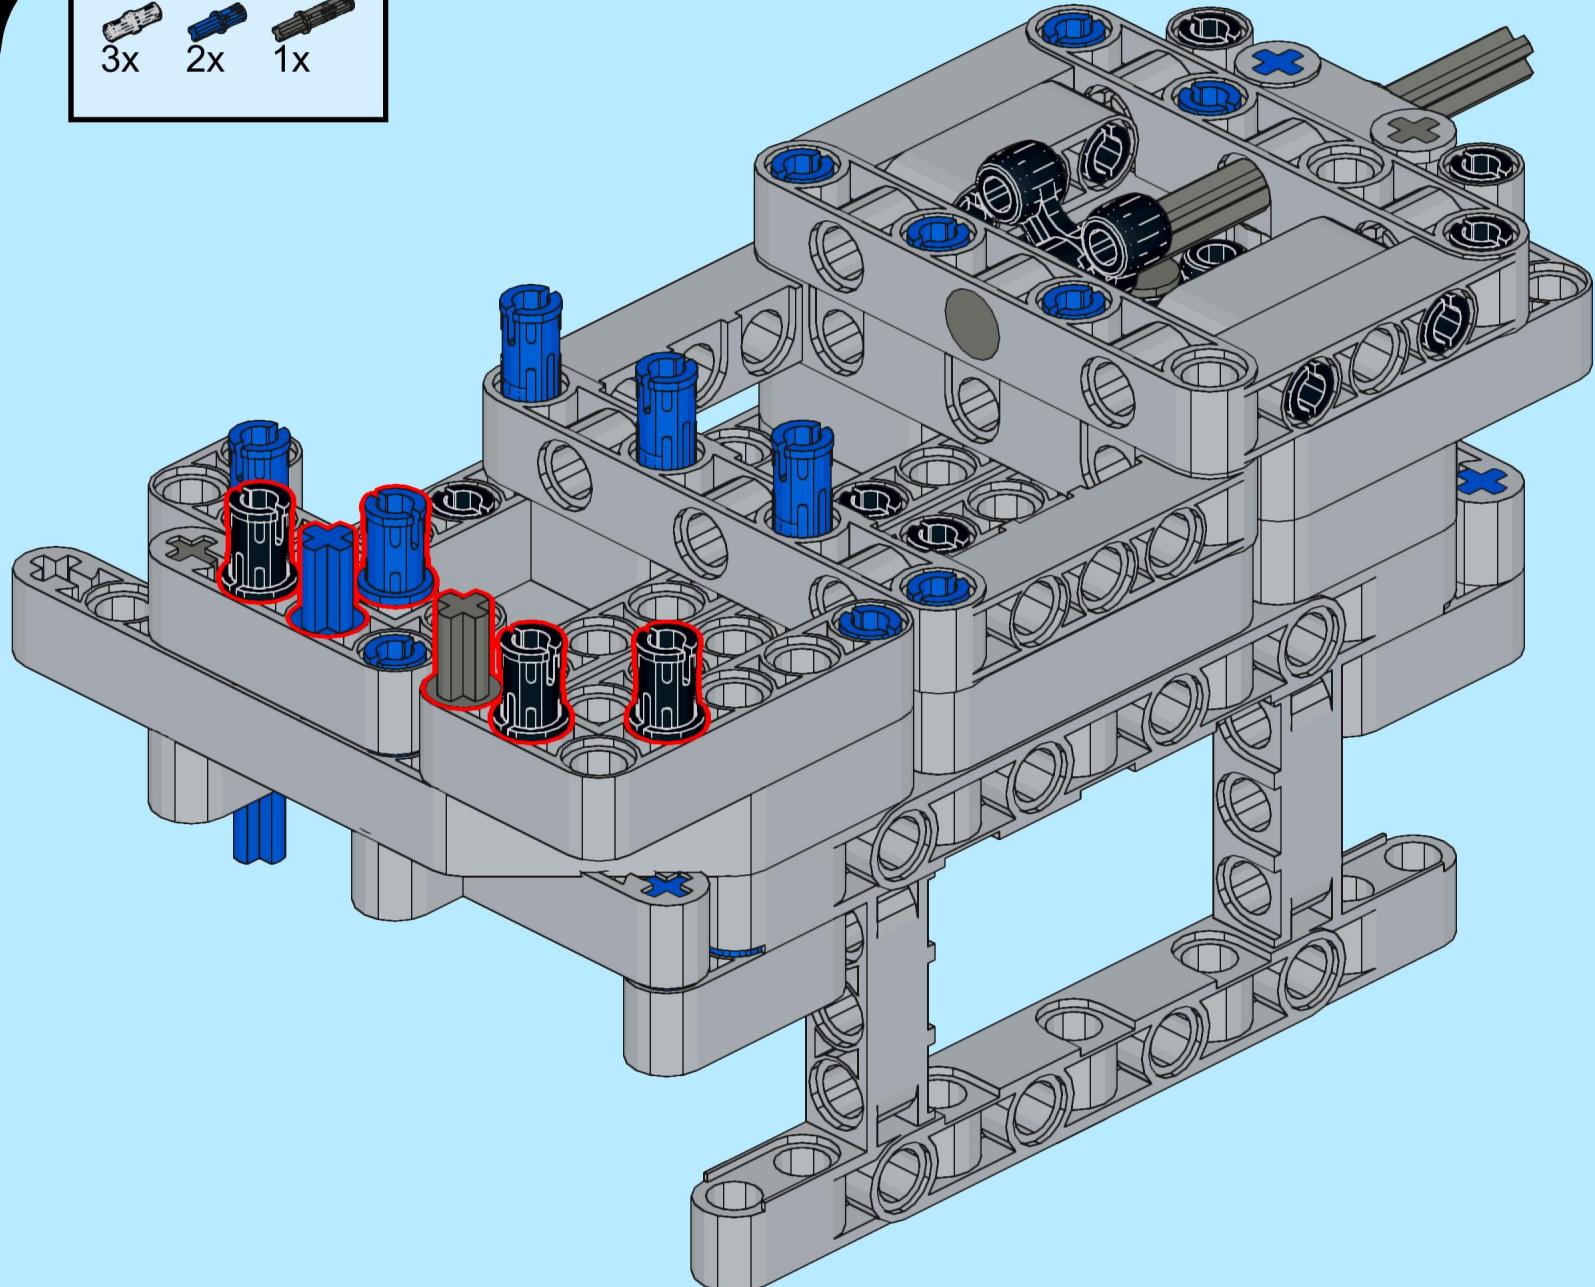



**28**

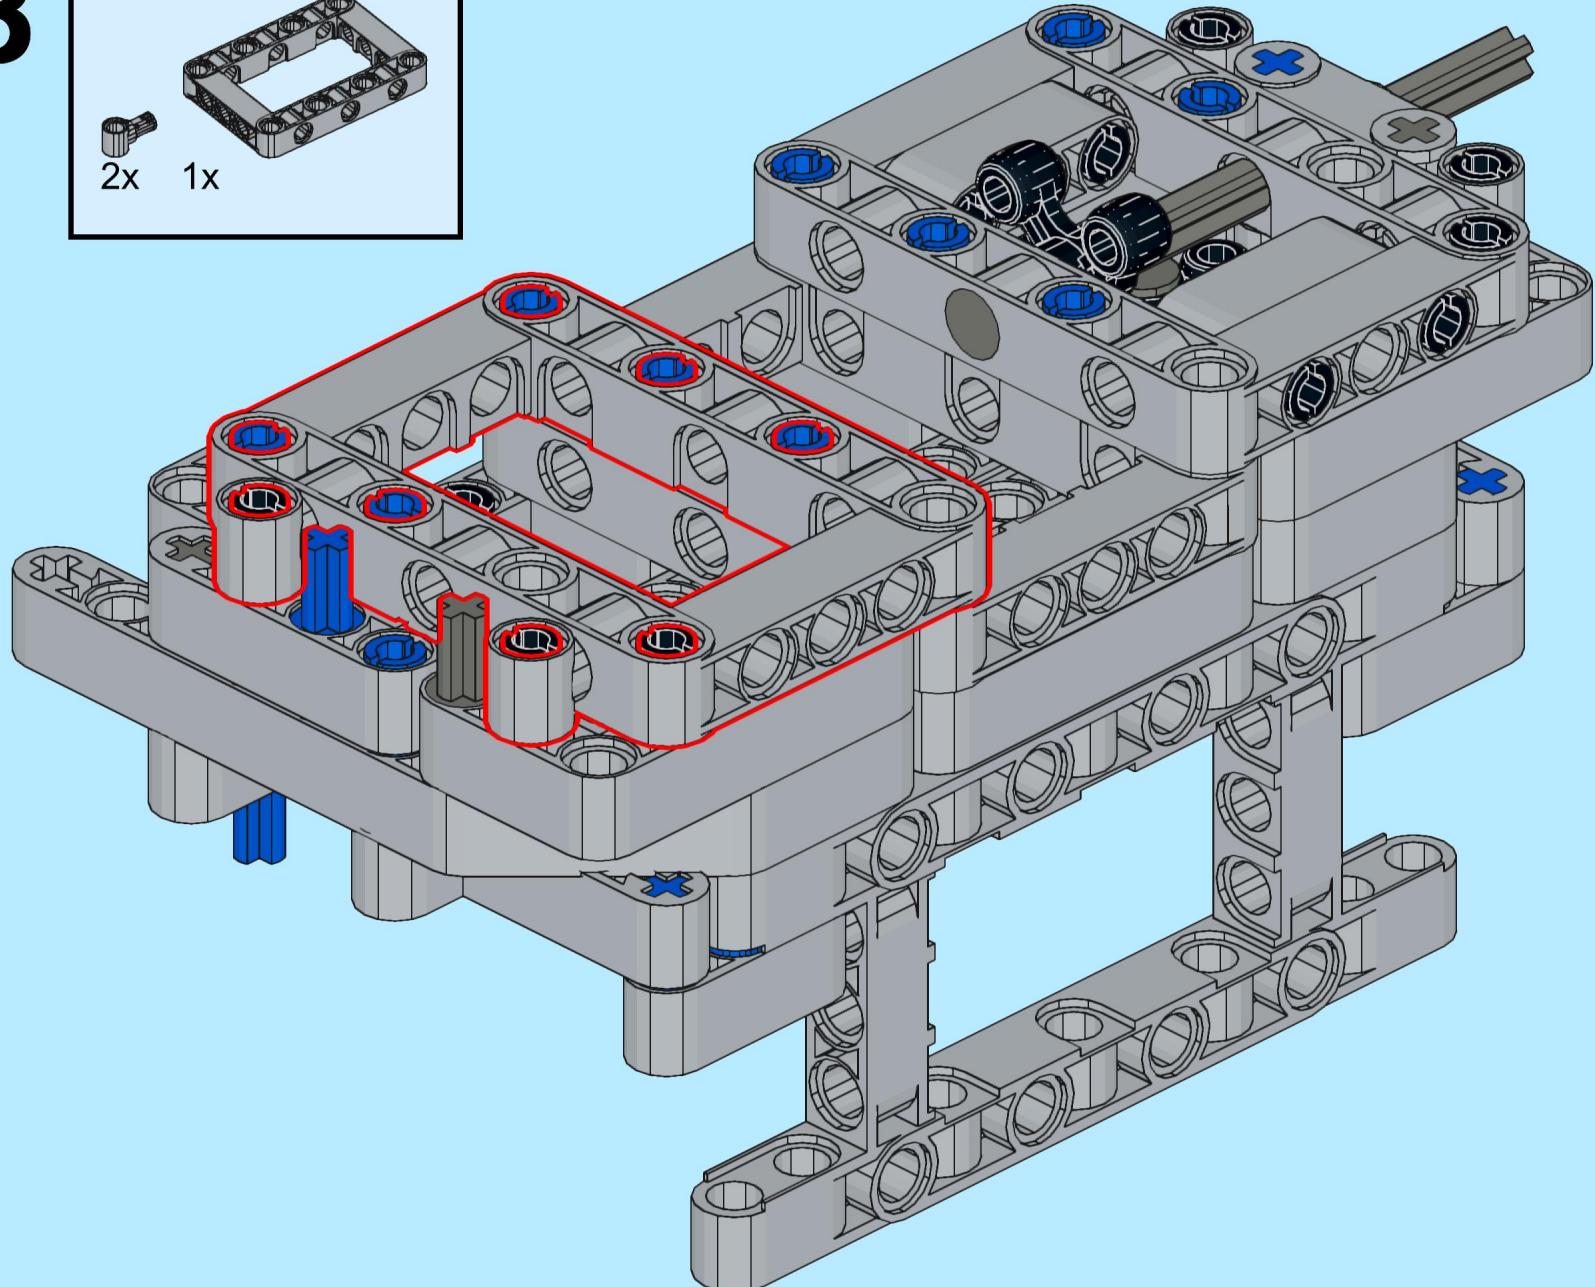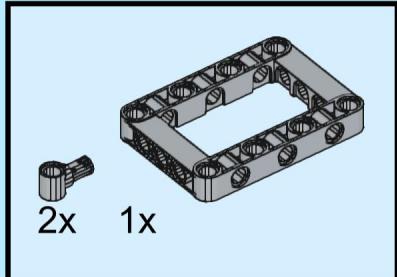


**29**

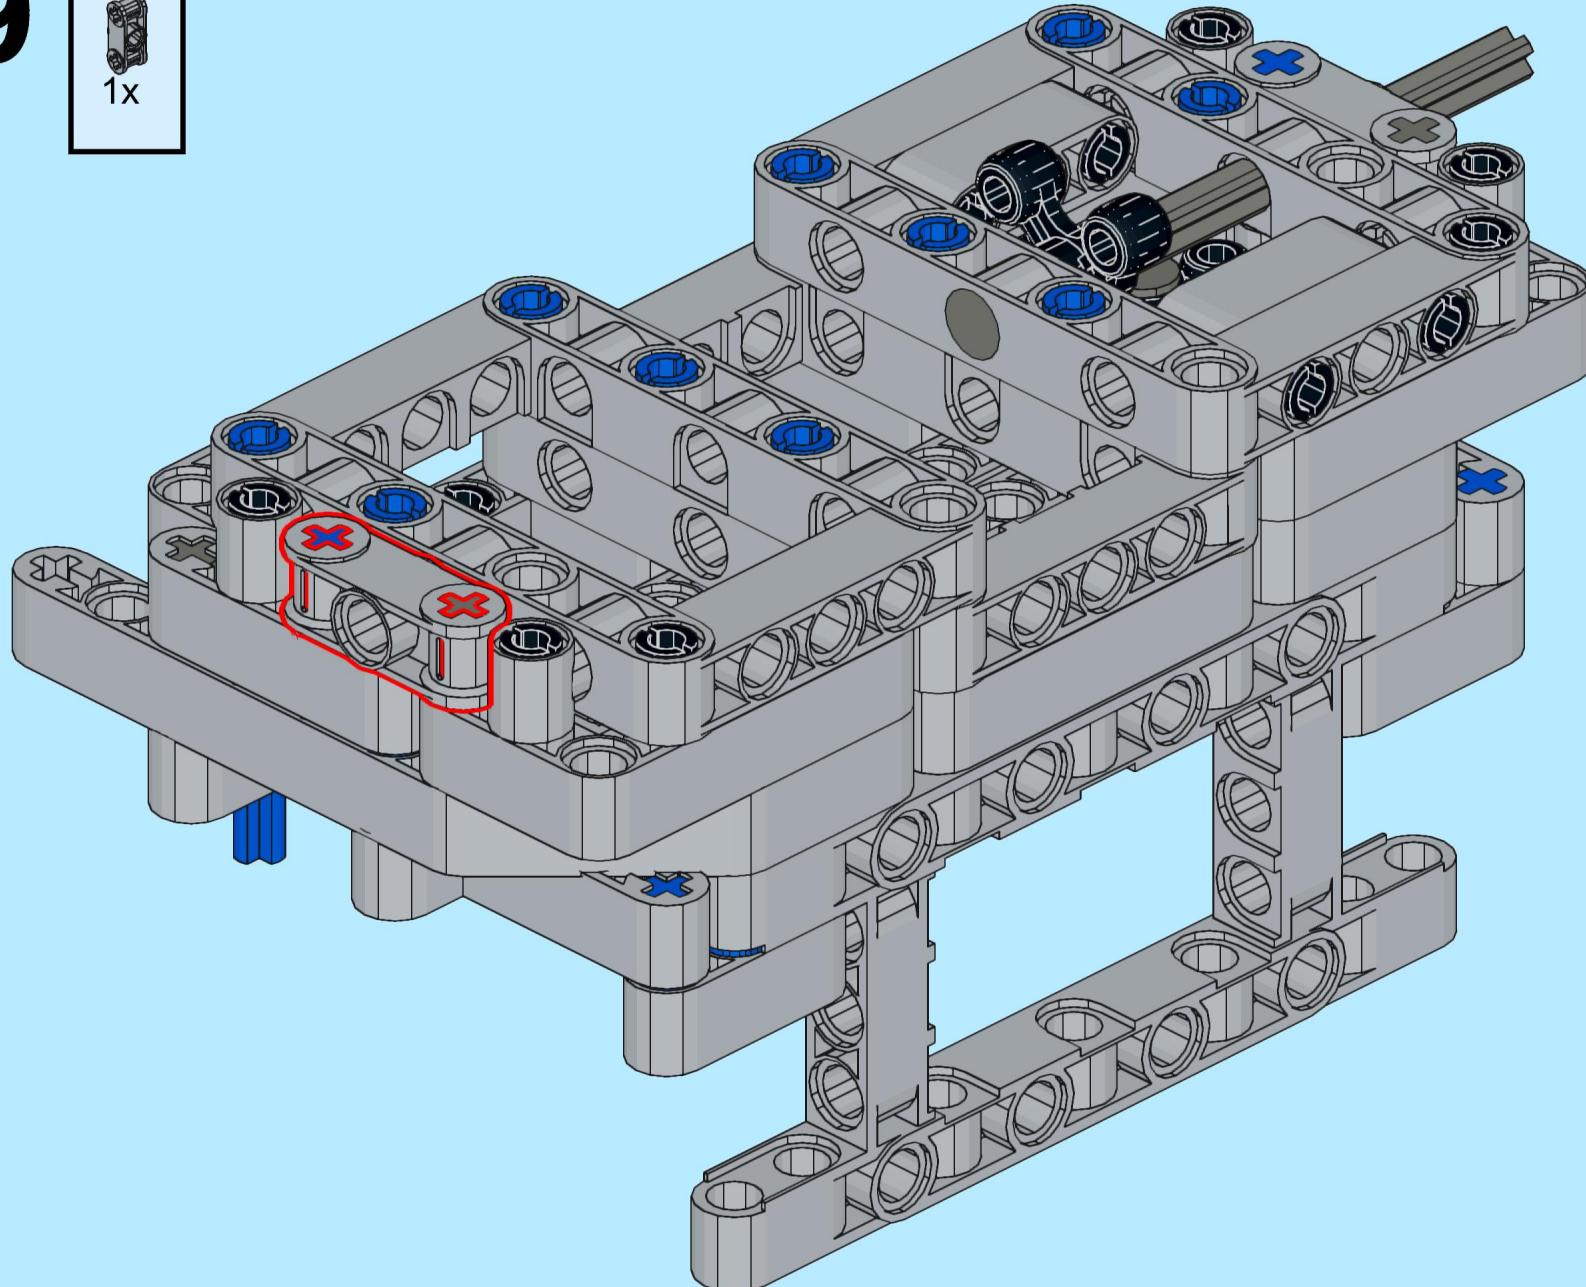


**30**

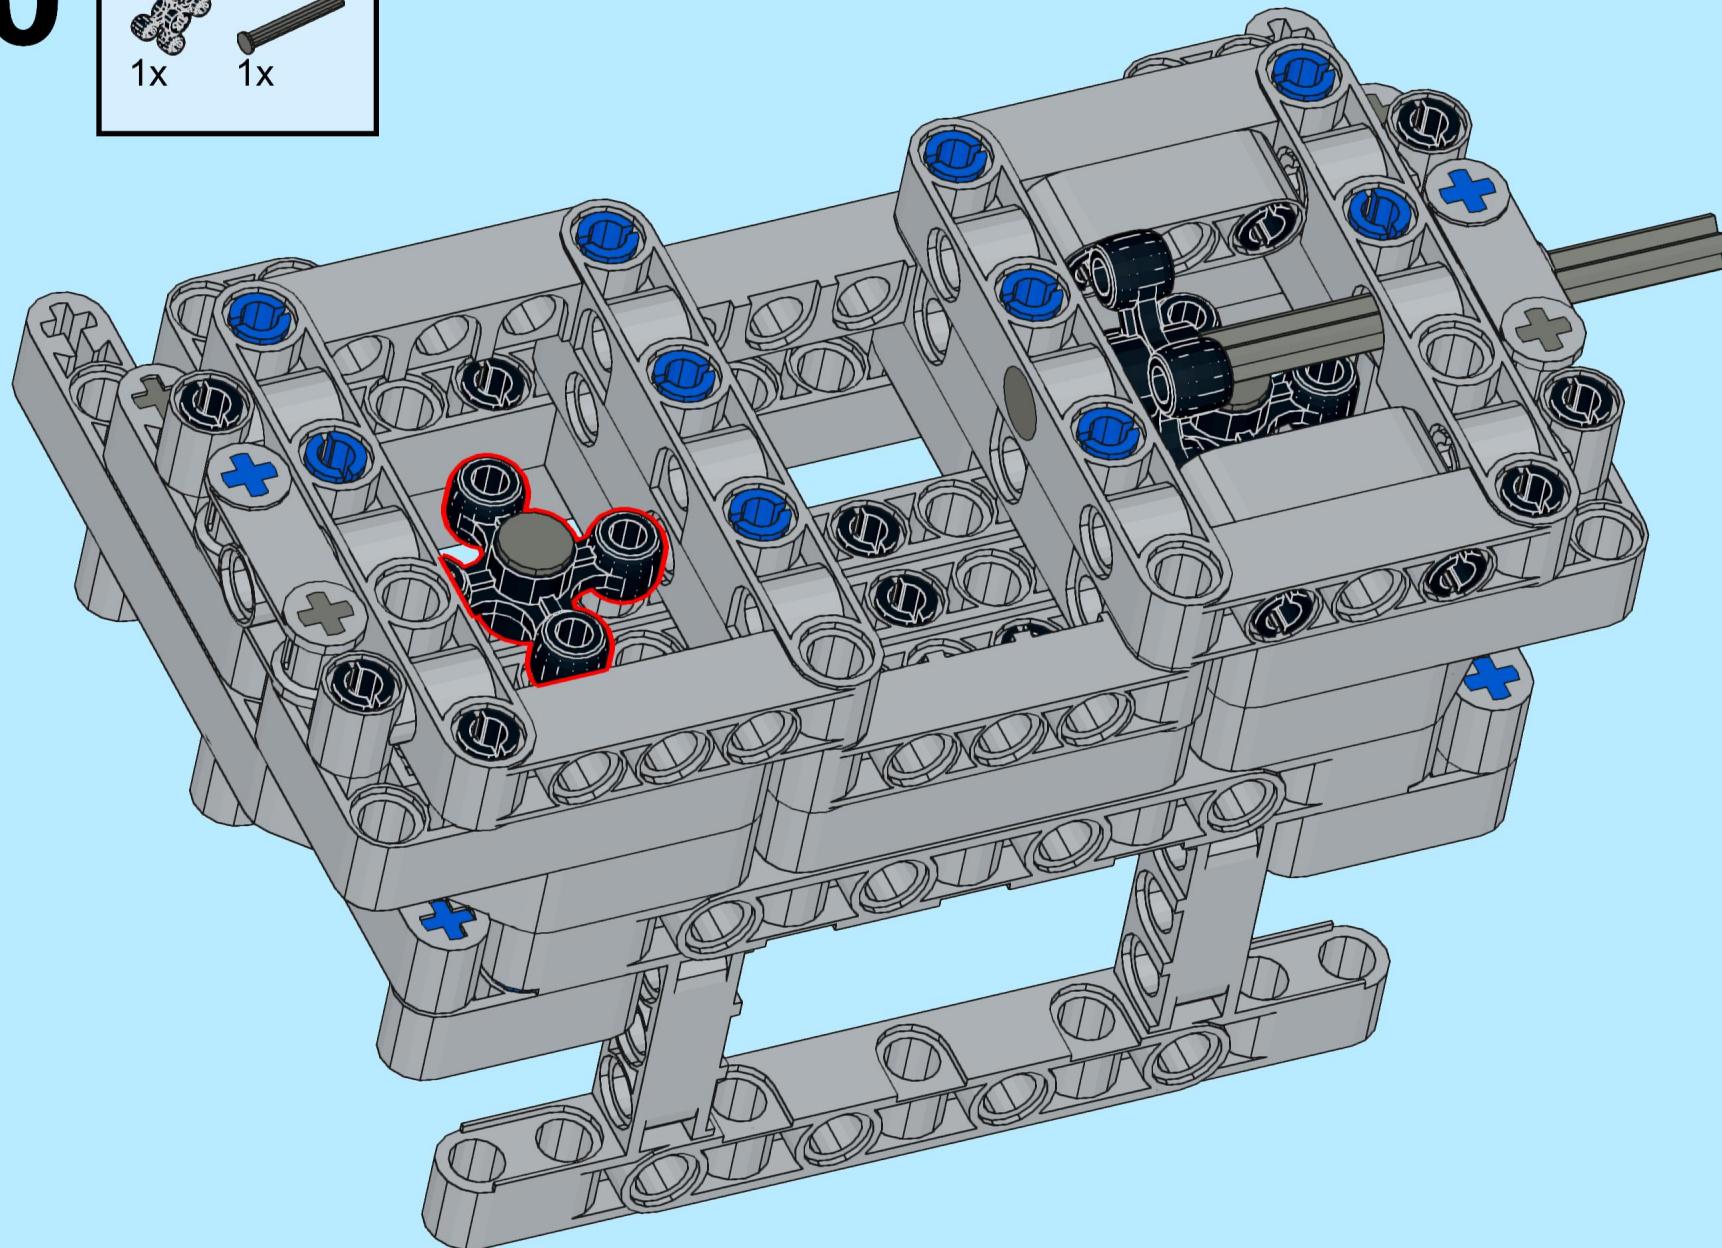



**31**

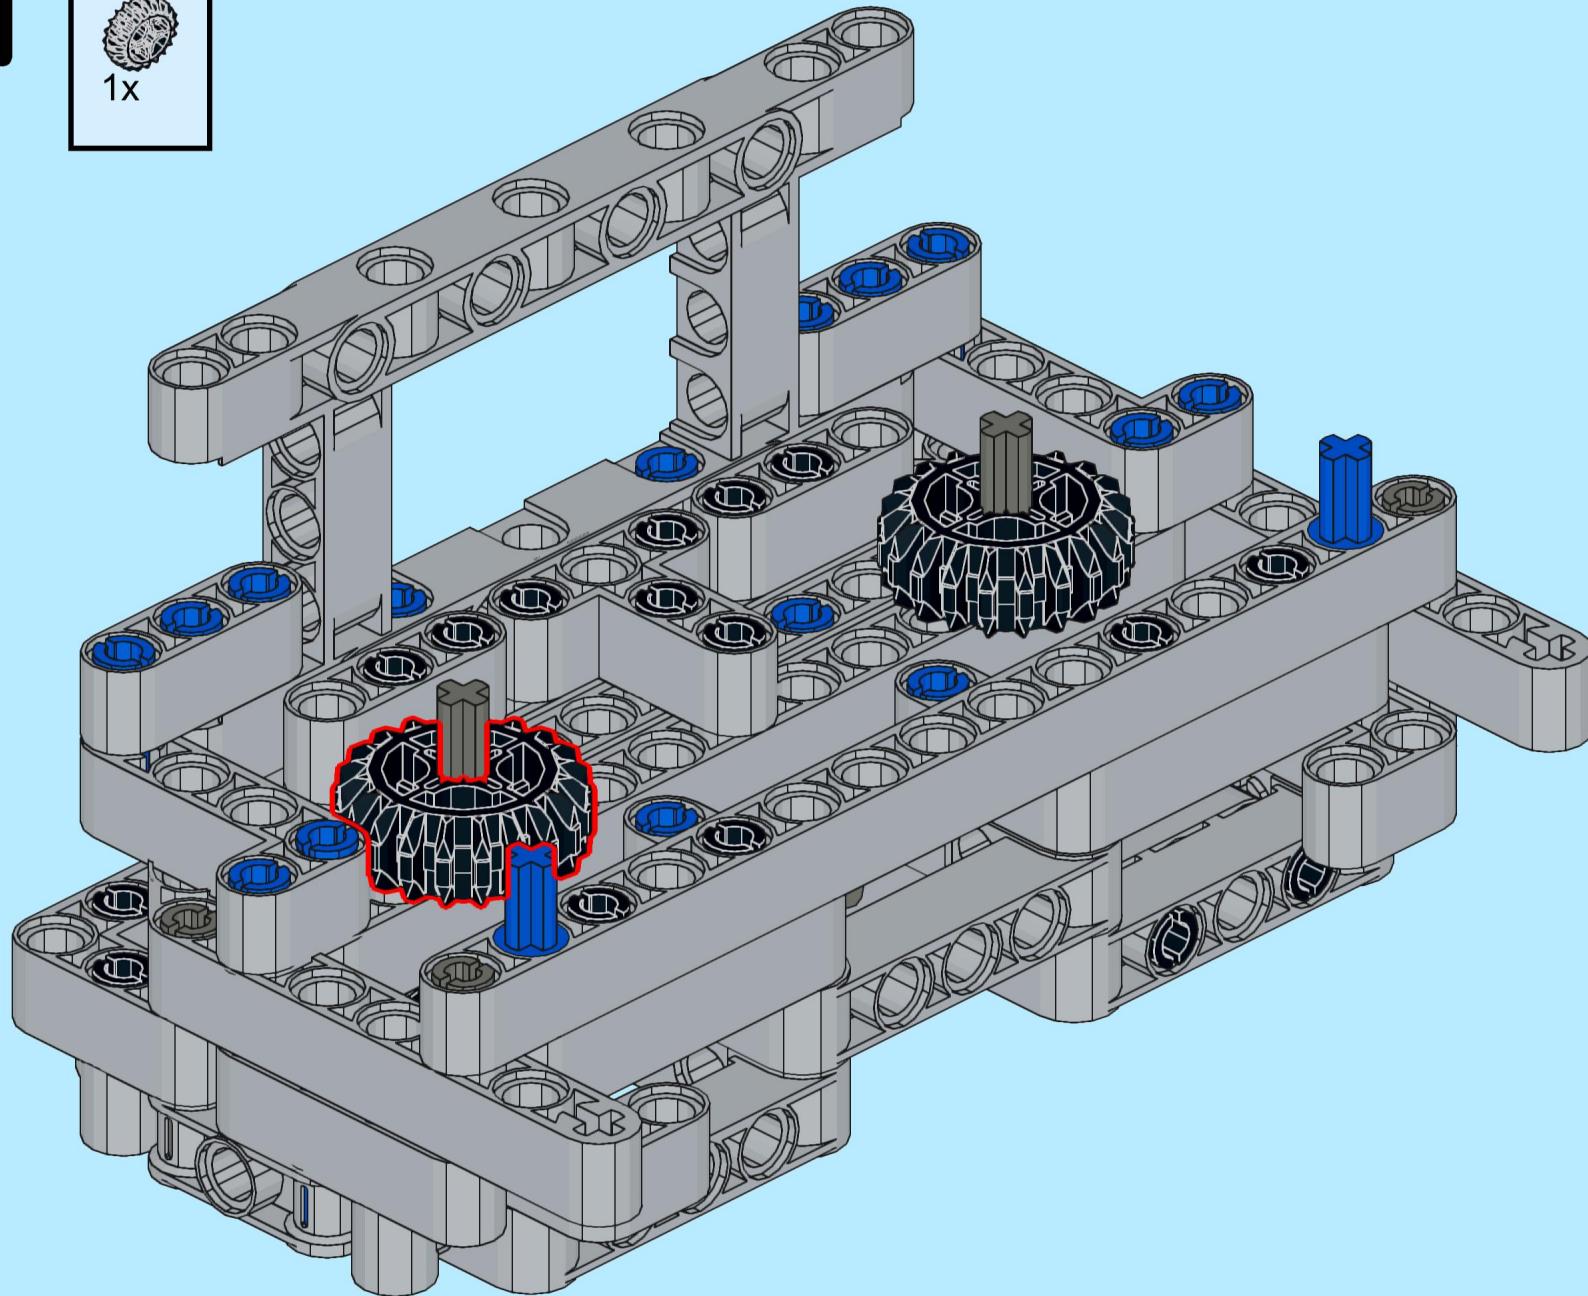



**32**

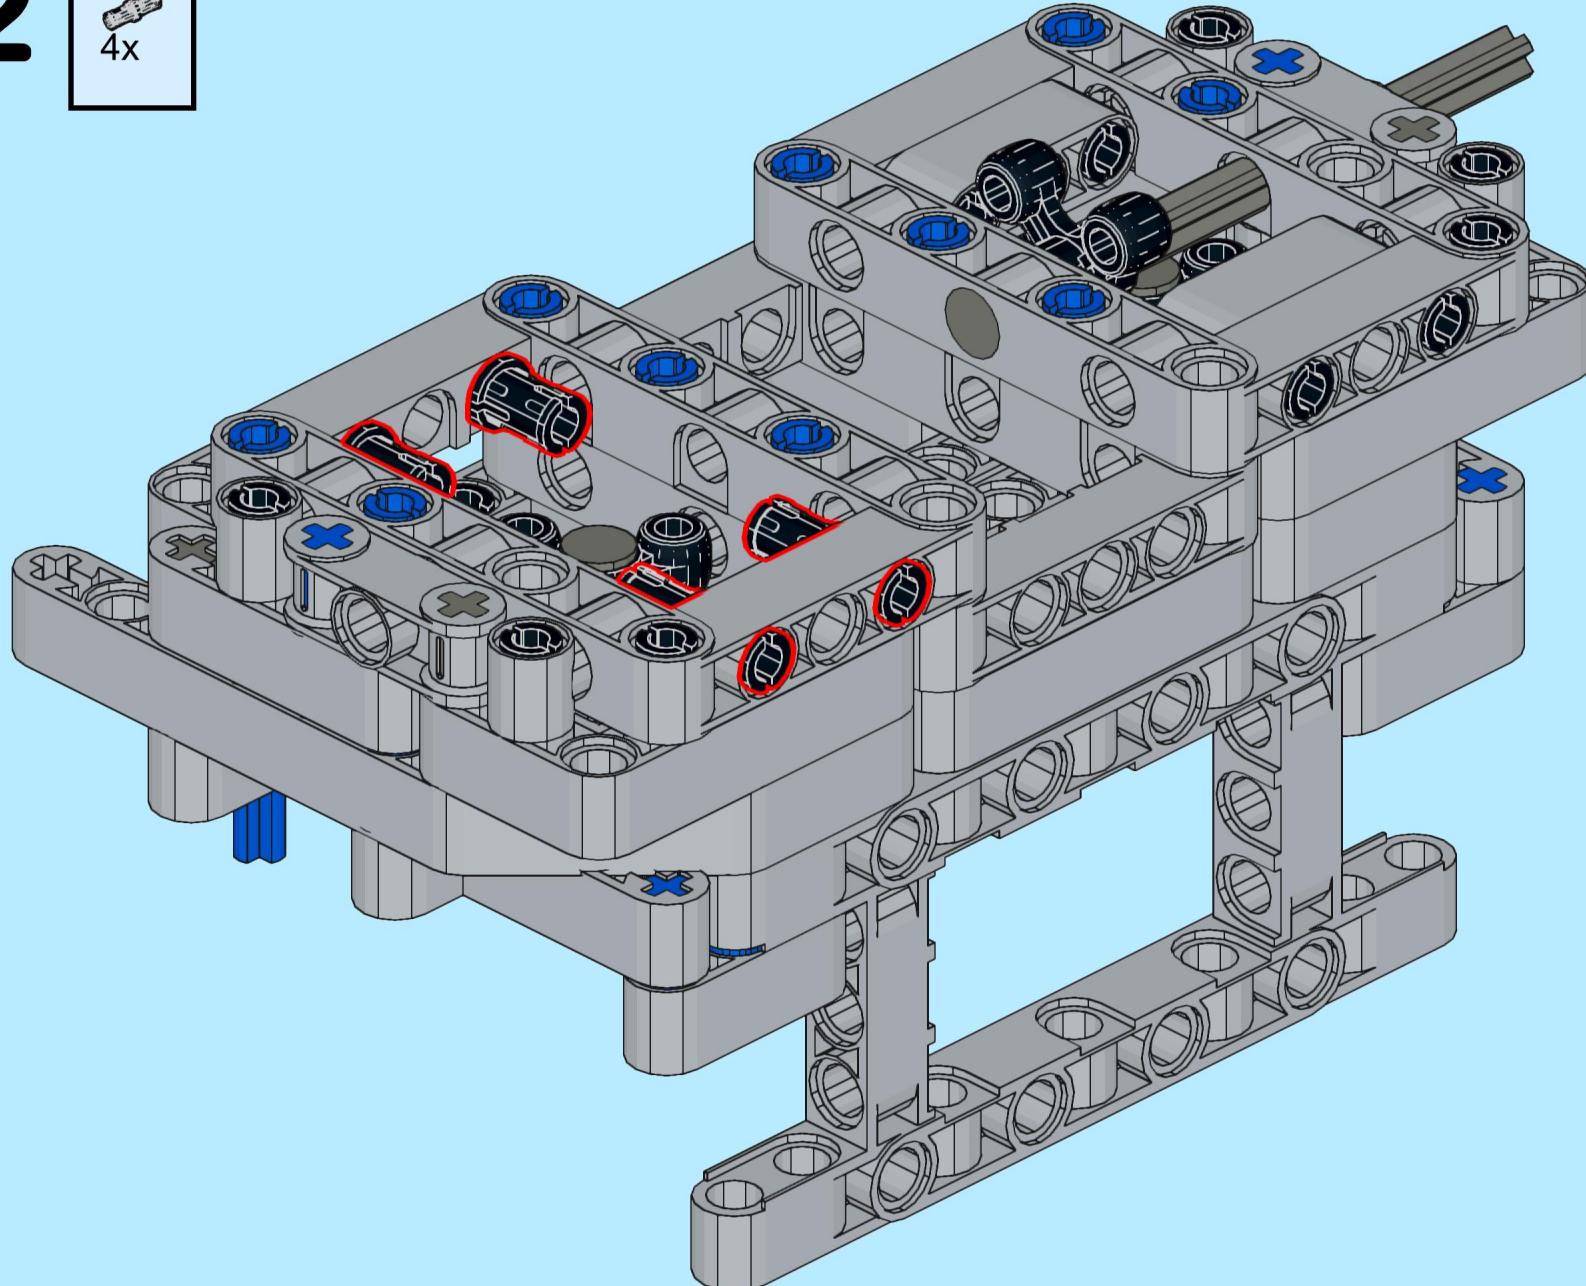

**33**

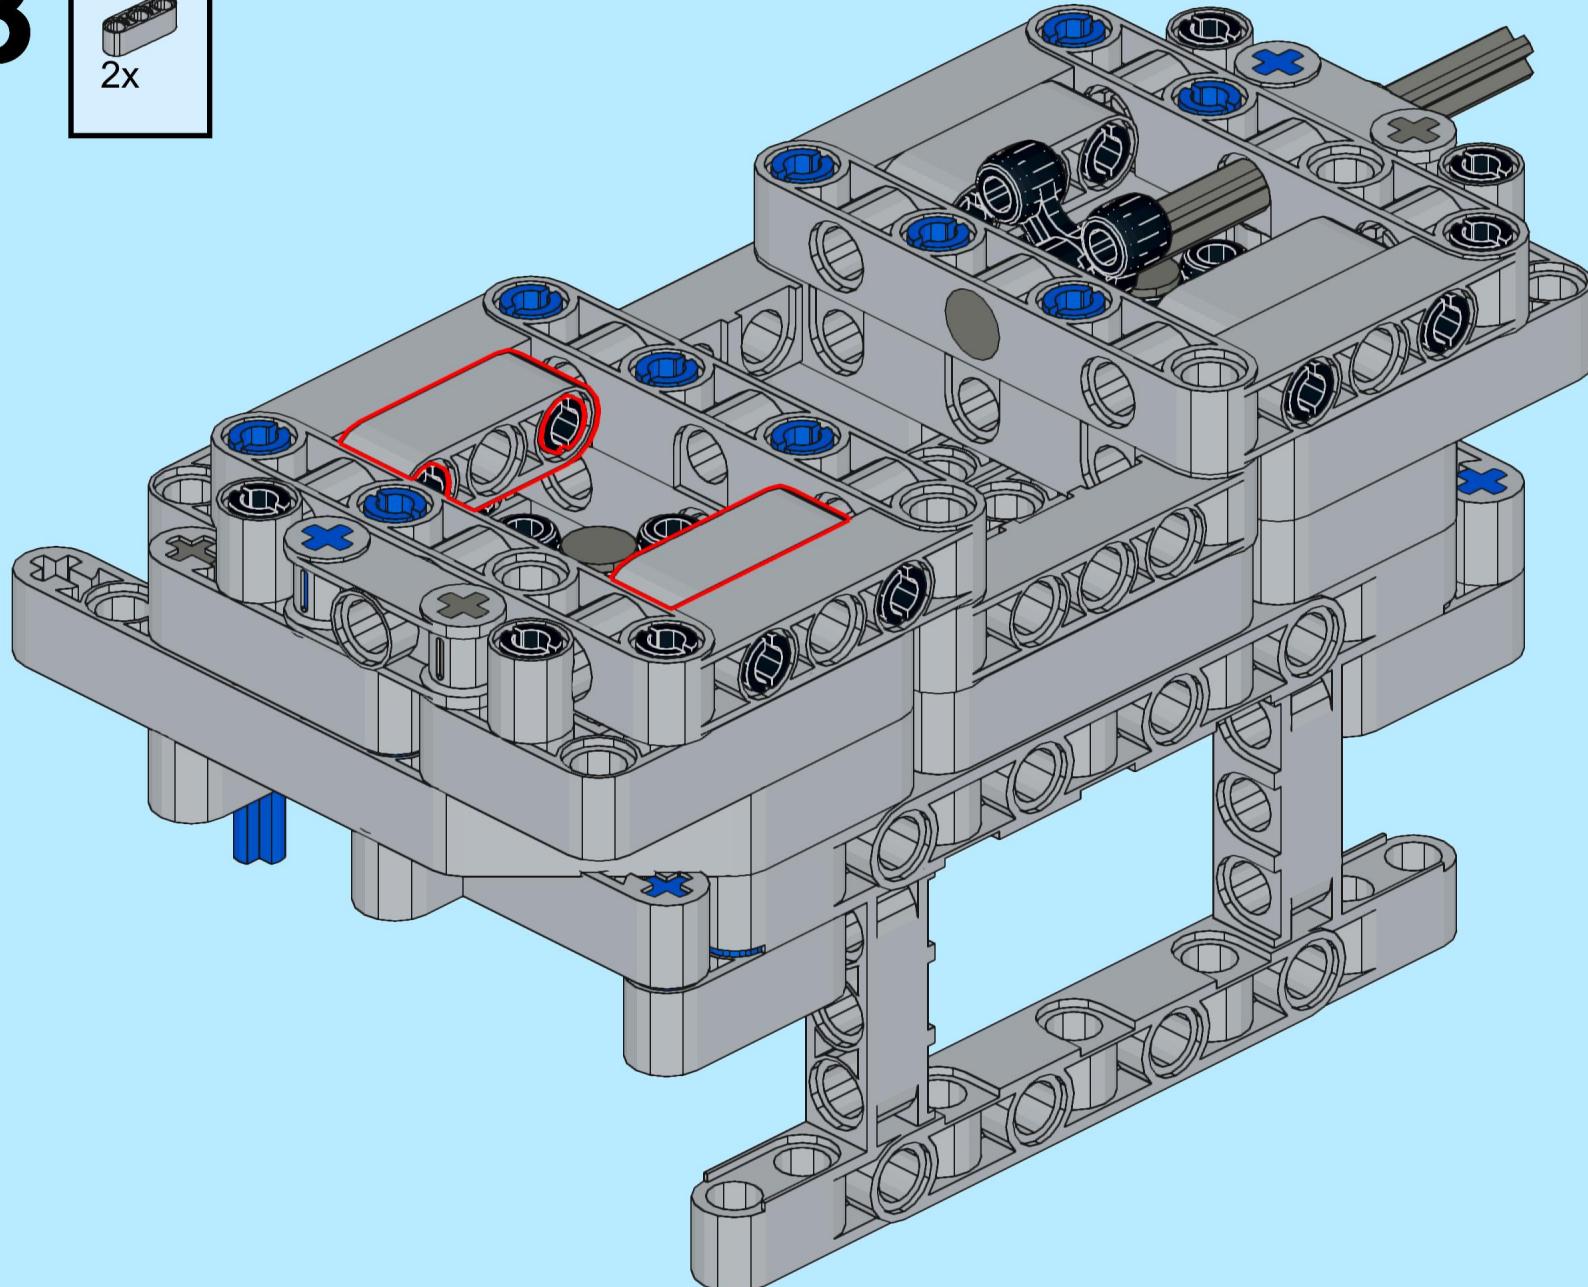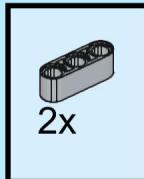


**34**

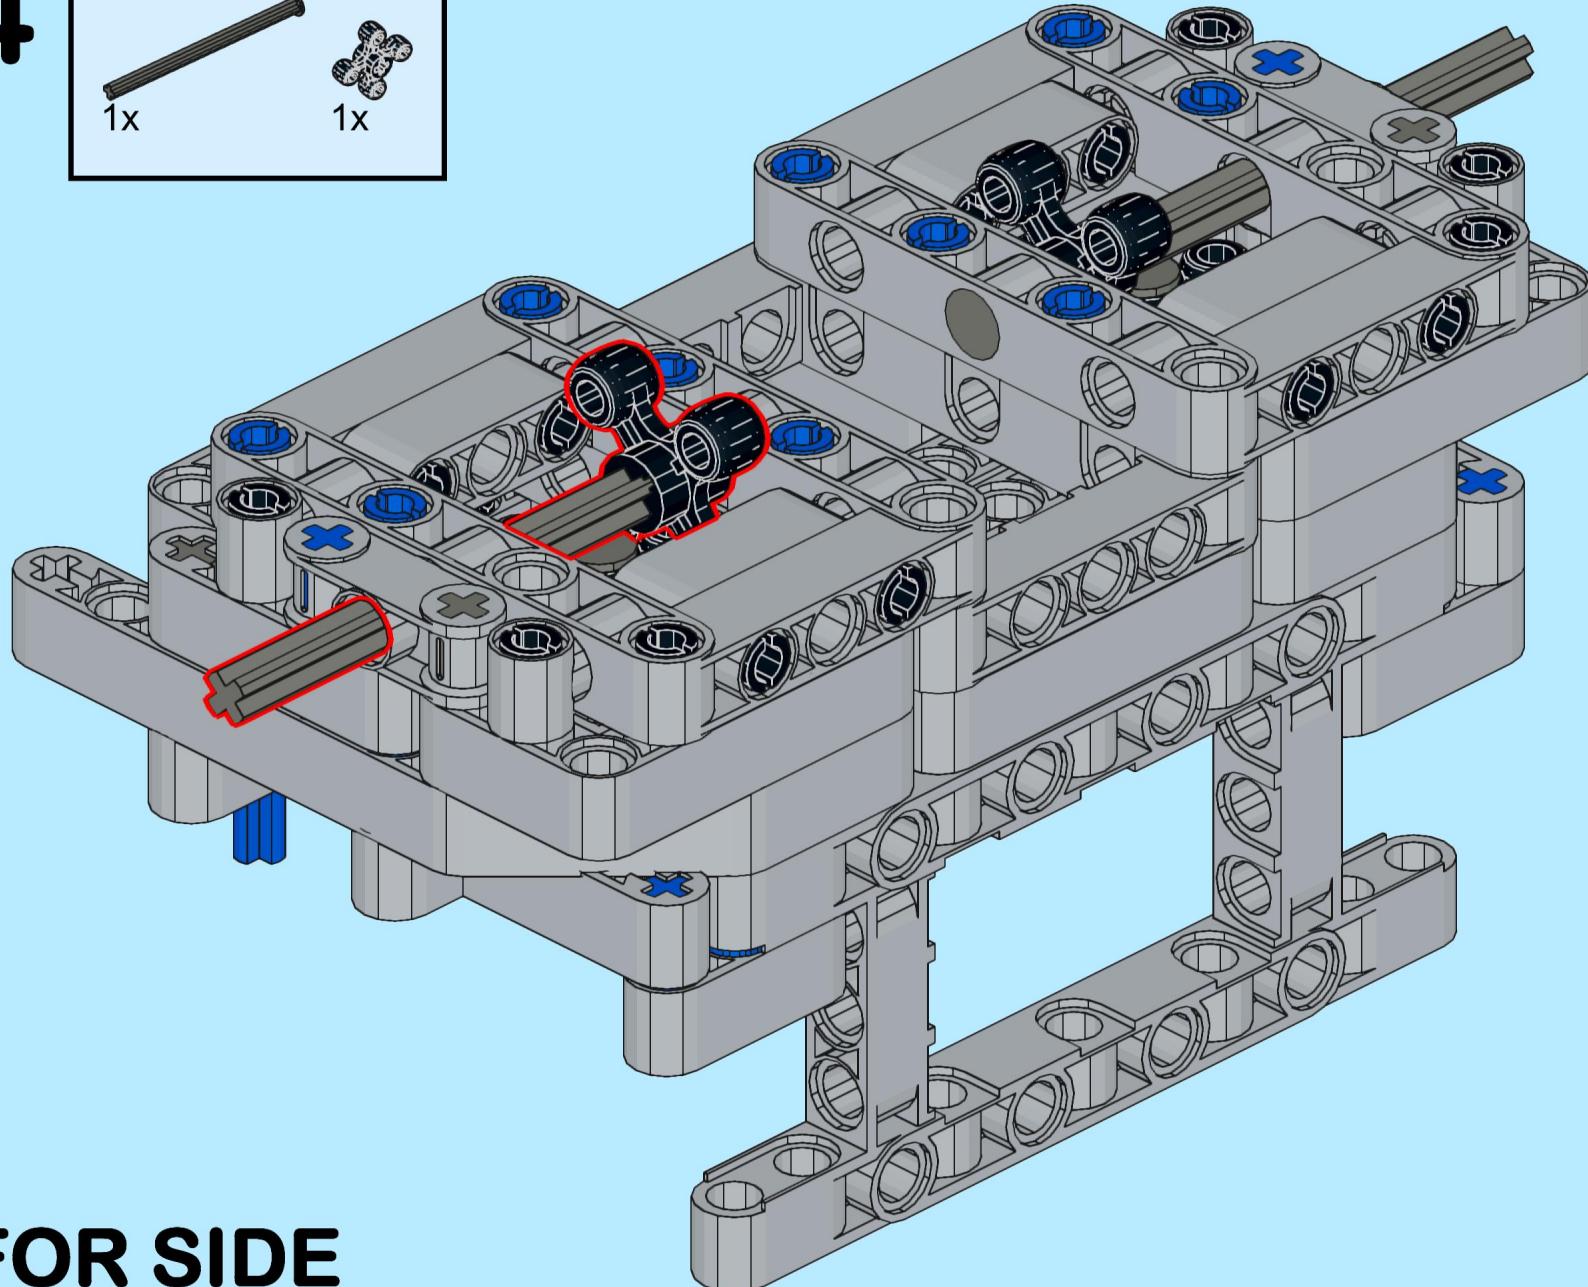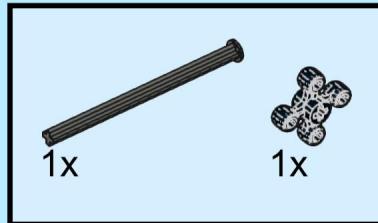


**FOR SIDE  
FACING AXLE**

**34**


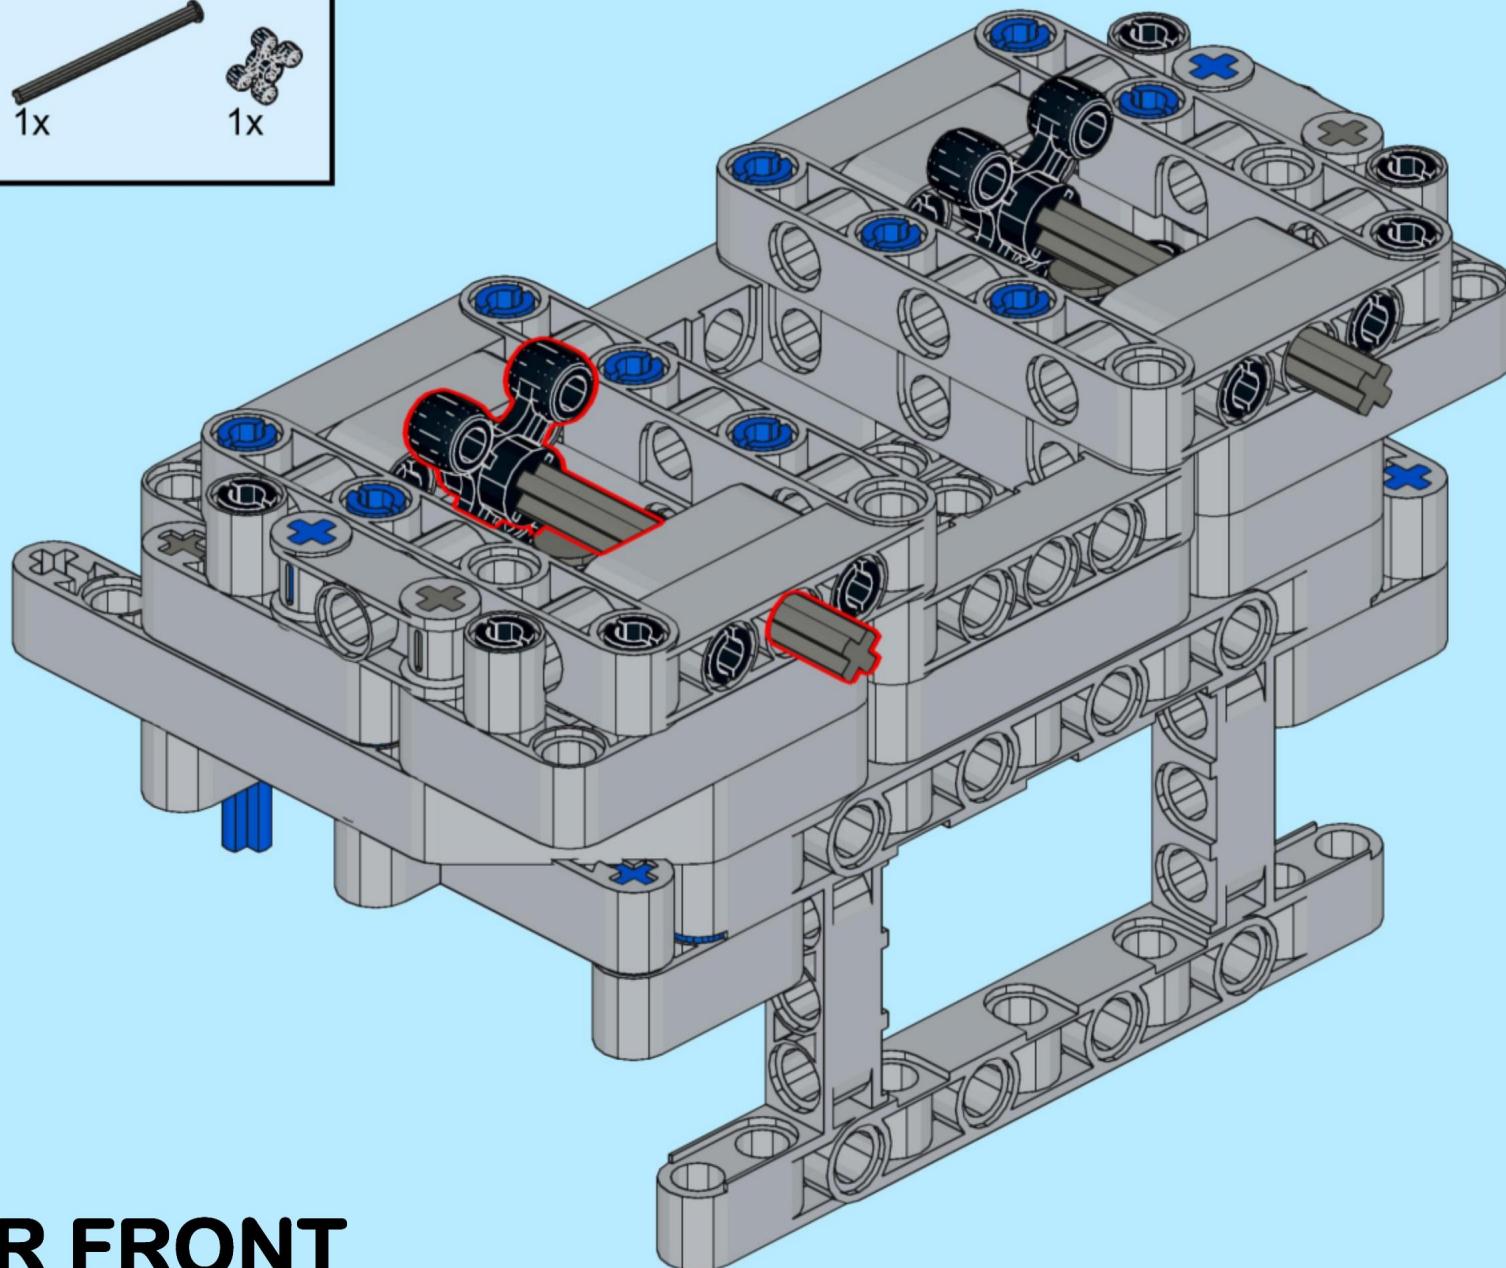


**FOR FRONT  
FACING AXLE**



**35**

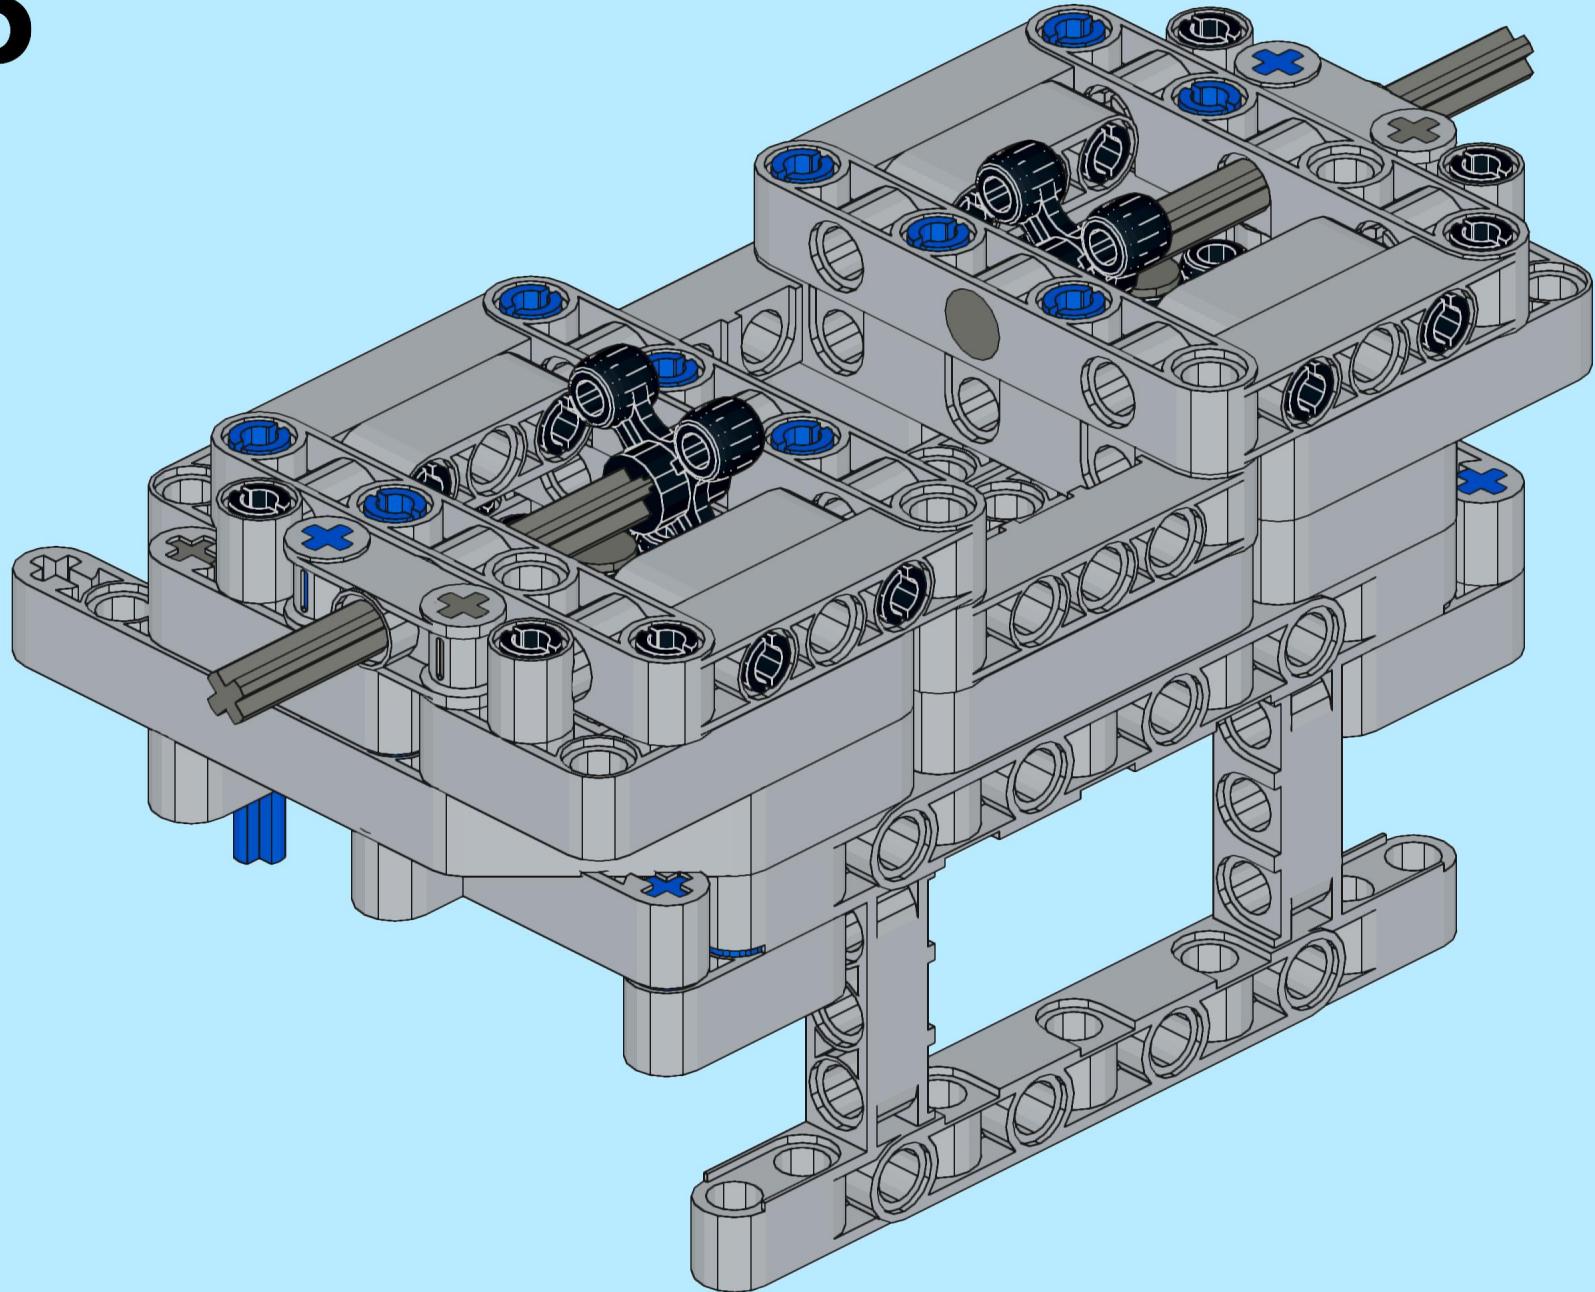



# 36

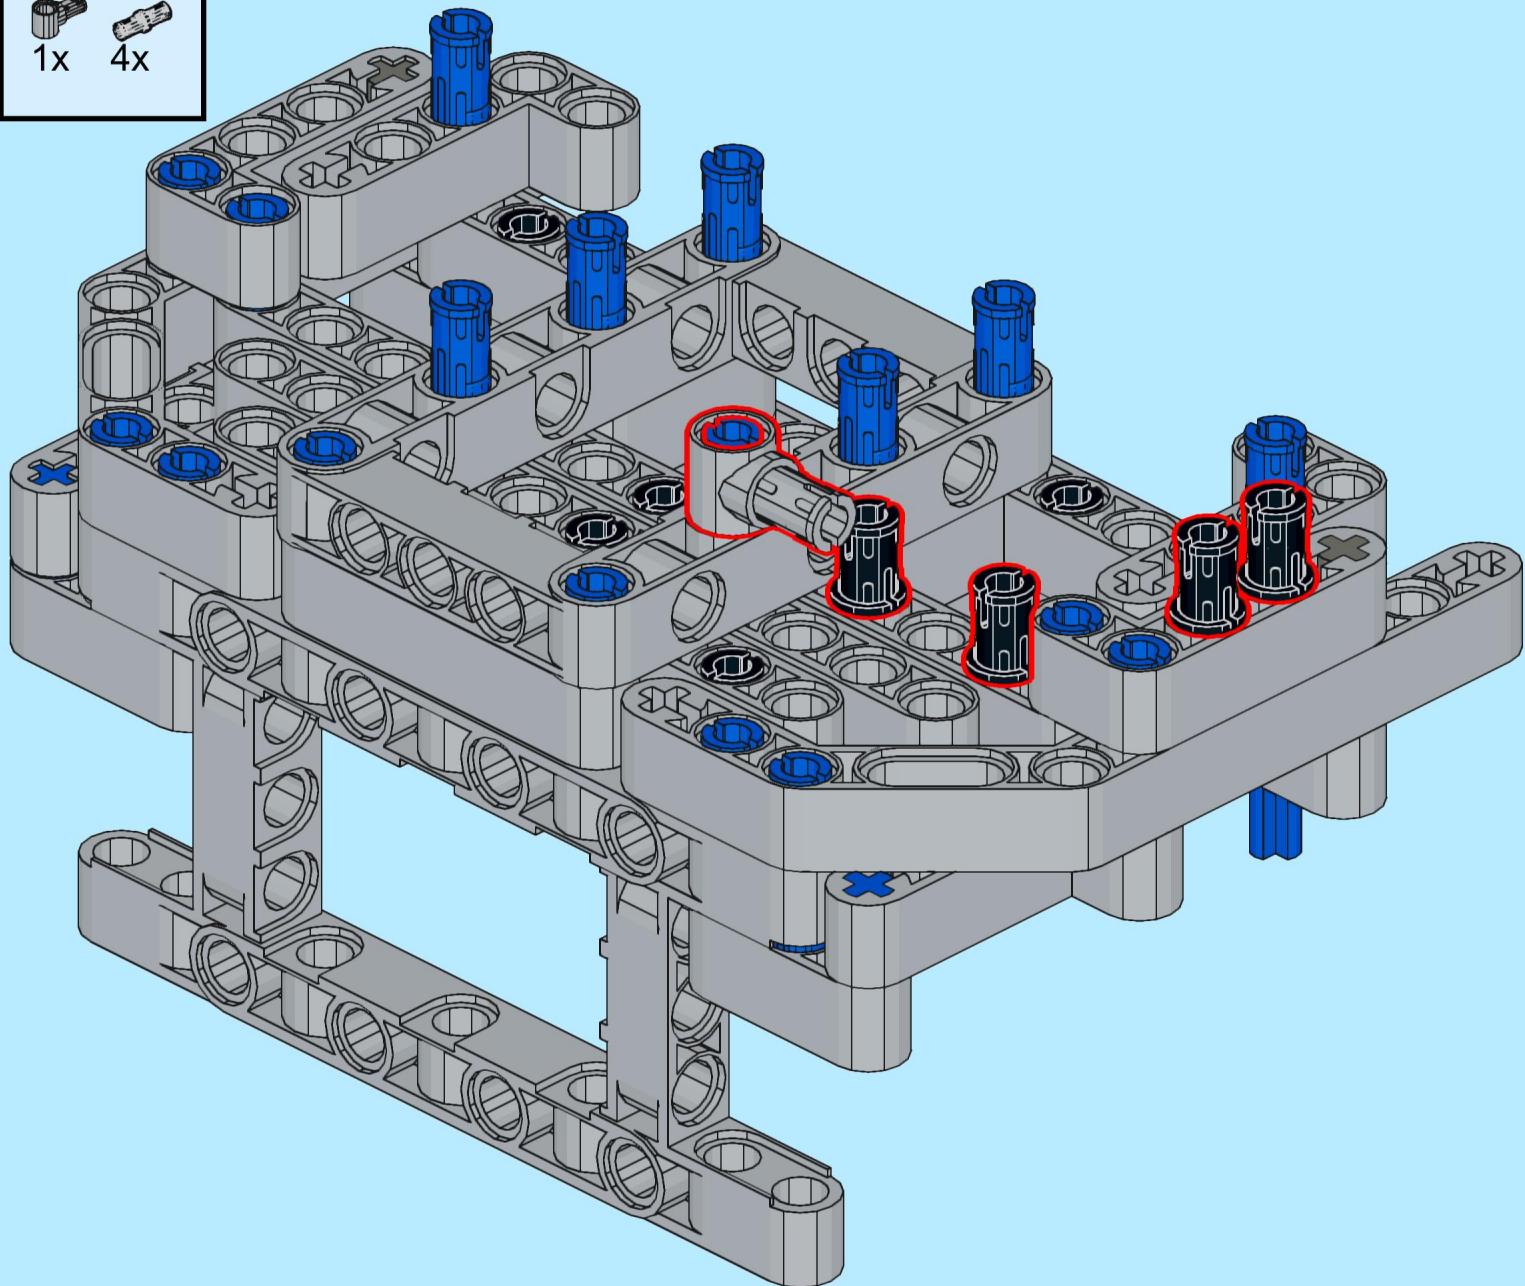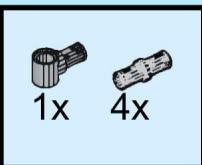


**37**

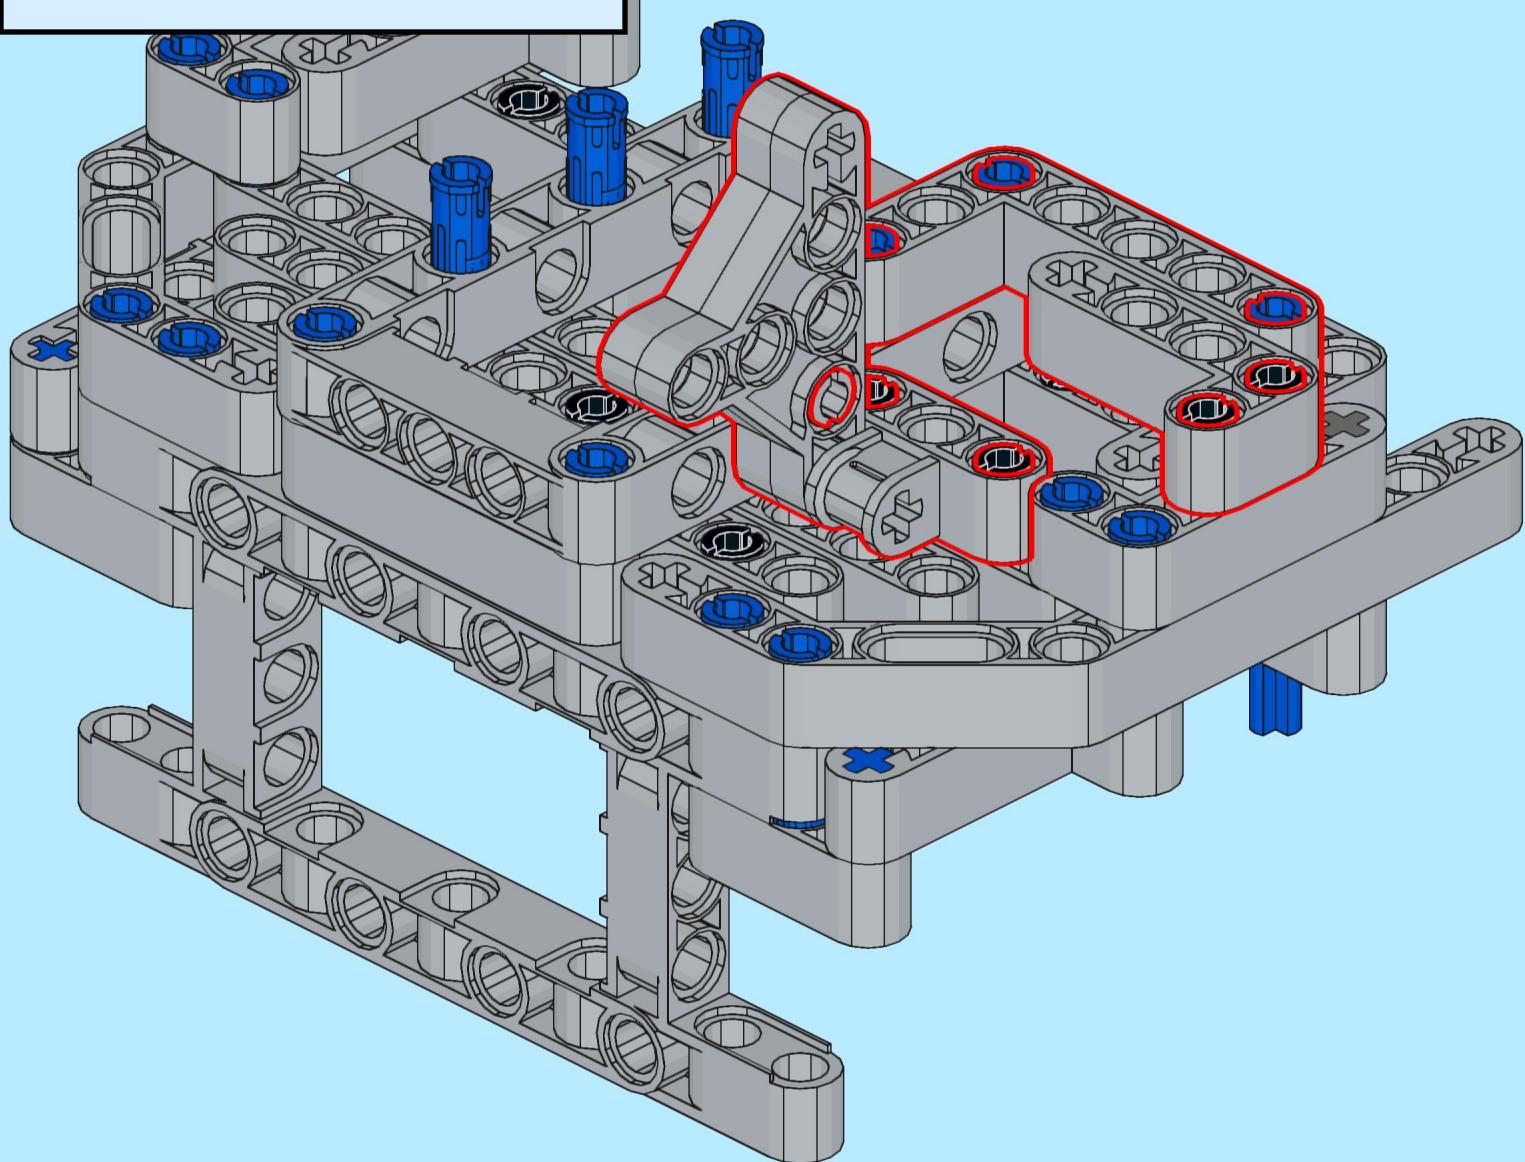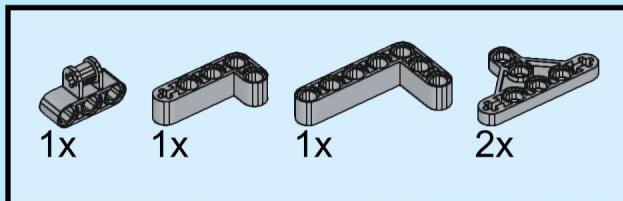



**38**

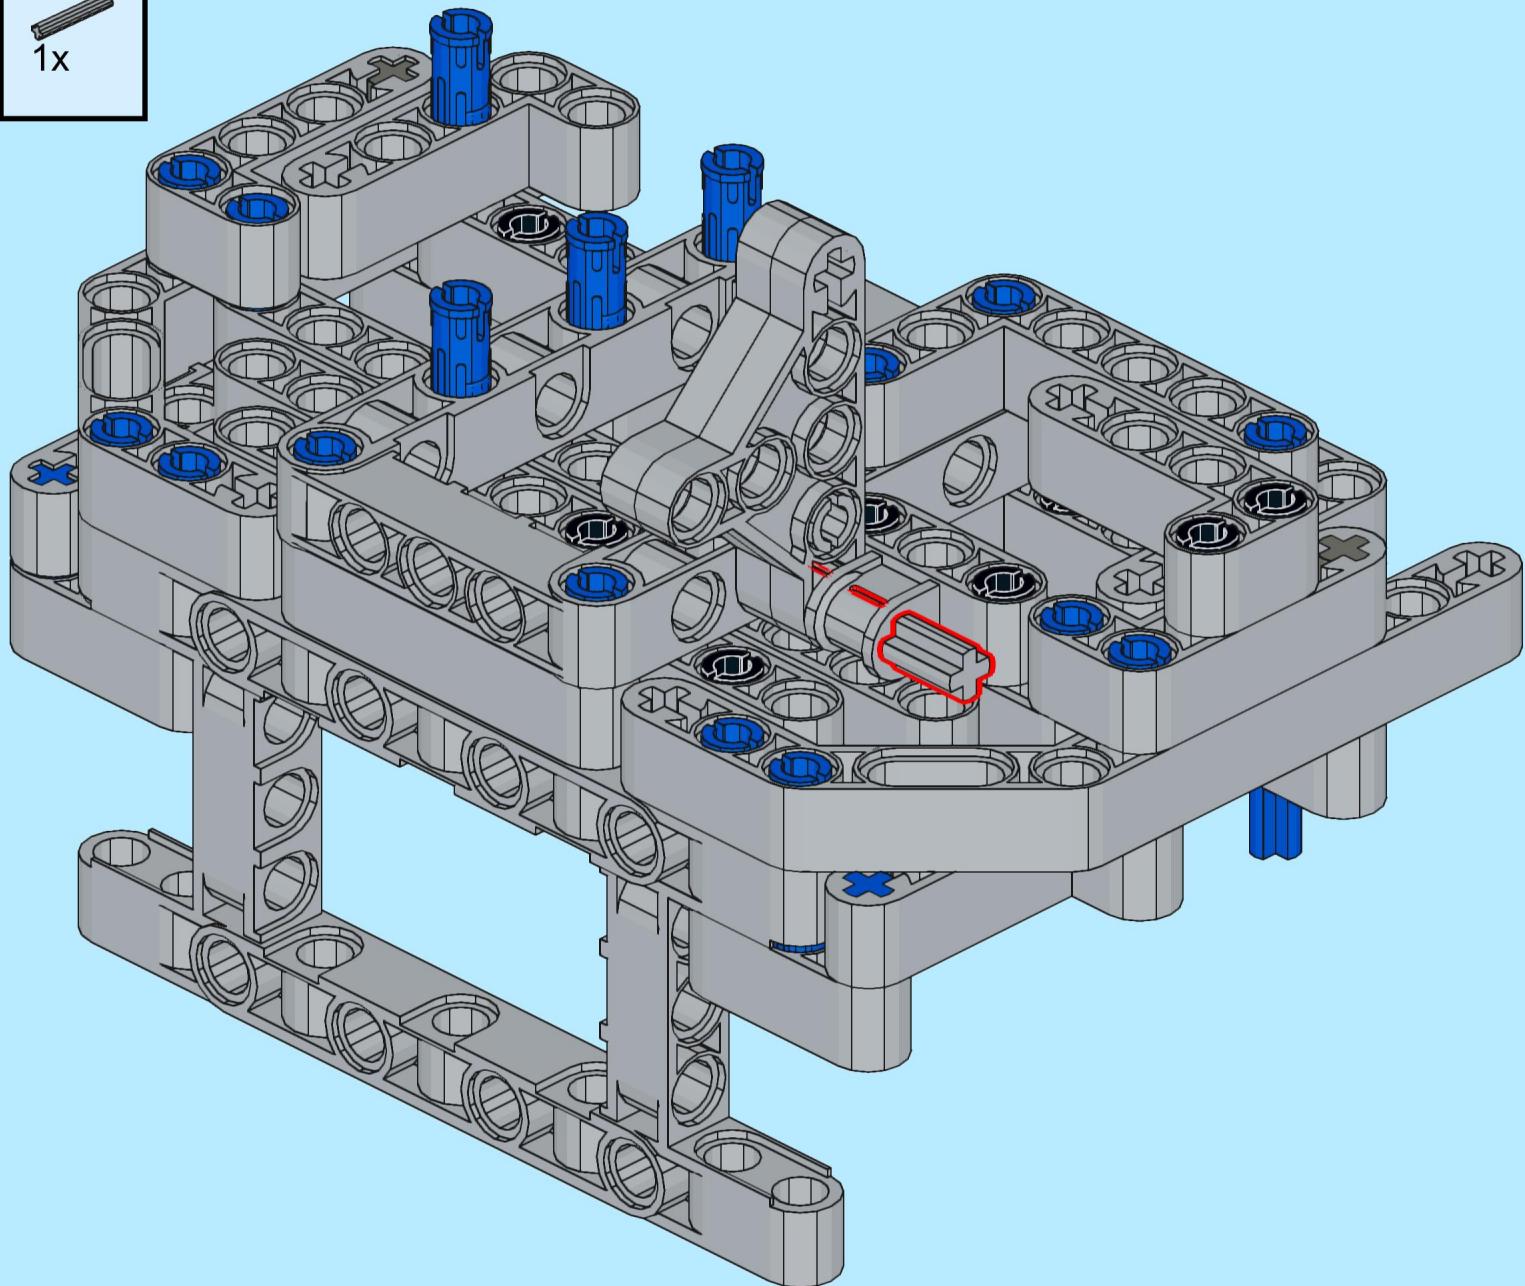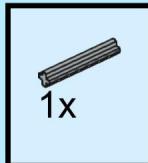



**39**

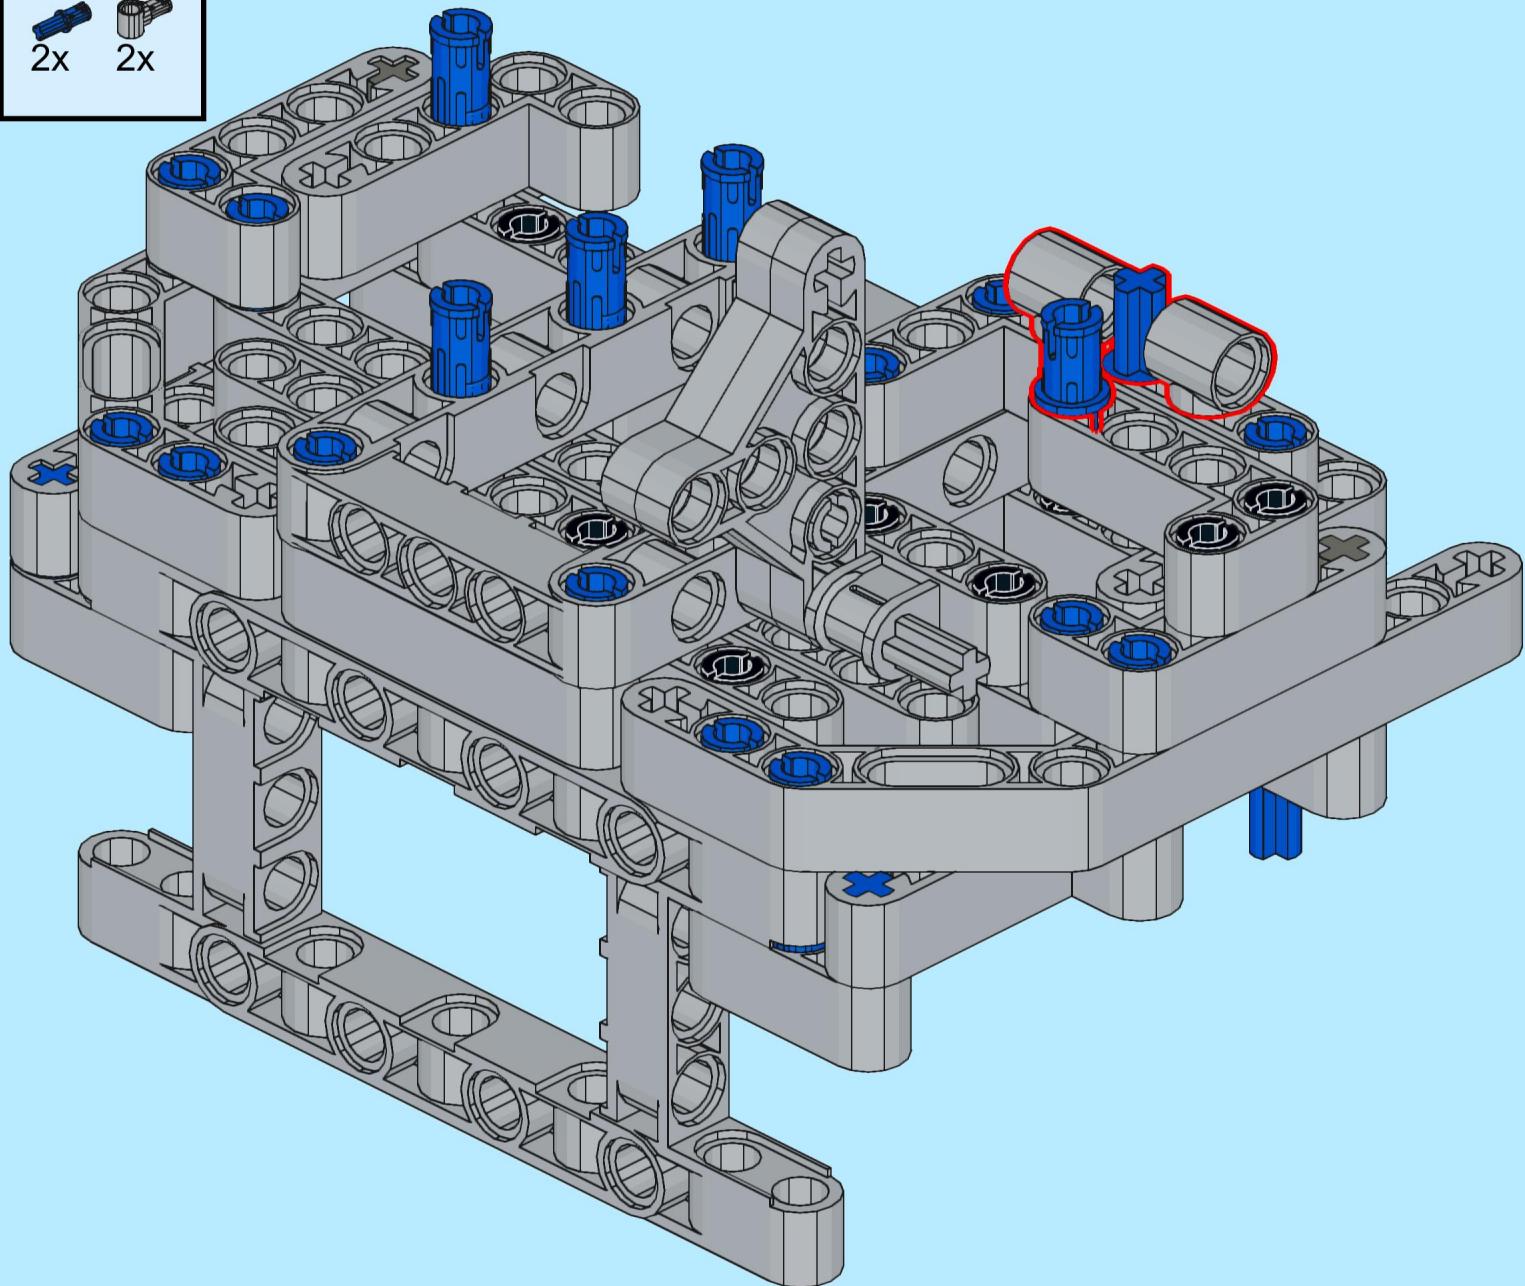


**40**

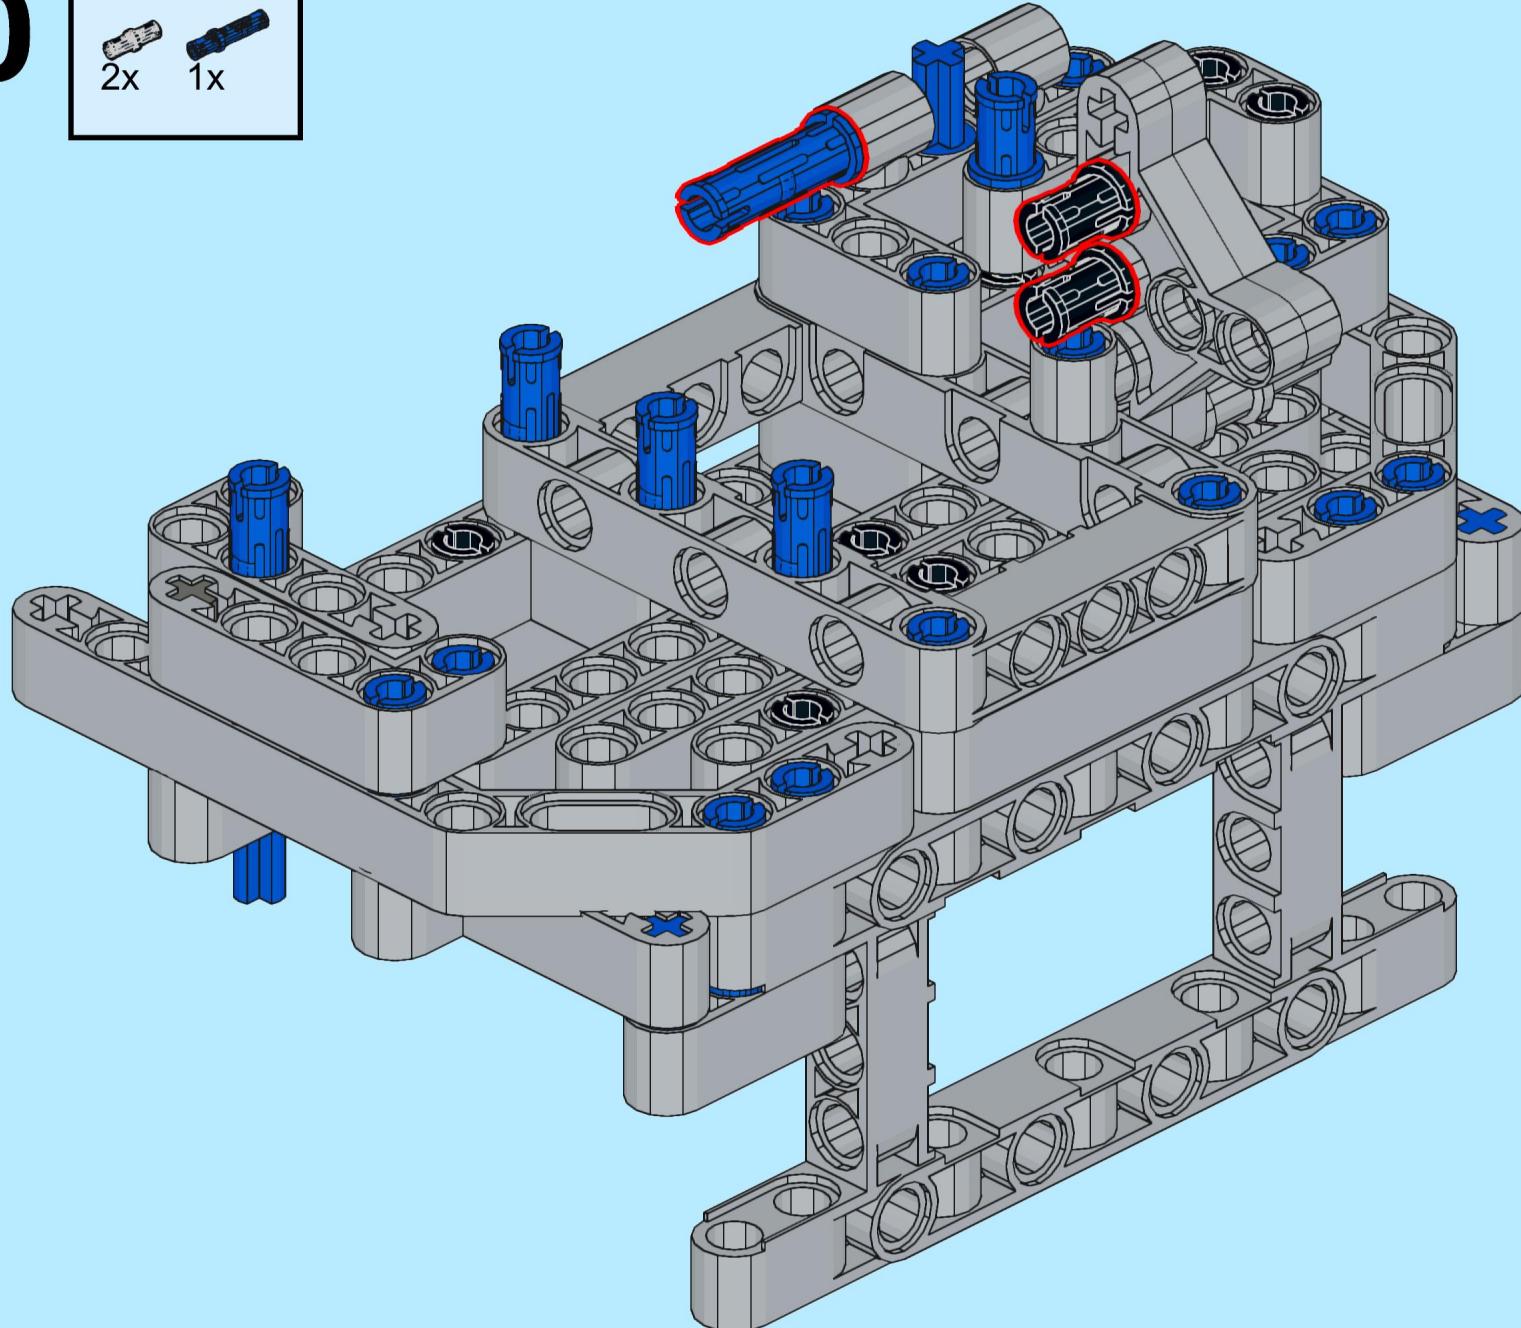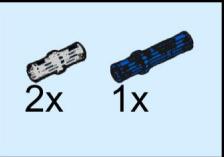



**41**

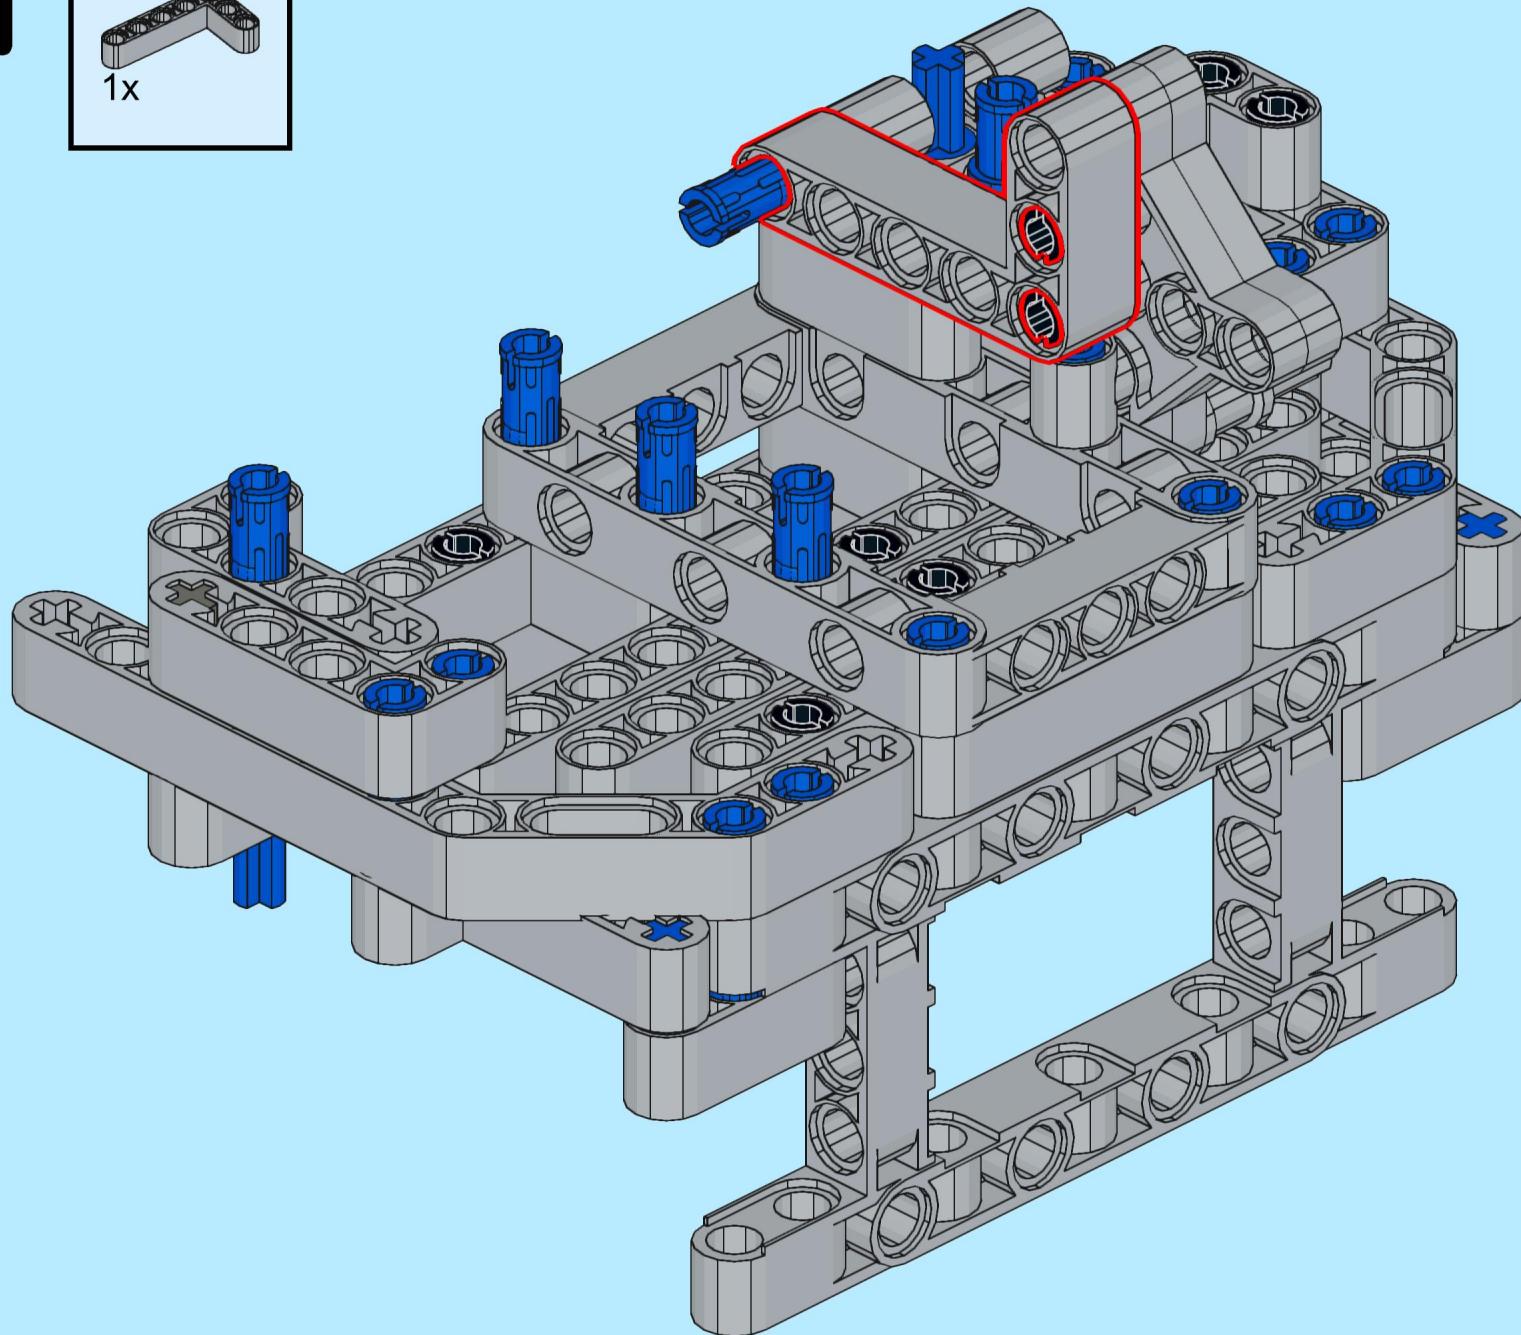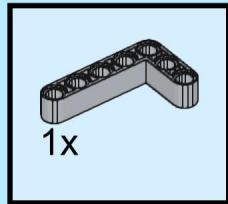



42

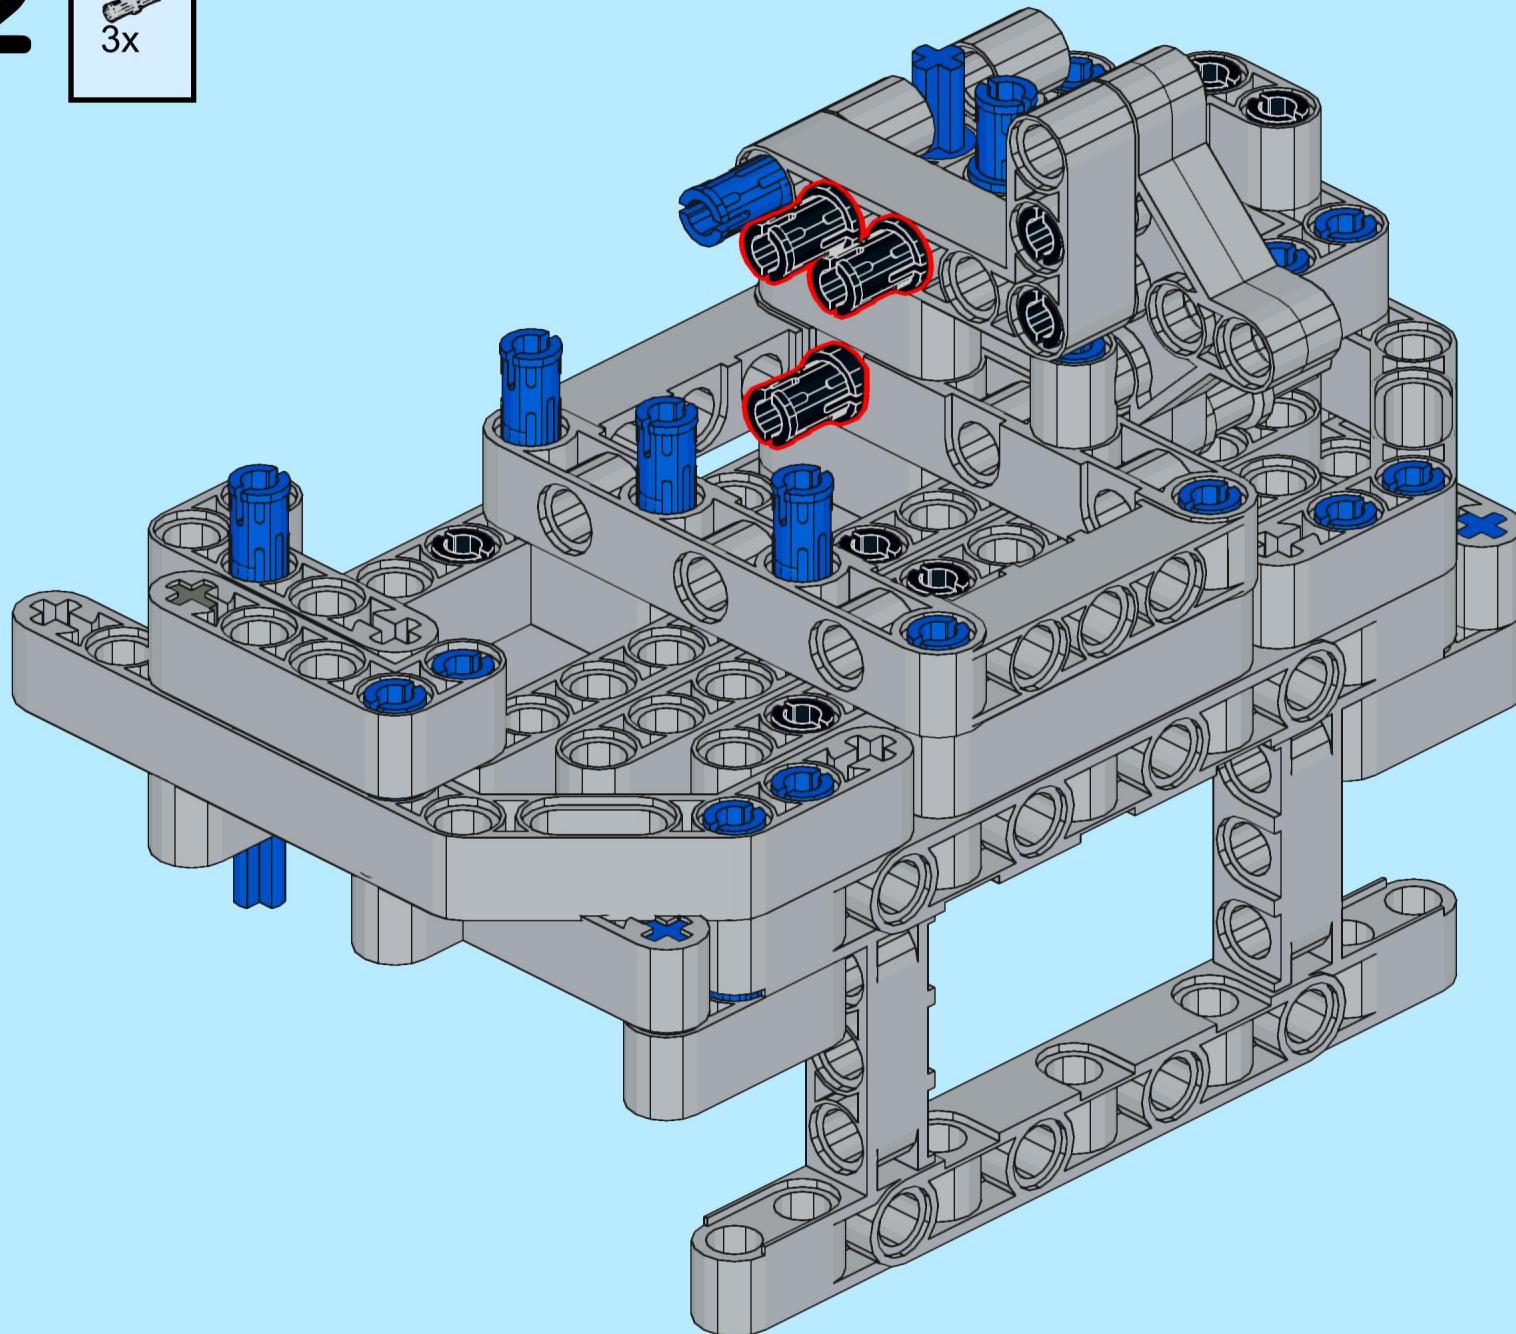



**43**

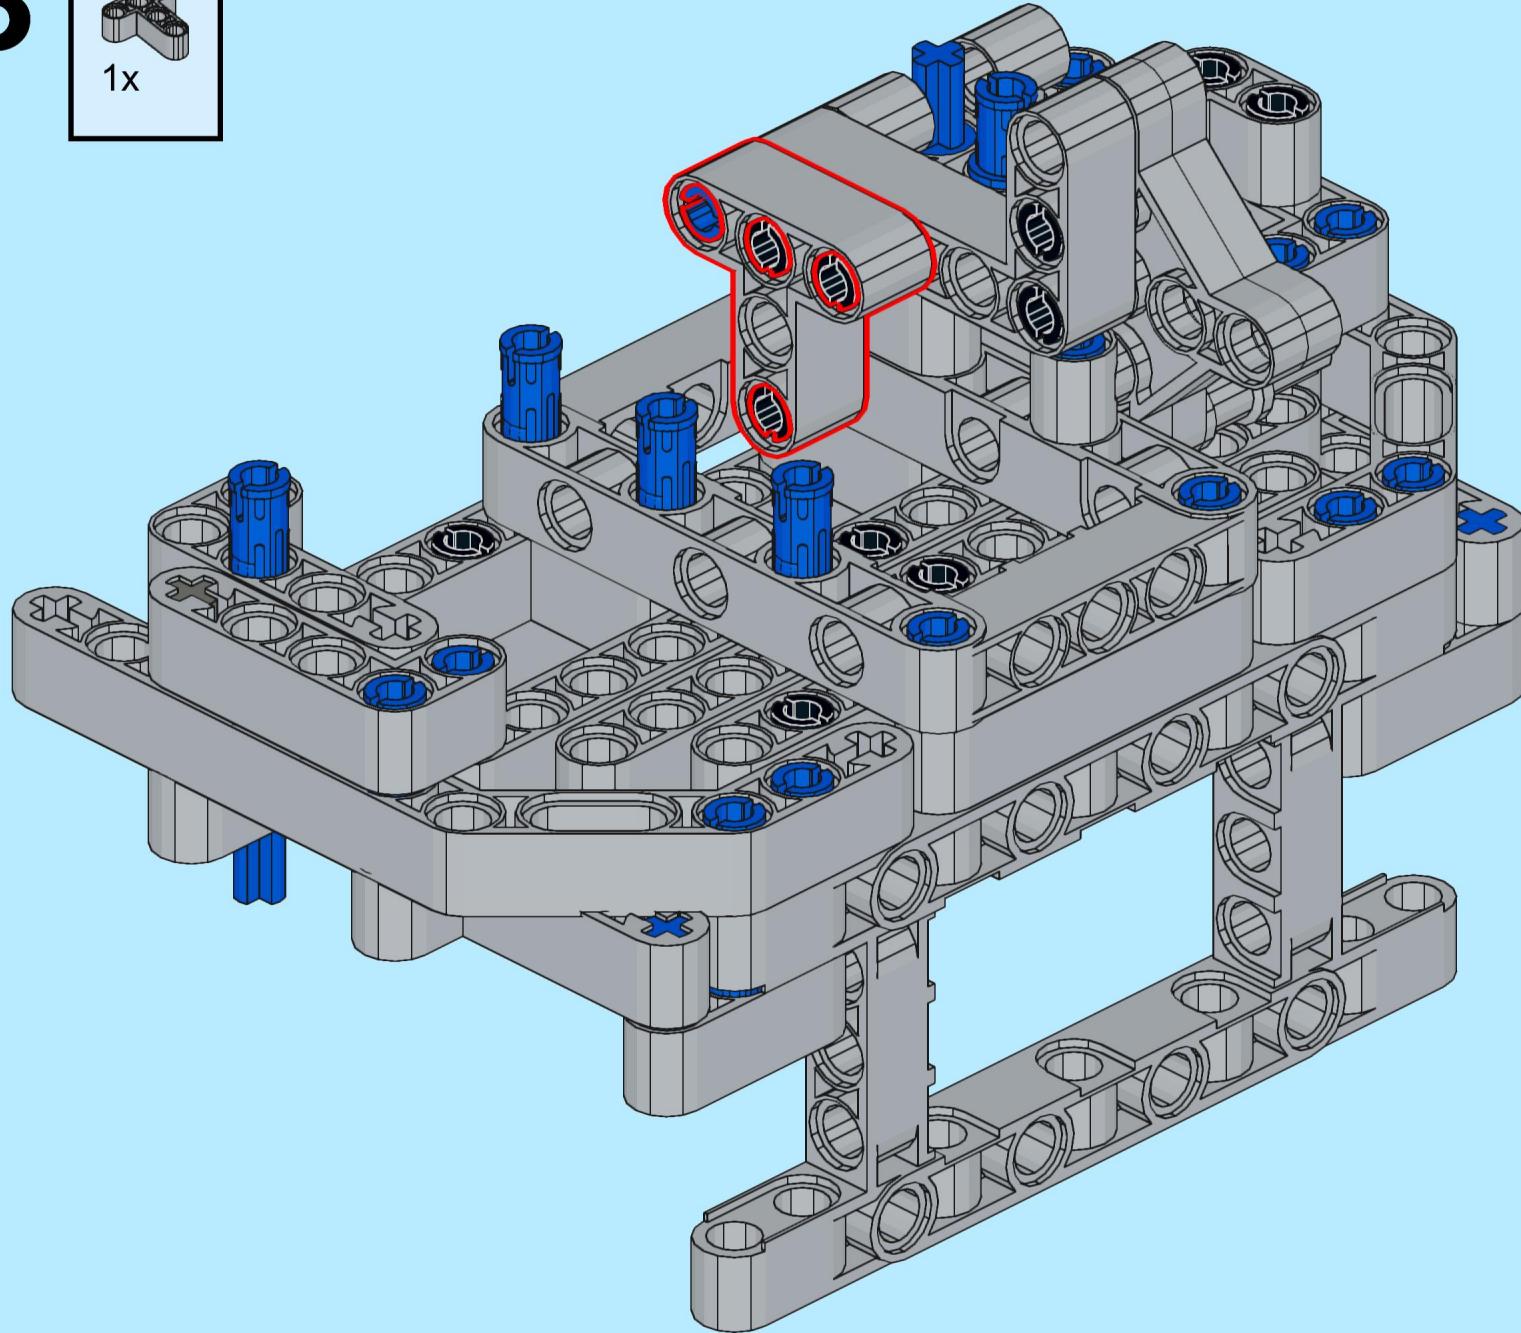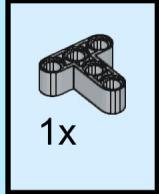



**44**

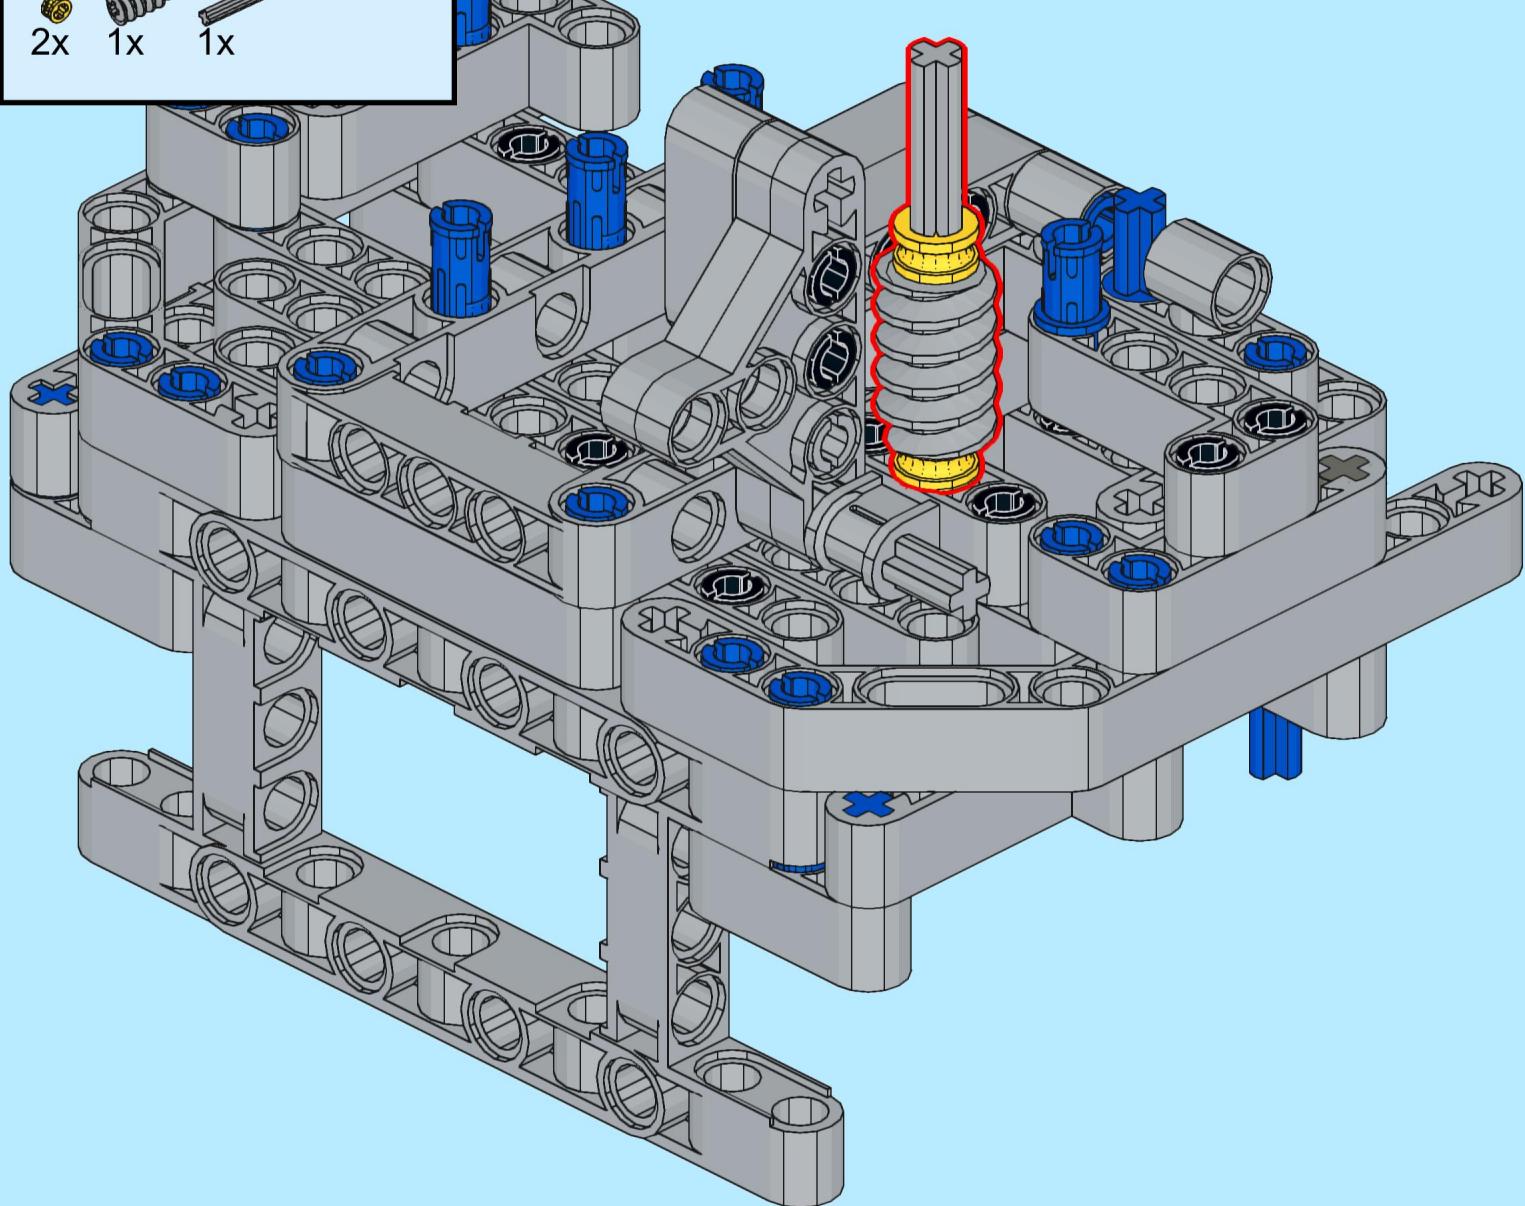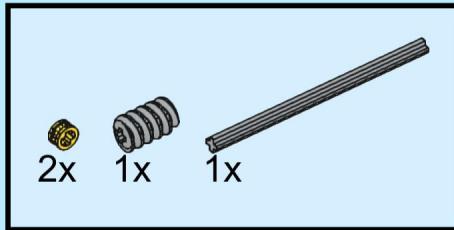



**45**

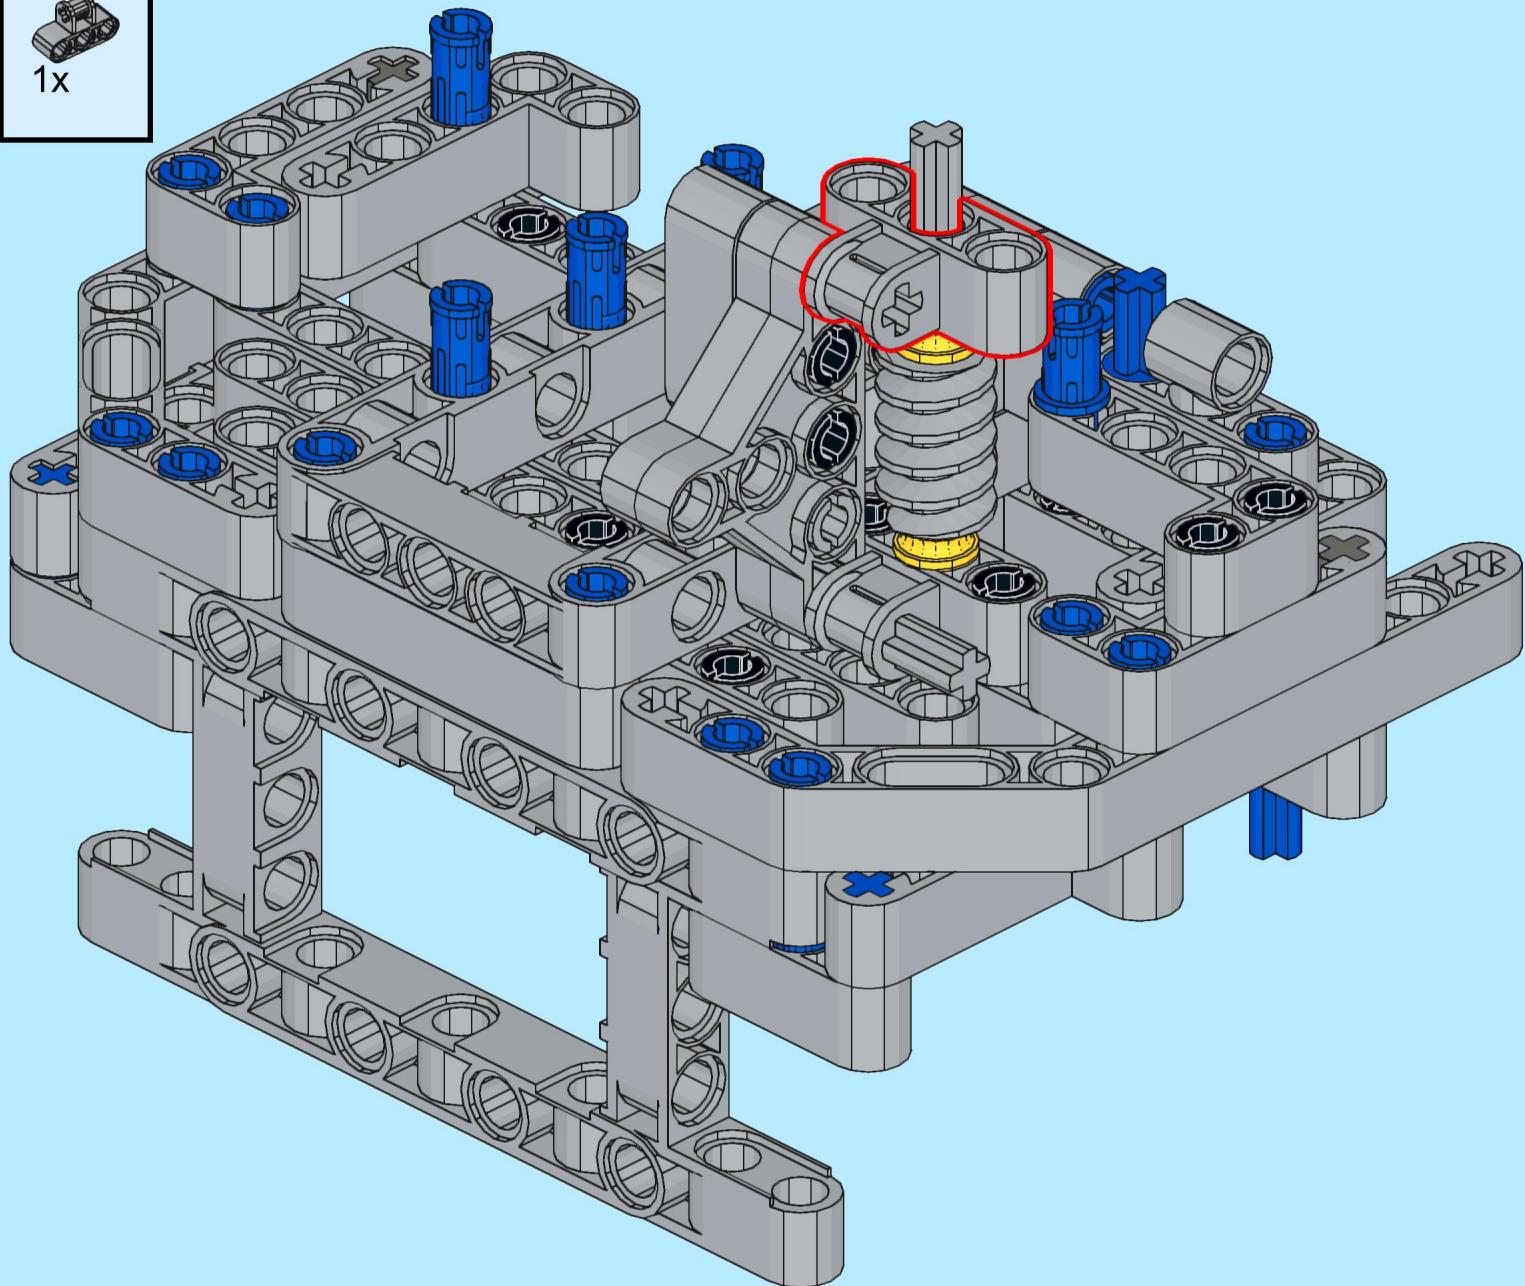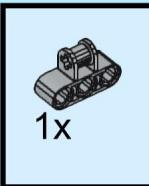


**46**

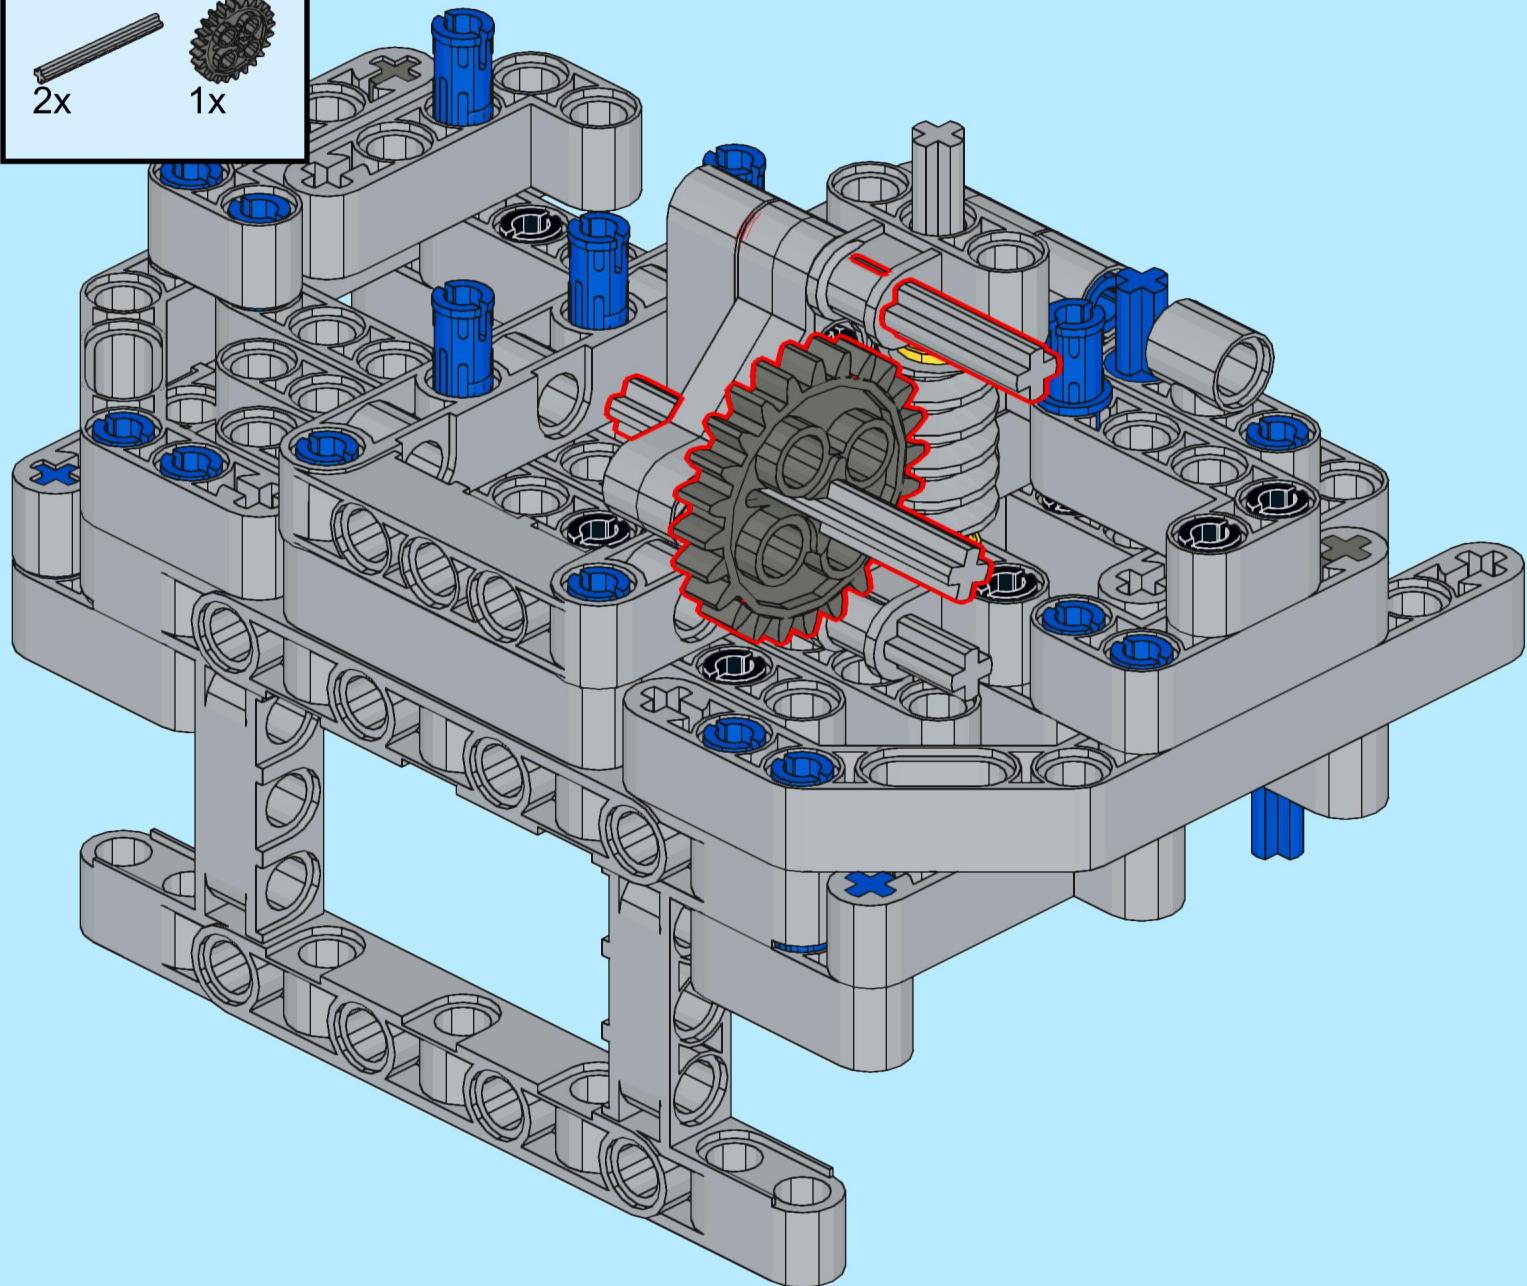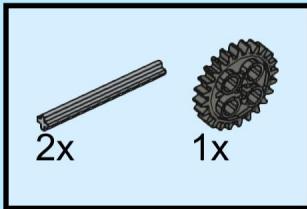



**47**

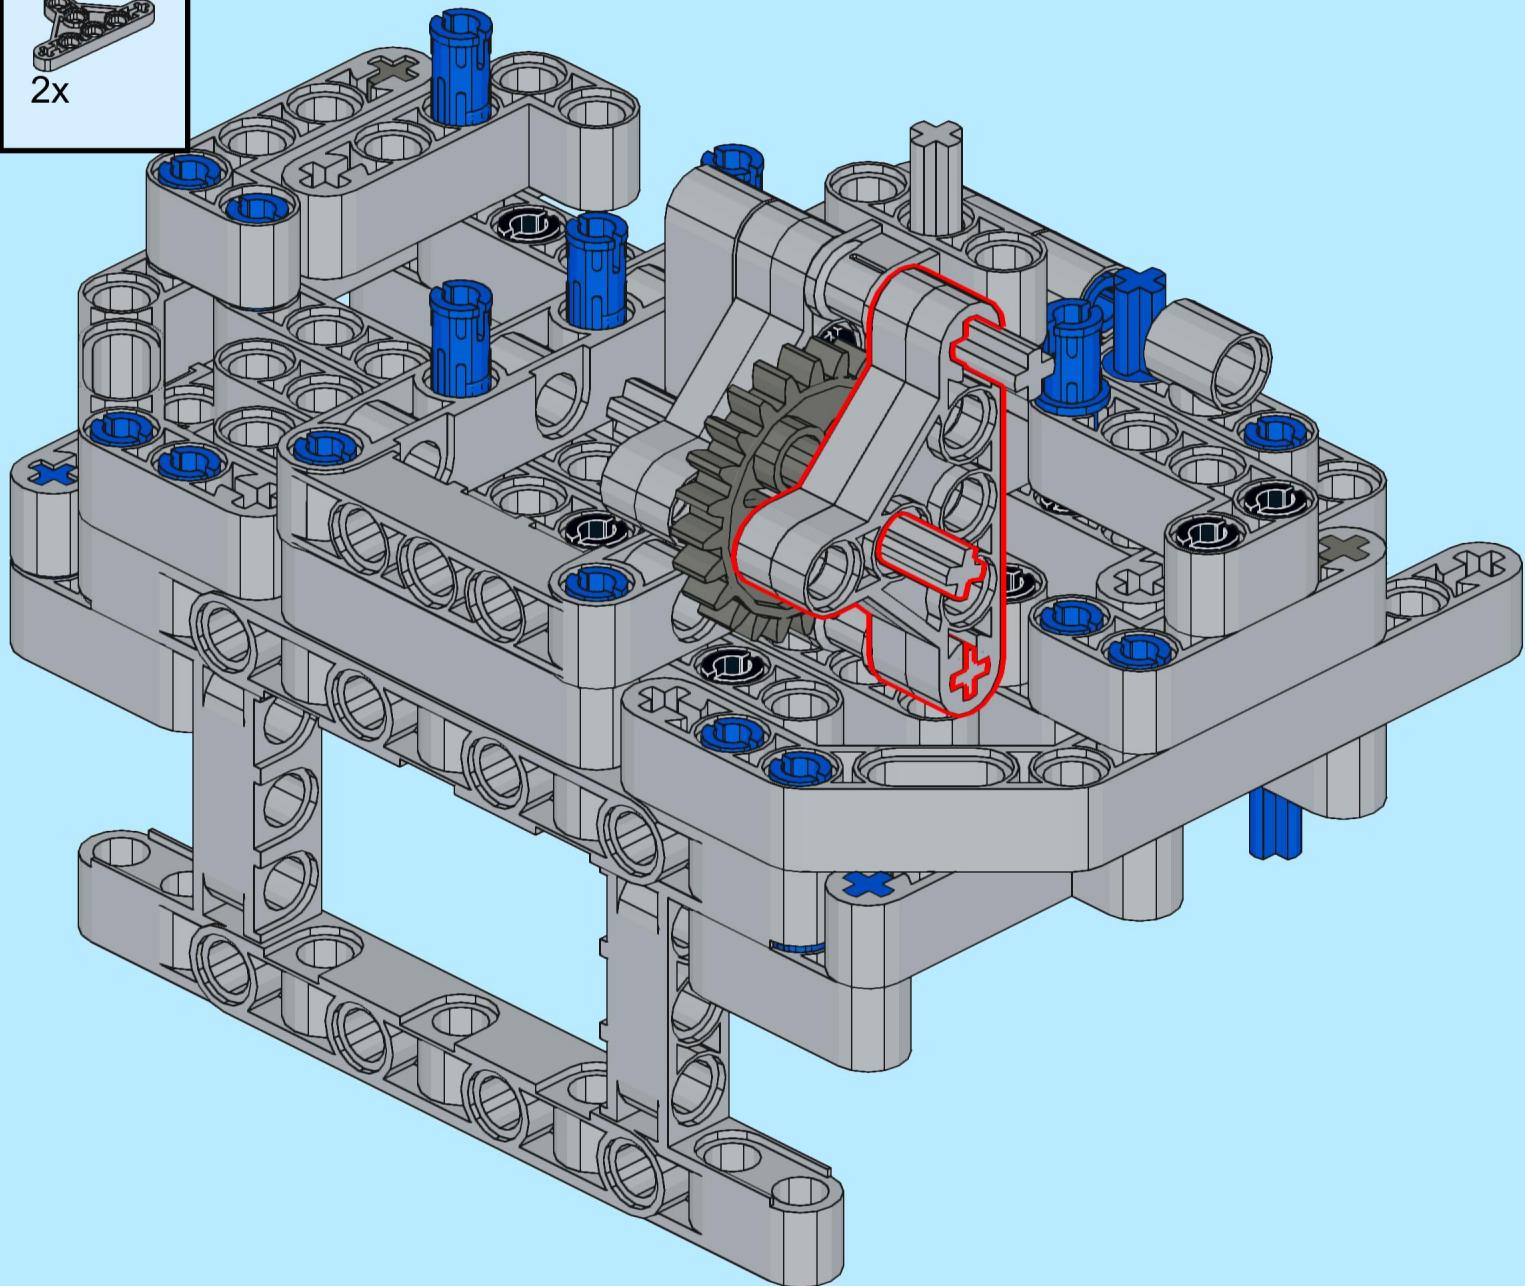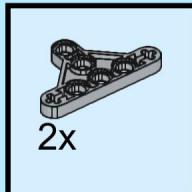



**48**

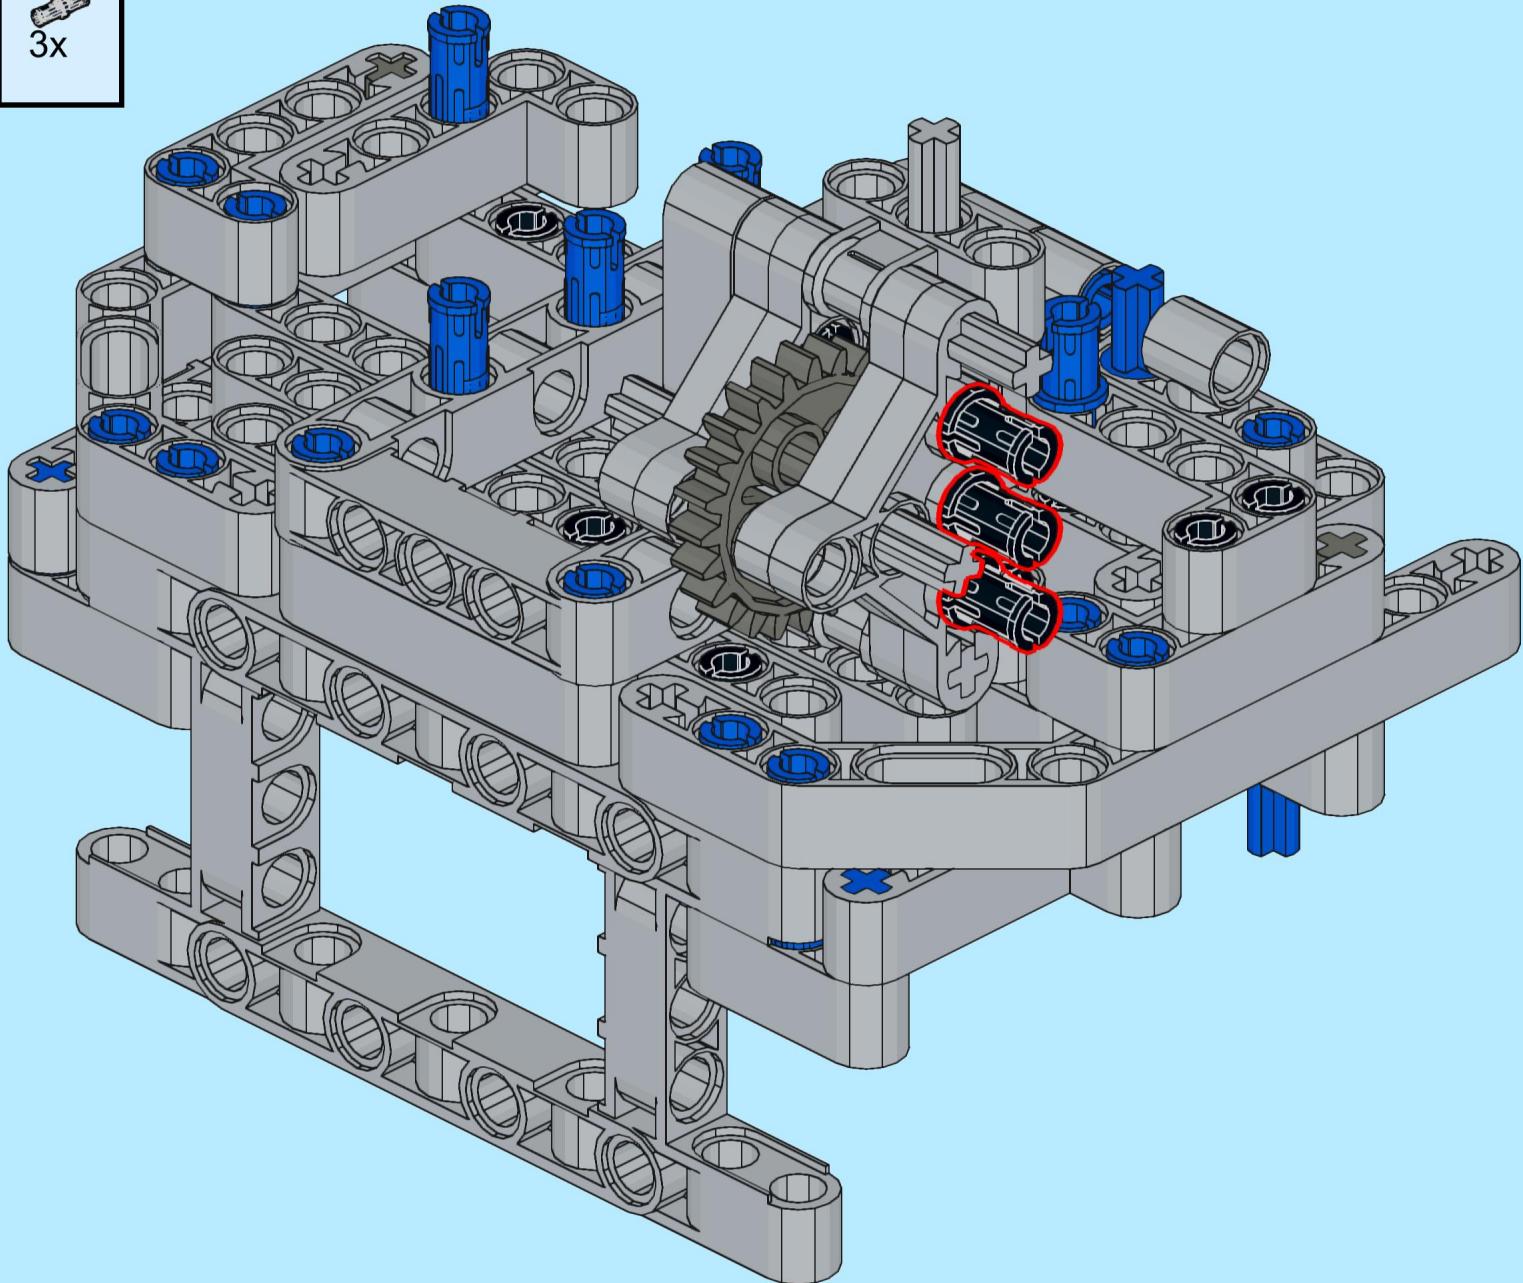



**49**

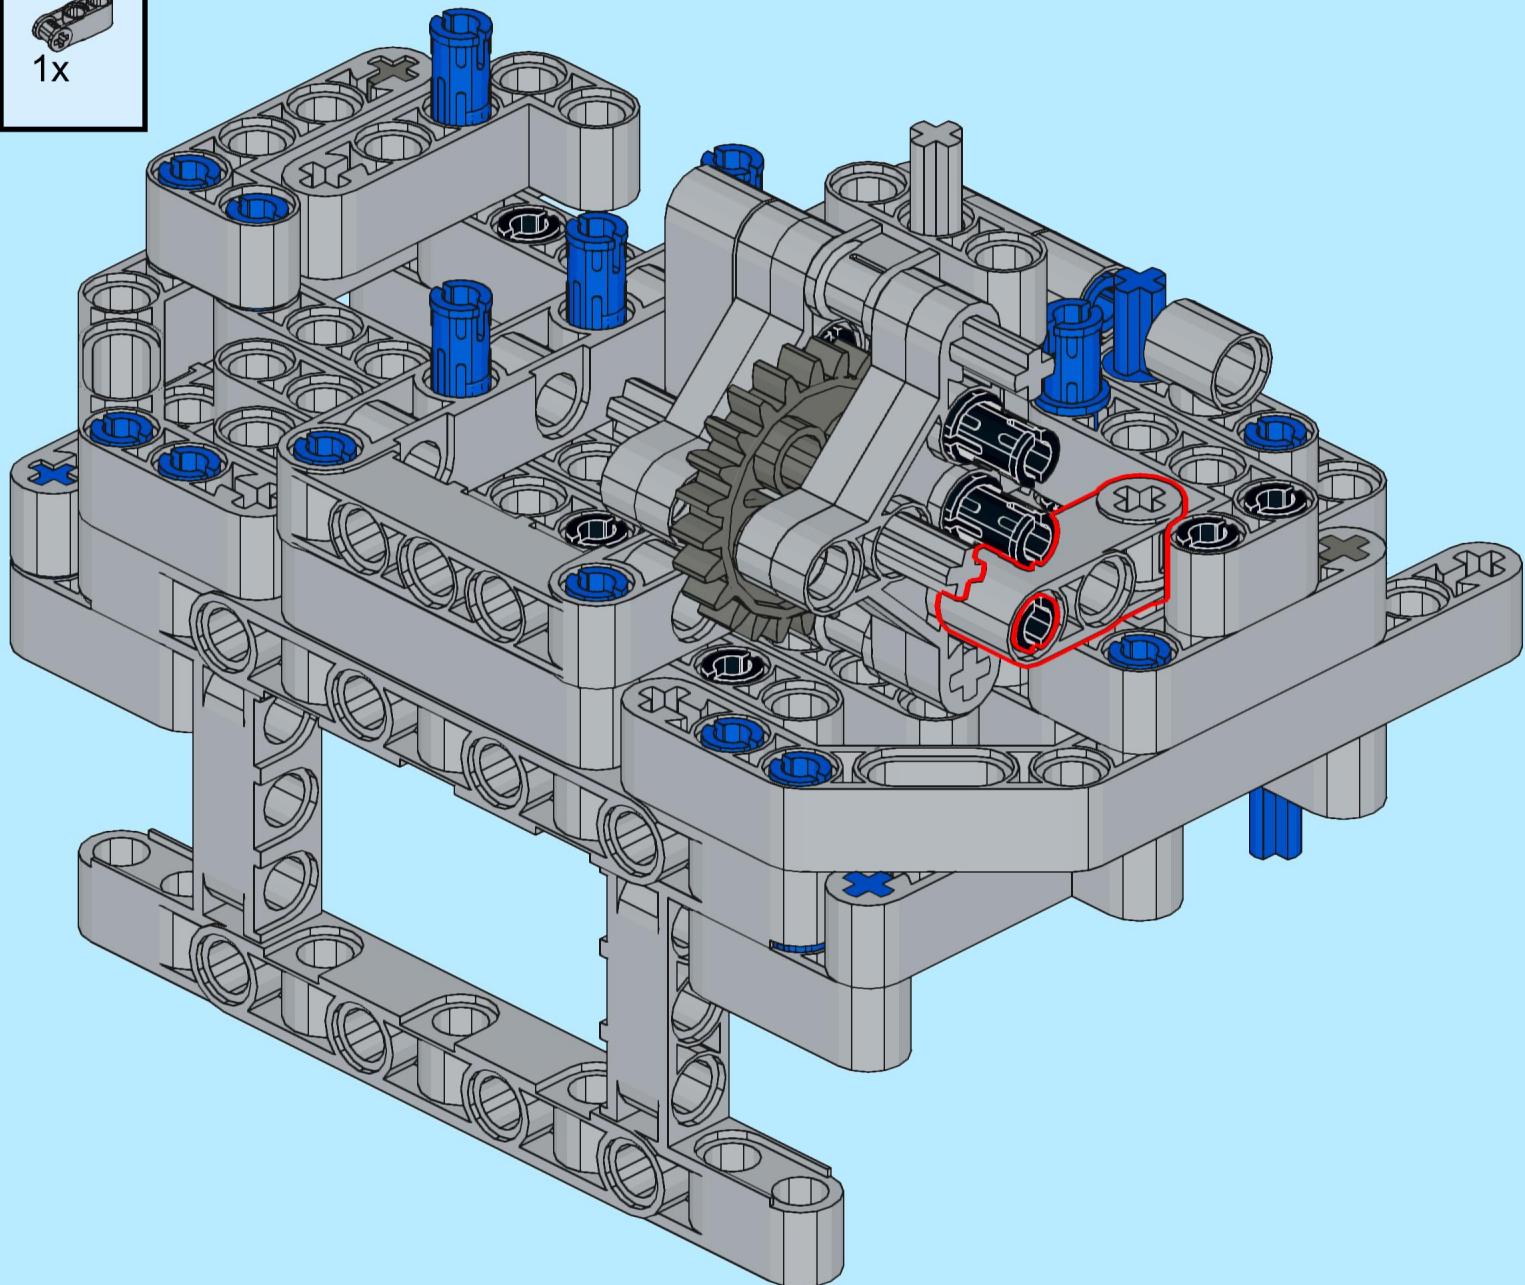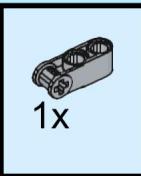



**50**

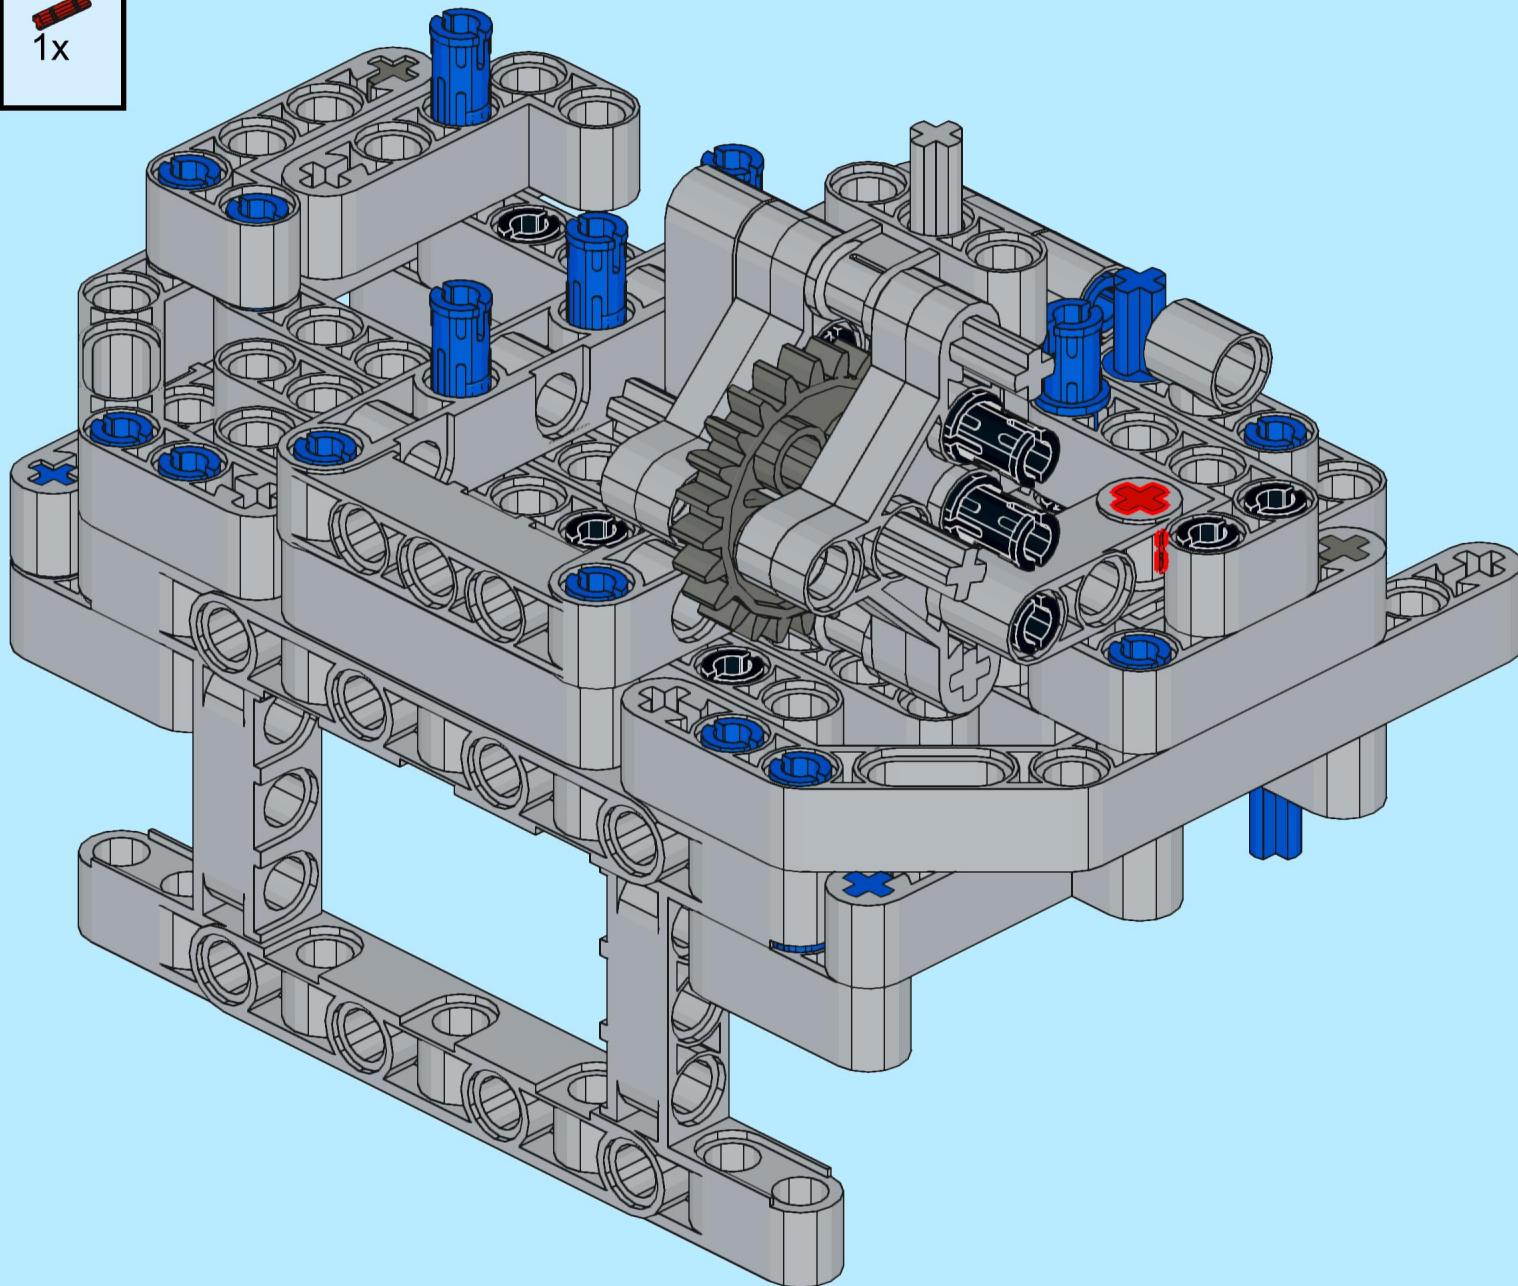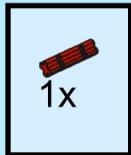



**51**

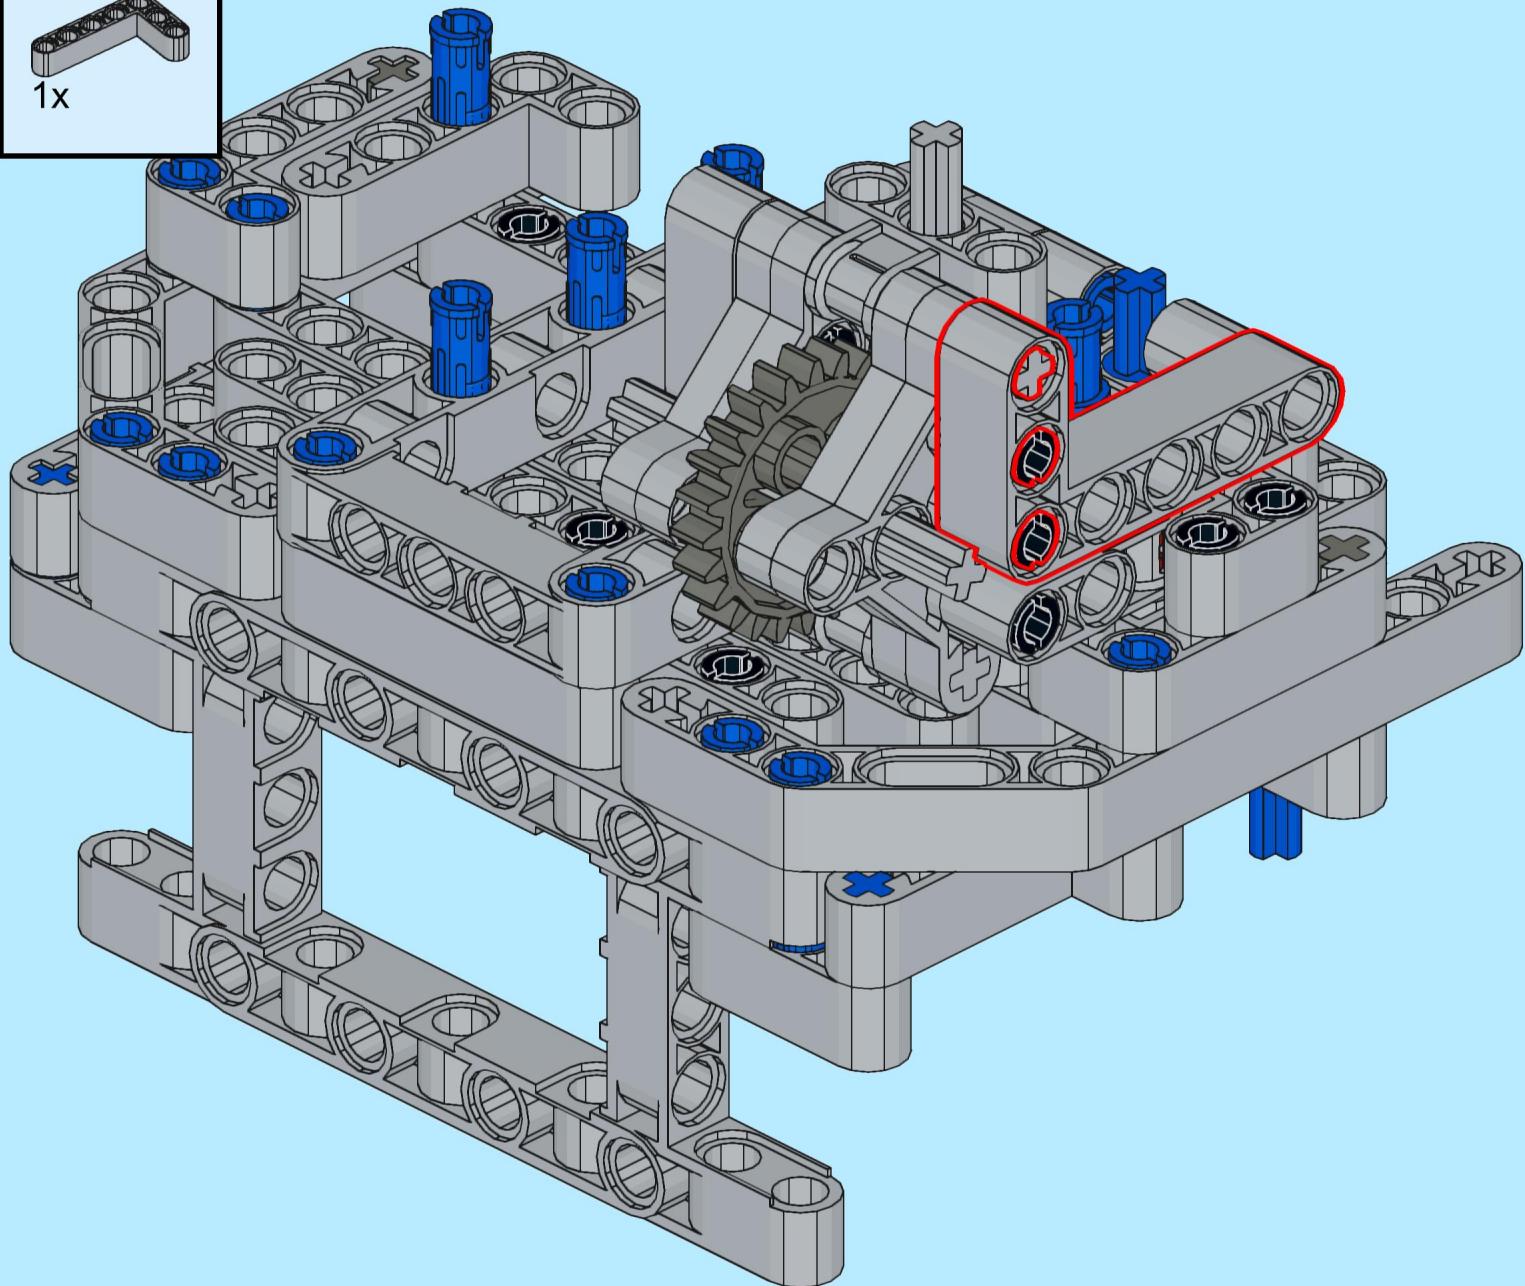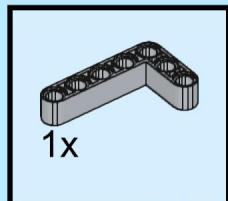


**52**

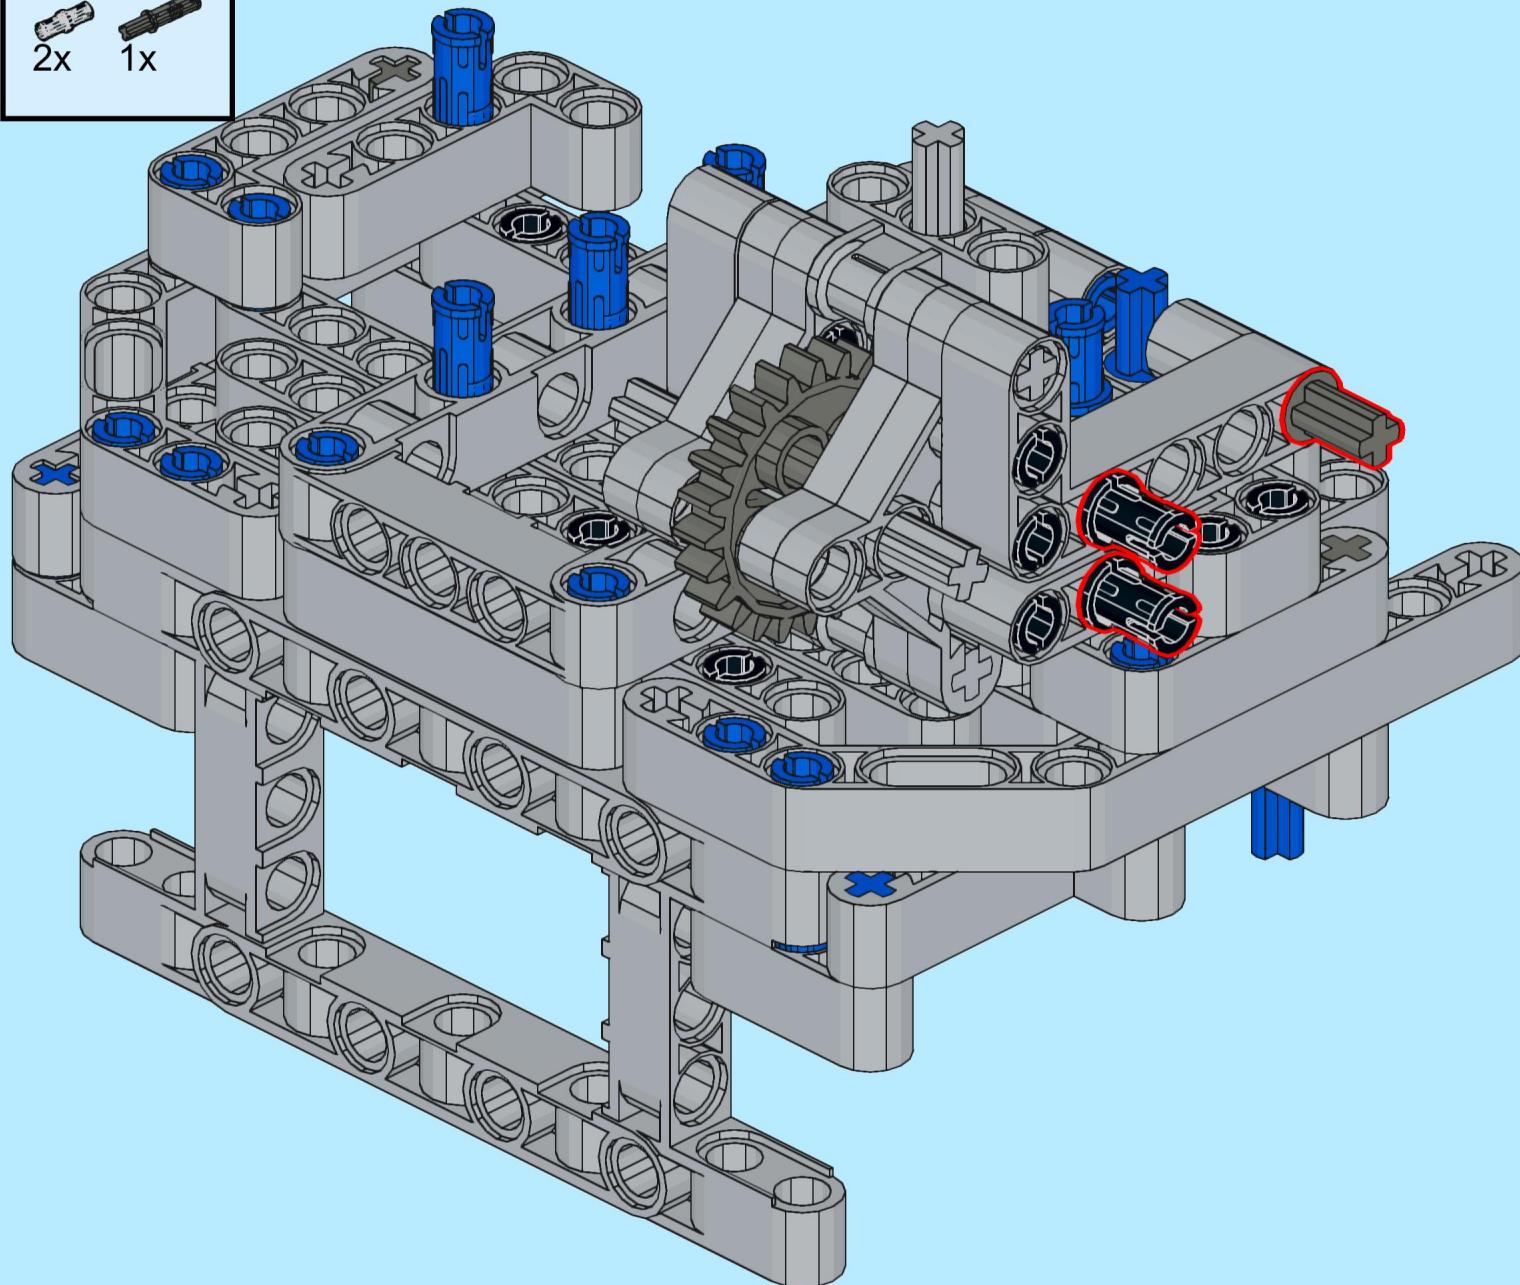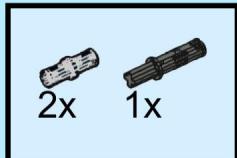


**53**

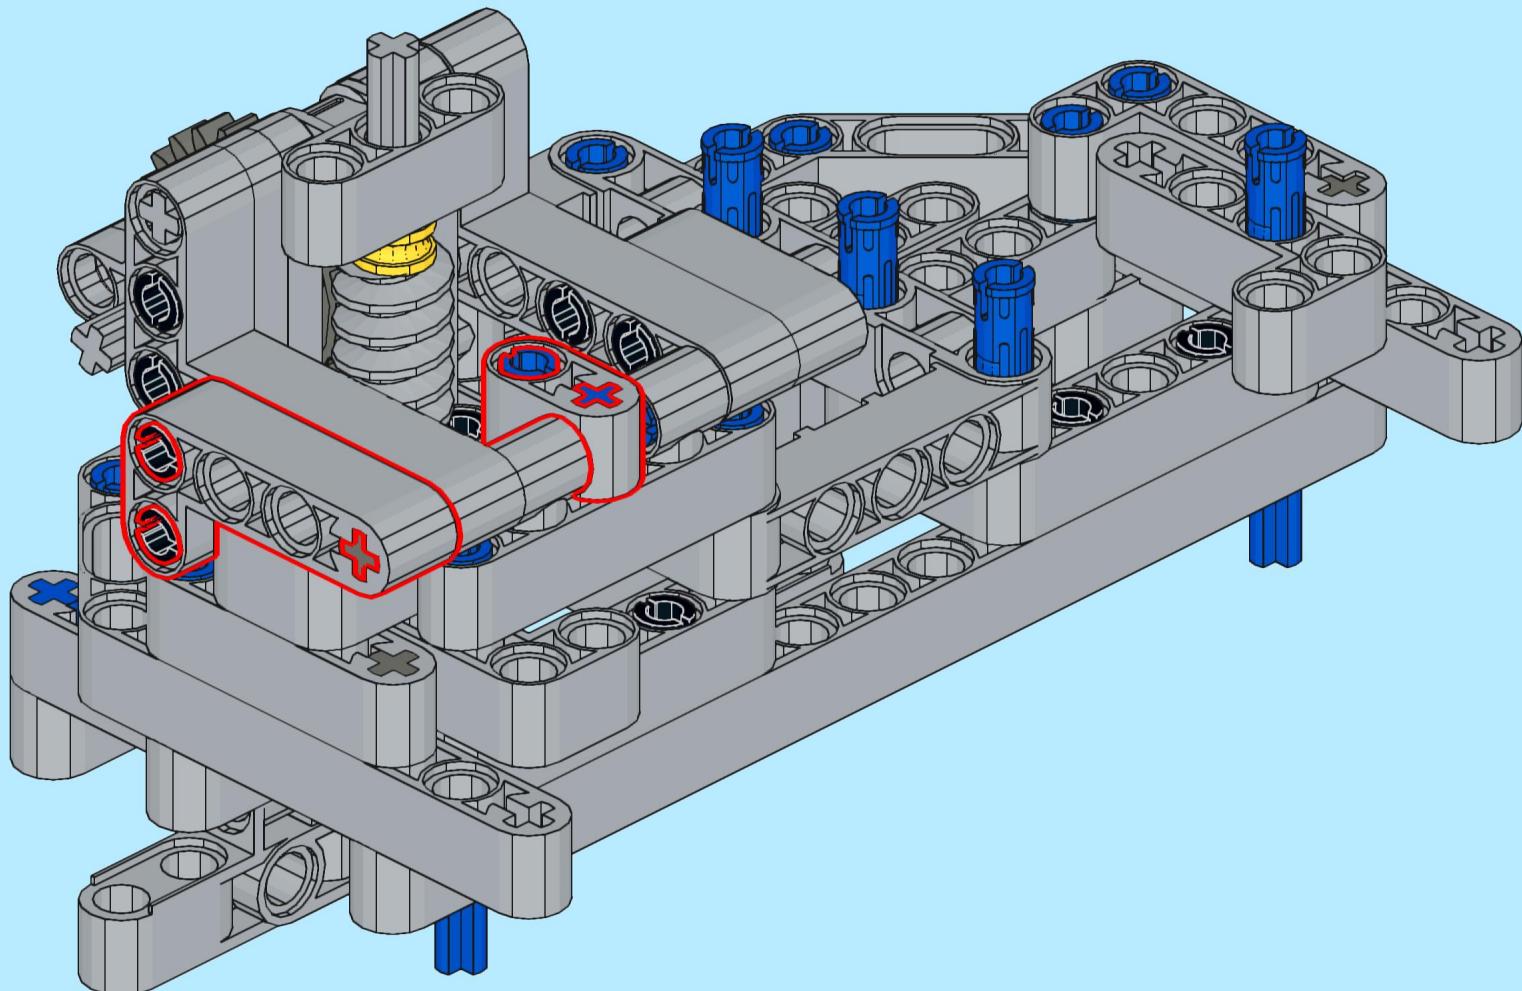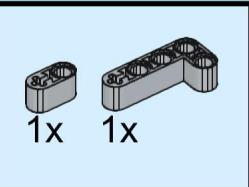

**54**

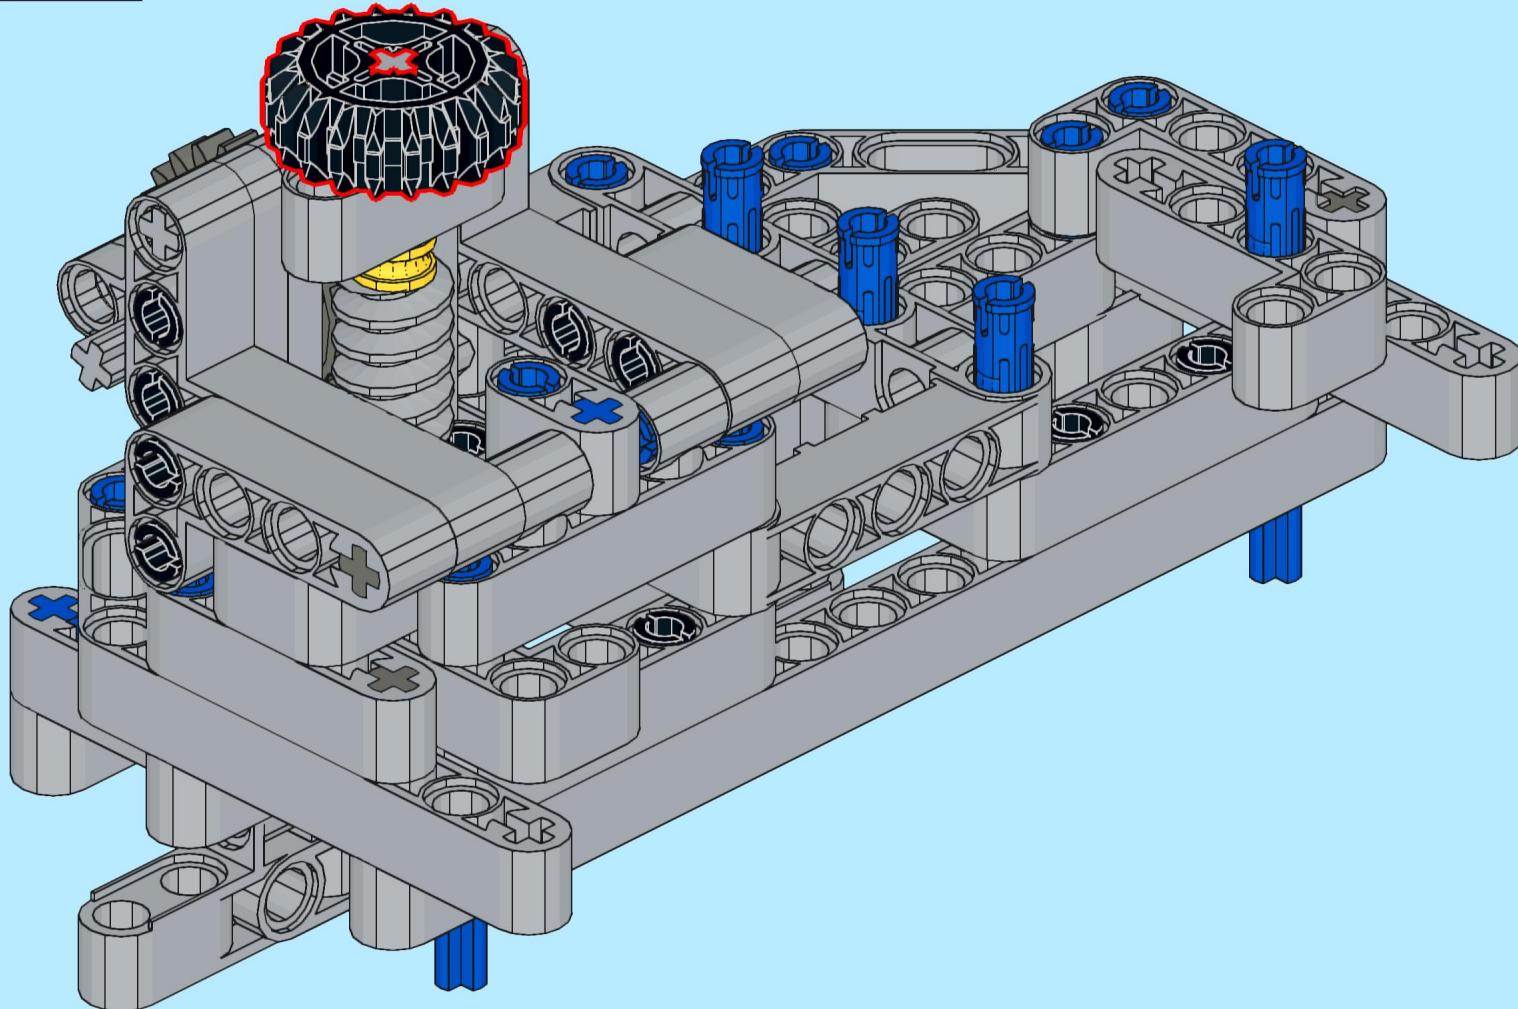

**55**

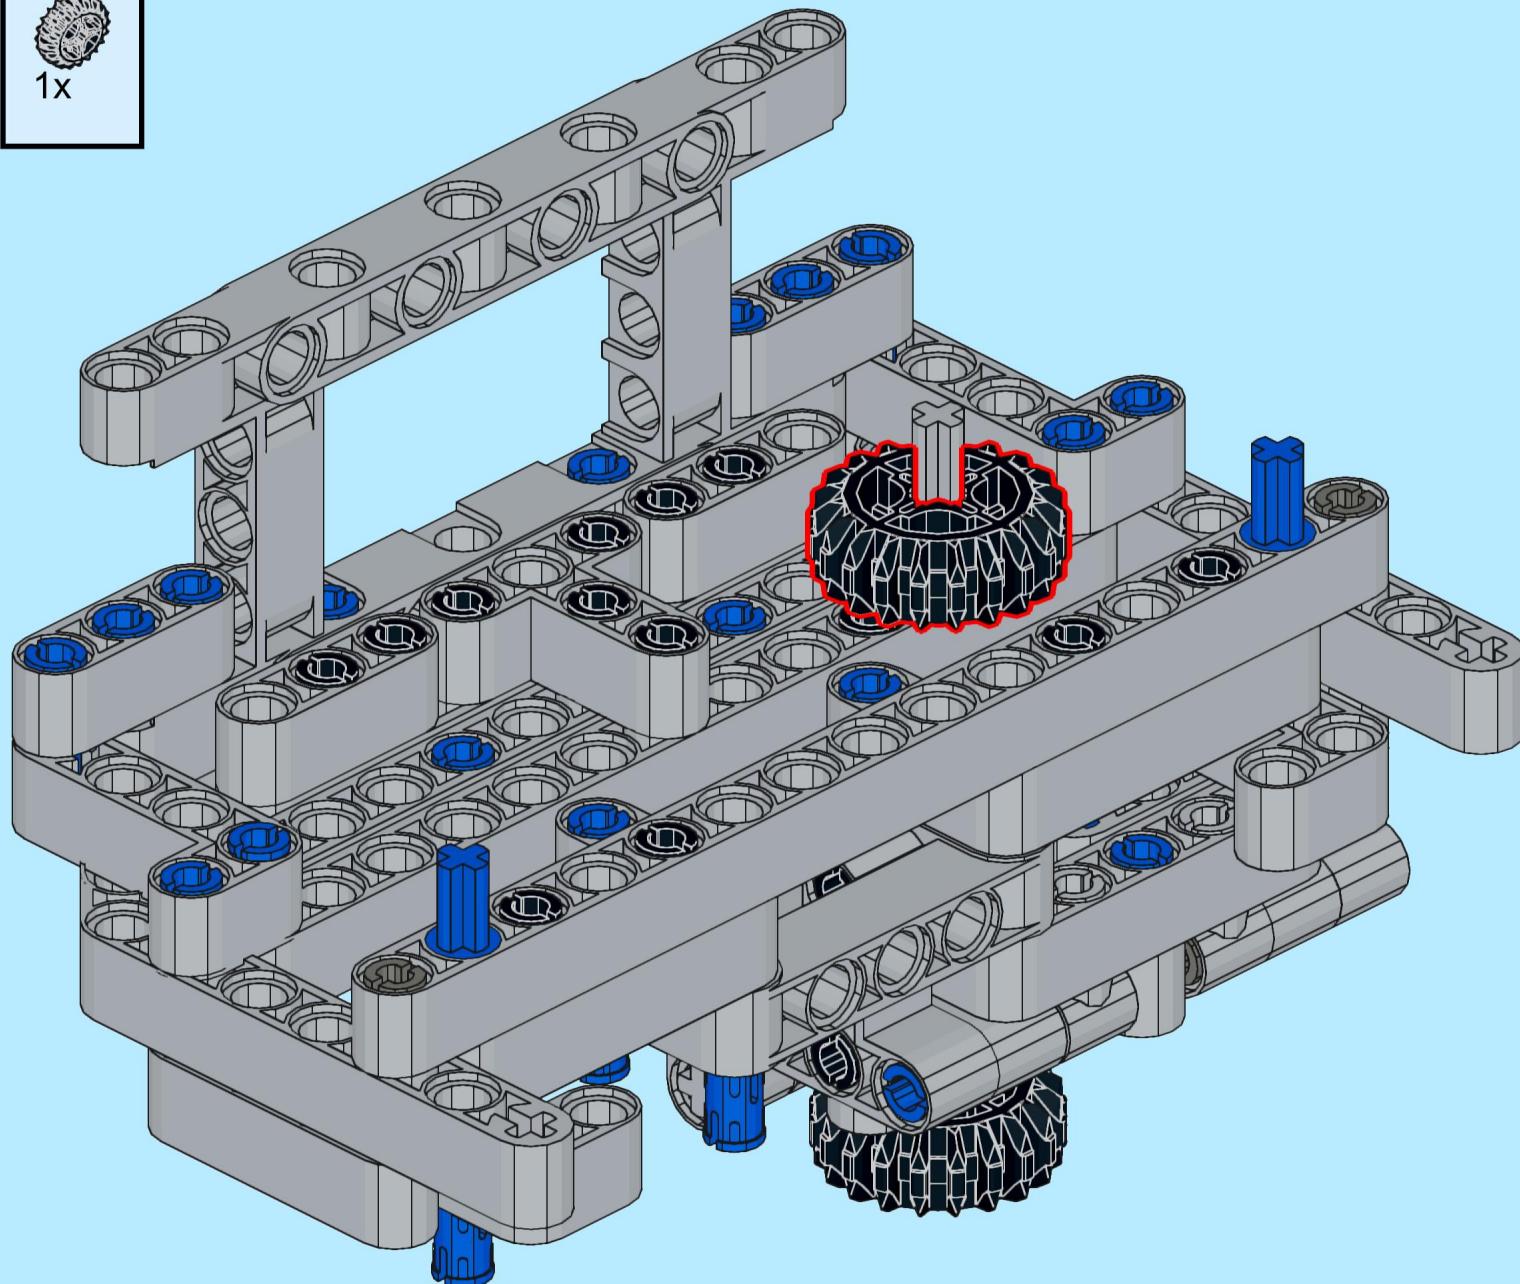


## **Left Gear System:**

**For the "Knob Gear Drive" jump to Step 25  
in the instruction manual.**



**For the "Worm Gear Drive" proceed to  
Step 56 on the following page.**

# 56



1x 4x

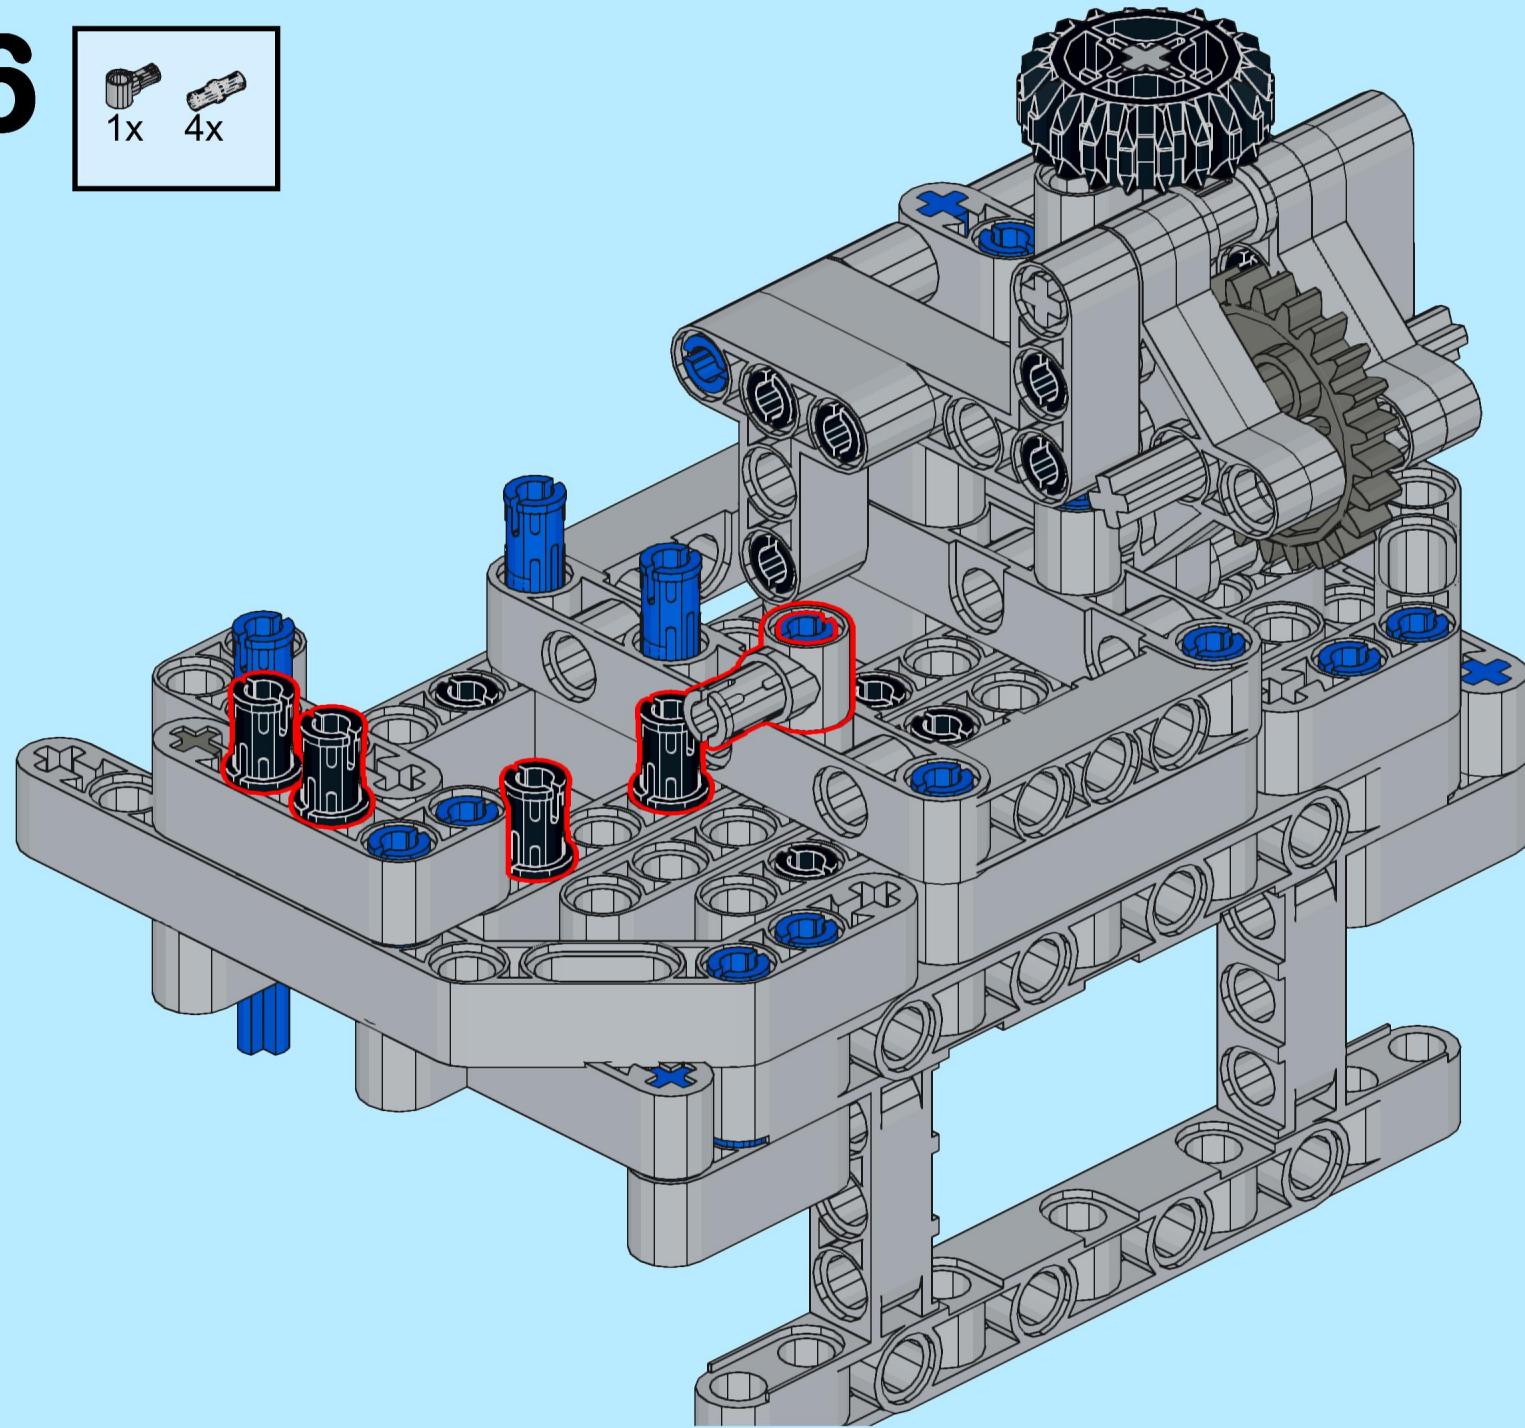



**57**

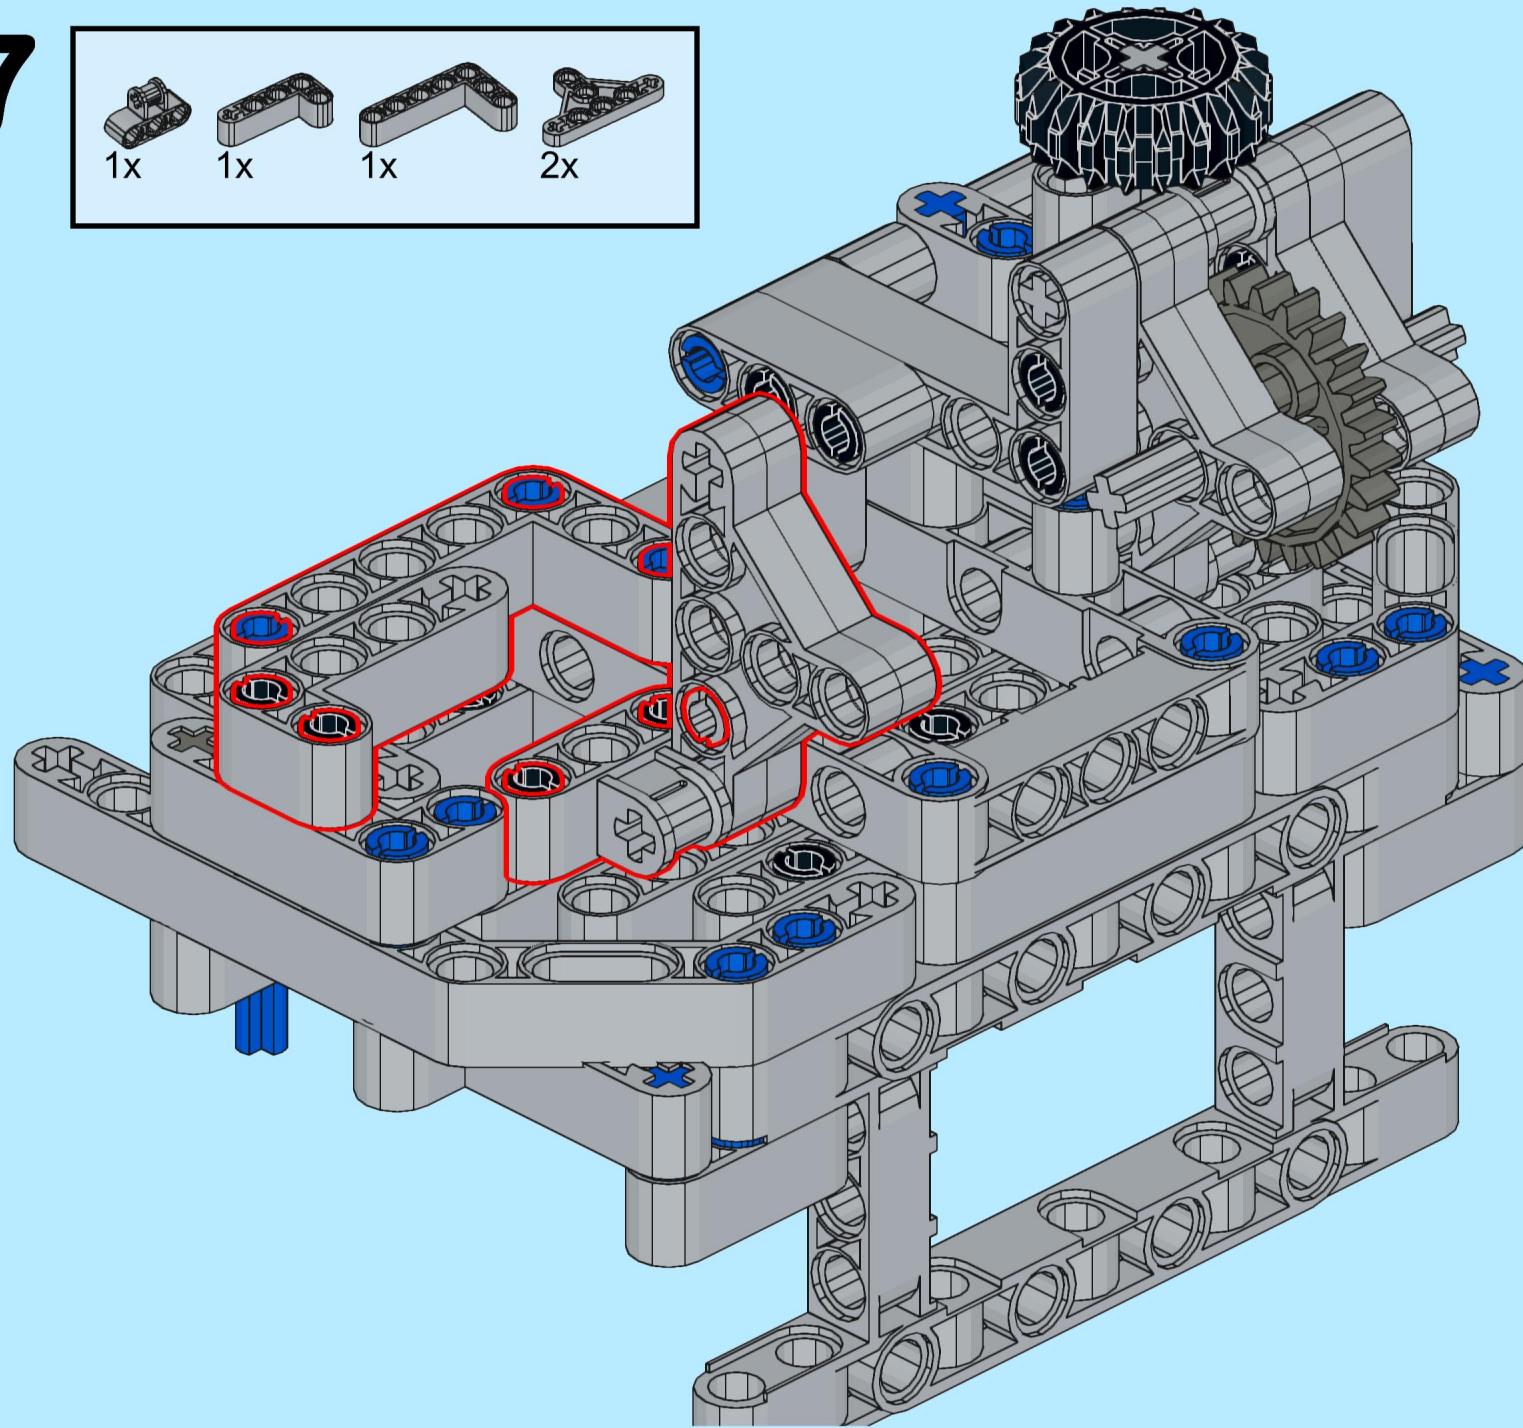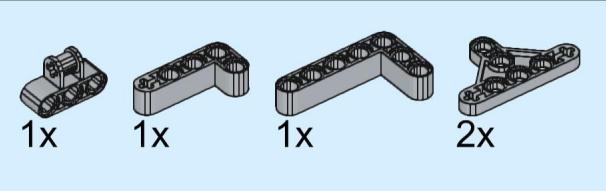



**58**

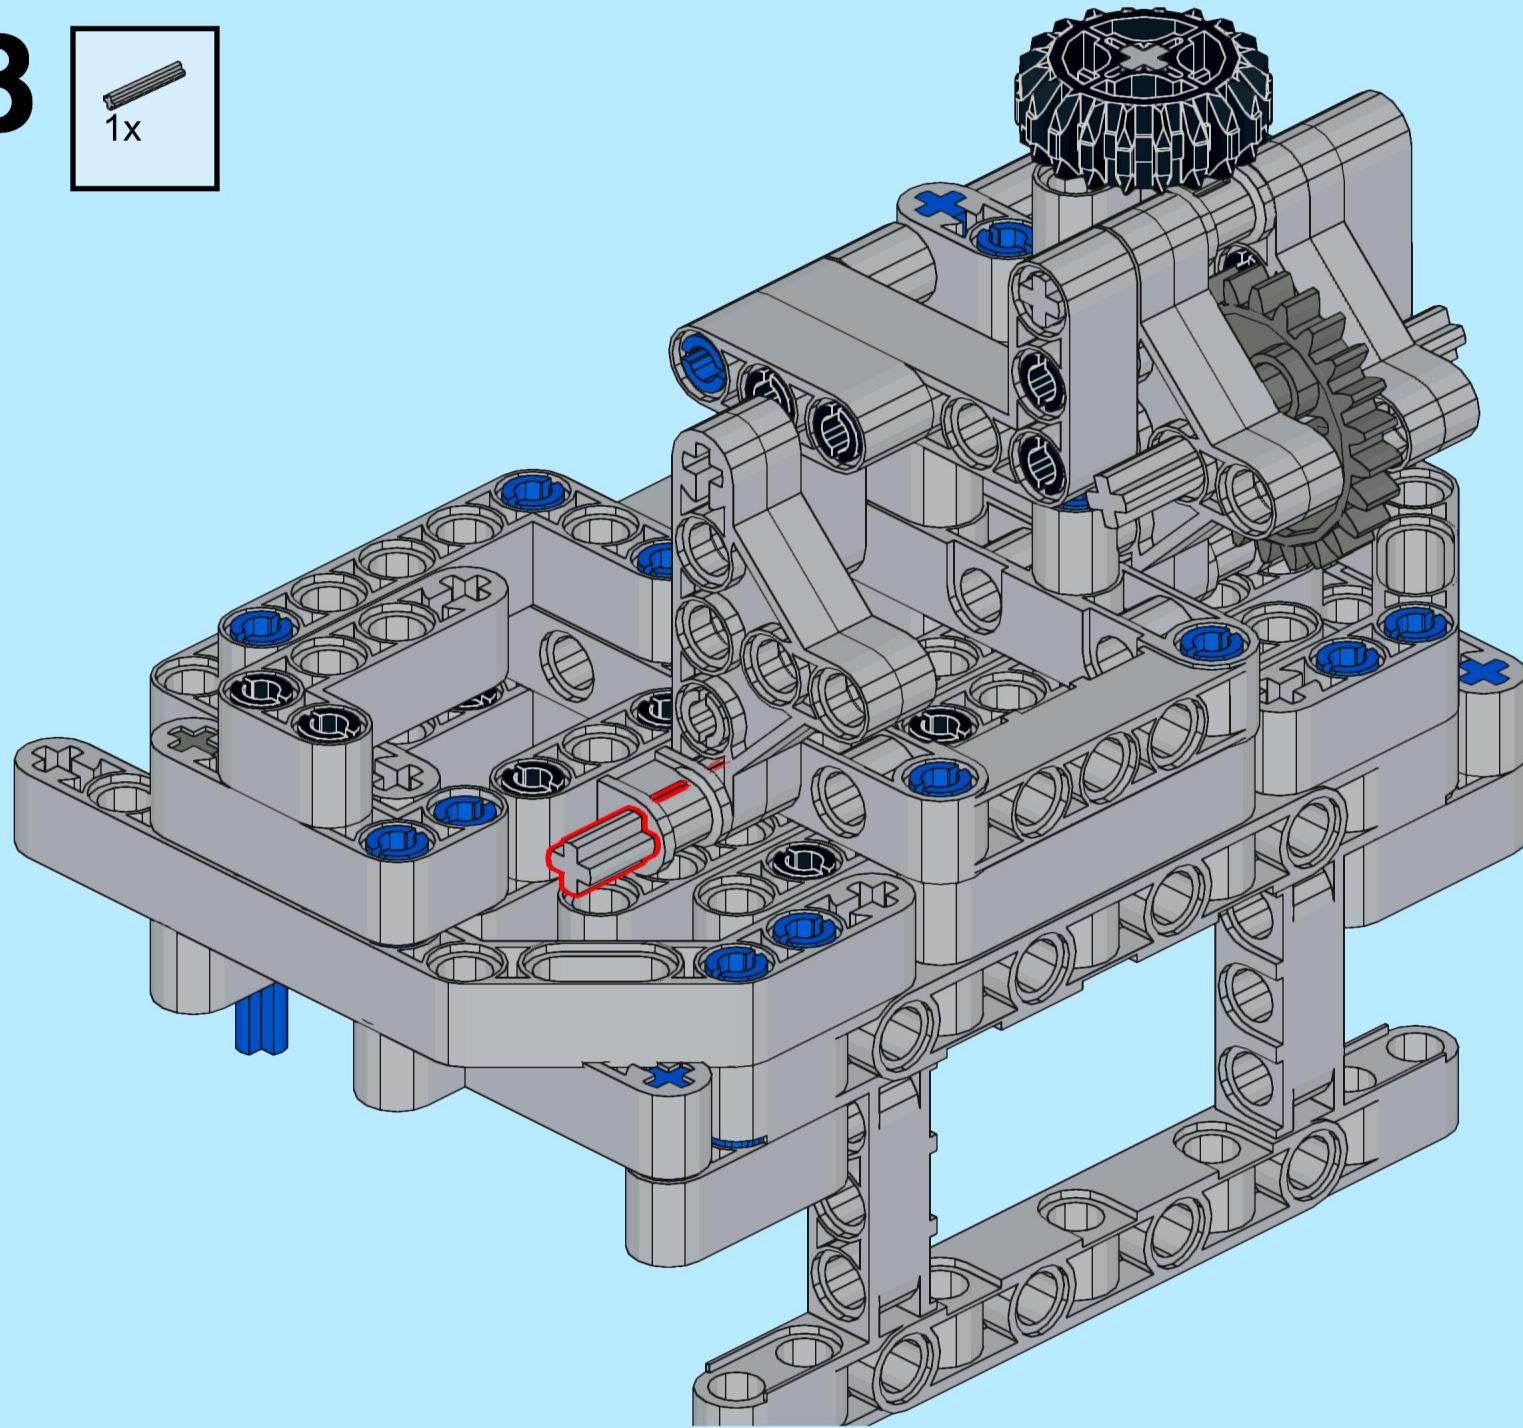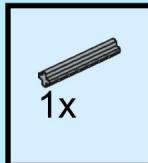



**59**

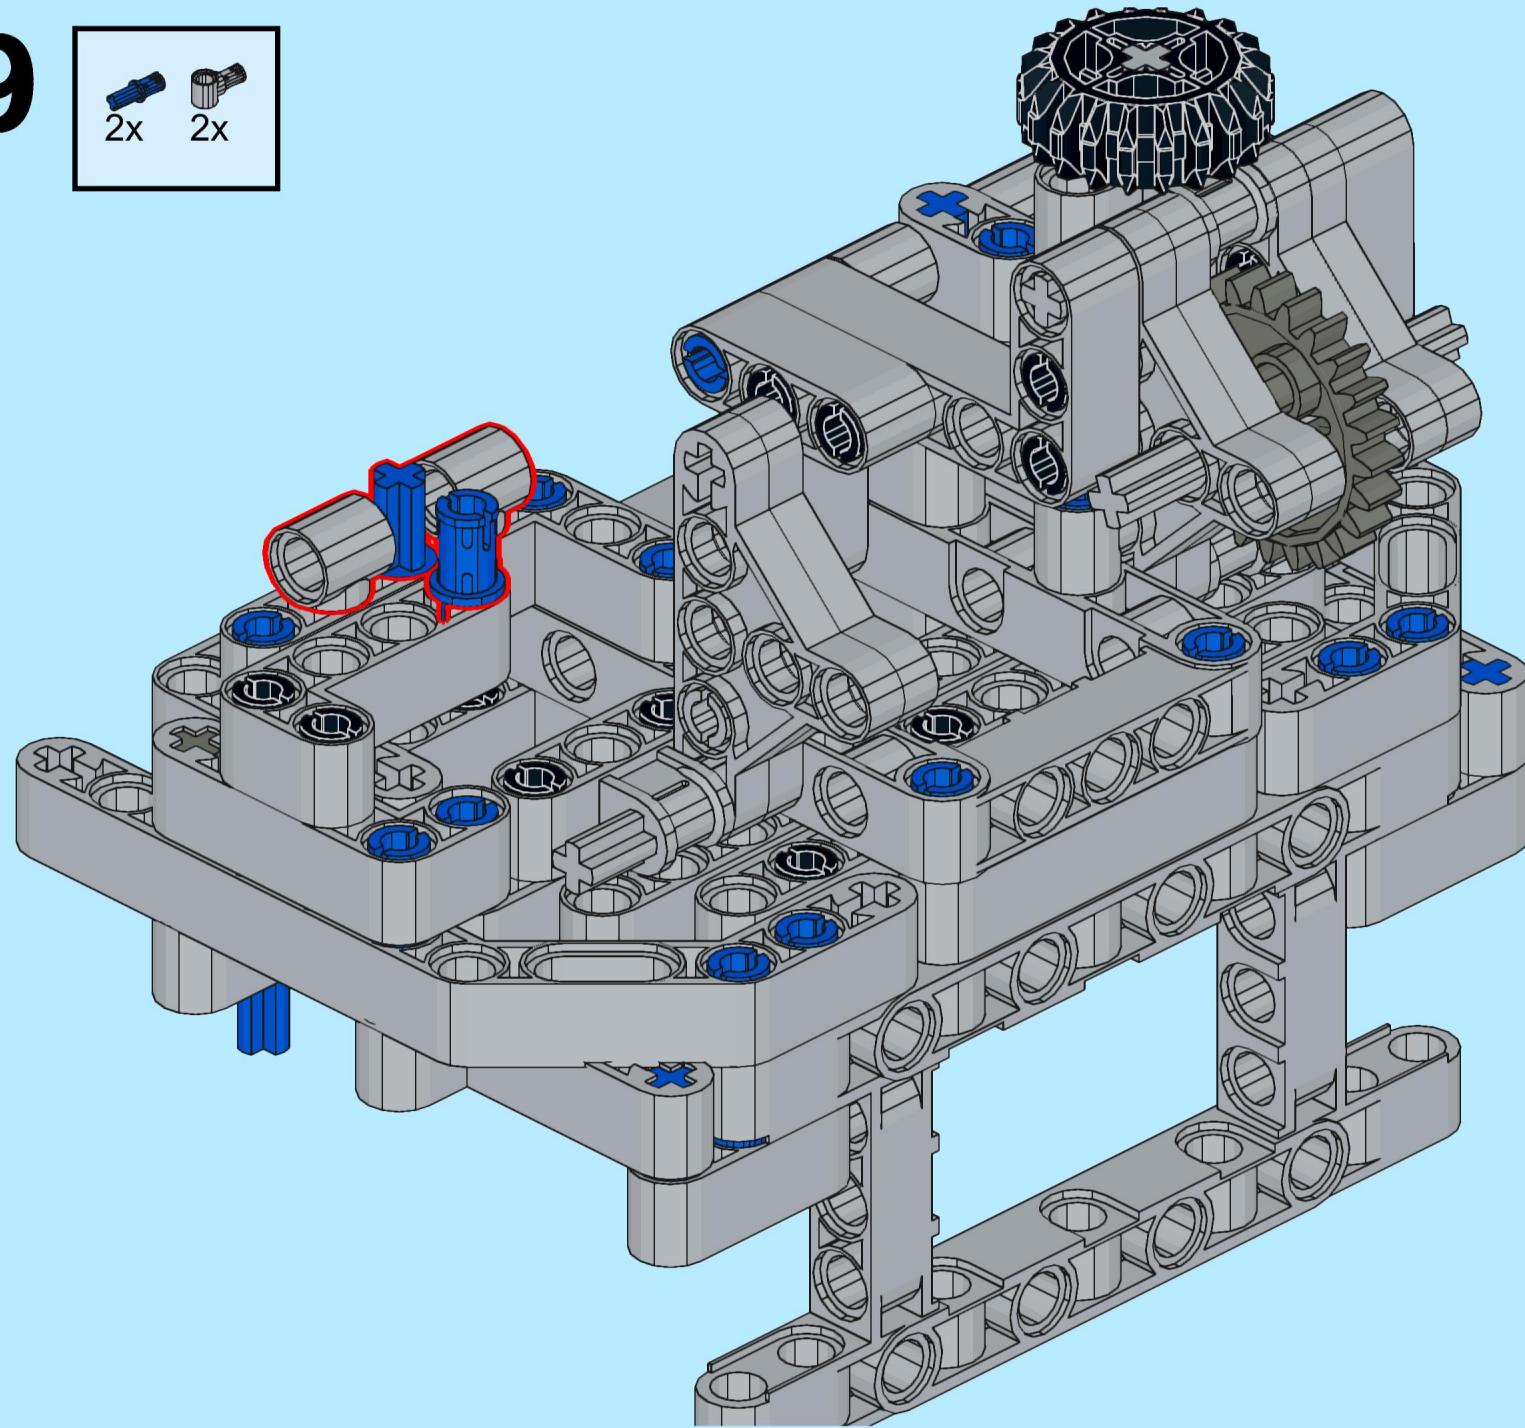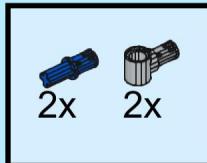


**60**

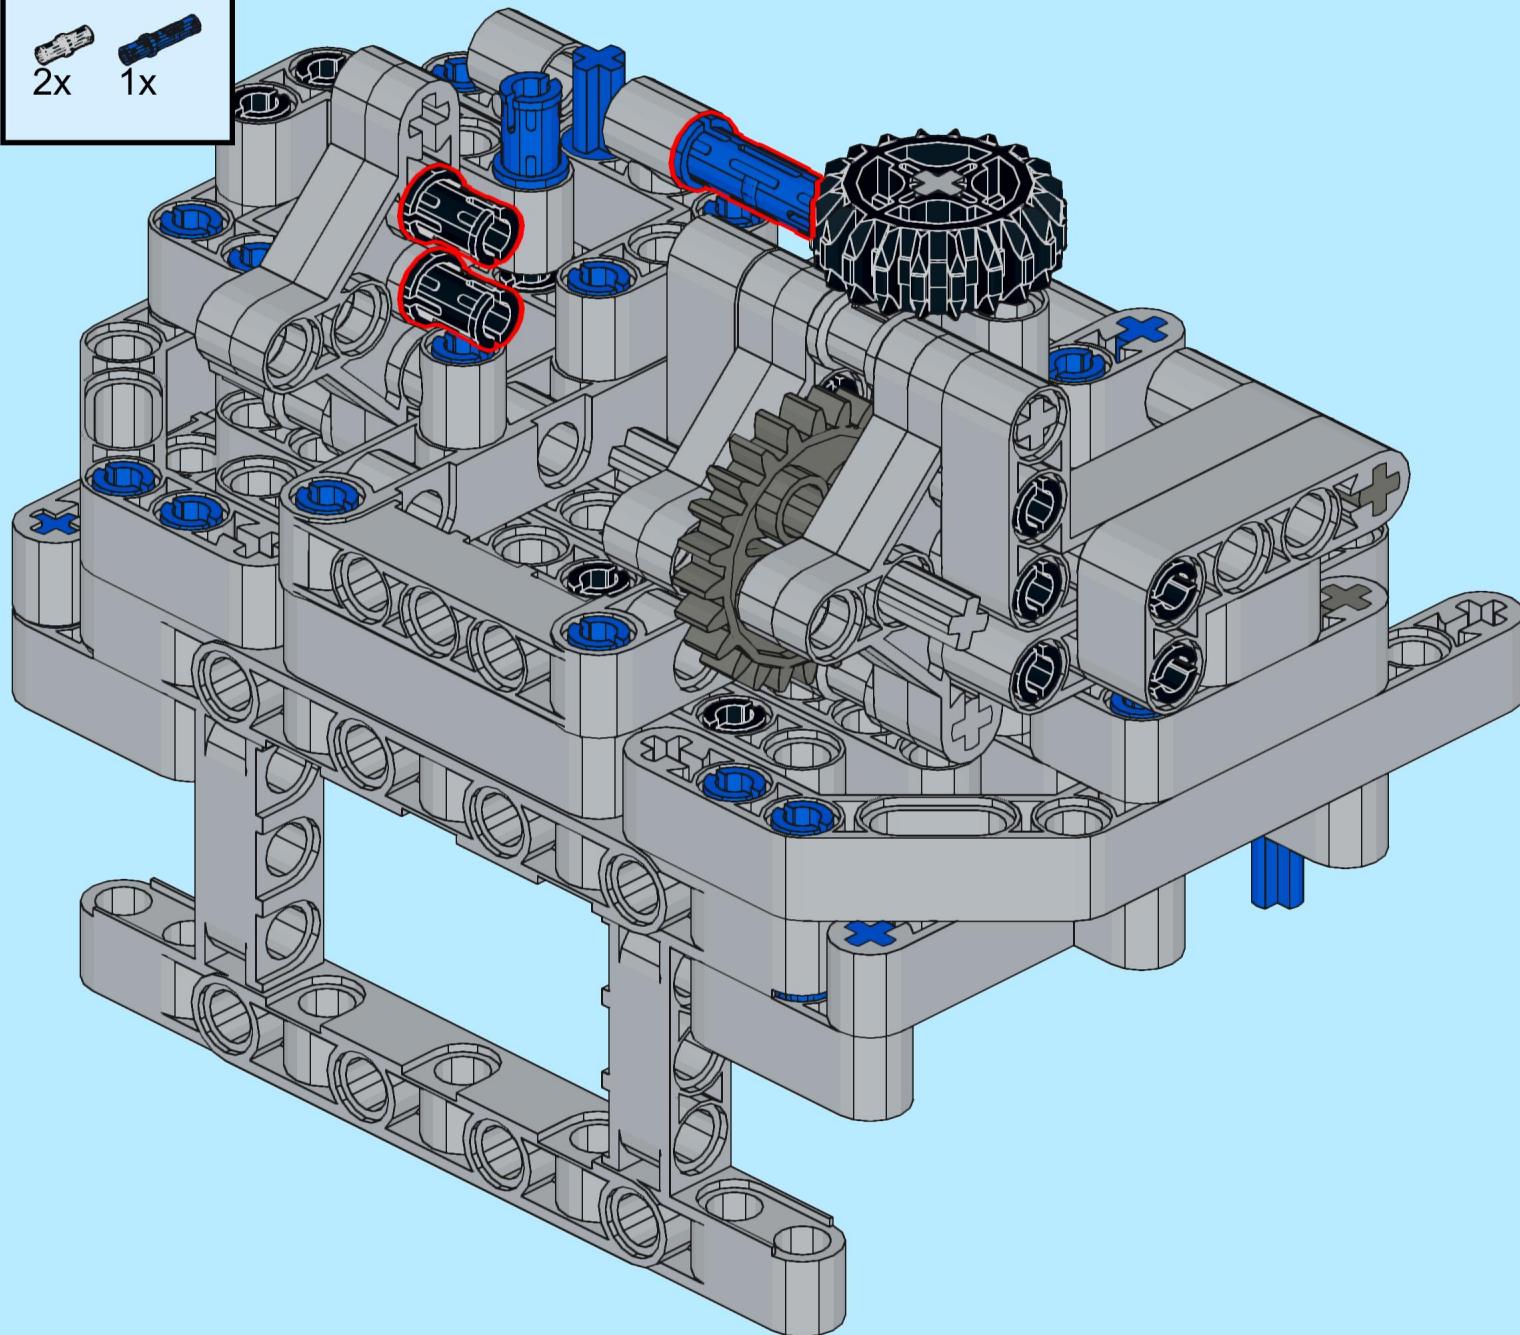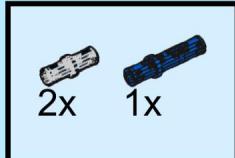



**61**

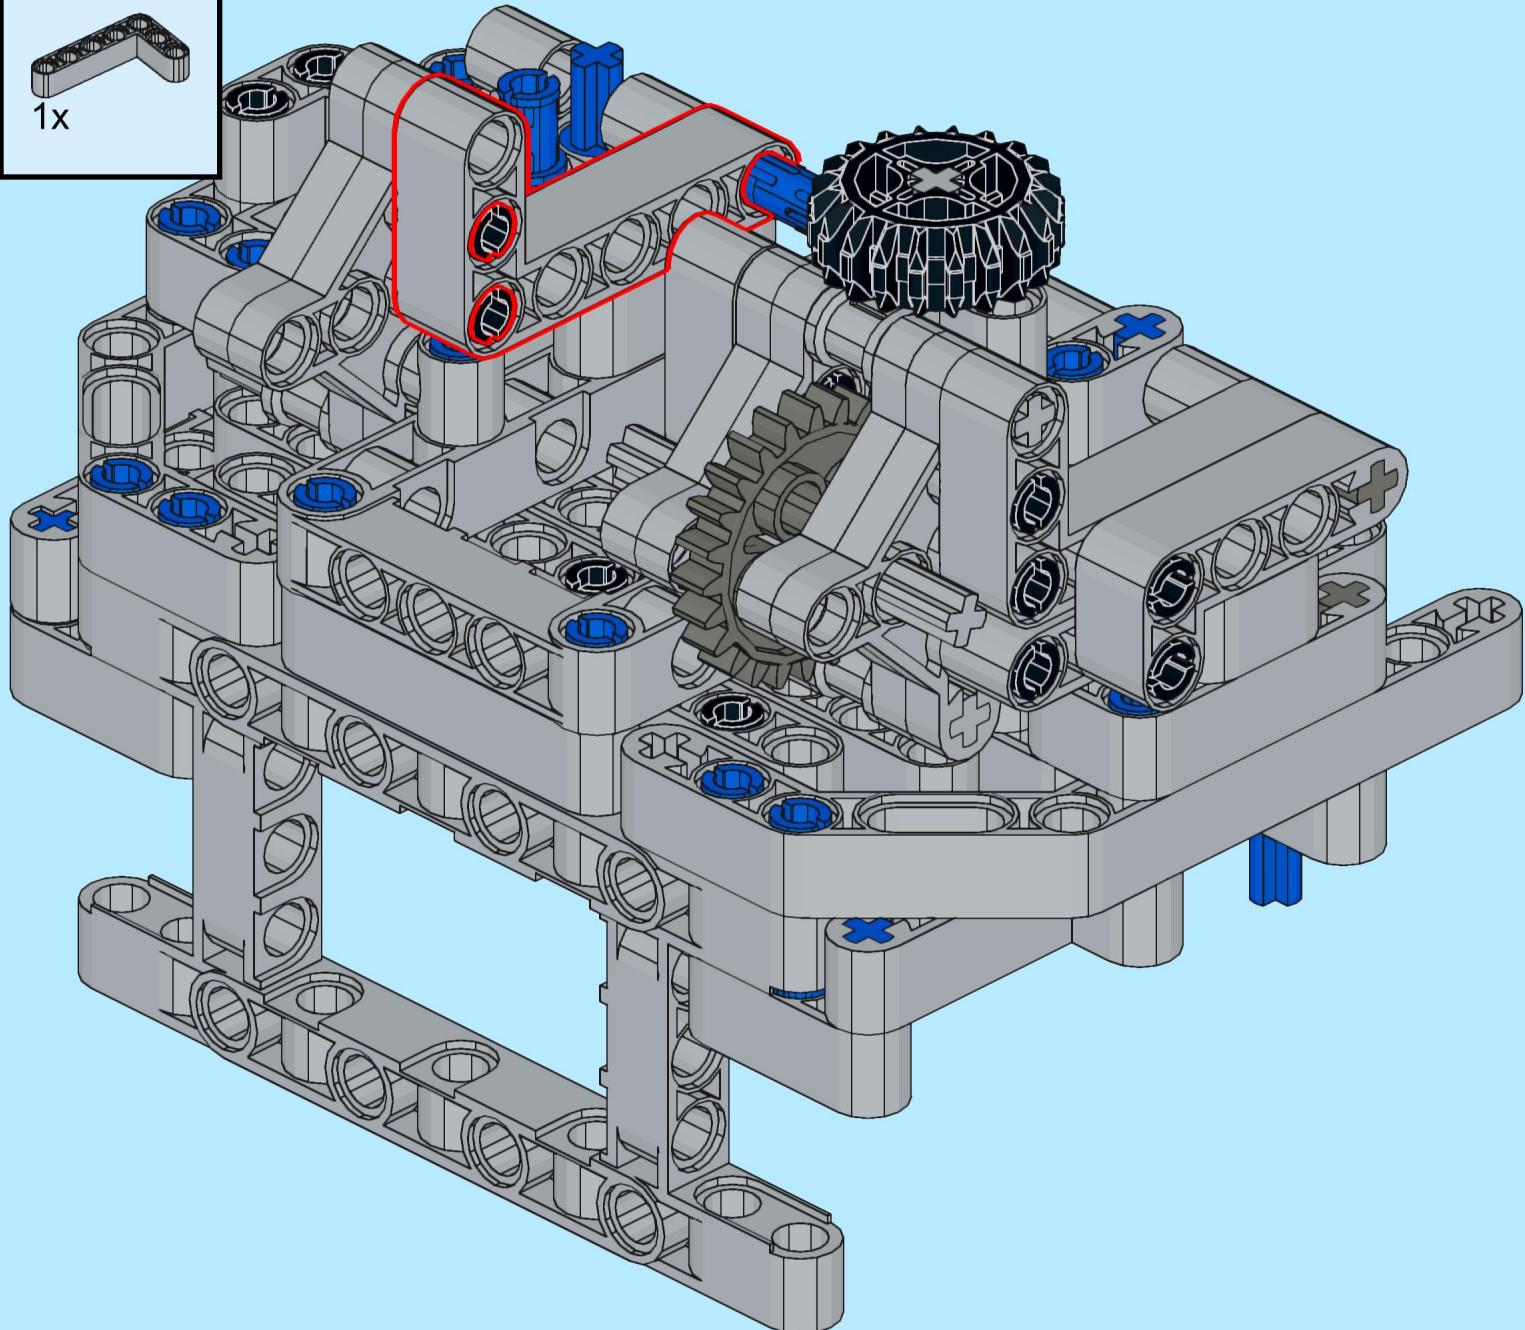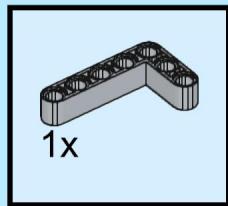



**62**

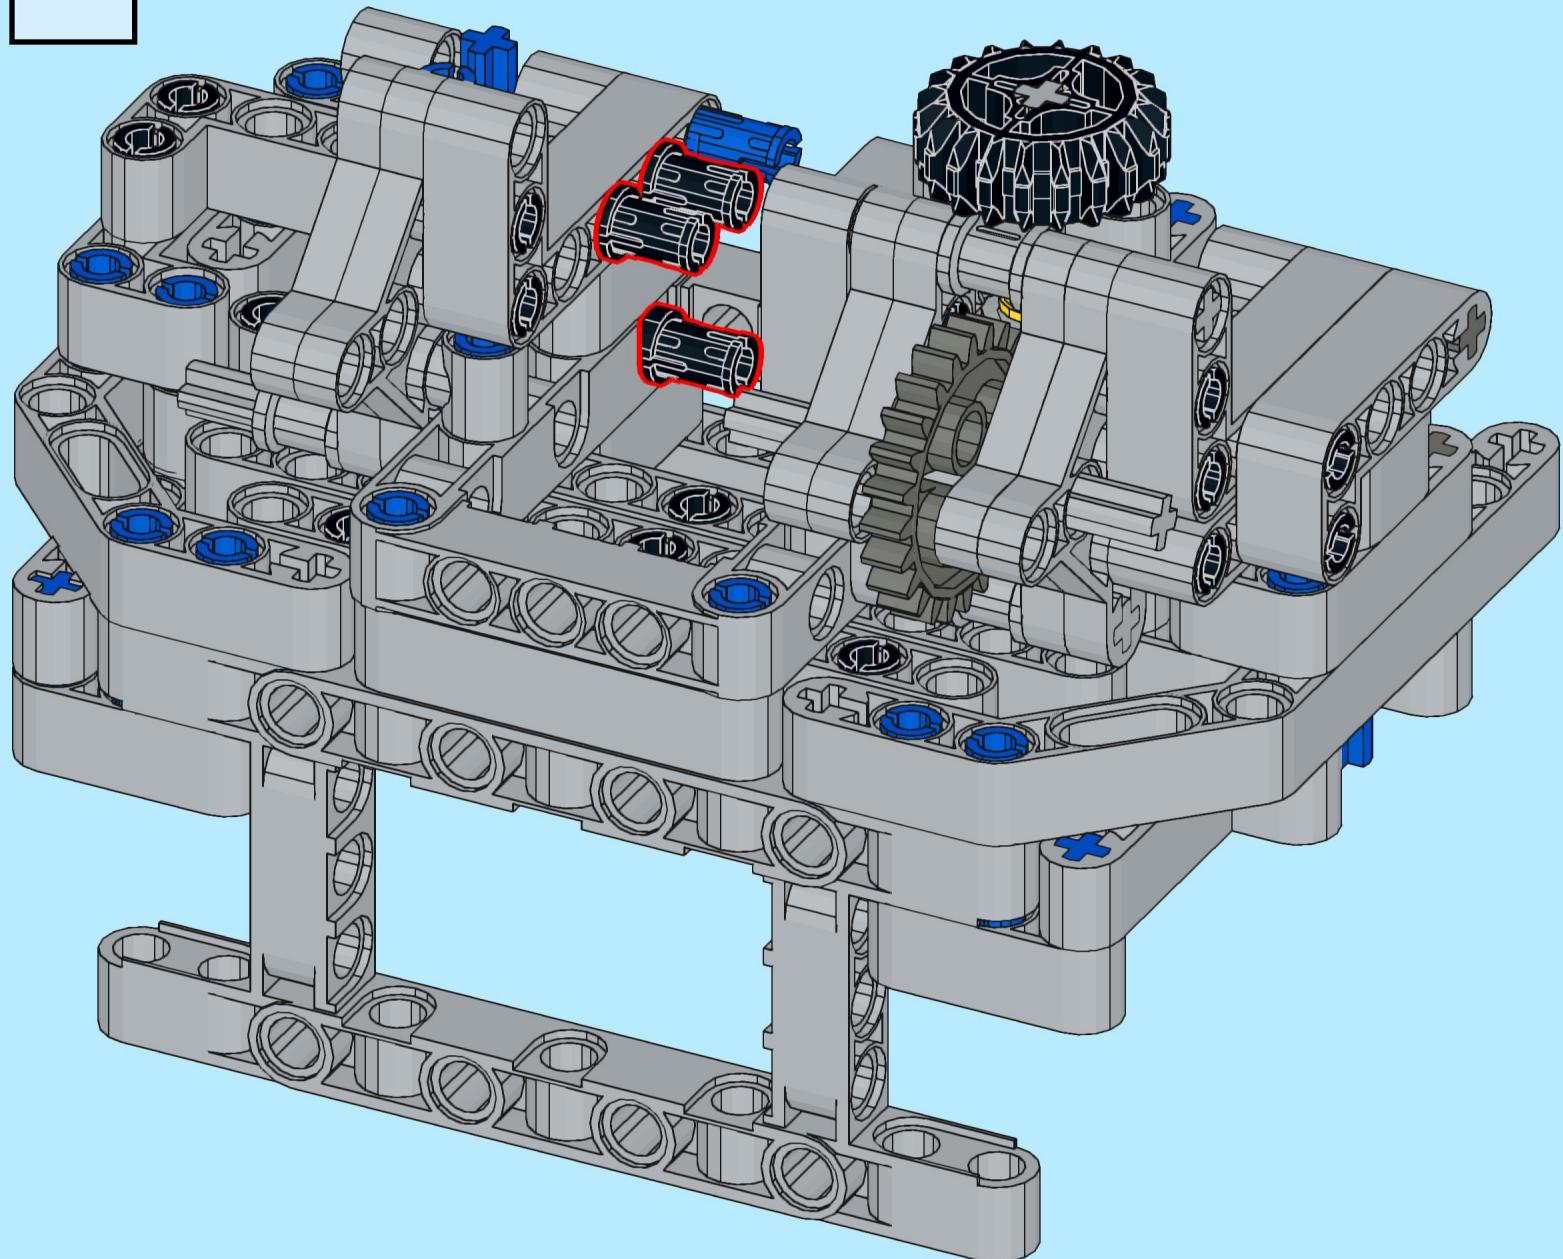



**63**

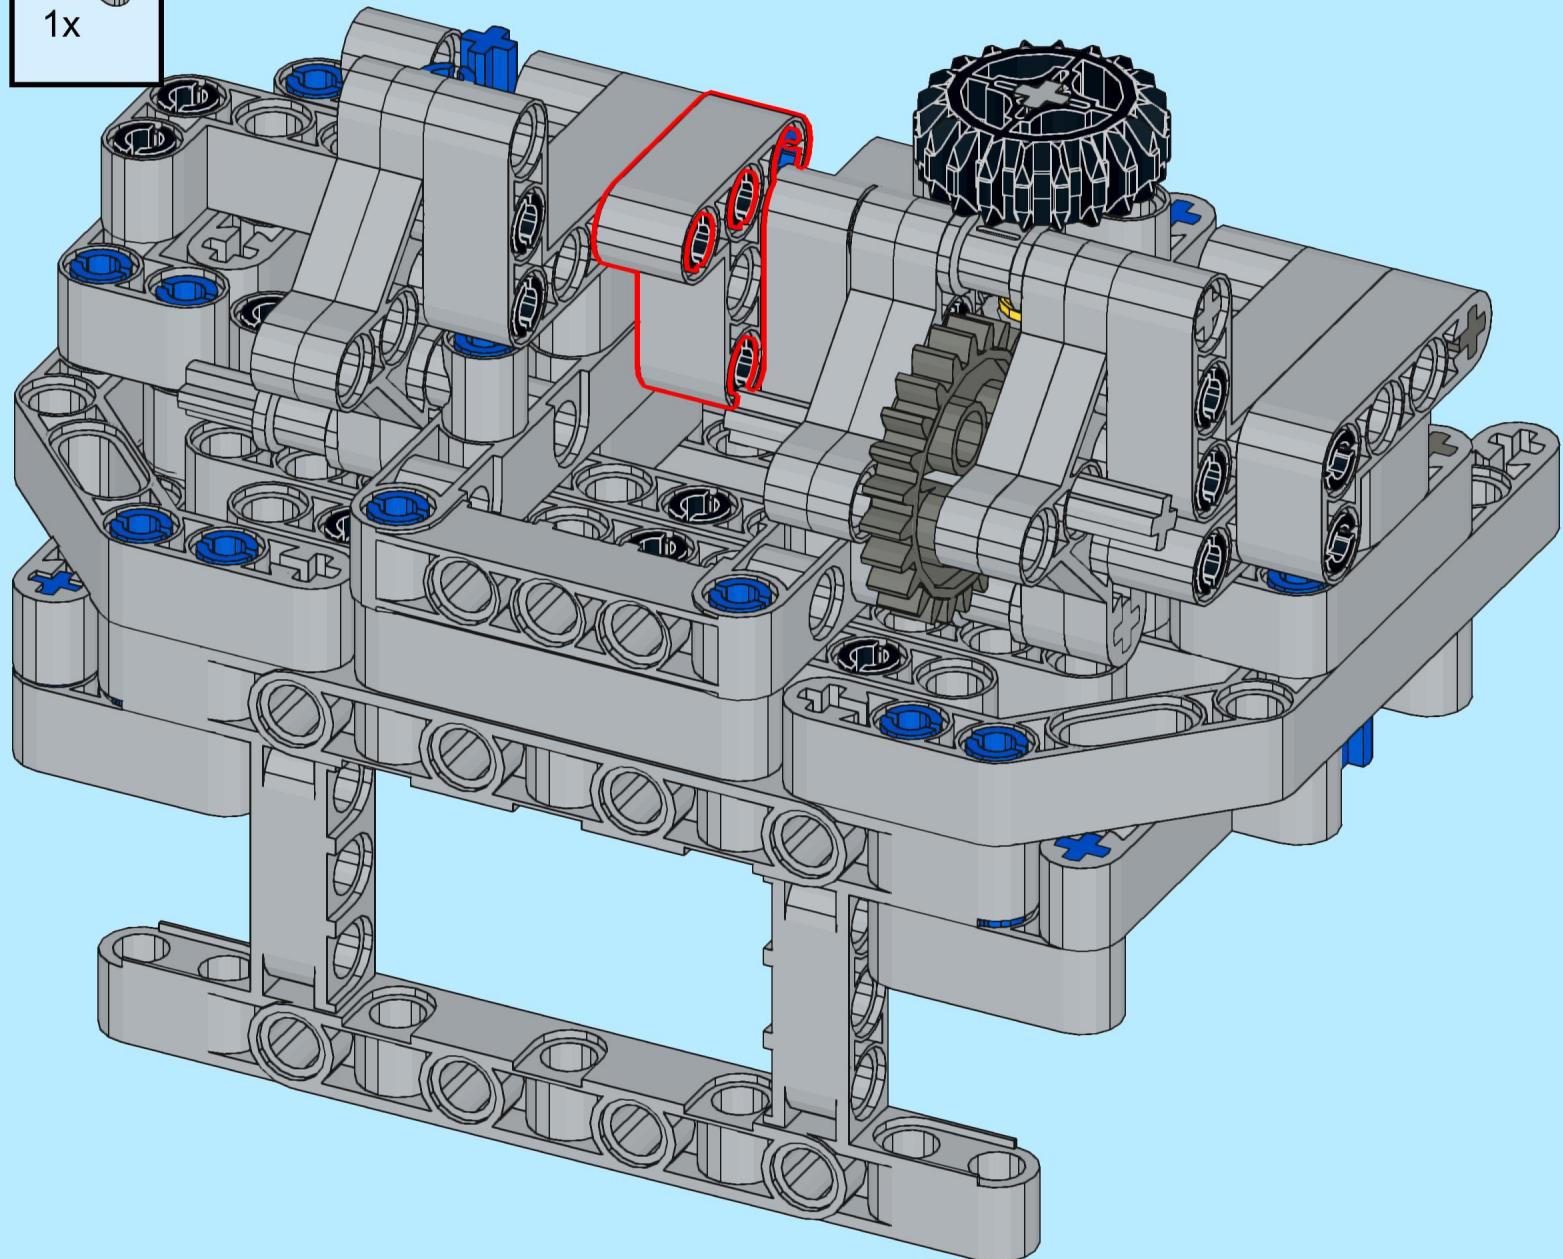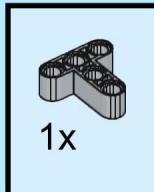



**64**

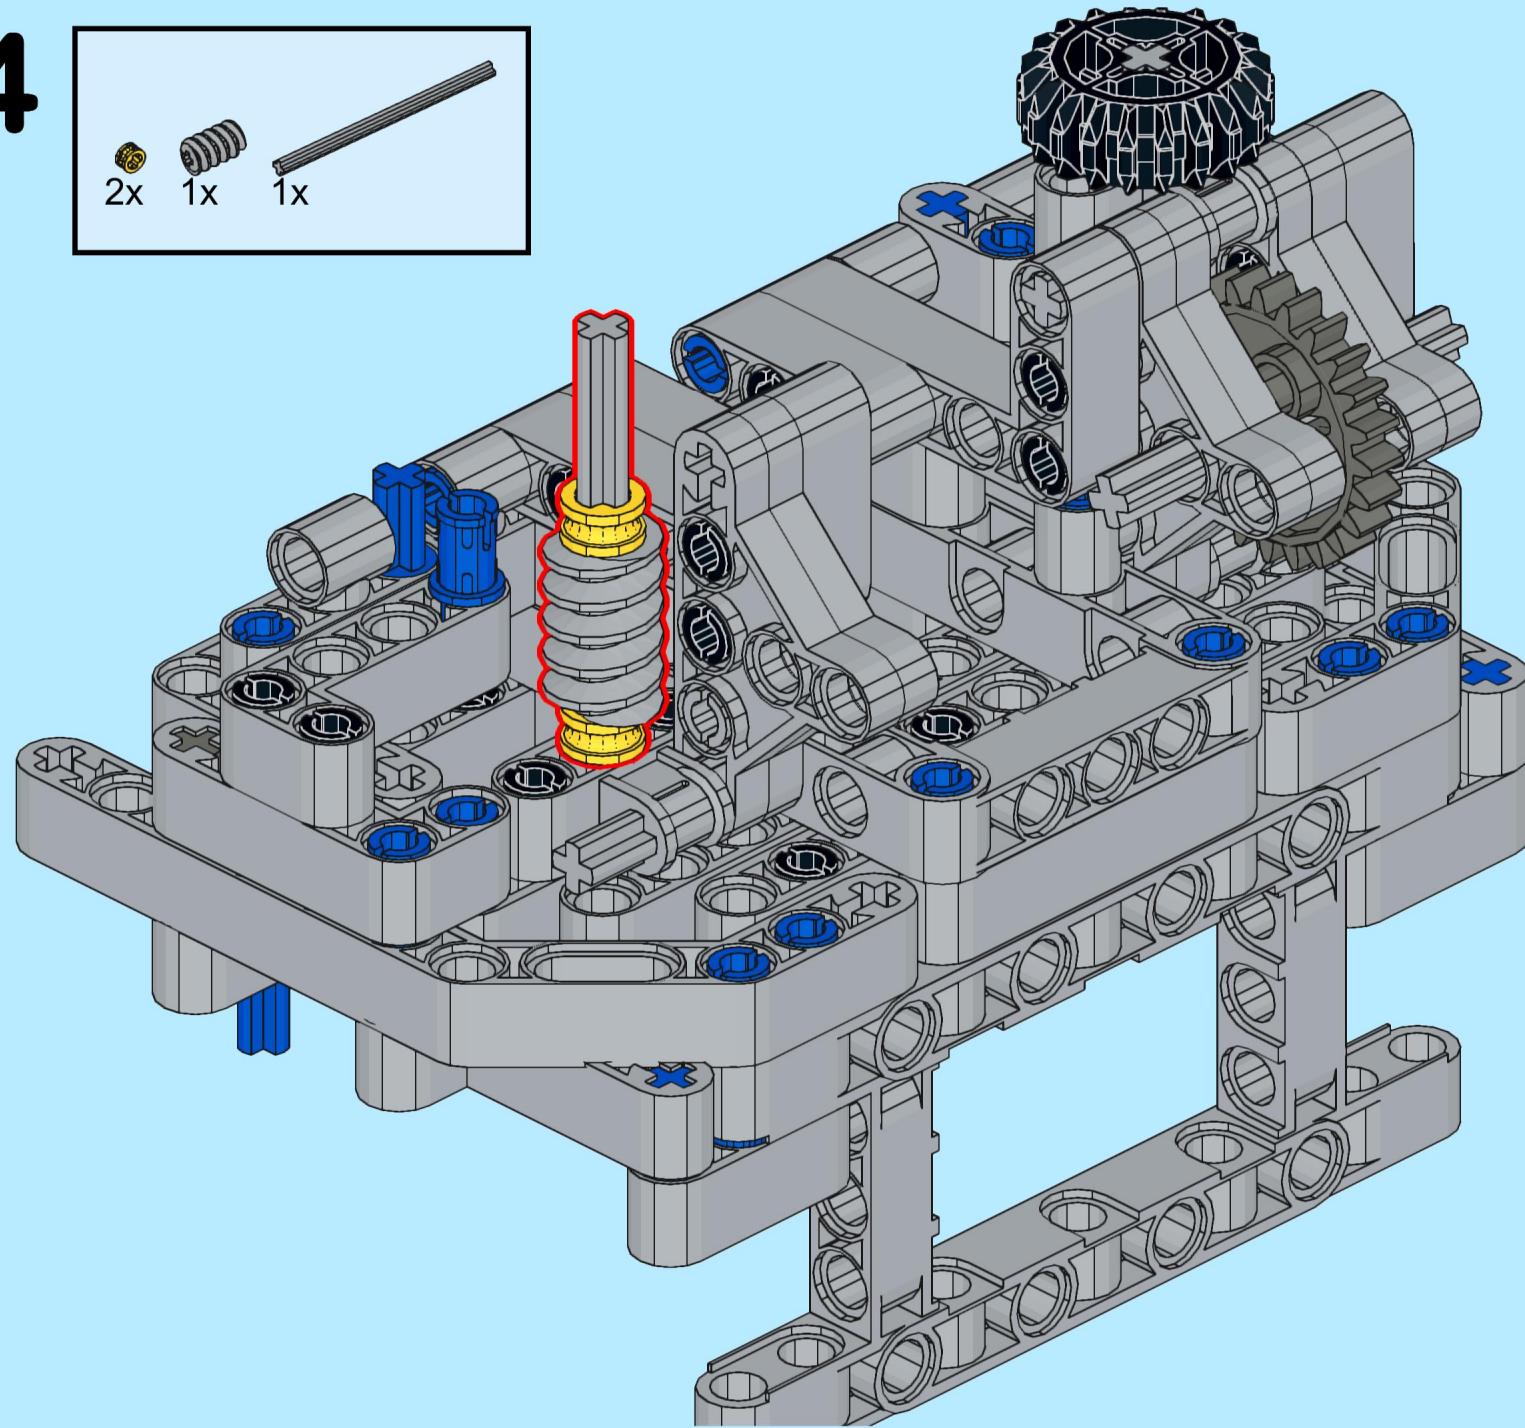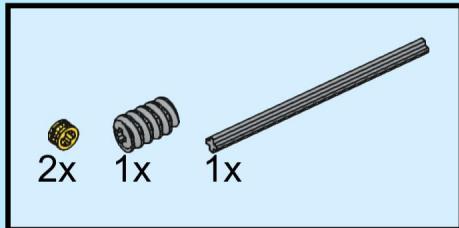



**65**

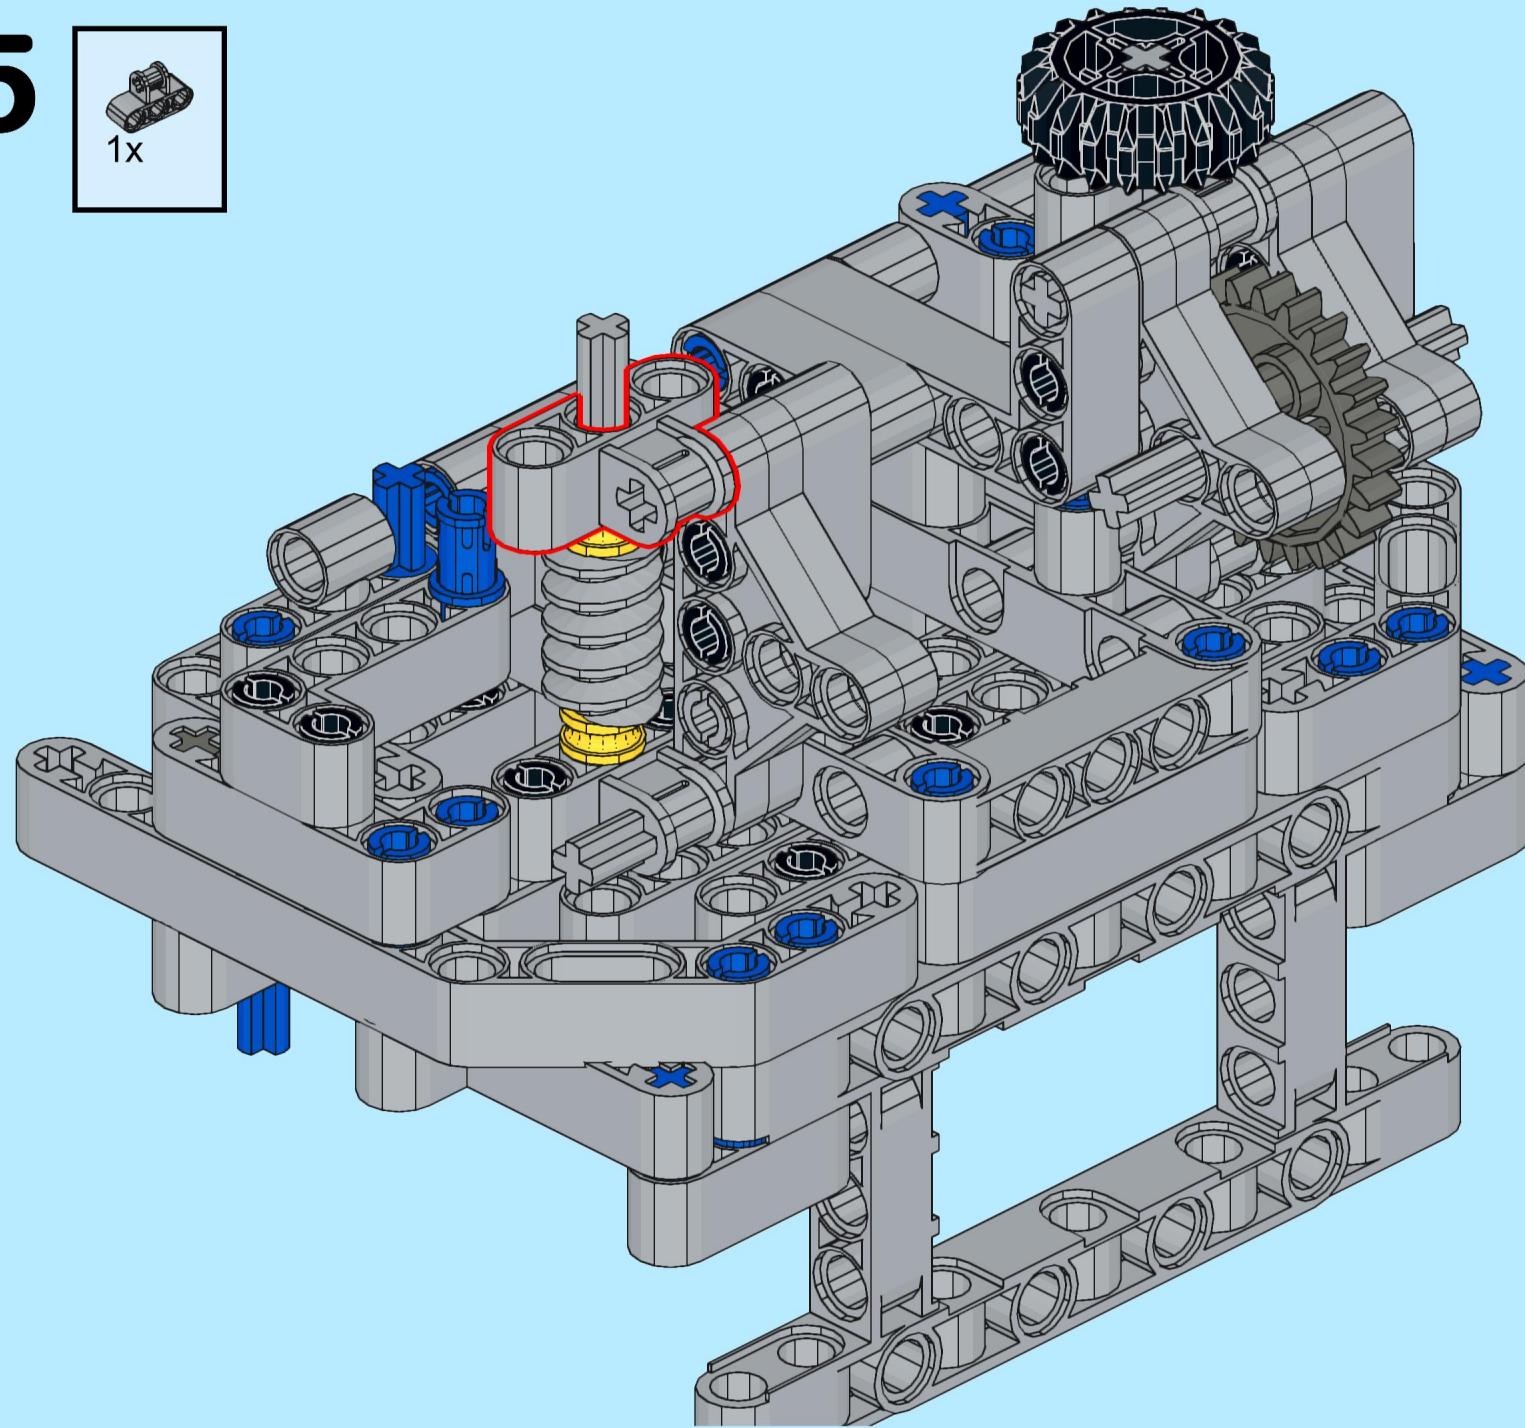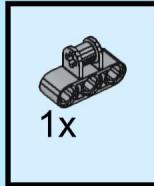

**66**

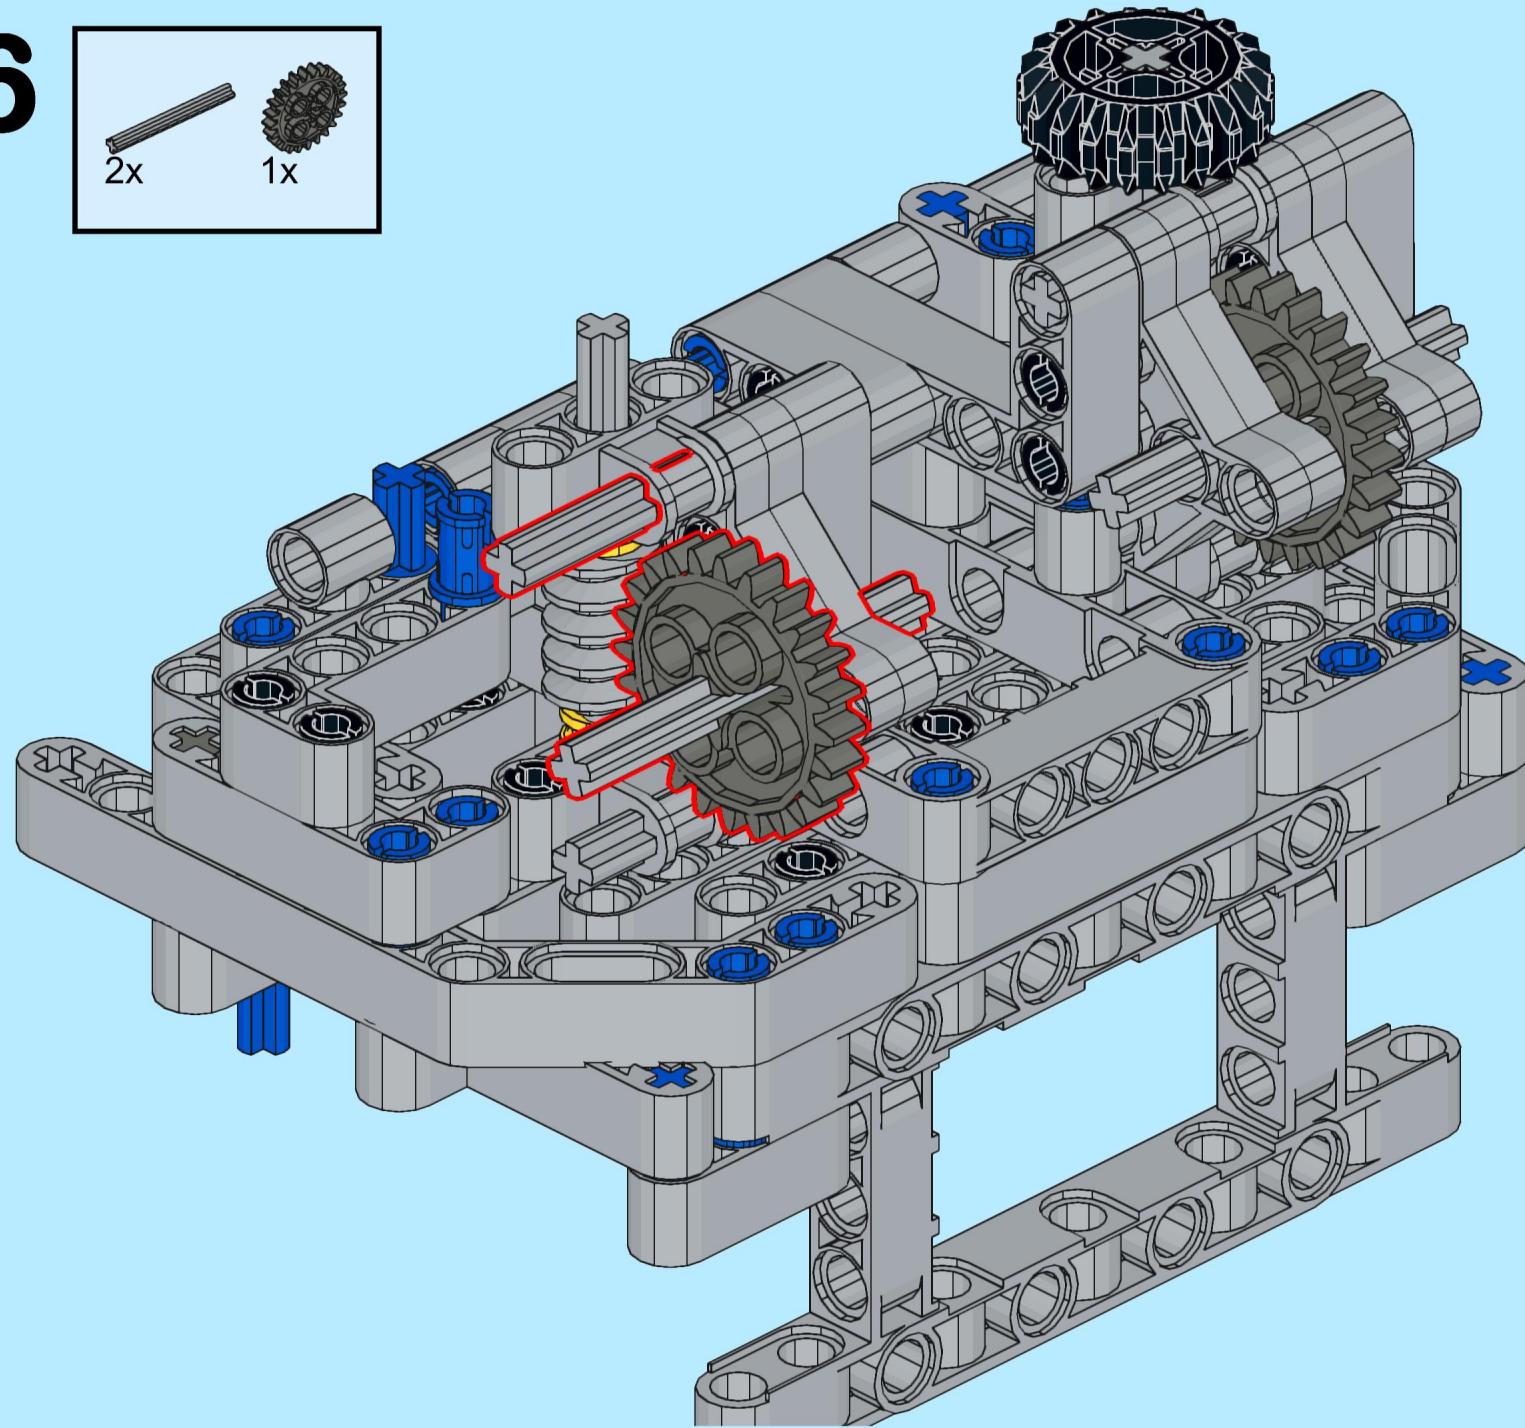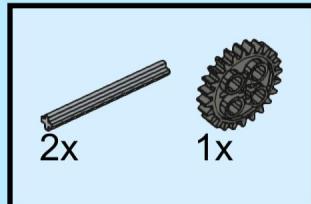


**67**

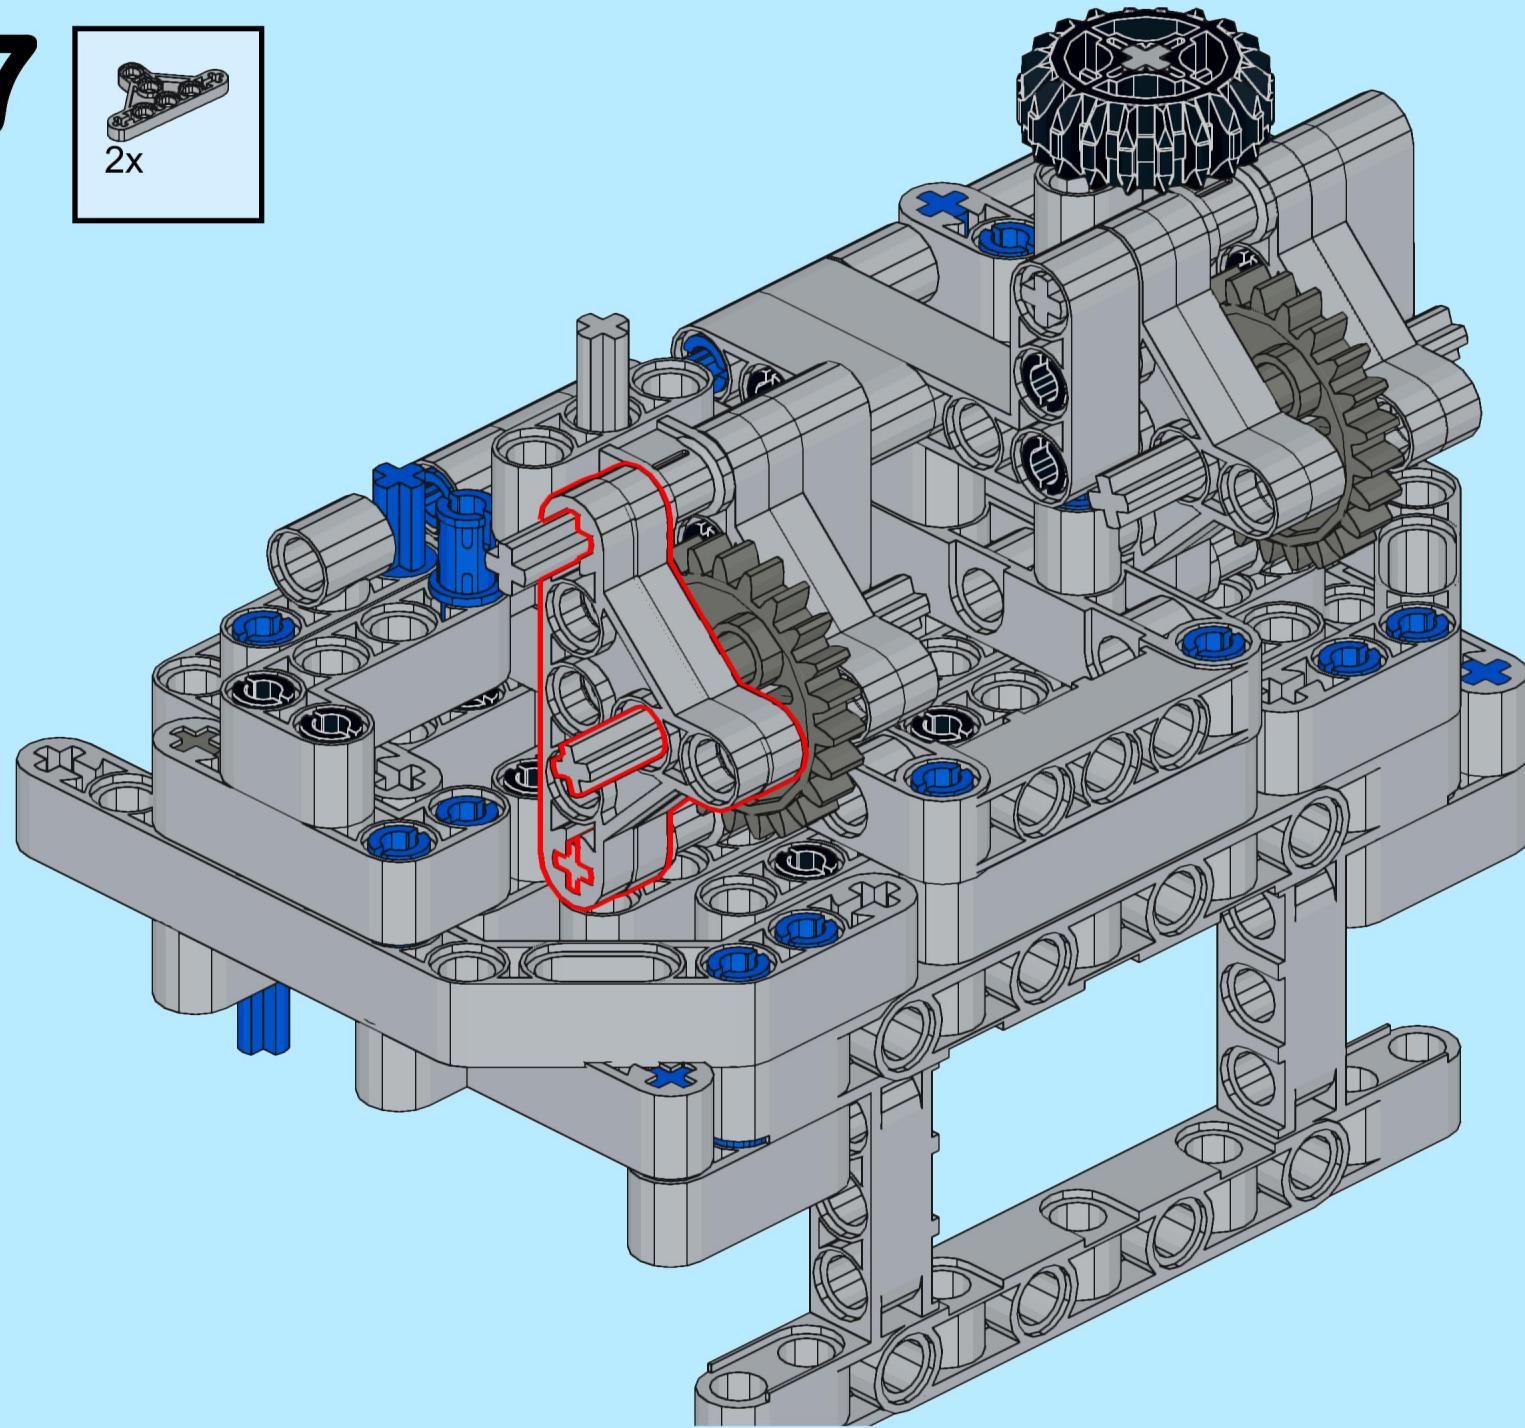
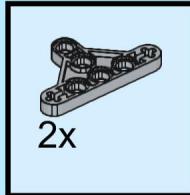


**68**



3x

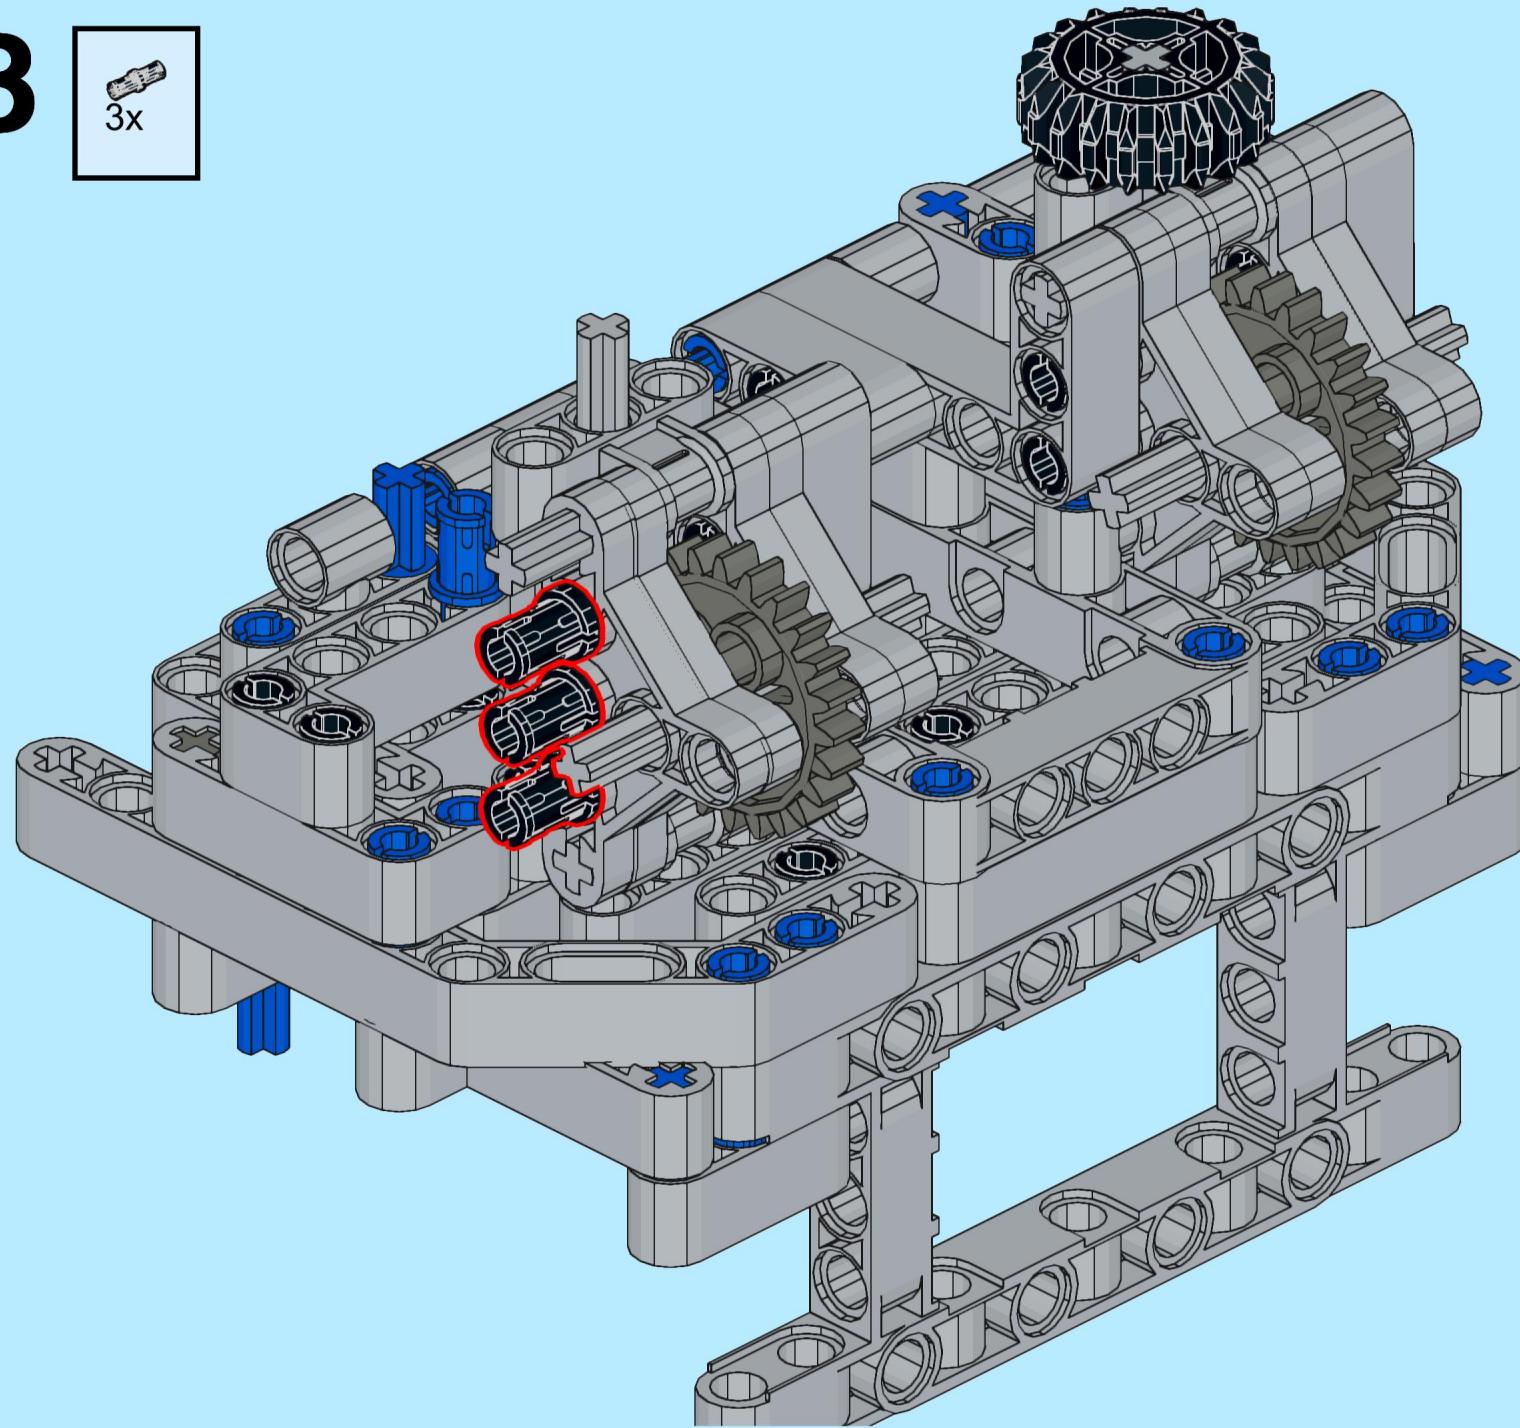



**69**

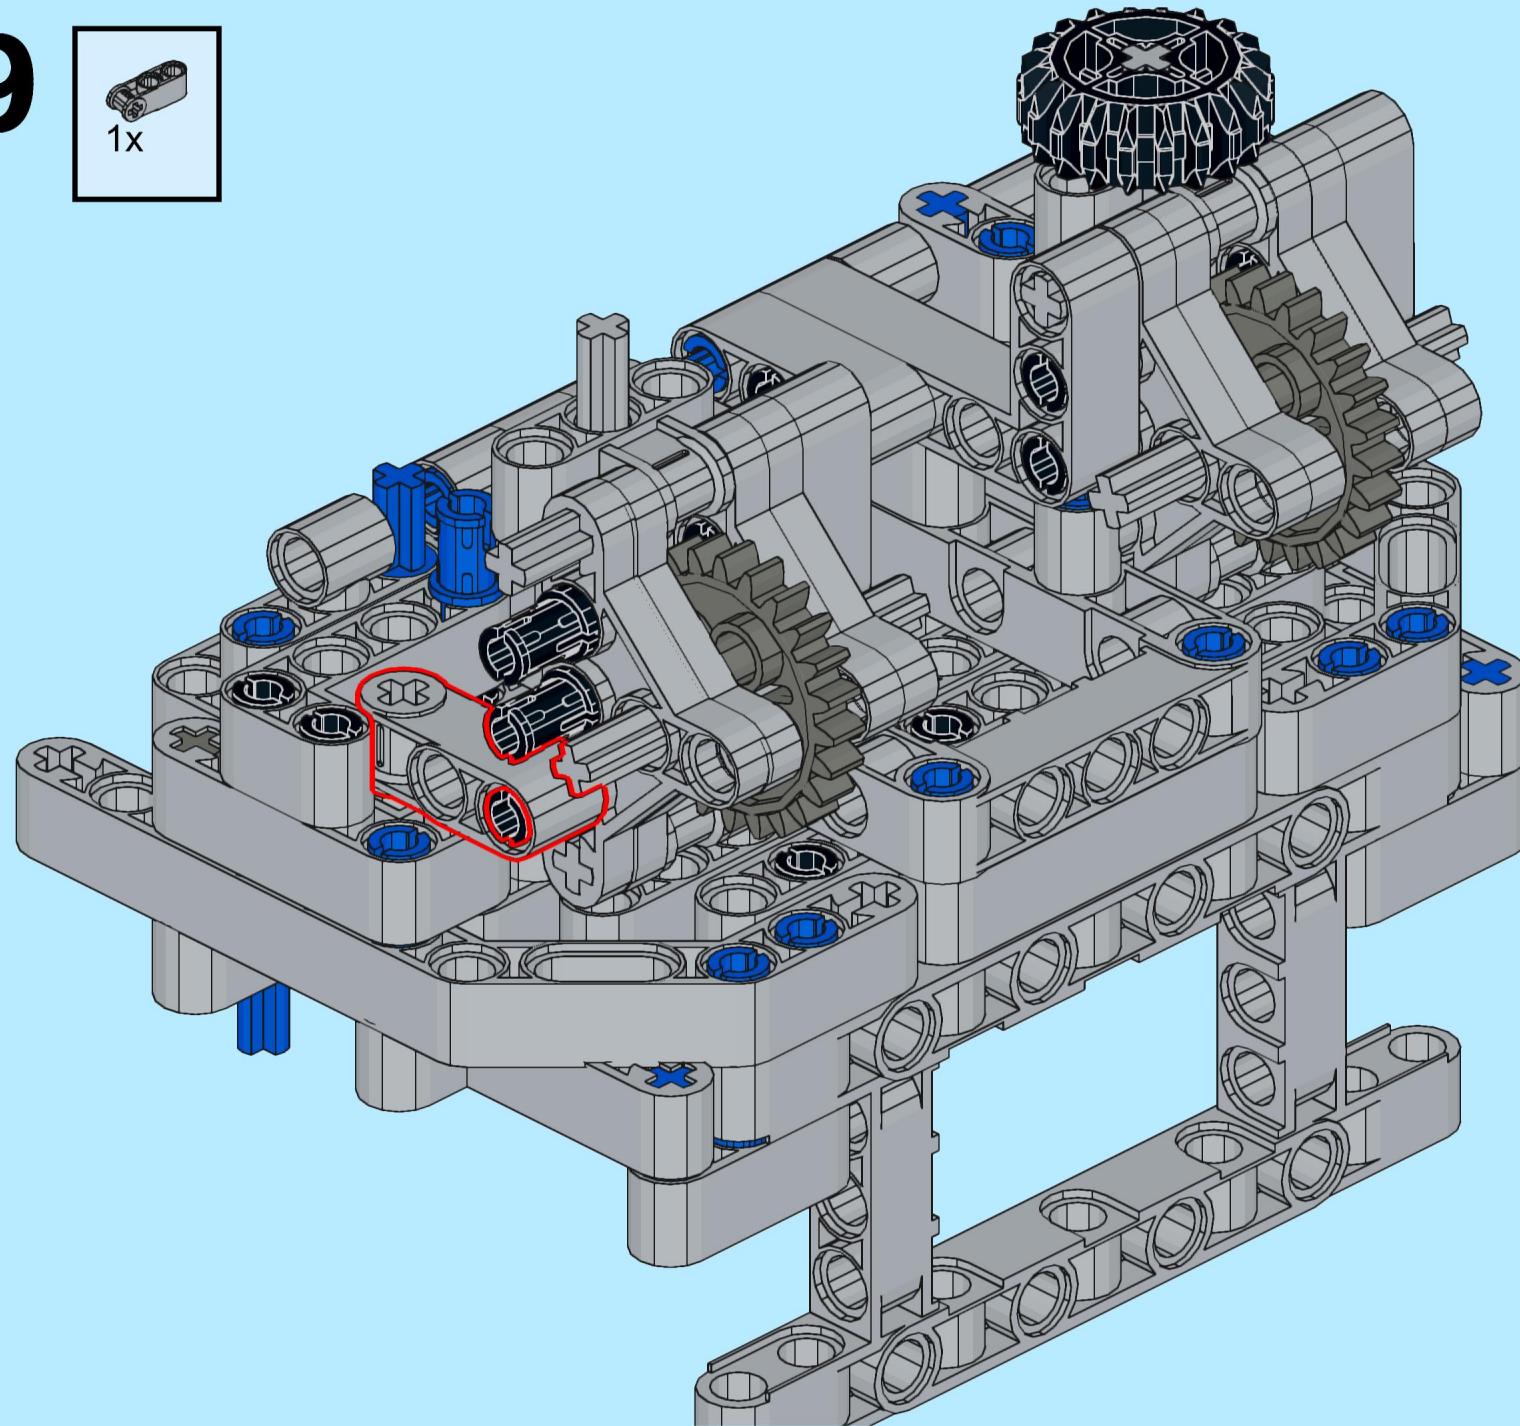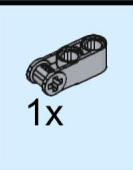



70

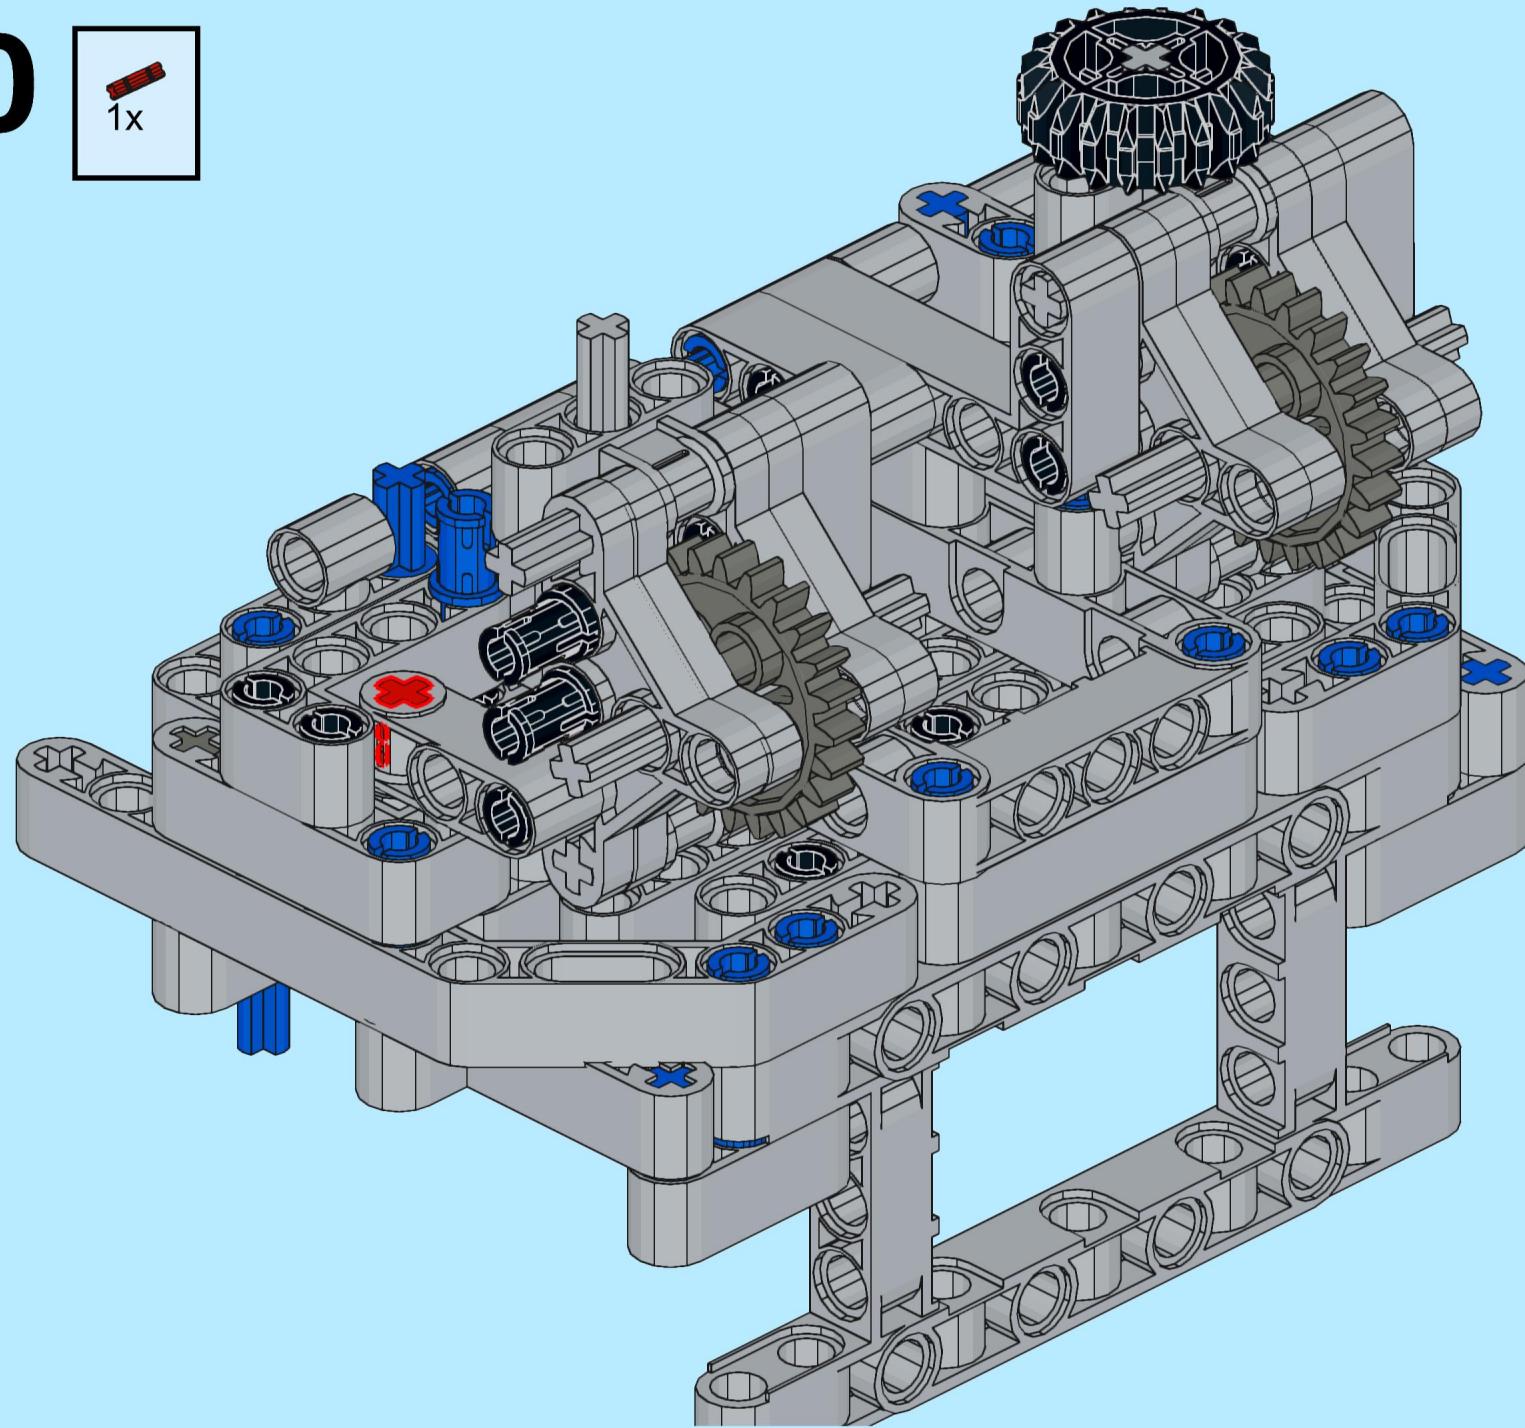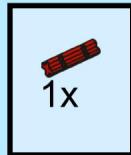



71

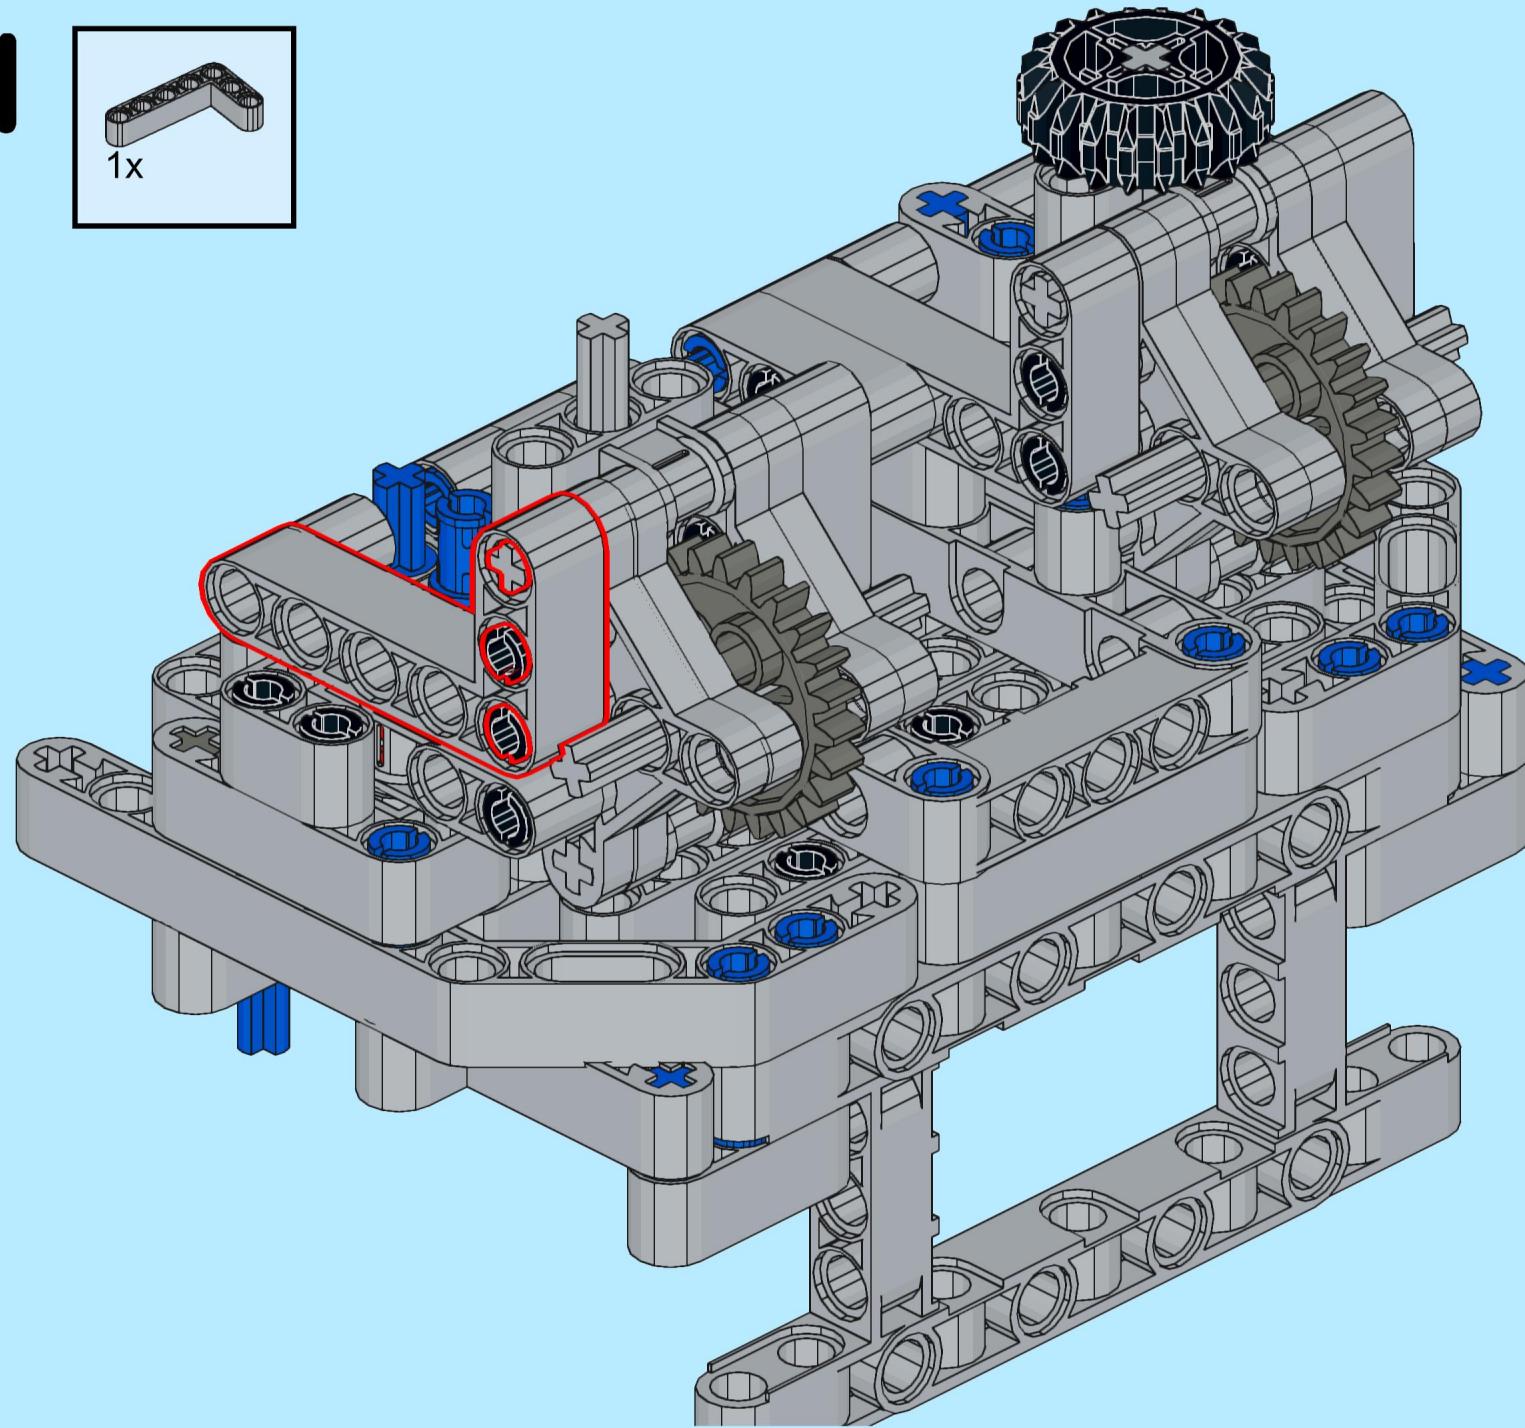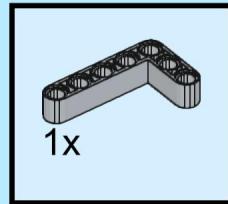


**72**

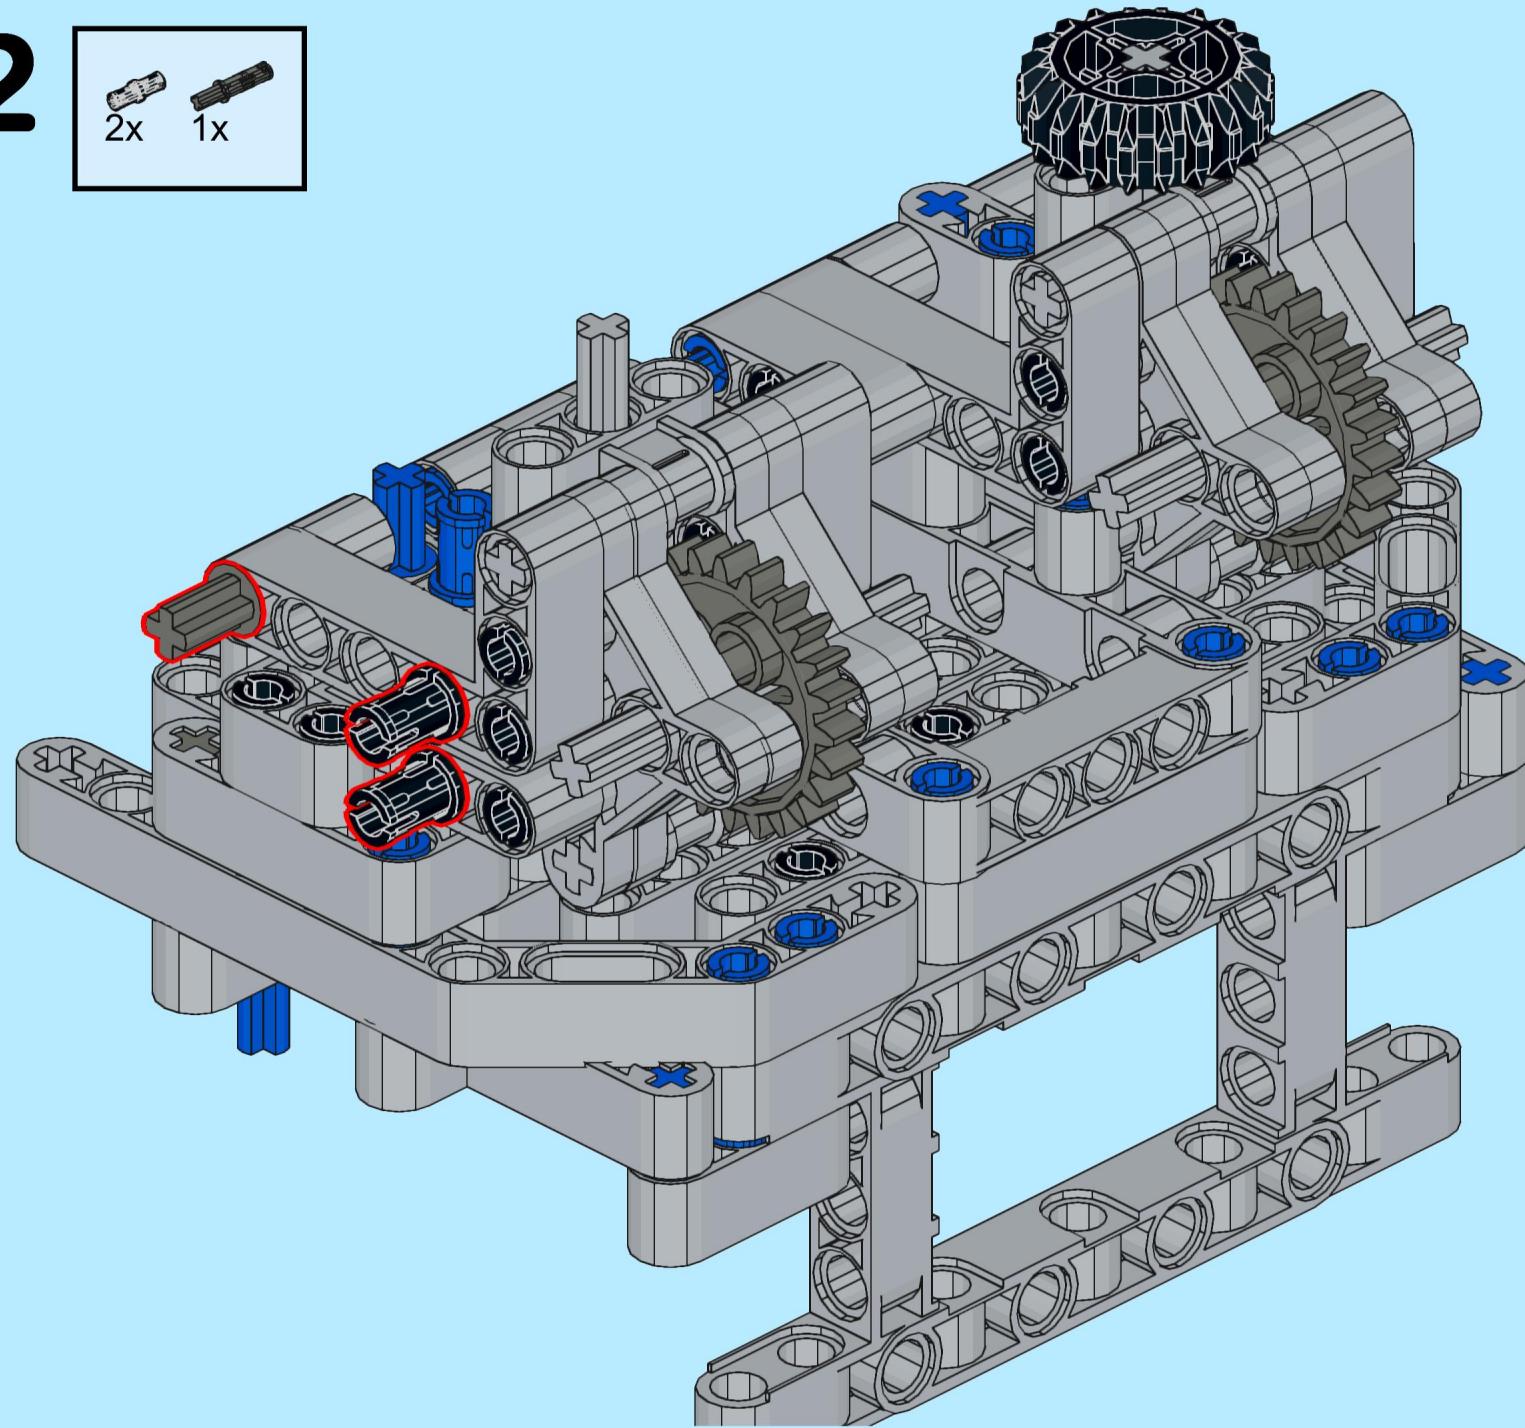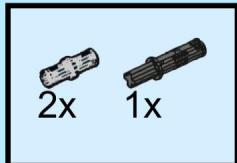


**73**

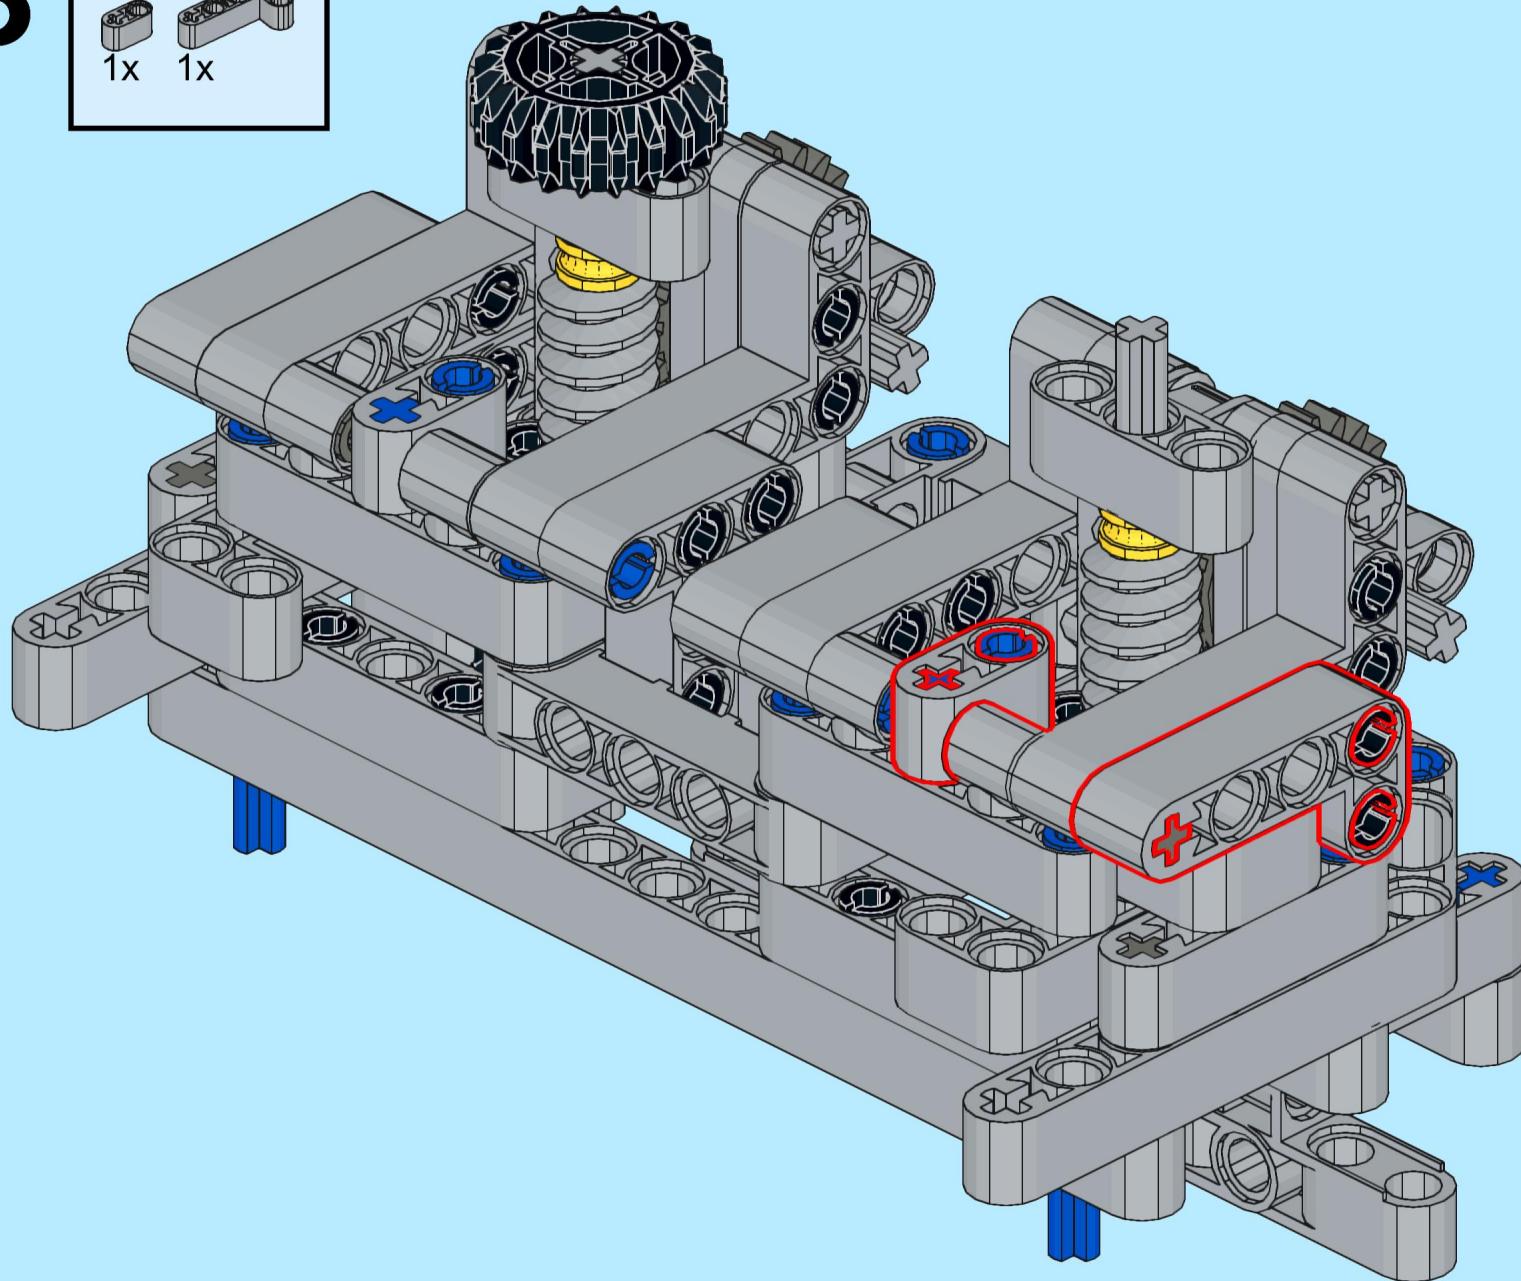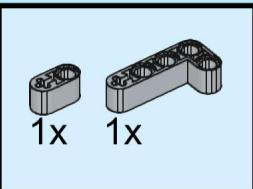


74

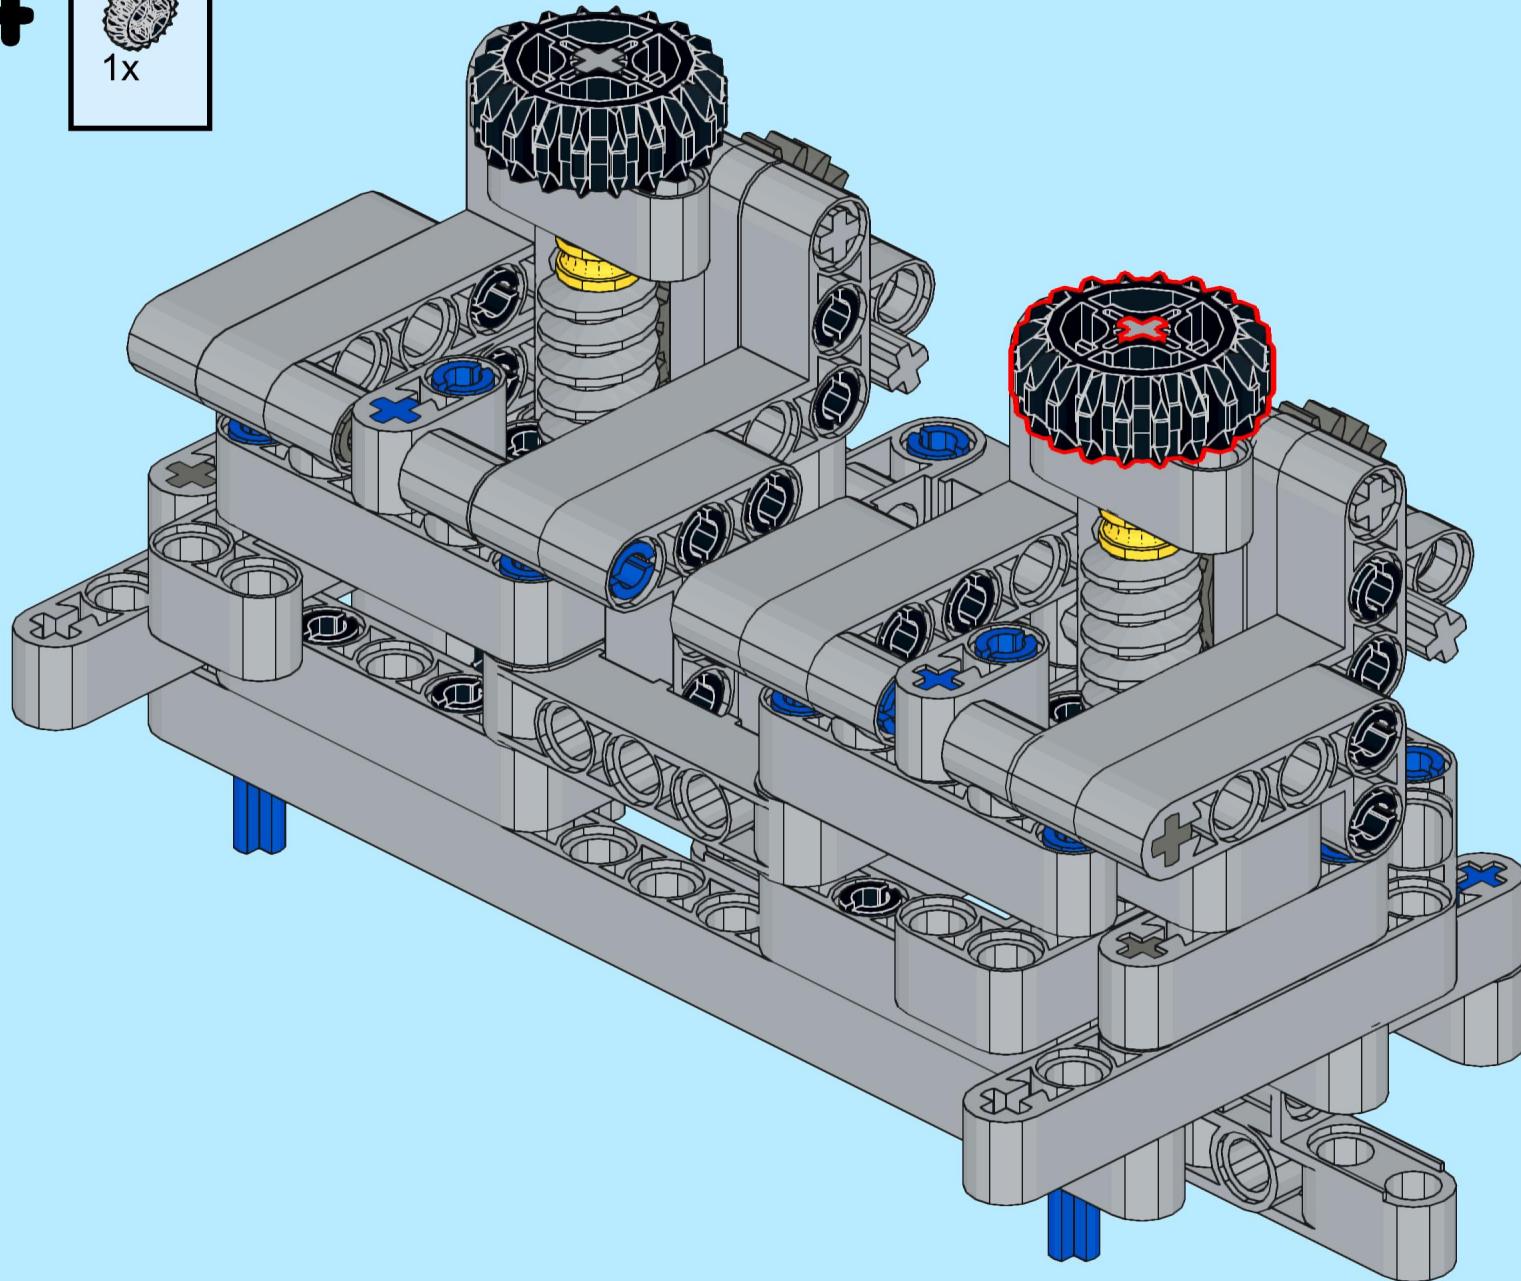

**75**

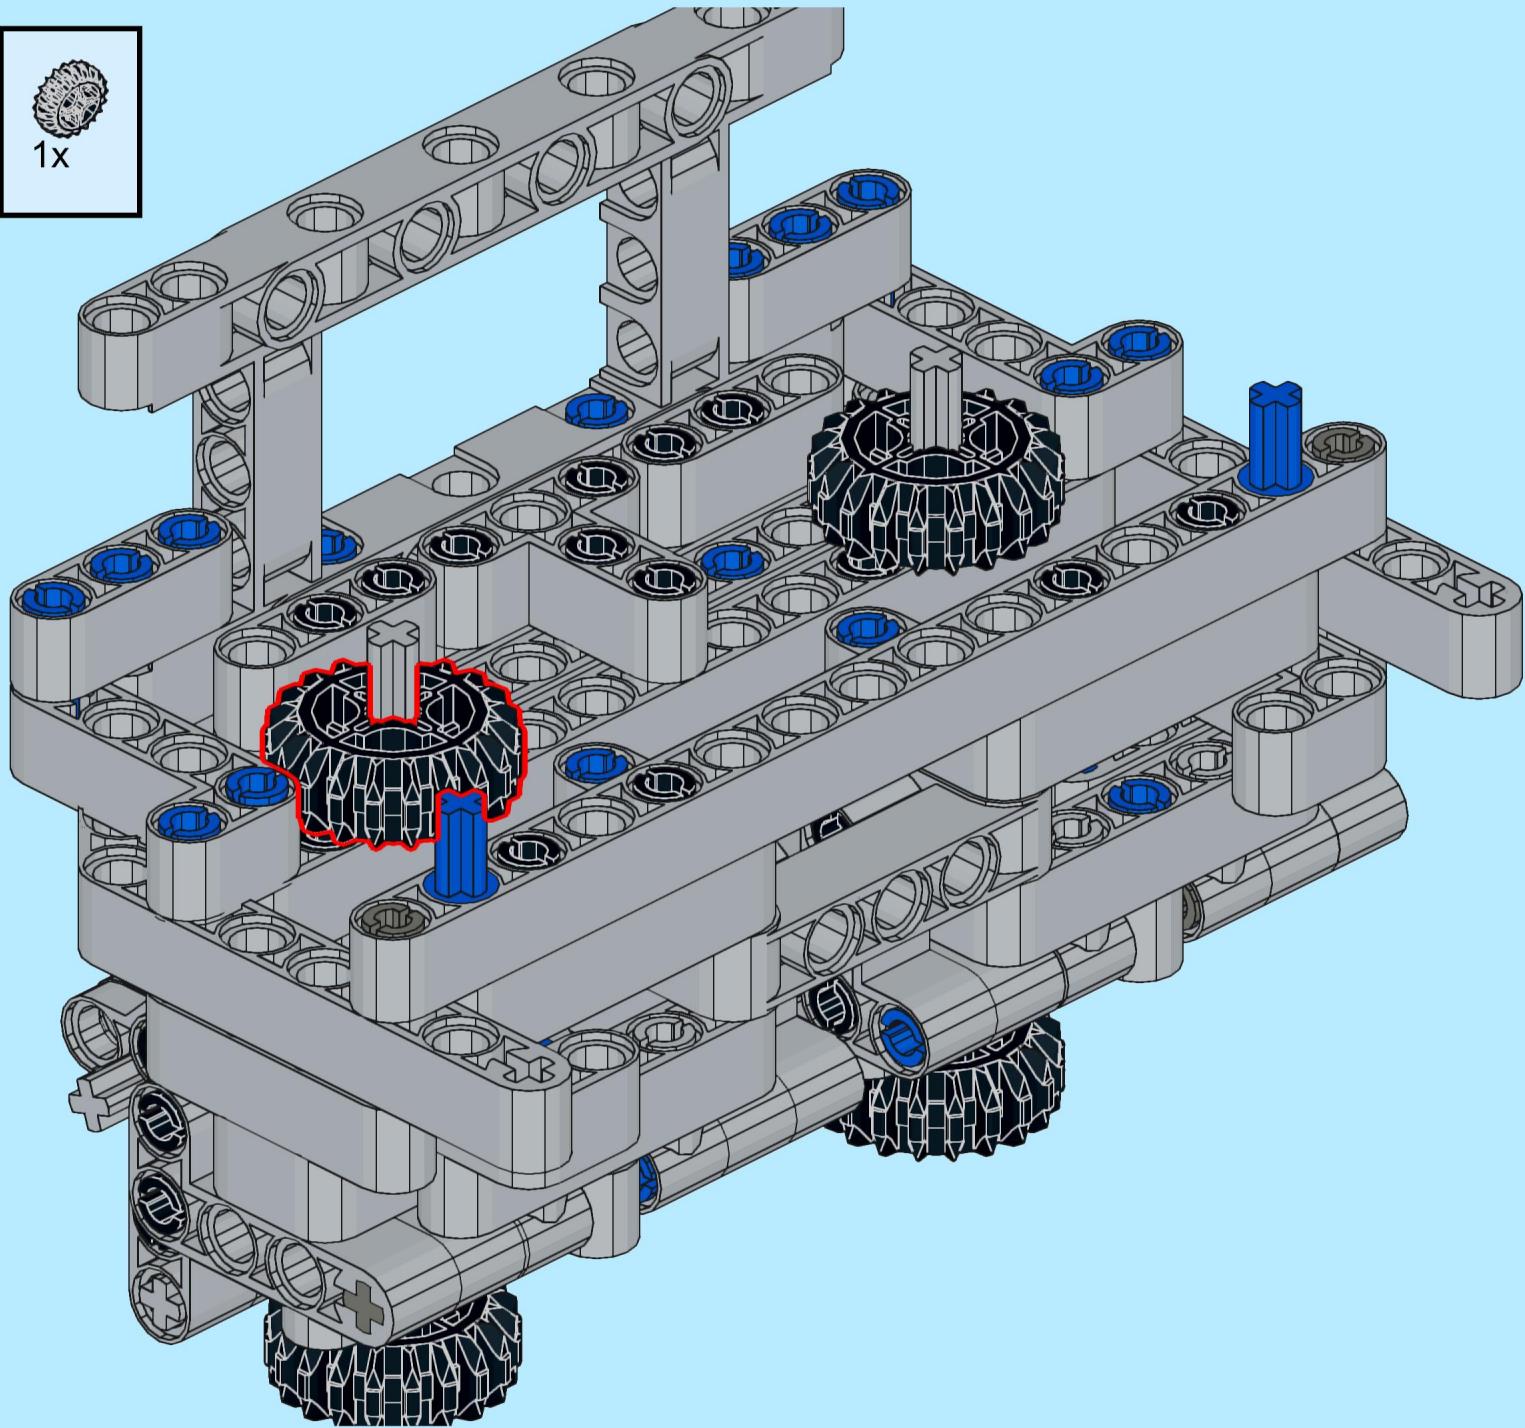



40x  
2780  
Black




4x  
32269  
Black




4x  
32072  
Black




4x  
11214  
Dark Bluish Gray

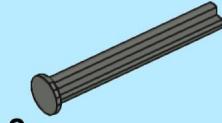

2x  
87083  
Dark Bluish Gray

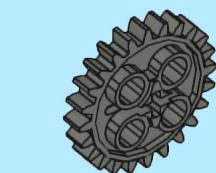

2x  
3648  
Dark Bluish Gray

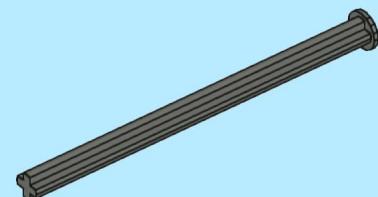

2x  
55013  
Dark Bluish Gray



2x  
60483  
Light Bluish Gray



8x  
15100  
Light Bluish Gray




2x  
4716  
Light Bluish Gray




2x  
4519  
Light Bluish Gray


3x  
60484  
Light Bluish Gray

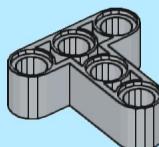


3x  
60484  
Light Bluish Gray

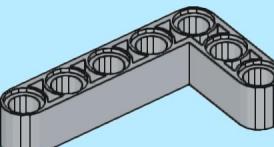

8x  
32526  
Light Bluish Gray

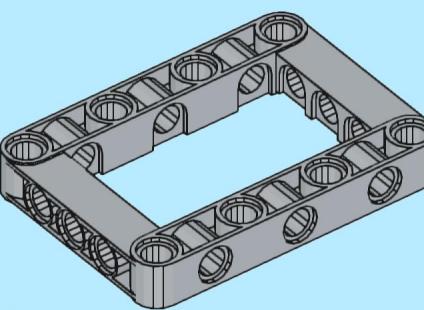

10x  
32140  
Light Bluish Gray

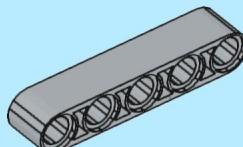


3x  
64179  
Light Bluish Gray




1x  
32316  
Light Bluish Gray




2x  
42003  
Light Bluish Gray




4x  
32073  
Light Bluish Gray

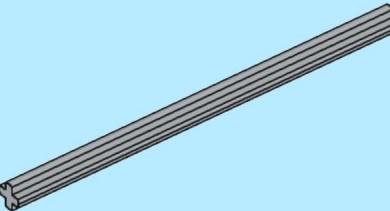


2x  
60485  
Light Bluish Gray

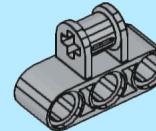


4x  
63869  
Light Bluish Gray

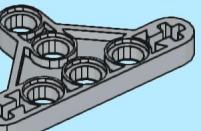


8x  
99773  
Light Bluish Gray

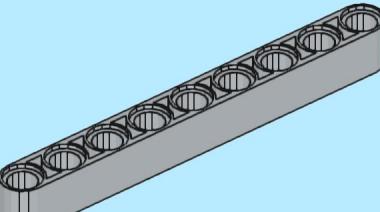


1x  
40490  
Light Bluish Gray

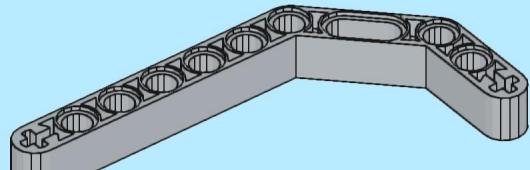


2x  
32009  
Light Bluish Gray

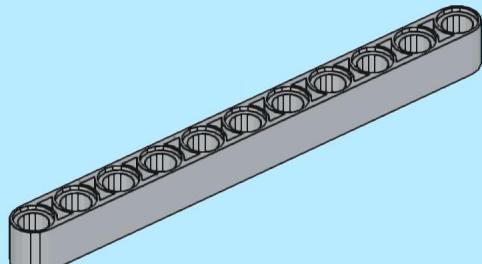


1x  
32525  
Light Bluish Gray

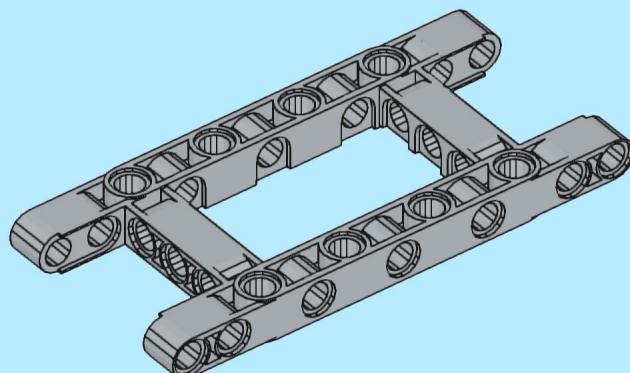

1x  
64178  
Light Bluish Gray

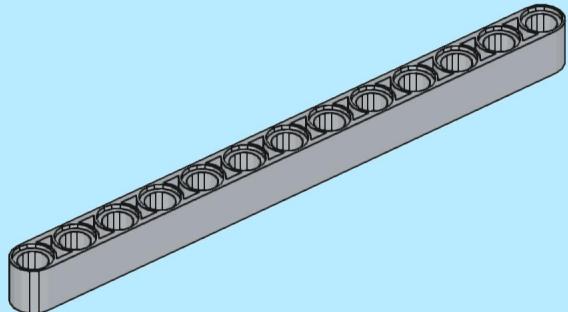

1x  
41239  
Light Bluish Gray

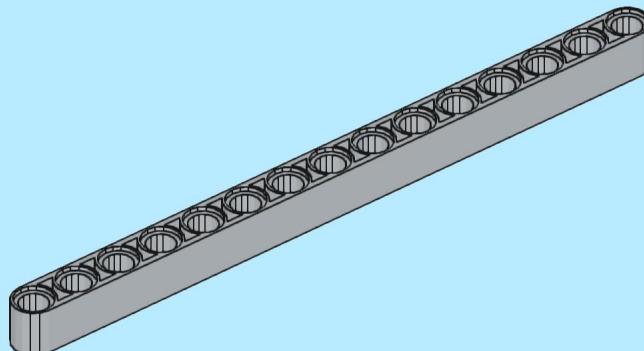

1x  
32278  
Light Bluish Gray



2x  
32062  
Red



4x  
4265c  
Yellow




10x  
43093  
Blue



26x  
6558  
Blue

[www.nxtgen-robotics.com](http://www.nxtgen-robotics.com)

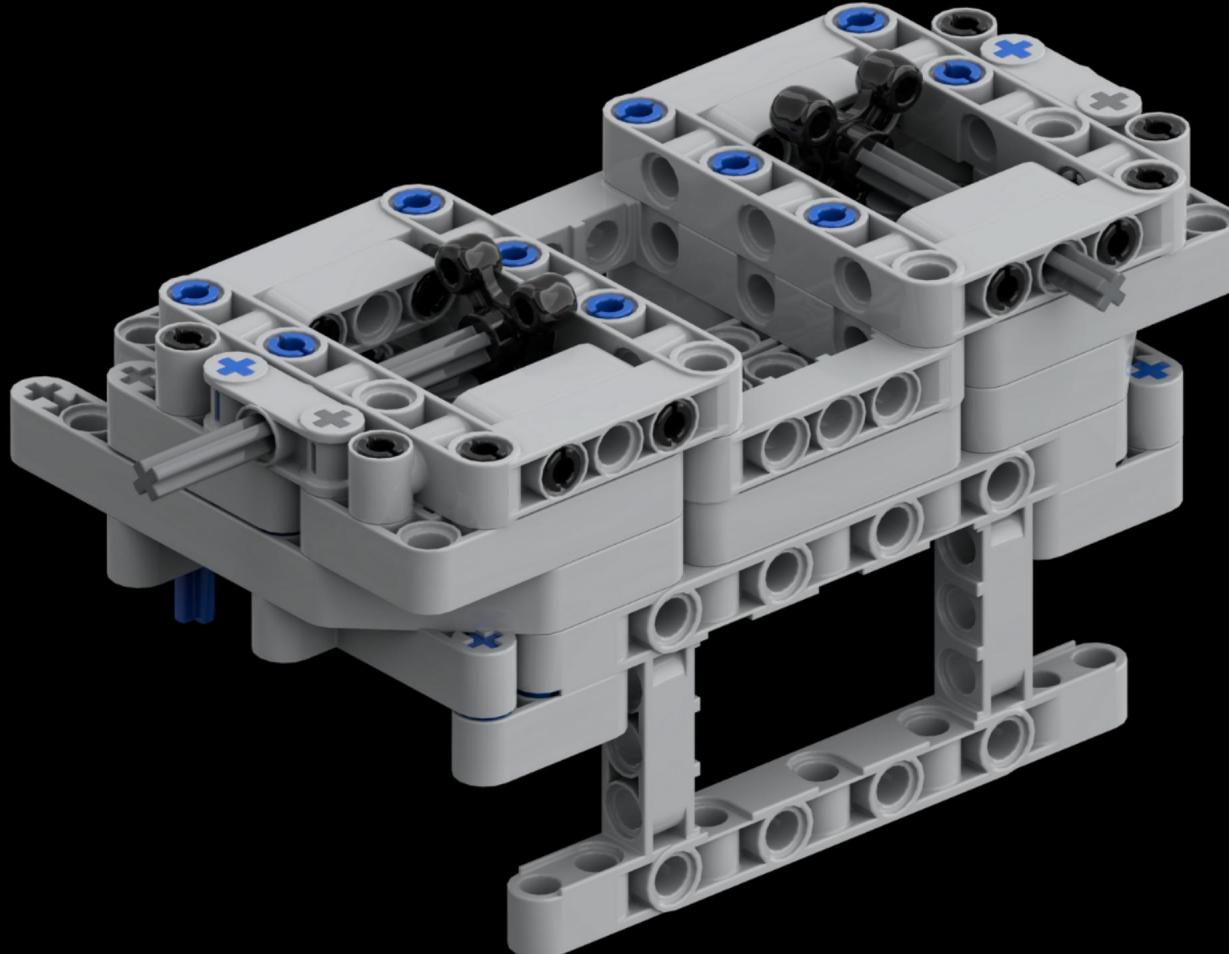

© NxtGen Robotics, 2024