

Biasing the amp:

Start with bias trimmer R8 set to minimum resistance.
Power up with no load first, input shorted to ground.


Measure DC millivolts across R1 and R2.
Because R1 and R2 are 0.22Ω:

11mV ≈ 50mA
15mV ≈ 68mA
18mV ≈ 82mA
22mV ≈ 100mA

Aim for about 12mV–18mV across each resistor.
A good starting target is 15mV.

Let the amp warm up for 10–15 minutes.
Measure again and adjust if needed.

Secondary polarity is flipped in order to keep
the signal in phase (the amp is inverting)
1:1 configuration

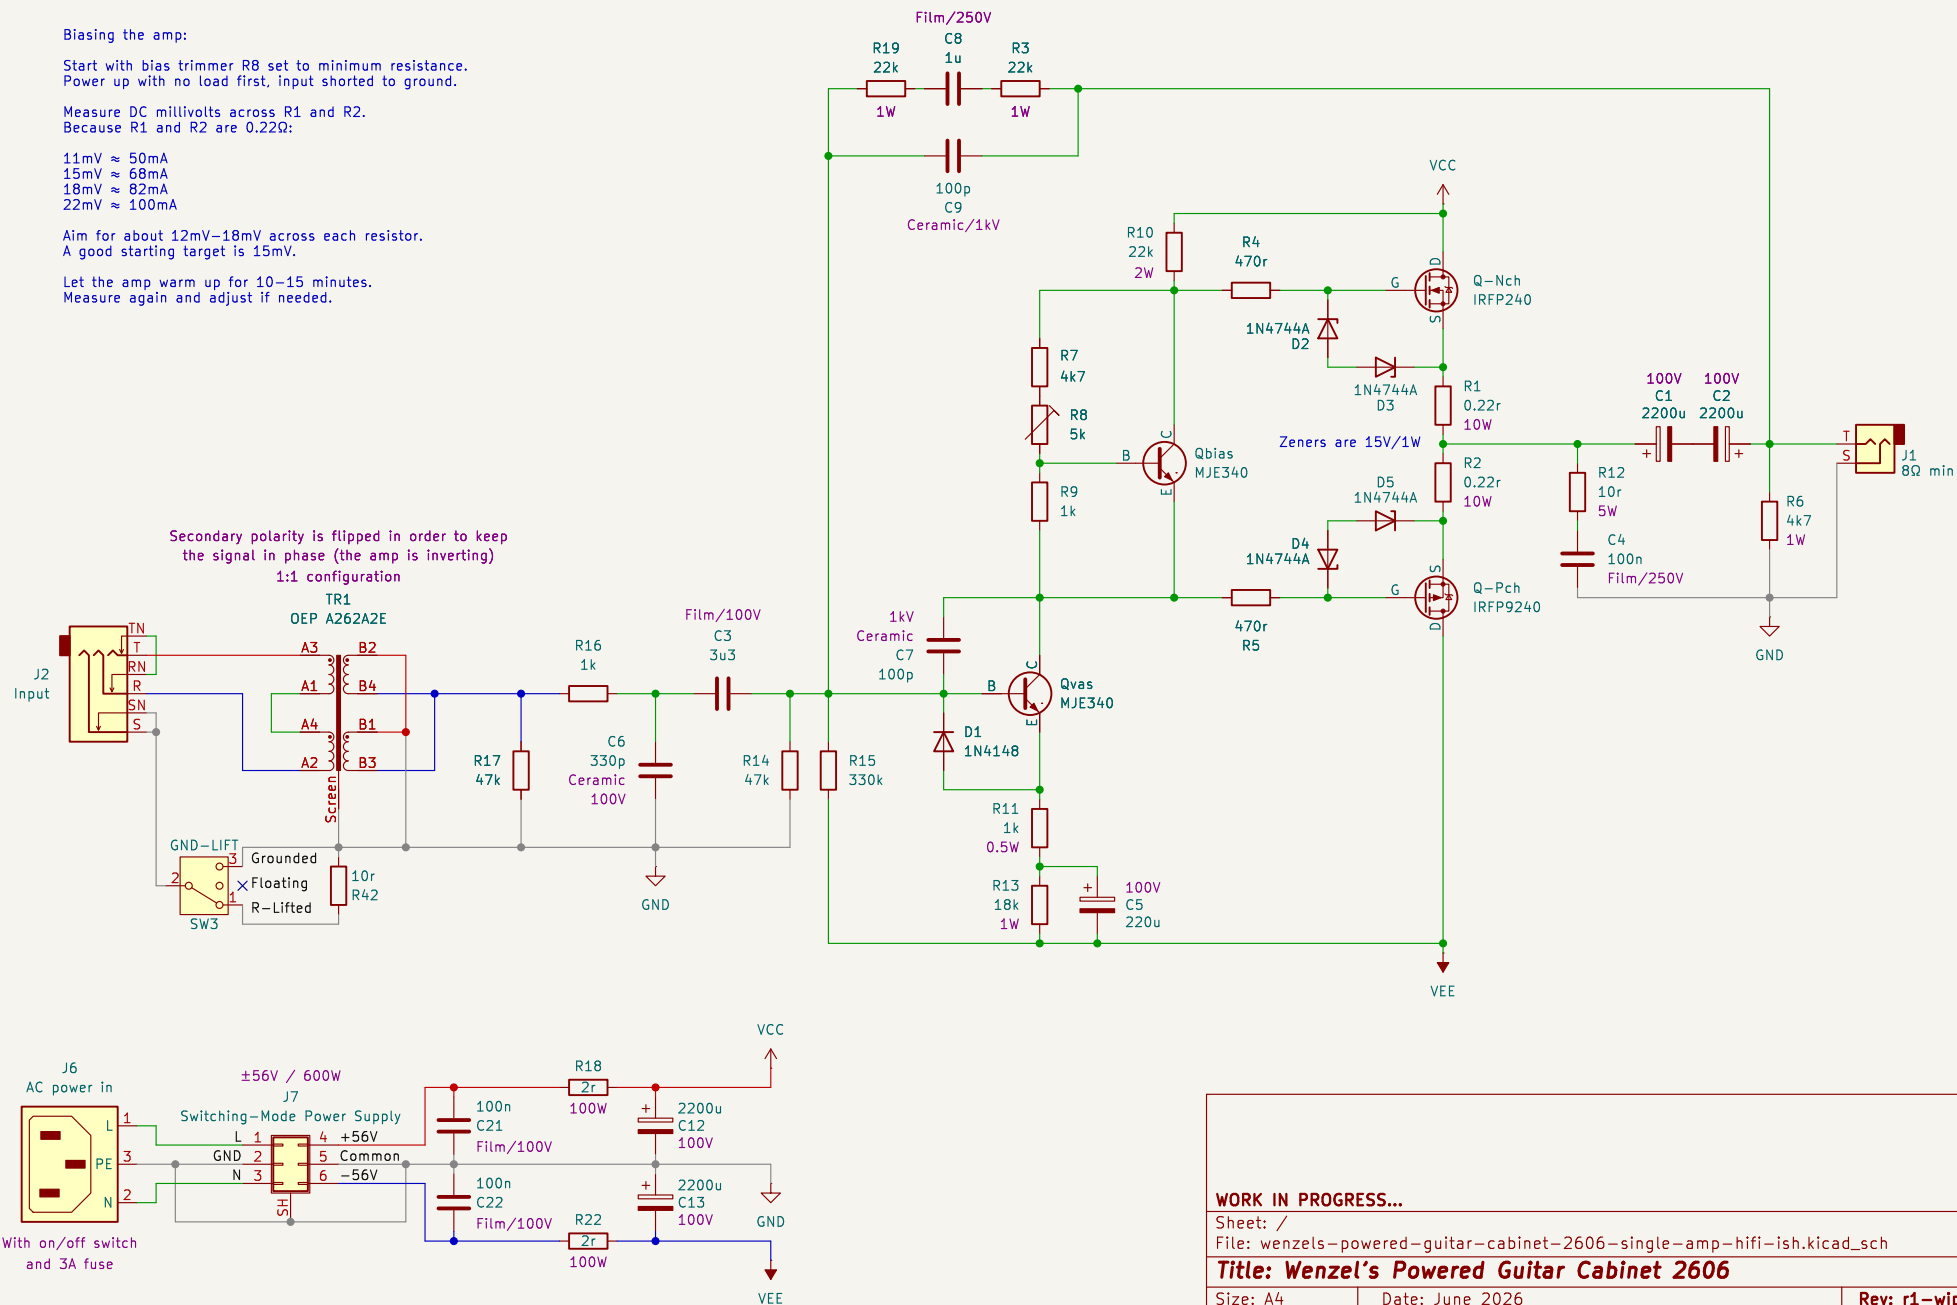

WORK IN PROGRESS...

Sheet: /

File: wenzels-powered-guitar-cabinet-2606-single-amp-hifi-ish.kicad_sch

Title: Wenzel's Powered Guitar Cabinet 2606

Size: A4

Date: June 2026

Rev: r1-wip-2

KiCad E.D.A. 9.0.6

Id: 1/1