


SomudTick - drilling template: FRONT FACE (the flat bottom of the box body)

print at 100 % (Actual size, no 'fit to page'). The line at the bottom must measure 100 mm.

Cut out along the outer outline, tape it on the face, lay the boards on it to check, then mark the centres (+) and drill.

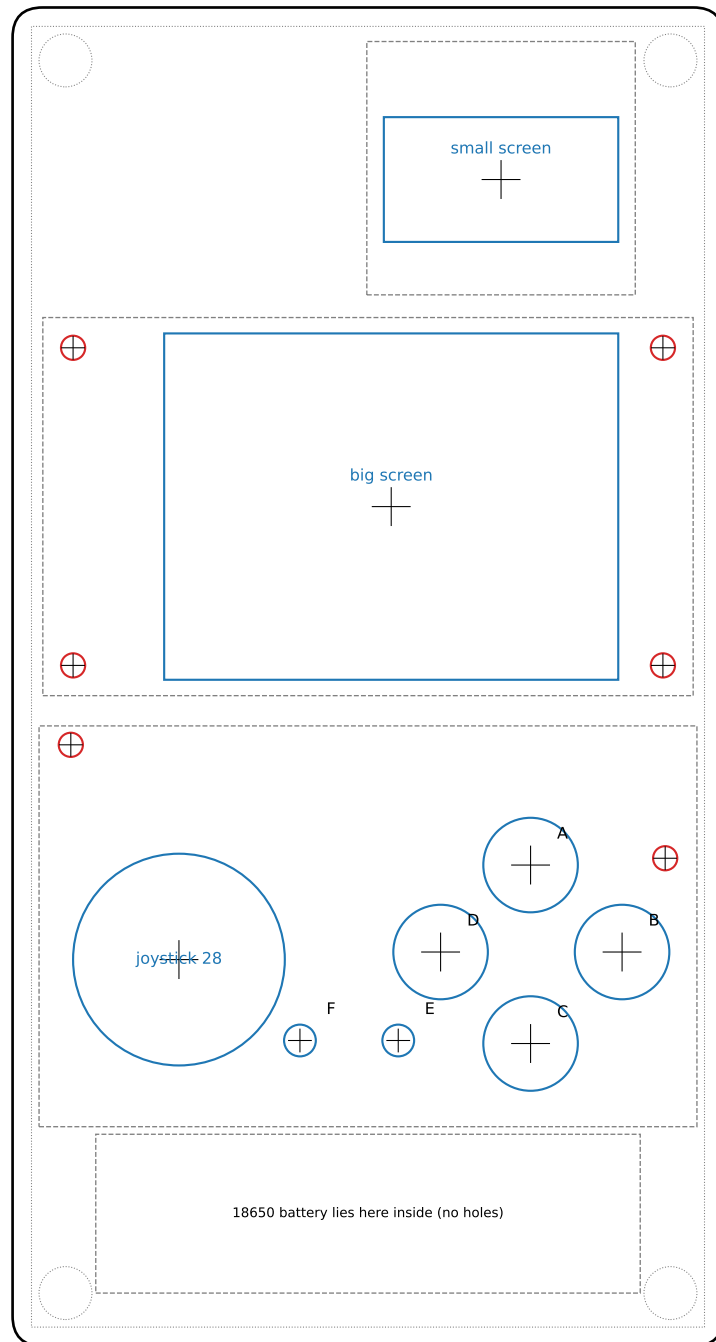


blue = openings red = screw holes (3.2) gray dashed = where the boards sit behind dotted = inside of the box, corner posts


100 mm

SomudTick - drilling template: WALLS (1:1)

TOP wall (seen from above, face side down)

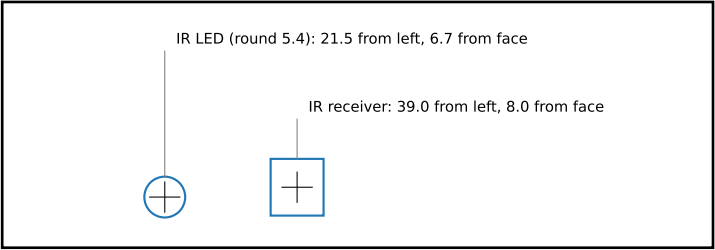

LEFT wall

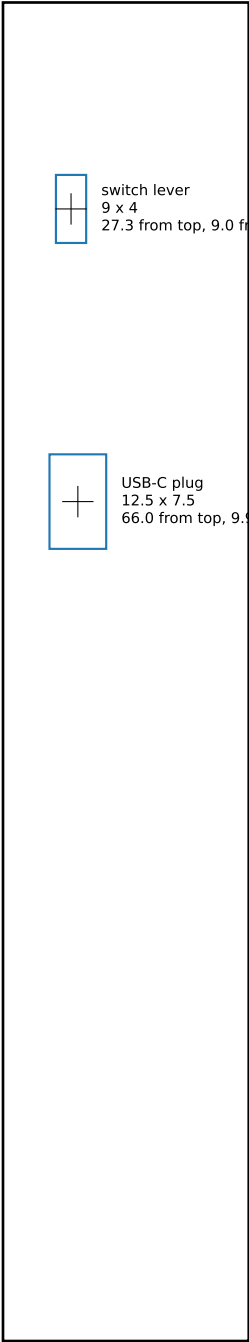

face side

MEASURE the box when it comes: wall, face and lid thickness, and the corner posts. Tell me the numbers and the template is made again to fit exactly.

bottom end (button board)

SomudTick - drilling template: LID (seen from the BACK, outside of the lid)

Top of the page = the end with the small screen. Only the speaker grille; the speaker sits under it on a foam pad.

