




### Power & Interconnect

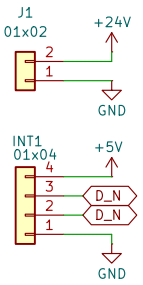


### Control Interfaces

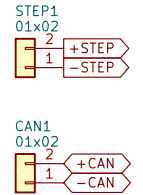


### Programming Interface

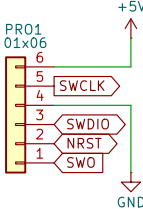


### 3-Phase Interface




### Step down regulator (24V to 12V)

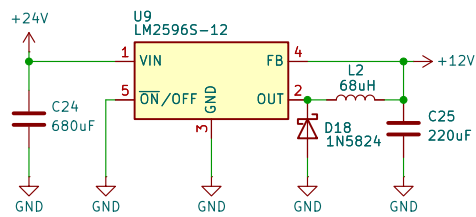


### Step down regulator (12V to 5V)

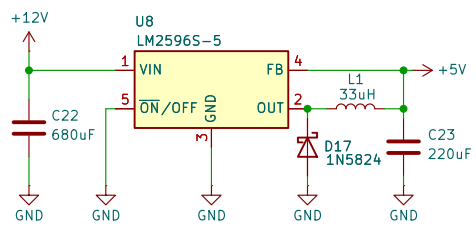


### Low dropout regulator (5V to 3.3V)

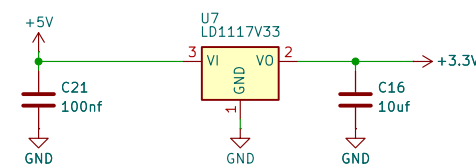


### Isolated 12V Supply

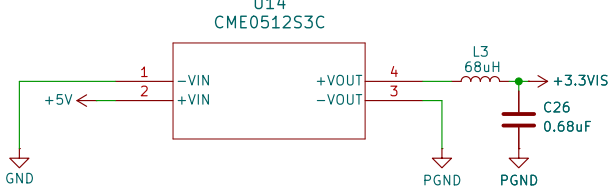


### Isolated 12V Supply

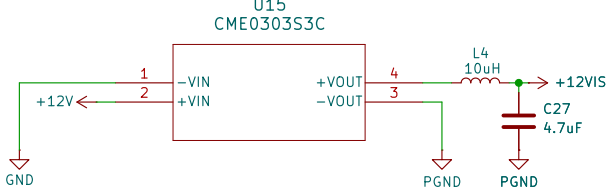


### RS-485/RS-422 Terminations

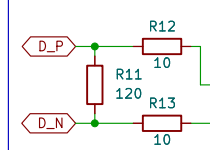


### RS-485/RS-422 Transceiver

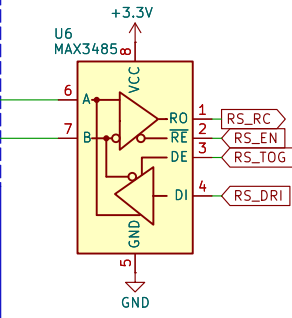


### Boot / Reset

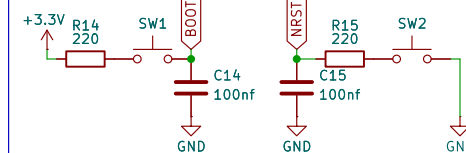


### 8 Mhz Oscillator

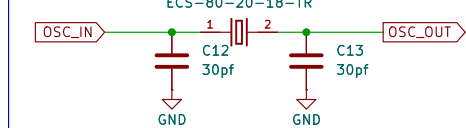

### VDDA Decoupling

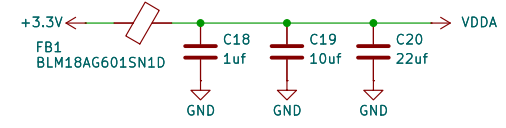

### Controller (170 Mhz)

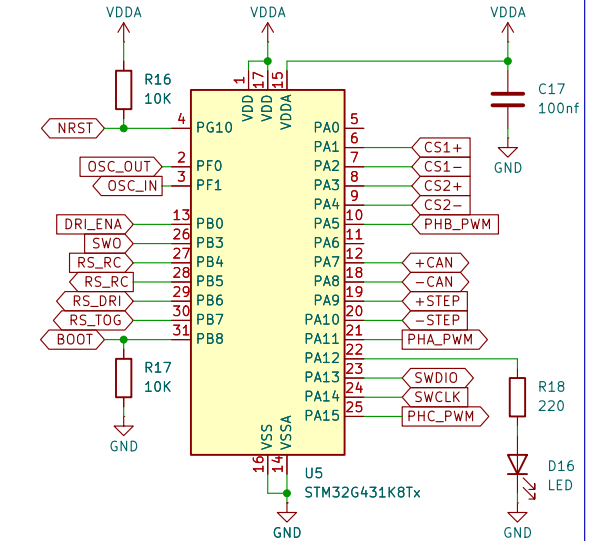

### WARNING:

For current sensing, use either the '1 mΩ', '3 mΩ', or '10 mΩ' shunt resistor. Do not use more than a single path, or the driver will not function correctly.

### drivers

|                         |         |
|-------------------------|---------|
| File: Drivers.kicad_sch | current |
| File: current.kicad_sch |         |








# OpenLSM

Sheet: /  
File: main.kicad\_sch

### Title: Bridge Driver

Size: A4 Date: 2026-08-03  
KiCad E.D.A. 10.0.0

Rev: 0  
Id: 1/3

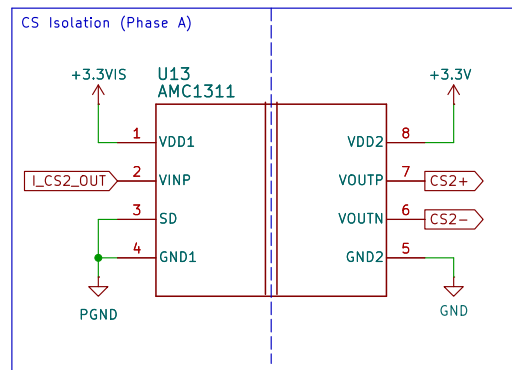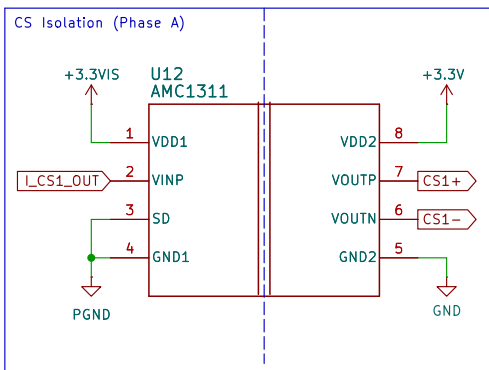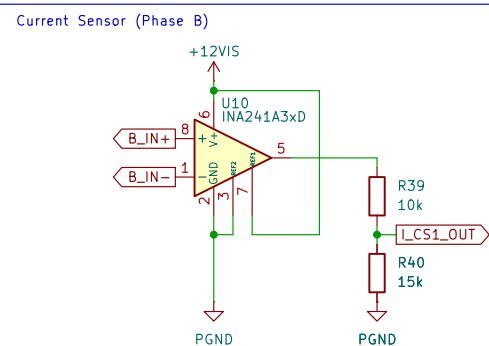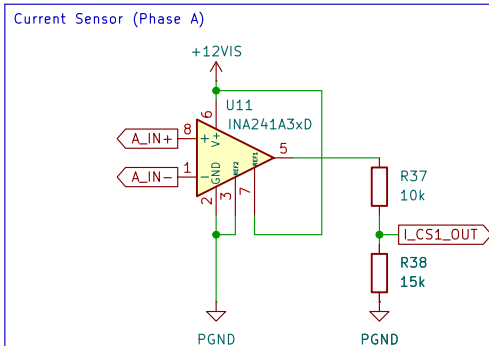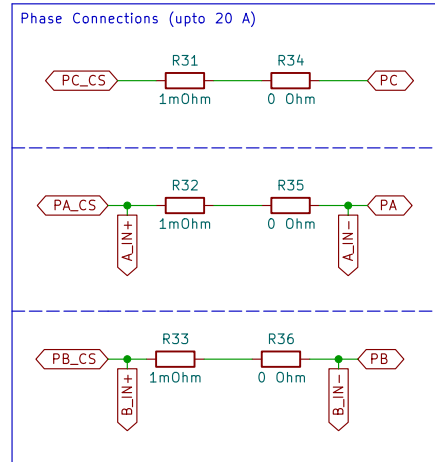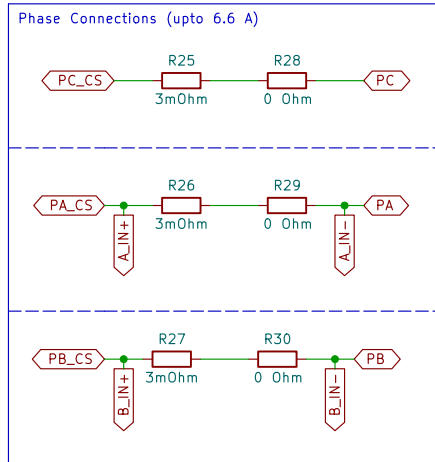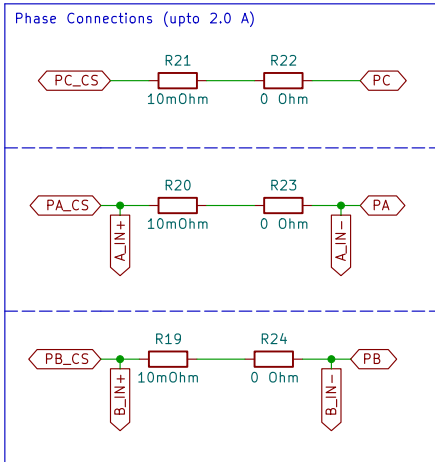





# OpenLSM

Sheet: /current/  
File: current.kicad\_sch

**Title:**

Size: A4 Date:  
KiCad E.D.A. 10.0.0

**Rev:**  
Id: 2/3

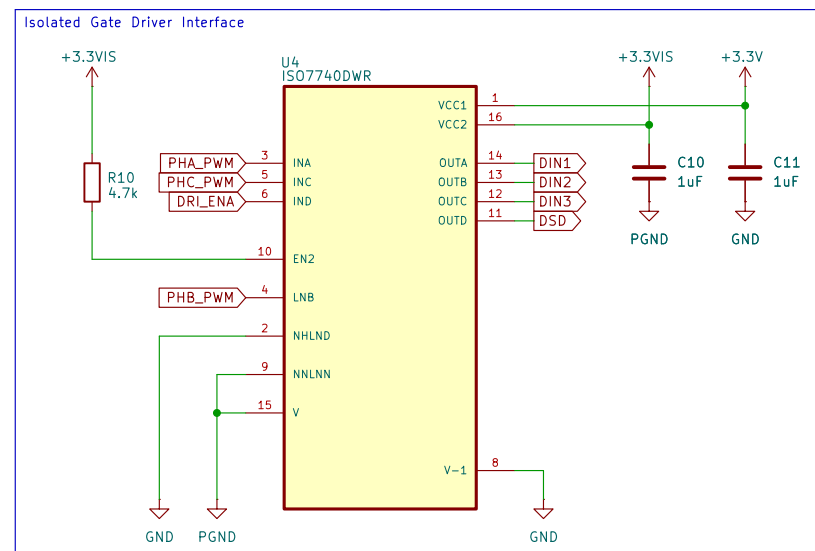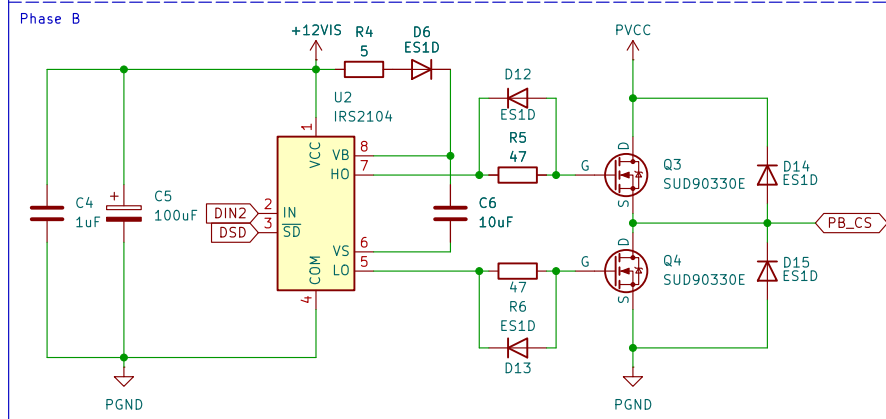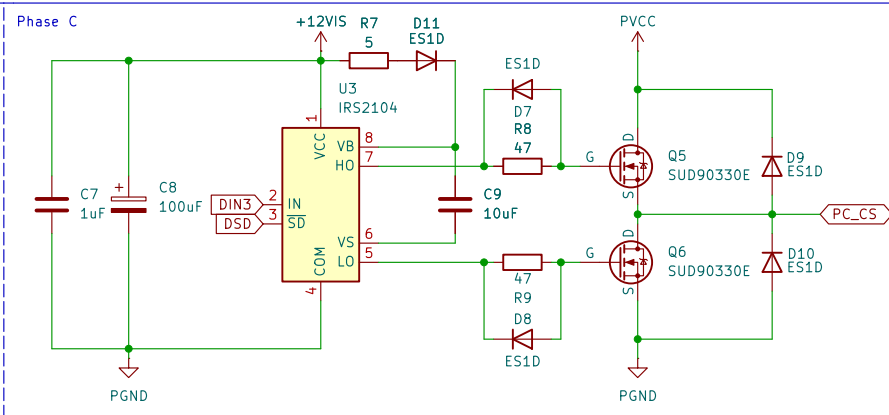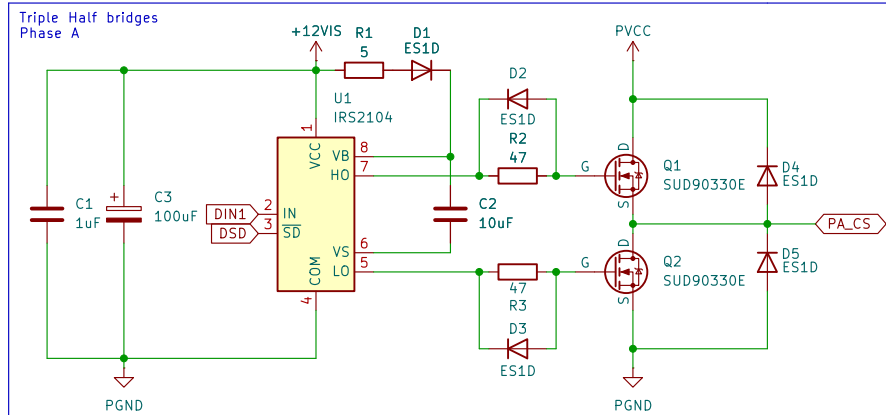

# OpenLSM

Sheet: /drivers/  
File: Drivers.kicad\_sch

**Title: Phase Drivers & Isolation**

Size: A4

Date:

KiCad E.D.A. 10.0.0

Rev:  
Id: 3/3