
Model Description of Amass Products

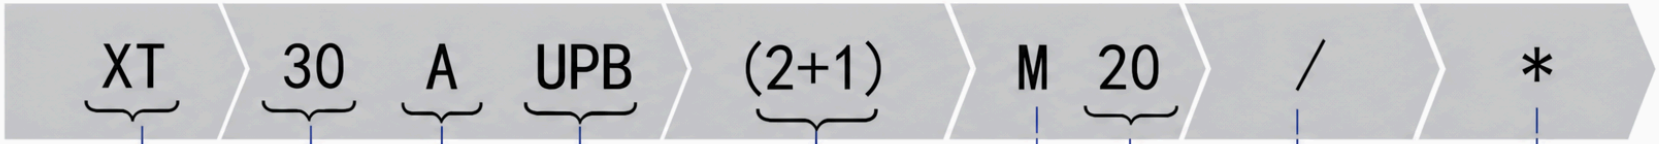

Product Series:
XT, MT,
MR, SH....

Product Specification:
30, 60,
90, 150...

Lantern Spring Contact

Insulator Specification:
PB, PM, PT.....

Contact Arrangement:
(2+1), (2+2) ...

Connector Gender:
-F=Female (Socket)
-M=Male (Plug)

Solder Tail Specification:
2mm, 3mm

Contact Plating:
G=Gold Plated,
N=Nickel Plated...

Product Color:
Y=Yellow,
B=Black....

Amass Product Specification


I. Product Description

With fixed screw holes, suitable for installing shell equipment. XT60 series products are compatible with other XT30 series products.

II. Application Modules

☐ Lithium Battery ☐ Motor ☑ Controller ☐ Charger ☐ Others

III. Product Diagram

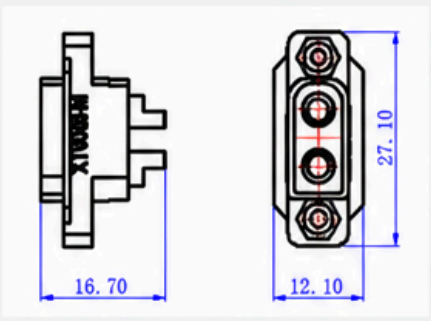Model	Product Image	Outline Drawing
XT60E1-M. G. *		

IV. Specifications

Item	Specification	Plating	Thickness
Metal Parts	H59-1	G: Gold Plating (Au)	0. 03μm
Material	**Specification**	**Color**	**Flame Rating**
Housing	PA66	*: Y=Yellow	UL94-V0

V. Characteristics

Electrical Performance	Test Method	Characteristic
Rated Voltage	UL1977	DC 500V
Rated Current	UL1977	20A 16#
Contact Resistance	GB/T5095. 2	0. 60mΩ
Insulation Resistance	GB/T5095. 2	2000MΩ
Withstanding Voltage	&A 1min <80℃	40A 16#
Temperature Rise	UL1977	20A 4h <60℃ 16#
Temperature Rise (in mating)	GB/T2900. 18	2. 90mm
Mechanical Performance	**Standard**	**Characteristic**
Insertion Force	GB/T5095. 8	1. 8kg-4. 5kg
Withdrawal Force	GB/T5095. 8	1. 8kg-4. 5kg
Insertion and Withdrawal Life	GB/T5095. 1	100 times
Protection Class	GB/T4208	IP40
Envirormental Performance	**Standard**	**Characteristic**
Operating Temperature	GB/T 2423. 3	-20℃ to 120℃
Salt Spray	GB/T 2423. 17	48h

VI. Wiring Recommendation

AWG	Temperature Rise 60℃	Temperature Rise 85℃
12#	40A	45A
14#	30A	35A
16#	25A	30A


7. Ordering Information


☐ With Dust Cover ☐ With Card Clip ☐ Waterproof ☐ Fireproof

8. Certifications

☐ UL ☐ CE ☑ RoHS 2.0 ☐ Reach

9. Installation Recommendation

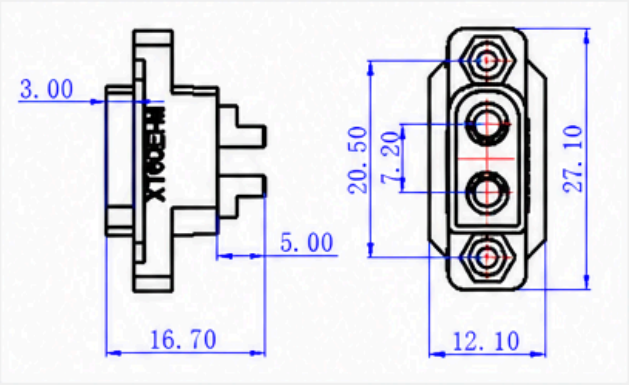

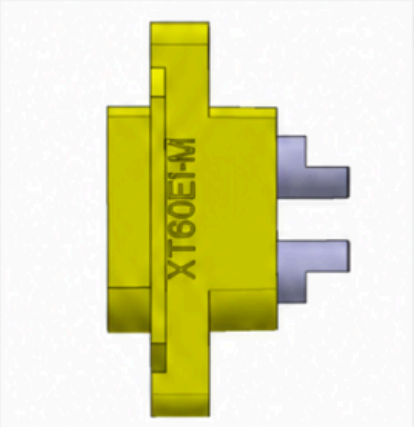

Precautions:

During use, please do not exceed the rated current and voltage.



- Overcurrent and overvoltage can lead to equipment failure and accidents.
- When the power is off, inserting or unplugging the connector may cause faults and accidents, so please insert or unplug the connector when the power is off.

Do not use under external force



- Do not pass current through the connector or wires under external force. Excessive external force may cause damage, leading to equipment failure and accidents, so please do not use under such conditions.
- The connector is a part designed for electrical connections and should not be used as a structural component or part of an external housing.

Confirm the usage environment



- Do not use in environments with high or low temperatures or high humidity.
- Do not use in environments outside the specified range, as it may cause equipment failure. Please do not use under such conditions.

Use with care



- Handle the connector precisely and use with care.
- Please be careful when opening the package, as using excessive force or improper handling may damage the product, causing deformation, bending, pin damage, or disassembly.

Prepared by: **Reviewed by:** **Approved by:**