The background features a complex, abstract design. It consists of a dark blue gradient with a central white hexagonal frame. Inside this frame, several glowing, translucent blue gears of different sizes are arranged. Behind the gears, a network of small white dots connected by thin lines forms a mesh pattern, resembling a molecular or digital network. The overall effect is futuristic and technological.

# IF2230 Jaringan Komputer

## Physical layer


Robithoh Annur  
Andreas Bara Timur  
Monterico Adrian



# Today's Lecture

- Dasar teori komunikasi data
- Jenis media transmisi
  - Media transmisi kabel
  - Media transmisi tanpa kabel
- Komunikasi satelit
- Contoh sistem komunikasi:
  - PSTN
  - Sistem telpon mobile
  - TV Kabel


# Introduction

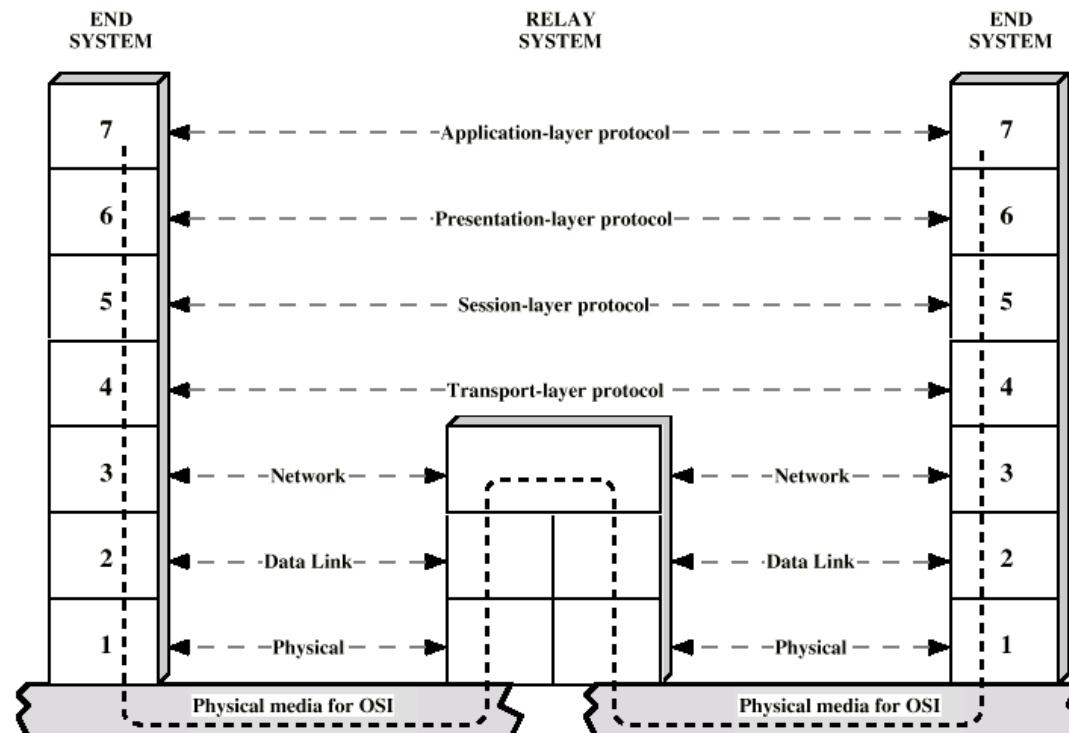

# Physical layer

L, Layer paling bawah.

don't forget!  
( $\overline{Q}, \overline{D}$ )

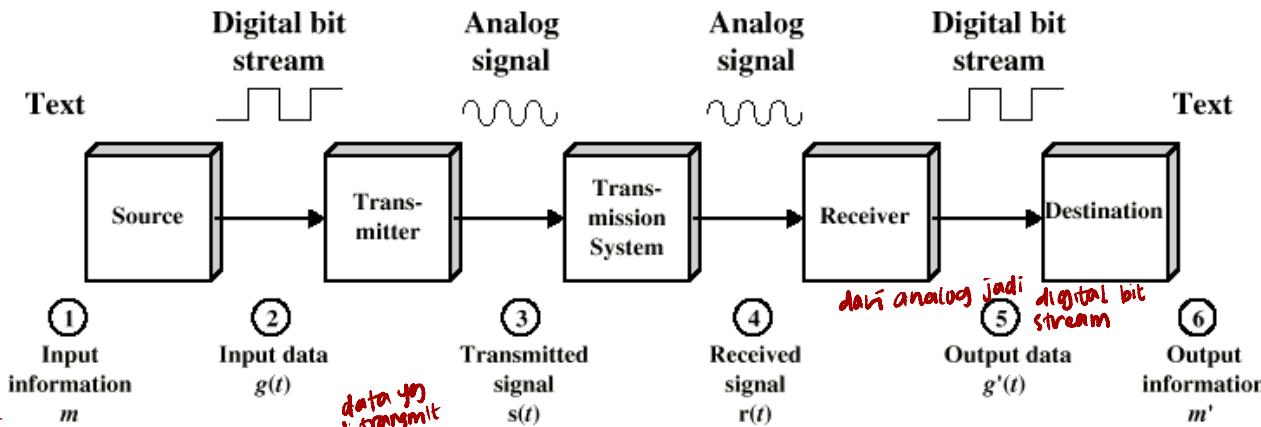

most of the time are generated from human.  
( voice, text, video, picture)



# Physical Components of a Transmission System

- Transmitter
- Receiver
- Transmission media
  - Guided: cable, twisted pair, fiber
  - Unguided: wireless (radio, infrared)

# A Transmission System



## Transmitter


- Converts information into *signal* suitable for transmission
- Injects energy into communication medium or channel
  - Telephone converts voice into electric current
  - Modem converts bits into tones

## Receiver


- Receives energy from medium
- Converts received signal into a form suitable for delivery to users
  - Telephone converts current into voice
  - Modem converts tones into bits



# A Simplified Communication System

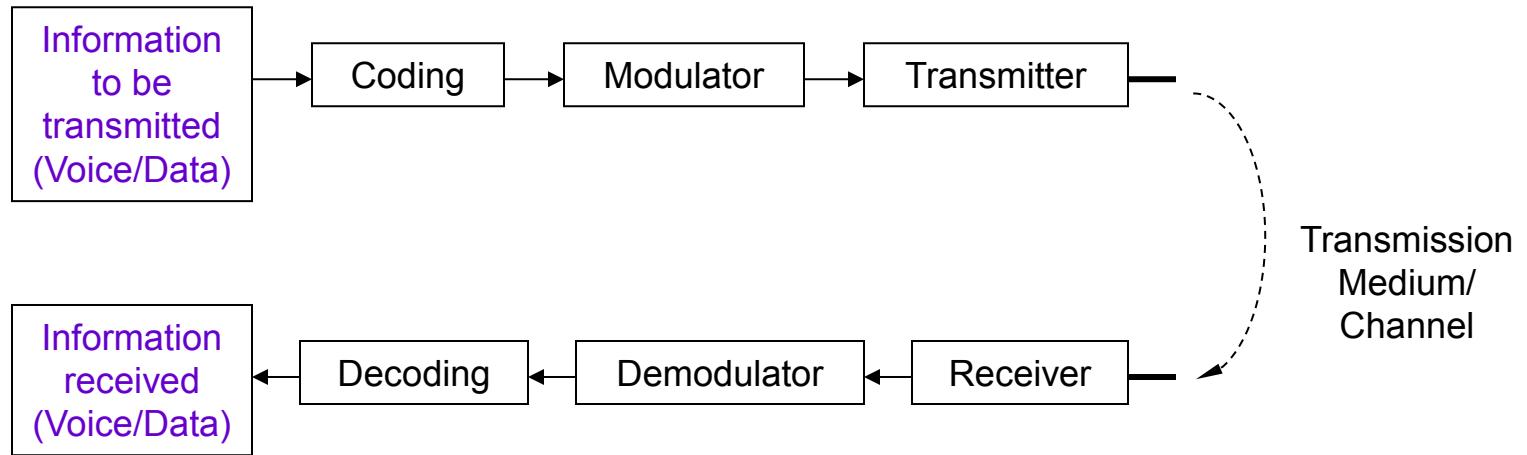

# What You Need for Better Understanding

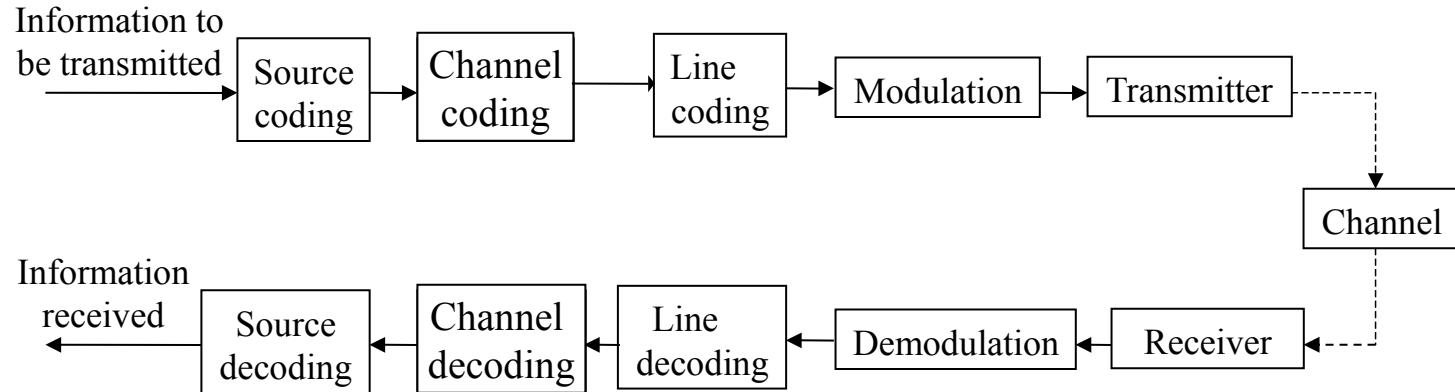



# Information



# Data vs Signal

- Data:
  - Information units that can be stored in storage devices;
- Signals:
  - Transmission units that can be transmitted over transmission media.
- Data is converted to signal in physical layer.




# Analog and Digital

- Data can be analog or digital.  
Signals can also be analog or digital
- Analog is something that is continuous, can have **infinite values in a range.**
- Digital is something that is discrete, can have only a **limited number of values.** (*depends on the bits*)
- Hence, there are
  - Analog and Digital Data
  - Analog and Digital Signals
  - Periodic and Nonperiodic Signals

# Data to Signal


conversion from data to signal.

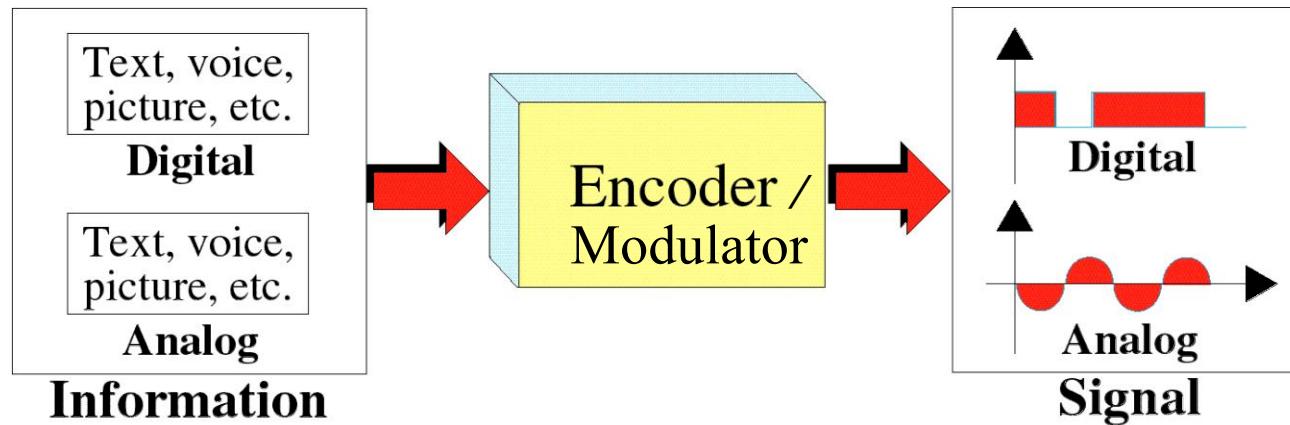

# Analog Signal and Digital Signal




a. Analog signal

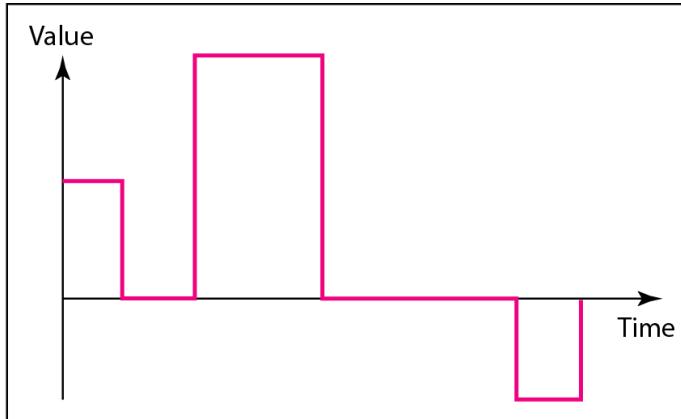


b. Digital signal

# Periodic Signal

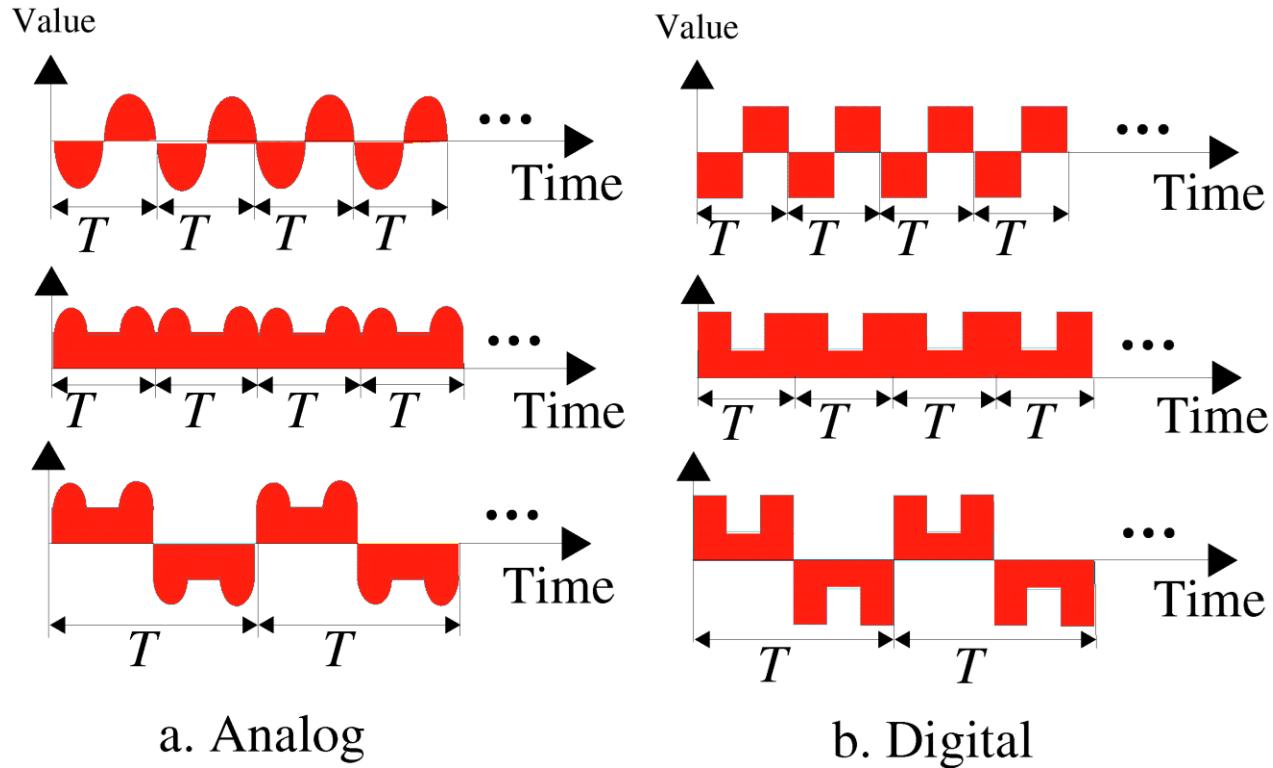


# Aperiodic Signal

↳ the frequency of the upcoming signal is not certain

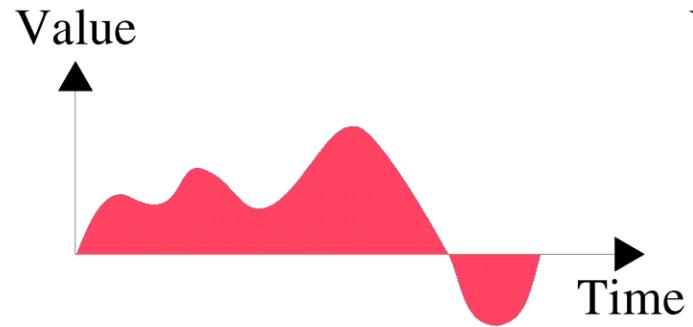

a. Analog

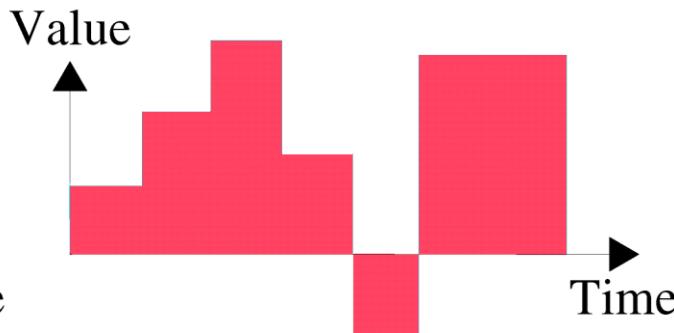

b. Digital




# Periodic Analog Signals


- Analog signals can be classified as simple or composite.
- A simple periodic analog signal, a sine wave, cannot be decomposed into simpler signals.
- A composite periodic analog signal is composed of multiple sine waves.
  - Square wave, Triangular wave, Sawtooth wave
  - Fourier series, still remember

# Analog Signals


- The sine wave is the most fundamental form of a periodic analog signal.
- Sine waves can be fully described by three characteristics:
  1. Amplitude
  2. Frequency (which is equal to 1/Period)
  3. Phase.

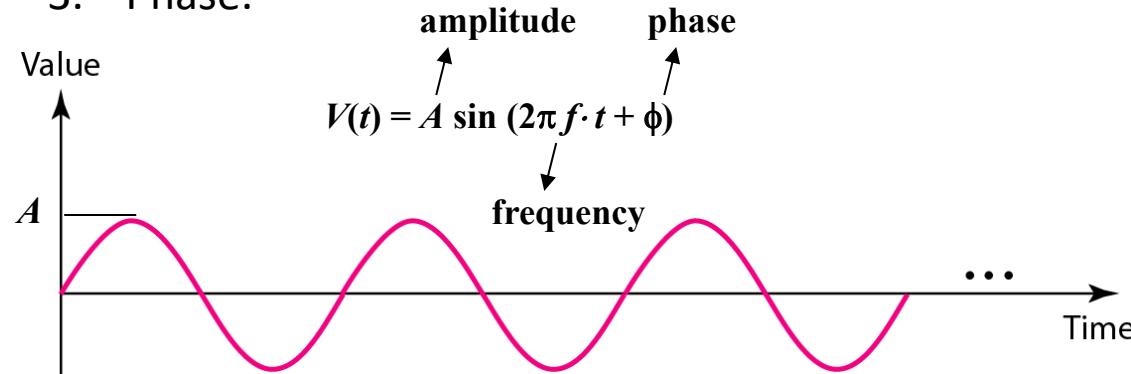

# Commsim – Sine Wave

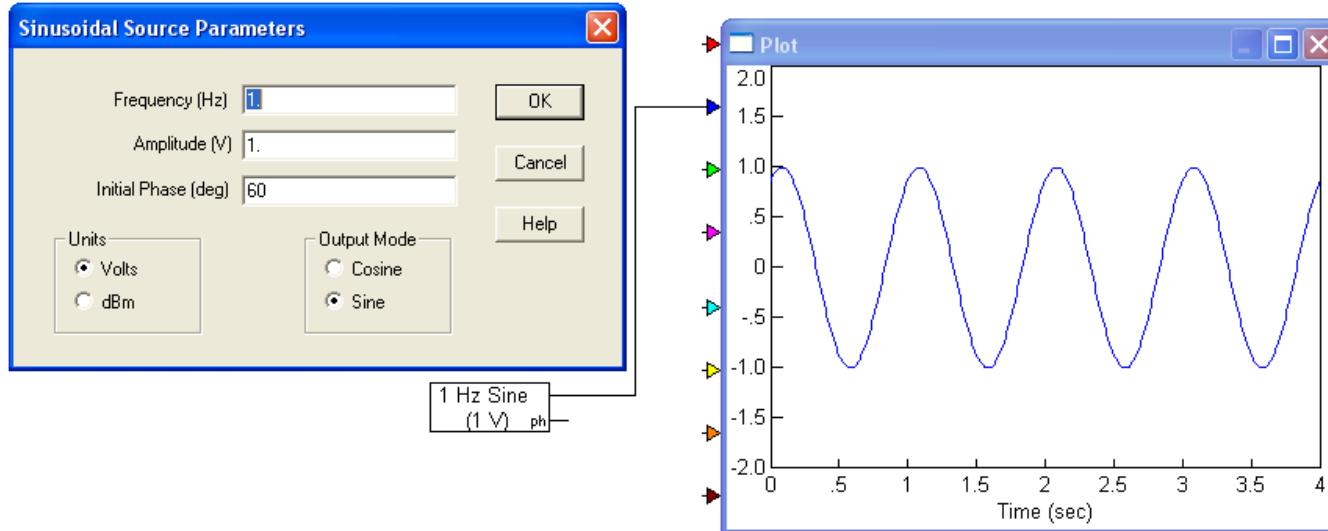


# Composite Signals

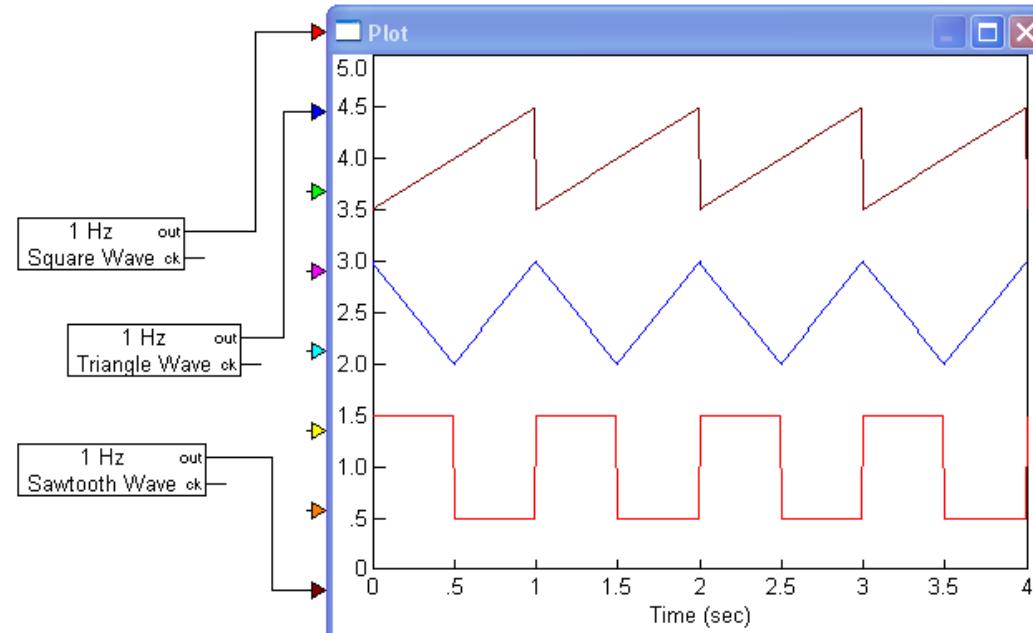

# Frequency and Period


Amplitude

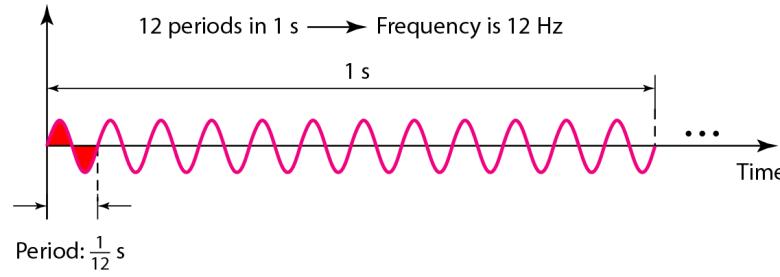

a. A signal with a frequency of 12 Hz

$$f = \frac{1}{T} \quad \text{and} \quad T = \frac{1}{f}$$

Amplitude

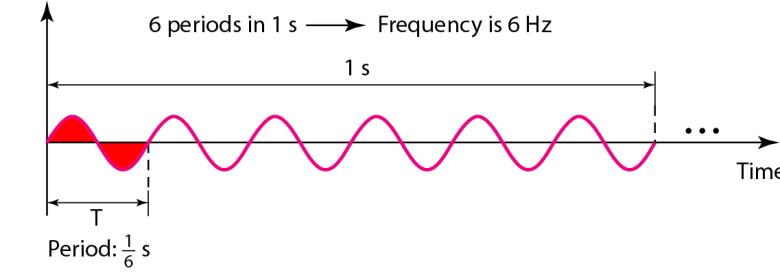

b. A signal with a frequency of 6 Hz



# Example

*The power we use at home has a frequency of 60 Hz.  
The period of this sine wave can be determined as follows:*

$$T = \frac{1}{f} = \frac{1}{60} = 0.0166 \text{ s} = 0.0166 \times 10^3 \text{ ms} = 16.6 \text{ ms}$$



# Example

*The period of a signal is 100 ms. What is its frequency in kilohertz?*

*bagi 1000*

## **Solution**

*First we change 100 ms to seconds, and then we calculate the frequency from the period (1 Hz = 10<sup>-3</sup> kHz).*

$$100 \text{ ms} = 100 \times 10^{-3} \text{ s} = 10^{-1} \text{ s}$$


$$f = \frac{1}{T} = \frac{1}{10^{-1}} \text{ Hz} = 10 \text{ Hz} = 10 \times 10^{-3} \text{ kHz} = 10^{-2} \text{ kHz}$$




# Notes on Frequency

- Frequency is the rate of change with respect to time.
- Change in a short span of time means high frequency.
- Change over a long span of time means low frequency
- If a signal does not change at all, its frequency is zero. *→ basically no signal :)*
- If a signal changes instantaneously, its frequency is infinite.


# Phase

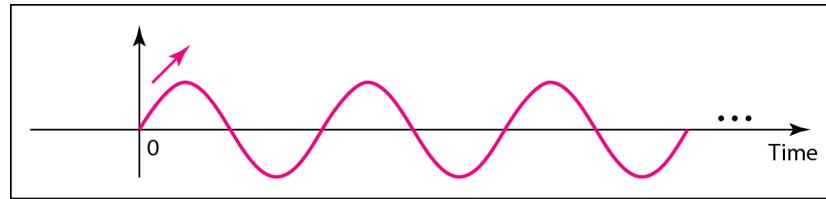

a. 0 degrees

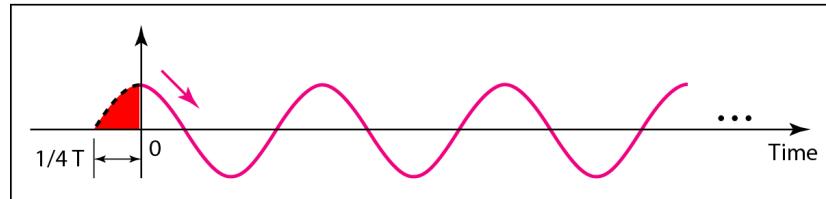

b. 90 degrees

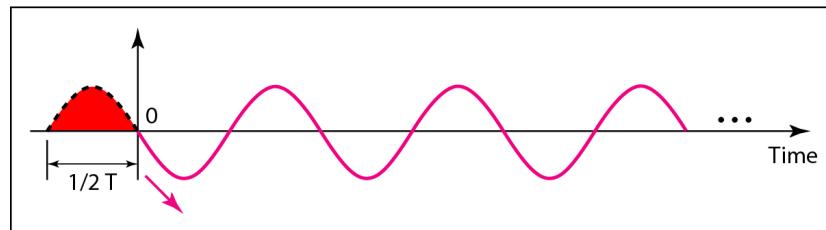

c. 180 degrees  
shift waves by



# Example


*A sine wave is offset 1/6 cycle with respect to time 0.  
What is its phase in degrees and radians?*

## *Solution*

*We know that 1 complete cycle is  $360^\circ$ . Therefore, 1/6 cycle is*

$$\frac{1}{6} \times 360 = 60^\circ = 60 \times \frac{2\pi}{360} \text{ rad} = \frac{\pi}{3} \text{ rad} = 1.046 \text{ rad}$$

# Wavelength and Period

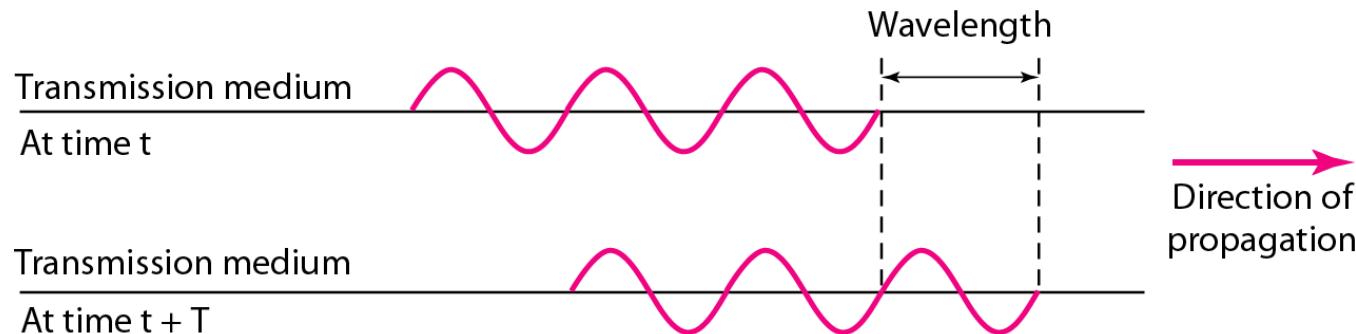


$$c \cdot \lambda \cdot f$$


wavelength ( $\lambda$ )  
=  $\frac{c}{f}$  speed of light  
( $3 \cdot 10^8$ )

analogous

# Time & Frequency Domain

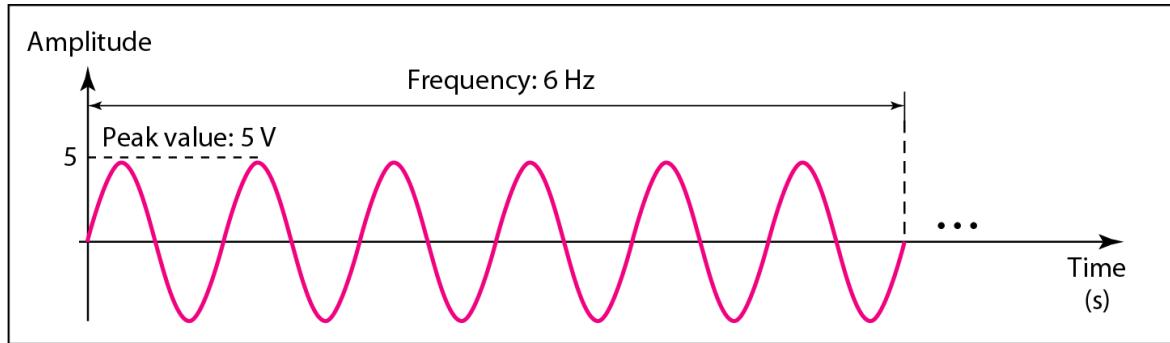


a. A sine wave in the time domain (peak value: 5 V, frequency: 6 Hz)

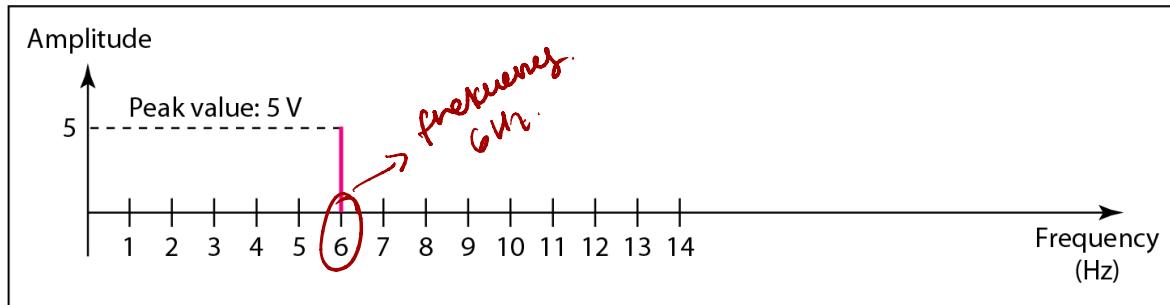


b. The same sine wave in the frequency domain (peak value: 5 V, frequency: 6 Hz)

# Non-Periodic Signal

↳ irregular frequencies.

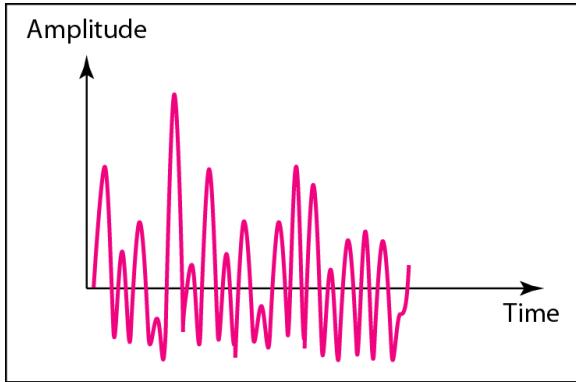

a. Time domain

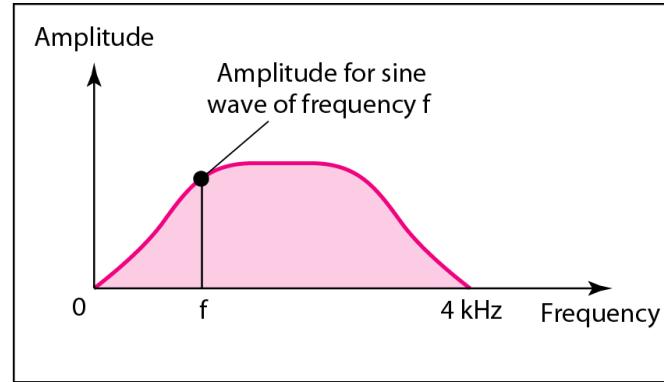


b. Frequency domain

a nonperiodic composite signal. It can be the signal created by a microphone or a telephone set when a word or two is pronounced. In this case, the composite signal cannot be periodic, because that implies that we are repeating the same word or words with exactly the same tone.


# Bandwidth

- The bandwidth of a composite signal is the difference between the highest and the lowest frequencies contained in that signal.

$$B = f_h - f_l$$

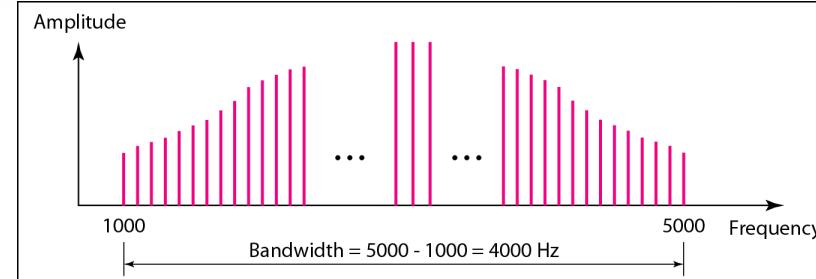

a. Bandwidth of a periodic signal

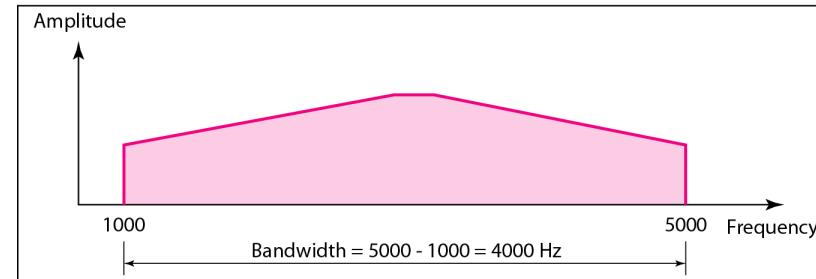

b. Bandwidth of a nonperiodic signal


# Example

*If a periodic signal is decomposed into five sine waves with frequencies of 100, 300, 500, 700, and 900 Hz, what is its bandwidth? Draw the spectrum, assuming all components have a maximum amplitude of 10 V.*

## *Solution*

*Let  $f_h$  be the highest frequency,  $f_l$  the lowest frequency, and  $B$  the bandwidth. Then*

$$B = f_h - f_l = 900 - 100 = 800 \text{ Hz}$$

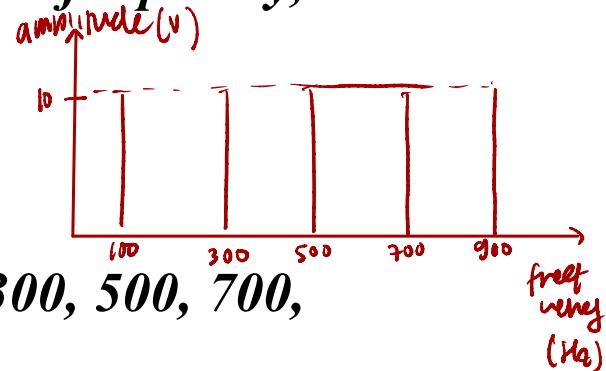


*The spectrum has only five spikes, at 100, 300, 500, 700, and 900 Hz*

# Example

A periodic signal has a bandwidth of 20 Hz. The highest frequency is 60 Hz. What is the lowest frequency? Draw the spectrum if the signal contains all frequencies of the same amplitude.

## Solution



Let  $f_h$  be the highest frequency,  $f_l$  the lowest frequency, and  $B$  the bandwidth. Then

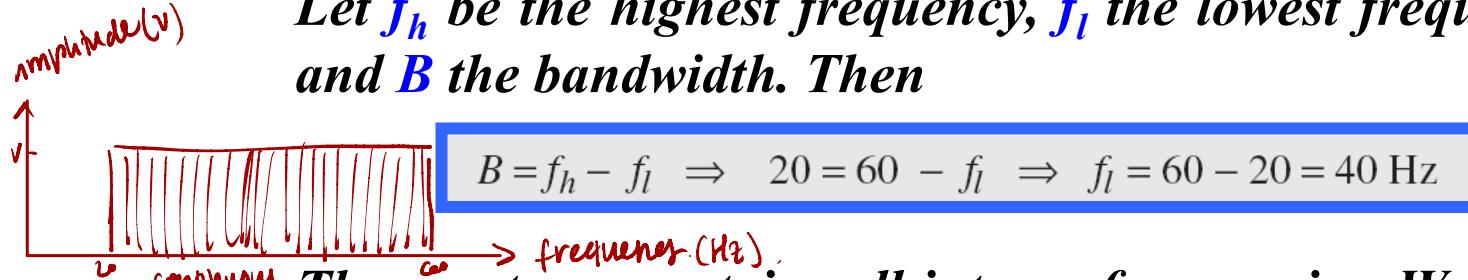

The spectrum contains all integer frequencies. We show this by a series of spikes.

# Digital Signal

- In digital signal, a 1 can be encoded as a positive voltage and a 0 as zero voltage.
- A digital signal can have more than two levels. In this case, we can send more than 1 bit for each level.
- Bit rate is used to describe digital signals. The bit rate is the number of bits sent in one seconds, expressed in bits per second (bps).

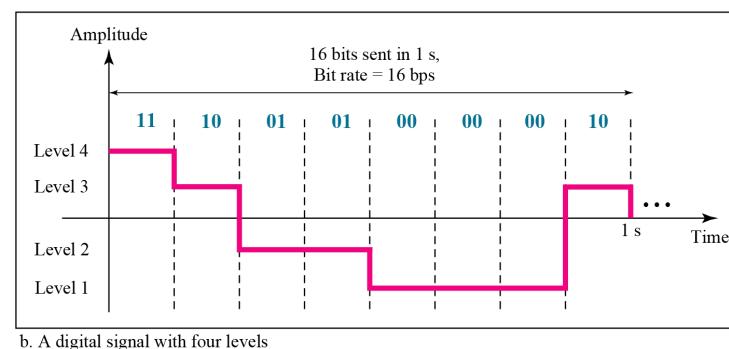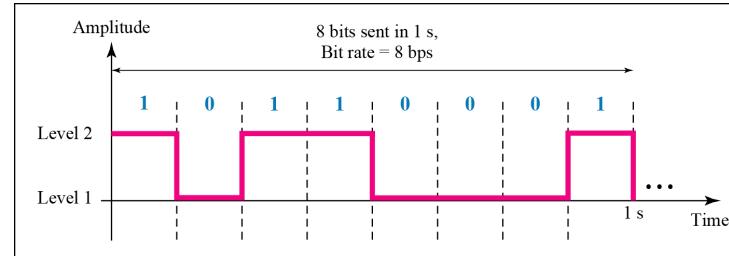



# Example

*A digital signal has eight levels. How many bits are needed per level? We calculate the number of bits from the formula*

$$\text{Number of bits per level} = \log_2 8 = 3$$

*Each signal level is represented by 3 bits.*

# Example

Assume we need to download text documents at the rate of 100 pages **per minute**. What is the required bit rate of the channel? Given that a page is an average of 24 lines with 80 characters in each line, and **one character** requires 8 bits.

**Solution**

$$\frac{100 \times 24 \times 80 \times 8}{60} = 25600 \text{ bps} = 25.6 \text{ kbps}$$

total char / page

total char

bits required utk 1 char

| minute



# Example

*A digitized voice channel, as we will see in Chapter 4, is made by digitizing an analog voice signal with spectrum from 0 Hz to 4-kHz. We need to sample the signal at twice the highest frequency (two samples per hertz). We assume that each sample requires 8 bits. What is the required bit rate?*

## *Solution*

*The bit rate can be calculated as*

$$2 \times 4000 \times 8 = 64,000 \text{ bps} = 64 \text{ kbps}$$



# Example

*What is the bit rate for high-definition TV (HDTV)?*

## *Solution*

*HDTV uses digital signals to broadcast high quality video signals. The HDTV screen is normally a ratio of 16 : 9. There are 1920 by 1080 pixels per screen, and the screen is renewed 30 times per second. Twenty-four bits represents one color pixel.*



$$1920 \times 1080 \times 30 \times 24 = 1,492,992,000 \text{ or } 1.5 \text{ Gbps}$$

*The TV stations reduce this rate to 20 to 40 Mbps through compression.*



# Other Definition

**bit duration = time period for a bit  
=  $1 / \text{bit rate}$**

*Example: A digitized voice channel has a bit rate of 64kbps. Then the duration of each bit is  $1/64\text{kbps} = 0.000015625 \text{ s} = 15.625 \mu\text{s}$*

**bit length = distance a bit occupies the medium  
= propagation speed  $\times$  bit duration**

*Example: In the previous example, suppose that the signal propagation speed in the medium is  $2 \times 10^8 \text{ m/s}$ , Then the bit length is  $2 \times 10^8 \text{ m/s} \times 0.000015625 \text{ s} = 3125 \text{ m} = 3.125 \text{ km}$*



# Data Rate Limits

- A very important consideration in data communications is how fast we can send data, in bits per second, over a channel. Data rate depends on three factors:
  - The bandwidth available
  - The level of the signals we use
  - The quality of the channel (the level of noise)



# Nyquist Rate

- Nyquist bit rate defines the theoretical maximum bit rate:
  - Bit rate =  $2 \times \text{bandwidth} \times \log_2 L$ ,
  - bandwidth is the analog bandwidth, and, L is the signal level.
- Theoretically, if we can have infinitely many levels, then we can achieve infinite bit rate.
- But in reality, it can never be achieved because increasing the levels of a signal may reduce the reliability of the system as the noise may more easily corrupt the signals.



# Example

*Consider a noiseless channel with a bandwidth of 3000 Hz transmitting a signal with two signal levels. The maximum bit rate can be calculated as*

$$\text{BitRate} = 2 \times 3000 \times \log_2 2 = 6000 \text{ bps}$$

*Consider the same noiseless channel transmitting a signal with four signal levels (for each level, we send 2 bits). The maximum bit rate can be calculated as*

$$\text{BitRate} = 2 \times 3000 \times \log_2 4 = 12,000 \text{ bps}$$



# Example

*We need to send 265 kbps over a noiseless channel with a bandwidth of 20 kHz. How many signal levels do we need?*

## **Solution**

*We can use the Nyquist formula as shown:*


$$265,000 = 2 \times 20,000 \times \log_2 L$$
$$\log_2 L = 6.625 \quad L = 2^{6.625} = 98.7 \text{ levels}$$

*Since this result is not a power of 2, we need to either increase the number of levels or reduce the bit rate. If we have 128 levels, the bit rate is 280 kbps. If we have 64 levels, the bit rate is 240 kbps.*



# Encoding

# What You Need for Better Understanding

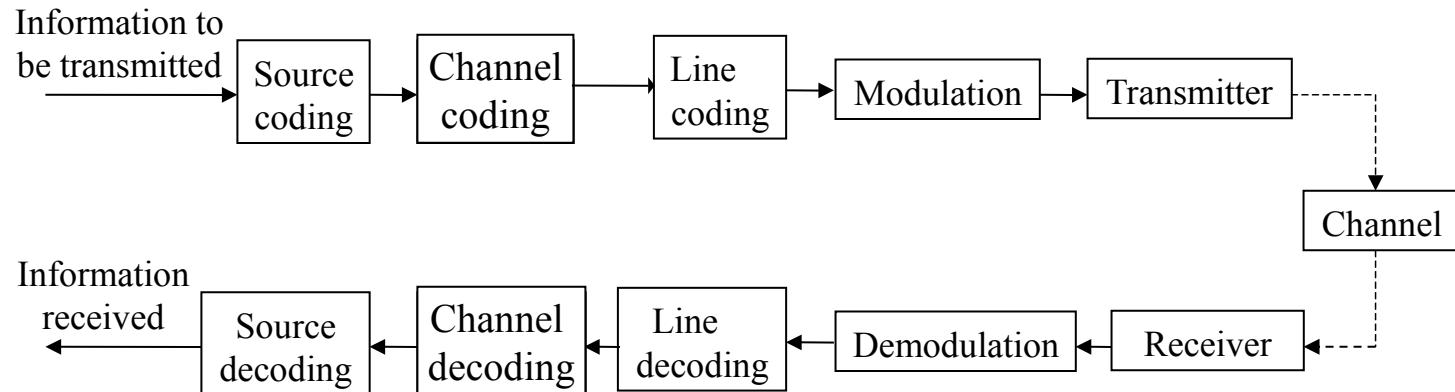



# Encoding

- The first step in turning nodes and links into usable building blocks is to
- understand how to connect them in such a way that bits can be transmitted from one node to the other.
- **Signals propagate over physical links.**
- The task, therefore, is to encode the binary data that the source node wants to send into the signals that the links are able to carry
- At the receiving node, it needs to decode the signal back into the corresponding binary data



# Source Coding

- Networks are handling streams of 0's and 1'
- **Source Encoding**: compression, according to statistics of 0's and 1's, map blocks of bits to more regular "shorter" blocks! Get rid of redundancy
- **Source Decoding**: inverse of source encoding



# Channel Coding

*physical trans-  
mission link*

- **Channel Encoding:** According to channel conditions, add redundancy for more reliable transmission
- **Channel decoding:** the inverse
- **Observation:** source encoding attempts to eliminate “useless information”, while channel encoding add “useful information”; both deal with redundancies!



# Modulation/Demodulation

- **Modulation:** maps blocks of bits to well-defined waveforms or symbols (a set of signals for better transmission), then shifts transmission to the carrier frequency band (the band you have right to transmit)
- **Demodulation:** the inverse of modulation
- **Demodulation vs. Detection:** Detection is to recover the modulated signal from the “distorted noisy” received signals

BPSK → *google  
for more!*



# Source vs. Channel vs. Line Coding


- **Source coding:** eliminating redundancy in order to make efficient use of storage space and/or transmission channels
  - Huffman coding/ Morse code
- **Channel coding:** a pre-transmission mapping applied to a digital signal or file, usually designed to make error-correction possible
  - Parity check / Hamming code / Reed-Soloman code
- **Line coding:** performed to adapt the transmitted signal to the (electrical) characteristics of a transmission channel
- Order: source coding -> channel coding -> line coding



# What is Line Coding?


- Mapping of binary information sequence into the digital signal that enters the channel
  - Ex. “1” maps to +A square pulse; “0” to –A pulse
- Line code selected to meet system requirements:
  - *Transmitted power*: Power consumption = \$
  - *Bit timing*: Transitions in signal help timing recovery
  - *Bandwidth efficiency*: Excessive transitions wastes bw
  - *Low frequency content*: Some channels block low frequencies
    - long periods of +A or of –A causes signal to “droop”
    - Waveform should not have low-frequency content
  - *Error detection*: Ability to detect errors helps
  - *Complexity/cost*: Is code implementable in chip at high speed?

# Line coding examples

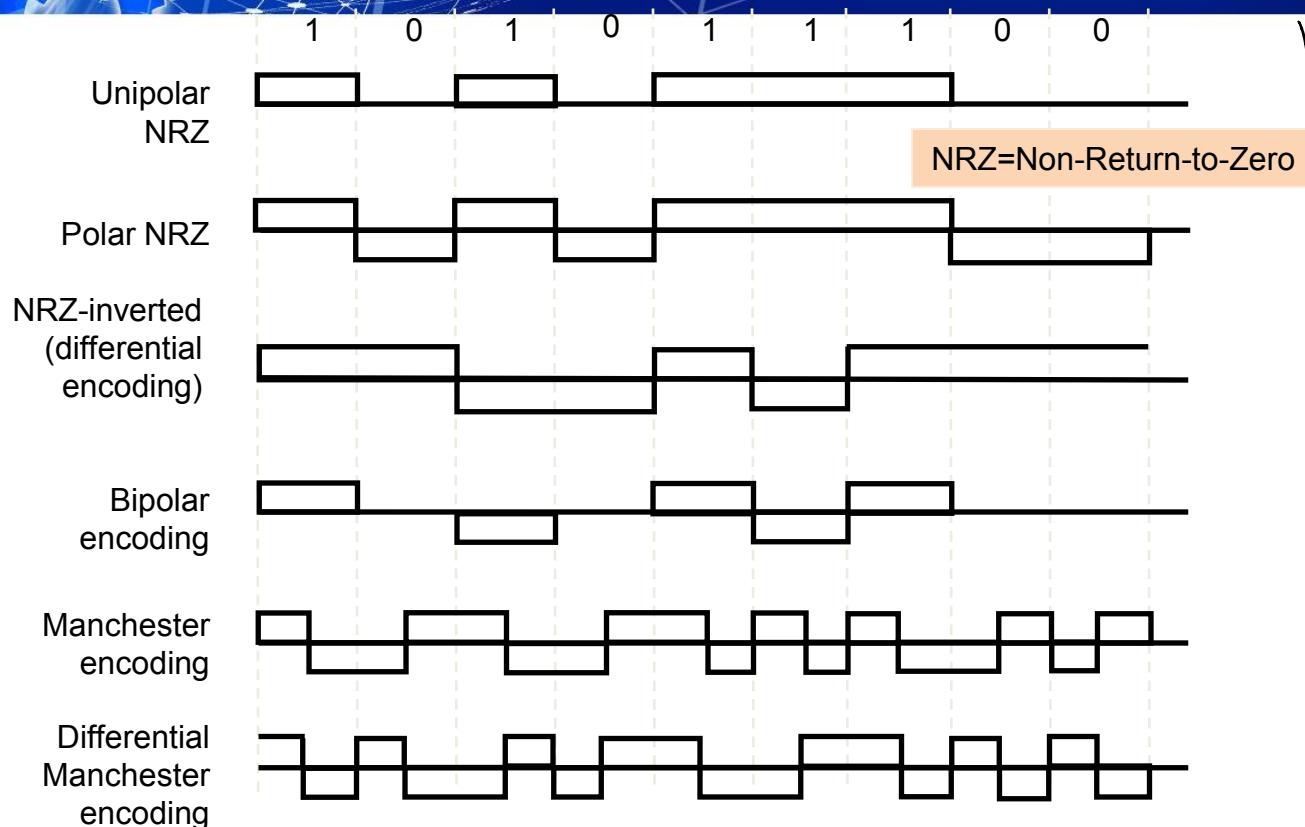


# Spectrum of Line codes

- Assume 1s & 0s independent & equiprobable

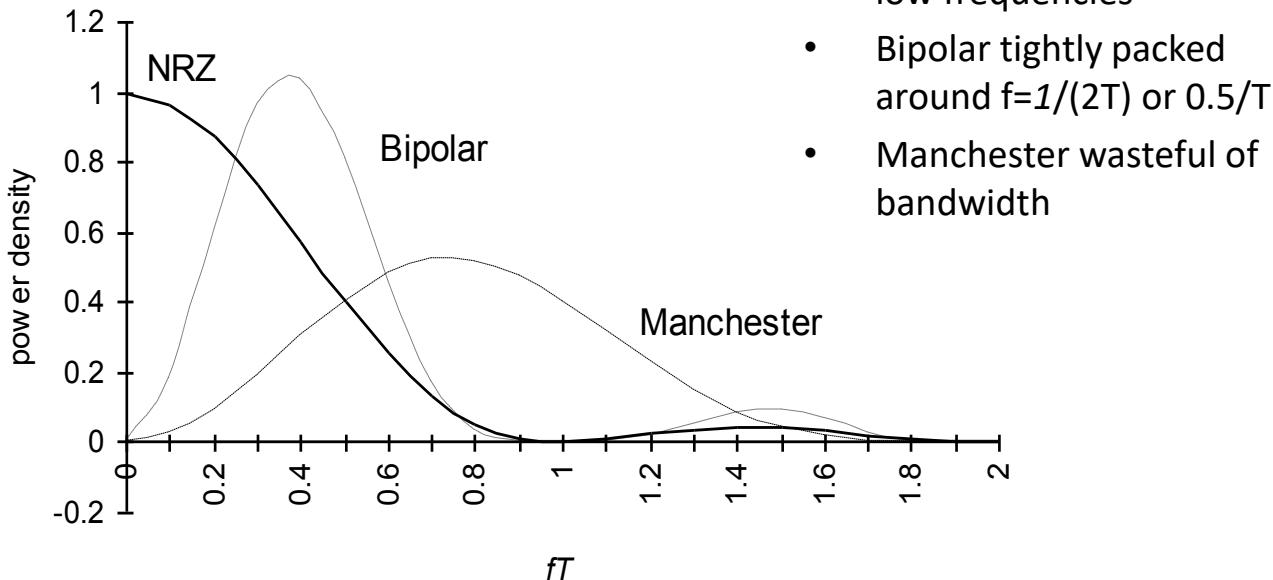

## Unipolar & Polar Non-Return-to-Zero (NRZ)

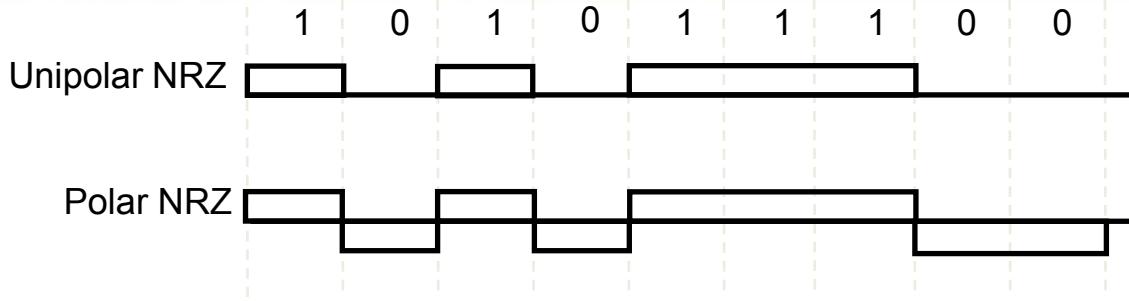


### Unipolar NRZ

- “1” maps to +A pulse
- “0” maps to no pulse
- High Average Power  
$$0.5*A^2 + 0.5*0^2 = A^2/2$$
- Long strings of A or 0
  - Poor timing
  - Low-frequency content
- Simple

### Polar NRZ


- “1” maps to +A/2 pulse
- “0” maps to -A/2 pulse
- Better Average Power  
$$0.5*(A/2)^2 + 0.5*(-A/2)^2 = A^2/4$$
- Long strings of +A/2 or -A/2
  - Poor timing
  - Low-frequency content
- Simple

# Bipolar Code

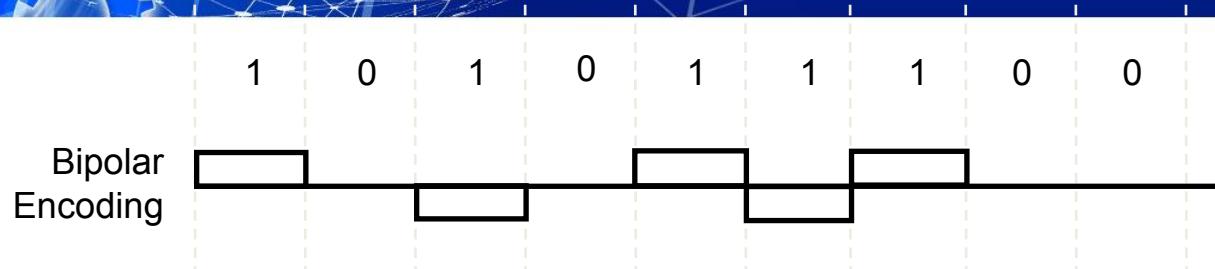


- Three signal levels:  $\{-A, 0, +A\}$
- “1” maps to  $+A$  or  $-A$  in alternation
- “0” maps to no pulse
  - Every  $+A$  pulse matched by  $-A$  pulse so little content at low frequencies
- String of 1s produces a square wave
  - Spectrum centered at around  $f=1/(2T)$  or  $0.5/T$
- Long string of 0s causes receiver to lose synchronization
- Zero-substitution codes are needed

## Manchester code & *mBnB* codes

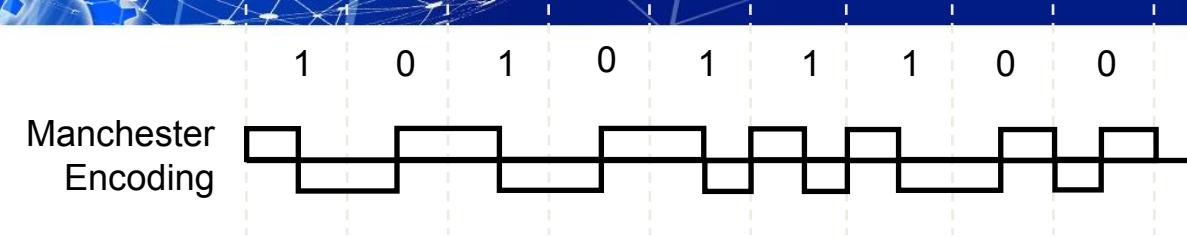

- “1” maps into  $A/2$  first  $T/2$ ,  $-A/2$  last  $T/2$
- “0” maps into  $-A/2$  first  $T/2$ ,  $A/2$  last  $T/2$
- Every interval has transition in middle
  - Timing recovery easy
  - Uses double the minimum bandwidth
- Simple to implement
- Used in 10-Mbps Ethernet & other LAN standards
- *mBnB* line code
- Maps block of  $m$  bits into  $n$  bits
- Manchester code is 1B2B code
- 4B5B code used in FDDI LAN
- 8B10b code used in Gigabit Ethernet
- 64B66B code used in 10G Ethernet

# Differential Coding

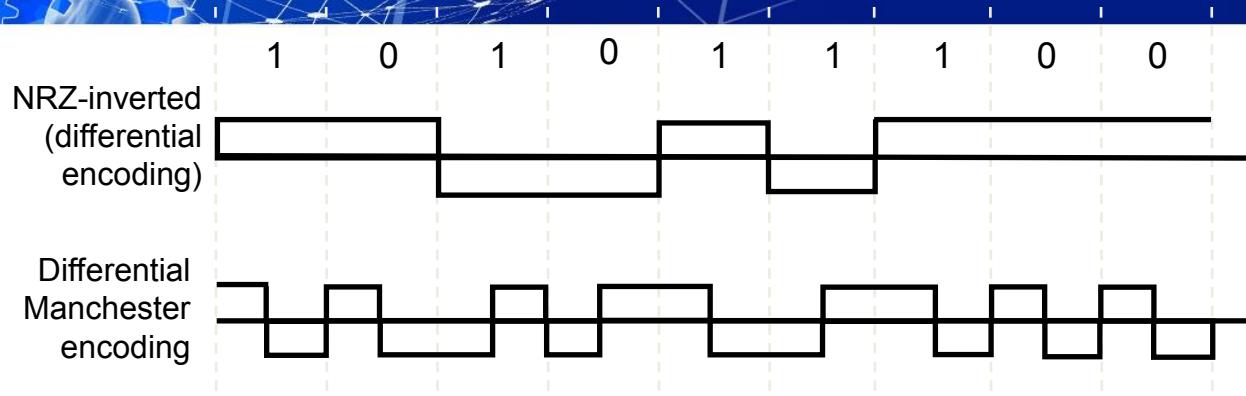


- Errors in some systems cause transposition in polarity, +A become -A and vice versa
  - All subsequent bits in Polar NRZ coding would be in error
- Differential line coding provides robustness to this type of error
- “1” mapped into transition in signal level
- “0” mapped into no transition in signal level
- Also used along with Manchester coding




## Transmission Medium

# What You Need for Better Understanding

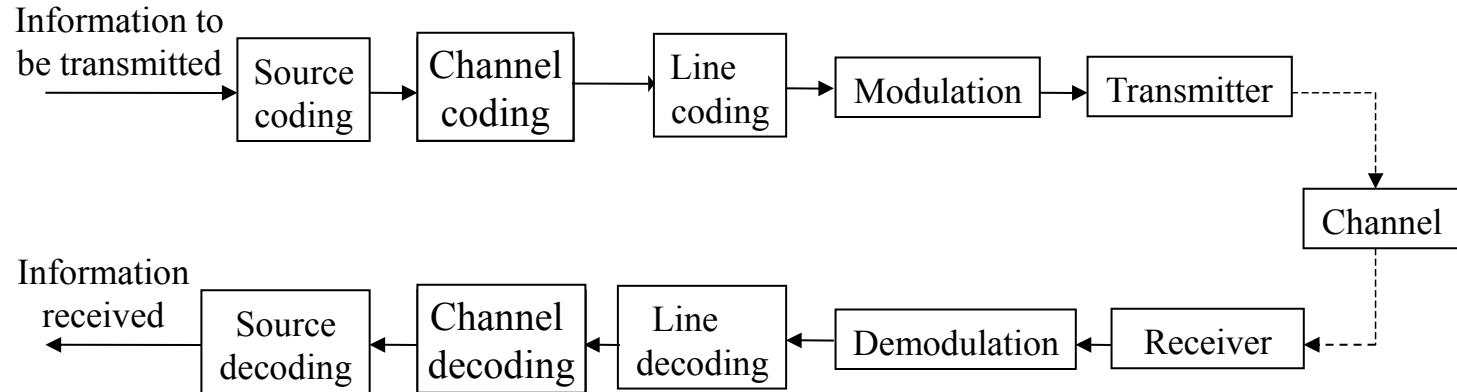

# Transmission Medium



- A transmission medium is a physical path or a **communication channel** that carries the information from the sender to the receiver

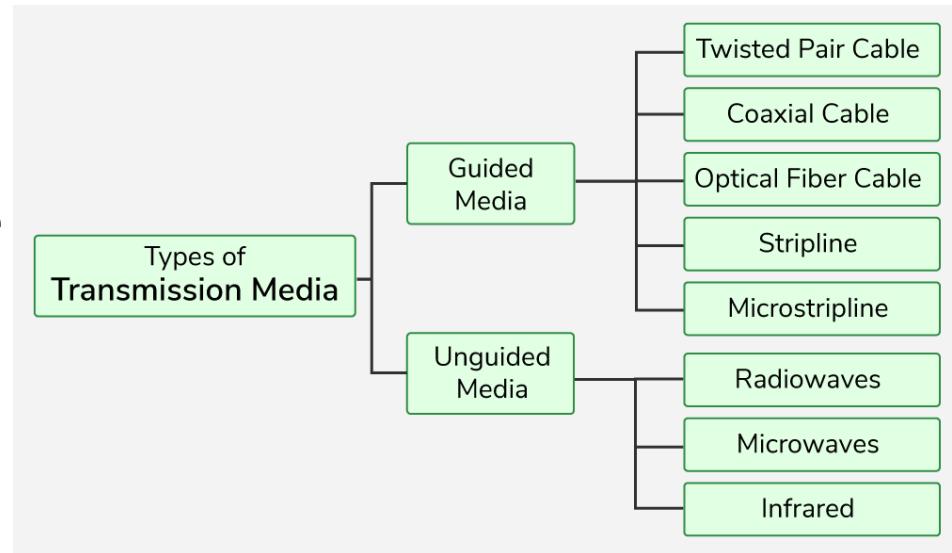

# Twisted Pair

## Twisted pair

- Two insulated copper wires arranged in a regular spiral pattern to minimize interference
- Various thicknesses, e.g. 0.016 inch (24 gauge)
- Low cost
- Telephone subscriber loop from customer to CO
- Old trunk plant connecting telephone COs
- Intra-building telephone from wiring closet to desktop
- In old installations, loading coils added to improve quality in 3 kHz band, but more attenuation at higher frequencies

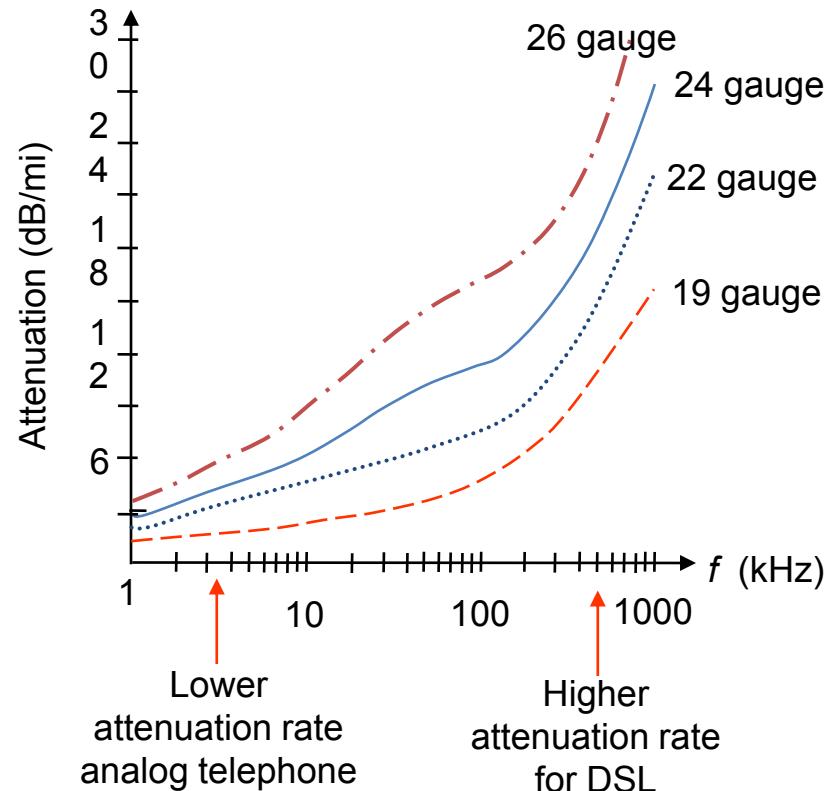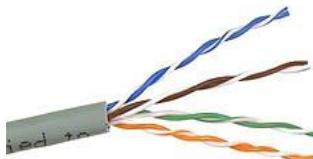




# Twisted Pair Bit Rates

*Data rates of 24-gauge twisted pair*

Standard	Data Rate	Distance
T-1	1.544 Mbps	18,000 feet, 5.5 km
DS2	6.312 Mbps	12,000 feet, 3.7 km
1/4 STS-1	12.960 Mbps	4500 feet, 1.4 km
1/2 STS-1	25.920 Mbps	3000 feet, 0.9 km
STS-1	51.840 Mbps	1000 feet, 300 m

- Twisted pairs can provide high bit rates at short distances
- Asymmetric Digital Subscriber Loop (ADSL)
  - High-speed Internet Access
  - Lower 3 kHz for voice
  - Upper band for data
  - 64 kbps inbound
  - 640 kbps outbound
- Much higher rates possible at shorter distances
  - Strategy for telephone companies is to bring fiber close to home & then twisted pair
  - Higher-speed access + video


# Ethernet LANs

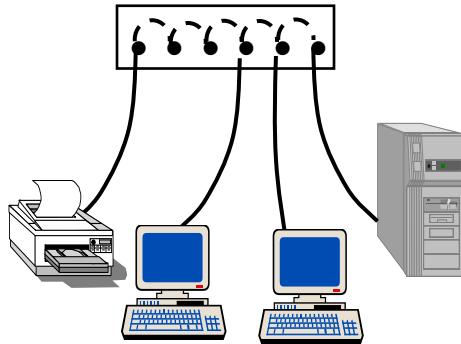


- Category 3 unshielded twisted pair (UTP): ordinary telephone wires
- Category 5 UTP: tighter twisting to improve signal quality
- Shielded twisted pair (STP): to minimize interference; costly
- 10BASE-T Ethernet
  - 10 Mbps, Baseband, Twisted pair
  - Two Category 3 UTPs
  - Manchester coding, 100 meters
- 100BASE-T4 *Fast* Ethernet
  - 100 Mbps, Baseband, Twisted pair
  - Four Category 3 UTPs
  - Three pairs for one direction at-a-time
  - 100/3 Mbps per pair;
  - Limited to 100 meters
- Category 5 & STP provide other options

# Coaxial Cable

- Cylindrical braided outer conductor surrounds insulated inner wire conductor
- High interference immunity
- Higher bandwidth than twisted pair
- Hundreds of MHz
- Cable TV distribution
- Long distance telephone transmission
- Original Ethernet LAN medium

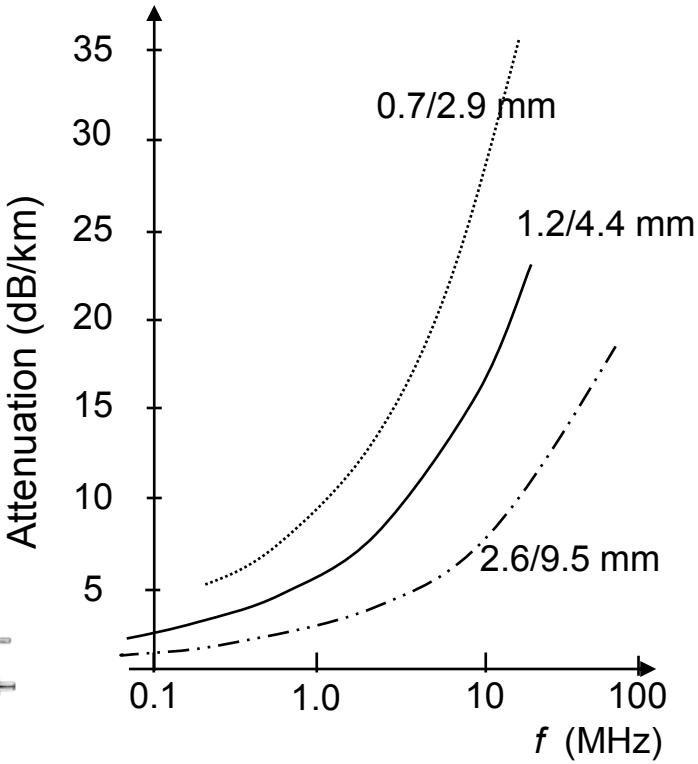


# Optical Fiber

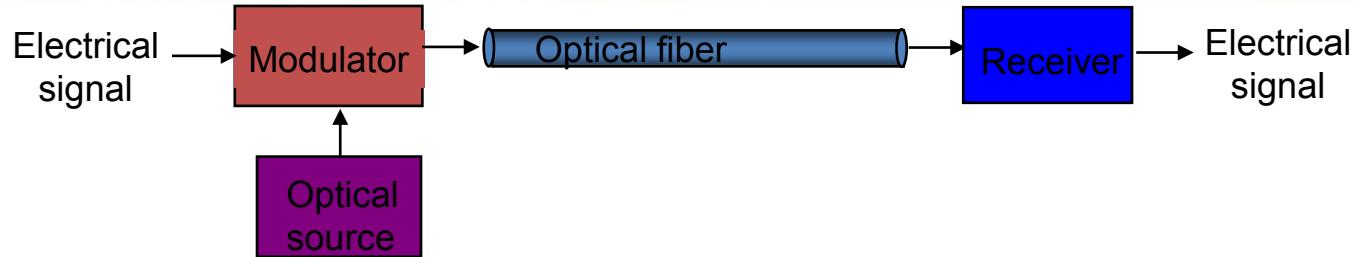


- Light sources (lasers, LEDs) generate pulses of light that are transmitted on optical fiber
  - Very long distances (>1000 km)
  - Very high speeds (>40 Gbps/wavelength)
  - Nearly error-free (BER of  $10^{-15}$ )
- Profound influence on network architecture
  - Dominates long distance transmission
  - Distance less of a cost factor in communications
  - Plentiful bandwidth for new services

# Transmission in Optical Fiber

Geometry of optical fiber

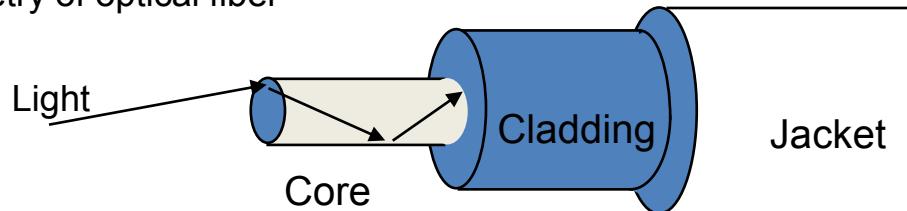


Total Internal Reflection in optical fiber

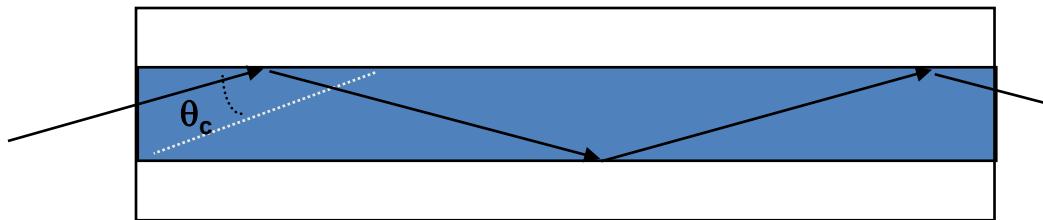


- Very fine glass cylindrical core surrounded by concentric layer of glass (cladding)
- Core has higher index of refraction than cladding
- Light rays incident at less than critical angle  $\theta_c$  is completely reflected back into the core

# Multimode & Single-mode Fiber

Multimode fiber: multiple rays follow different paths

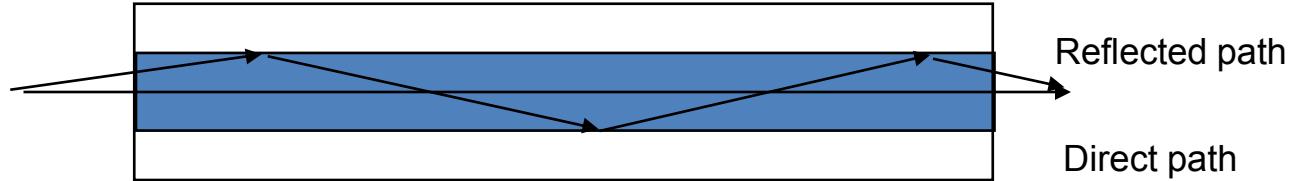

Single-mode fiber: only direct path propagates in fiber

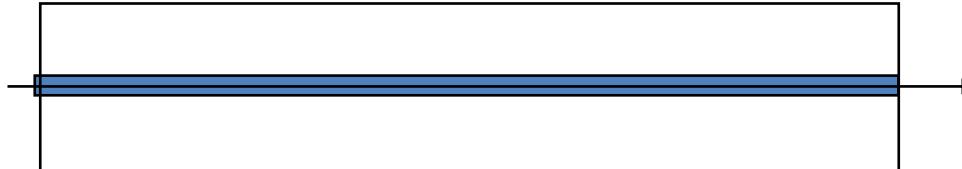

- Multimode: Thicker core, shorter reach
  - Rays on different paths interfere causing dispersion & limiting bit rate
- Single mode: Very thin core supports only one mode (path)
  - More expensive lasers, but achieves very high speeds



# Optical Fiber Properties

## Advantages

- ***Very low attenuation***
- ***Noise immunity***
- ***Extremely high bandwidth***
- Security: Very difficult to tap without breaking
- No corrosion
- More compact & lighter than copper wire



## Disadvantages


- New types of optical signal impairments & dispersion
  - Polarization dependence
  - Wavelength dependence
- Limited bend radius
  - If physical arc of cable too high, light lost or won't reflect
  - Will break
- Difficult to splice
- Mechanical vibration becomes signal noise

# Radio Transmission

**Radio transmission** sends information from one place to another through the air. The information is sent on radio waves

- (a) In the VLF, LF, and MF bands, radio waves follow the curvature of the earth.
- (b) In the HF band, they bounce off the ionosphere

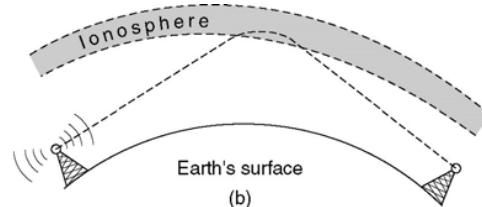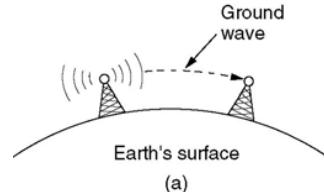

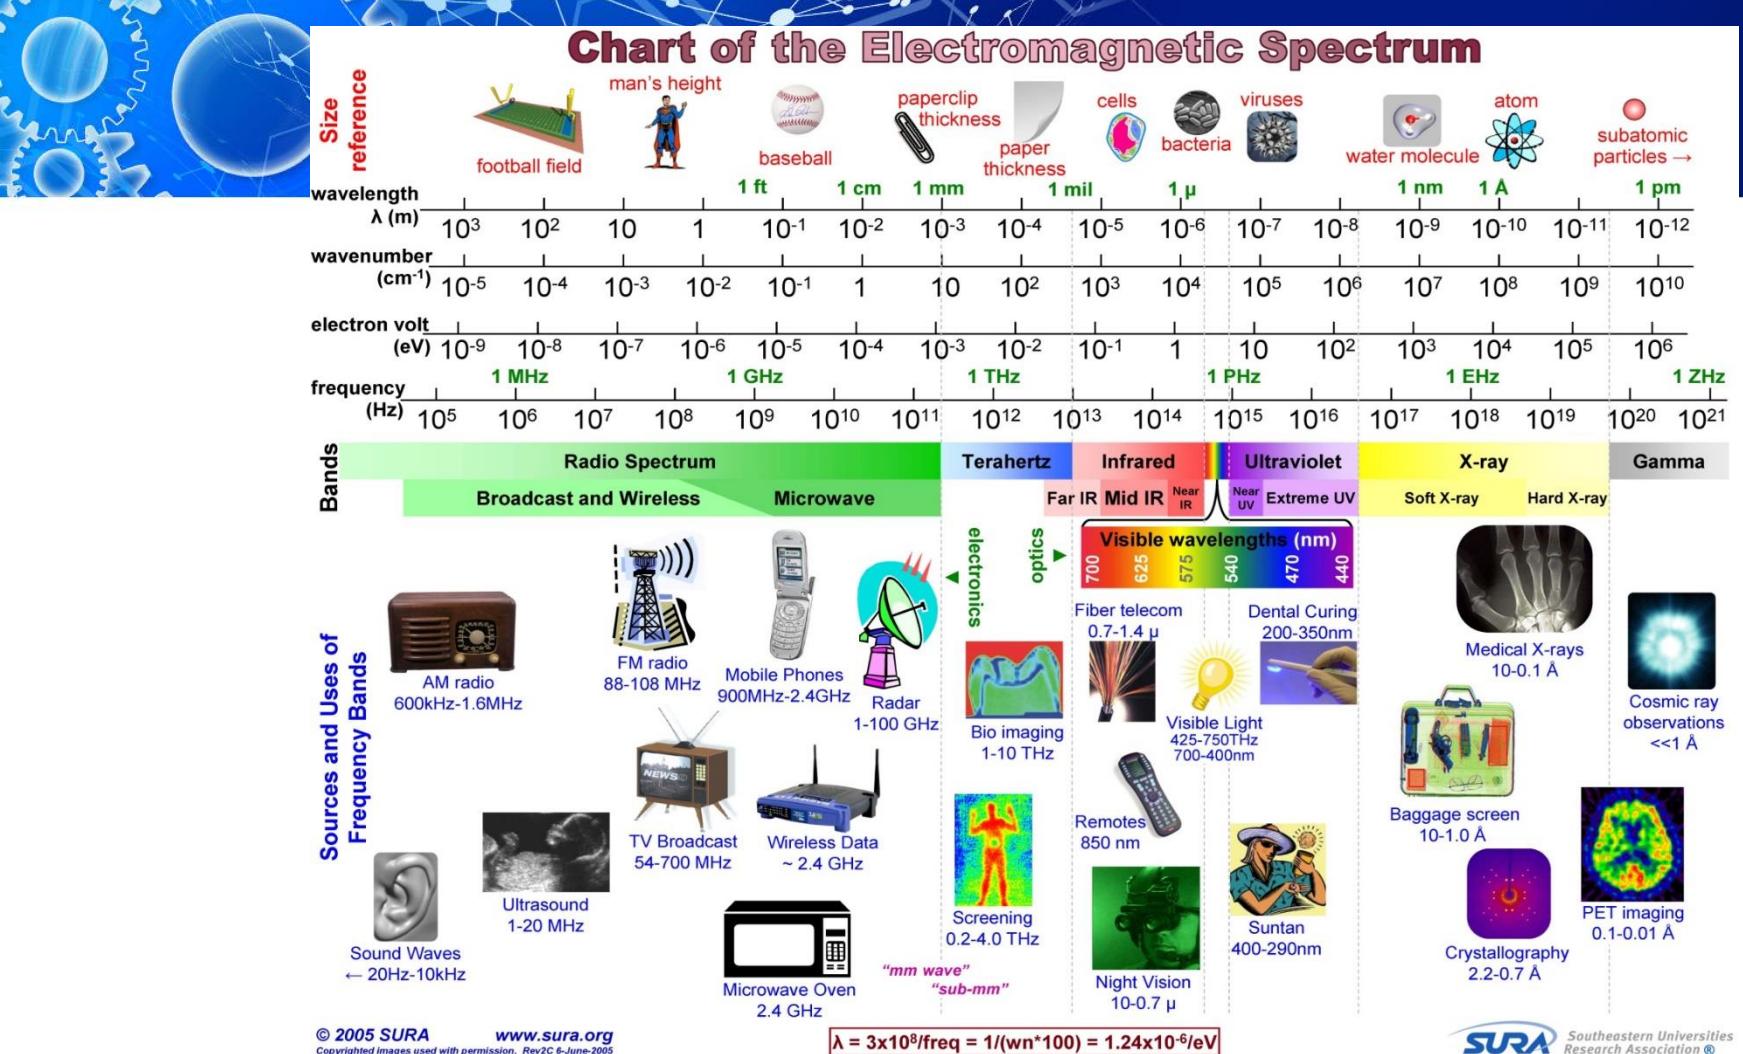



# Performance



# Performance

- Important metrics in networking
  - Bandwidth
  - Throughput
  - Latency (Delay)



# Bandwidth (again)

- In networking, we use the term bandwidth in two contexts.
- The first, bandwidth in hertz (or, analog bandwidth), refers to the range of frequencies in a composite signal or the range of frequencies that a channel can pass.
- The second, bandwidth in bps (or, digital bandwidth), refers to the speed of bit transmission in a channel or link.
- The bandwidth of a subscriber line is 4 kHz for voice or data. The bandwidth of this line for data transmission can be up to 56,000 bps using a sophisticated modem to change the digital signal to analog.



# Throughput

- The throughput is a measure of how fast we can actually send data through a network. A link may have a bandwidth of  $B$  bps, but we can only send  $T$  bps, where  $T \leq B$ .
- For example, we may have a link with a bandwidth of 1Mbps, but the devices connected to the end of the link may handle only 200kbps.



# Example

*A network with bandwidth of 10 Mbps can pass only an average of 12,000 frames per minute with each frame carrying an average of 10,000 bits. What is the throughput of this network?*

## **Solution**

*We can calculate the throughput as*

$$\text{Throughput} = \frac{12,000 \times 10,000}{60} = 2 \text{ Mbps}$$

*The throughput is almost one-fifth of the bandwidth in this case.*



# Delay

- The latency or delay defines how long it takes for an entire message to arrive at the destination from the first bit is sent out from the source.
- It is basically made of four components.
- Latency = propagation time +  
transmission time +  
queueing time +  
processing delay