TABLE OF CONTENTS

- 6.1 Creating Gain and Directivity
 - 6.1.1 Definitions
 - 6.1.2 Mutual Impedance
 - 6.1.3 Mutual Impedance and Gain
 - 6.1.4 Gain and Array Dimensions
- 6.2 Driven Arrays
 - 6.2.1 Current Distribution in Phased Arrays
- 6.3 Phased Array Techniques
 - 6.3.1 Overview
 - 6.3.2 Fundamentals of Phased Arrays
 - 6.3.3 Feeding Phased Arrays
 - 6.3.4 Common Phased Array Feed Systems
 - 6.3.5 Recommended Feed Methods for Amateur Arrays
- 6.4 Phased Array Design Examples
 - 6.4.1 General Array Design Considerations
 - 6.4.2 90° Fed, 90° Spaced Vertical Array
 - 6.4.3 A Three-Element Binomial Broadside Array
 - 6.4.4 A Four-Square Array
 - 6.4.5 A 4-Element Rectangular Array
 - 6.4.6 120° Fed, 60° Spaced Dipole Array
 - 6.4.7 Crossfire Receiving Array
- 6.5 Practical Aspects of Phased Array Design
 - 6.5.1 Adjusting Phased Array Feed Systems
 - 6.5.2 Directional Switching of Arrays
 - 6.5.3 Measuring the Electrical Length of Feed Lines
 - 6.5.4 Measuring Element Self and Mutual Impedances

6.6 Bibliography

Appendix A — *EZNEC* Examples

Chapter 6 — CD-ROM Content



Supplemental Articles

- Appendix B Manual Calculations for Arrays
- "A Wire Eight-Circle Array (for 7 MHz)" by Tony Preedy, G3LNP
- "A Study of Tall Verticals" by Al Christman, K3LC
- "Tall Vertical Arrays" by Al Christman, K3LC
- "The Simplest Phased Array Feed System That Works" by Roy Lewellan, W7EL

Support Files

• EZNEC modeling files for examples in this chapter

Multielement Arrays

6.1 CREATING GAIN AND DIRECTIVITY

The gain and directivity offered by an array of elements represents a worthwhile improvement both in transmitting and receiving. Power gain in an antenna is the same as an equivalent increase in the transmitter power. But unlike increasing the power of your own transmitter, antenna gain works equally well on signals received from the favored direction. In addition, the directivity reduces the strength of signals coming from the directions not favored, and so helps discriminate against interference.

One common method of obtaining gain and directivity is to combine the radiation from a group of $\lambda/2$ dipoles to concentrate it in a desired direction. A few words of explanation may help make it clear how power gain is obtained.

In **Figure 6.1**, imagine that the four circles, A, B, C and D, represent four dipoles so far separated from each other that the coupling between them is negligible. Also imagine that point P is so far away from the dipoles that the distance from P to each one is exactly the same (obviously P would have to be much farther away than it is shown in this drawing). Under these conditions the fields from all the dipoles will add up at

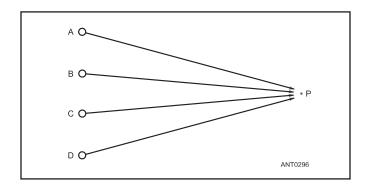


Figure 6.1 — Fields from separate antennas combine at a distant point, P, to produce a field strength that exceeds the field produced by the same power in a single antenna.

P if all four are fed RF currents in the same phase.

Let us say that a certain current, I, in dipole A will produce a certain value of field strength, E, at the distant point P. The same current in any of the other dipoles will produce the same field at P. Thus, if only dipoles A and B are operating, each with a current I, the field at P will be 2E. With A, B and C operating, the field will be 3E, and with all four operating with the same I, the field will be 4E. Since the power received at P is proportional to the square of the field strength, the relative power received at P is 1, 4, 9 or 16, depending on whether one, two, three or four dipoles are operating.

Now, since all four dipoles are alike and there is no coupling between them, the same power must be put into each in order to cause the current I to flow. For two dipoles the relative power input is 2, for three dipoles it is 3, for four dipoles 4, and so on. The actual gain in each case is the relative received (or output) power divided by the relative input power. Thus we have the results shown in **Table 6.1**. The power ratio is directly proportional to the number of elements used.

It is well to have clearly in mind the conditions under which this relationship is true:

- 1) The fields from the separate antenna elements must be in-phase at the receiving point.
- 2) The elements are identical, with equal currents in all elements.
 - 3) The elements must be separated in such a way that the

Comparison of Dipoles with Negligible Coupling (See Figure 6.1)

	Relative Output	Relative Input	Power	Gain in
Dipoles	Power	Power	Gain	dB
A only	1	1	1	0
A and B	4	2	2	3
A, B and C	9	3	3	4.8
A, B, C and D	16	4	4	6

current induced in one by another is negligible; that is, the radiation resistance of each element must be the same as it would be if the other elements were not there.

Very few antenna arrays meet all these conditions exactly. However, the power gain of a directive array using dipole elements with optimum values of element spacing is approximately proportional to the number of elements. Another way to say this is that a gain of approximately 3 dB will be obtained each time the number of elements is doubled, assuming the proper element spacing is maintained. It is possible, though, for an estimate based on this rule to be in error by a ratio factor of two or more (gain error of 3 dB or more), especially if mutual coupling is not negligible.

6.1.1 DEFINITIONS

Some definitions are repeated here from the **Antenna Fundamentals** chapter for the convenience of the reader. Refer to that chapter for more extensive discussion of basic concepts.

An *element* in a multi-element directive array is usually a $\lambda/2$ radiator or a $\lambda/4$ vertical element above ground. The length is not always an exact electrical half or quarter wavelength, because in some types of arrays it is desirable that the element show either inductive or capacitive reactance. However, the departure in length from resonance is ordinarily small (not more than 5% in the usual case) and so has no appreciable effect on the radiating properties of the element.

Antenna elements in multi-element arrays of the type considered in this chapter are always either *parallel*, as in **Figure 6.2A**, or *collinear* (end-to-end), as in Figure 6.2B. Figure 6.2C shows an array combining both parallel and collinear elements. The elements can be either horizontal or vertical, depending on whether horizontal or vertical polarization is desired. Except for space communications, there is seldom any reason for mixing polarization, so arrays are customarily constructed with all elements similarly polarized.

A *driven element* is one supplied power from the transmitter, usually through a transmission line. A parasitic element is one that obtains power solely through coupling to another element in the array because of its proximity to such an element.

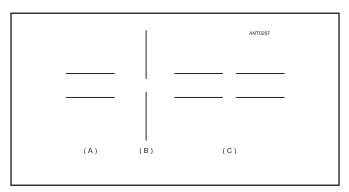


Figure 6.2 — At A, parallel and at B, collinear antenna elements. The array shown at C combines both parallel and collinear elements.

A *driven array* is one in which all the elements are driven elements. A *parasitic array* is one in which one or more of the elements are parasitic elements. At least one element must be a driven element, since you must somehow introduce power into the array.

A *broadside array* is one in which the principal direction of radiation is perpendicular to the axis of the array and to the plane containing the elements, as shown in **Figure 6.3**. The elements of a broadside array may be collinear, as in Figure 6.3A, or parallel (two views in Figure 6.3B).

An *end-fire array* is one in which the principal direction of radiation coincides with the direction of the array axis. This definition is illustrated in **Figure 6.4**. An end-fire array must consist of parallel elements. They cannot be collinear, as $\lambda/2$ elements do not radiate straight off their ends. A Yagi is a familiar form of an end-fire array.

A *bidirectional array* is one that radiates equally well in either direction along the line of maximum radiation. A bidirectional pattern is shown in **Figure 6.5A**. A *unidirectional array* is one that has only one principal direction of radiation, as the pattern in Figure 6.5B shows.

The *major lobes* of the directive pattern are those in which the radiation is a maximum. Lobes of lesser radiation intensity are called *side* or *minor* lobes. The *beamwidth* of a directive antenna is the width, in degrees, of the major lobe between the two directions at which the relative radiated power is equal to one half its value at the peak of the lobe. At these *half-power points* the field intensity is equal to 0.707 times its maximum value, or in other words, is down 3 dB from the maximum. **Figure 6.6** shows a lobe having a beamwidth of 30°.

Unless specified otherwise, the term gain as used in this

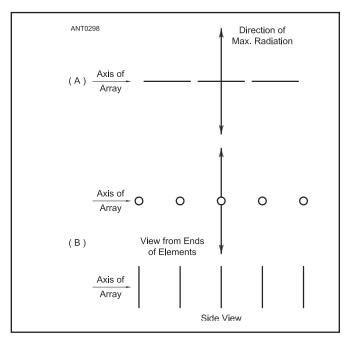


Figure 6.3 — Representative broadside arrays. At A, collinear elements, with parallel elements at B.

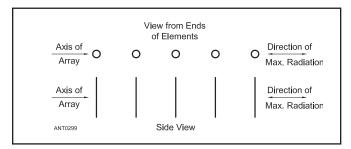


Figure 6.4 — An end-fire array. Practical arrays may combine both broadside directivity (Figure 6.3) and end-fire directivity, including both parallel and collinear elements.

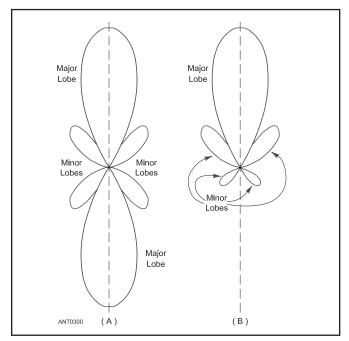


Figure 6.5 — At A, typical bidirectional pattern and at B, unidirectional directive pattern. These drawings also illustrate the application of the terms *major* and *minor* to the pattern lobes.

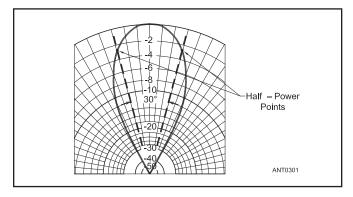


Figure 6.6 — The width of a beam is the angular distance between the directions at which the received or transmitted power is half the maximum power (–3 dB). Each angular division of the pattern grid is 5°.

section is the power gain over an isotropic radiator in free space. The gain can also be compared with a λ/2 dipole of the same orientation and height as the array under discussion and having the same power input. Gain may either be measured experimentally or determined by calculation. Experimental measurement is difficult and often subject to considerable error, for two reasons. First, errors normally occur in measurement because the accuracy of simple RF measuring equipment is relatively poor—even high-quality instruments suffer in accuracy compared with their low-frequency and dc counterparts. And second, the accuracy depends considerably on conditions—the antenna site, including height, terrain characteristics, and surroundings—under which the measurements are made.

Calculations are frequently based on the measured or theoretical directive patterns of the antenna. The theoretical gain of an array may be determined approximately from:

$$G \approx \frac{41253}{H_{3dB} \times E_{3dB}} \tag{1}$$

where

G = decibel gain over a dipole in its favored direction H_{3dB} = half-power beamwidth in degrees of the H-field pattern

 E_{3dB} = vertical half-power beamwidth in degrees of the E-field pattern.

This equation, strictly speaking, applies only to lossless antennas having approximately equal and narrow E- and H-plane beam widths — up to about 20° — and no large minor lobes. The error may be considerable when the formula is applied to simple directive antennas having relatively large beam widths. The error is in the direction of making the calculated gain larger than the actual gain.

Phase

The term *phase* has the same meaning when used in connection with the currents flowing in antenna elements as it does in ordinary circuit work. For example, two currents are in-phase when they reach their maximum values, flowing in the same direction, at the same instant. The direction of current flow depends on the way in which power is applied to the element.

This is illustrated in **Figure 6.7**. Assume that by some means an identical voltage is applied to each of the elements at the ends marked A. Assume also that the coupling between the elements is negligible, and that the instantaneous polarity of the voltage is such that the current is flowing away from the point at which the voltage is applied. The arrows show the assumed current directions. Then the currents in elements 1 and 2 are in-phase, since they are flowing in the same direction in space and are caused by the same voltage. However, the current in element 3 is flowing in the *opposite* direction in space because the voltage is applied to the opposite end of the element. The current in element 3 is therefore 180° out-of-phase with the currents in elements 1 and 2.

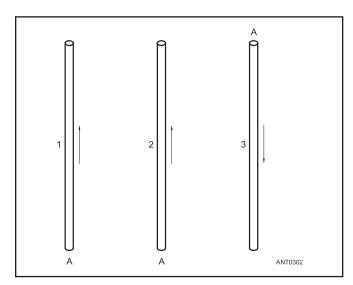


Figure 6.7 — This drawing illustrates the phase of currents in antenna elements, represented by the arrows. The currents in elements 1 and 2 are in phase, while that in element 3 is 180° out of phase with 1 and 2.

The phasing of driven elements depends on the direction of the element, the phase of the applied voltage, and the point at which the voltage is applied. In many systems used by amateurs, the voltages applied to the elements are exactly in or exactly out-of-phase with each other. Also, the axes of the elements are nearly always in the same direction, since parallel or collinear elements are invariably used. The currents in driven elements in such systems therefore are usually either exactly in or exactly out-of-phase with the currents in other elements. Reiterating from the **Antenna Fundamentals** chapter, it is important to distinguish between phase and *polarity*. Polarity is simply a convention that assigns a positive and negative direction or convention. Reversing the leads on a feed line reverses a signal's polarity.

It is possible to use phase differences of less than 180° in driven arrays. One important case is where the current in one set of elements differs by 90° from the current in another set. However, making provision for proper phasing in such systems is considerably more complex than in the case of simple 0° or 180° phasing, as described in a later section of this chapter.

In parasitic arrays the phase of the currents in the parasitic elements depends on the spacing and tuning, as described later.

Ground Effects

The effect of the ground is the same with a directive antenna as it is with a simple dipole antenna. The reflection factors discussed in the chapter **Effects of Ground** may therefore be applied to the vertical pattern of an array, subject to the same modifications mentioned in that chapter. In cases where the array elements are not all at the same height, the reflection factor for the mean height of the array may be used

for a close approximation. The mean height is the average of the heights measured from the ground to the centers of the lowest and highest elements.

6.1.2 MUTUAL IMPEDANCE

Consider two $\lambda/2$ elements that are fairly close to each other. Assume that power is applied to only one element, causing current to flow. This creates an electromagnetic field, which induces a voltage in the second element and causes current to flow in it as well. The current flowing in element 2 will in turn induce a voltage in element 1, causing additional current to flow there. The total current in 1 is then the sum (taking phase into account) of the original current and the induced current.

With element 2 present, the amplitude and phase of the resulting current in element 1 will be different than if element 2 were not there. This indicates that the presence of the second element has changed the impedance of the first. This effect is called *mutual coupling*. Mutual coupling results in a mutual impedance between the two elements. The mutual impedance has both resistive and reactive components. The actual impedance of an antenna element is the sum of its self-impedance (the impedance with no other antennas present) and its mutual impedances with all other antennas in the vicinity.

The magnitude and nature of the feed point impedance of the first antenna depends on the amplitude of the current induced in it by the second, and on the phase relationship between the original and induced currents. The amplitude and phase of the induced current depend on the spacing between the antennas and whether or not the second antenna is tuned to resonance.

In the discussion of the several preceding paragraphs, power is applied to only one of the two elements. Do not interpret this to mean that mutual coupling exists only in parasitic arrays! It is important to remember that mutual coupling exists between any two conductors that are located near one another.

Amplitude of Induced Current

The induced current will be largest when the two antennas are close together and are parallel. Under these conditions the voltage induced in the second antenna by the first, and in the first by the second, has its greatest value and causes the largest current flow. The coupling decreases as the parallel antennas are moved farther apart.

The coupling between collinear antennas is comparatively small, and so the mutual impedance between such antennas is likewise small. It is not negligible, however.

Phase Relationships

When the separation between two antennas is an appreciable fraction of a wavelength a measurable period of time elapses before the field from antenna 1 reaches antenna 2. There is a similar time lapse before the field set up by the current in number 2 gets back to induce a current in number 1. Hence the current induced in antenna 1 by antenna 2 will have

a phase relationship with the original current in antenna 1 that depends on the spacing between the two antennas.

The induced current can range all the way from being completely in-phase with the original current to being completely out-of-phase with it. If the currents are in-phase, the total current is larger than the original current and the antenna feed point impedance is reduced. If the currents are out-of-phase, the total current is smaller and the impedance is increased. At intermediate phase relationships the impedance will be lowered or raised depending on whether the induced current is mostly in or mostly out-of-phase with the original current.

Except in the special cases when the induced current is exactly in or out-of-phase with the original current, the induced current causes the phase of the total current to shift with respect to the applied voltage. Consequently, the presence of a second antenna nearby may cause the impedance of an antenna to be reactive — that is, the antenna will be detuned from resonance — even though its self-impedance is entirely resistive. The amount of detuning depends on the magnitude and phase of the induced current.

Tuning Conditions

A third factor that affects the impedance of antenna 1 when antenna 2 is present is the tuning of number 2. If antenna 2 is not exactly resonant, the current that flows in it as a result of the induced voltage will either lead or lag the phase it would have if the antenna were resonant. This causes an additional phase advance or delay that affects the phase of the current induced back in antenna 1. Such a phase lag has an effect similar to a change in the spacing between self-resonant antennas. However, a change in tuning is not exactly equivalent to a change in spacing because the two methods do not have the same effect on the amplitude of the induced current.

6.1.3 MUTUAL IMPEDANCE AND GAIN

The mutual coupling between antennas is important because it can have a significant effect on the amount of current that will flow for a given amount of power supplied. And it is the amount of *current* flowing that determines the field strength from the antenna. Other things being equal, if the mutual coupling between two antennas is such that the currents are greater for the same total power than would be the case if the two antennas were not coupled, the power gain will be greater than that shown in Table 6.1.

On the other hand, if the mutual coupling is such as to reduce the current, the gain will be less than if the antennas were not coupled. The term *mutual coupling*, as used in this paragraph, assumes that the mutual impedance between elements is taken into account, along with the added effects of propagation delay because of element spacing and element tuning or phasing.

The calculation of mutual impedance between antennas is a complex problem. Data for two simple but important cases are graphed in Figures 6.8 and 9. These graphs do not show the mutual impedance, but instead show a more useful

quantity — the feed point resistance measured at the center of an antenna as it is affected by the spacing between two antennas.

As shown by the solid curve in **Figure 6.8**, the feed point resistance at the center of either antenna, when the two are *self-resonant*, parallel, and operated in-phase, decreases as the spacing between them is increased until the spacing is about 0.7λ . This is a broadside array. The maximum gain is achieved from a pair of such elements when the spacing is in this region, because the current is larger for the same power and the fields from the two elements arrive in-phase at a distant point placed on a line perpendicular to the line joining the two antennas. (Self-resonance means the antenna is resonant in the absence of mutual coupling with any other antenna.)

The dashed line in Figure 6.8, representing two antennas operated 180° out-of-phase (end-fire), cannot be interpreted quite so simply. The feed point resistance decreases with spacing decreasing less than about $0.6~\lambda$ in this case. However, for the range of spacings considered, only when the spacing is $0.5~\lambda$ do the fields from the two antennas add up exactly in phase at a distant point in the favored direction. At smaller spacings the fields become increasingly out-of-phase, so the total field is less than the simple sum of the two. Smaller spacings thus decrease the gain at the same time that the reduction in feed point resistance is increasing it. For a lossless antenna, the gain goes through a maximum when the spacing is in the region of $\frac{1}{8}~\lambda$.

The feed point resistance curve for two collinear elements in-phase, **Figure 6.9**, shows that the feed point resistance decreases and goes through a broad minimum in the region of 0.4 to 0.6λ spacing between the adjacent ends of the antennas. As the minimum is not significantly less than the feed point resistance of an isolated antenna, the gain will not exceed the gain calculated on the basis of uncoupled

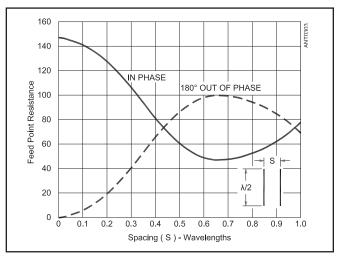


Figure 6.8 — Feed point resistance measured at the center of one element as a function of the spacing between two parallel $\frac{1}{2}$ - λ self-resonant antenna elements. For ground-mounted $\frac{1}{2}$ - λ vertical elements, divide these resistances by two.

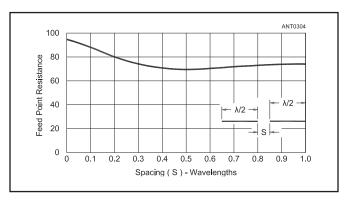


Figure 6.9 — Feed point resistance measured at the center of one element as a function of the spacing between the ends of two collinear self-resonant $\frac{1}{2}$ - λ antenna elements operated in phase.

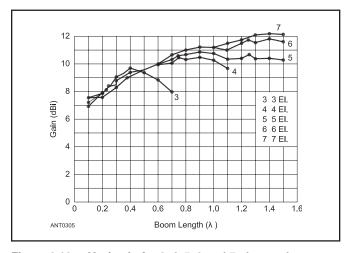


Figure 6.10 — Yagi gain for 3, 4, 5, 6 and 7-element beams as a function of boom length. (From *Yagi Antenna Design*, J. Lawson, W2PV.)

antennas. That is, the best that two collinear elements will give, even with optimum spacing, is a power gain of about 2 (3 dB). When the separation between the ends is very small—the usual method of operation—the gain is reduced.

6.1.4 GAIN AND ARRAY DIMENSIONS

The gain of an array is principally determined by the dimensions of the array, so long as there are a minimum number of elements. A good example of this is the relationship between boom length, gain and number of elements for an array such as a Yagi. Figure 6.10 compares the gain versus boom length for Yagis with different numbers of elements. For given number of elements, notice that the gain increases as the boom length increases, up to a maximum. Beyond this point, longer boom lengths result in less gain for a given number of elements. This observation does not mean that it is always desirable to use only the minimum number of elements. Other considerations of array performance, such as front-to-back ratio, minor lobe amplitudes or operating bandwidth, may make it advantageous to use more than the minimum number of elements for a given array length. A specific example of this is presented in a later section in a comparison between a half-square, a bobtail curtain and a Bruce array.

In a broadside array the gain is a function of both the length and width of the array. The gain can be increased by adding more elements (with additional spacing) or by using longer elements ($>\lambda/2$), although the use of longer elements requires proper attention to current phase in the elements. In general, in a broadside array the element spacing that gives maximum gain for a minimum number of elements, is in the range of 0.5 to 0.7 λ . Broadside arrays with elements spaced for maximum gain will frequently have significant side lobes and associated narrowing of the main lobe beamwidth. Side lobes can be reduced by using more than the minimum number of elements, spaced closer than the maximum gain distance.

Additional gain can be obtained by expanding the array into a third dimension. An example of this is the stacking of end-fire arrays in a broadside configuration. In the case of stacked short end-fire arrays, maximum gain occurs with spacings in the region of 0.5 to 0.7 λ . However, for longer higher-gain end-fire arrays, larger spacing is required to achieve maximum gain. This is important in VHF and UHF arrays, which often use long-boom Yagis.

6.2 DRIVEN ARRAYS

Definitions in the preceding section apply to multi-element arrays of both types, driven and parasitic. However, there are special considerations for driven arrays that do not necessarily apply to parasitic arrays, and vice versa. Such considerations for Yagi and quad parasitic arrays are presented in the **HF Yagi and Quad Antennas** chapter. The remainder of this chapter is devoted to driven arrays.

Driven arrays in general are either broadside or end-fire, and may consist of collinear elements, parallel elements, or a combination of both. From a practical standpoint, the maximum number of usable elements depends on the frequency and the space available for the antenna. Fairly elaborate arrays, using as many as 16 or even 32 elements, can be installed in a rather small space when the operating frequency is in the VHF range and more at UHF. At lower frequencies the construction of antennas with a large number of elements is impractical for most amateurs.

Of course the simplest of driven arrays is one with just two elements. If the elements are collinear, they are always fed in-phase. The effects of mutual coupling are not great, as illustrated in Figure 6.9. Therefore, feeding power to each element in the presence of the other presents no significant problems. This may not be the case when the elements are parallel to each other. However, because the combination of spacing and phasing arrangements for parallel elements is infinite, the number of possible radiation patterns is endless.

This is illustrated in **Figure 6.11**. When the elements are fed in-phase, a broadside pattern always results. At spacings of less than $\frac{5}{6}$ λ with the elements fed 180° out-of-phase, an end-fire pattern always results. With intermediate amounts of phase difference, the results cannot be so simply stated. Patterns evolve that are not symmetrical in all four quadrants.

Because of the effects of mutual coupling between the two driven elements, for a given power input greater or lesser currents will flow in each element with changes in spacing and phasing, as described earlier. This, in turn, affects the gain of the array in a way that cannot be shown merely by plotting the *shapes* of the patterns, as has been done in Figure 6.11. Therefore, supplemental gain information is also shown in Figure 6.11, adjacent to the pattern plot for each combination of spacing and phasing. The gain figures shown are referenced to a single element. For example, a pair of elements fed 90° out of phase with a spacing of $\lambda/4$ will have a gain in the direction of maximum radiation of 3.1 dB over a single element.

6.2.1 CURRENT DISTRIBUTION IN PHASED ARRAYS

In the plots of Figure 6.11, the two elements are assumed to be identical and self-resonant. In addition, currents of equal amplitude are assumed to be flowing at the feed point of each element, a condition that most often will not exist in practice without devoting special consideration to the feeder system. Such considerations are discussed in the next section of this chapter.

Most literature for radio amateurs concerning phased arrays is based on the assumption that if all elements in the array

are identical, the *current distribution* in all the elements will be identical. This distribution is presumed to be that of a single, isolated element, or nearly sinusoidal. However, information published in the professional literature as early as the 1940s indicates the existence of dissimilar current distributions among the elements of phased arrays. (See Harrison and King references in the Bibliography.) Lewallen, in July 1990 *QST*, pointed out the causes and effects of dissimilar current distributions.

In essence, even though the two elements in a phased array may be identical and have exactly equal currents of the desired phase flowing at *the feed point*, the amplitude and phase relationships degenerate with departure from the feed point. This happens any time the phase relationship is not 0° or 180° . Thus, the field strengths produced at a distant point by the individual elements may differ. This is because the field from each element is determined by the *distribution* of the current, as well as its magnitude and phase.

The effects are minimal with shortened elements — verticals less than $\lambda/4$ or dipoles less than $\lambda/2$ long. The effects on radiation patterns begin to show at the above resonant lengths, and become profound with longer elements — $\lambda/2$ or longer verticals and 1 λ or longer center-fed elements. These effects are less pronounced with thin elements. The amplitude and phase degeneration takes place because the currents in the array elements are not sinusoidal. Even in two-element arrays with phasing of 0° or 180° , the currents are not sinusoidal, but in these two special cases they do remain identical.

The pattern plots of Figure 6.11 take element current distributions into account. The visible results of dissimilar distributions are incomplete nulls in some patterns and the development of very small minor lobes in others. For example, the pattern for a phased array with 90° spacing and 90° phasing has traditionally been published in amateur literature as a cardioid with a perfect null in the rear direction. Figure 6.11, calculated for 7.15-MHz self-resonant dipoles of #12 AWG wire in free space, shows a minor lobe at the rear and only a 33-dB front-to-back ratio.

It is characteristic of broadside arrays that the power gain is proportional to the length of the array but is substantially independent of the number of elements used, provided the optimum element spacing is not exceeded. This means, for example, that a five-element array and a six-element array will have the same gain, provided the elements in both are spaced so the overall array length is the same. Although this principle is seldom used for the purpose of reducing the number of elements because of complications introduced in feeding power to each element in the proper phase, it does illustrate the fact that there is nothing to be gained, in terms of more gain, by increasing the number of elements if the space occupied by the antenna is not increased proportionally.

Generally speaking, the maximum gain in the smallest linear dimensions will result when the antenna combines both broadside and end-fire directivity and uses both parallel and collinear elements. In this way the antenna is spread over a greater volume of space, which has the same effect as extending its length to a much greater extent in one linear direction.


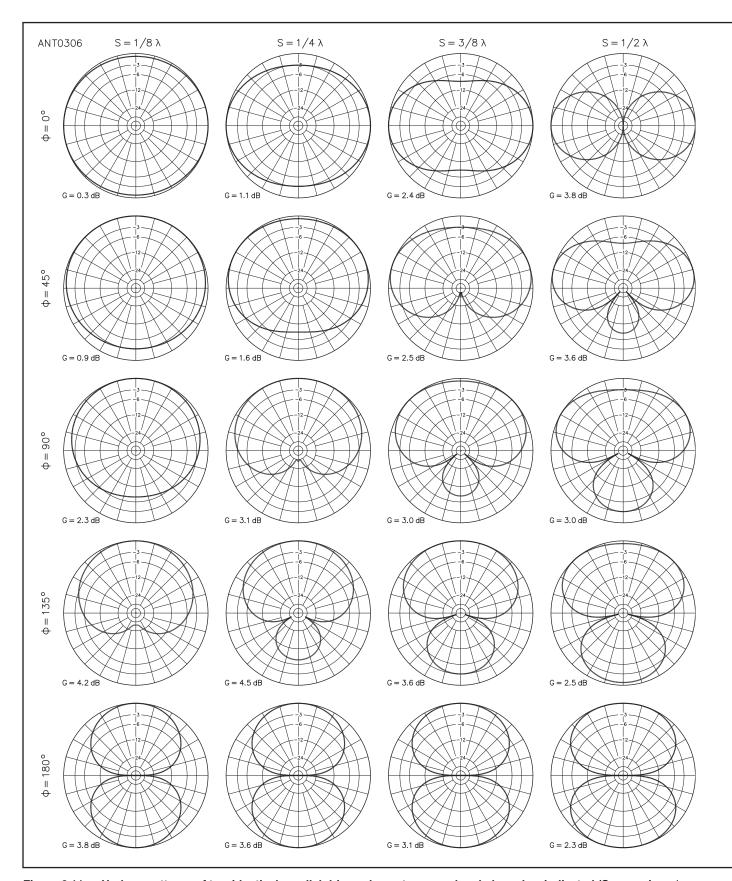


Figure 6.11 — H-plane patterns of two identical parallel driven elements, spaced and phased as indicated (S = spacing, ϕ = phasing). The elements are aligned with the vertical (0°-180°) axis, and the element nearer the 0° direction (top of page) is of lagging phase at angles other than 0°. The two elements are assumed to be thin and self-resonant, with equal-amplitude currents flowing at the feed point. See text regarding current distributions. The gain figure associated with each pattern

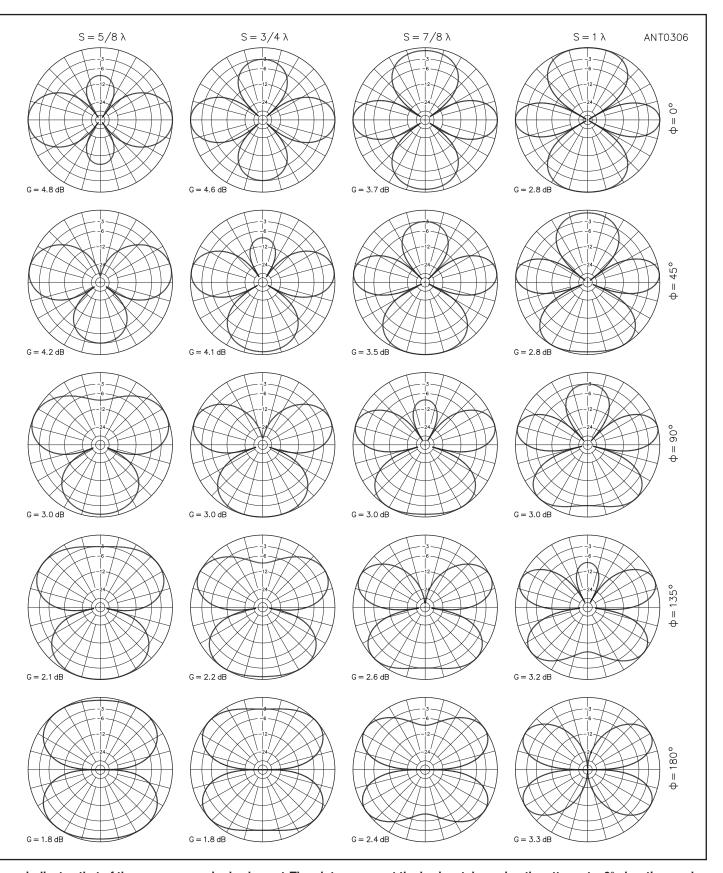

indicates that of the array over a single element. The plots represent the horizontal or azimuth pattern at a 0° elevation angle of two $\frac{1}{4}$ - λ vertical elements over a perfect conductor, or the free-space vertical or elevation pattern of two horizontal $\frac{1}{2}$ - λ elements when viewed on end, with one element above the other. (Patterns computed with *ELNEC* — the predeccessor to *EZNEC*.)

6.3 PHASED ARRAY TECHNIQUES

Phased antenna arrays have become increasingly popular for amateur use, particularly on the lower frequency bands, where they provide one of the few practical methods to obtain substantial gain and directivity. This section on phased-array techniques was written by Roy Lewallen, W7EL, and updated for this edition.

The operation and limitations of phased arrays, how to design feed systems to make them work properly and how to make necessary tests and adjustments are discussed in the pages that follow. The examples deal primarily with vertical HF arrays, but the principles apply to VHF/UHF arrays and arrays made from other element types as well.

6.3.1 OVERVIEW

Much of this chapter is devoted to techniques for feeding phased arrays. Many people who have a limited acquaintance with phased array techniques believe this is a simple problem, consisting only of connecting array elements through "phasing lines" consisting of transmission lines of the desired electrical lengths. Unfortunately, except for a very few special cases, this approach won't achieve the desired array pattern.

Other proposed universal solutions, such as hybrid couplers or Wilkinson or other power dividers, also usually fail to achieve the necessary phasing. These approaches sometimes produce — often more by accident than design — results good enough to mislead the user into believing that the simple approach is working as planned. Confusion can result when an approach fails to work in different circumstances. This section will explain why the simple solutions don't work as often thought, and how to design feed systems that do consistently produce the desired results.

Very briefly, the reason why the simple phasing line approach fails is that the delay of current or voltage in a transmission line equals the line's electrical length only if the line is terminated in its characteristic impedance. And in phased arrays, element feed point impedances are profoundly affected by mutual coupling.

Consequently, even if each element has the correct impedance when isolated, it won't when all elements are excited. Furthermore, transmission lines that are not terminated in their characteristic impedance will transform both the voltage and current magnitude. The net result is that the array elements will have neither the correct magnitudes nor phases of current necessary for proper operation except in a few special cases. This isn't a minor effect of concern only to perfectionists, but often a major one that causes significant pattern distortion and poor or mis-located nulls. The problem is examined in greater depth later.

Power dividers and hybrid couplers also fail to achieve the desired result for different reasons which will be discussed below although in one common application hybrid couplers fortuitously provide results that are acceptable to many users. This chapter will show how to design array feed systems that will produce predicted element currents and array patterns.

Various EZNEC models are provided to illustrate con-

cepts presented in this chapter. The models are included on the CD-ROM that accompanies this book, and they may be used with the demo version of *EZNEC* v. 6 available from **www.eznec.com**.Step-by-step instructions for the examples are given in **Appendix A**.

6.3.2 FUNDAMENTALS OF PHASED ARRAYS

The performance of a phased array is determined by several factors. Most significant among these are the characteristics of a single element, reinforcement or cancellation of the fields from the elements and the effects of mutual coupling. To understand the operation of phased arrays, it is first necessary to understand the operation of a single antenna element.

Of primary importance is the strength of the field produced by the element. The field radiated from a linear (straight) element, such as a dipole or vertical monopole, is proportional to the sum of the elementary currents flowing in each part of the antenna element. For this discussion it is important to understand what determines the current in a single element.

The amount of current flowing at the base of a ground mounted vertical or ground-plane antenna is given by the familiar formula

$$I = \sqrt{\frac{P}{R}}$$
 (2)

where

P is the power supplied to the antenna R is the feed point resistance.

R consists of two parts, the loss resistance and the radiation resistance. The loss resistance, R_L , includes losses in the conductor, in the matching and loading components and dominantly (in the case of ground-mounted verticals) in ground losses. The power "dissipated" in the radiation resistance, R_r , is actually the power that is radiated, so maximizing the power dissipated by the radiation resistance is desirable. However, the power "dissipated" in the loss resistance truly is lost as heat, so resistive losses should be made as small as possible.

The radiation resistance of an element can be derived from electromagnetic field theory, being a function of antenna length, diameter and geometry. Graphs of radiation resistance versus antenna length are given in the **Dipoles and Monopoles** chapter. The radiation resistance of a thin resonant $\lambda/4$ ground-mounted vertical is about 36 Ω . A resonant $\lambda/2$ dipole in free space has a radiation resistance of twice this amount, about 73 Ω . Reducing the antenna lengths by one-half drops the radiation resistances to approximately 7 and 14 Ω , respectively.

The radiation resistance of a large variety of antennas can easily be determined by using *EZNEC*. The radiation resistance is simply the feed point resistance (the resistive part of the feed point impedance) when all losses have been set to zero.

Radiation Efficiency

To generate a stronger field from a given radiator, it is necessary to increase the power P (the brute-force solution), decrease the loss resistance $R_{\rm L}$ (by putting in a more elaborate ground system for a vertical, for instance) or to somehow decrease the radiation resistance $R_{\rm r}$ so more current will flow with a given power input. This can be seen by expanding the formula for base current as

$$I = \sqrt{\frac{P}{R_R + R_L}} \tag{3}$$

Splitting the feed point resistance into components R_r and R_L easily leads to an understanding of element efficiency. The efficiency of an element is the proportion of the total power that is actually radiated. The roles of R_r and R_L in determining efficiency can be seen by analyzing a simple equivalent circuit, shown in **Figure 6.12**.

The power dissipated in R_r (the radiated power) equals I^2R_r . The total power supplied to the antenna system is

$$P = I^2 (R_r + R_L) \tag{4}$$

so the efficiency (the fraction of supplied power that is actually radiated) is

Eff
$$(\eta) = \frac{I^2 R_r}{I^2 (R_r + R_L)} = \frac{Rr}{R_r + R_L}$$
 (5)

Efficiency is frequently expressed in percent, but expressing it in decibels relative to a 100%-efficient radiator gives a better idea of what to expect in the way of signal strength. The field strength of an element relative to a lossless but otherwise identical element, in dB, is

$$FSG = 10 \log \frac{R_r}{R_r + R_L} \tag{6}$$

where FSG = field strength gain in dB.

For example, information presented by Sevick in March 1973 *QST* shows that a $\lambda/4$ ground-mounted vertical antenna with four 0.2- λ radials has a feed point resistance of about 65 Ω (see the Bibliography at the end of this chapter). The

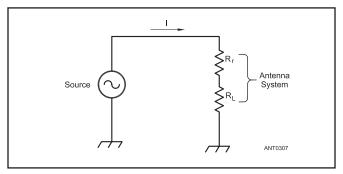


Figure 6.12 — Simplified equivalent circuit for a single-element resonant antenna. $R_{\rm r}$ represents the radiation resistance, and $R_{\rm L}$ the ohmic losses in the total antenna system.

efficiency of such a system is 36/65 = 55.4%. It is rather disheartening to think that, of 100 W fed to the antenna, only 55 W is being radiated, with the remainder literally warming up the ground. Yet the signal will be only $10 \log (36/65) = -2.57$ dB relative to the same vertical with a perfect ground system. In view of this information, trading a small reduction in signal strength for lower cost and greater simplicity may become an attractive consideration.

So far, only the current at the base of a resonant antenna has been discussed, but the field is proportional to the sum of currents in each tiny part of the antenna. The field is a function of not only the magnitude of current flowing at the feed point, but also the distribution of current along the radiator and the length of the radiator. Nothing can be done at the feed point to change the current distribution, so for a given element the field strength is proportional to the feed point current. However, changing the radiator length or loading it at some point other than the feed point will change the current distribution.

More information on shortened or loaded radiators may be found in the **Antenna Fundamentals** and **Single-Band MF and HF Antennas** and in the Bibliography references of this chapter. The current distribution is also changed by mutual coupling to other array elements, although for most arrays this has only a minor effect on the pattern. This is discussed later in more detail. A few other important facts follow.

1) If there is no loss, the field from even an infinitesimally short radiator is less than $\frac{1}{2}$ dB weaker than the field from a half-wave dipole or quarter-wave vertical. Without loss, all the supplied power is radiated regardless of the antenna length, so the only factor influencing gain is the slight difference in the patterns of very short and $\frac{\lambda}{2}$ antennas. The small pattern difference arises from different current distributions. A short antenna has a very low radiation resistance, resulting in a heavy current flow over its short length. In the absence of loss, this generates a field strength comparable to that of a longer antenna. Where loss is present — that is, in practical antennas — shorter radiators usually don't do so well, since the low radiation resistance leads to lower efficiency for a given loss resistance. Nevertheless, reasonably short antennas can achieve good efficiency if care is taken.

2) Caution must be used in calculating the efficiency of folded antennas. Folding transforms both the radiation resistance and loss resistance by the same factor, so their ratio and therefore the efficiency remains the same. It's easy to show that in a ground-mounted vertical array, folding reduces the current flowing from the feed line to the ground system by a factor of two due to the impedance transformation. However, the folded antenna has an additional connection to ground, which also carries half the original ground current. The result is that the same amount of current flows into the ground system, whether unfolded or folded, resulting in the same ground system loss. Analyses purporting to show otherwise invariably transform the radiation resistance but neglect to also transform the loss resistance and reach an incorrect conclusion.

3) The current flowing in an element with a given power input can be increased or decreased by mutual coupling to other elements. The effect is equivalent to changing the element radiation resistance. Mutual coupling is sometimes thought of as a minor effect, but often it is not minor!

Field Reinforcement and Cancellation

The mechanism by which phased arrays produce gain, and the role of mutual coupling in determining gain, were covered earlier in this chapter. One important point that can't be emphasized enough is that all antennas must abide by the law of *conservation of energy*. No antenna can radiate more power than supplied to it. The total amount of power it radiates is the amount it's supplied, less the amount lost as heat. This is true of all antennas, from the smallest "rubber ducky" to the most gigantic array.

Gain

Gain is strictly a relative measure, so the term is completely meaningless unless accompanied by a statement of just what it is relative to. One useful measure for phased array gain is *gain relative to a single similar element*. This is the increase in signal strength that would be obtained by replacing a single element by an array made from elements just like it. In some instances, such as investigating what happens to array performance when all elements become more lossy, it's useful to state gain relative to a more absolute, although unattainable standard: a lossless element.

And the most universal reference for gain is another unattainable standard, the *isotropic radiator*. This fictional antenna radiates absolutely equally in all directions. It's very useful because the field strength resulting from any power input is readily calculated, so if the gain relative to this standard is known, the field strength is also known for any radiated power. Gain relative to this reference is referred to as dBi, and it's the standard used by most modeling programs including *EZNEC*. To find the gain of an array relative to a single element or other reference antenna such as a dipole, model both the array and the single element or other reference antenna in the same environment and subtract their dBi gains. Don't rely on some assumption about the gain of a single element — many people assume values that can be very wrong.

Nulls

Pattern nulls are very often more important to users of phased arrays than gain because of their importance in reducing both man-made and natural interference when receiving. Consequently, a good deal of emphasis is, and should be, placed on achieving good pattern nulls. Unfortunately, good nulls are much more difficult to achieve than gain and they are much more sensitive to array and feed-system imperfections.

As an illustration, consider two elements that each produce a field strength of, say, exactly 1 millivolt per meter (mV/m) at some distance many wavelengths from the array. In the direction in which the fields from the elements are in-phase, a total field of 2 mV/m results. In the direction in which they're out-of-phase, zero field results. The ratio of

maximum to minimum field strength of this array is 2/0, or infinity.

Now suppose, instead, that one field is 10% high and the other 10% low — 1.1 and 0.9 mV/m, respectively. In the forward direction, the field strength is still 2 mV/m, but in the canceling direction, the field will be 0.2 mV/m. The front-to-back ratio has dropped from infinity to 2/0.2, or 20 dB. (Actually, slightly more power is required to redistribute the field strengths this way, so the forward gain is reduced — but by only a small amount, less than 0.1 dB.) For most arrays, unequal fields from the elements have a minor effect on forward gain, but a major effect on pattern nulls. This is illustrated by *EZNEC* Example: Nulls in Appendix A.

Even with perfect current balance, deep nulls aren't assured. **Figure 6.13** shows the minimum spacing required for total field reinforcement or cancellation. If the element spacing isn't adequate, there may be no direction in which the fields are completely out-of-phase (see curve B of Figure 6.13). Slight physical and environmental differences between elements will invariably affect null depths, and null depths will also vary with elevation angle.

However, a properly designed and fed array can produce very impressive nulls. The key to producing good nulls, like producing gain, is controlling the strengths and phases of the fields from the elements. Just how to accomplish that is the subject of most of the remainder of this section. But be sure to keep in mind that producing good nulls is generally a much more difficult task than producing approximately the predicted gain.

Mutual Coupling

Mutual coupling was discussed briefly earlier in this chapter. Because it has an important and profound effect on both the performance and feed system design of phased arrays, it will be covered in greater depth here.

Mutual coupling refers to the effects which the elements in an array have on each other. Mutual coupling can occur intentionally or entirely unintentionally. People with multiple

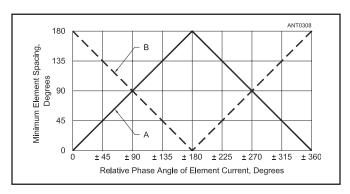


Figure 6.13 — Minimum element spacing required for total field reinforcement, curve A, or total field cancellation, curve B. Total cancellation results in pattern nulls in one or more directions. Total reinforcement does not necessarily mean there is gain over a single element, as the effects of loss and mutual coupling must also be considered.

antennas on a small lot (or car top) often discover that a better description of their system is a single antenna with multiple feed points. Current is induced in conductors in various antennas by mutual coupling, causing them to act like parasitic elements, which re-radiate and distort the antenna's pattern. The effects of mutual coupling are present whether or not the elements are driven.

Suppose that two driven elements are many wavelengths from each other. Each has some voltage and current at its feed point. For each element, the ratio of this voltage to current is the element self-impedance. If the elements are brought close to each other, the current in each element will change in magnitude and phase because of coupling with the field from the other element. The field from the first element changes the current in the second. This changes the field from the second, which alters the current in the first, and so forth until an equilibrium condition is reached in which the currents in all elements (hence, their fields) are totally interdependent.

The feed point impedances of all elements also are changed from their values when far apart, and all are dependent on each other. In a driven array, the changes in feed point impedances can cause additional changes in element currents, because the operation of many feed systems depends on the element feed point impedances. Significant mutual coupling occurs at spacings as great as a wavelength or more.

Connecting the elements to a feed system to form a driven array does not eliminate the effects of mutual coupling. In fact, in many driven arrays the mutual coupling has a greater effect on antenna operation than the feed system does. All feed-system designs must account for the impedance changes caused by mutual coupling if the desired current balance and phasing are to be achieved.

Several general statements can be made regarding the effects of mutual coupling on phased-array systems (unless loss is high enough to swamp mutual coupling effects as discussed in the next section).

- 1) The resistances and reactances of all elements of an array generally will be substantially different from the values when the elements are isolated (that is, very distant from other elements).
- 2) If the elements of a two-element array are identical and have equal currents that are in-phase or 180° out-of-phase, the feed point impedances of the two elements will be equal. But they will be different than for an isolated element. If the two elements are part of a larger array, their impedances can be very different from each other.
- 3) If the elements of a two-element array have currents that are neither in-phase (0°) nor out-of-phase (180°), their feed point impedances will not be equal. The difference will be considerable in typical amateur arrays.
- 4) The feed point resistances of the elements in a closely spaced, 180° out-of-phase array will be very low, resulting in poor efficiency due to ohmic losses unless care is taken to minimize loss. This is also true for any other closely spaced array with significant predicted gain.

It's essential to realize that this is not a minor effect and

one that can be overlooked or ignored. See *EZNEC* Example — Mutual Coupling in Appendix A for an illustration of these phenomena.

Loss Resistance, Mutual Coupling and Antenna Gain

Loss reduces the effects of mutual coupling because the feed point impedance change resulting from mutual coupling is effectively in series with loss resistance. If the loss is great enough, two important results occur. First, the feed point impedance becomes independent of the presence of nearby current-carrying elements. This greatly simplifies feed system design — the simple "phasing-line" or hybrid-coupler feed system described below is adequate provided that all elements are physically identical and the feed point of each element is matched to the Z_0 of the feed line and, if used, the hybrid coupler.

The impedance matching restrictions are necessary to insure that the phasing line or hybrid coupler performs as expected. Identical elements are needed so that equal element currents will result in equal fields from the elements.

In the absence of mutual coupling effects, the maximum gain of an array of identical elements relative to a single (similarly lossy) element is simply 10 log(N), where N is the number of elements — providing that spacing is adequate for the fields to fully reinforce in some direction. If spacing is less, maximum gain will also be less. Of course, the array gain relative to a single lossless element will be very low, most likely a sizeable negative number when expressed in dB. So intentionally introducing loss isn't a wise idea for a transmitting array. It is sometimes an advantageous thing to do for a receiving array, however, as explained in the following section.

High-gain close-spaced arrays, such as the W8JK phased array (see *EZNEC* example file **ARRL_W8JK.EZ** and accompanying Antenna Notes file), and most parasitic arrays depend heavily on mutual coupling to achieve their gain. Introduction of any loss to these arrays, which reduces the mutual coupling effects, has a profound effect on the gain. Consequently, parasitic or close-spaced driven arrays often produce disappointing results when made from grounded vertical elements unless each has a fairly elaborate (and therefore very low-loss) ground system.

If you place two low-loss elements very close together and feed them in-phase, mutual coupling reduces the array gain to essentially that of a single element, so there's no advantage to this configuration over a single element. However, if you have a single lossy element, for example a short vertical having a relatively poor ground system, you can improve the gain by up to 3 dB by adding a second, close spaced, element and ground system and feeding the two in-phase. Another way to look at this technique is that you're putting two equal ground system resistances in parallel, which effectively cuts the loss in half. The gain you can realize in practice depends on such things as the ground system overlap, but it might be a practical way to improve transmitting array performance in some situations.

6.3.3 FEEDING PHASED ARRAYS

The previous section explains why the fields from the elements must be very close to the ratios required by the array design. Since the field strengths are proportional to the currents in the elements, controlling the fields requires controlling the element currents. Since the desired current ratio is 1:1 for virtually all two-element and for most (but not all) larger amateur arrays, special attention is paid to methods of assuring equal element currents. But we will examine other current ratios also.

The Role of Element Currents

The field from a conductor is proportional to the current flowing on it. So if we're to control the relative strengths and phases of the fields from the elements, we have to control their currents. We usually do this by controlling the currents at the element feed points. But because the field from an element depends on the current everywhere along the element, elements having identical feed point currents will produce different fields if they have different current distributions — that is, if the way the current varies along the lengths of the elements is different.

A previous section explained that mutual coupling alters the current distribution, so in many arrays the current distributions will be different on the elements and consequently the relationship between the overall fields won't be the same as that between the feed point currents. Fortunately, this effect is relatively minor in thin, $\lambda/4$ monopole or $\lambda/2$ dipole elements. The most common arrays are made from elements in this category, so we can generally get very nearly the desired ratio of fields by creating the same ratio of feed point currents. Exceptions are detailed in the following section.

Feed Point vs Element Current

For most antennas, environmental factors are likely to cause greater performance anomalies than current distribution differences, and both can be corrected with minor feed system adjustments. The difference between field and feed point current ratios can become very significant, however, if the elements are very fat and/or close to $\lambda/2$ (monopole) or 1λ (dipole) long. In those cases, most of the feed systems described here won't produce the desired field ratios without major adjustment or modification, except in the special cases of 2-element arrays with identical elements having feed point currents in-phase or 180° out-of-phase. In those special cases, the element current distributions are the same for the same reason the feed point impedances are equal. This is explained later in the feed system sections.

To get an idea of just how large an element must be to disturb the pattern of an array with correct feed point currents, a two-element cardioid array of quarter wave vertical elements was modeled at 10 MHz. With thin, 0.1-inch diameter elements the front-to-back ratio was 35 dB, the very small reverse lobe caused by slightly unequal element current distributions. Increasing the element diameter to 20 inches decreased the front-to-back ratio to 20 dB. Returning the front-to-back ratio of the array of 20-inch elements to >35 dB required changing the feed point current ratio from

the nominal value of 1.0 at an angle of 90° to 0.88 at 83°.

The same array was first modeled with 0.1-inch diameter elements, where it has a front-to-back ratio of 35 dB, then the elements were lengthened. The front-to-back ratio dropped to 20 dB at an element length of 36 feet, or about 0.37 λ . In that case, adjustment of the feed point current ratio to about 0.9 at about 83° restored a good front-to-back ratio.

In the discussion and development which follow, the assumption is made that the fields will be very nearly proportional to the feed point currents. If the elements are fat or long enough to make this assumption untrue, some adjustment of feed point current ratio will be necessary to achieve the desired pattern, particularly nulls. Most feed systems can be designed for any current ratio. Modeling will reveal the ratio required for the desired pattern, and then the feed system can be designed accordingly.

6.3.4 COMMON PHASED ARRAY FEED SYSTEMS

This section will first describe several popular approaches to feeding phased arrays that often don't produce the desired results. It will describe why they don't work as well as hoped. It also briefly discusses systems that could be used, but that often aren't appropriate or optimum for amateur arrays.

This will be followed in the next section by detailed descriptions of array feed systems that do produce the predicted element current ratios and array patterns.

The "Phasing-Line" Approach

For an array to produce the desired pattern, the element currents must have the required magnitude and the required phase relationship. As explained above, this can generally be achieved well enough by causing the feed point currents to have that same relationship.

On the surface, this sounds easy — just make sure that the difference in electrical lengths of the feed lines to the elements equals the desired phase angle. Unfortunately, this approach doesn't necessarily achieve the desired result. The first problem is that the phase shift through the line is not equal to its electrical length. The current (or, for that matter, voltage) delay in a transmission line is equal to its electrical length in only a few special cases — cases which don't exist in most amateur arrays! The impedance of an element in an array is frequently very different from the impedance of an isolated element and the impedances of all the elements in an array can be different from each other.

See the *EZNEC* Example — Mutual Coupling in Appendix A for a graphic illustration of the effect of mutual coupling on feed point impedance. Also look at the Four-Square array example in the Phased Array Design Examples section. The array in that example has one element with a *negative* feed point resistance, if ground loss is low. Without mutual coupling, the resistance of that same element would be about $36~\Omega$ plus ground loss.

Because of mutual coupling, the elements seldom provide a matched load for the element feed lines. The effect of mismatch on phase shift can be seen in **Figure 6.14**. Observe

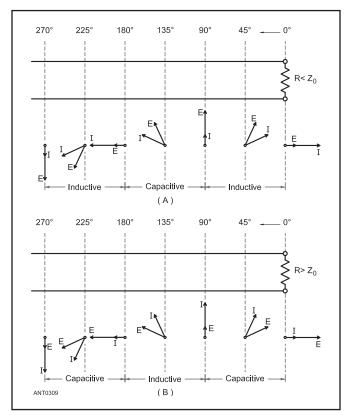


Figure 6.14 — Resultant voltages and currents along a mismatched line. At A, R less than Z_0 , and at B, R greater than Z_0 .

what happens to the phase of the current and voltage on a line terminated by a purely resistive impedance that is lower than the characteristic impedance of the line (Figure 6.14A). At a point 45° from the load the current has advanced less than 45°, and the voltage more than 45°. At 90° from the load both are advanced 90°. At 135° the current has advanced more and the voltage less than 135°. This apparent slowing down and speeding up of the current and voltage waves is caused by interference between the forward and reflected waves. It occurs on any line that is not terminated with a pure resistance equal to its characteristic impedance. If the load resistance is greater than the characteristic impedance of the line, as shown in Figure 6.14B, the voltage and current exchange angles. Adding reactance to the load causes additional phase shift. The only cases in which the current (or voltage) delay is equal to the electrical length of the line are

- 1) When the line is flat; that is, terminated in a purely resistive load equal to its characteristic impedance;
- 2) When the line length is an integral number of half wavelengths;
- 3) When the line length is an odd number of quarter wavelengths and the load is purely resistive; and
- 4) When other specific lengths are used for specific load impedances.

Just how much phase error can be expected if two feed lines are simply hooked up to form an array? There is no simple answer. Some casually designed feed systems might deliver satisfactory results, but most will not. See the *EZNEC* Example — "Phasing-Line" Feed in Appendix A for the typical consequences of using this sort of feed system.

A second problem with simply connecting feed lines of different lengths to the elements is that the lines will change the *magnitudes* of the currents. The magnitude of the current (or voltage) out of a line does not equal the magnitude into that line, except in cases 1, 2 and 4 above. The feed systems presented later in this chapter assure currents that are correct in both magnitude and phase.

The elementary phasing-line approach will work in three very special but common situations. If the array consists of only two identical elements and those elements are fed in-phase, mutual coupling will modify the element impedances, but both will be modified exactly the same amount. Consequently, if the two elements are fed through equallength transmission lines, the lines will transform and delay the currents by the same amount and result in equal, in-phase currents at the element feed points.

Similarly, an array of two identical elements fed 180° out of phase will have the same feed point impedances and can be fed with two lines of any length so long as one line is an electrical half wavelength longer than the other. But this can't be extended to any two elements in a larger array, since mutual coupling to the other elements can result in different feed point impedances. Methods will be described later which do assure a correct current ratio in this situation.

The third application in which the phasing-line approach works is in receiving arrays where the elements are very short in terms of wavelength and/or very lossy. In either of these cases, mutual coupling between elements is much less than an element's self-impedance. This allows the elements to be individually matched to the feed lines, with no significant change taking place when the elements are formed into an array. Under those conditions, the transmission lines can be matched and the lines used as simple delay lines with easily predictable phase shift and with no transformation of current or voltage magnitude other than cable loss. This is discussed in the later section on receiving antennas.

ON4UN's Low-Band DXing (see Bibliography) describes a modified phasing-line feed system method which works in some special cases where the feed point resistances are favorable to the approach. First, a quarter wave transmission line is connected to each element. Then a shunt inductor or capacitor is added at the input of the line to the lagging element in order to make the impedance at that point purely resistive. If the resulting resistance is close to the characteristic impedance of an available transmission line (e.g., 50 or 75 Ω), a simple delay line can be used to feed that element. See EZNEC example ARRL Cardioid Modified Phasing_Line_Feed.EZ and its accompanying Antenna Notes file for an example. When impedance values allow this feed method, it saves only one component compared to the L network feed method and isn't fully adjustable. And it has one component more than the "simplest" method to be described. The bandwidth of arrays fed using this method isn't significantly different from the other feed systems, so

there's no clear advantage to using it. However, it might be a viable approach under some circumstances. More design information is available in *Low-Band DXing*.

The interested reader is encouraged to consult *Low-Band DXing* as it contains examples of additional feed system design approaches that produce a desired element magnitude and phase ratio.

Many arrays *can* be correctly fed with a feed system consisting of only transmission lines, but the technique requires knowledge of the element feed point impedances in a correctly fed array. Line lengths can then be computed that provide the correct ratio of currents into those particular load impedances. The line lengths generally differ by amount that's considerably different from the element phase angle difference, and appropriate line lengths can't always be found for all arrays. This technique is described more fully in the section The Simplest Phased Array Feed System — That Works later in this chapter and illustrated in the examples in Phased Array Design Examples.

The Wilkinson Divider

The Wilkinson divider, sometimes called the Wilkinson power divider, was once heavily promoted as a means to distribute power among the elements of a phased array. While it's a very useful device for other purposes, it won't produce the desired current ratios in antenna elements. In most phased arrays, element feed point resistances are different and therefore require different amounts of power to achieve the desired equal magnitude currents. (See the section on mutual coupling above.) A Wilkinson divider is intended to deliver equal powers, not currents, to multiple loads. And it won't even do that when the load impedances are different. It might be useful in combining element outputs in receiving arrays in which element losses are high enough to swamp mutual coupling effects and effect impedance matches.

The Hybrid Coupler

Hybrid couplers are promoted as solving the problem of achieving equal magnitude currents with a 90° phase difference between elements. Unfortunately, standard 90° hybrids provide equal magnitude, quadrature (90° phased) currents only when the load impedances are equal and correct. And this simply isn't true of arrays with quadrature-fed elements, except for arrays consisting of short and/or lossy elements, usually suitable only for receiving. In those arrays, the hybrid coupler can be useful for the same reasons as the phasing-line approach, discussed in an earlier section.

Hybrid couplers can, however, be useful for feeding transmitting or low-loss phased arrays if suitably modified to function when terminated with the particular impedances presented by an array's elements. In *Low-Band DXing* (see the Bibliography), methods are described to modify the standard 90° hybrid design to provide approximate hybrid functionality when terminated in typical phased array impedance values. Methods are quite involved, as evidenced by more than 20 pages devoted to the topic. It is important to realize that no passive network, including the hybrid coupler, is

capable of providing equal magnitude 90° phased currents in loads with arbitrary impedances. See The Magic Bullet below for more information.

"Crossfire" Feed Method

Tom Rauch, W8JI, has described a "crossfire" feed system which is capable of producing a deep null in one direction over an exceptionally wide bandwidth. This method, generally suitable only for lossy receiving arrays, is described in more detail in this chapter's section Receiving Arrays and Broadbanding.

Large Array Feed Systems

The author once worked on a radar system where the transmit array consisted of over 5000 separate dipole elements and the receive array over 4000 pairs of crossed dipoles, all over a metal reflecting plane, which was the sloping side of a 140 foot high building. In such large arrays, each element is in essentially the same environment as every other element except near the array edges, so almost all elements have very nearly the same feed point impedance. While producing the phase shifts and magnitude tapers is a considerable mathematical challenge, the problem of unequal element feed point impedances can largely be ignored. Consequently, feed methods for these large arrays are generally not suitable for typical amateur arrays of a few elements.

The Broadcast Approach

Networks can be designed to transform the element base impedances from their values in an excited array to, say, $50~\Omega$ resistive. Then another network can be inserted at the junction of the feed lines to properly divide the power among the elements (not necessarily equally!). And finally, additional networks must be added to correct for the phase shifts and magnitude transformations of the other networks. This general approach is used by the broadcast industry, in installations that are typically adjusted only once for a particular frequency and pattern.

Although this technique can be used to correctly feed any type of array, design is difficult and adjustment is tedious since all adjustments interact. When the relative currents and phasing are adjusted, the feed point impedances change, which in turn affect the element currents and phasing, and so on. A further disadvantage of using this method is that switching the array direction is generally impossible. Information on applying this technique to amateur arrays can be found in Paul Lee's book on verticals, listed in the Bibliography.

The "Magic Bullet"

More than 15 years ago, the *Antenna Book* published specifications for a circuit that would provide equal-magnitude, 90° phased currents into two loads without respect to the load impedances. This would be a circuit that would guarantee exactly the correct currents in any two elements. In 1996, Kevin Schmidt, W9CF, formulated a mathematical proof that such a circuit — in fact, one resulting in any relative phase other than 0° or 180° — cannot exist if restricted

to reciprocal elements. (That is, it can't exist unless directional components such as ferrite circulators are used.) Thus, in order to design a network to feed elements with currents of any other phase angle other than 0 or 180°, we must know the impedance of at least one element and correct feed system operation depends on that impedance. There's no way around this requirement. At the time of this writing, Schmidt's proof can be found at **fermi.la.asu.edu/w9cf/articles/magic/index.html**.

6.3.5 RECOMMENDED FEED METHODS FOR AMATEUR ARRAYS

The following feed methods are able to produce element feed point currents having a desired magnitude and phase relationship, resulting in desirable and predictable patterns. Most methods require knowing the feed point impedance of one or more array elements when the array element currents are the correct values. This isn't possible to measure directly, because if the element currents were correct, the feed system would already be working properly and no further design would be necessary.

By far the easiest way to get this information, if possible, is by computer modeling. Modeling programs such as *EZNEC* allow you to construct an ideal array with perfect element currents then look at the resulting feed point impedances. Because of its simplicity and versatility, this approach is highly recommended and it's the one used for the array design examples in this chapter.

Some feed systems allow adjustment, so even an approximate result provides an adequate starting point on which to base the feed-system design. There are several other alternatives to computer modeling. One is to first eliminate the effects of coupling of the element to be measured from all other elements, usually by open circuiting the feed points of the other elements. Then the feed point impedance of the element is measured. Next, the impedance change due to mutual coupling from all other elements has to be calculated, based on the intended currents in the other elements, their lengths and their distances from the element being measured. Mutual impedance (which is not the same as the impedance change due to mutual coupling) between each pair of elements must be known for this calculation and it can be determined by measurement, calculation or from a graph.

The latter two methods are possible only for the simplest element types and measurement is very difficult to do accurately because it involves resolving very small differences between two relatively large values. Accuracy of a calculated result will be reduced if any elements are relatively fat (that is, they have a large diameter, because this impacts the current distribution) or they aren't perfectly straight and parallel.

So the only situations where you're likely to get good results from approaches other than modeling are the very easiest ones to model! Modeling also allows determination of the feed point impedances of many antennas that are impossible to calculate by manual or graphical methods. Therefore, the manual approach isn't discussed or used here. Appendix B, on the CD, contains equations and manual techniques from

previous editions of *The ARRL Antenna Book*, for those who are interested. You can also find a great deal of additional information in many of the texts listed in the Bibliography, particularly Jasik and Johnson.

Current Forcing with λ/4 Lines — Elements In-Phase or 180° Out-of-Phase

The feed method introduced here has been used in its simplest form to feed television receiving antennas and other arrays, as presented by Jasik, pages 2-12 and 24-10 or Johnson, on his page 2-14. However, until first presented in the *ARRL Antenna Book*, this feed method was not widely applied to amateur arrays.

The method takes advantage of an interesting property of $\lambda/4$ transmission lines. (All references to lengths of lines are electrical length and lines are assumed to have negligible loss.) See **Figure 6.15**. The magnitude of the *current out* of a $\lambda/4$ transmission line is equal to the *input voltage* divided by the characteristic impedance of the line. This is independent of the load impedance. In addition, the phase of the output current lags the phase of the input voltage by 90°, also independent of the load impedance. These properties can be used to advantage in feeding arrays with certain phase angles between elements.

If any number of loads are connected to a common driving point through $\lambda/4$ lines of equal impedance, the currents in the loads will be *forced* to be equal and in-phase, regardless of the load impedances. So any number of in-phase elements can be correctly fed using this method, regardless of how their impedances might have been changed by mutual coupling. Arrays that require unequal currents can be fed through $\lambda/4$ lines of unequal impedances to achieve other current ratios.

The properties of $\lambda/2$ lines also are useful. Since the current out of a $\lambda/2$ line equals the input current shifted 180°, regardless of the load impedance, any number of half wavelengths of line may be added to the basic $\lambda/4$, and the current and phase forcing property will be preserved. For example, if one element is fed through a $\lambda/4$ line and another element is fed from the same point through a $3\lambda/4$ line of the same characteristic impedance, the currents in the two elements will be forced to be equal in magnitude and 180° out-of-phase, regardless of the feed point impedances of the elements.

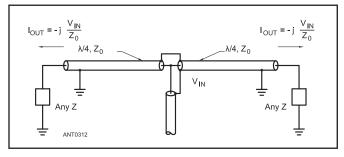


Figure 6.15 — A useful property of $\lambda/4$ transmission lines; see text. This property is utilized in the "current-forcing" method of feeding an array of coupled elements.

If an array of two, and only two, identical elements is fed in-phase or 180° out-of-phase with equal magnitude currents, both elements have the same feed point impedance. The reason is that each element sees exactly the same thing when looking at the other. In an in-phase array, each sees another element with an identical current; in an out-of-phase array, each sees another element with an equal magnitude current that's 180° out-of-phase, the same distance away in both cases. This isn't true in something like a 90° fed array, where one element sees another with a current leading its current by 90°, while the other sees another element with a lagging current.

With arrays fed in-phase or 180° out-of-phase, feeding the elements through equal lengths of feed line (in-phase) or lengths differing by 180° (out-of-phase) will lead to the correct current magnitude ratio and phase difference, regardless of the line length and regardless of how much the element feed point impedances depart from the lines' Z_0 .

Unless the feed point impedances equal the line Z_0 or the lines are an integral number of half wavelengths long, the magnitudes of the currents out of the lines will not be equal to the input magnitudes, and the phase will not be shifted an amount equal to the electrical lengths of the lines. But both lines will produce the same transformation and phase shift because their load impedances are equal, resulting in a properly fed array. In practice, however, feed point impedances of elements frequently are different even in these arrays, because of such things as different ground systems (for ground mounted vertical elements), proximity to buildings or other antennas, or different heights above ground (for horizontal or elevated vertical elements).

In many larger arrays, two or more elements must be fed either in-phase or out-of-phase with equal currents, but coupling to other elements can cause their impedances to change unequally — sometimes extremely so. Using the current-forcing method allows the feed system designer to ignore all these effects, while guaranteeing equal and correctly phased currents in any combination and number of 0° and 180° fed elements.

This method is used to develop feed systems for the Four-Square and 4-element rectangular arrays in the Practical Array Design section. The front and rear elements of a Four-Square antenna provide a good example of elements having very different feed point impedances that are forced to have equal out-of-phase currents.

"The Simplest Phased Array Feed System —That Works"

This is the title of an article in *The ARRL Antenna Compendium*, *Vol 2*, which describes how arrays can be fed with a feed system consisting of only transmission lines. (The article is available for viewing at **www.eznec.com/Amateur/Articles/Simpfeed.pdf** and is also on the CD included with this book, and is supported by the program *Arrayfeed1*, available at **www.arrl.org/antenna-book-reference**, which solves the equations presented in the article.)

As explained earlier in the Phasing Line section, this

method requires knowing what the element feed point impedances will be in a correctly fed array. Feed line lengths can then be computed, for most but not all arrays. These lengths will produce the desired current ratio in array elements that do present those feed point impedances. If you know the load impedances connected to transmission lines whose inputs are connected to a common source, it's simple to calculate the resulting load currents for any transmission line lengths. However, the reverse problem is much more difficult; that is, given the load impedances and desired currents to calculate the required cable lengths.

One way to solve the problem is to choose some feed line lengths, solve for the currents, examine the answer, adjust the feed line lengths, and try again until the desired currents are obtained. The author used this iterative approach, using first a programmable calculator and later a computer, for some time before developing a direct way of solving for the transmission-line lengths. The direct solution method is described briefly in the *Compendium* article.

Figure 6.16 shows the basic so-called "simplest" system applied to a two-element array. Although it resembles an elementary phasing-line system as described earlier, the critical difference is that the lengths of Lines 1 and 2 are calculated to provide the correct current relative magnitude transformation and phase shift when terminated with the actual feed point impedances.

The advantage to using this "simplest" feed system is indeed its simplicity. It's no more complicated than the

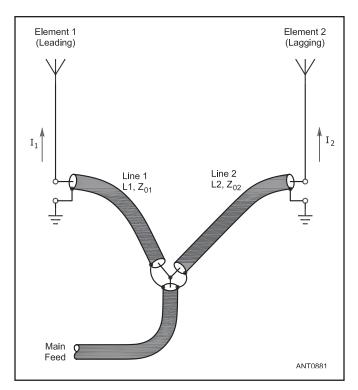


Figure 6.16 — "Simplest" feed system for 2-element array. No matching or phasing network is used here, only transmission lines.

elementary phasing-line approach but actually works as planned. The disadvantage over some other methods is that there's no convenient adjustment to compensate for environment factors, array imperfections or inaccurately known feed point impedances.

Also, while unusual, it's possible that no suitable feed line lengths can be found for some arrays, or at least none with practical feed line characteristic impedances. The difference in electrical feed line lengths almost never equals the difference in phase angles between element currents. This is because of the different line delays resulting from different feed point impedances.

Arrayfeed1 can do the calculations for any two elements (alone or in a larger array), a Four-Square array or a rectangular array in which two in-phase elements are driven at any current magnitude and phase relative to the other two in-phase elements. These possibilities cover a large number of common arrays.

Arrayfeed1 can also be applied to other types of arrays using the method described in the Feeding Larger Arrays"section in Appendix B (on the CD). The required knowledge of element feed point impedances in a correctly fed array can be obtained using EZNEC. Examples of the design of a "simplest" feed system for several different arrays using EZNEC and Arrayfeed1 can be found in the Phased Array Design Examples section.

When a solution is possible for a given choice of line characteristic impedances, a second solution with different lengths is always available. See the comments in the introductory part of the Phased Array Design Examples section about choosing the solution to use.

An Adjustable L-Network Feed System

Adjustment of the current ratio of any two elements requires varying two independent quantities; for example, the magnitude and phase of the current ratio. Two degrees of freedom — adjustments that are at least partially independent — are required. The "simplest" all-transmission line feed system described earlier adjusts the lengths of the two transmission lines to achieve the correct ratio.

But if the antenna characteristics aren't well known — for example, if the ground resistance isn't known even approximately — then the initial "simplest" design won't be optimum and adjustment can be difficult and tedious. The current-forcing method produces correct currents independently of the element characteristics, so it doesn't require adjustment as long as the elements are identical. But it's suitable only for feeding elements in-phase or 180° out-of-phase and a few fixed current-magnitude ratios.

The addition of a simple network as shown in **Figure 6.17** allows you to easily adjust feeding of element pairs at other relative phase angles and/or magnitude ratios. Any desired current ratio (magnitude and phase) can be obtained with two elements fed with any lengths of wire, equal or unequal, by adding a network.

However, calculations for the general case are complex. The problem becomes much simpler if the transmission lines

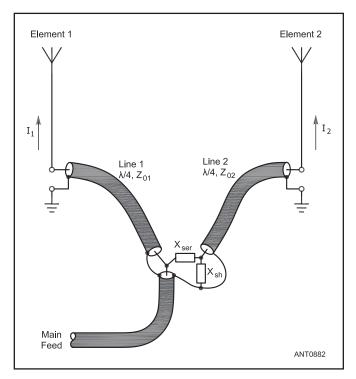


Figure 6.17 — The addition of a simple L network to Figure 6.16 allows you to easily adjust feeding of element pairs at other relative phase angles and/or magnitude ratios.

are restricted to lengths of odd multiples of $\lambda/4$, forming a modified "forcing" system that includes an added network. There are at least three additional advantages of this scheme. One is that a $\lambda/4$ line is easy to measure, even if the velocity factor isn't known. This is described in the Practical Aspects of Phased Array Design section.

Second is that the feed system becomes completely insensitive to the feed point impedance of one of the two elements. And the third is that the transmission lines of "forcing" systems feeding groups of elements in larger arrays can be used in place of the normal $\lambda/4$ lines. This greatly simplifies both the design of feed systems for larger arrays and the feed systems themselves. Note that both lines can be changed to $3\lambda/4$ if necessary to span the physical distance between elements, but both lines must be the same $3\lambda/4$ length.

This basic feed method can be used for any pair of elements, or for two groups of elements having forced equal currents. (See Feeding Four Element and Larger Arrays below) Many networks can accomplish the desired function, but a simple L network is adequate for most feed systems. The network can be designed to produce a phase lead or phase lag. The basic two-element L network feed system is shown in Figure 6.17. Many variations of this general method can be used, but the equations, program, and method to be discussed here apply only to the feed system shown.

If the phase angle of I_2/I_1 is negative (element 2 is lagging element 1), the L network will usually resemble a low-pass network (X_{ser} is an inductor and X_{sh} is a capacitor). But if the phase angle is positive (element 2 lagging element 1),

the L network will resemble a high-pass network (X_{ser} is a capacitor and X_{sh} is an inductor). However, some current ratios and feed point impedances could result in both components being inductors or both being capacitors.

If it's desired to maintain symmetry in the feed system, X_{ser} can be divided into two components, each being inserted in series with a transmission line conductor. If X_{ser} is an inductor, the new components will each have half the value of the original X_{ser} , as shown in **Figure 6.18**. If X_{ser} is a capacitor, each of the new components will be twice the original value of X_{ser} .

Because of the current-forcing properties of $\lambda/4$ lines, we need to make the ratio of voltages at the inputs of the lines equal to the desired ratio of currents at the output ends of the lines; that is, at the element feed points. The job of the L network is to provide the desired voltage transformation. If the output-to-input voltage ratio of the network is, say, 2.0 at an angle of -60° , then the ratio of element currents (I_2/I_1) will be 2.0 at an angle of -60° . The voltage transformation of the network is affected by the impedance of element 2, but not by the impedance of element 1. So only the impedance of element 2 must be known to design the feed system.

Equations for designing the L network are given in Appendix B (on the CD), but the program *Arrayfeed1* makes it unnecessary to solve them. The feed point impedance of the lagging element or group of elements must be known in order to design the network. This can best be determined by modeling the array with *EZNEC*. The impedance can be manually calculated for some simple element and array types by using the equations in Appendix B, but those same types of element and array are simple to model.

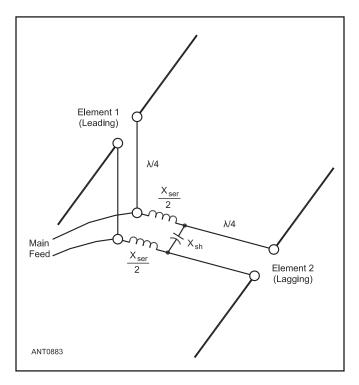


Figure 6.18 — Symmetrical feed system similar to Figure 6.17, in which the feed network is split into two symmetrical parts.

Examples of the design of L network feed systems for several different arrays using *EZNEC* and *Arrayfeed1* can be found in the Phased Array Design Examples section. A similar application of this feed system and a spreadsheet program for calculation was developed by Robye Lahlum, W1MK, and described in *Low-Band DXing* (see the Bibliography). *Arrayfeed1* can be used for the applications of the feed system described in that book if desired.

Additional Considerations

Feeding 4-Element and Larger Arrays

Both the simplest and L network feed systems described above can be extended to feeding larger arrays having two groups of elements in which all the elements in a group are in-phase or 180° out-of-phase with each other — basically, any group that can be fed with the current-forcing method. The elements in each group are connected to a common point with $\lambda/4$ or $3\lambda/4$ lines to force the currents to be in the correct ratio within the group. Then the "simplest" or L network feed system can be used to produce the correct phasing between the two groups, just as it does between two individual elements.

Two common arrays that fit this description are the Four-Square and the 4-element rectangular array. But more elaborate arrays could be constructed and fed using this method, such as a pair of binomial arrays. (A single binomial array is described in the Phased Array Design Example section below.) The *Arrayfeed1* program incorporates additional calculations necessary for designing Four-Square and 4-element rectangular arrays. The general procedure for adapting the feed methods to other larger arrays can be found in Appendix B on the CD.

What If the Elements Aren't Identical?

Getting the desired pattern requires getting the correct relative magnitude and phase of the fields from the elements. If the elements are identical, which we've generally assumed up to this point, then producing currents of the desired magnitude and phase will create the desired *fields* (neglecting mutual coupling current distribution effects, discussed elsewhere).

But what if the elements aren't identical? Fortunately, the feed systems described here can still be used for any 2-element array and some more complex arrays, provided that the system can be accurately modeled. But a slightly different approach is required than for identical elements.

The first step is to model the array with a current source at the feed point of each element. Next, the magnitudes and phases of the model source currents are varied until the desired pattern is achieved. Then the ratio of feed point (source) currents is calculated. This value and the feed point impedances reported by the model are used for the feed system design. The feed system will produce the same ratio of currents as the model, resulting in the same pattern.

In general, this approach won't work with shunt fed towers or gamma-fed elements because of the difficulty of accurately modeling those structures as described in the following section.

Shunt- and Gamma-Fed Towers and Elements

In a shunt-, gamma-, or similarly fed tower or element, the feed point current isn't the same as the main current flowing in the element. The ratio between the feed point current and element current isn't a constant, but depends on a number of factors. The ratio of currents in shunt- or gamma-fed elements is typically different — often vastly different — from the currents at the feed points. This complicates the design of feed systems for arrays of these elements.

An even more limiting problem is that the feed point impedances are difficult to determine. The feed point impedances of one or more elements in a properly fed array must be known in order to design a feed system for anything but 2-element in-phase or 180° out-of-phase arrays.

The only practical way to get this information for a shunt or gamma fed array is by modeling an array having the desired element currents. But Cebik has pointed out ("Two Limitations of NEC-4" — see the Bibliography) that many common antenna analysis programs, including EZNEC, have difficulty accurately modeling folded dipoles with unequal diameter wires. The same problem applies to shunt and gamma-fed elements when the element diameter is significantly different from the diameter of the shunt or gamma feed wire. Without accurate feed point impedances, feed systems can't be designed to work without adjustment. It might be possible to get reasonably accurate results from a MININEC-based modeling program, but there are a number of issues which must be given great care when using one. (See Lewallen, "MININEC — The Other Edge of the Sword," listed in the Bibliography.)

If such a *MININEC* program is available, you would have to model the complete array including feed system, with sources at the normal feed points in the shunt or gamma wires. Next, you would have to adjust the magnitudes and phases of the sources to produce the desired pattern. The reported source impedances and currents would be the ones you would use to design the feed system. It's likely that some adjustment would be necessary, so an adjustable system such as the L network feed system described later would be best.

Loading, Matching and Other Networks

Adding a component such as a loading inductor in series with an element or element feed point won't change the ratio of element current to feed point current. As a result, a feed system designed to produce a particular ratio of element currents will still function properly if the elements contain series components. The extra feed point impedance introduced by the loading component(s) must be considered when designing the feed system, however. Similarly, end or top loading won't alter the relationship between feed point and element current, provided that the current distribution in the elements is essentially the same. (See Feed point vs Element Current previously.)

However, insertion of any *shunt* component, or a network containing a shunt component, *will* alter the relationship between feed point and element current because it will divert part of the feed line current that would otherwise flow into

the antenna. As a result, a feed system designed to deliver correct currents at the feed points will produce incorrect element currents and therefore an incorrect pattern. Therefore, any components or networks other than a series loading component should be avoided at any place in the feed system on the antenna side of the point at which the feed system splits to go to the various elements.

There are a few exceptions to this rule. If the feed point impedances of the elements when in the excited array are equal, then identical networks with or without shunt components can be put at the feed points of the elements and the proper element current ratio maintained — so long as the feed system is designed to deliver the proper feed point current ratio with the networks in place. Equal element impedances occur in arrays having only two identical elements fed in-phase or 180° out-of-phase, or arrays of any number of elements where the elements are electrically short and/or very lossy.

Baluns in Phased Arrays

For purposes of achieving the correct array pattern, baluns aren't usually required when feeding grounded vertical elements with coaxial cable feed lines. However, a balun might be desirable if current induced onto the outside of the feed line by mutual coupling to the elements is causing RF in the shack. And with arrays of dipole or other elevated elements, baluns can be important to achieve the proper element current ratio, as explained below.

First, however, the general rules for using baluns in phased arrays will be stated. Here, "main feed line" means the feed line going from the transmitter or receiver to the common point where the system splits to feed the various elements. "Phasing-system lines" means any transmission lines between that common point and any element. The rules are:

Rule 1: A balun or baluns (more specifically, a current, sometimes called a choke balun) should be used as necessary to suppress unbalanced current on the main feed line. This usually isn't required when feeding grounded elements with coaxial feed line from an unbalanced rig or tuner. Unbalanced current can occur on either coax or parallel-conductor line.

"Baluns: What They Do and How They Do It", listed in the Bibliography, describes conducted-imbalance (commonmode) currents. Imbalance can also be caused by mutual coupling to the array elements. Common-mode currents have at least two undesirable effects on array performance. First, the imbalance current can flow from the main feed line to the phasing system lines, not necessarily splitting in the right proportion to maintain the correct element current ratio. This can affect the array pattern. In practice, however, this effect is likely to be small unless the common-mode current is unusually large. Even a small common-mode current, however, results in main feed line radiation, and even a small amount of radiation can significantly degrade array pattern nulls. Any type of current balun can be used on the main feed line, at any place along the line, without any effect on the array pattern except to the extent that it reduces common mode current.

Rule 2: No balun or any other component or network

should be inserted in any phasing system line that will alter the line length or characteristic impedance. This means that baluns in phasing system lines must be of a type made from the phasing line itself. Options are the W2DU or "bead" balun, consisting of ferrite beads placed along the outside of the feed line; an air-core or "choke" balun made by winding part of the line into an approximately self-resonant or otherwise high-impedance coil; or winding part of the line onto a ferrite core or rod to make a several-turn winding. When coaxial cable is used, the feed system characteristics are dictated by the conditions inside the cable. Any cores placed on or winding of the *outside* prevents common-mode current on the outside but otherwise have no effect on the phasing performance. This rule applies equally to parallel-wire line, where the balun affects only common-mode current (equivalent to current on the outside of coax) while the phasing performance depends on differential mode current (equivalent to the current on the inside of coax).

Baluns are important when feeding dipole or other elevated arrays, unless a fully balanced tuner is used. This is because common-mode current represents a diversion of some of the current that should be going to the array elements. The presence of common-mode current means that the element currents are being altered from the desired ratio and therefore the pattern won't be as intended. A balun should be placed wherever a path for current exists other than along a parallel-line conductor or on the inside of a coaxial line. Such a path exists, for example, where a coaxial cable connects to a dipole, as shown in Figure 1 of the balun article referenced above. Or a path can exist where a parallel-conductor transmission line connects to an unbalanced tuner or to a coaxial line, as shown in Figure 2 of that article. In both those cases, a path exists for a common-mode current to flow on the outside of the coax cable. A balun presents a high impedance to this current, thereby reducing its magnitude, but remember that all baluns must conform to the rules above. Figure 6.19 shows recommended balun locations for a coax-fed dipole array using an L network feed system.

Receiving Arrays and Broadbanding

While it might not be entirely intuitive, an array designed for a particular gain and pattern for transmitting that considers mutual coupling, element currents, field reinforcement and cancellation, and so forth, will perform exactly the same when receiving. So a receiving array can be designed by approaching the problem as though the array were to be used for transmitting.

However, at HF and below, the system requirements for transmitting and receiving antennas are different, so receiving-only arrays can be designed that aren't suitable for transmitting but are perfectly adequate for receiving in that frequency range. The reason, described in more detail in the **Long Wire and Traveling-Wave Antennas** chapter, is that at HF and below atmospheric noise is typically much greater than a receiver's internally generated noise. Lowering a receiving antenna's gain and efficiency reduces the signal and atmospheric noise both by the same factor. Because the

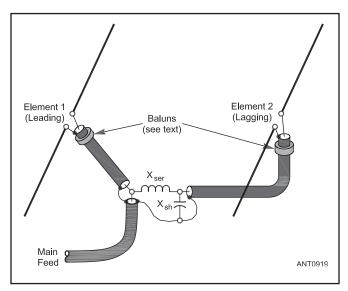


Figure 6.19 — Adding choke baluns to a two-dipole feed system to get rid of common-mode currents induced onto the coax shields.

overall noise is for practical purposes all atmospheric noise, the signal/noise ratio isn't affected by antenna efficiency.

Of course, a point can be reached where the atmospheric noise is so reduced by inefficiency that the receiver itself becomes the dominant source of noise, but this typically doesn't happen until the antenna is extremely inefficient. When transmitting, reduced efficiency lowers the transmitted signal, but it has no effect on the receiving station's noise. So reduced efficiency of a transmitting antenna results in a reduced signal/noise ratio at the receiving end, and consequently should be avoided.

Mutual coupling effects can be minimized by increasing the loss (and therefore reducing the efficiency) of the elements, or by reducing the element sizes to a small fraction of a wavelength. Doing the second without the first isn't usually a good idea because the feed point impedance tends to change rapidly with frequency for very small elements, making an antenna that works well over only a narrow bandwidth. But increasing loss broadens the bandwidth, even for small elements, as well as reducing mutual coupling effects. So this approach is often taken for designing a receiving-only array. With mutual coupling effects minimized because of loss, feed-system design becomes relatively simple, provided a few simple rules are followed. (See Loss Resistance, Mutual Coupling, and Antenna Gain above.)

The "crossfire" feed method described by Tom Rauch, W8JI (www.w8ji.com), delivers an array with very wide pattern bandwidth. That is, the pattern shape, particularly null direction and depth, stay nearly constant over a very large range of frequencies. The method requires elements whose feed point impedances stay nearly constant over the frequency range, which for a wide range requires high loss and low efficiency. As explained earlier, however, this is acceptable for receiving arrays and receiving arrays are usually the case

for which deep and predictable pattern nulls are the most important. The basic idea for two elements is to use a delay line between the two whose delay in electrical degrees equals the element spacing in degrees then add a frequency-independent phase inversion to the line. A distant signal arriving at the first element creates a wave in the delay line connected to its feed point. That same signal arrives at the second element at the same time the wave from the first element reaches the end of the delay line. The signal from the second element is added to the inverted wave from the first element and, if the two

are the same amplitude, complete cancellation occurs. This is independent of the frequency, and also of the element spacing provided that the delay line's electrical length is the same as the element spacing. See the design examples for additional information.

For ungrounded elements like dipoles, the inversion can easily be effected simply by reversing the feed line connections to one element by giving the phasing line a half twist. Or a broadband inverting transformer can be used for either grounded or ungrounded elements.

6.4 PHASED ARRAY DESIGN EXAMPLES

This section, also written by Roy Lewallen, W7EL, presents examples of feed-system design for several kinds of array using the design principles given in previous sections. All but the dipole example array are assumed to be made of $\lambda/4$ vertical elements. The dipole example illustrates that exactly the same method can be used for arrays of any shape of elements, including dipole, square (quad) and triangular. Likewise, the methods shown here apply equally well to VHF and UHF arrays. The first example includes more detail than the remaining ones, so you should read it before the others. Following the array design examples using the "simplest" and L network feed systems is an example of a receiving array using two different configurations of "crossfire" feed.

EZNEC has the capability of incorporating L networks in the model, so the L network fed array can also be analyzed for accuracy and the effects of component and ground loss variation. **ARRL_Cardioid_L_Network_Example.EZ** models the cardioid array with L network feed system.

EZNEC also has provision for including transmission line loss. It can be instructive to add various amounts of loss to see the effect on pattern and bandwidth. The effect of loss will generally be most apparent on lines running with a high SWR, i.e., when terminated in an impedance very different from the characteristic impedance.

In the following sections, text in SMALL CAPS denotes menu or function button label or an input to the *EZNEC* software used in the creation and modeling of these examples.

In addition to the set of examples, there is a great deal of additional information and numerous other array designs in Chapter 11, "Phased Arrays" of *Low-Band DXing* by John Devoldere, ON4UN (see the Bibliography at the end of this chapter). Al Christman, K3LC, has also written two excellent articles (included on this book's CD-ROM) examining the effect of lengthening $\lambda/4$ monopoles to $\frac{5}{8}$ λ , both for single elements and for the 2-element cardioid pattern and 4-square array on 80 meters. His study of phased vertical arrays also provides useful information to the antenna system builder (see the Bibliography).

6.4.1 GENERAL ARRAY DESIGN CONSIDERATIONS

If either the "simplest" feed system (Figure 6.16) or L network feed system (Figure 6.17) is used, the feed point impedance of one or more elements — when the array elements all have the correct currents — must be known. By far the best way to determine this is by modeling. If accurate modeling isn't practical for some reason, an estimate should be made from an approximate model, and you should expect to have to adjust the feed system after building and installing it.

Manual calculation methods for some simple configurations are given in Appendix B (on the CD), but calculation is tedious and, as stated earlier, the configurations for which this method works are the very ones which are easiest to model. *EZNEC* is used in the following examples to determine feed point impedance. Space doesn't permit detailed instructions here on creating the models, so they are included in complete form. They should provide a convenient starting point for any variations you might like to try. See the *EZNEC* manual (accessed by clicking HELP/CONTENTS in the main *EZNEC* window) for help in using this program.

In the following examples, vertical elements are close to $\lambda/4$ high and dipole elements close to $\lambda/2$, and their lengths have been adjusted for resonance when all other elements are absent or open circuited. There's actually no need in practice to make the elements self-resonant — it's simply used as a convenient reference point for these examples. You'll also find it interesting to see how much reactance is present at the feed points of the elements when in the arrays, knowing that it's very nearly zero when only one element is present.

In any real grounded vertical array, there is ground loss associated with each element. The amount of loss depends on the length and number of ground radials, and on the type and wetness of the ground under and around the antenna. This resistance becomes part of the feed point resistance, so it must be included in the model used to determine feed point impedance. The 90° Fed, 90° Spaced Array example below discusses how this is done. **Figure 6.20** gives resistance

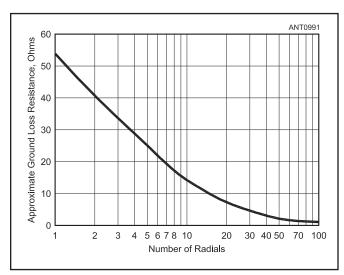


Figure 6.20 — Approximate ground system loss resistance of a resonant $\lambda 4$ ground-mounted vertical element versus the number of radials, based on measurements by Jerry Sevick, W2FMI. Moderate length radials (0.2 to 0.4 λ) were used for the measurements. The exact resistance, especially for only a few radials, will depend on the nature of the soil under the antenna. Add 36 Ω for the approximate feed point resistance of a thin resonant $\lambda /4$ vertical.

values for typical ground systems, based on measurements by Sevick (July 1971 and March 1973 *QST*). The values of feed system components based on Figure 6.20 will be reasonably close to correct, even if the ground characteristics are somewhat different than Sevick's.

Feed systems for the design example arrays to follow are based on the resistance values given below.

Number of Radials	Loss Resistance, Ω
4	29
8	18
16	9
Infinite	0

Elevated radial systems also have some ground loss, although it can be considerably less than a system with the same number of buried radials. This loss will be automatically included in the feed point impedance of a model which includes the elevated radials, so no further estimation is required. Be sure to use Perfect, High-Accuracy ground type when modeling an elevated radial system with *EZNEC*. In other *NEC-2* based programs, this might be referred to as Sommerfeld type ground. More information can be found in the *EZNEC* manual.

The matter of matching the array for the best SWR on the feed line to the station is not dealt with here, since it's a separate problem from that of the main topic, which is designing feed systems to produce a desired pattern. Some of the simpler arrays provide a match that is close to 50 or 75 Ω , so no further matching is required. However, as shown by program Arrayfeed1, many larger arrays present a less favorable impedance for direct connection and will require matching if a low SWR on the main feed line is required.

If matching is necessary, the appropriate network should be placed in the single feed line running to the station. Attempts to improve the match by adjustment of the phasing L network, individual element lengths, matching at the element feed points or individual element feeder lengths will usually ruin the current balance of the array. Program *TLW*, included on the CD, can be used for designing an appropriate matching network. Additional information on impedance matching may be found in the **Transmission Line System Techniques** chapter.

Choosing Arrayfeed1 Solutions

When designing a feed system for a two-element array, *Arrayfeed1* program allows you to choose the characteristic impedances of the two transmission lines going to the elements, which don't have to be equal, so you have your choice of more than one solution. However, directional array switching is much more difficult if the lines have different impedances, so in general you should use the same characteristic impedances.

For larger arrays, *Arrayfeed1* requires the feed lines to all elements to have the same impedance. In choosing the transmission line impedance values, usually you can simply use convenient impedances. But in general, you should avoid solutions where component reactance (X) values are vastly different (say, more than three times or less than one third as large) as the line characteristic impedances. Such networks will become more critical to adjust, and both the impedance and pattern will change more rapidly with changes in frequency. You can usually avoid this situation by choosing feed line impedances that are in the same ballpark as the element feed point impedances. The last example in the Practical Array Design section illustrates this problem and its solution.

When designing a "simplest" feed system, the most broadbanded and least critical system is usually one where the difference in electrical feed line lengths is closest to the relative element phase angle. Here, "broadbanded" means that the pattern changes less with frequency, not necessarily that the SWR changes less. However, an array that's broadbanded in the pattern sense is usually also relatively broadbanded with respect to SWR.

Arrayfeed1 reports the impedance seen at the main array feed point. While it might be tempting to choose the solution producing the lowest SWR on the main feed line, you'll end up with a less critical and more broadbanded system if you base your choice on the criteria given above, and provide separate impedance matching at the array's main feed point when necessary.

6.4.2 90° FED, 90° SPACED VERTICAL ARRAY

This example illustrates the design of both "simplest" and L network feed systems for a 2-element, 90° spaced and fed vertical array. The first task when using either feed system is to determine the feed point impedances of the elements when placed in an array having the desired element currents. The "simplest" feed system method requires knowledge of both

element impedances, while the L network system requires you to know only one. Actually, it's equally easy to determine both as it is to find just one, using *EZNEC*. (Appendix B on the CD contains equations for those interested in manual methods or for more insight as to how the impedances come about.) The first step is to specify the antenna we want. For this example, we'll specify:

■Frequency: 7.15 MHz.

■Two identical, one inch (2.54 cm) diameter, 33 feet (10.06 meter) long elements spaced 90 electrical degrees, with element currents equal in magnitude and 90° apart in-phase.

■8 buried radial wires, $0.3 \lambda \log$, under each element.

A model of this antenna has been created and furnished with *EZNEC*. So the next step is to start *EZNEC*, click the OPEN button, enter ARRL_CARDIOID_EXAMPLE in the text box (or double-click it in the file list) to open example file **ARRL_Cardioid_Example.EZ**.

This *EZNEC* example model uses a *MININEC*-type ground, which is the same as perfect ground when calculating antenna currents and impedances. A real antenna would have some additional resistive loss due to the finite conductivity of the ground system. The only way to model a buried radial ground system with an *NEC-2* based program like *EZNEC* is to create radial wires just above the ground (using the Real, High-Accuracy ground type), because *NEC-2* can't handle buried conductors.

This provides only a moderate approximation of a buried system. Another way to estimate ground-system resistance is to measure the feed point impedance of a single element, then subtract from that the resistance reported for a model of that element over perfect (or *MININEC*-type) ground. For most uses, however, an adequate approximation can be made by simply referring to the graph of Figure 6.20. As stated previously, the feed system design depends on the feed point impedances of the elements, which in turn depend on the ground system resistance. So the ground system resistance must be known, approximately anyway, before designing the feed system. At the end of this example we'll investigate the effect of changes in the ground system or errors in estimating the resistance on the pattern.

For 8 radials, Figure 6.20 shows the ground system resistance to be about 18 Ω . This is included in the example model as a simple resistive load at the feed point of each element. Click the SRC DAT button to see the feed point impedances of the two elements. In this model, Source 1 is at the base of Wire 1 (element 1), and Source 2 is at the base of Wire 2 (element 2). Notice in the SOURCE DATA display that the Source 1 current has been specified at 1 amp at 0°, and Source 2 is 1 amp at -90° . So the Source 2-element is the lagging element. You should see impedances of $37.53-j19.1~\Omega$ for element 1 and $68.97+j18.5~\Omega$ for element 2. These are the feed point impedances resulting when the array is ideally fed, with equal magnitude and 90° phased currents. Record these values for use in Array feed 1.

Click the FF PLOT button to generate a plot of the azimuth pattern at an elevation angle of 10°. In the 2D Plot Window, open the FILE menu and select SAVE TRACE AS. Enter

CARDIOID_IDEAL FEED in the FILE NAME box, then click SAVE. This saves the cardioid pattern plot so you can compare it later to the pattern you get with the transmission line feed system.

Now it's time to design the feed system. Refer to the appropriate subheading below for the design of each of the two kinds of feed systems. Both systems use program *Arrayfeed1* program.

"Simplest" (Transmission Line Only) Feed System

Start *Arrayfeed1*. In the ARRAY TYPE frame, select TWO ELEMENT. In FEED SYSTEM TYPE, select SIMPLEST. In the INPUTS frame, enter the following values:

Frequency MHz = 7.15; Feed point impedances – Leading Element: R ohms = 37.53, X ohms = -19.1; Lagging Element: R ohms = 68.97, X ohms = 18.5 (these are the element R and X values from *EZNEC*). We'll be discussing the array input impedance, so check the CALC ZIN box near the lower left corner of the main window if it's not already checked.

We're free to choose any transmission-line characteristic impedances we want, so long as we can get cables with those impedances. And the two cables don't have to have the same characteristic impedances. Each choice will lead to a different set of solutions. But sometimes a solution isn't possible, which then requires choosing different line impedances. Let's try 50 Ω for both lines. Enter 50 in both 20 boxes.

Finally, enter 1 for the LAGGING:LEADING I MAG, and –90 for the PHASE. Click FIND SOLUTIONS. The result is no solution! So enter 75 into both the line impedance boxes and click FIND SOLUTIONS again. You should now see two sets of results in the Solutions frame, electrical lengths of 68.80° and 156.03° for the first solution and 131.69° and 185.00° for the second. (Notice that the difference in length between the two lines isn't 90° for either solution, although the first solution is quite close. It's normal for the feed line length difference to be different than the phase difference, due to the unequal element feed point impedances caused by mutual coupling.)

The solution with a line length difference closest to the element phase difference is usually preferable. Also, all else being equal, the solution with shortest lines is better providing that the lines will physically reach the elements. This is because the current magnitude and phase will change less with frequency than for a longer-length solution. However, there might be some cases where the change with frequency luckily compensates for the changing electrical distance between elements, so it's not a bad idea to model both solutions unless you plan on using the antenna over only a narrow frequency range.

In this case, the first solution looks best in all respects. The sum of the two lines in the first solution is about 225 electrical degrees. Assuming the lines have a velocity factor of 0.66, the total length of the lines will be more than 148 physical degrees. Since our two elements are spaced 90 physical degrees apart, the lines will comfortably reach. If they didn't, we could either use the second solution's lengths, use cable with a higher velocity factor or add a half wavelength to both the line lengths in the first solution.

The impedance ZIN shown by Arrayfeed1 is the impedance

at the input to the feed system, so it's the impedance that will be seen by the main feed line. The second solution provides nearly a perfect match for a 50- Ω transmission line. But the first solution is good for nearly all applications. Also a 50- Ω line connected to the first solution's feed system would have an SWR of only 1.65:1, which wouldn't require any matching under most circumstances. Normal line loss would reduce the SWR even more at the transmitter end of the feed coax.

To find the required physical line lengths, enter the cable velocity factor and make your choice of units in the PHYSICAL LENGTHS frame. The design is now complete; all you have to do is cut two lines to the specified lengths and connect one from a common feed point to each element as shown in Figure 6.16, or the screen capture from *Arrayfeed1* shown in **Figure 6.21**.

Next, we'll design an L network feed system for the same array.

L Network Feed System

In ArrayfeedI, select L NETWORK in the FEED SYSTEM TYPE frame. The program doesn't need to know the leading element impedance to calculate the L network values, but it does need it to calculate the array input impedance. If you want to know the impedance, check the ZIN box at the lower left corner of the main window, otherwise you can uncheck it and the input box for the leading element Z will disappear. The values from the "Simplest" analysis should still be present in the appropriate boxes; if not, refer to the "Simplest" feed system design above and re-enter the values. Again, we'll use 75 Ω for the line impedances, since that gave us a solution for the "Simplest" feed system. This feed system is more versatile, though, so we could use 50- Ω lines with this feed system if desired.

Click FIND SOLUTION and see the results in the SOLUTION frame. See screen capture in **Figure 6.22**. With 75- Ω lines,

🔌 W7EL Arrayfeed 1 _ | _ | × | Inputs Frequency MHz 7.15 Help Enter feedpoint impedances C Four Square R ohms X ohms Clear Entrie: 37.53 -19.1 Feed System Type Lagging Element 68.97 C L Network Velocity Factor GR Line 1 Z0 75 ohms Line 2 Z0 75 C Meters
C Millimeters
Feet Lagging C Inches C Wavelengths lagging:leading I mag, ph 1/4 wavelength Mag [Phase .90 1/2 wavelength 45.396 Main food Solution: 68.093 Electrical Length, Degrees 1st Solution 2nd Solution 2nd Soln 131.69 Line 1 68.80 Line 1 17 352 Find Solutions 🔽 Calc Zin Line 2 156.03 185.00 Line 2 39.350 46.656 Zin 33.94 + j 13.13 50.09 - j 2.11 ANT0992

Figure 6.21 — Screen capture from *Arrayfeed1* program for "Simplest" 2-element phased array shown in Figure 6.16 and whose feed point impedances are modeled by *EZNEC*.

the L network consists of a series inductor of 1.815 μH and a shunt capacitor of 199.7 pF, connected as shown in the diagram in the left part of the program window. To find the physical length of the $\lambda/4$ lines, enter the velocity factor and choice of units in the PHYSICAL LENGTHS frame.

The main feed point impedance of 31.37 + j 25.94 Ω would result in about a 2.2:1 SWR on a 50- Ω feed line, which would be acceptable for many applications. It could easily be reduced to 1.6:1 by the simple addition of a series capacitor of 25.94 Ω reactance (858 pF) at the main feed point or, of course, reduced to 1:1 with a simple L network or other matching system designed with the *TLW* program.

Pattern Verification and Effect of Loss Resistance

L network *EZNEC* model **ARRL_Cardioid_TL_ Example.EZ** has been created to model the "simplest" feed system just designed. Open it with *EZNEC*. In the VIEW ANTENNA DISPLAY, you can see the boxes representing the transmission lines placed at the element bases. The other ends of the transmission lines are shown going to "virtual segment" (connection point) V1. The source is also connected to V1. In *EZNEC*, the physical locations of the ends of transmission line models don't have to be the same as the physical locations, so the view isn't a precise representation of what the actual setup would look like. (You can find more about this in **ARRL_Cardioid_TL_Example.txt**, the Antenna Notes file that accompanies example file **ARRL_Cardioid_TL_Example.EZ**.)

Click FF PLOT to generate a 2D pattern of the antenna. In the 2D Plot Window, open the FILE menu and select ADD TRACE. Select CARDIOID — IDEAL FEED (which you saved earlier) and click OPEN. The added plot overlays perfectly, indicating that the pattern using this feed system is identical to the pattern we got with perfect current sources at each feed point.

To check the feed point currents, click the CURRENTS

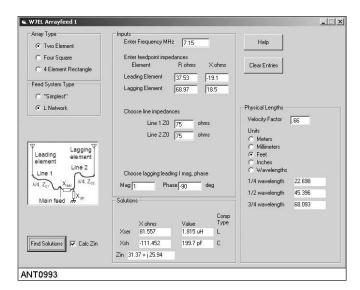


Figure 6.22 — Screen capture from *Arrayfeed1* program for L network feed system using "current-forcing" properties of $\lambda/4$ feed lines.

button. In the resulting table, you can see that WIRE 1 SEGMENT 1 current is 0.56467 A at a phase of -56.73° and WIRE 2 SEGMENT 1 current is 0.56467 A at -146.7° . (If you get the correct phase angles but wrong magnitudes, open the main window OPTIONS menu, select POWER LEVEL, and make sure the ABSOLUTE V, I SOURCES box is checked.) The ratio is 1.0000 at an angle of -89.97° , which is within normal error bounds for the desired 1 at -90° .

As a check on Arrayfeed1, click the SRC DAT button to find the impedance seen by the source. This would be the impedance at the main feed line connection in the real array. EZNEC reports $33.96 + j13.11 \,\Omega$, very close to the $33.94 + j13.13 \,\Omega$ given by Arrayfeed1 in Figure 6.21. Small differences of this order are normal and to be expected. This provides a further check that the EZNEC model is correctly analyzing the Arrayfeed1 feed system.

This *EZNEC*-model uses lossless transmission lines of a fixed physical length rather than a fixed electrical length (number of degrees), so they'll behave like real lines as the frequency is changed. By changing the *EZNEC* frequency and re-running the 2D plot, you can see that the front-to-back ratio degrades at 7.0 and 7.3 MHz. A slight adjustment of one or more line lengths, or a new *Arrayfeed1* solution at a slightly different frequency might produce a better compromise for some uses.

Other things you can try are to evaluate the second ArrayfeedI solution, or to try using different line impedances. (Keep the two line impedances equal if you anticipate doing array direction switching.) The effect of varying ground system resistance can also be evaluated by clicking the LOADS line in the main window and changing the load resistance values. For example, if the ground system resistance were 9 Ω instead of the 18 Ω we have assumed, the front-to-back ratio would drop from about 32 to about 20 dB. Note that changing the EZNEC ground conductivity in this model has no effect on the feed point current ratio. With a MININEC type ground, it's used only for pattern calculation — the ground is assumed perfect during impedance and current calculations, and the only ground system loss resistance in the model is what we've specifically put in as loads.

Not surprisingly, the forward gain is affected very little by changes in frequency or ground system loss. To find the gain relative to a single element, compare the reported dBi gain of **ARRL_Cardioid_Example** with the same model with one of the elements deleted. You'll find it's very close to 3.0 dB. The 90° fed, 90° spaced array is a special case of array where the effects of mutual coupling on the two elements are opposite and cancel, resulting in the same gain as if mutual coupling didn't exist. But mutual coupling most certainly does exist!

The second solution presented a more favorable main feed point impedance, so it would be tempting to use that one instead of the first solution. Replacing the feed line lengths with the second solution lengths to model the second solution shows that the front-to-back ratio deteriorates more at the band edges when the second solution is used. This might be tolerable if restricted frequency use is anticipated. But it does

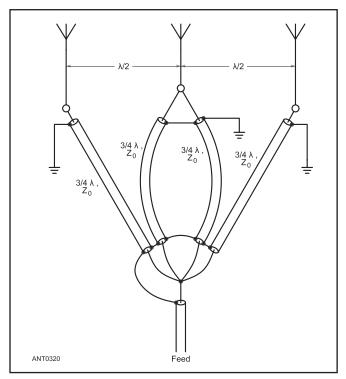


Figure 6.23 — Feed system for the three element 1:2:1 binomial array. All feed lines are $\frac{9}{4}$ electrical wavelength long and have the same characteristic impedance.

illustrate that the solution with shorter lines is generally more broadbanded and that the choice of solution shouldn't in general be based on the one giving the most favorable impedance.

6.4.3 A THREE-ELEMENT BINOMIAL BROADSIDE ARRAY

An array of three in-line elements spaced $\lambda/2$ apart and fed in-phase gives a pattern that is generally bidirectional. If the element currents are equal, the resulting pattern has a forward gain of 5.7 dB (for lossless elements) compared to a single element, but it has substantial side lobes. If the currents are tapered in a binomial coefficient 1:2:1 ratio (twice the current in the center element as in the two end elements), the gain drops slightly to just under 5.3 dB, the main lobes widen and the side lobes disappear.

The array is shown in **Figure 6.23**, and an *EZNEC* model of the antenna over perfect ground to show the ideal pattern is provided as **ARRL_Binomial_Example.EZ**. To obtain a 1:2:1 current ratio in the elements, each end element is fed through a $3\lambda/4$ line of impedance Z_0 . Line lengths of $3\lambda/4$ are chosen because $\lambda/4$ lines will not physically reach. The center element is fed from the same point through two parallel $3\lambda/4$ lines of the same characteristic impedance. This is equivalent to feeding it through a line of impedance $Z_0/2$. The currents are thus forced to be in-phase and to have the correct ratio. **ARRL_Binomial_TL_Example.EZ** is an *EZNEC* model that shows this feed system with lossless transmission lines. The reader is encouraged to experiment with this model to see the effect of changes in frequency, the addition of loss resistance (as

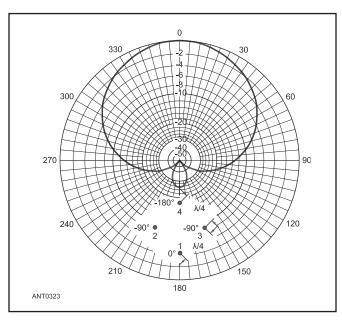


Figure 6.24 — Pattern and layout of the four-element Four-Square array. Gain is referenced to a single similar element; add 5.5 dB to the scale values shown.

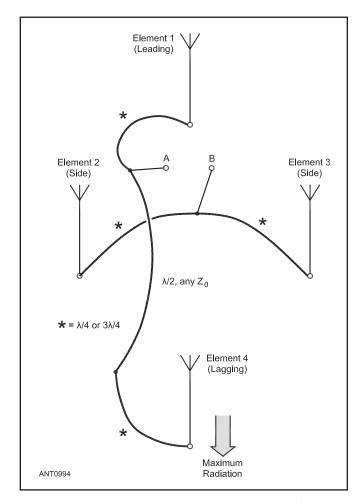


Figure 6.25 — "Simplest" feed system for the Four-Square array in Figure 6.24. Grounds and cable shields have been omitted for clarity.

resistive loads at the element feed points), transmission line loss, and other alterations on the array pattern and gain. You should also replace the perfect ground with *MININEC* type of ground to show how radiation patterns over real ground differ from the theoretical perfect-ground pattern.

6.4.4 A FOUR-SQUARE ARRAY

Several types of feed system are used for feeding this popular array, and most share a common problem — they don't provide the correct element current ratio — although a number of them produce a workable approximation. The feed systems described here are capable of producing exactly the correct current ratio. The only significant variable is the element feed point impedances, so the quality of the result depends on your ability to model the feed point impedances of a correctly fed array. As in the examples above, *EZNEC* will be used for that purpose and *Arrayfeed1* for the design of the feed system itself.

In this array (see **Figure 6.24**), four elements are placed in a square with $\lambda/4$ sides. (A variation of the Four-Square uses wider spacing.) The rear and front elements (1 and 4) are 180° out-of-phase with each other. The side elements (2 and 3) are in phase with each other and 90° delayed from the front element. The magnitudes of the currents in all four elements are equal. The front and rear elements can be forced to be 180° out-of-phase and to have equal currents by using the current-forcing method described earlier. One element is connected to a line that is either $\lambda/4$ or $3\lambda/4$ long, the other to a line that is $\lambda/2$ longer, and the two lines to a common point.

Likewise, the two side element currents are forced to be equal by connecting them to a common point via $\lambda/4$ or $3\lambda/4$ lines. **Figure 6.25** shows the basic current-forcing system.

If the pattern is to be electrically rotated, it is necessary to bring lines from all four elements to a common location. If solid-polyethylene dielectric coaxial cable, which has a dielectric constant of 0.66, is used, $\lambda/4$ lines won't reach the center of the array. So $3\lambda/4$ lines must be used. Alternatively, you can use $\lambda/4$ lines with foam or other dielectric having a velocity factor of more than about 0.71 (plus a little extra margin). These will reach to the center. Whatever your choice, three of the lines must be the same length and the fourth must be $\lambda/2$ longer.

In this array, the side elements (2 and 3) have equal impedances, but the rear and front (1 and 4) are different from each other, and both are different from the side elements. We have to know the feed point impedances of the front, rear and side elements in order to design the "simplest" feed system, but only the side element impedances are needed to design the L network system. Knowledge of all feed point impedances is necessary if the array main feed point impedance ZIN is to be calculated. *EZNEC* model **4Square_Example. EZ** shows a 40-meter Four-Square array with $18~\Omega$ of loss resistance at each element, to approximate an 8-radial per element ground system. (See the cardioid array example above for more information about modeling ground system loss.) Opening the file in *EZNEC* and clicking the SRC DAT button gives the following impedances:

Source 1: $16.4 - j15.85 \Omega$

Sources 2 and 3: $57.47 - i19.44 \Omega$

Source 4: $77.81 + j54.8 \Omega$

It's interesting to note that the resistive part of source 1 is less than the 18 Ω of loss resistance we intentionally added to simulate ground system loss. That means that the element 1 feed point resistance would be negative if the ground resistance were about 1.5 Ω . This isn't uncommon in phased arrays and simply means that the element is feeding power into the feed system. This power is coming via mutual coupling from the other elements.

"Simplest" (Transmission Line Only) Feed System

To design a "simplest" feed system, start *Arrayfeed1*. In the ARRAY TYPE frame, select 4 SQUARE, and select SIMPLEST in the FEED SYSTEM TYPE frame. In the INPUTS frame, enter the frequency and the impedances from *EZNEC*:

Frequency = 7.15 MHz

Leading Element: R = 16.4, X = -15.85Side elements: R = 57.47, X = -19.44Lagging Element: R = 77.81, X = 54.8

We'll try using 50 Ω for all lines, so enter 50 into the next three boxes.

Enter 1 for the lagging:leading I magnitude and –90 for the phase.

Click FIND SOLUTIONS.

The result is shown in the SOLUTIONS frame, shown in **Figure 6.26**. As always when any solution exists, there are two to choose from. The one with the shortest lines is generally preferable, so we'll choose it. For this example, we'll use $\lambda/4$ lines with velocity factor of 0.82. So enter 0.82 in the VELOCITY FACTOR box in the PHYSICAL LENGTHS frame, and read the physical lengths from the bottom of that frame. The $\lambda/4$ lines (marked in the *Arrayfeed1* diagram with an asterisk) are 28.2 feet, line 1 is 7.483 feet and line 2 is 51.668 feet. The "simplest" feed system is shown in Figure 6.26, and the

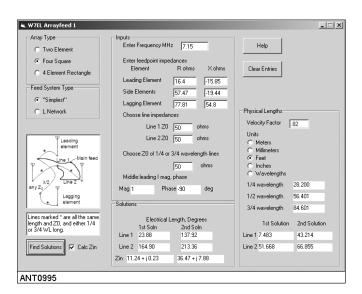


Figure 6.26 — Screen capture from *Arrayfeed1* for "Simplest" feed system for Four-Square feed system shown in Figure 6.25.

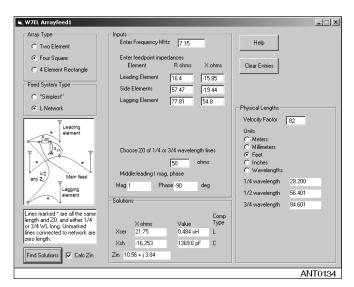


Figure 6.27 — L network setup for Four-Square array in Figure 6.25, fed with $\lambda/4$ (or $3\lambda/4$) current-forcing feed system.

complete feed system consists of this connected to the array of Figure 6.25.

EZNEC model ARRL_4Square_TL_Example.EZ simulates the array fed with this system. Comparison of the pattern plot to one from ideal-current model ARRL_4Square_Example.EZ and examination of the element currents verify that the feed system is producing the desired pattern and element currents. You can use ARRL_4Square_Example.EZ to investigate the effect of frequency change, ground loss and other changes on the array gain and pattern.

L Network Feed System

To design the L network feed system, simply change the FEED SYSTEM TYPE to L NETWORK and click FIND SOLUTIONS. The results you should see are a 0.484 μ H inductor for the series component X_{ser} and a 1369.6 pF capacitor for the shunt component X_{sh} . The L network feed system is shown in **Figure 6.27**, and the complete feed system consists of this L network connected to the array of Figure 6.25.

EZNEC model ARRL_4Square_L_Network_Example. EZ simulates the array fed with this system. You can compare it with the idealized feed system array and use it to see the effects of various parameter changes as you did with the "simplest" feed system model. Arrays have also been built using this feed system and the element currents measured, with exactly the expected results.

This array is more sensitive to adjustment than the 2-element 90° fed, 90° spaced array. Adjustment procedures and a method of remotely switching the pattern direction are described in the Practical Aspects of Phased Array Design section below.

6.4.5 A 4-ELEMENT RECTANGULAR ARRAY

The 4-element rectangular array shown with its pattern in **Figure 6.28** has appeared numerous times in amateur publications. However, many of the accompanying feed systems

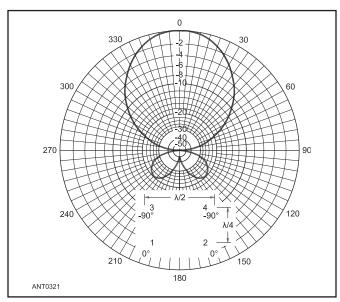


Figure 6.28 — Pattern and layout of the four-element rectangular array. Gain is referenced to a single similar element; add 6.8 dB to the scale values shown.

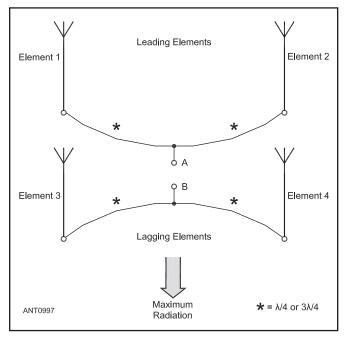


Figure 6.29 — "Simplest" feed system for four-element rectangular array, using four equal-length $\lambda/4$ (or $3\lambda/4$) cables.

fail to deliver currents in the proper amounts and phases to the various elements. The array can be correctly fed using the principles discussed in this chapter and the design methods that follow.

Elements 1 and 2 can be forced to be in-phase and to have equal currents by feeding them through $3\lambda/4$ lines. (As in the binomial and Four-Square array examples, $3\lambda/4$ lines are chosen because $\lambda/4$ lines won't physically reach.) The currents in elements 3 and 4 can similarly be forced to be

equal and in-phase. **Figure 6.29** shows the "current-forcing" feed system. Elements 3 and 4 are made to have currents of equal magnitude but of 90° phase difference from elements 1 and 2 by use of either a "simplest" all-transmission line feed system or an L network feed system. Both will be designed in this example.

For this array, we have to know the feed point impedances of two elements (one of each pair) in order to design either type of feed system. EZNEC model **Rectangular_Example.EZ** shows a 20-meter rectangular array with 18 Ω of loss resistance at each element, again to approximate an 8-radial per element ground system. (See the cardioid array example above for more information about modeling ground system loss.) Open the file in EZNEC and click the SRC DAT button to find the following feed point impedances:

Sources 1 and 2: $21.44 - j \ 21.29 \ \Omega$ Sources 3 and 4: $70.81 - j \ 5.232 \ \Omega$

"Simplest" (Transmission-Line Only) Feed System

To design a "simplest" feed system, start program *Arrayfeed1*. In the ARRAY TYPE frame, select 4 ELEMENT RECTANGLE, and select SIMPLEST in the FEED SYSTEM TYPE frame. In the INPUTS frame, enter the frequency and the impedances from *EZNEC*:

Frequency = 14.15 MHz

Leading Elements R = 21.44, X = -21.29

Lagging Elements R = 70.81, X = -5.232

We'll use 50 Ω for all lines, so enter 50 into the next three boxes.

Enter 1 for the LAGGING:LEADING I MAGNITUDE and -90 for the phase.

Click FIND SOLUTIONS.

The result will be "No Solution" — indicating this combination of line impedances can't be used. Several other combinations also produce this result, but making lines 1 and 2 each 75 Ω and the 3 λ /4 lines 50 Ω does produce a solution. Enter 75 into the LINE 1 Z0 and LINE 2 Z0 boxes, and leave 50 in the CHOOSE Z0 OF 1/4 OR 3/4 WAVELENGTH LINES box, then click the FIND SOLUTIONS button. There won't be any problem making lines 1 and 2 reach, so we'll choose the first solution because the lines are shorter. The physical lengths of all the lines are shown in the PHYSICAL LENGTHS frame when the velocity factor is entered in the appropriate box. Assuming that we use coax with a velocity factor of 0.66 (and the example frequency of 14.15 MHz), the lengths are:

Line 1: 4.982 feet

Line 2: 20.153 feet

 $3\lambda/4$ lines (marked with an asterisk in the *Arrayfeed1* diagram): 34.408 feet

The lines are connected following the diagram in the upper left part of the *Arrayfeed1* window. This completes the "simplest" feed system design. *EZNEC* model **Rectangular_ TL_Example.EZ** simulates an array fed with this system.

Comparison of the pattern plot to one from ideal-current **Rectangular_Example.EZ**, and examination of the element currents verify that the feed system is producing the desired pattern and element currents.

L-Network Feed System

To design the L network feed system using <code>Arrayfeed1</code>, change the FEED SYSTEM TYPE to L NETWORK and click FIND SOLUTIONS. The resulting L network values are a 0.199 μ H inductor for the series component X_{ser} and a 684.2 pF capacitor for the shunt component X_{sh} . <code>EZNEC</code> model <code>ARRL_Rectangular_L_Network_Example.EZ</code> simulates an array fed with this system.

6.4.6 120° FED, 60° SPACED DIPOLE ARRAY

This example shows the design of "simplest" and L network feed systems for a 2-element 20 meter dipole array, rather than a vertical array. No special accommodation is required for the array made from dipoles rather than vertical elements — the same methods can be used regardless of element shape. This example also shows that both the "simplest" and L network feed systems can readily be applied to elements that use phase angles other than 90°.

Any 2-element array made with identical elements spaced λ/2 or closer and having equal magnitude currents with a relative phase angle of 180° minus the spacing will produce a unidirectional pattern with a good null to the rear. In practice, very close spacings lead to very low feed point resistances, with consequent losses and very narrowband characteristics. But this 60° spaced array is well within the range of practical realization. File **ARRL_Dipole_Array_Example.EZ** is a model created for this array, with ideal element currents. Open this file in *EZNEC* and click FF PLOT to show the pattern at an elevation angle of 10°. You can save this pattern for later comparison to the pattern with a "simplest" feed system by opening the FILE menu in the 2D PLOT window, selecting SAVE TRACE AS, entering a name for the trace file and clicking SAVE.

Following the same procedure as in the previous examples, we begin the array design by finding the element feed point impedances in the ideally fed array using *EZNEC* numbers. Having already opened **ARRL_Dipole_Array_ Example.EZ**, all that's needed is to click SRC DAT. The results are:

Leading element (source 1): $36.16 - j \ 46.05 \ \Omega$ Lagging element (source 2): $49.56 + j \ 51.47 \ \Omega$

"Simplest" (Transmission Line Only) Feed System

Select TWO ELEMENT for the ARRAY TYPE in Array feed 1 and "SIMPLEST" for the FEED SYSTEM TYPE. Enter the frequency of 14.15 MHz and enter the element feed point impedances from EZNEC into the appropriate boxes in the INPUTS frame. For line impedances, the section describing the "simplest" feed system recommends against choosing one which is very different from the element feed point impedances, but for fun let's try $300~\Omega$ for the two lines and see what happens. Enter 300 in the LINE 1 Z0 and LINE 2 Z0 boxes. Finally, enter the LAGGING:LEADING I MAG, PHASE of 1 for MAG and -120 for PHASE.

Click FIND SOLUTIONS. For this example we'll assume that TV-type twinlead with a velocity factor of 0.8 is being used. So enter 0.8 for the VELOCITY FACTOR and read the

physical line lengths in the PHYSICAL LENGTHS frame. A model of the array using the first solution has been created as **ARRL_Dipole_Array_TL_Example.EZ**. Open this file in *EZNEC* and click FF Tab. You should see that the plot is virtually identical to the one saved earlier from the ideal-current model. Note the gain and front-to-back ratio or 8.79 dBi and 31.01 dB respectively reported in the data box below the 2D plot.

Don't subtract 2.15 dB to find the gain relative to a single element! This isn't a free-space model, and the gain of a single dipole over ground is much greater than 2.15 dBi. Instead, delete one of the elements in **ARRL_Dipole_Array_Example.EZ** to find the gain of a single element and subtract that value from the array gain. You can use the undo feature or re-open the file to restore the array.

Now, go back to the model with the "simplest" feed system in *EZNEC* and change the Frequency to 14.0 MHz. Click FF TAB again. The gain has decreased a little, to 8.54 dBi and the front-to-back ratio has also decreased, to 21.8 dB. At 14.3 MHz, the gain is slightly higher, 9.04 dBi, but the front-to-back is again worse, down to 18.64 dB. But this isn't bad overall.

Let's take a look at the second solution. Click the TRANS LINES line in the main *EZNEC* window to open the TRANSMISSION LINES window. Change the length of the first line to 26.856 feet, the second to 28.356 feet, and press the Enter key to complete the change. Change the FREQUENCY back to 14.15 MHz and click FF TAB. You should see exactly the same pattern as for both the first solution and for the ideal current model. But now change the FREQUENCY to 14.0 MHz, click FF TAB, and look at the pattern.

What happened? The gain has dropped to 5.95 dBi and the front-to-back to only 3.1 dB. The array is now nearly bi-directional! It's almost as bad at 14.3 MHz. So we've created a terribly touchy system. The chance of its working correctly even at the design frequency is slim, because there are inevitably some differences between the model and real antenna.

We did have a clue this might happen. As stated in the section describing the "simplest" feed system, the best choices for line Z_0 and for the resulting solution give a difference in electrical line lengths about equal to the desired phase delay of the current. The difference in electrical line lengths for the first solution was about 152° — not as close to the 120° current phase difference as we'd like, but much better than the mere 9.7° difference of the lines for the second solution. While the 300- Ω line Z_0 is quite different from the element feed point impedances, the first solution result is quite good. If desired, you can try other line impedance values into *Arrayfeed1* and evaluate the results with *EZNEC*.

Please see the information about baluns in the Baluns in Phased Arrays section. Baluns are placed the same as in Figure 6.19, which shows the L network feed system.

L-Network Feed System

To design an L network feed system, change the *Arrayfeed1* FEED SYSTEM TYPE to L NETWORK and click FIND SOLUTIONS. The results aren't good ones to use. The

component reactance magnitudes of about 1573 and 2619 Ω are more than five times the 300- Ω Z_0 of the feed lines. As explained in the section describing the L network feed system, it's undesirable to have such a large ratio of component reactance to line Z_0 . Among other problems, the inductor and capacitor values are quite extreme and capacitor stray inductance and inductor capacitance would have a significant impact on performance.

The problem occurs because the feed line impedance we chose is much larger than the element feed point impedances, so the $\lambda/4$ lines transform the feed point impedances to much higher values at the L network and main feed point. This feed system would be extremely critical, narrowbanded and difficult to adjust. We can do better by choosing feed line impedances that aren't too drastically different than the element feed point impedances. In this case, 50 or 75 Ω would be a much better choice than 300. Let's try 75.

In Array feed 1, change the LINE 1 Z0 and LINE 2 Z0 impedances from 300 to 75 and click FIND SOLUTIONS. L network component reactance magnitudes are now about 98 and 164 Ω , much better than before. This will be a relatively uncritical and broadbanded feed system.

Again, be sure to read the information about baluns in the Baluns in Phased Arrays section. Figure 6.19 shows the completed feed system including baluns. *EZNEC* example file **ARRL_Dipole_Array_L_Network_Example.EZ** is a model of the array with L network feed. It does not include baluns, since the transmission line models support only differential mode currents and therefore have the implicit effect of including ideal baluns.

6.4.7 CROSSFIRE RECEIVING ARRAY

While any transmitting array can be used for receiving with the same gain and directivity, inefficient (lossy) arrays do well for HF and MF receiving but not for transmitting. High loss brings the potential for exceptionally wide bandwidth, simplified feed systems and compact size, so receive-only arrays are worth considering for many installations. The following example is for a simple 2-element array using the "crossfire" phasing principle discussed earlier. The same methods can be used for more complex arrays.

The general principle of "crossfire" phasing is to connect the elements together with a delay line with an electrical length equal to the distance between the elements. A frequency-independent phase inversion (such as a wide-band transformer or physical connection reversal of one of the transmission lines) is added somewhere in the feed system path to one but not both of the elements, causing frequencyindependent cancellation of the signals from the two elements when the signal is coming from one end-fire direction. The result is a potentially deep pattern null in one direction over a wide range of frequencies. The pattern can be reversed using methods described later and more elaborate arrays such as the Four-Square can be designed to allow additional null directions by directional switching. Since transmission lines invariably have velocity factors less than one, a single delay line of the proper electrical length is too short in practice to

reach between the elements. The method works equally well, however, using a line to each element from a common point, the only requirement being that the difference in their electrical lengths equals the correct delay length. That is how these example designs were created.

There are a number of ways to create a time delay but about the only practical way of achieving a constant time delay over a wide frequency range is to use a transmission line terminated in its characteristic impedance. The termination must, of course, maintain its impedance over the wide frequency range. The straightforward method of designing a receiving antenna therefore requires that the transmission lines from the elements to somehow be added together but with each properly terminated. This could be done with active circuits, for example, by terminating each line with a terminating resistor connected to the high impedance input of an amplifier or buffer circuit whose outputs can then be added (or subtracted, since an inversion is required somewhere) without affecting the transmission line termination. Passive methods include terminating each transmission line with a matched attenuator, then resistively combining the attenuator outputs. This effectively isolates the terminating impedance from the summing circuitry. Another passive method is to use a hybrid combiner (see **Figure 6.30**) The potential advantage of this method is its relative efficiency, resulting in higher signal (and noise) level output than the attenuator method. This is important only if the received signal level is otherwise small enough that receiver noise becomes apparent.

Another approach to the "crossfire" system is to design the array as though it were to be used for transmitting, even though its low efficiency would make it impractical for that purpose. The difference in this approach is that the transmission line termination is done at the element feed points rather than at the summing point (see **Figure 6.31**) Reciprocity assures that the same directional properties will exist when

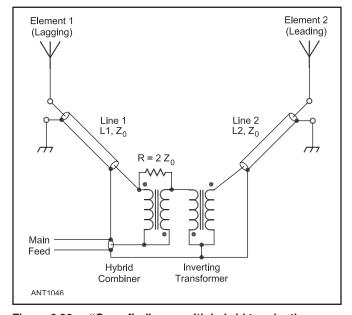


Figure 6.30 — "Crossfire" array with hybrid termination.

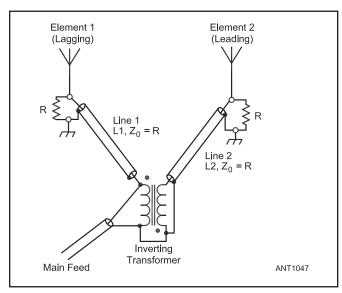


Figure 6.31 — "Crossfire" array with transmitting-type design.

using the array for receiving, even though the transmission lines are properly terminated at their source rather than load ends. The following examples show this approach and the hybrid-terminated receiving array approach for comparison and to illustrate that the reciprocal principle applies. Both arrays have the same pattern when receiving as they do for the modeled transmitting case.

Transmitting Array Type Design

A two-element "crossfire" array with transmitting-type design is included as *EZNEC* example file **ARRL_Crossfire1_Example.EZ**. The array consists of two 30-foot-high vertical elements spaced 60 feet apart. These correspond to approximately ½6 wavelength and ½8 wavelength respectively at 1.85 MHz. Two transmission lines are used. This is being called a "transmitting array type design" because the transmission lines are terminated at the load end when driven by a transmitter, but are terminated at the load end in some other impedance when receiving.

Because the elements are electrically short, they have high feed point impedances, so parallel $50-\Omega$ resistors at each feed point provide stable, near- $50-\Omega$ terminations for the transmission lines regardless of mutual coupling effects. The difference between the electrical lengths of the lines is 60 feet, the same as the line spacing. An ideal transformer is used in the model to effect the required phase inversion to one of the elements.

The model could be simplified by deleting the transformer and specifying a reverse connection of one of the transmission lines, and the result would be the same. However, the included model more closely represents how the antenna would actually be implemented. The model shows a front-to-back ratio of better than 30 dB at 1 and 1.85 MHz, dropping to just over 20 dB at 4 MHz. Degradation at the higher frequency is due to the lower feed point impedance as the element becomes electrically longer. This dilutes the effectiveness of the 50- Ω feed point swamping resistors. Modeling with a program having plane-wave excitation capability confirms that the front-to-back ratio is the same when receiving as when transmitting.

An 18- Ω resistor is included at each element base to simulate the resistance of a moderately good ground system. However, because its value is small compared to the large impedance of a short element, it has no significant effect on the array performance. This indicates that the array will work well (for receiving) without an elaborate ground system.

Receiving Array Type Design — Hybrid Termination

EZNEC example ARRL_Crossfire_Hybrid_Feed_ **Example.EZ** uses the opposite design approach from the previous example. Instead of being terminated at the elements, the transmission lines are terminated at the ends where a receiver would be connected. Termination and signal addition are done with a hybrid combiner circuit consisting of a transformer and resistor. The inverting transformer is replaced in this model with a connection reversal of one of the transmission lines, for simplicity, as explained in the previous example. This model shows an improved front-toback ratio of about 29 dB at 4 MHz compared to about 22 dB for the transmitting-type design, due to reduced sensitivity to mutual coupling and element impedance effects. Front-to-back ratio of the two examples is about the same at 1 and 1.85 MHz. This system is more efficient than the transmitting-type design, with signal (and noise) levels of about 5 dB greater at 4 MHz increasing to 14 dB greater at 1 MHz. This won't improve system signal-to-noise ratio unless the level of atmospheric noise is so low that receiver noise is audible.

Note: Modeling of the hybrid circuit and similar structures is difficult, requiring some experimenting and compromising to satisfy the requirements of the *NEC* calculating engine which isn't designed for analysis of loaded electrically small structures. Often, a suitable compromise isn't possible. This design is included for illustration only, not as encouragement to attempt to construct similar models.

6.5 PRACTICAL ASPECTS OF PHASED ARRAY DESIGN

With almost any type of antenna system, there is much that can be learned from experimenting with, testing and using various array configurations. In this section, Roy Lewallen, W7EL, extends his contribution to this book, sharing the benefit of years of his experience from actually building, adjusting and using phased arrays. There is much more work to be done in most of the areas covered here, and Roy encourages the reader to build on this work.

6.5.1 ADJUSTING PHASED ARRAY FEED SYSTEMS

If a phased array is constructed only to achieve forward gain, adjusting it is seldom worthwhile. This is because the forward gain of most arrays is quite insensitive to either the magnitude or phase of the relative currents flowing in the elements. If, however, good rejection of unwanted signals is desired, adjustment may be required. And achieving very deep nulls will almost surely require some adjustment.

The in-phase and 180° out-of-phase current-forcing method supplies very well-balanced and well-phased currents to elements without adjustment. If the pattern of an array fed using this method is unsatisfactory, it's generally the result of environmental differences — where the elements, even though furnished with correct currents, aren't generating the correct fields. Such an array can be optimized in a single direction, but a more general approach than the current-forcing method must be taken. Some possibilities are described by Paul Lee and Forrest Gehrke (see Bibliography).

Unlike the current-forcing method, the "simplest" and L network feed systems described earlier in this chapter are dependent on the self and mutual impedance of one or more elements. The required transmission-line lengths or L network component values can be computed to a high level of precision, but the results are only as good as the knowledge of the relevant feed point impedances.

While the simplest feed system doesn't readily lend itself to adjustment, the components of an L network can easily be made adjustable or can be experimentally changed in increments. A practical approach is to model the array as accurately as possible, design and build the feed system based on the model results and then adjust the network for the best performance.

Simple arrays such as the two-element 90° fed and spaced array can be adjusted as follows. Place a low-power signal source at a distance from the array (preferably several wavelengths), in the direction a null should be. While listening to the signal on a receiver connected to the array, alternately adjust the two L network components for the best rejection of the signal.

This has proved to be a very good way to adjust 2-element arrays. However, variable results were obtained when a Four-Square array was adjusted using this technique. The probable reason is that more than one combination of current balance and phasing can produce a null in a given direction but each produces a different overall pattern. So a different method must be used for adjusting more complex arrays.

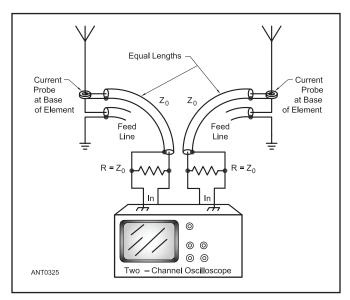


Figure 6.32 — One method of measuring element currents in a phased array. Details of the current probe are given in Figure 6.33. Caution: Do not run high power to the antenna system for this measurement, or damage to the test equipment may result.

This involves actually measuring the element currents in some way, and adjusting the network until the currents are correct. After adjusting the currents, small adjustments can be made to deepen the null(s) if desired.

Measuring Element Currents

You can measure the element currents two ways. One way is to measure them directly at the element feed points, as shown in **Figure 6.32**. A dual-channel oscilloscope is required to monitor the currents. This method is the most accurate and it provides a direct indication of the actual relative

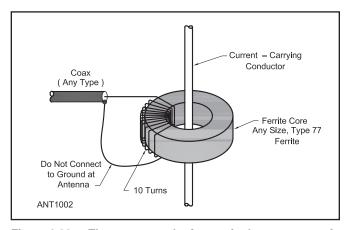


Figure 6.33 — The current probe for use in the test setup of Figure 6.32. The ferrite core is of type 77 ferrite or type 2 powdered iron and may be any size. The coax line must be terminated at the opposite end with a resistor equal to its characteristic impedance. You should build this probe in a plastic or metal box to provide mechanical ruggedness.

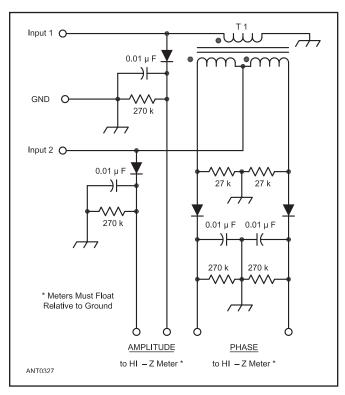


Figure 6.34 — Quadrature test circuit. All diodes are germanium, such as 1N34A, 1N270, or equiv. Hot carrier or silicon diodes can be used at higher power levels. All resistors are $\frac{1}{4}$ or $\frac{1}{2}$ W, 5% tolerance. Capacitors are ceramic. Alligator clips are convenient for making the input and ground connections to the array.

T1 — 7 trifilar turns on an Amidon FT-37-43, -75, -77, or equivalent ferrite toroid core.

magnitudes and phases of the element currents. The current probe is shown in **Figure 6.33**. (Another current probe design by W8JI is presented at **www.w8ji.com/building_a_current meter.htm**.)

Instead of measuring the element currents directly, you could measure them indirectly by measuring the voltages on the feed lines an electrical $\lambda/4$ or $3\lambda/4$ distance from the array. The voltages at these points are directly proportional to the element currents. This introduces additional variables that can reduce the accuracy of the result, but the method generally produces adequate performance. The 2-element arrays fed with the L network system and all the four-element arrays presented earlier have $\lambda/4$ or $3\lambda/4$ lines from all elements to a common location, making this second measurement method convenient. The voltages can be observed with a dual-channel oscilloscope, or, to adjust for equal-magnitude currents and 90° phasing, you can use the test circuit shown in **Figure 6.34**.

The test circuit is connected to the feed lines of two elements that are to be adjusted for 90° phasing (such as elements 1 and 2, or 2 and 4 of the Four-Square array of Figures 6.24 and 25). Adjust the L network components alternately until both meters read zero. Proper operation of the test circuit can be verified by disconnecting one of the inputs. The

phase output should remain close to zero. If not, there is an undesirable imbalance in the circuit, which must be corrected. Another means of verification is to first adjust the L network so the tester indicates correct phasing (zero volts at the phase output). Then reverse the tester input connections to the elements. The phase output should remain close to zero.

6.5.2 DIRECTIONAL SWITCHING OF ARRAYS

One ideal directional-switching method would take the entire feed system, including the lines to the elements and physically rotate it. The smallest possible increment of rotation would depend on the symmetry of the array — the feed system would need to rotate until the array again looks the same to it. For example, any 2-element array can be rotated 180° (although that wouldn't accomplish anything if the array is bidirectional to begin with). The 4-element rectangular array of Figures 6.28 and 29 can also be reversed, and the Four-Square array of Figures 6.24 and 25 can be switched in 90° increments.

Smaller switching increments can be accomplished only by reconfiguring the feed system, including any network if used, effectively creating a different kind of array. Switching in smaller increments than dictated by symmetry will create a different pattern in some directions than in others, and must be thoughtfully done to maintain equal and properly phased element currents. The methods illustrated here will deal only with switching in increments related to the array symmetry, except for one: a 2-element broadside/end-fire array.

In all arrays, the success of directional switching depends on the elements and ground systems being identical so that equal element currents result in equal fields. It's even more important in arrays fed with any method other than current forcing, because the effectiveness of those methods depends on the element feed point impedances. Few of us can afford the luxury of having an array many wavelengths away from all other conductors, so an array will nearly always perform somewhat differently in each direction. The array should be adjusted when steered in the direction requiring the most signal rejection in the nulls. Forward gain will, for all practical purposes, be equal in all the switched directions, since gain is much more tolerant of error than are nulls.

Basic Switching Methods

Following is a discussion of basic switching methods, how to power relays through the main feed line and other practical considerations. In diagrams, grounds are frequently omitted to aid clarity, but connections of the ground conductors must be carefully made. In fact, it is recommended that the ground conductors be switched just as the center conductors are, as explained in more detail in Improving Array Switching Systems below. In all cases, interconnecting lines must be very short.

A pair of elements spaced $\lambda/2$ apart can readily be switched between broadside and end-fire bidirectional patterns, using the current-forcing properties of $\lambda/4$ lines. The

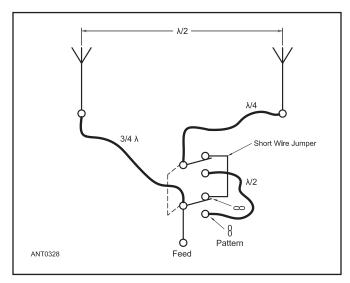


Figure 6.35 — Two-element broadside/end-fire switching. All lines must have the same characteristic impedance. Grounds and cable shields have been omitted for clarity.

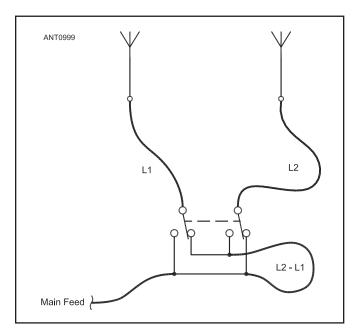


Figure 6.36 — Directional switching for 90°, 90° spaced 2-element array fed with a "simplest" feed system.

method is shown in **Figure 6.35**. The switching device can be a relay powered via a separate cable or by dc sent along the main feed line.

Figure 6.36 shows directional switching of a 90° fed, 90° spaced array fed with a "simplest" feed system, where L1 and L2 are the required lengths of the two feed lines. **Figure 6.37** shows how to switch the same array when fed with an L network, current-forcing system.

The rectangular array of Figure 6.28 can be switched in a similar manner, as shown in **Figure 6.38**. To switch a "simplest" fed rectangular array, use the switching circuit of Figure 6.36, but connect the two equal length lines to points

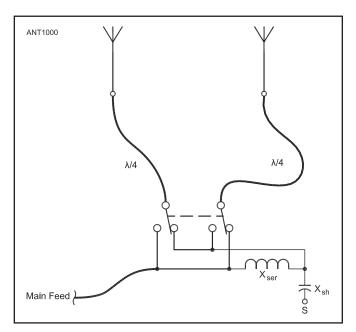


Figure 6.37 — Directional switching for 90°, 90° spaced 2-element array fed with an L network, current-forcing feed system.

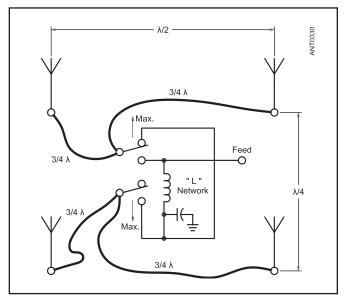


Figure 6.38 — Directional switching of a four-element rectangular array. All interconnections must be very short. As usual, grounds and cable shields have been omitted for clarity.

A and B of Figure 6.29 in place of the two elements shown in Figure 6.36.

Switching the direction of an array in increments of 90° , when permitted by symmetry, requires at least two relays. A method of 90° switching of the Four-Square array with L network feed is shown in **Figure 6.39**.

Powering Relays Through Feed Lines

All of the above switching methods can be implemented without additional wires to the switch box. A single-relay

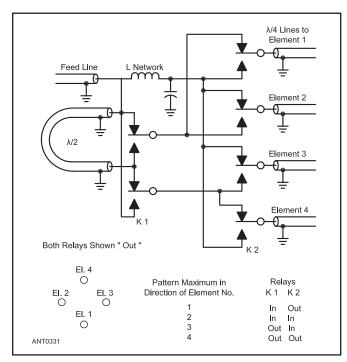


Figure 6.39 — Directional switching of the Four-Square array. All interconnections must be very short.

system is shown in **Figure 6.40A**, and a two-relay system in Figure 6.40B. Small 12 or 24-V dc power relays can be used in either system at power levels up to at least a few hundred watts. Do not attempt to change directions while transmitting, however. Blocking capacitors C1 and C2 should be good quality ceramic or transmitting mica units of 0.01 to 0.1 μ F. No problems have been encountered using 0.1 μ F, 300-V monolithic ceramic units at RF output levels up to 300 W. C2 may be omitted if the antenna system is an open circuit at dc. C3 and C4 should be ceramic, 0.001 μ F or larger.

In Figure 6.40B, capacitors C5 through C8 should be selected with the ratings of their counterparts in Figure 6.40A, as given above. Electrolytic capacitors across the relay coils, C9 and C10 in Figure 6.40B, should be large enough to prevent the relays from buzzing, but not so large as to make relay operation too slow. Final values for most relays will be in the range from 10 to 100 μF . They should have a voltage rating of at least double the relay coil voltage. Some relays do not require this capacitor. All diodes are 1N4001 or similar. A rotary switch may be used in place of the two toggle switches in the two-relay system to switch the relays in the desired sequence.

Improving Array-Switching Systems

The extra circuitry involved in switching arrays can degrade array performance by altering the relative currents fed to each element. One common cause is current sharing in common ground conductors, even when connections are kept very short. The author has seen a 30° phase shift in voltage along a 4-inch piece of #12 AWG wire in a 40 meter array feed system.

When the two conductors of a feed line are physically

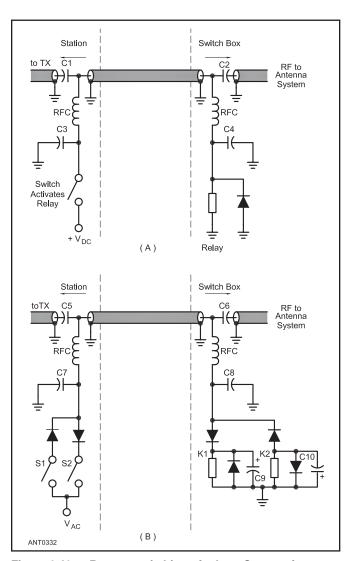


Figure 6.40 — Remote switching of relays. See text for component information. A one-relay system is shown at A, and a two-relay system at B. In B, S1 activates K1, and S2 activates K2. In addition, it is recommended to bypass each diode with a 0.001 - 0.01 μF disc ceramic capacitor to avoid generating harmonics and mixing products when transmitting.

separated from each other the characteristic impedance increases. This is especially true when the main lines are coaxial cables. If currents from two elements share the ground conductor of a split line a relatively large voltage drop results. Voltage changes $\lambda/4$ from the elements translate to current changes at the elements. Although keeping all leads extremely short is sometimes adequate, the best way to reduce current sharing problems is to keep the two conductors of each transmission line as close together as possible, and switch both conductors of each line rather than just a single or "hot" conductor.

An example of a carefully designed switching system is shown in **Figure 6.41**. It avoids the problem of shared ground conductor currents, as well as another common problem, namely that effective line lengths are often different along different switching paths. Notice how the path from the main

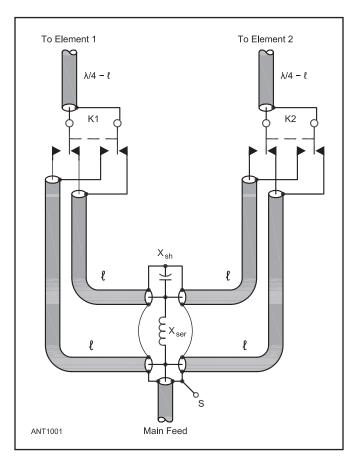


Figure 6.41 — A carefully designed L network, current-forcing switching system that switches both hot and shield conductors in feed coaxes.

feed point travels through a single line to each element with no common ground connections to other lines except at the main feed point. Notice also that the distance doesn't change as the direction is switched. The $\lambda/4$ lines going to the two elements must be shortened by the length ℓ of the lines on the feed side of the relays so that the total line length from the main feed point to each element is $\lambda/4$ (or $3\lambda/4$).

You can see that in either relay position, there's an open ended stub of length ℓ connected at the main feed point and another at the output end of the L network. These will add capacitance at those points. Extra capacitance at the main feed point will alter the overall impedance seen by a transmitter, but won't otherwise have any effect on the array or its performance. The one at the output of the L network will, however, change the transformation and phase shift properties of the network. But it's easy to compensate — the value of the shunt capacitor element is simply reduced by the amount of capacitance added by the stub. The amount of capacitance for any kind of transmission line can be calculated from:

C (pF/ft) =
$$\frac{1017}{Z_0 \text{ VF}}$$

or
C (pF/m) = $\frac{3336}{Z_0 \text{ VF}}$

where Z_0 = the characteristic impedance of the line and VF = the velocity factor. This works out to 31 pF/foot or 101 pF/meter for $50-\Omega$ solid polyethylene insulated coax which has a velocity factor of 0.66.

The general principles illustrated in Figure 6.41 can be extended to other switching systems. If switching the ground conductors as described above isn't practical, use of a metal box for the switching circuitry is recommended, so that the relatively large surface area of the box can be used for the common ground conductors, minimizing their inductance. Always keep leads extremely short.

6.5.3 MEASURING THE ELECTRICAL LENGTH OF FEED LINES

When using the feed methods described earlier the feed lines must be very close to the correct length. For best results, they should be correct within 1% or so. This means that a line that is intended to be, say, $\lambda/4$ at 7 MHz, should actually be $\lambda/4$ at some frequency within 70 kHz of 7 MHz. A simple but accurate method to determine at what frequency a line is $\lambda/4$ or $\lambda/2$ is shown in **Figure 6.42A**. The far end of the line is short circuited with a very short connection. A signal

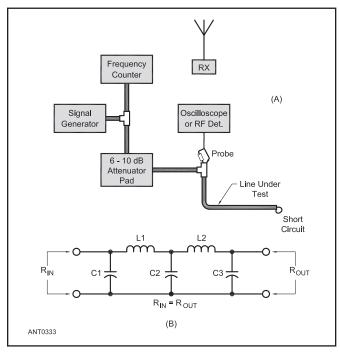


Figure 6.42 — At A, the setup for measurement of the electrical length of a transmission line. The receiver may be used in place of the frequency counter to determine the frequency of the signal generator. The signal generator output must be free of harmonics; the half-wave harmonic filter at B may be used outboard if there is any doubt. It must be constructed for the frequency band of operation. Connect the filter between the signal generator and the attenuator pad.

C1, C3 — Value to have a capacitive reactance = $R_{\rm IN}$ -C2 — Value to have a capacitive reactance = 1/2 $R_{\rm IN}$. L1, L2 — Value to have an inductive reactance = $R_{\rm IN}$. is applied to the input and the frequency is swept until the impedance at the input is a minimum. This is the frequency at which the line is $\lambda/2$. Either the frequency counter or the receiver may be used to determine this frequency. The line is, of course, $\lambda/4$ at one half the measured frequency.

The detector can be a simple diode detector or an oscilloscope may be used if available. A 6 to 10 dB attenuator pad is included to prevent the signal generator from looking into a short circuit at the measurement frequency. The signal generator output must be free of harmonics. If there is any doubt, an outboard low-pass filter, such as a half-wave harmonic filter, should be used. The half-wave filter circuit is shown in Figure 6.42B, and must be constructed for the frequency band of operation.

Another satisfactory method is to use a noise or resistance bridge or antenna analyzer at the input of the line, again looking for a low impedance at the input while the output is short circuited. Simple resistance bridges are described in the **Antenna and Transmission Line Measurements** chapter.

Dip oscillators have been found to be unsatisfactory. The required coupling loop has too great an effect on measurements.

6.5.4 MEASURING ELEMENT SELF AND MUTUAL IMPEDANCES

The need for measuring element self and mutual impedances has been made largely unnecessary with the ready availability of modeling software. Few amateurs appreciate the considerable difficulty of making accurate impedance measurements and accurate mutual impedance measurements are very difficult even with professional test equipment and skills. Despite the limitations of computer modeling, results very often are better than measured values because of the multiple factors affecting measurement accuracy.

Those who are interested in measuring self and mutual impedances can find more detailed information about doing so in Appendix B on this book's CD. The information there is from earlier editions of *Antenna Book*.

6.6 BIBLIOGRAPHY

Source material and more extended discussion of topics covered in this chapter can be found in the references given below and in the textbooks listed at the end of the **Antenna Fundamentals** chapter.

- D. W. Atchley, H. E. Stinehelfer, and J. F. White, "360°-Steerable Vertical Phased Arrays," *QST*, Apr 1976, pp 27-30.
- G. H. Brown, "Directional Antennas," *Proc. IRE*, Vol 25, No. 1, Jan 1937, pp 78-145.
- G. H. Brown, R. F. Lewis and J. Epstein, "Ground Systems as a Factor in Antenna Efficiency," *Proc. IRE*, Jun 1937, pp 753-787.
- G. H. Brown and O. M. Woodward, Jr., "Experimentally Determined Impedance Characteristics of Cylindrical Antennas," *Proc. IRE*, Apr 1945.
- L. B. Cebik, "Two Limitations of NEC-4", www.cebik. com/model/fd.html (subscription required to view this article).
- A. Christman, "Feeding Phased Arrays: An Alternate Method," *Ham Radio*, May 1985, pp 58-59, 61-64.
- A. Christman, "Tall Vertical Arrays," *QEX*, Nov/Dec 2012, pp 24-35.
- A. Christman, "A Study of Tall Verticals," *QEX*, May/Jun 2011, pp 26-31.
- A. Christman, "A Study of Tall Verticals (Letters to the Editor)," *QEX*, Sep/Oct 2011, pp 38-39.
- A. Christman, "A Study of Phased Vertical Arrays," *QEX*, Mar/Apr 2006, pp 46-51.
- J. Devoldere, *ON4UN's Low-Band DXing*, 5th ed. (Newington, CT: ARRL, 2010).
- EZNEC is an antenna-modeling computer program for Microsoft *Windows*. See **www.eznec.com** for full information.

- F. Gehrke, "Vertical Phased Arrays," in six parts, *Ham Radio*, May-Jul, Oct and Dec 1983, and May 1984.
- C. Harrison, Jr, and R. King, "Theory of Coupled Folded Antennas," *IRE Trans on Antennas and Propagation*, Mar 1960, pp131-135.
- W. Hayward and D. DeMaw, *Solid State Design for the Radio Amateur* (Newington, CT: ARRL, 1977).
- W. Hayward, *Radio Frequency Design* (Newington, CT: ARRL, 1994).
- H. Jasik, *Antenna Engineering Handbook*, 1st ed. (New York: McGraw-Hill, 1961). Later editions are edited by Richard C. Johnson.
- R. King and C. Harrison, Jr, "Mutual and Self-Impedance for Coupled Antennas," *Journal of Applied Physics*, Vol 15, Jun 1944, pp 481-495.
- R. King, "Self- and Mutual Impedances of Parallel Identical Antennas," *Proc. IRE*, Aug 1952, pp 981-988.
- R. W. P. King, *Theory of Linear Antennas* (Cambridge, MA: Harvard Univ Press, 1956), p 275ff.
- H. W. Kohler, "Antenna Design for Field-Strength Gain," *Proc. IRE*, Oct 1944, pp 611-616.
- J. D. Kraus, "Antenna Arrays with Closely Spaced Elements," *Proc. IRE*, Feb, 1940, pp 76-84.
- J. D. Kraus, *Antennas*, 2nd ed. (New York: McGraw-Hill Book Co, 1988).
- Johnson, Richard C., *Antenna Engineering Handbook*, 3rd ed. (New York: McGraw-Hill Inc, 1993). This is a later edition of the volume by the same name edited by H. Jasik.
- E. A. Laport, *Radio Antenna Engineering* (New York: McGraw-Hill Book Co, 1952).

- J. L. Lawson, "Simple Arrays of Vertical Antenna Elements," *QST*, May 1971, pp 22-27.
- P. H. Lee, *The Amateur Radio Vertical Antenna Handbook*, 2nd ed. (Hicksville, NY: CQ Publishing, Inc., 1984).
- R. W. Lewallen, "Baluns: What They Do and How They Do It," *The ARRL Antenna Compendium, Vol 1* (Newington: ARRL, 1985). Also available for viewing at **www.eznec.com/Amateur/Articles/Baluns.pdf**.
- R. Lewallen, "The Impact of Current Distribution on Array Patterns," Technical Correspondence, *QST*, Jul 1990, pp 39-40. Also available for viewing at **www.eznec.com/Amateur/Articles/Current_Dist.pdf**.
- R. Lewallen, "MININEC The Other Edge of the Sword,"

- QST, Feb 1991, pp 18-22. ELNEC, referenced in the article, is no longer available.
- M. W. Maxwell, "Some Aspects of the Balun Problem," *QST*, Mar 1983, pp 38-40.
- J. Sevick, "The Ground-Image Vertical Antenna," *QST*, Jul 1971, pp 16-19, 22.
- J. Sevick, "The W2FMI Ground-Mounted Short Vertical," *QST*, Mar 1973, pp 13-28,41.
- E. J. Wilkinson, "An N-Way Hybrid Power Divider," *IRE Transactions on Microwave Theory and Techniques*, Jan. 1960.
- Radio Broadcast Ground Systems, available from Smith Electronics, Inc, 8200 Snowville Rd, Cleveland, OH 44141.

APPENDIX A — EZNEC EXAMPLES

This appendix contains step-by-step procedures using *EZNEC* to illustrate various topics discussed in the main chapter. The various example modeling files described in the text are available on the CD-ROM that accompanies this book. They may be opened and used with the demo version of *EZNEC* v. 6, which is available for download from **www.eznec.com**. A full version of *EZNEC* v. 4.0 or later may also be used. Different versions, program types and calculating engines may give results that are slightly different from those shown in the examples. However, any differences should be insignificantly small.

EZNEC Example — Mutual Coupling

This example illustrates the effect of mutual coupling on feed point impedance. Open the **ARRL_Cardioid.EZ** file, which is mounted over "perfect" ground. Click the VIEW ANT button to see a diagram of the antenna, a 2-element array of vertical elements. Click on the WIRES line in the main window to open the Wires Window. Click the button at the left of the Wire 2 line, and then press the DELETE key on your keyboard to delete wire #2. After clicking OK, note that one of the verticals has disappeared from the View Antenna display, leaving a single element. Click SRC DAT and note that the feed point impedance of this single vertical is about 37 + j 1 Ω — it's very nearly resonant.

Next, in the Wires Window, open the EDIT menu at the top and click UNDO DELETE WIRE(S) to restore the second element. Click SRC DAT again and notice that the feed point impedance of wire #1 is now about 21-j 19 Ω . The feed point impedance of the second element, which is identical to the first, is about 52+j 21 Ω . This difference, and the change from the self-impedance of 37+j 1 Ω , is due to mutual coupling. As you see, it's not at all a minor effect.

As an additional exercise, change the magnitude or phase angle of the source at the base of wire #2 (click SOURCES in the main window), and see how this changes the feed point impedances of both elements. You should be able to confirm

each of the four points enumerated in the "Mutual Coupling" section.

EZNEC Example — Nulls

This example illustrates the effect of current magnitude on nulls and gain. Again, open the **ARRL_Cardioid.EZ** file. Click the FF PLOT button to generate the azimuth pattern of an ideal array. Save the plot for future reference as follows: In the plot window, open the FILE menu and select SAVE TRACE AS. Enter the name CARDIOID and click SAVE. Now, in the main window click on the SOURCES line to open the Sources Window. Change the magnitude of source 1 from 1 to 1.1, and of source 2 from 1 to 0.9 and press ENTER on your keyboard so that *EZNEC* will accept the last change.

Click FF PLOT to generate a pattern with the new currents. In the plot window, open the File menu and select ADD TRACE. Enter the name CARDIOID and click Open. You should now see the original plot and new plot overlaid. Notice that the null is much less deep with the altered currents, but the forward patterns are nearly identical. By clicking on the names of the traces, PRIMARY and CARDIOID, you can see in turn the gain and front-to-back ratio of each of the traces. The original, CARDIOID, has a front-to-back ratio of about 32 dB, while Primary, the new plot, has a ratio of about 22.5 dB. The forward gain, however, differs by only 0.02 dB, a completely insignificant amount.

EZNEC Example — "Phasing-Line" Feed

This example illustrates the effect of using a "phasing-line" feed. Open the **ARRL_CardTL.EZ** file. This is a model of an array fed with transmission lines whose lengths were designed using the *Arrayfeed1* program to take into account the actual load impedances of elements in a phased array. This model is mounted over "perfect" ground.

Click the VIEW ANT button to show the array. Note that the lengths of the lines from the source (circle) to the elements don't represent the actual physical lengths of the lines. In the main window, click on the TRANS LINES line to open the Transmission Lines window. In it you can see that the lengths of the feed lines, both of which are connected to the same source, are about 81° and 155° , a difference of 74° rather than 90° .

In the main window, click the CURRENTS button and take a look at the current shown for segment 1 of wires 1 and 2. These are the currents at the element feed points. The ratio of the magnitude of currents is 4.577/4.561 = 1.003, and the phase difference is $-56.3^{\circ}-(-147.5^{\circ}) = 91.2^{\circ}$. (A more accurate determination of feed line lengths with program *Arrayfeed1* gives lengths of 80.61° and 153.70° , resulting in a current ratio of 1.000 at a phase of 90.02° . But the resulting pattern is very nearly the same.) But let's see what happens when we make the lines exactly 90° different in length.

First, click the FF PLOT button to generate the azimuth pattern of the original model. Save the plot for future reference as follows: In the plot window, open the FILE menu and select SAVE TRACE AS. Enter the name CARDTL and click SAVE. Now in the Transmission Lines Window, change the

length of line number 1 from 80.56° to 90° . *Important:* In the line 1 Length box, enter 90D to make the line 90° long. If you omit the "d," it will become 90 meters long! Similarly, change the length of line 2 to 180° by entering 180D in the line 2 Length box, then press ENTER on your keyboard so that *EZNEC* will accept the last change.

Click FF PLOT to generate a pattern with the new line lengths. In the plot window, open the FILE menu and select ADD TRACE. Enter the name CARDTL and click OPEN. You should now see the original plot and new plot overlaid together. Notice that the gain of the modified model is about 1 dB greater than the original but the front-to-back ratio has deteriorated to about 10 dB.

Experiment with different combinations of line lengths that differ by 90°—for example, 45° and 135° (don't forget the 'd'!), or change the impedance of one or both lines and you'll see that you can get a wide variety of patterns. None, however, are likely to be as close to the ideal cardioid pattern as the original.