

MICRODUCK DIY | SHEET 2 – MECHANICAL DRY-FIT

Steps 1–6 • unpowered fit checks • no verified mounting dimensions

1 INVENTORY + MEASURE

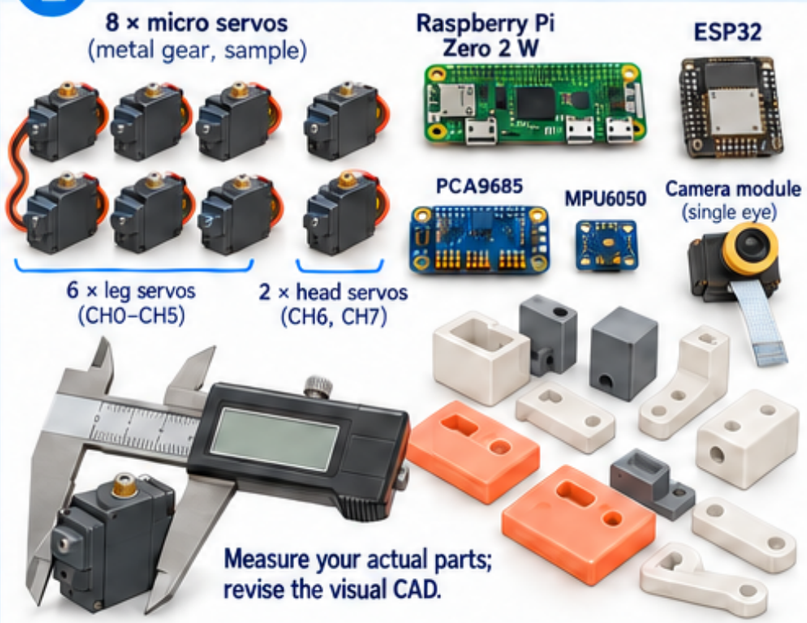


2 TEST ONE MOUNT

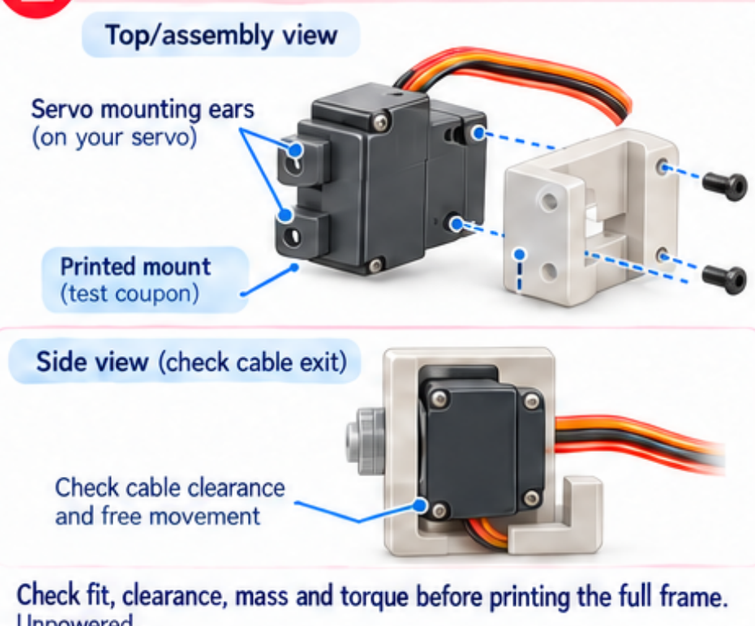


Check fit, clearance, mass and torque before printing the full frame.
Unpowered.

3 FOOT + SHIN DRY-FIT

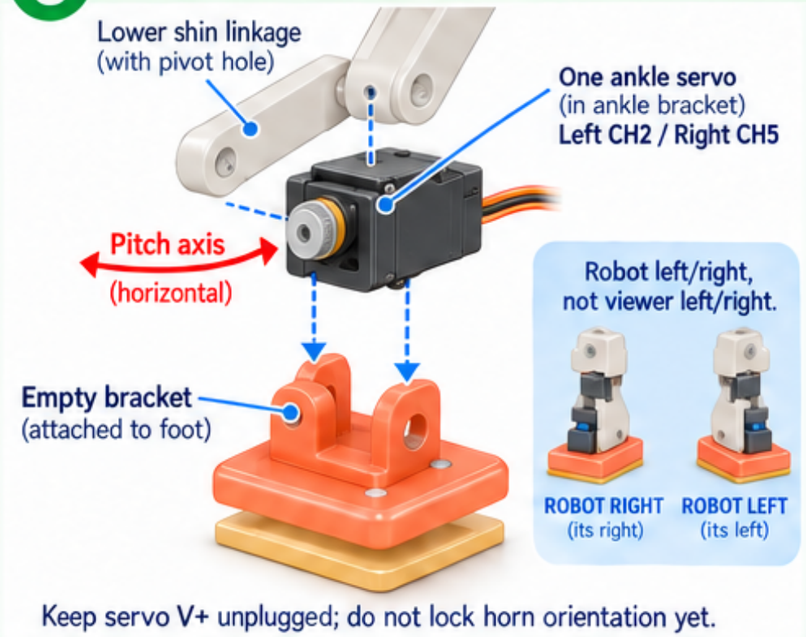


Keep servo V+ unplugged; do not lock horn orientation yet.

4 ADD KNEE + HIP

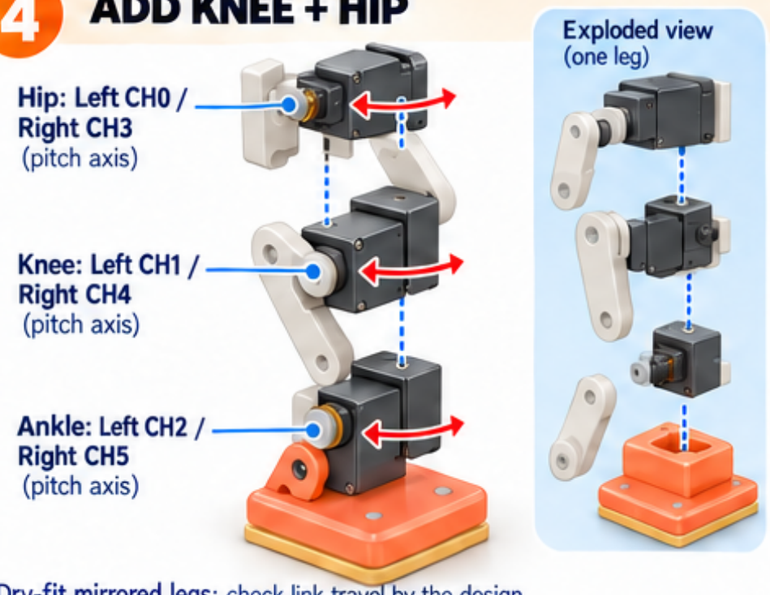


Dry-fit mirrored legs; check link travel by the design.
Three pitch axes, all parallel (horizontal). No hip-yaw or hip-roll actuators.

5 HEAD PAN + TILT

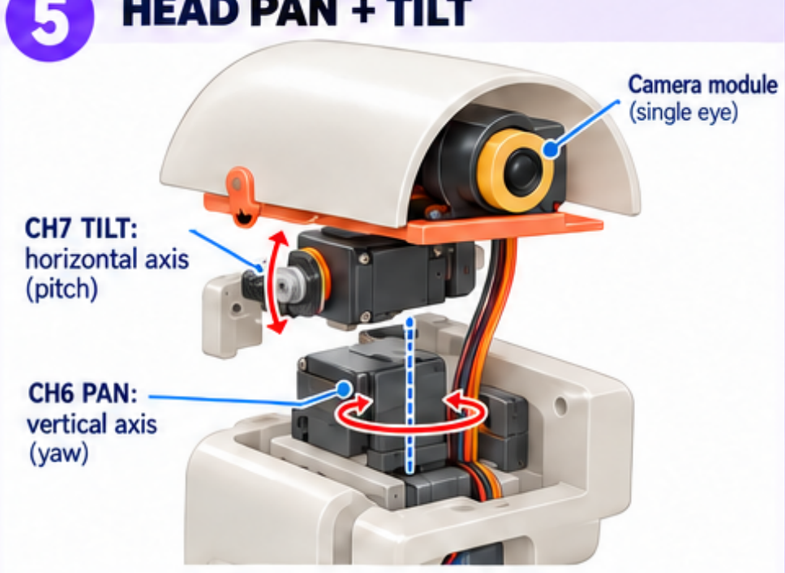

Test brackets and clearance; keep Pi in torso. Only **two** head servos (CH6 pan, CH7 tilt).

6 SUPPORTED DRY ASSEMBLY

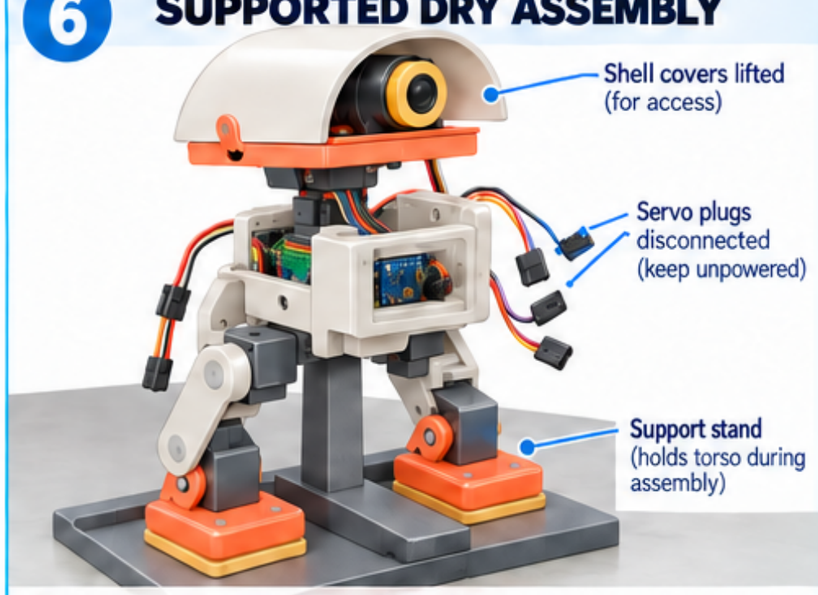

Check mass, interference and cable paths.
Horns fit only after later measured calibration.

CURRENT BUILD STOPS AT DRY-FIT. Powered servo calibration requires the future commissioning/PWM module and verified power interlocks. This is not a validated printable assembly.

MicroDuck visual reference: Pollen Robotics • CC BY-NC-SA 4.0