

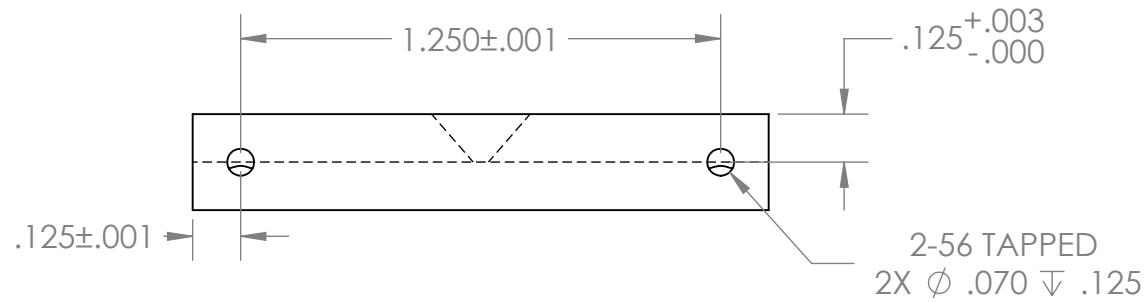
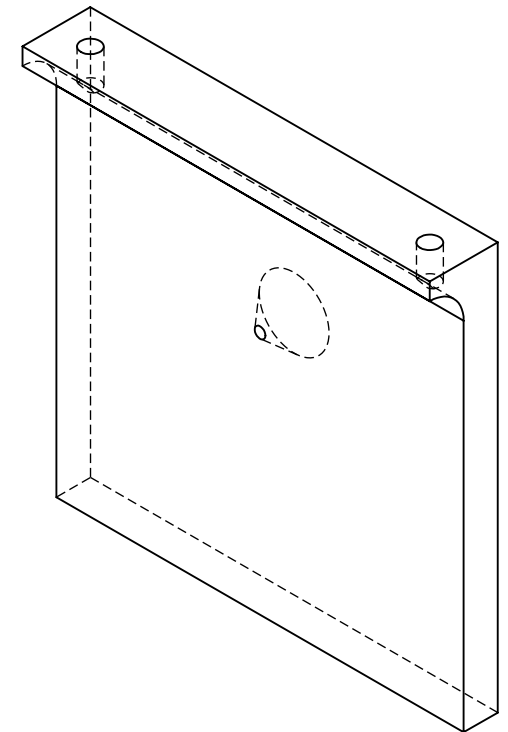


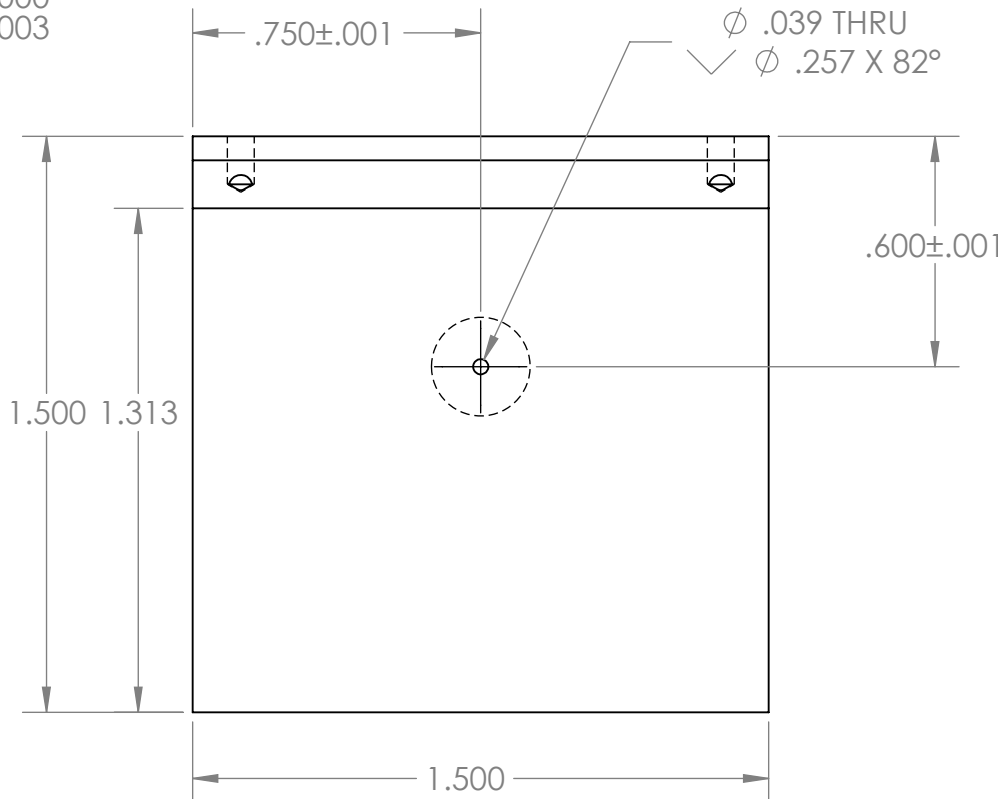

USE 1/4" BALL MILL TO THIN PART. TO MAKE KNIFE EDGE, COUNTERSINK FIRST UNTIL METAL ON BOTTOM STARTS TO BULGE SLIGHTLY. THEN USE #0 CLEARANCE DRILL TO PUNCH THROUGH.

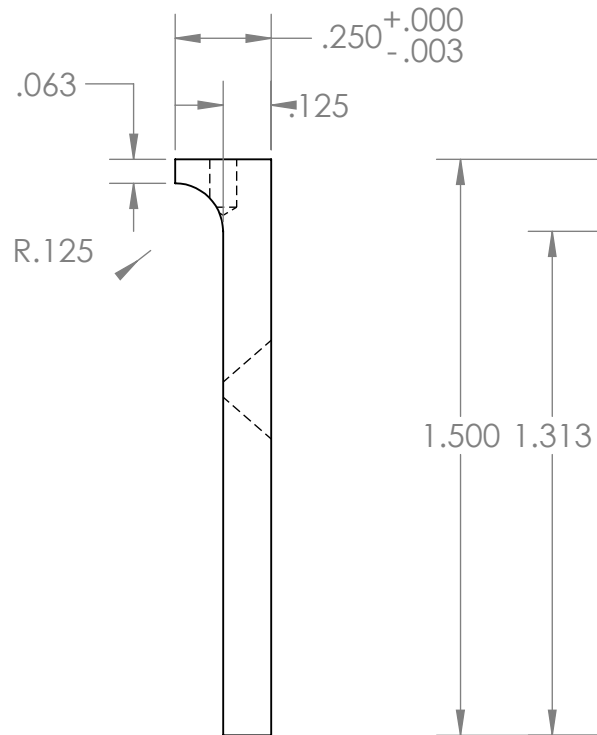

COMMENTS

UNLESS OTHERWISE SPECIFIED
DIMENSIONS ARE IN INCHES
TOLERANCES ARE +/- 0.003

PINHOLE CONFIG
SHEET 1 OF 2

MATERIAL

0.25" AL6061 89155K221

DESIGNER

WILLIAM LI

DATE

6/6/2026

QTY

1

PART NAME

APERTURE_PLATE_FINAL

DWG NO.


9

SCALE

2:1

REV

1

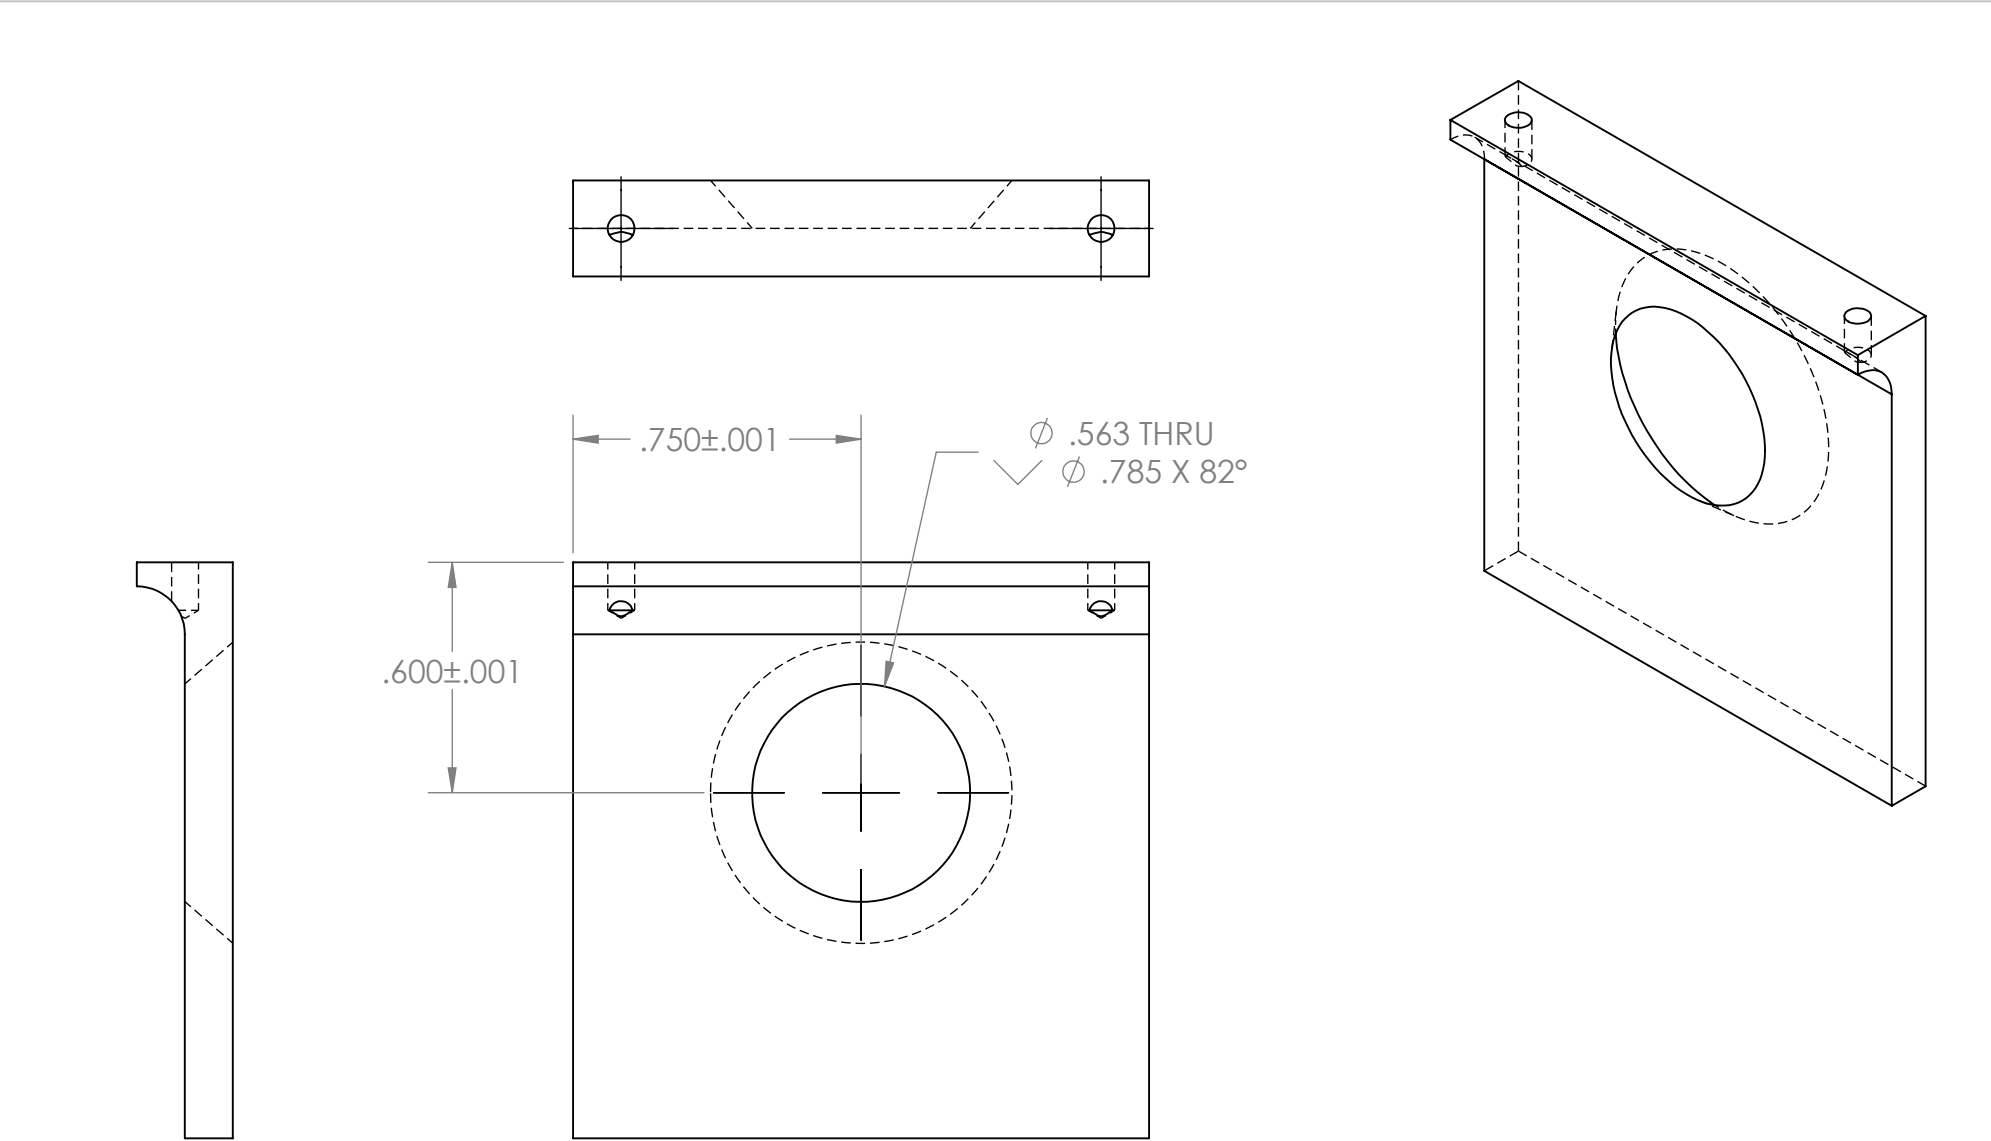

COMMENTS UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES TOLERANCES ARE +/- 0.003 FULL APERTURE CONFIG SHEET 2 OF 2		MATERIAL 0.25" AL6061 89155K221		PART NAME APERTURE_PLATE_FINAL		
		DESIGNER WILLIAM LI		DWG NO.	SCALE	REV
DATE 6/6/2026		QTY	1	9	2:1	1