RPMGLOBAL

AMT EPF SDK Adapter

Knowledge 9.0

© 2025 RPMGLOBAL | All Rights Reserved

Contents

1 Business Background 4
2 Considerations and Assumptions 4
3 Decision Points and Configuration Options 4
4 Prerequisites 5
5 Integration Patterns 6
5.1 Supported Functions 6
5.2 Integration Service Address 6
5.3 Transaction Patterns 7
6 Field Descriptions 8
6.1 Standard Job Identification 8
6.2 Standard Job Header 8
6.3 Standard Job Operations 10
6.4 Operation Part 11
6.5 Operation Labour 11
6.6 Operation Miscellaneous 12
7 Error Handling 13
8 Integration Functions 14
8.1 ProcessStandardJob 14
8.2 GetStandardJob 20
9 Response Formats 22
9.1 RespondStandardJob 22
9.2 ShowStandardJob 22

Document History

Version	Date	Description	Author
1.0	3-Nov-2017	Initial Document	Andre Britz
1.1	16-Jan-2018	Initial review	Darryl Smith
1.2	19-Jan-2018	Review against XSD	Darryl Smith
1.3	22-Jan-2018	Specified business rules for creating/updating records.	Darryl Smith
1.4	29-Jan-2018	Updated after developer review	Darryl Smith
1.5	30-Jan-2018	Updated business rules to conform with other documents. Updated XSD's.	Andre Britz
2.0.0	10-Jan-2019	Update Service References	Andre Britz
2.0.1	9-Dec-2020	EPF 2.3/2.4 Support	Grant Johnson
2.2.5	01-Jun-2022	Added new expense element fields and requiresSTO.	W.Simpkins
8.25	11-Sep-2023	Added details for ASYNC processing.	W.Simpkins
8.26	01-Nov2023	Added chunk processing for ASYNC.	W.Simpkins
8.27	01-Jun-2024	8.27 release	W.Simpkins
8.28	01-Oct-2024	Added support for OAuth2 authentication. Added ASYNC support for GetStandardJob.	W.Simpkins
8.28.2	01-Apr-2025	8.28.2 release	W.Simpkins
9.0	17-Jul-2025	All inbound integration functions now support asynchronous processing. Clarified business processing rule for standard jobs with errors. Moved details of synchronous/asynchronous processing, and authentication options to central overview document.	W.Simpkins

Version Amendments

The following modifications were made to this document since 1.0.

Item	Description
8.1.2	Optional/required fields updated
5.2	Update the Service Addresses

1 Business Background

AMT's Knowledge Database is a collection of reusable asset management templates and artefacts for an organisation including:

- Inspection templates (also known as electronic workscopes).
- Library documents.
- History of product problems (EMI issues).
- Condition Based Maintenance (CBM) structure and rules.
- Standard jobs.

A standard job is a repeatable set of activities (and associated material requirements) that can be performed on an asset. A standard job can be linked to a strategy task job, in which case the standard job acts as the "template" for the strategy task job's parts, labour and miscellaneous requirements (for example, costs, labour hours, duration and parts list).

A standard job has a hierarchical structure, as follows.

- Header
    - Operations
        - Parts
        - Labour
        - Miscellaneous
        - Electronic workscopes

2 Considerations and Assumptions

Although AMT can be used to manage standard jobs, this interface is used when Standard Jobs are managed outside of AMT. Once this interface is implemented, Standard Jobs should not be created or modified using AMT functionality (for assets where standard jobs are managed outside of AMT).

AMT does not version Standard Jobs, so the external system is responsible for providing a reference identifier that includes any version information. The external system should also deactivate standard jobs that are no longer in use – this includes versions of standard jobs.

Standard jobs cannot be deleted via the interface.

This interface does not modify Part Prices, or create new Parts. The ProcessPart interface should be used to ensure that all referenced parts are available in AMT.

3 Decision Points and Configuration Options

There are no AMT configuration settings that affect the behaviour of this interface. There are, however, settings that control the user interface to ensure that imported standard jobs are not modified.

4 Prerequisites

The following AMT configuration items must be completed prior to using these integration endpoints:

- Organisation
- Model
- Component
- Modifier Code
- Task Type
- Task Counter
- Job Code
- Branch
- Price Group
- Currency
- Job Location
- Work Application
- Job Condition
- Cab Type
- Unit of Measure
- Part Type
- Labour Activity
- Source of Supply
- Part Number
- Credit Type
- Miscellaneous Category Code
- Expense Element

5 Integration Patterns

5.1 Supported Functions

The following functions allow interaction with AMT's Standard jobs.

Function	Description
ProcessStandardJob	Creates or updates the Standard Job information within AMT.
GetStandardJob	Provides all known information about a number of Standard Jobs based on provided search criteria.

5.2 Integration Service Address

More details regarding the general features of the integration service can be found in the Service Overview documentation. In order to use this service, the following endpoints are available for various authentication scenarios. These may not all be available, depending on the deployment configurations at a specific site.

Basic authentication	Domain, username and password provided when establishing the connection
https://<Server>:<port>/KnowledgeIntegrationService/KnowledgeIntegration/BasicHttpBinding_Https_Basic	
http://<Server>:<port>/KnowledgeIntegrationService/KnowledgeIntegration/BasicHttpBinding_Http_Basic	

Windows authentication	The Windows credentials of the current Windows account are used to establish the connection. This is the default method if no binding is specified in the URL.
https://<Server>:<port>/KnowledgeIntegrationService/KnowledgeIntegration/	
http://<Server>:<port>/KnowledgeIntegrationService/KnowledgeIntegration/	

OAUTH2 authentication	Client authentication is used to retrieve an OAUTH2 access token. The token is passed in the SOAP header when calling the AMT EPF Adapters.
https://<Server>:<port>/KnowledgeIntegrationService/KnowledgeIntegration/BasicHttpBinding_Https_Token	
http://<Server>:<port>/KnowledgeIntegrationService/KnowledgeIntegration/BasicHttpBinding_Http_Token	

<Server> is the fully qualified name of the server hosting the service.

Note that Windows authentication is being deprecated.

5.3 Transaction Patterns

Synchronous integration should align with the transaction pattern, as shown in Figure 1.

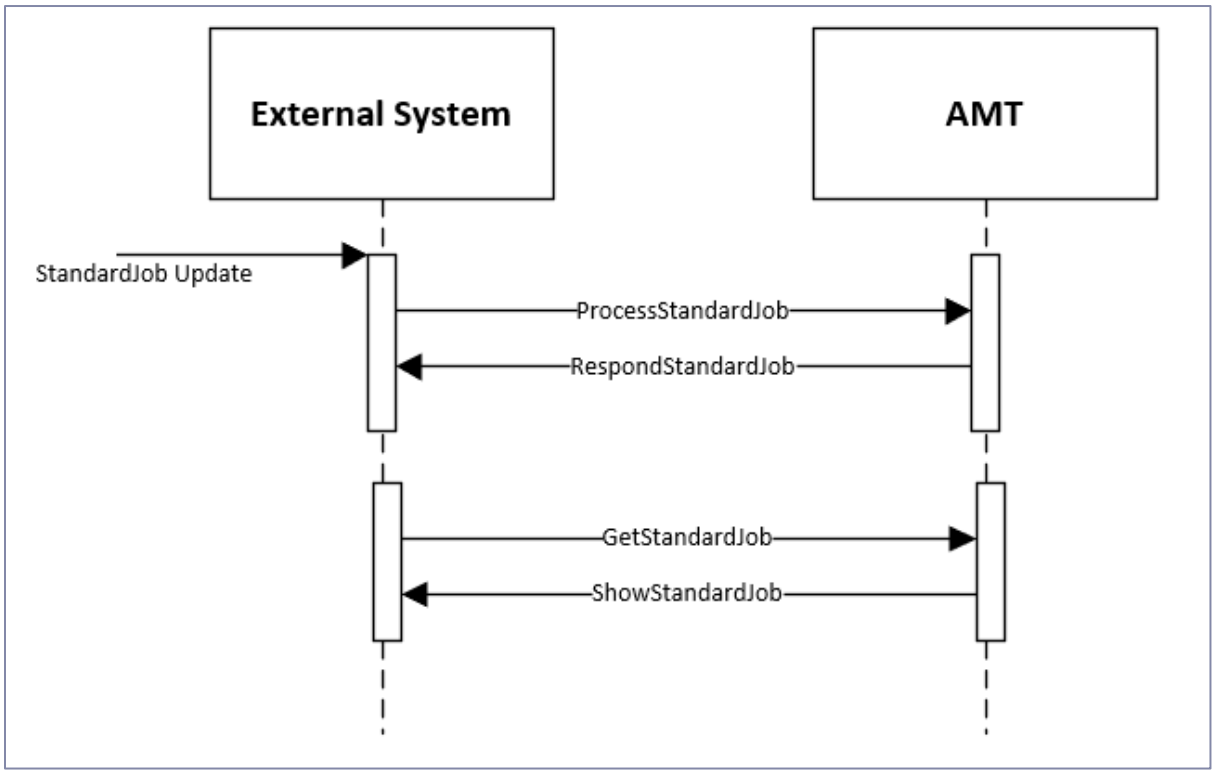


Figure 1 Standard Job Interactions

6 Field Descriptions

The fields in the following tables are used for this integration. The data types for each field are described in the relevant XML schema definition.

6.1 Standard Job Identification

Standard jobs are identified by a StandardJobID, which can be created by AMT or an external system.

Field Name	Description	Sample Values
StandardJobID	Identifier for the standard job.	ABC123

6.2 Standard Job Header

The standard job header has information describing the standard job as a whole.

Field Name	Description	Sample Values
OrganisationCode	The configured AMT organisation code.	ABC Mining
Description	Description of the standard job.	Engine Changeout
ModelCode	The configured AMT model of the standard job helps users identify which standard jobs apply to which assets.	Hilux
ComponentCode	The configured AMT component code of the standard job.	ENG
ModifierCode	The configured AMT modifier code of the standard job.	0
TaskTypeCode	The configured AMT task type code of the standard job.	CC
TaskCounterCode	The configured AMT task counter code of the standard job.	0
JobCode	The configured AMT job code of the standard job.	Replace
PricingBranch	The branch for which the labour pricing is valid.	Brisbane
PriceGroupCode	The price group for which the part pricing is valid.	Price Group A
CurrencyCode	The currency for which pricing is valid.	AUD
OverwriteCostsIndicator	Indicates whether prices are summed from the operations, or specified at the header level.	0
TotalPartCostAtSellValue	Total part cost @ sell for the standard job.	5000
TotalLabourCostAtSellValue	Total labour cost @ sell for the standard job.	750
TotalMiscCostAtSellValue	Total miscellaneous cost @ sell for the standard job.	200
TotalPartCostAtCostValue	Total part cost @ cost for the standard job.	5000
TotalLabourCostAtCostValue	Total labour cost @ cost for the standard job.	750

Field Name	Description	Sample Values
TotalMiscCostAtCostValue	Total miscellaneous cost @ cost for the standard job.	200
TotalLabourHourValue	Total labour hours for the standard job.	16
TotalDurationHourValue	Total duration hours for the standard job.	8
JobLocationCode	This is a location on an asset of the Standard Job.	JobLocA
WorkApplicationCode	The configured AMT work application code of the standard job. This is additional information about the type of work the Standard Job applies to.	WorkAppA
JobConditionCode	The configured AMT job condition code of the standard job. This is the condition expected of the component when the standard job is performed.	JobConA
CabTypeCode	The configured AMT cab type code of the standard job.	CabTypeA
OccurrenceTypeCode	The configured AMT occurrence type code of the standard job.	BF
GroupNumber	Group number of the standard job. Used when creating Strategy tasks from the standard job.	GroupA
SimulationReference	Simulation reference of the standard job (used to group sets of standard jobs together – for example, a set of standard jobs used in a simulation of asset costs).	Hilux Engine Changeout
SimulationDescription	Simulation description of the standard job (used to group sets of standard jobs together – for example, a set of standard jobs used in a simulation of asset costs).	Hilux Engine Changeout – Description
SerialNumberPrefix	Serial number prefix of the standard job – helps users identify which standard jobs apply to which assets.	ABC
SerialNumberRangeStart	Serial number start of the standard job – helps users identify which standard jobs apply to which assets.	ABC0001
SerialNumberRangeEnd	Serial number end of the standard job – helps users identify which standard jobs apply to which assets.	ABC9999
DateBasedIndicator	Indicates if strategy tasks created from the standard job are set to date-based scheduling.	0
UnitOfMeasureCode	The configured AMT unit of measure – strategy tasks created from the standard job are set to this unit of measure.	KM
FirstValue	Strategy tasks created from the standard job are set to this first (occurrence) value.	0
FrequencyValue	Strategy tasks created from the standard job are set to this frequency value.	200000
PartUsageFactor	Part usage factor of the standard job – part costs are multiplied by this value.	1

Field Name	Description	Sample Values
JobQuantity	Job quantity of the standard job.	1
PlanningTaskIndicator	Indicates whether strategy tasks created from the standard job are set as planning tasks.	1
LeadTimeDaysValue	Strategy tasks created from the standard job (that are planning tasks) are set to this lead time days value.	28
NotAfterValue	Strategy tasks created from the standard job are set to this not after value.	1000000
LastChangeDate	Strategy tasks created from the standard job are set to this last change date.	
LastChangeUsage	Strategy tasks created from the standard job are set to this last change usage value.	0
UseStandardJobIndicator	Indicates whether strategy task jobs created from the standard job remain linked to the standard job after being created.	1
PricingDate	Strategy task jobs created from the standard job are set to this pricing date.	1 January 2018
PartTypeCode	Strategy task jobs created from the standard job are set to this part type code.	PartTypeA
LabourActivityCode	Strategy task jobs created from the standard job are set to this labour activity code.	LabActA
RequiresSTO	Standard Job requires an STO (outage) to be performed. This field is only applicable to the ProcessStandardJob function. It has not yet been implemented in the ShowStandardJob response.	0=false 1=true

6.3 Standard Job Operations

Each standard job has one or more operations, describing the tasks that are done for each standard job.

Field Name	Description	Sample Values
OperationNumber	Identifier of the operation.	1
Description	Description of the operation.	Remove Engine
ComponentCode	The configured AMT component code of the operation.	ENG
JobCode	The configured AMT job code of the operation.	Remove
DurationHourValue	The duration hours of the operation.	2
OperationNumber	Identifier of the operation.	1

6.4 Operation Part

Each Operation can have zero or more parts that are required to perform the standard job.

Field Name	Description	Sample Values
SourceOfSupplyCode	The configured Source of Supply code within AMT.	SOSA
PartNumber	The configured Part Number within AMT.	ENG123
QuantityValue	Quantity of the part.	1
ProbabilityValue	Probability that the part is used.	1
GroupNumber	Group number of the part.	GroupA
CreditTypeCode	The configured AMT credit type code of the part.	Full
ExtendedDescription	The extended description of the part line.	Hilux Engine
Notes	Notes for the part line.	
ExpenseElementCode	The expense element for this part for standard job cost allocations.	

6.5 Operation Labour

Each Operation can have zero or more labour requirements that are required to perform the standard job.

Field Name	Description	Sample Values
LabourActivityCode	The configured AMT labour activity code of the labour line.	LabActA
Description	The description of the labour line.	Remove Engine
CostAtCostRateValue	The cost at cost hourly rate of the labour line.	55
CostAtSellRateValue	The cost at sell hourly rate of the labour line.	55
LabourHourValue	The labour hours of the labour line.	2
ExpenseElementCode	The expense element for this labour activity for standard job cost allocations.	

6.6 Operation Miscellaneous

Each Operation can have zero or more miscellaneous items that are required to perform the standard job.

Field Name	Description	Sample Values
Description	The description of the miscellaneous line.	Tooling to remove Hilux engine
MiscCategoryCode	The configured AMT category code for the miscellaneous line.	Tooling
CostAtCostValue	The cost at cost amount of the miscellaneous line.	100
CostAtSellValue	The cost at sell amount of the miscellaneous line.	100
ExpenseElementCode	The expense element for this miscellaneous cost for standard job cost allocations.	

7 Error Handling

The following valid errors are returned from this interface.

Error Condition	Description
The provided document has an unrecognised format. Various XML format errors are returned.	Check the format of the schema document against those provided. Errors can be related to well-formed XML issues, or failure to validate the document against the XSD.
The provided value for <ElementCode> does not have the correct datatype.	Check datatypes of elements, especially date formats. Note that date and datetime conventions are used.
Mandatory element <ElementName> not provided.	An expected XML element has not been provided.
Mandatory attribute <AttributeName> not provided	An expected XML attribute has not been provided.
The provided code for <ElementCode> does not have a corresponding AMT configuration item	AMT makes extensive use of pre-configured code list. Relevant codes must be preconfigured prior to use of the interface.
The provided indicator for <ElementIndicator> does not have a valid value	Indicators have a fixed list of enumeration values. Please refer to the relevant business rules for permitted values.

8 Integration Functions

Only fields with specific rules have been listed. All other fields should conform to the datatype rules as defined in the schema definition files and are optional.

8.1 ProcessStandardJob

This interface is used to add new standard jobs to AMT or edit existing standard jobs.

8.1.1 Business Rules – Header

Field Name	Description	Required/Optional
StandardJobID	The unique standard job identifier, created by an external system. Used for matching purposes when updating standard jobs.	R
OrganisationCode	The value provided should match a configured **Organisation** Code within AMT.	R
Description		R
ModelCode	The value provided should match a configured **Model** within AMT.	R
ComponentCode	The value provided should match a configured **Component** Code within AMT. If no value is provided when creating a standard job, the default AMT Component Code will be used.	O
ModifierCode	The value provided should match a configured **Modifier** Code within AMT. If no value is provided when creating a standard job, the default AMT Modifier Code will be used.	O
TaskTypeCode	The value provided should match a configured **Task Type** Code within AMT. If no value is provided when creating a standard job, the default AMT Task Type Code will be used.	O
TaskCounterCode	The value provided should match a configured **Task Counter** Code within AMT. If no value is provided when creating a standard job, the default AMT Task Counter Code will be used.	O
JobCode	The value provided should match a configured **Job** Code within AMT.	R
PricingBranchCode	The value provided should match a configured **Branch** Code within AMT.	R
PriceGroupCode	The value provided should match a configured **Price Group** Code within AMT.	R
CurrencyCode	The value provided should match a configured **Currency** Code within AMT.	R

Field Name	Description	Required/Optional
OverwriteCostsIndicator	Only the following values are accepted: **0** – Do not overwrite costs as calculated by summing costs from operations. **1** – Overwrite costs with provided values. If no value is provided when creating a standard job, 0 is used.	O
TotalPartCostAtSellValue	Only considered if OverwriteCostsIndicator = 1. If no value is provided when creating a standard job, 0 is used.	O
TotalLabourCostAtSellValue	Only considered if OverwriteCostsIndicator = 1. If no value is provided when creating a standard job, 0 is used.	O
TotalMiscCostAtSellValue	Only considered if OverwriteCostsIndicator = 1. If no value is provided when creating a standard job, 0 is used.	O
TotalPartCostAtCostValue	Only considered if OverwriteCostsIndicator = 1. If no value is provided when creating a standard job, 0 is used.	O
TotalLabourCostAtCostValue	Only considered if OverwriteCostsIndicator = 1. If no value is provided when creating a standard job, 0 is used.	O
TotalMiscCostAtCostValue	Only considered if OverwriteCostsIndicator = 1. If no value is provided when creating a standard job, 0 is used.	O
TotalLabourHourValue	Only considered if OverwriteCostsIndicator = 1. If no value is provided when creating a standard job, 0 is used.	O
JobLocationCode	The value provided should match a configured **Location** Code within AMT.	O
WorkApplicationCode	The value provided should match a configured **Work Application** Code within AMT.	O
JobConditionCode	The value provided should match a configured **Job Condition** Code within AMT.	O
CabTypeCode	The value provided should match a configured **Cab Type** Code within AMT.	O
OccurrenceTypeCode	The value provided should match a configured **Occurrence Type** Code within AMT. If no value is provided when creating a standard job, the default AMT Occurrence Type Code will be used.	O

Field Name	Description	Required/Optional
DateBasedIndicator	Used when creating strategy tasks from the standard job. Only the following values are accepted: 0 – This means any strategy task created from this standard job will be set to date-based scheduling. 1 – This means any strategy task created from this standard job will be set to usage-based scheduling. If no value is provided when a Standard Job is created, a value of 1 will be assumed.	O
UnitOfMeasureCode	Only used if DateBasedIndicator=0. The value provided should match a configured **Unit of Measure** Code within AMT. If no value is provided when creating a Standard Job, the default AMT Unit of Measure Code will be used.	O
FirstValue	If no value is provided when a Standard Job is created, a value of 0 will be used.	O
PartUsageFactorValue	If no value is provided when creating a Standard Job, a value of 1 is assumed.	O
JobQuantityValue	If no value is provided when creating a Standard Job, a value of 1 is assumed.	O
PlanningTaskIndicator	Used when creating strategy tasks from the standard job. Only the following values are accepted: 0 – This means Strategy Tasks created from the Standard Job are not planning tasks. 1 – This means Strategy Tasks created from the Standard Job are planning tasks. If no value is provided when creating a Standard Job, a value of 0 is assumed.	O
LeadTimeDaysValue	Only used where PlanningTaskIndicator=1.	O
NotAfterValue	If no value is provided when creating a Standard Job, a value of 0 is assumed.	O
LastChangeUsage	If no value is provided when creating a Standard Job, a value of 0 is assumed.	O
UseStandardJobIndicator	Used when creating Strategy Tasks from the Standard Job. Only the following values are accepted: 0 – This means Strategy Tasks created from the Standard Job do not remain linked to the Standard Job. 1 – This means Strategy Tasks created from the Standard Job remain linked to the Standard Job.	O

Field Name	Description	Required/Optional
LabourActivityCode	If the Labour Activity Code is provided in the interface, the Labour Rate for that Labour Activity is used. If the Labour Activity Code is not provided in the interface when creating a Standard Job, then the Labour Rate is calculated from the Labour Cost and Labour Hours.	O
RequiresSTO	Only the following values are accepted: 0 – False – An STO is not required to perform the work. 1 – True – An STO is required to perform this work. If no value is provided when creating a Standard Job, 0 is used.	

8.1.2 Business Rules – Operation

Field Name	Business Rule	Required/Optional
OperationNumber	The identifier of the Operation within the Standard Job.	R
Description		R
ComponentCode	The value provided should match a configured **Component** Code within AMT.	R
JobCode	The value provided should match a configured **Job** Code within AMT.	R
DurationHourValue		R

8.1.3 Business Rules – Part

Field Name	Business Rules	Required/Optional
SourceOfSupplyCode	The value provided should match a configured **Source of Supply** code within AMT. This field is used together with Part Number and Organisation Code (from the Standard Job Header) to uniquely identify the part within AMT.	R
PartNumber	The value provided should match a **Part Number** within AMT. This field is used together with Source Of Supply Code and Organisation Code (from the Standard Job Header) to uniquely identify the part within AMT.	R
QuantityValue		R
ProbabilityValue		R
CreditTypeCode	The value provided should match a configured **Credit Type** code within AMT.	R

Field Name	Business Rules	Required/Optional
ExpenseElementCode	The value provided should match a configured **Expense Element** code within AMT If no value is provided, the part's expense element will be used. If the part has no expense element, the default part expense element will be used.	O

8.1.4 Business Rules – Labour

Field Name	Business Rules	Required/Optional
LabourActivityCode	The value provided should match a configured **Labour Activity** Code within AMT. At least one of LabourActivityCode or Description must be provided.	O
Description	At least one of LabourActivityCode or Description must be provided.	O
CostAtCostRateValue		R
CostAtSellRateValue		R
LabourHourValue		R
ExpenseElementCode	The value provided should match a configured **Expense Element** code within AMT. If no value is provided, the labour activity's expense element will be used. If the labour activity has no expense element, the default labour activity expense element will be used.	O

8.1.5 Business Rules – Misc

Field Name	Business Rules	Required/Optional
MiscCategoryCode	The value provided should match a configured **Misc Category** code in AMT.	R
Description		R
CostAtCostValue		R
CostAtSellValue		R
ExpenseElementCode	The value provided should match a configured **Expense Element** code within AMT. If no value is provided, the expense element for the Misc category code will be used. If the Misc category code has no expense element, the default Misc expense element will be used.	O

8.1.6 Processing Rules

1. One or more standard jobs can be included in the same message.
2. Each standard job is processed individually.

   Failure of a single standard job is reported as a failure with an error message. If one standard job

in a payload fails, the whole payload is marked as a failure, and items that passed validation will be marked as a failure, but with no error message.

Note that if ASYNC processing is being used, the original payload pay may be split into chunks by the adapter request processor before being processed by the adapter. In this case, the rules above apply to each individual chunk. For example, a payload of 1000, with chunking of 100 would be sent to the adapter by the adapter request processor as 10 payloads of 100. If there was one standard job in error in chunk 4, that payload chunk would be failed for all 100 standard jobs, with one having a specific error. The other 9 chunks would process OK. The resulting message returned for the 1000 would show 900 processed OK with 100 failed, one of which has a specific error.

If this same payload was processed synchronously, all 1000 standard jobs would have failed, with one record having the specific error.

3. The StandardJobID is used to evaluate if the Standard Job already exists in AMT.
    a. If a match is found within AMT, the Standard Job is considered for update.
    b. If a match is not found, the Standard Job is new.
4. If the Standard Job does not exist:
    a. A new standard job is created.
    b. Any value against a provided optional tag is used.
    c. If an optional tag is not provided, the value is not set in AMT, unless a specific business rule exists to manage this case.
5. If the standard job does exist:
    a. The standard job header will be updated with new provided values.
    b. All Operations and associated data are removed. Operations are recreated using information from the interface.
    c. Any value against a provided tag will be overwritten.
    d. If no tag is provided, the existing values will remain as-is.
6. Standard Jobs can be duplicated - the Standard Job processed last will take precedence.
7. The StandardJobID cannot be updated using the interface.
8. **RespondStandardJob** is returned upon completion of processing.

8.1.7 Data Structure

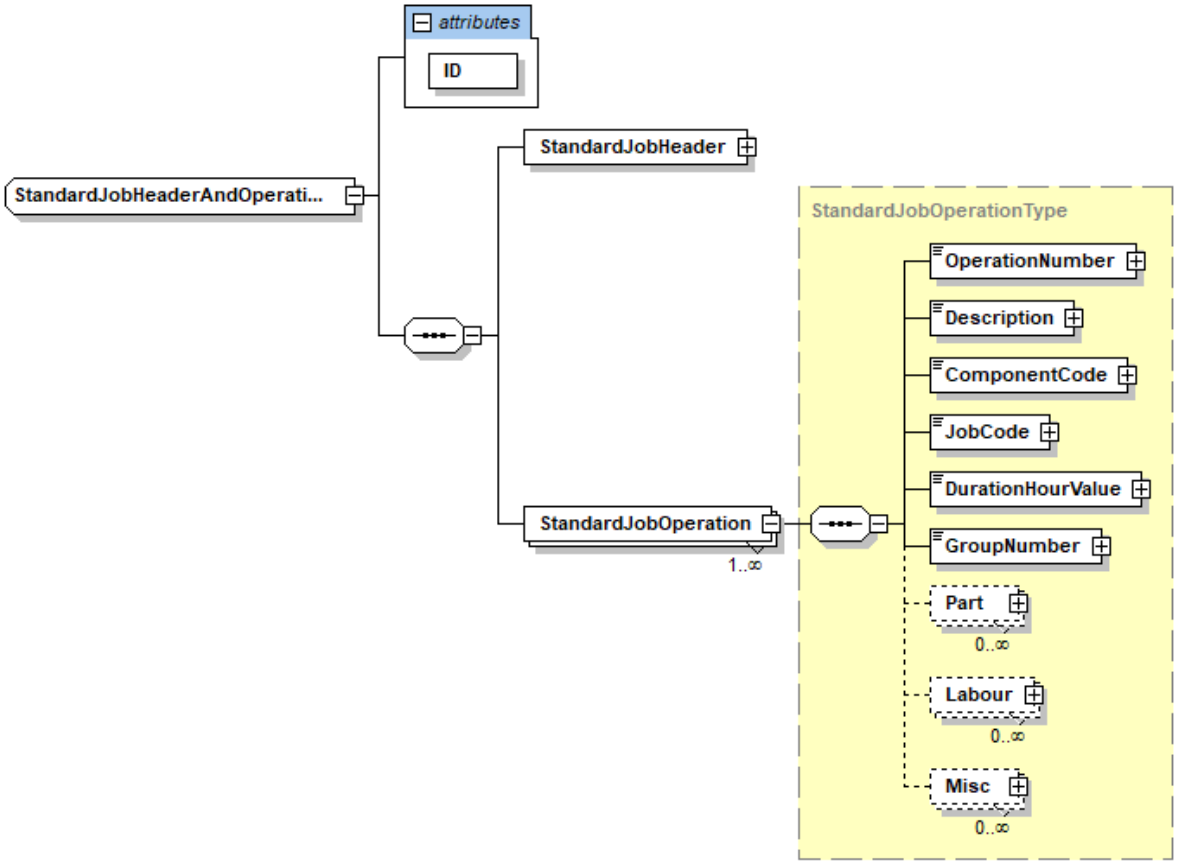


Figure 2 ProcessStandardJob Data Area

8.2 GetStandardJob

This interface is used to retrieve Standard Jobs from AMT, based on given search criteria.

8.2.1 Business Rules Search Criteria

Field Name	Business Rules	Required/Optional
StandardJobID	The exact StandardJobID is matched.	O
ModelCode	The value provided is matched against a configured Model Code within AMT.	O
ComponentCode	The value provided is matched against a configured Component Code within AMT.	O
ModifierCode	The value provided is matched against a configured Modifier Code within AMT.	O
JobCode	The value provided is matched against a configured Job Code with AMT.	O
TaskTypeCode	The value provided is matched against a configured Task Type Code within AMT.	O
TaskCounterCode	The value provided is matched against a configured Task Counter Code within AMT.	O

Field Name	Business Rules	Required/Optional
SerialNumberPrefix	The exact Serial Number Prefix is matched.	O
SerialNumberRangeStart	The exact Serial Number Range Start is matched.	O
SerialNumberRangeEnd	The exact Serial Number Range End is matched.	O
SimulationReference	The exact Simulation Reference is matched.	O
SimulationDescription	The exact Simulation Description is matched.	O

8.2.2 Processing Rules

1. All elements are optional.
2. All items within a list element are considered as a logical OR

   Each list is considered as a logical AND.
3. The use of a non-existent code will result in an error condition.
4. **ShowStandardJob** is returned in response to this message. The **RequiresSTO** attribute is included in the ShowStandardJob message but is not yet implemented.

8.2.3 Data Structure

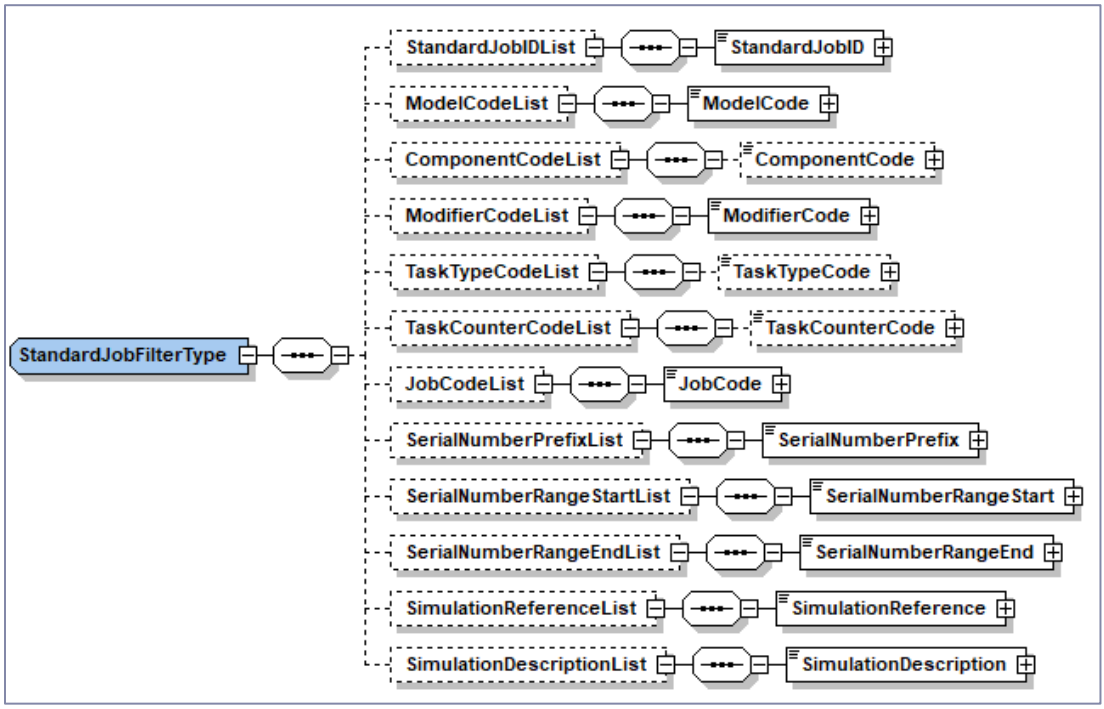


Figure 3 GetStandardJob Data Area

9 Response Formats

9.1 RespondStandardJob

This payload is returned in response to the following interfaces:

- ProcessStandardJob

9.1.1 Data Structure

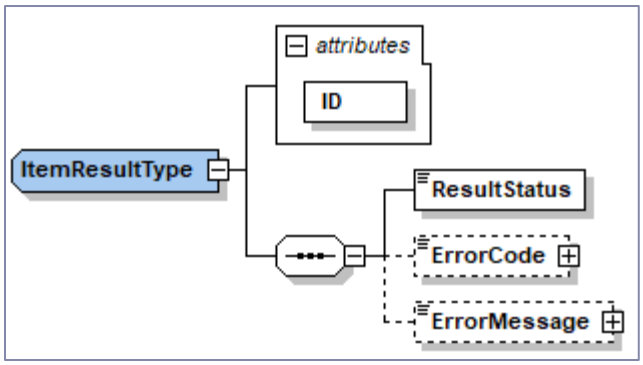


Figure 4 RespondStandardJob Data Area

9.2 ShowStandardJob

The payload is returned in response to the following interfaces:

- GetStandardJob

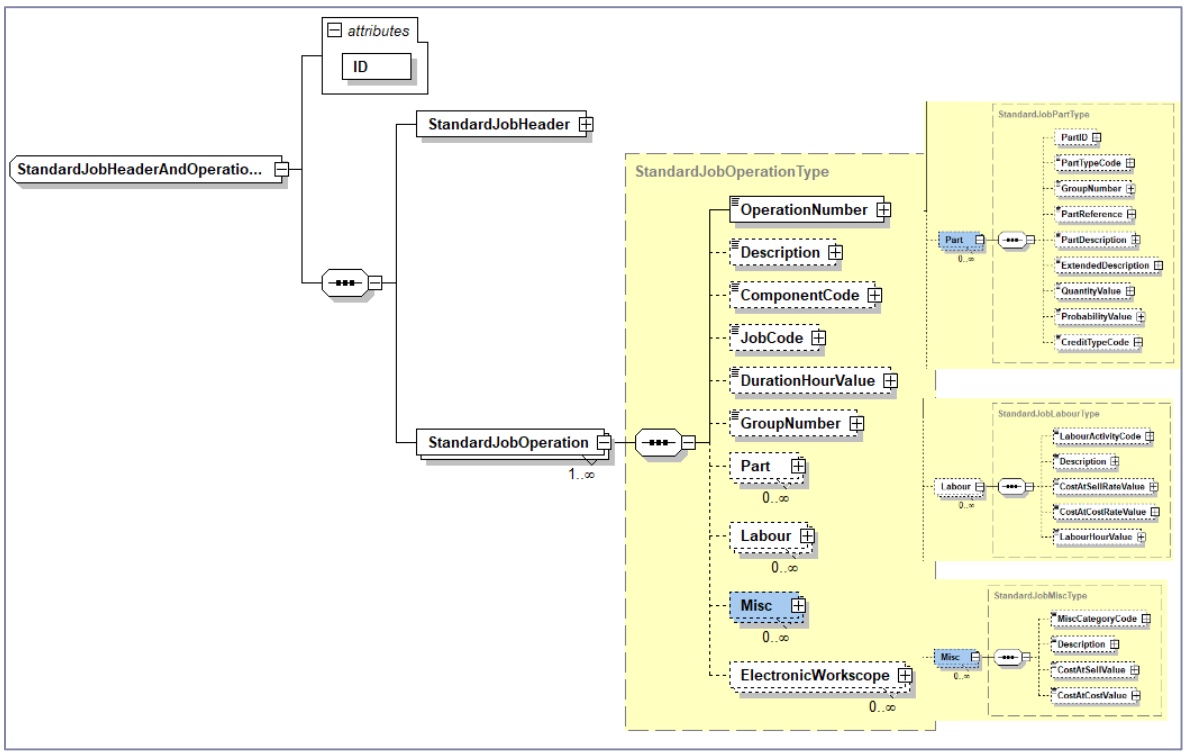


Figure 5 ShowStandardJob Data Area