RPMGLOBAL

AMT EPF Adapter SDK

Work Orders 9.0

© 2025 RPMGLOBAL | All Rights Reserved

Contents

1 **Business Background** 9

2 **Considerations and Assumptions** 10

3 **Decision Points and Configuration Options** 11

4 **Prerequisites** 14

5 **Integration Patterns** 15

5.1 Supported Functions 15

5.2 Integration Service Address 16

5.3 Usage Scenarios 16

5.4 Create Work Order 18

5.5 Parts Requisitioning 19

5.6 Externally Generated Work Orders 20

5.7 Financial Summaries 21

5.8 Notifications 22

6 **Field Descriptions** 23

6.1 Work Order Identification 23

6.2 Asset Identification 23

6.3 Part Identification 24

6.4 Work Order Header 24

6.5 Work Order Operations 30

6.6 Operation Part 32

6.7 Operations Labour 34

6.8 Operations Miscellaneous 35

6.9 Requisition 36

6.10 Work Order Financial Summary 37

6.11 Financial Details 39

6.12 Work Order GL Reconciliation 40

6.13 Notification 41

6.14 STO 44

6.15 Work Order Completion Comments 45

7 **Error Handling** 46

8 **Integration Functions** 47

8.1 SendWorkOrder 47

8.2 SendWorkOrderStatus 51

8.3 SendWorkOrderLabourActuals 53

8.4 SendWorkOrderDocuments 55

8.5 CreateWorkOrder 55

8.6 CreateBacklog 63
8.7 UpdateWorkOrder 64
8.8 GetWorkOrder 74
8.9 GetServiceReport 76
8.10 ProcessWorkOrderFinancialSummary 79
8.11 ProcessWorkOrderGLEntry 82
8.12 SendNotification 84
8.13 UpdateNotificationStatus 87
8.14 SendWorkOrderOperationStatus 87
8.15 SendWorkOrderCompletionComments 89
8.16 ProcessSTO 90
8.17 CreateNotification 91
9 Response Formats 95
9.1 AcknowledgeWorkOrder 95
9.2 AcknowledgeWorkOrderOperation 95
9.3 RespondWorkOrder 96
9.4 ShowWorkOrder 96
9.5 AcknowledgeNotification 97
9.6 RespondNotification 97
9.7 RespondSTO 98
9.8 RespondCreateBacklog 98
9.9 RespondCreateNotification 99
9.10 SendWorkOrderResponse 99
9.11 SendWorkOrderStatusResponse 100
9.12 SendWorkOrderLabourActualResponse 100
9.13 SendWorkOrderDocumentsResponse 101
9.14 SendNotificationResponse 101
9.15 SendWorkOrderOperationStatusResponse 101
9.16 SendWorkOrderCompletionCommentsResponse 102

Document History

Version	Date	Description	Author
1.0.0	3-Nov-2017	Initial Document	1.0.0
1.0.1	7-Nov-2017	Updated with comments from review session on 6 Nov 2017, and document reviews by Darryl Smith and Moni Baruah	1.0.1
1.0.2	10-Jan-2018	Review of ProcessFinancialSummary	1.0.2
1.0.3	01-Feb-2018	Review of Requisitions and Work Order Status Update requirements. Added SendWorkOrderStatus and SendWorkOrderLabour	1.0.3
1.0.4	24-May-2018	Added new fields to the SendWorkOrderStatus function	1.0.4
1.1.0	28-May-2018	Added DateTime UTC fields to all functions	1.1.0
1.1.1	30-Aug-2018	Refactoring	1.1.1
1.4.0	10-Jan-2019	Update Service References	1.4.0
1.4.1	22-March-2019	Updated business rule description for Workorder creation	1.4.1
2.1.0	11-Nov-2020	Added LastModifiedDate to WorkOrderHeaderType and WorkOrderFilterType	2.1.0

Version	Date	Description	Author
2.2.5	20-Jul-2022	Documented merge rule restriction for parent work order number. Added SendNotification and UpdateNotificationStatus. Miscellaneous typo corrections. Removed requirement for Create Workorder from Workorder Settlement on asset to be true before creating a work order. Added addition fields. For work order header: STOID, PlanningGroupCode, MOTCode, RegulatoryCode and WorkLocation. For work order operation: OccupationalHealthAndSafetyCode, OperationWorkStatusCode, ResponsibleEmployee. Added SendWorkOrderOperationStatus, SendWorkOrderCompletionComments, document change in employee validation and defaults for create/modify work order process. Added 6.9 for requisition fields to list new fields for supplierName, supplierContact, contactPhone, deliveryLocation, DeliveryStreet and deliveryMethod. Added sending attached documents via MIME attachments for SendWorkOrderDocuments SendNotification. Added attachments to CreateWorkOrder and UpdateWorkorder.	2.2.5
2.2.6	11-Jan-2023	1. Added modifier code to Notification 2. Documented SendLabourLevel configuration option 3. Added GetServiceReport Function 4. Updated WorkOrder parts definition with new fields for ActualQuantityValue ActualUnitPriceValue 5. Updated Configuration Options 6. Added MOT to Work Order Financial Summary definition	Wayne Simpkins

Version	Date	Description	Author
8.25	11-Jul-2023	Add new fields ERPInstructionCode and NoMoreWorkIndicator to work order operation. PlannedLabourHourValue and PlannedQuantityValue are now available for labour details UpdateWorkOrder(). These should only be used if the ERP is the master of planning labour for the work order. Added details for ASYNC processing.	Wayne Simpkins
8.26	01-Nov-2023	NoMoreWork indicator is now included in operation details for SendWorkOrderLabourActual function. Added new attribute ExternalNotificationIdentifier to work order header fields. Only applicable to create and update work order functions. ProcessSTO function added. ProcessFinancialSummary now allows STO to be recorded for a work order via use of the MaintenancePeriodCode attribute. Add actualDurationHours to ProcessWorkOrderFinancialsummary ReservationNumber added to CreateWorkOrder and UpdateWorkOrder The SendNotification attribute ObjectPart has been changed to source data from a new AMT ObjectPart field if available, otherwise data will be sourced from component code field per existing behaviour. Added PlanningGroup and WorkGroup to SendNotification() function. ActualStartDateUTC and RecordedTimeUTC added to SendWorkOrderLabourActual function. ProcessWorkOrderGLEntry now supported by ASYNC processing.	Wayne Simpkins

Version	Date	Description	Author
8.27	01-Jun-2024	Corrected period format details for GL Reconciliation Added ObjectPart to SendWorkOrderCompletionComments(). Created section 6.15 to better describe completion comments. Added SiteCode, WorkGroupSiteCode and WorkOrderID to SendNotification(). Updated business rule in ProcessSTO for when both AMTUserLoginID and AMTUserName are sent to AMT. Added new settings to configuration section.	Wayne Simpkins
8.28	01-Oct-2024	Added ASYNC support for more integration functions. Added support for OAuth2 authentication	Wayne Simpkins
8.28.2	10-Apr-2025	Added CreateNotification function Added CreateBacklog function	Wayne Simpkins
9.0	17-Jul-2025	All inbound integration functions now support ASYNC processing. Moved details of synchronous/asynchronous processing, and authentication options to central overview document.	Wayne Simpkins

Version Amendments

The following modifications were made to this document since 1.0.4.

Item	Description
General	Add fields to all functions to represent UTC datetime data
5.2	Update the Service Addresses
6.4	Add LastModifiedDate and LastModifiedDateUTC
8.6.1	Add LastModifiedDate

1 Business Background

A work order is a specific job performed on an asset. A work order can:

- be planned, unscheduled or executed because of a breakdown.
- represent a strategy task, backlog or defect.

A work order settlement can link to a work order to provide a summary of the actuals (costs, labour hours, and so on) of performing the work order.

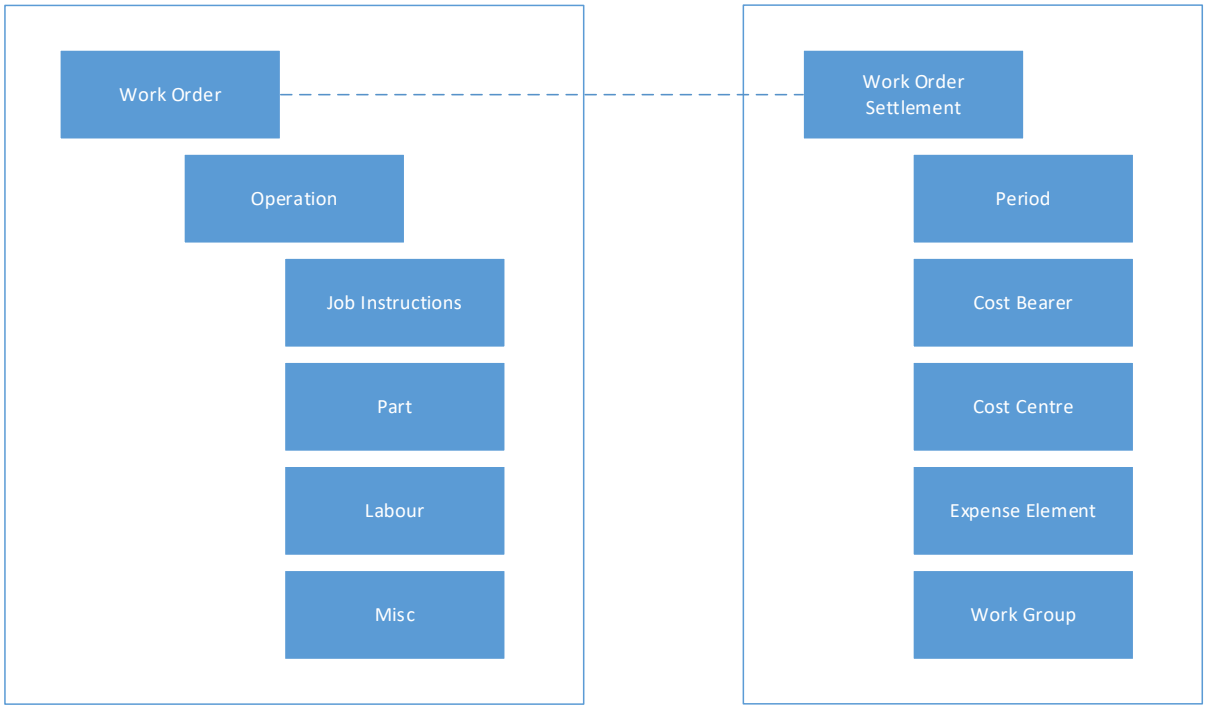


Figure 1 Work Order and Work Order Settlement

AMT stores the cost information related to a completed work order as a work order settlement, which supports AMT Lifecycle Costing functionality.

Several work order management scenarios can be configured in AMT, with various levels of integration functionality provided to support the various configurations. This document focuses primarily on the technical implementation of work order interfaces but should be read in conjunction with the AMT Work Order Implementation Guide, which explains the various configurations and how they align with the business processes.

The various configuration options in AMT are used to control:

- The origination of work orders and the subsequent management of work orders.

  AMT can generate work orders and distribute them to external systems or receive a work order to be managed. Once created, the work order should be managed on only one system, sending updates to the others.

- The authorisation and parts requisitioning processes.

  AMT provides functionality to manage the part requisitioning process to ensure that parts ordering in a procurement system is authorised and aligned with budget constraints.

- The level of detail being planned and the system where this planning is done.

  A work order can be planned down to the Parts, Labour and Miscellaneous items. In some cases, this is done in AMT, and in others, an external system is used to do this work.

- How actuals data is generated or consumed in AMT.

  As each work order is executed, the consumption of resources can be recorded as actual values. This can be done in AMT or externally.

- What the source of Financial Summary information is for completed work orders.

  A costing system is frequently used to capture the cost information against work orders, as well as overhead costs. The actual costs can also be captured against the AMT work order and then summarised.

The integration supported by AMT provides the necessary functionality to ensure that this data can be transferred between the various systems in the work order landscape, while ensuring that the AMT work order configuration rules are considered.

Notifications are used to raise defects or issues found during the course of a day. These issues may be noticed while simply working around the workplace or they may be found as the result of some work activity being completed. Notifications are usually available to all employees and, once raised, are reviewed and assessed by maintenance planners before a work order is raised to address the notification. As notifications are part of the work order lifecycle, the Work Order Adapter provides a function to send notifications to an external system and for the external system to update the status of the notifications in AMT.

2 Considerations and Assumptions

The following items should be considered before implementing these interfaces.

- Has AMT work order configuration been completed to support the required business processes? Changing the processes at a later stage could have a significant impact on the integration work required.
- Has date mapping been done to ensure consistent use of codes and classifications across systems? Implementation time will be much less if this work has been completed and documented.
- What integration methods will be used? Will a synchronous or asynchronous architecture be implemented?
- How will faults and recognised error codes be made available to users and administration teams?

3 Decision Points and Configuration Options

The following AMT configuration settings will affect the behaviour of these interfaces, so the implementer will need to know these settings.

AMT Configuration Setting	Description
WOCreateFromPO	This is the primary configuration that controls application behaviour. The setting changes how work orders are delivered to an external system and allows additional elements to be added to the message structure related to a Part Requisition.
ERPIsPOSystem	This is related to WOCreateFromPO. This setting determines whether requisitions for multiple or single suppliers are delivered in the same request.
AutoLookupPartsReadyStatus	Controls the behaviour when determining if the work order header level flags indication parts and miscellaneous items are checked.
OpEditionPlanStatus	Controls the behaviour when determining the status of ordered parts.
ManualEntryActualsParts	Use to control if the Parts component of a work order can be added or changed using this interface.
ManualEntryActualsLabour	Use to control if the Labour component of a work order can be added or changed using this interface.
ManualEntryActualsMisc	Use to control if the Misc component of a work order can be added or changed using this interface.
Use_Transaction_WO_Costs	Determines which date is used to calculate actual costs during the settlement process.
Use_External_Source_ID	Determines if AMT creates WorkOrder Settlement identifiers using WorkOrderNumber and TaskNumber, or if the external system is expected to provide the WorkOrderNumber and TaskNumber.
SendLabourLevel	Determines whether to send labour details summarised down to the labour activity level or to the employee level.
CreatePOWebServiceXMLParameter	This parameter is relevant for creating PO work orders and controls the format of what needs to be sent to the target service. The setting is shared with the parts adapter for inventory search and validation. Valid values are **0** and **1**. **0** means the target service expects an object. **1** means the target service expects XML. The recommended/default setting is **1**.
CreatePOModeAllowCreateERPWO	Controls whether the **Create ERP WO** button is available in the planning TAB. This is associated with POCreate mode (WOCreateFromPO=1)

AMT Configuration Setting	Description
WebServicePOCreate	**0** means AMT will call 'ExternalCreateERPWOServiceUrl ' or connector to create work order depending on 'ConnectorERPWorkorderCreate '. (WO create mode) **1** and **2** are used for POCreate mode. **1** means AMT will call ExternalPOCreateServiceUrl, but doesn't expect anything returned from the called service. **2** means AMT will call ExternalPOCreateServiceUrl and expects the Work Order Number back from the service.
ConnectorERPWorkorderCreate	**0** means call the 'ExternalCreateERPWOServiceUrl' to create a work order. **1** means call the connector to create a work order. Typically set to **0** for EPF integration.
ExternalCreateERPWOServiceUrl	Target URL to send the work order integration message.
WebServiceCreateERPWO	Configure AMT to use web service to send work order creation details. Typically set to **1** for EPF integration.
AttachedDocumentTaskFolder	Location of attached documents for work orders.
NotificationAttachmentsFolder	Location of attached documents for Notifications.
Merging_rule	**0** = "Invoicing Workorder Mode – that is, merging is based on Eqp, WO#, CC, MC". **1** = Special Merchand merging (generally do not use this). **2** = "Transaction Data Workorder Mode – that is, Merging is based on Eqp, WO# and dates within. <NoOfPeriodsToMerge> "
NoOfPeriodsToMerge	Number of periods to merge for financial summary integration. Applicable to merging_rule = in point 2 above.
ProcessFinancialSummaryProcessThreads	Optional configuration for a number of threads to use when processing financial summaries. The default behaviour is **2** threads. It is not recommended to increase this without thorough load testing.
ProcessFinancialSummaryUpdateThreads	Optional configuration for the number of threads to use when updating financial summaries. The default behaviour is **2** threads. It is not recommended to increase this without thorough load testing.
WOInterfaceUseTimesheetForWorkorderLabour	Controls whether work order actual labour is from timesheets. Useful with AMT mobile configurations where the ERP may send employee planning hours, but the timesheet data will be recorded on mobile.

AMT Sentinel can be configured to generate zero financial summaries and send notifications, work order status, labour updates, work order operation status, work order completion comments and work order documents to external systems. The following settings are relevant depending on the integrations implemented.

AMT Configuration Setting	Description
SentinelNotificationEnabled	Sentinel Configuration to enable Sending Notifications (True or False).

AMT Configuration Setting	Description
SentinelNotificationFrequencyMS	Sentinel configuration for frequency to execute sending notifications.
SentinelNotificationExecutionTime24H	Sentinel configuration. If set, integration will only execute at this time.
SentinelWorkOrderStatusEnabled	Sentinel Configuration to enable Sending Work Order Status (True or False).
SentinelWorkOrderStatusFrequencyMS	Sentinel configuration for frequency to execute Sending Work Order Status.
SentinelWorkOrderStatusExecutionTime24H	Sentinel configuration. If set, integration will only execute at this time.
SentinelLabourEnabled	Sentinel Configuration to enable Sending Work Order Labour Actuals (True or False)
SentinelLabourFrequencyMS	Sentinel configuration for frequency to execute Sending Work Order Labour Actuals
SentinelLabourExecutionTime24H	Sentinel configuration. If set, integration will only execute at this time.
SentinelZeroDollarFinancialSummaryEnabled	Sentinel Configuration to enable generating Zero cost Financial Summaries (True or False).
SentinelZeroDollarFinancialSummaryFrequencyMS	Sentinel configuration for frequency to execute generating Zero cost Financial Summary.
SentinelZeroDollarFinancialSummaryExecutionTime24H	Sentinel configuration. If set, integration will only execute at this time.
SentinelWorkOrderOperationStatusEnabled	Sentinel Configuration to Enable sending work order operation status (True or False).
SentinelWorkOrderOperationStatusFrequencyMS	Sentinel configuration for frequency to Send Work Order Operation Status.
SentinelWorkOrderOperationStatusExecutionTime24H	Sentinel configuration. If set, integration will only execute at this time.
SentinelWorkOrderCompletionEnabled	Sentinel Configuration to Enable sending work order Completion Comments (True or False).
SentinelWorkOrderCompletionFrequencyMS	Sentinel configuration for frequency to execute sending Work Order Operation Status.
SentinelWorkOrderCompletionExecutionTime24H	Sentinel configuration. If set, integration will only execute at this time.
SentinelWorkOrderDocumentsEnabled	Sentinel Configuration to Enable sending work order documents (True or False).
SentinelWorkOrderDocumentsFrequencyMS	Sentinel configuration for frequency to execute sending Work Order documents.
SentinelWorkOrderDocumentsExecutionTime24H	Sentinel configuration. If set, integration will only execute at this time.

4 Prerequisites

The following AMT configuration items must be completed before using these integration endpoints:

- Organisation
- Source of Supply
- Currency
- Branch
- Site
- Customer
- Component
- Modifier
- TaskType
- MaintenanceType
- Priority
- Source
- WorkOrderCompletion
- Location
- WorkGroup
- Symptom
- Cause
- Service
- OccurrenceType
- Cost
- MaintenancePeriod
- CostCentre
- CostBearer
- ExpenseElement
- Supplier
- Activity
- Category
- OverheadGroup
- NotificationStatus
- OperationWorkStatus
- Maintenance Order Type

5 Integration Patterns

5.1 Supported Functions

The following functions allow interaction with AMT's work orders.

Function	Description
SendWorkOrder	Sends all known information about the work order to an external system. Under certain AMT configurations, this interface will also provide the Parts Requisition information with the work order information.
SendWorkOrderStatus	Sends the status of an existing AMT work order to an external system whenever the status information is modified by an AMT user.
SendWorkOrderLabourActual	Sends Actual Labour information related to an existing AMT work order to an external system whenever the labour information is updated by an AMT user.
CreateWorkOrder	Adds a new work order to AMT using information from an external system.
UpdateWorkOrder	Updates a work order that already exists in AMT. This includes certain header fields, as well as actual consumption information for Parts, Labour and Misc items.
ProcessWorkOrderFinancialSummary	Creates or updates the financial summary information optionally related to an existing work order. **Note**: The previous AMT Classic integration provided a mechanism to create planning work orders in AMT from financial summaries. This is not possible with AMT EPF Adapters and the external system has to call the CreateWorkOrder function to create AMT planning work orders.
GetWorkOrder	Provides all known information about several work orders based on provided search criteria.
GetServiceReport	Special function for CAT dealers. Gets all known information about work orders closed before a time for SIMS reports.
ProcessWorkOrderGLEntry	This function is used to Add new GL Entry records to AMT or Update existing GL Entry records in AMT provided business rules are satisfied.
SendNotification	Sends all known information for a new notification to an external system. Documents attached to the Notification from AMT Mobile 2 are sent as MIME attachments.
UpdateNotificationStatus	Updates the Notification in AMT with a new status, priority and external work order number.
SendWorkOrderOperationStatus	Sends changes in work order operation status to an external system.
SendWorkOrderCompletionComments	Sends changes in WorkOrderCompletionComments to an external system. Completion comments are made up of Symptom code, Symptom Description, Cause code, Cause Description and Repair Description.

Function	Description
SendWorkOrderDocuments	Sends work order feedback documents from AMT Mobile 2 to an external system as MIME attachments in the message header.
ProcessSTO	This function is used to create/update Shutdown, Turnaround, Outage (STO) details in AMT.
CreateNotification	This function is used to create notifications in AMT.
CreateBacklog	This function is used to create work orders in AMT without needing a work order identifier.

5.2 Integration Service Address

More details regarding the general features of the integration service can be found in the Service Overview documentation. In order to use this service, the following endpoints are available for various authentication scenarios. These may not all be available, depending on the deployment configurations at a specific site.

Basic authentication	Domain, username and password provided when establishing the connection
https://<Server>:<port>/WorkOrderIntegrationService/WorkOrderIntegration/BasicHttpBinding_Https_Basic	
http://<Server>:<port>/WorkOrderIntegrationService/WorkOrderIntegration/BasicHttpBinding_Http_Basic	

Windows authentication	The Windows credentials of the current Windows account are used to establish the connection. This is the default method if no binding is specified in the URL.
https://<Server>:<port>/WorkOrderIntegrationService/WorkOrderIntegration/	
http://<Server>:<port>/WorkOrderIntegrationService/WorkOrderIntegration/	

OAUTH2 authentication	Client authentication is used to retrieve an OAUTH2 access token. The token is passed in the SOAP header when calling the AMT EPF Adapters.
https://<server>:<port>/WorkOrderIntegrationService/WorkOrderntegration/BasicHttpBinding_Http_Token	
https://<server>:<port>/WorkOrderIntegrationService/WorkOrderntegration/BasicHttpBinding_Https_Token	

<Server> is the fully qualified name of the server hosting the service.

Note that Windows authentication is being deprecated.

5.3 Usage Scenarios

Although highly configurable, there are some common patterns for setting up AMT work order integration aligned with the scenarios described in the AMT Work Order Implementation Guide.

The main features of the integration can be summarised as follows:

- AMT publishes work orders – Any created work orders can be sent to an external system and certain updates can be made available.
- AMT receives work orders – If work orders are managed in an external system, they can be created and updated in AMT by the integration services.

- Work orders are updated – Most configurations have some aspects of this, but business rules can prohibit the update of certain parts of the work order within AMT.
- Financial Summary / Settlement – Most configurations use this, and it is commonly implemented even if no work order management is done in AMT.
- General Ledger Reconciliation – Implemented to ensure cost accuracy of AMT by reconciling the ERP's General Ledger entries for work orders against the Financial Summary Information for each work order.
- AMT publishes new notifications – New notifications can be sent to an external system, and AMT is updated with the notification number from the external system.
- Notification status can be updated – External systems managing the notification lifecycle can update the status in AMT, as well as the priority and any associated external work order number created to address the notification.
- AMT publishes changes to operation work status codes.
- AMT publishes changes to work order completion comments.
- External systems like condition monitoring or mobile solutions can create a notification in AMT. The notification is then managed in AMT through standard work management processes.

Not all permutations are shown, but this should give a general idea of what features are supported.

5.4 Create Work Order

AMT creates a work order that is published to an external system. All the management of the work order is done in the external system, with updates to the actuals and status coming back to AMT. Upon completion of the work order, the Financial Summary is sent to AMT. In AMT this is commonly known as Create Work Order mode.

The typical system interaction is shown in Figure 2 below.

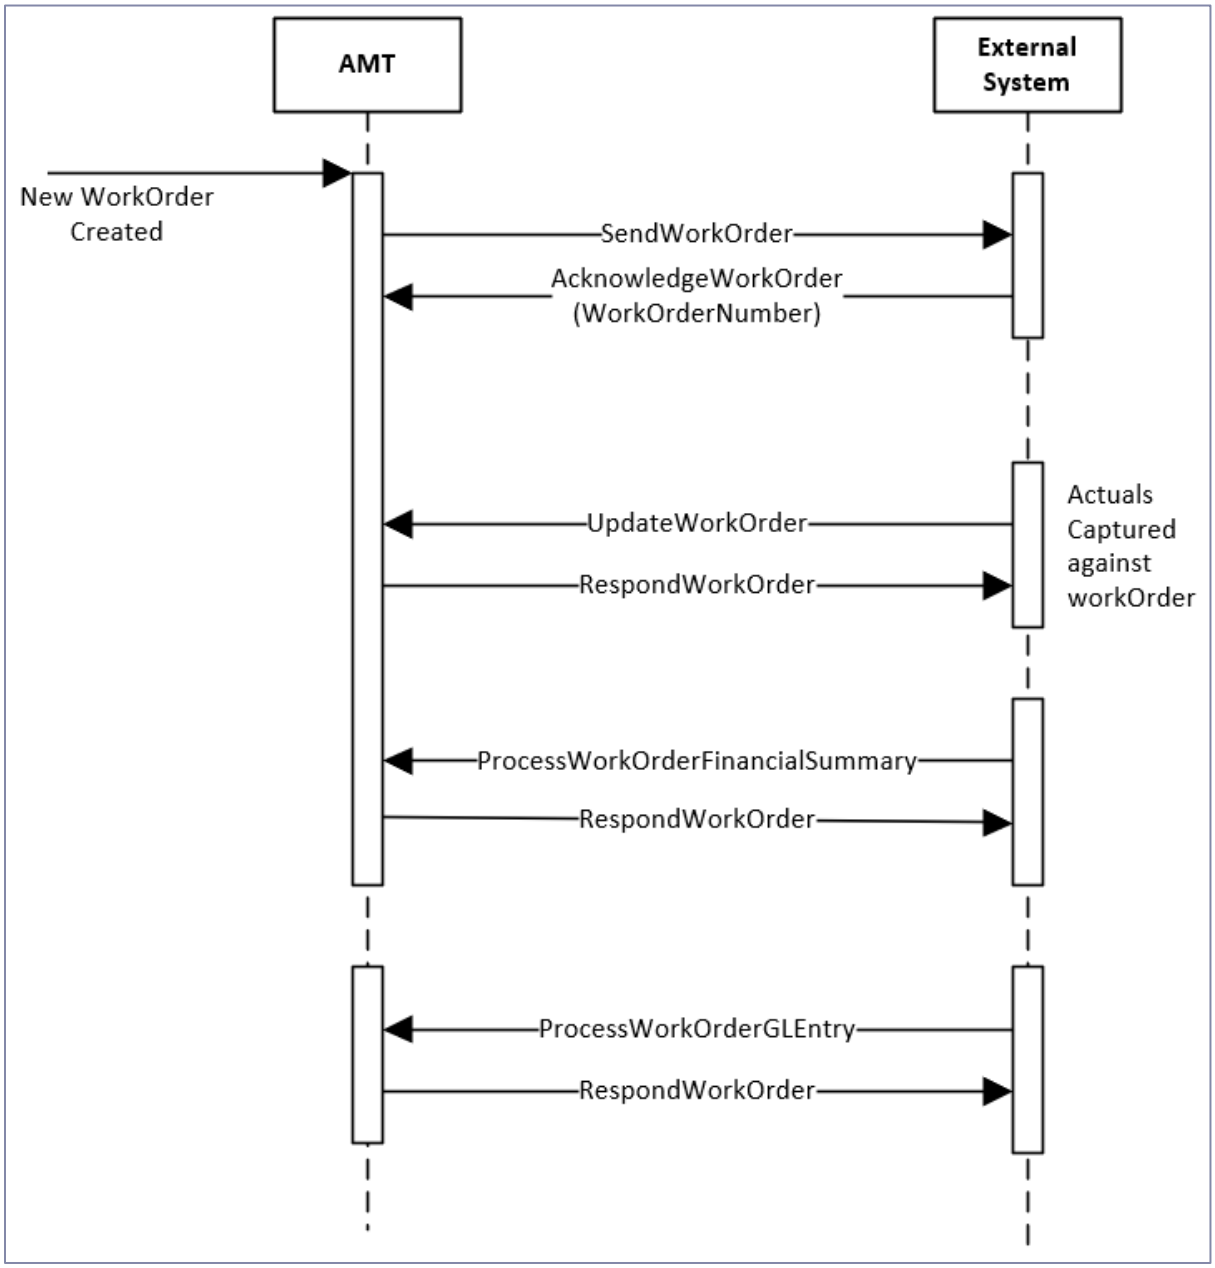


Figure 2 Create Work Order Interactions

5.5 Parts Requisitioning

AMT fully manages the work order. Work order authorisation and parts requisitioning are initiated using AMT functionality. Work order actuals are commonly captured in the external system, with updates being returned to AMT. In AMT this is commonly known as Create PO mode.

The typical system interaction is shown in Figure 3 below.

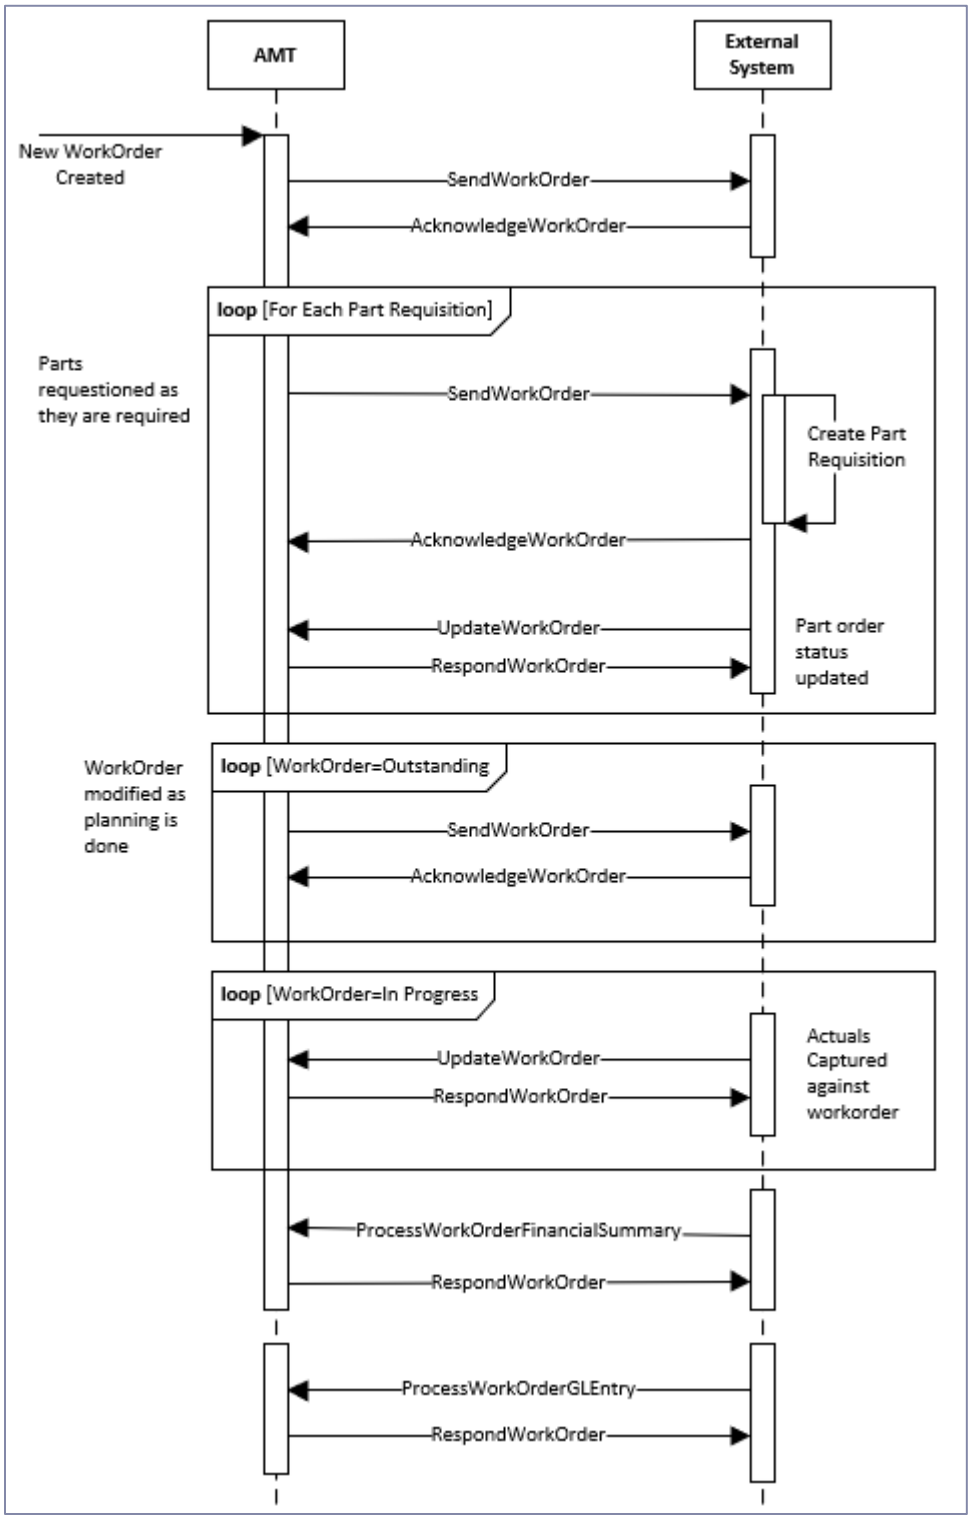


Figure 3 Parts Requisition Mode

5.6 Externally Generated Work Orders

Work orders can be created in an external system and then sent to AMT. The ongoing management of the work order can then be done in AMT or the external system but should not be a shared responsibility. Work order actuals are commonly captured in the external system, with updates being returned to AMT. This is commonly used to integrate with a system generating work orders for defects or downtime events.

The typical system interaction is shown in Figure 4 below.

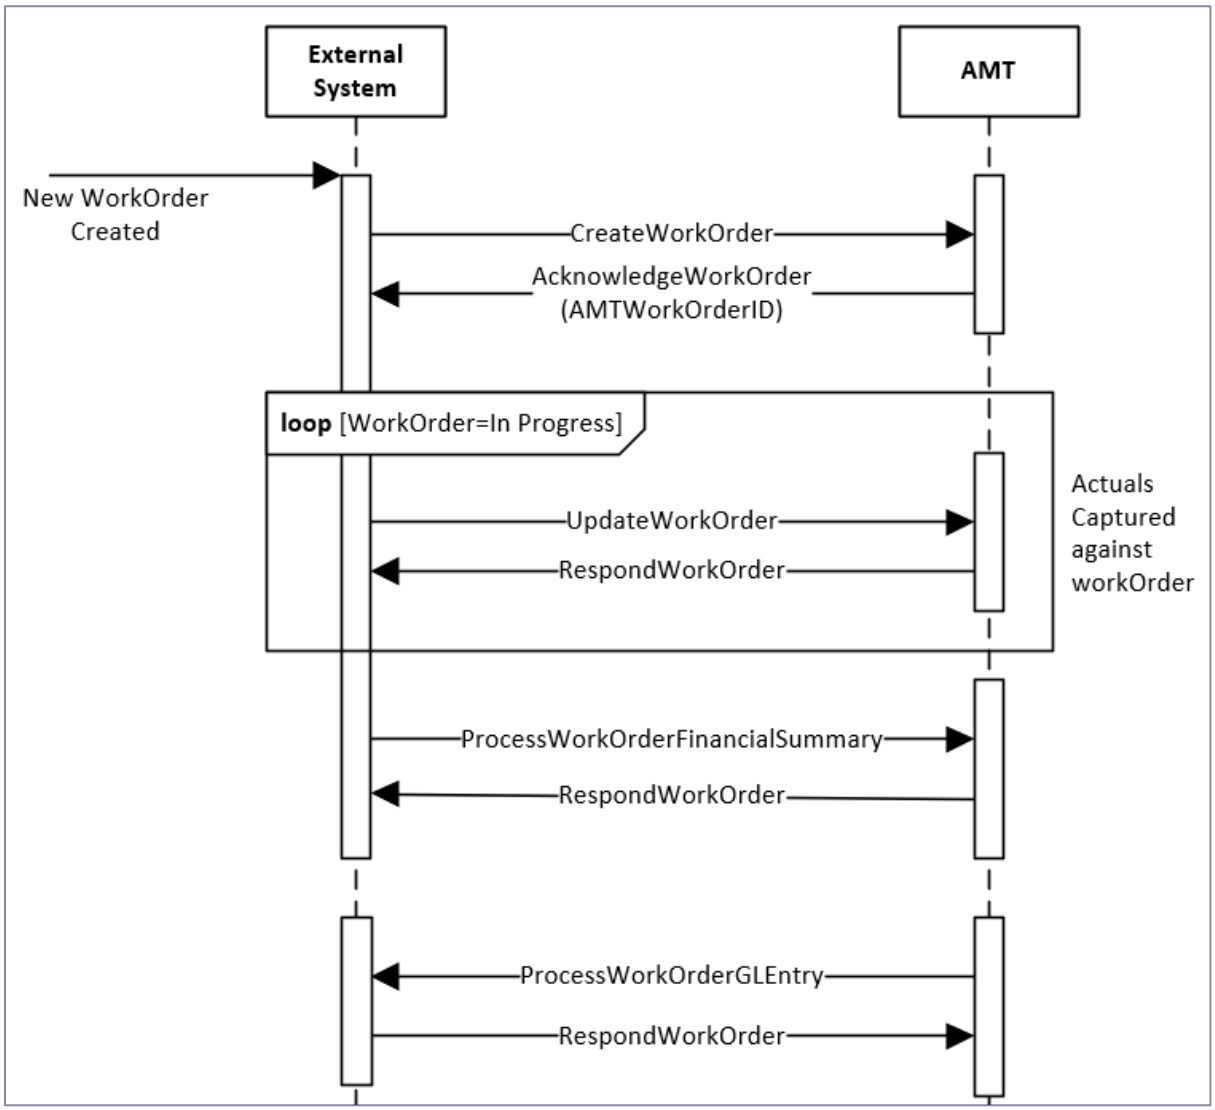


Figure 4 Externally managed work orders

5.7 Financial Summaries

AMT is not always used for work order management but still requires a financial summary of work performed on managed equipment. This is used for life-cycle costing of each asset. GL Reconciliation can be included in this scenario to ensure accurate records are being received from the external system.

The typical system interaction is shown in Figure 5 below.

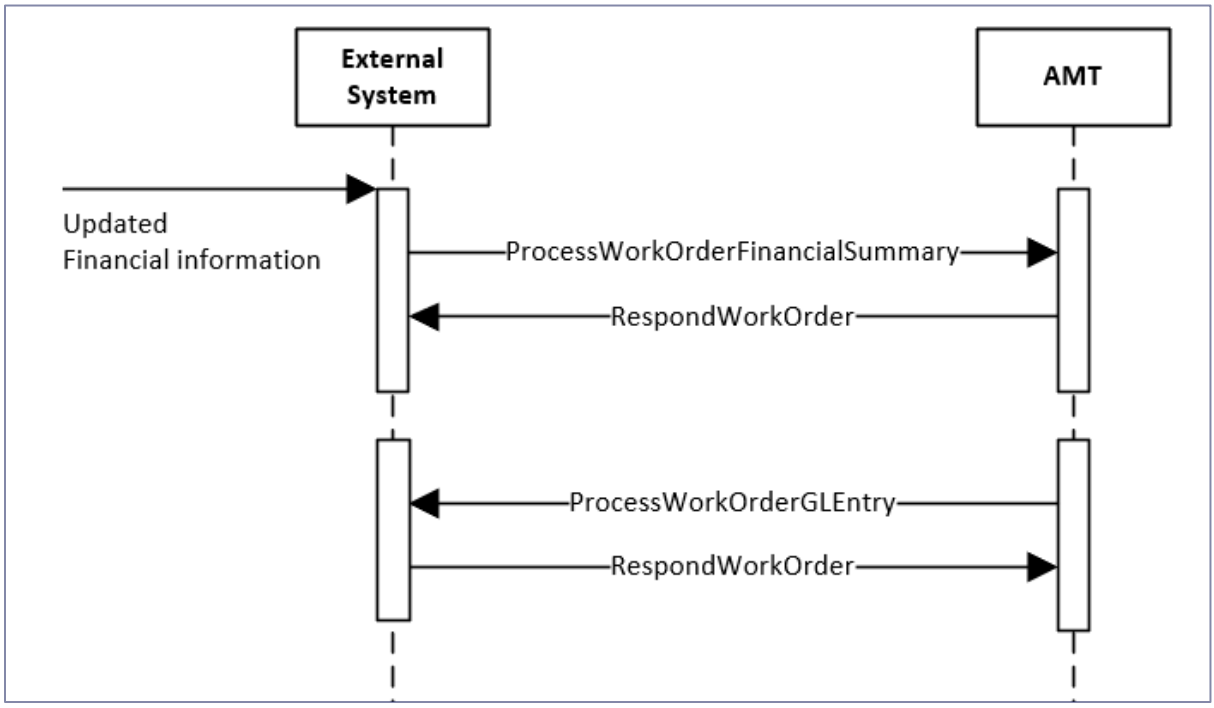


Figure 5 Financial Summary

5.8 Notifications

There are two typical patterns for AMT managing notifications.

In the first pattern, AMT can create a notification that is published to an external system. All the management of the notification is done in the external system, with updates to notification status, priority and associated external work order number coming back to AMT.

The resulting work order from the notification in the external system may be managed within AMT via other integration patterns in this document.

The typical system interaction for this pattern is shown in Figure 6 below.

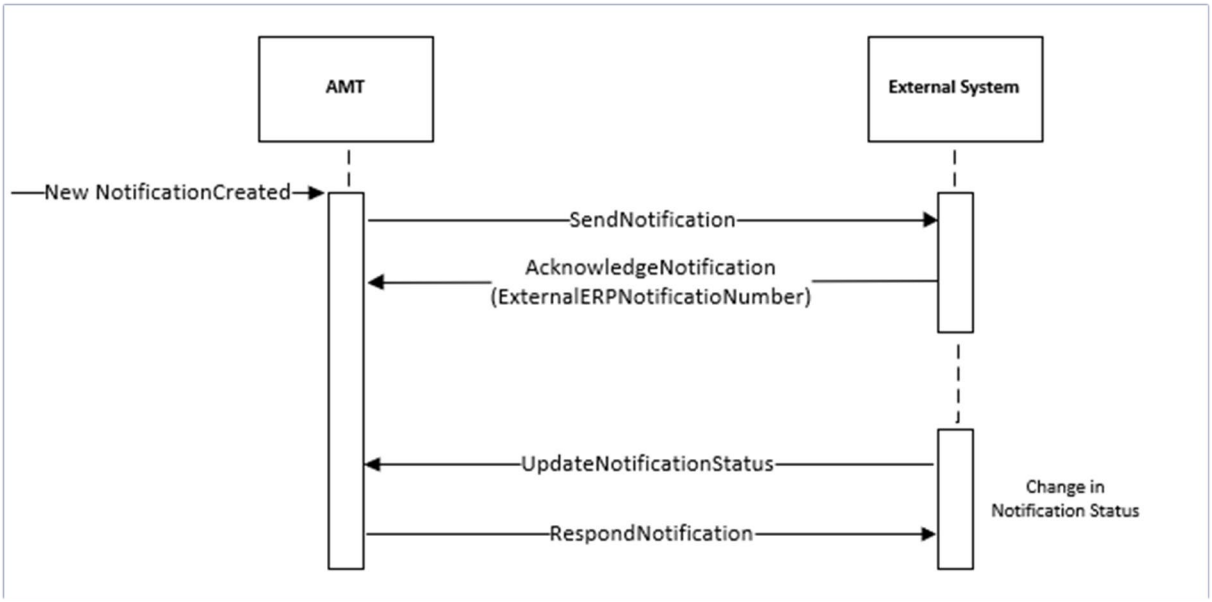


Figure 6 Notifications

In the second pattern, the notification is created in an external system. This may be a mobile inspection solution or a condition system identifying faults. The External System creates the notifications in AMT, and then the notification is managed in AMT via standard work management practices.

The typical system interaction for this pattern is shown below in Figure 7.

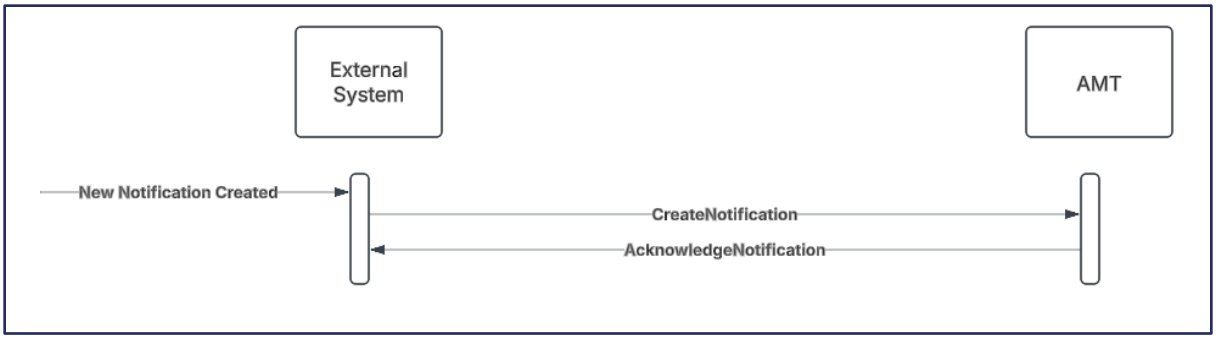


Figure 7 Externally created Notification

6 Field Descriptions

This integration uses the following fields. The data types for each field are described in the relevant XML schema definition.

6.1 Work Order Identification

A work order is identified by:

- AMTWorkOrderID
- WorkOrderNumber

Field Name	Description	Sample Values
AMTWorkOrderID	AMT internal reference for the work order. Every work order in AMT will be assigned a unique ID by AMT.	123456-1
WorkOrderNumber	Unique work order reference that is visible to the end user. This can either be given out by AMT or an External System (SAP, Oracle, Sage and so on).	WO123456

1. WorkOrderNumber will always be the dominant identifier. If it exists in the messages, it should be used for work order matching purposes.
2. In the case where WorkOrderNumber is provided in a message, but does not exist in a system, that work order is new.
3. If WorkOrderNumber is not provided in a message, the AMTWorkOrderID must be provided and used for work order matching purposes.
4. In the case that both IDs are provided, they should be validated to confirm the consistency of data.

6.2 Asset Identification

An asset is identified by:

- SerialNumber
- ModelCode
- RegistrationCounter

Field Name	Description	Sample Values
SerialNumber	Manufacturer's Serial Number for the Asset or any other identifier for the Asset.	0A800001
ModelCode	The Asset Model Code is configured in AMT.	793C
RegistrationCounter	Registration Counter of the Asset, also called "Contract Enrolment Number".	CO123456

6.3 Part Identification

Parts are generally identified in AMT using a combination of Organisation, Source of Supply and Part Number. In the case of work orders, the Organisation Code is derived directly from the Asset to which the work order relates, so is not a requirement for Part Identification.

Field Name	Description	Sample Values
SourceOfSupplyCode	The AMT Source of Supply Code for the Part.	CAT
PartNumber	The Part Number. This is the field that a Part in AMT is referenced by (in conjunction with the SOS) and is usually either the SKU or the Manufacturer Part Number.	9T3493

6.4 Work Order Header

The work order has information describing the work order as a whole.

Field Name	Description	Sample Values
AMTWorkOrderID	Internal AMT identifier of a work order.	123456-1
WorkOrderNumber	Unique identifier of a work order, visible to end users.	W123456
WorkOrderDescription	Text description of a work order.	Replace broken seat
ModelCode	**ModelCode** for the Asset the WO is raised for.	793C
SerialNumber	Asset Serial Number. This can be the Manufacturer's Serial Number or any other Unique Identifier for the Asset.	0A123456X
RegistrationCounter	Used to track multiple "lives" of an asset.	
AssetName	The name of the Asset as displayed in AMT.	
AssetReference	An additional reference that may be associated with the Asset.	
BranchCode	The AMT Branch Code for the work order.	MO
SiteCode	The AMT Site Code for the work order.	MARC
CustomerCode	Customer number the work is done for.	C123456
UsageMeasure	Cumulative usage reading calculated from the job date.	15236
UsageUOMCode	Usage unit of measure.	HR
StrategyIndicator	Indicates whether the WO is related to a Strategy Task or not.	
ComponentCode	The configured AMT Component Code for the work order. For a WO, the Component Codes at the header level identify the primary component the WO is raised for.	7307
ModifierCode	The configured AMT Modifier Code for the work order. The Modifier Code generally identifies a component's position (e.g., Left Turbo, Right wheel and so on).	LEFT

Field Name	Description	Sample Values
TaskTypeCode	The configured AMT Task Type Code for the work order. The Task Type defines the activity that the WO performs (PM, General Repair, Component Changeout and so on.	. General Repair
TaskCounterCode	The configured AMT TaskCounter Code for the work order. The Task Counter is typically used to distinctly identify a projection where a combination of Component Code, Modifier Code and Task Type is not unique.	1
ExternalIdentifier	The UNIQUE identifier for the ERP Strategy Task (for example, Maintenance Plan/Item in SAP) for which the work order was created. If a value is provided in this field, the work order settlement links to the AMT Strategy Task based on this value.	
TagId	From the strategy task linked to the work order. Additional Description for a Strategy Task. In an external System, this could be the address for an Equipment or Component, for example, the Child Asset ID where the task belongs.	
PriorityCode	The configured AMT Priority Code for the work order. Typically High, Medium and Low.	Low
SourceCode	The AMT Source Code for the work order. Sources can be PCR, Inspection, Service Letter and so on. (the source of the work order).	
RaisedByEmployeeNumber	Employee Number of the “Raised By” employee for the work order, as set in AMT. This is specifically set in AMT.	
RaisedByEmployeeFirstName	Employee First Name of the “Raised By” employee for the work order, as set in AMT. This is specifically set in AMT.	
RaisedByEmployeeSurName	Employee Last Name of the “Raised By” employee for the work order, as set in AMT. This is specifically set in AMT.	
DateNotifiedDate	Notification date in AMT local time.	
DateNotifiedDateUTC	Notification date in UTC time.	
CustomerReference	Text field to record any additional Customer Reference.	
PartReadyIndicator	Indicates whether or not the work order is ready to be worked on based on Parts readiness rules as configured in AMT.	
OtherResourceReadyIndicator	Indicates whether or not the work order is ready to be worked on based on Other Resource readiness rules as configured in AMT.	

Field Name	Description	Sample Values
WorkOrderCompletionCode	The AMT Completion Code for the work order. Values are: • **N** – Normal Operation • **S** – Skip work order (Job not performed, but work order completed) • **A** – Abandon work order and remove work order link • **AL** – Abandon work order and maintain work order link.	N
PlanningStatusCode	The AMT PlanningStatus Code for the work order. Values are: • **Out** – Outstanding • **YTS** – Yet to Start • **IP** – In Progress • **COMP** – Completed • **ABAN** – Abandoned	OUT
PlannedStartTime	Planned work start time in AMT local time.	
PlannedStartTimeUTC	Planned work start time in UTC time.	
PlannedEndTime	Planned work end time in AMT local time.	
PlannedEndTimeUTC	Planned work end time in UTC time.	
PlannedDurationHours	Planned duration for the work order, described in hours.	
PlannedLabourHours	Labour Hours planned for the work order.	
WeeklyPlanDescription	Free text to identify the weekly plan when the plan comes from an external system.	
TargetDate	This is the Target Date for the WO as set in AMT, represented in AMT local time.	18092017
TargetDateUTC	This is the Target Date for the WO as set in AMT, represented in AMT local time.	18092017

Field Name	Description	Sample Values
JobDate	Date the work order was performed (start date/ time) This is the job date entered on the work order job date form if the AMT configuration is set to enter work order job dates. There is no restriction on the minimum value of the job date entered by the user. If AMT Configuration is NOT set to enter the Job Date, this date is calculated as: • the planned down date/time of the event if the work order is in an event OR • the strategy date if it is a strategy task not in an event OR • the start date of the work order if it is not a strategy task OR • today if none of the above exist. Minimum Job date passed is TODAY. This value is represented in AMT local time.	18092017
JobDateUTC	This value is converted to AMT local time, then used as per the logic in JobDate. This value is represented in AMT UTC time.	
WorkLocationCode	The configured AMT Location Code for the work order. This relates to the event location for the work order.	
PlanningNoteDescription	Base Planning Details Planning Notes.	
ResponsibleWorkGroupCode	The configured AMT Workgroup Code. This is the group responsible for performing the work. Workgroups are associated with sites, so the Site should always be considered when providing a workgroup.	
ResponsibleEmployeeNumber	Employee Number of the employee responsible for the work order as set in AMT.	
ResponsibleEmployeeFirstName	Employee First Name of the employee responsible for the work order as set in AMT.	
ResponsibleEmployeeSurName	Employee Last Name of the employee responsible for the work order as set in AMT.	
BreakdownIndicator	Breakdown Indicator.	
SymptomCode	The configured AMT Symptom Code for the work order.	Wobbly
SymptomDescription	Symptom of failure. For example, fatigue caused by over pressure where fatigue is the cause and over pressure is the symptom.	Fatigue
CauseCode	Cause of failure. For example, fatigue caused by over pressure where fatigue is the cause and over pressure is the symptom.	Over Pressure

Field Name	Description	Sample Values
CauseDescription	Cause Description.	In use since 2015
JobCode	Header level Job Code.	014
RepairDescription	Repair Description.	
ServiceCode	The configured AMT Service Code for the work order is a set of AMT codes aligned with the customer's internal service codes.	A-Structural
WarrantyIndicator	Indicates is the WO is under warranty.	
FailedPrimaryPartNumber	Failed Part Information: This is the part number that identifies the whole component or, in some circumstances, a kit number.	
FailedPrimaryPartDescription	Failed Part Information: This is the part description that identifies the whole component or, in some circumstances, a kit number.	
FailedPartGroupNumber	Failed Part Information: This is the group number for the failed part or kit.	
FailedPartGroupDescription	Failed Part Information: This is a description of the component group of the failed part.	
DurabilityIndexIndicator	Feedback if Durability Index is set (Check box).	
OccurrenceTypeCode	The configured AMT Occurrence Type Code for the work order used to represent very specific component failure modes which are tracked for the purpose of condition-based maintenance and component failure analysis.	
CostResponsibilityCode	From the asset for the work order.	
AssetCostCode	From the asset for the work order (also called "WBS Element 1").	
ExternalBacklogID	Unique identifier for an AMT Backlog.	
ExternalWorkOrderID	Is used when launching the UI of an external work order system from the AMT UI.	
FunctionalLocationName	Functional Location associated with the work order.	
FunctionalLocationID	Unique identifier of the Functional Location.	
ParentWorkOrderNumber	The full work order number including the task number. Note that this will not link work order financial summaries for merge rule = 2.	WO123-0512
MaintenancePeriodCode	The configured AMT MaintenancePeriod Code for the work order. Maintenance Periods are defined in AMT with Start and End dates. This Maintenance Period Code identifies these periods.	
EventConfirmedIndicator	Indicates if the event associated with the work order is confirmed.	
CreatedByUserID	This is the AMT Id of the logged in User (unique AMT login Name).	
CreatedByUserName	This is the Name of the logged in User.	

Field Name	Description	Sample Values
AuthorisedByUserID	This is the AMT Id of the User who authorised the work order.	
AuthorisedByUserName	This is the Name of the User who authorised the work order.	
ActualStartTime	Actual work start date and time in AMT local time.	
ActualStartTimeUTC	Actual work start date and time in UTC time.	
ActualEndTime	Actual work completion date and time in AMT local time.	
ActualEndTimeUTC	Actual work completion date and time in UTC time.	
ExternalDowntimeCompleteIndicator	Indicates if the external downtime event is complete.	
LastModifiedDate	The most recent updated date and time of this work order in AMT local time.	
LastModifiedDateUTC	The most recent updated date and time of this work order in UTC time.	
WorkLocation	Free format text describing the location of the work. This is not related to events.	
STOID	Defined for future use. Not yet implemented.	
RegulatoryCode	Code for the regulatory body that work execution must comply with.	Dept of Mines
PlanningGroupCode	A Planning Group is a person or group of people that organise maintenance activities.	Site A planners
MOTCode	Maintenance Order Type Code describes the type of work.	Inspection, Corrective Maintenance, planned maintenance
Filename	Name of a document attached to the work order. This may be a photo, Word document, Excel document or other document relevant to the work management process.	Only applicable to create and update work order functions
Timestamp	Timestamp for the file.	Only applicable to create and update work order functions
Base64Content	The attached document content encoded as a base64 string.	Only applicable to create and update work order functions
ExternalNotificationIdentifier	The ERP Notification number related to the work order in the ERP. Free format text.	Only applicable to Create and Update work order functions.

6.5 Work Order Operations

Each work order has one or more operations, describing the work that is done for each work order.

Field Name	Description	Sample Values
AMTOperationID	AMT Operation ID. This is a unique number given by AMT for each operation. This is not specific to the work order but is unique across the system.	1234
OperationNumber	Unique Operation number within a work order. Controlled by configuration, the numbers can be 1, 2, 3 or 10, 20, 30 or 100, 200, 300 and so on.	10
Description	Text description for an operation.	Replace broken seat
WorkGroupCode	Work group code for the operation. The site code for the work order header is used to determine the Work Group.	Field WG1
Instruction	Instruction typed into AMT for the operations. This is free text.	
PlannedStartTime	The planned Start Time for the operation in AMT local time.	2017-10-05 T09:00:00
PlannedStartTimeUTC	The planned Start Time for the operation in UTC time.	
PlannedEndTime	The planned End Time for the operation in AMT local time.	2017-10-05 T11:00:00
PlannedEndTimeUTC	The planned End Time for the operation in UTC time	
JobCode	Job Code for the operation. Job code identifies the task that is performed by the operation.	010
PlannedLabourHourValue	Labour Hours planned for the operation.	5
CostCentreCode	Cost Centre assigned to the operation.	7307
CostBearerCode	Cost Bearer assigned to the operation.	CC
PlannedPartCostAtSellValue	Total Sell amount for the parts for the operation.	1254.30
PlannedPartExpenseElementCode	Expense Element Code for the parts planned to be used during this operation.	
PlannedLabourCostAtSellValue	Total Sell amount for the Labour for the operation.	
PlannedLabourExpenseElementCode	Expense Element Code for the labour planned to be used during this operation.	
PlannedMiscCostAtSellValue	Total Sell amount for the miscellaneous items for the operation.	
PlannedMiscExpenseElementCode	Expense Element Code for the misc items planned to be used during this operation.	

Field Name	Description	Sample Values
LabourIndicator	This indicates whether this is Field or Shop Hours. • **F** – Field • **S** – Shop This is the Labour indicator in the Strategy Task from which a work order operation has been created. For a non-strategy task, this is always set to "F".	
ComponentCode	Component Code set at the Operations level.	
ModifierCode	Modifier Code set at the Operations level	
StandardJobID	Standard Job ID if a standard job is associated with the operation. This is usually when a work order is created from a Strategy Task associated with one or more Standard Jobs.	
OperationWorkStatusCode	Status of the work on the operation.	Yet to start, in progress, on hold, pending parts
ResponsibleEmployee	Employee responsible for the work at work order operation level.	
OccupationalHealthAndSafetyCode	Operation level occupational health and safety code.	
ERPInstructionCode	The ERP instruction code which defines work to perform on this operation. This is an optional, free text field. This field is only applicable to CreateWorkOrder, UpdateWorkOrder. SendWorkOrder and ShowWorkOrder.	AMT checklist or SAP task list identifier
NoMoreWorkIndicator	Indicator for whether an operation is physically completed even though the status may not yet be completed (maintenance work may be completed, but related admin work (like returning unused parts) may still be in progress for example).	0 or 1
ActualStartTimeUTC	The time work was actually started in the AMT mobile device. Only applicable to the SendWorkOrderLabourActual() function.	

6.6 Operation Part

Each Operation can have zero or more parts that are required to perform the work.

Field Name	Description	Sample Values
SourceOfSupplyCode	This is the Part OEM, which, in conjunction with the Part Number, forms the key for a part. Where the Part Number is an SKU, the Source of Supply (SOS) is not relevant.	CAT
PartNumber	The Part Number as defined in AMT. This can be the OEM's Part Number or an SKU.	P1234567
AMTPartItemID	The AMT Part Item identifier. Can be used to return information to AMT about a specific Part used in a work order.	
PartDescription	Text description for a part.	Widget
PlannedQuantityValue	Planned quantity for the operation.	5
PlannedUnitPriceValue	Unit price for the part.	100
CurrencyCode	Currency for the price (Transaction Currency).	AUD
PartRequiredByDate	When is the part required by (defaults to the Job Date) in AMT local time. This field is only available on SendWorkOrder(), CreateWorkorder() and showWorkorder(). The UpdateWorkorder() function has an attribute called ExpectedAvailabilityDate which maps to the same AMT field.	2017-10-05 T11:00:00
PartRequiredByDateUTC	When is the part required by (defaults to the Job Date) in UTC time.	2017-10-05 T11:00:00
CostCentreCode	Cost Centre assigned to a part.	
ExpenseElementCode	Expense Element assigned to a part.	
WorkGroupCode	Work group assigned to a part. The Site of the header is used to assign the appropriate workgroup.	MSA Field
CostBearerCode	Cost Bearer assigned to a part.	CC
SupplierCode	Supplier code identifies the supplier for whom the part is sourced. An AMT configuration option allows the creation of purchase requisitions for each supplier.	WesTrac
FinancialPeriod	Financial Period as recorded against each part line.	201710
PartPlanningNote	Planning notes are entered in the Parts Tab for a work order operation.	Test Planning Note
AMTPurchaseOrderID	Purchase Order ID sent from AMT when AMT is in PO mode. Identifier for the AMT PO.	123456
ActualQuantityValue	Actual quantity of parts used.	4

Field Name	Description	Sample Values
ActualTotalCostAtCostValue	Actual total cost of parts. This is an at “cost” (Cost@Cost) value when AMT stores cost and sell amounts to indicate margins (generally in an OEM environment). Otherwise, the Cost@Cost and the Cost@Sell are the same.	55.04
ActualTotalCostAtSellValue	Actual total cost of parts. This is an at “sell” (Cost@Sell) value when AMT stores cost and sell amounts to indicate margins (generally in an OEM environment). Otherwise, the Cost@Cost and the Cost@Sell are the same.	100
ExchangeRateValue	Exchange rate to Statutory Currency from Transaction Currency. The financial amounts will be divided by this number when imported into AMT.	1
StatutoryCurrencyCode	Statutory Currency used in a multi-currency deployment. If a Statutory Currency is not provided, AMT assumes that the Statutory and Prime Currencies are the same.	
ExchangeRateToPrimeCurrencyValue	Exchange rate to AMT primary currency. If no Statutory Currency is provided, this is redundant.	
OrderDescription	This is any additional information attached to a part line in AMT. Based on the configuration, a “Parts Order Details” text box can be displayed with additional information for the part line.	Part obtained from vendor A
PartOrderStatusCode	The status of a part that is required for a work order. **1** = Not Ordered **2** = Ordered **3** = Ready/Available **4** = Cancelled This field is only available on the UpdateWorkOrder() function. For CreateWorkorder(), SendWorkOrder() and ShowWorkOrder, the attribute PartAvailabilityStatusCode is available, which maps to the same AMT field.	3
PartAvailabilityStatusCode	The status of a part that is required for a work order. **1** = Not Ordered **2** = Ordered **3** = Ready/Available **4** = Cancelled This field is only available on the functions for CreateWorkorder(), SendWorkOrder() and ShowWorkOrder. For UpdateWorkorder(), the attribute PartOrderStatusCode is available, which maps to the same AMT field.	2

Field Name	Description	Sample Values
ExpectedAvailabilityDate	The date on which an ordered part should arrive in AMT local time. This field is only available on the UpdateWorkOrder() function. The attribute PartRequiredByDate is available on functions for SendWorkOrder(), CreateWorkorder() and showWorkorder() and maps to the same field as this attribute.	2017-10-05 T11:00:00
ExpectedAvailabilityDateUTC	The date on which an ordered part should arrive in UTC time.	
ReservedIndicator	The Part is specifically reserved for this work order.	1
ActualUnitPriceValue	The actual price for a part used in AMT. This is a Cost@Sell price.	42.69
ReservationNumber	SAP reservation number if the parts are reserved in SAP. Fee format text field. Only applicable to CreateWorkOrder() function and UpdateWorkOrder() function.	

6.7 Operations Labour

Each Operation can have zero or more labour requirements that are required to perform the work.

Field Name	Description	Sample Values
WorkGroupCode	Labour work group. The site code of the work order is used to determine the appropriate Workgroup.	WorkGroupCode
LabourActivityCode	Code defining the planned Labour Activity.	LabourActivityCode
LabourActivityDescription	Text description for planned Labour Activity.	LabourActivityDescription
AMTLabourItemID	The AMT Labour line identifier. Can be used to return information to AMT about a specific Labour item used in a work order.	AMTLabourItemID
EmployeeNumber	Employee Number of employees assigned when Employee level planning is done.	EmployeeNumber
EmployeeFirstName	First Name of the employee assigned when Employee level planning is done.	EmployeeFirstName
EmployeeSurname	Last Name of the employee assigned when Employee-level planning is done.	EmployeeSurname
PlannedLabourHourValue	Planned Total labour hours required.	PlannedLabourHourValue
CostBearerCode	Cost Bearer assigned to a labour line.	CostBearerCode
CostCentreCode	Cost Centre assigned to a labour line.	CostCentreCode
ExpenseElementCode	Expense Element assigned to a labour line.	ExpenseElementCode
PlannedQuantityValue	Planned Quantity required.	PlannedQuantityValue
PlannedLabourRateValue	Hourly labour rate.	PlannedLabourRateValue
FinancialPeriod	Financial Period as recorded against each labour line.	FinancialPeriod

Field Name	Description	Sample Values
LabourInstruction	Planning instructions entered in the labour line.	LabourInstruction
ActualLabourHour	Actual labour hours for the labour line.	ActualLabourHour
ExchangeRateValue	Exchange rate to Statutory Currency from Transaction Currency. The financial amounts will be divided by this number when imported into AMT.	ExchangeRateValue
CurrencyCode	Transaction Currency. All amounts listed in the message are in this Currency.	CurrencyCode
StatutoryCurrencyCode	Statutory Currency used in a multi-currency deployment. If a Statutory Currency is not provided, AMT assumes that the Statutory and Prime Currencies are the same.	StatutoryCurrencyCode
ExchangeRateToPrimeCurrencyValue	Exchange rate to AMT currency. If no Statutory Currency is provided, this is redundant.	ExchangeRateToPrimeCurrencyValue
ActualTotalCostAtCostValue	Actual total cost of Labour. This is an at “cost” (Cost@Cost) value when AMT stores cost and sell amounts to indicate margins (generally in an OEM environment). Otherwise, the Cost@Cost and the Cost@Sell are the same.	ActualTotalCostAtCostValue
ActualTotalCostAtSellValue	Actual total cost of Labour. This is an at “sell” (Cost@Sell) value when AMT stores cost and sell amounts to indicate margins (generally in an OEM environment). Otherwise, the Cost@Cost and the Cost@Sell are the same.	ActualTotalCostAtSellValue
RecordedTimeUTC	The time labour hours were recorded by a user on the AMT mobile device. Only applicable to the SendWorkOrderLabourActual() function.	

6.8 Operations Miscellaneous

Each Operation can have zero or more miscellaneous items that are required to perform the work.

Field Name	Description	Sample Values
MiscDescription	Description for the misc item.	Crane Hire
MiscCategoryCode	Misc Category (grouping for misc items).	GENERAL
SupplierCode	Supplier code identifies the supplier for whom the part is sourced. In the PO mode, AMT creates a PO for each distinct supplier selected.	WesTrac
AMTMiscItemID	The AMT Misc line identifier. Can be used to return information to AMT about a specific misc item used in a work order.	
PlannedMiscTotalValue	Total value for the misc item.	1000
CurrencyCode	Transaction Currency. All amounts listed in the message are in this Currency.	AUD
FinancialPeriod	Financial Period as recorded against each misc line.	201710
MiscPlanningNote	Planning notes for the misc line.	
CostBearerCode	Cost Bearer assigned to a misc line.	

Field Name	Description	Sample Values
CostCentreCode	Cost Centre assigned to a misc line.	
ExpenseElementCode	Expense Element assigned to a misc line.	
WorkGroupCode	Work Group assigned to a misc line. The site code of the work order is used to determine the appropriate Work Group.	
ExchangeRateValue	Exchange rate to Statutory Currency from Transaction Currency. The financial amounts will be divided by this number when imported into AMT.	
StatutoryCurrencyCode	Statutory Currency used in a multi-currency deployment. If a Statutory Currency is not provided, AMT assumes that the Statutory and Prime Currencies are the same.	
ExchangeRateToPrimeCurrencyValue	Exchange rate to AMT Prime Currency. If no Statutory Currency is provided, this is redundant.	
ActualTotalCostAtCostValue	Actual total cost of Misc Item. This is an at “cost” (Cost@Cost) value when AMT stores cost and sell amounts to indicate margins (generally in an OEM environment). Otherwise, the Cost@Cost and the Cost@Sell are the same.	
ActualTotalCostAtSellValue	Actual total cost of Misc Item. This is an at “sell” (Cost@Sell) value when AMT stores cost and sell amounts to indicate margins (generally in an OEM environment). Otherwise, the Cost@Cost and the Cost@Sell are the same.	
AMTPurchaseOrderID	Purchase Order ID sent from AMT when AMT is in PO mode. Identifier for the AMT PO.	

6.9 Requisition

The Requisition component is only made available in SendWorkOrder when AMT is in **PO Create** mode.

Field Name	Description	Sample Values
AMTWorkOrderID	Internal AMT identifier of a work order.	123456-1
WorkOrderNumber	Unique identifier of a work order, visible to end users.	W123456
AMTPurchaseOrderID	Purchase Order ID sent from AMT when AMT is in PO mode. Identifier for the AMT PO.	
AMTPurchaseOrderNumber	Purchase order number allocated in AMT.	
SupplierCode	Supplier name for supplier on the order.	
SupplierName	Supply description for the supplier on the order.	
SupplierContact	The supplier contact for the order.	
ContactPhone	Phone number of the contact at the supplier.	
DeliveryLocation	Location to deliver the order.	
DeliveryStreet	Street to deliver the order.	
DeliveryMethod	Method of delivery for the order.	

6.10 Work Order Financial Summary

Field Name	Description	Sample Values
AMTWorkOrderID	Internal AMT identifier of a work order.	12456
WorkOrderNumber	Unique identifier of a work order, visible to end users.	W322349
TaskNumber	The Task Number is used to identify segments within a Work Order Settlement. For single-segment “perpetual” Work Order Settlements, this can be the transaction period (in the format YYMM). An alternative option for multi-segmented perpetual Work Order Settlements is to concatenate the segment (task) and the period (YYMM). This can also be the Cost_Bearer if the Work Order Settlements are to be segregated by Cost_Bearers. There are a number of options on how to specify the Work Order Number and the Task Number.	121
Description	The Description for the Financial Summary.	
ModelCode	Model Code for the Asset the Financial Summary is for.	793C
SerialNumber	Asset Serial Number. This can be the Manufacturer's Serial Number or any other Unique Identifier for the Asset.	0A123456X
RegistrationCounter	Used to track multiple "lives" of an Asset in AMT. Sometimes called the “Contract Enrolment Number”, the Registration Counter uniquely defines the Asset’s current allocation.	
JobDate	Date the work order was performed. In the absence of a planning Work Order, the Job Date triggers the “Next Due” for a Strategy Task if the Financial Summary is for an AMT Strategy. AMT will assume this to be the date on which the job was performed.	
JobDateUTC	This value is converted to AMT local time and used as in JobDate above.	
OpenDate	For invoicing Work Order Settlements this is the Open Date of the Work Order Settlement. For perpetual Work Order Settlements this is the first of the month in which the transaction took place.	
OpenDateUTC	This value is converted to AMT local time and used as in OpenDate above.	
ComponentCode	The configured AMT Component Code for the work order. For a WO, the Component codes at the header level identify the primary component the WO is raised for.	
ModifierCode	The configured AMT Modifier Code for the work order. The Modifier Code generally identifies a position for a component (**Left** Turbo, **Right** wheel and so on).	

Field Name	Description	Sample Values
TaskTypeCode	The configured AMT Task Type Code for the work order. The Task Type defines the activity that the WO performs (PM, General Repair, Component Changeout and so on).	
TaskCounterCode	The configured AMT TaskCounter Code for the work order. The Task Counter is typically used to distinctly identify a projection where a combination of Component Code, Modifier Code and Task Type is not unique.	
OccurrenceTypeCode	The AMT Occurrence Type Code for the Work Order Settlement is used to represent very specific component failure modes which are tracked for the purpose of condition-based maintenance and component failure analysis. The Occurrence Type must exist in AMT.	
SymptomCode	The configured AMT Symptom Code for the Work Order Settlement.	Wobbly
CauseCode	The configured AMT Cause Code for the work order.	Aging
SchedulingTaskID	Unique identifier of a Scheduling Task in an External System.	MPS.123456.600 123.1
ExchangeRateValue	Exchange rate to Statutory Currency from Transaction Currency. The financial amounts will be divided by this number when imported into AMT.	1
CurrencyCode	Transaction Currency. All amounts listed in the message are in this Currency.	AUD
StatutoryCurrencyCode	Statutory Currency used in a multi-currency deployment. If a Statutory Currency is not provided, AMT assumes that the Statutory and Prime Currencies are the same.	
ExchangeRateToPrimeCurrencyValue	Exchange rate to AMT Primary Currency. If no Statutory Currency provided, this is redundant.	
JobCode	Job Code identifies the task that is performed. Job Code must exist in AMT.	010
ClosePeriod	For a closing Work Order, this is the Close (Invoice) Period of the Job. The period sent is a Financial Period. A Close Period indicates that the Settlement is closed (that is, no longer in WIP). For WIP Work Order Settlements, this field should be NULL. For perpetual Work Order Settlements, this is the Transaction Period for the costs.	
InvoiceNumber	If the Work Order Settlement is closed, this is the Invoice Number; otherwise, blank.	DS380005486
FunctionalLocationName	Functional Location or Equipment associated with the Work Order Settlement.	A.PDC.EXC.RH3. 107.001
FunctionalLocationID	GUID associated with the Functional Location or Equipment associated with the Work Order Settlement.	

Field Name	Description	Sample Values
ExternalIdentifier	The unique identifier for the ERP Strategy Task (for example Maintenance Plan/Item in SAP) for which the WO was created. If a value is provided in this field, the Work Order Settlement links to the AMT Strategy Task based on this value. This field takes precedence over the 4 codes for the linking process.	MPS.123456.600 123.1
MaintenancePeriodCode	The configured AMT MaintenancePeriod Code for the Work Order. Maintenance Periods are defined in AMT with Start and End dates. This Maintenance Period Code identifies these periods.	OCT2017
OverheadGroupCode	Overhead Group Code - used where the Work Order Settlement message is used to send Overhead Costs to AMT.	OH
ParentWorkOrderNumber	Work Order Number of the Parent WO. Must be the full Workorder Number (including Task Number).	WO123-0512
MOTCode	Maintenance Order Type code to classify the type of maintenance work being performed.	PM

6.11 Financial Details

Each Financial summary can have one or more associated financial details.

Field Name	Description	Sample Values
WorkGroupSiteCode	The site to which the Workgroup belongs.	Curragh
WorkGroupCode	Workgroup responsible for doing the job. The WorkGroupSiteCode is used to determine the appropriate workgroup.	ELEC_FIELD
CostCentreCode	Cost Centre for the reported costs. A Cost Centre will typically refer to an organisational and/or departmental entity of a company and will exist in the company's accounting system.	
CostCategoryCode	User-defined Cost Categories in AMT. Valid categories are: • **P** – (Parts) • **L** – (Labour) • **M** – (Misc).	P
ExpenseElementCode	Expense Element for the reported costs. Expense Elements usually reflect the different categories of costs and exist in the company's accounting system.	CCE334
CostBearerCode	Cost Bearer for the reported costs. For an operator who owns their own assets, the likely cost bearers are "Maintenance" and "Production". For an OEM, the likely cost bearers are "Contract", "Customer", "Warranty" and "Policy".	Production
LabourHourValue	Labour hours.	12

Field Name	Description	Sample Values
PartsCostAtCostValue	Actual total cost of Parts. This is an at “cost” (Cost@Cost) value when AMT stores cost and sell amounts to indicate margins (generally in an OEM environment). Otherwise, the Cost@Cost and the Cost@Sell are the same.	2500
PartsCostAtSellValue	Actual total cost of Parts. This is an at “sell” (Cost@Sell) value when AMT stores cost and sell amounts to indicate margins (generally in an OEM environment). Otherwise, the Cost@Cost and the Cost@Sell are the same.	2700
LabourCostAtCostValue	Actual total cost of Labour. This is an at “cost” (Cost@Cost) value when AMT stores cost and sell amounts to indicate margins (generally in an OEM environment). Otherwise, the Cost@Cost and the Cost@Sell are the same.	900
LabourCostAtSellValue	Actual total cost of Labour. This is an at “sell” (Cost@Sell) value when AMT stores cost and sell amounts to indicate margins (generally in an OEM environment). Otherwise, the Cost@Cost and the Cost@Sell are the same.	950
MiscCostAtCostValue	Actual total cost of Misc Items. This is an at “cost” (Cost@Cost) value when AMT stores cost and sell amounts to indicate margins (generally in an OEM environment). Otherwise, the Cost@Cost and the Cost@Sell are the same.	5800
MiscCostAtSellValue	Actual total cost of Misc Items. This is an at “sell” (Cost@Sell) value when AMT stores cost and sell amounts to indicate margins (generally in an OEM environment). Otherwise, the Cost@Cost and the Cost@Sell are the same.	6200
ActualDurationHours	Actual duration of the work. This is mapped to the financial summary operation for actual duration hours	6.5

6.12 Work Order GL Reconciliation

Defines the message to import work order General Ledger Cost data into AMT.

Field Name	Description	Sample Values
GeneralLedgerID	ERP General Ledger ID. AMT matches the records on this field. If a unique GL ID does not exist, this may be a combination of fields that will ensure that this is unique.	CPR000456
WorkOrderNumber	This is the Work Order number that relates to the GL Entry. This number must match existing work order numbers in AMT to ensure robust reconciliation.	WO1234
InvoiceNumber	This is the invoice number for the respective costs.	CPR456
ModelCode	Model for the specific equipment.	DASH-6
SerialNumber	Serial Number for the specific equipment.	01HL00123

Field Name	Description	Sample Values
RegistrationCounter	Registration Counter of the equipment (optional), sometimes called “Contract Enrolment Number”.	02
CostBearerCode	This field defines who is responsible for the costs. • **CC** – Maintenance • **E** – Operations	CC
GeneralLedgerSource	• **W** = Work order • **O** = Other	W
GeneralLedgerAccountNumber	This is the account number where the cost has been allocated.	QI.100.980.987
FinancialPeriodYear	This is the Financial Year for the transaction.	2003
FinancialPeriodMonth	This is the Financial Month for the transaction. The format should be “—MM,” where MM is a two-digit number from 01 to 12. An alternative format is a number from 1 to 12.	--02 2
TransactionDate	This is the date of the transaction.	20020201
CostAtCostValue	This is the amount in the PRIME CURRENCY for the GL Entry. The work order cost is generally a positive amount unless a refund transaction has occurred, in which case it is negative.	234.45
CostAtSellValue	This is the amount in the PRIME CURRENCY for the GL Entry. The work order cost is generally a positive amount unless a refund transaction has occurred, in which case it is negative.	584.45
CurrencyCode	Currency for Cost and Sell amount in the file. If the currency is not supplied, the assumption is that it is the AMT Prime Currency.	AUD

6.13 Notification

Defines the fields for Notifications between AMT and the ERP.

Field Name	Description	Sample Values
NotificationNumber	The AMT notification number.	100005
ExternalERPNotificationNumber	Notification number created in the external system from the AMT notification.	10000141
ModelCode	Model Code for the Asset which the Notification is raised for.	793C
SerialNumber	Asset Serial Number. This can be the Manufacturer's Serial Number or any other Unique Identifier for the Asset	0A123456X
RegistrationCounter	Used to track multiple "lives" of an asset.	1
AssetName	The name of the Asset as displayed in AMT.	HT301
NotificationType	Indicates the type of notification.	Maintenance Request

Field Name	Description	Sample Values
Notification Title	Short description of the notification.	Cabin radio too crackly to hear properly
RepairDescription	Long description of the notification.	Cabin radio too crackly to hear properly. Check antenna and speaker connections
Priority	The priority of the issue in the notification.	P3
Breakdown	Identifies if the notification involves a breakdown.	1 indicates that a breakdown occurred
ObjectPart	This is the object part in the notification. For the SendNotification() function, this will contain the Object Part on the Notification if it is being used, otherwise it will contain the component on the asset for the notification.	7338
ComponentCode	Component code identified at fault for the asset on the notification (not available in SendNotification() function)	1000
ModifierCode	Modifier code for the component (or ObjectPart) on the asset.	FR
DateRaisedUTC	Date the notification was raised.	
DateRequiredUTC	Date the notification is required by.	
Symptom	The code indicating the symptom (or damage) of the defect.	BENT
SymptomDescription	A longer free text description of the symptom (or damage), separate from the symptom code and associated description.	The front right steering rod is bent
Cause	The code indicating the cause of the notification.	D190
CauseDescription	A longer free text description of the cause, separate from the cause code and associated description.	Vehicle was in accident with a rock
RaisedBy	The person who raised the notification.	Robert Hawke
ExternalWorkOrderNumber	Work order number from the external system created from the external notification.	4000200
NotificationStatus	The status of the notification.	NOPR
PlanningGroupCode	The code of the planning group responsible for planning the notification	
WorkGroupCode	The code of the work group responsible for actioning the notification.	
SiteCode	The site code for notification, based on the equipment site.	1010
WorkGroupSiteCode	The site code for the work group code.	1010

Field Name	Description	Sample Values
WorkOrderID	Identifies if the notification was raised while working on an existing work order. This is a composite field as defined by 6.1. Only the WorkOrderNumber will be available when sending this message type. This attribute is only available in SendNotification.	TG0046576
RaisedComments	Comments from the person raising the notification. (Not available for SendNotification)	
RepairInstruction	Instructions from the person raising the notification. (Not available for SendNotification)	
Filename	Name of a document attached to the work order. This may be a photo, or word document, excel document or other document relevant to the work management process. (Not available for SendNotification)	
Timestamp	Timestamp for the file. (Not available for SendNotification)	
Base64Content	The attached document content encoded as a base64 string. (Not available for SendNotification)	

6.14 STO

Defines the fields for STO between AMT and the ERP. STO represents a Shutdown, Turnaround or Outage event.

Field Name	Description	Sample Values
ExternalId	The unique identifier from the external system for the STO in AMT.	7755
Description	Description of the STO.	Annual wash plant outage
BranchCode	The AMT Branch Code for the STO.	GMP
SiteCode	The AMT Site Name for the STO (not the AMT site code).	Wash Plant One
FleetCode	The AMT Fleet for the STO.	Mill Grinding Equipment
CategoryCode	STO Category for the AMT STO.	AnnualShut
AMTUserLoginID	Login ID of the AMT user responsible for managing the STO.	44
AMTUserName	Login Name of the AMT user responsible for managing the STO.	RLawson
PlanningGroup	The AMT Planning Group responsible for planning the AMT STO.	Gmine
StatusCode	The STO status for the AMT STO.	In Planning
Archived	Indicator as to whether the STO is archived.	1
PlannedStartUTC	Planned Start Date for the STO, in UTC.	
PlannedEndUTC	Planned End Date for the STO, in UTC.	
ActualStartUTC	Actual Start Date for the STO, in UTC.	
ActualEndUTC	Actual End Date for the STO in UTC.	
CanMove	Indicates if the dates of STO can be moved by change to work dates of work inside the STO.	1
MoveToleranceDaysMinus	Indicates the number of days earlier the STO can be moved. Only applicable if the CanMove flag is true.	1
MoveTolderanceDaysPlus	Indicates the number of days later the STO can be moved. Only applicable if the CanMove flag is true.	3

6.15 Work Order Completion Comments

Defines the fields for work order completion comments between AMT and the ERP.

Field Name	Description	Sample Values
AMTWorkOrderID	AMT internal reference for the work order. Every work order in AMT will be assigned a unique ID by AMT.	123456-1
WorkOrderNumber	Unique work order reference that is visible to the end user. This can either be given out by AMT or an External System (SAP, Oracle, Sage and so on).	WO123456
SymptomCode	The configured AMT Symptom Code for the work order.	Wobbly
SymptomDescription	Symptom of failure. For example, fatigue caused by over pressure where fatigue is the cause and over pressure is the symptom.	Fatigue
CauseCode	Cause of failure. For example, fatigue caused by over pressure where fatigue is the cause and over pressure is the symptom.	Over Pressure
CauseDescription	Cause Description.	In use since 2015
RepairDescription	Repair Description.	
CommentChangeTimeUTC	UTC Time that the completion comment fields were updated	
CommentChangeUser	User who updated the completion comment fields	
ObjectPart	Part that was the object of the repair	Driveshaft

7 Error Handling

The following valid errors are returned from this interface.

Error Condition	Description
The provided document has an unrecognised format. Various XML format errors are returned.	Check the format of the schema document against those provided. Errors can be related to well-formed XML issues, or failure to validate the document against the XSD.
The provided value for <ElementCode> does not have the correct datatype.	Check datatypes of elements, especially date formats. Note that date and datetime conventions are used.
Mandatory element <ElementName> not provided.	An expected XML element has not been provided.
Mandatory attribute <AttributeName> not provided.	An expected XML attribute has not been provided.
The provided code for <ElementCode> does not have a corresponding AMT configuration item.	AMT makes extensive use of pre-configured code list. Relevant codes must be preconfigured prior to use of the interface.
The provided indicator for <ElementIndicator> does not have a valid value.	Indicators have a fixed list of enumeration values. Please refer to the relevant business rules for permitted values.
A work order update has been requested, but no corresponding work order has been found with: AMTWorkOrderID: <AMTWorkOrderID> OR WorkOrderNumber: < WorkOrderNumber >	This results when the external system tries to update work order information for a work order that does not exist in AMT yet.
A work order creation has been requested, but no corresponding asset has been found with: SerialNumber: <SerialNumber> ModelCode: <ModelCode> RegistrationCounter: < RegistrationCounter >	This results when the external system tries to create a work order in AMT, but the referenced asset does not exist in AMT yet.
A duplicate Create request for Work order <WorkOrderNumber> has been found.	Work orders cannot be updated using the CreateWorkOrder interface. Use the ChangeWorkOrder interface, as different business rules are applied.

The following valid warnings are returned from this interface. These affected items will still be processed.

Warning Condition	Description
Element <ElementName> has been provided, but will be ignored	AMT configuration sometimes mandates the automatic calculation of certain fields, so provided values are ignored. Refer to the relevant business rule for the field.
The Part information for Work order <WorkOrderNumber> has been provided, but will be ignored	AMT configuration can restrict the updating of the Part information for a work order. The applicable AMT setting is ManualEntryActualsParts.
The Labour information for Work order <WorkOrderNumber> has been provided, but will be ignored	AMT configuration can restrict the updating of the Labour information for a work order. The applicable AMT setting is ManualEntryActualsLabour.
The Misc information for Work order <WorkOrderNumber> has been provided, but will be ignored	AMT configuration can restrict the updating of the Misc information for a work order. The applicable AMT setting is ManualEntryActualsMisc.

8 Integration Functions

Only fields with specific rules have been listed. All other fields should conform to the datatype rules as defined in the schema definition files and are optional.

8.1 SendWorkOrder

This interface is used to send a work order from AMT and, under certain configurations, an additional parts requisition.

The data structure of this interface has two parts.

1. **WorkOrder** – used to describe the complete work order at a point in time.
2. **Requistion** – provides a list of parts and misc. items, as approved by the user.

SendWorkOrderMessages.xsd and SendWorkOrder.wsdl are the relevant schema files to use when developing the external integration client for this function. These define the correct message that will be received externally from AMT and must be responded to by AMT. The postman collection provides example messages.

8.1.1 Business Rules – Work Order Component

There are no specific business rules related to the **Work Order** component of the message. All information is provided, as it is stored, in AMT.

Field Name	Business Rule
AMTWorkOrderID	The unique work order number as created in AMT.
WorkOrderNumber	The unique work order number as created by an external Work Order system. This will only be provided if a Work Order number has previously been provided by the external system.
AMTPurchaseOrderID	This ID will only be available for items that have been requisitioned in AMT. This ID can be used to interrogate the state of requisitions.

8.1.2 Business Rules – Requisition Component

The **Requisition** component is only made available when AMT is in **PO Create** mode.

Only the parts and misc items approved by the user are included in this component. A complete list of parts, misc items and previous requisitions can be obtained by interrogating the work order component. If required, additional information for parts or misc items in the requisition component can be obtained from the work order component.

Field Name	Business Rule
AMTWorkOrderID	The unique work order number as created in AMT.
WorkOrderNumber	The unique work order number as created by an external work order system. This will only be provided if a work order number has previously been provided by the external system.
AMTPurchaseOrderID	This ID should be persisted, as it is used by subsequent interfaces (that is, UpdateWorkOrder).
OperationNumber	This operation number should be persisted for each Part or Misc item, as it is used by subsequent interfaces (that is, UpdateWorkOrder)

8.1.3 Processing Rules

A. For AMT Configuration**: WOCreateFromPO = 0**

1. The user initiates the transfer in the user interface using the **Create ERP Work Order** function.
2. All saved information related to the work order is packaged in the work order component of the message and sent.
3. The external system should process the message and return **WorkOrderNumber**.
4. One or more work orders can be included in the same message. Typically, only one is sent at a time.
5. No updates to work orders are sent using this mode, except for certain specialised updates handled by other interfaces:
   a. SendWorkOrderStatus
   b. SendWorkOrderLabourActuals
6. The external system should respond with **SendWorkOrderResponse**.

B. For AMT Configuration**: WOCreateFromPO = 1**

1. An optional process exists that emulates the behaviour in the rule above. Only the work order component is sent for processing if this function is used.
2. In addition to creating a work order, the user can also do a part requisition using the **Create Purchase Order** function. In this case, the parts requested are added to the message and sent for processing.
3. The current state of the work order is sent in all cases, but only the requested parts are sent during the part requisition process.
4. One or more work orders can be included in the same message. Typically, only one work order is sent at a time.
5. Only one requisition can be included in the same message. An AMT configuration setting controls the number of suppliers sent at any time, so provision must be made for multiple suppliers for each purchase order.
6. Existing work orders that are modified in AMT can be resent, depending on the AMT configuration. The complete work order at a point in time is sent, so provision should be made to update existing work orders in external systems.
7. The external system should respond with **SendWorkOrderResponse**

8.1.4 Data Structure

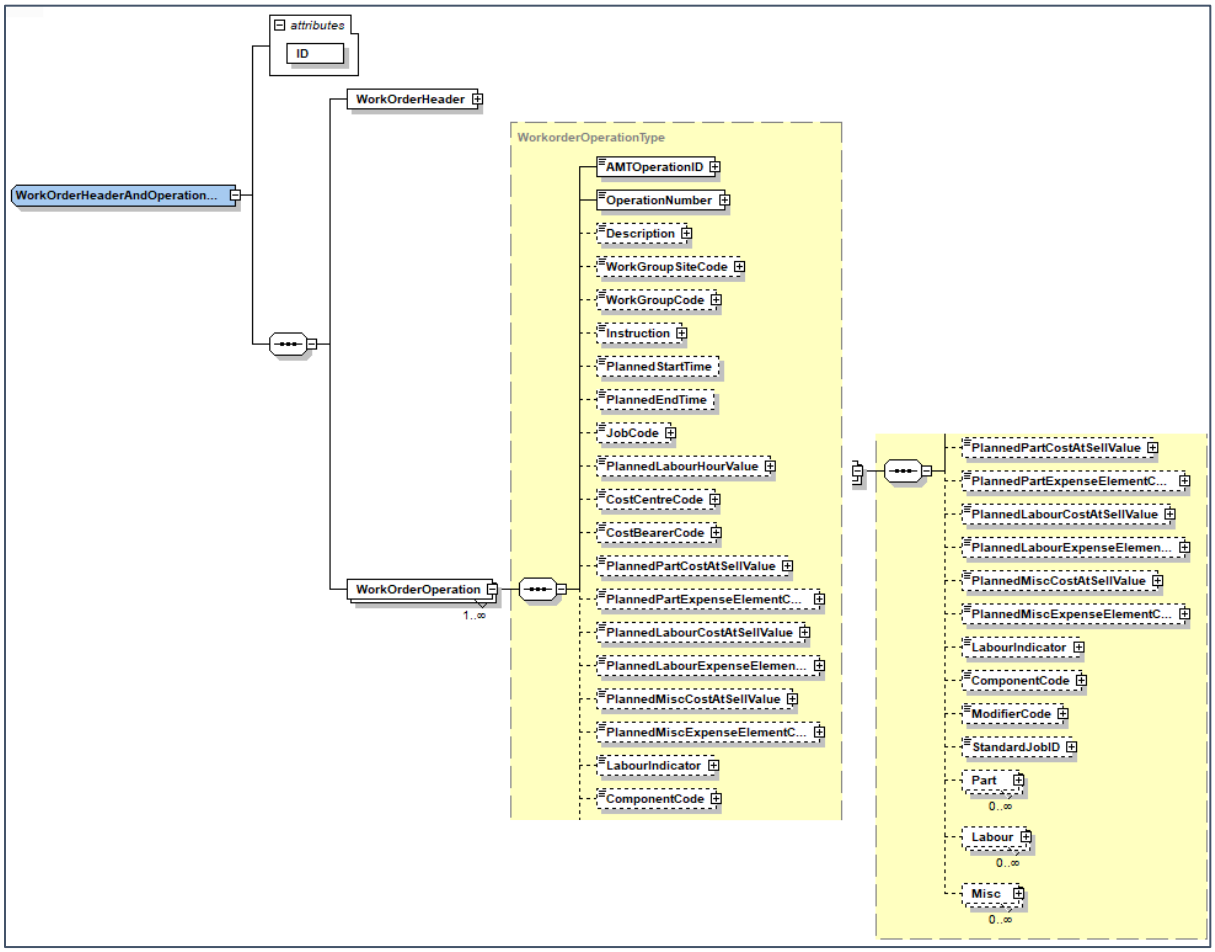


Figure 8 SendWorkOrder Data Area – Workorder

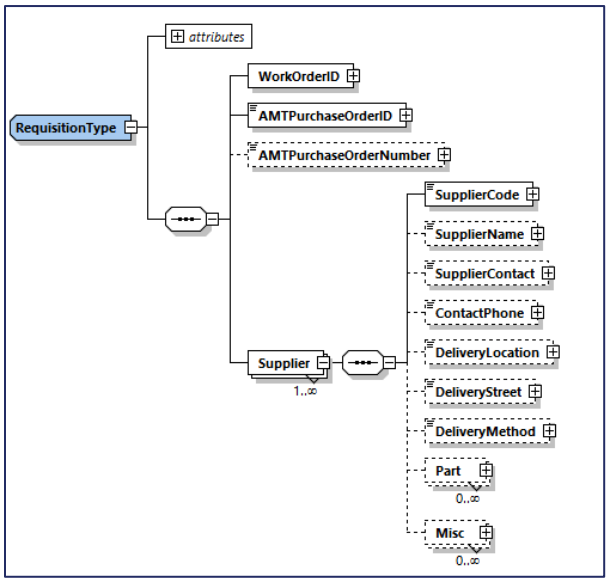


Figure 9 SendWorkOrder Data Area - Requisition

8.2 SendWorkOrderStatus

This interface is used to send status information, along with Planned and Actual Start and End times, about a work order from AMT. This is an outbound interface that is triggered when a status change is made to an existing work order in AMT.

SendWorkOrderMessages.xsd and SendWorkOrderStatus.wsdl are the relevant schema files to use when developing the external integration client for this function. These define the correct message that will be received externally from AMT and must be responded with to AMT. The postman collection provides example messages.

8.2.1 Business Rules

Field Name	Business Rule
AMTWorkOrderID	The unique work order number as created in AMT.
WorkOrderNumber	The unique work order number as created by an external work order system. This will only be provided if a work order number has previously been provided by the external system.
WorkOrderCompletionCode	One of the following codes will be returned from AMT: • **N** – Normal Operation • **S** – Skip. Job not performed, but completed • **A** – Abandon work order and remove settlement • **AL** – Abandon work order and maintain settlement
PlanningStatusCode	One of the following codes will be returned from AMT: • **OUT** – Outstanding • **YTS** – Yet to Start • **IP** - In Progress • **COMP** – Completed • **ABAN** – Abandoned

8.2.2 Processing Rules

1. The interface is initiated when a change is made to the status information of a work order.
2. All saved information is packaged and sent.
3. One or more Status updates can be included in the same message. Typically, only one is sent at a time.
4. The external system should respond with **SendWorkOrderStatusResponse**.

8.2.3 Data Structure

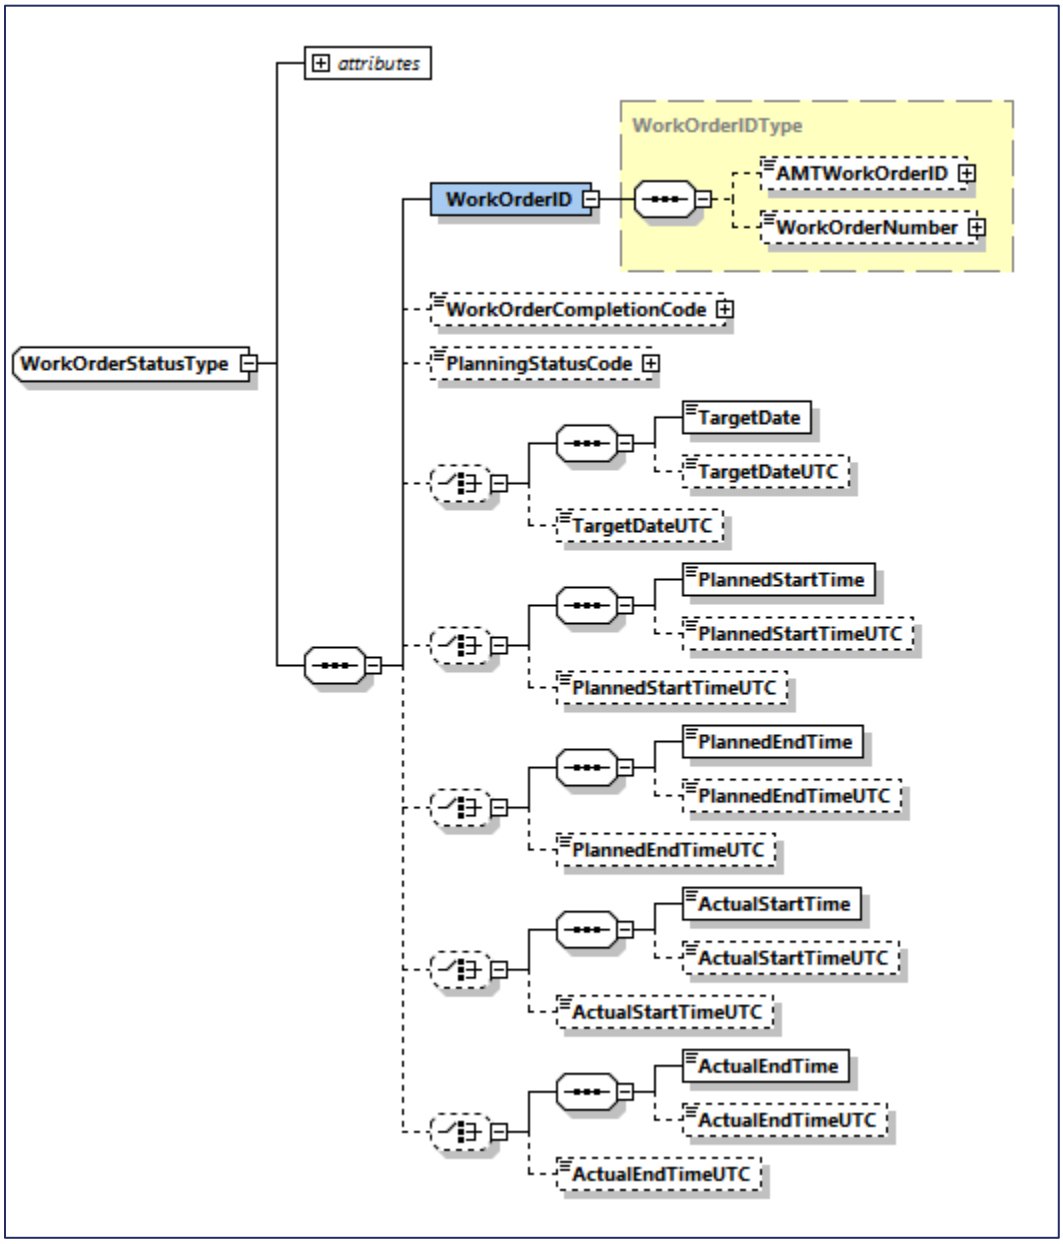


Figure 10 SendWorkOrderStatus Data Area

8.3 SendWorkOrderLabourActuals

This interface is used to send Actual Labour information about a work order from AMT. This is an outbound interface that is triggered when a user updates the work order labour information. When any labour actual hours are updated, AMT sends all work order labour actuals for all operations on the work order. The actual labour value will be the total labour hours for labour activity in the payload. AMT does not send incremental updates containing just new labour updates.

SendWorkOrderMessages.xsd and SendWorkOrderLabourActual.wsdl are the relevant schema files to use when developing the external integration client for this function. These define the correct message that will be received externally from AMT and must be responded to by AMT. The postman collection provides example messages.

8.3.1 Business Rules – Work Order Component

There are no specific business rules related to the work order component of the message. All information is provided, as it is stored, in AMT.

Field Name	Business Rule
AMTWorkOrderID	The unique work order number as created in AMT.
WorkOrderNumber	The unique work order number as created by an external work order system. This will only be provided if a Work order number has previously been provided by the external system.

8.3.2 Business Rules – Operation Component

There are no specific business rules related to the operation component of the message. All information is provided, as it is stored, in AMT. Sufficient operation level fields are provided to allow a new operation to be created in the ERP should a new operation and labour have been added in AMT since the work order was created in the ERP.

8.3.3 Business Rules – Labour Component

There are no specific business rules related to the labour component of the message. All information is provided, as it is stored, in AMT.

8.3.4 Processing Rules

1. The interface is initiated when a change is made to the labour information of a work order.
2. All saved information is packaged and sent.
3. One or more Labour Actuals updates can be included in the same message. Typically, only one is sent at a time.
4. The external system should respond with **SendWorkOrderLabourActualResponse**.

8.3.5 Data Structure

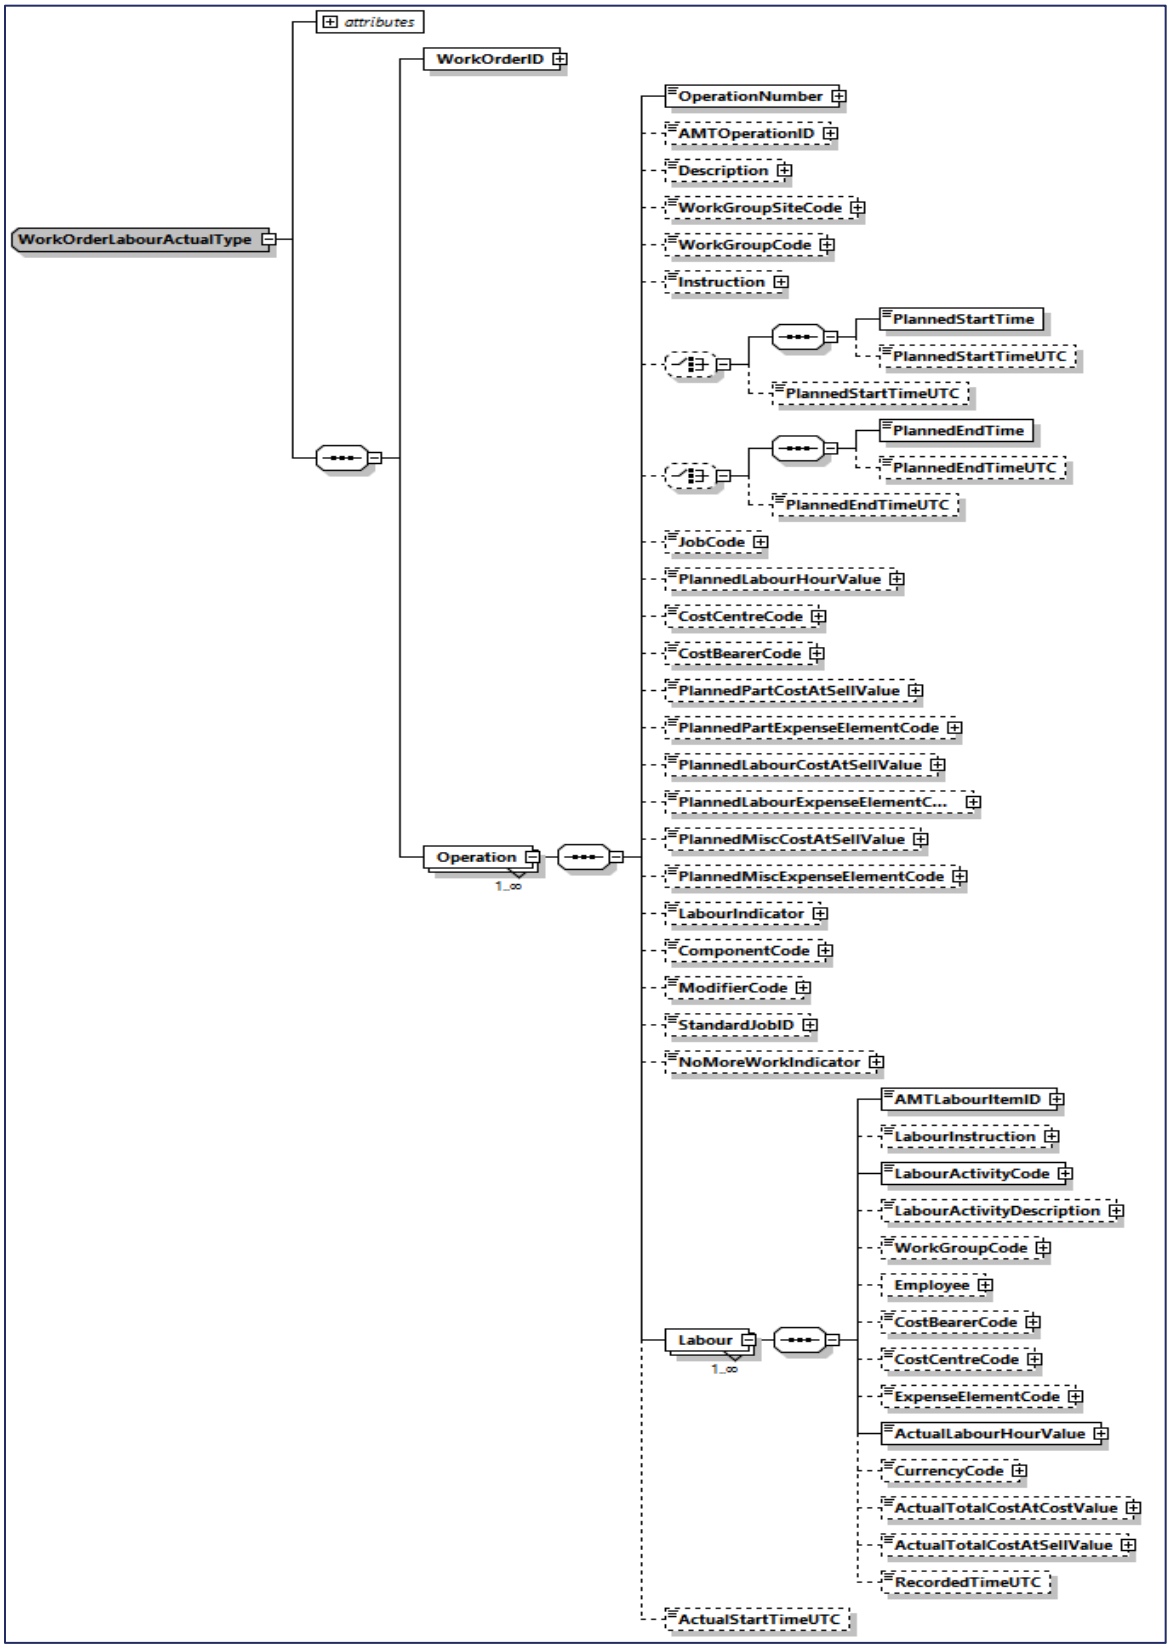


Figure 11 SendWorkOrderLabourActual Data Area

8.4 SendWorkOrderDocuments

This interface is used to send documents attached to a work order in the feedback tab. The documents are attached to the message header as Multipart MIME attachments. This interface is currently triggered when AMT Mobile 2 updates feedback documents and only sends documents loaded from AMT Mobile 2.

SendWorkOrderMessages.xsd and SendWorkOrderDocuments.wsdl are the relevant schema files to use when developing the external integration client for this function. These define the correct message that will be received externally from AMT and must be responded to by AMT. The postman collection provides example messages.

8.4.1 Business Rules

There are no specific business rules related to the work order component of the message. All information provided is stored in AMT.

Field Name	Business Rule
AMTWorkOrderID	The unique work order number as created in AMT.
WorkOrderNumber	The unique work order number as created by an external work order system. This will only be provided if a work order number has previously been provided by the external system.

8.4.2 Processing Rules

1. The interface is initiated when a change is made to the feedback documents for a work order. Only change documents from AMT Mobile 2 trigger this integration. Sentinel configuration determines the frequency of sending this interface.
2. Only changed documents are sent.
3. The external system should respond with **SendWorkOrderDocumentsResponse**.

8.5 CreateWorkOrder

This interface is used to create a work order in AMT based on information from an external system.

8.5.1 Business Rules – Work Order Header

The following default rules apply to fields not available in the Create Work Order interface.

- The default costing work group on the work order settlement tab is set to the ResponsibleWorkGroupCode if provided in the create message. If the ResponsibleWorkGroupCode is not provided, the costing work group is set to the site default work group.
- The cost bearer and cost centre on the work order is set to the equipment cost bearer and cost centre.
- Specific Operation codes are selected. This allows specific costing codes (for work group, cost centre, cost bearer, expense element, and so on) to be set at the operation level.
- Work Order Counter is set to 1. Work order counter is the numeric suffix displayed as part of the AMT internal work order reference.

Field Name	Business Rule	Optional/ Required
AMTWorkOrderID	This is the ID of the work order in AMT. Any work order that exists in AMT will have this ID.	R
WorkOrderNumber	The unique identifier of the work order in the master system.	R
WorkOrderDescription		R
ModelCode		R
SerialNumber	The value provided shoulCd match a configured **Model** within AMT. Used together with ModelCode and RegistrationCounter to uniquely identify the asset.	R
RegistrationCounter	The value provided should match a configured **Registration Counter** within AMT. Used together with ModelCode and SerialNumber to uniquely identify the asset. If this is not provided, the default value will be used.	O
BranchCode	The value provided should match a configured **Branch** Code within AMT. If no value is provided, the Branch associated with the Asset will be used.	O
SiteCode	The value provided should match a configured **Site** Code within AMT. If no value is provided, the Site associated with the Asset will be used.	O
CustomerCode	The value provided should match a configured **Customer** Code within AMT.	O
UsageUOMCode	The value provided should match a configured **Unit of Measure** within AMT.	O
StrategyIndicator	Only the following values are accepted: • **0** – Not related to a strategy task • **1** – Related to a strategy task If no value is provided, a value of **0** is used.	O
ComponentCode	The value provided should match a configured **Component** Code within AMT. If no value is provided, the default AMT Component Code will be used.	O
ModifierCode	The value provided should match a configured **Modifier** Code within AMT.	O
TaskTypeCode	The value provided should match a configured **Task Type** Code within AMT. If no value is provided, the default AMT TaskType Code will be used.	O
TaskCounterCode	The value provided should match a configured **Task Counter** Code within AMT.	O
MaintenanceTypeCode	The value provided should match a configured **Maintenance Type** Code within AMT.	O

<table>
<tr><th>Field Name</th><th>Business Rule</th><th>Optional/ Required</th></tr>
<tr><td>PriorityCode</td><td>The value provided should match a configured Priority Code within AMT.
If no value is provided, the default AMT Priority Code will be used.</td><td>O</td></tr>
<tr><td>SourceCode</td><td>The value provided should match a configured Source Code within AMT.
If no value is provided, the default AMT Source Code will be used.</td><td>O</td></tr>
<tr><td>RaisedByEmployee</td><td>Only the employee number is used to validate the employee. The employee's first name and surname are not used to validate the employee. The value provided should match a configured Employee within AMT.</td><td>O</td></tr>
<tr><td>PartReadyIndicator</td><td>Only the following values are accepted
0 – Parts NOT ready or available
1 – Parts ready and available
Check AMT CONFIGURATION<table><tr><th colspan="2">AutoLookupPartsReadyStatus</th></tr><tr><th>Value</th><th>Action</th></tr><tr><td>0</td><td>The value provided will be used but can be overwritten by a user.</td></tr><tr><td>1</td><td>The value provided will be ignored and calculated by AMT, once PartOrderStatusCode =3 for all parts. This Indicator is set to 1.</td></tr><tr><td colspan="2">The setting OptEditionPlanStatus is only used if AutoLookupPartReadyStatus = 1</td></tr></table></td><td>O</td></tr>
<tr><td>OtherResourceReadyIndicator</td><td>Only the following values are accepted:
0 – Other required resources NOT ready
1 – Other required resources ready and available
If no value is provided, a value of 0 is used.</td><td>O</td></tr>
<tr><td>WorkOrderCompletionCode</td><td>Only the following values are accepted:
N – Normal Operation
S – Skip. Job not performed but completed.
A – Abandon work order and remove settlement
If no value is provided, a value of N is used.</td><td>O</td></tr>
</table>

Field Name	Business Rule	Optional/ Required
PlanningStatusCode	Only the following values are accepted: • **OUT** – Outstanding • **YTS** – Yet to Start • **IP** – In Progress • **COMP** – Completed • **ABAN** - Abandoned If no value is provided, a value of **OUT** is used.	O
WorkLocationCode	The value provided should match a configured **Location** Code within AMT.	O
ResponsibleWorkGroupCode	The value provided should match a configured **WorkGroup** Code within AMT. This value is used in conjunction with **Site** Code to determine the correct WorkGroup.	O
ResponsibleEmployee	Only the employee number is used to validate the employee. The employee's first name and surname are not used to validate the employee. The value provided should match a configured Employee within AMT.	O
BreakdownIndicator	Only the following values are accepted: • **0** – Not related to a breakdown • **1** – Breakdown related If no value is provided, a value of **0** is used.	O
SymptomCode	The value provided should match a configured **Symptom Status** Code within AMT. If no value is provided, the default AMT Symptom Code will be used.	O
CauseCode	The value provided should match a configured **Cause** Code within AMT. If no value is provided, the default AMT Cause Code will be used.	O
ServiceCode	The value provided should match a configured **Service** Code within AMT.	O
WarrantyIndicator	Only the following values are accepted: • **0** – Not related to a Warranty • **1** – Warranty Related If no value is provided, a value of **0** is used.	O
DurabilityIndexIndicator	Only the following values are accepted: • **0** – Durability Indicator Off • **1** – Durability Indicator On If no value is provided, a value of **0** is used.	O

Field Name	Business Rule	Optional/ Required
CostResponsibilityCode	The value provided should match a configured **Responsibility** Code within AMT. If no value is provided, the default AMT **CostResponsibility** Code will be used.	O
AssetCostCode	The value provided should match a configured **Asset Cost** Code within AMT.	O
MaintenancePeriodCode	The value provided should match a configured **Maintenance Period** Code within AMT. Not currently implemented.	O
EventConfirmedIndicator	Only the following values are accepted: • **0** – Event not completed • **1** – Event completed	O
CreatedByUserID	Ignored	O
CreatedByUserName	Ignored	O
AuthorisedByUserID	Ignored	O
AuthorisedByUserName	Ignored	O
TargetDate	For a non-strategy task work order, the work order will be created with this value. For a non-planning strategy task work order, the work order will be created with this value. For a planning strategy task work order, the work order will be created using the calculated occurrence date as the target date. The value supplied in TargetDate will be ignored.	R
STOID	Ignored	O
RegulatoryCode	The value provided should match a configured **Regulatory** Code within AMT.	O
PlanningGroupCode	The value provided should match a configured **Planning Group** code within AMT.	O
MOTCode	The value provided should match a configured **Maintenance Order Type** Code within AMT.	O

8.5.2 Business Rules – Work Order Operation

Field Name	Business Rule	Optional/ Required
OperationID	Ignored. AMT assigns an internal identifier.	
OperationNumber	The value provided will be used as the **Operation Number**. If this value is not provided, AMT will generate one based on configured rules.	

Field Name	Business Rule	Optional/ Required
WorkGroupCode	The value provided should match a configured **Workgroup** Code within AMT. If no value is provided, the **WorkGroup** Code of the header is used. This value is used in conjunction with **Site** Code of the work order header to determine the correct WorkGroup.	O
JobCode	The value provided should match a configured **Job** Code within AMT.	O
CostCentreCode	The value provided should match a configured **CostCentre** Code within AMT.	O
CostBearerCode	The value provided should match a configured **CostBearer** Code within AMT.	O
PlannedPartExpenseElementCode	The value provided should match a configured **Expense Element** Code within AMT.	O
PlannedLabourExpenseElementCode	The value provided should match a configured **Expense Element** Code within AMT.	O
PlannedMiscExpenseElementCode	The value provided should match a configured **Expense Element** Code within AMT.	O
LabourIndicator	Only the following values are accepted: • **F** – Field. Always used for non-strategy tasks • **S** – Shop	O
ComponentCode	The value provided should match a configured **Component** Code within AMT.	O
ModifierCode	The value provided should match a configured **Modifier** Code within AMT.	O
StandardJobID	This must match the AMT ID of an existing standard job.	O
OperationWorkStatusCode	The value provided should match a configured **OperationWorkStatus** Code within AMT.	O
ResponsibleEmployee	Only the employee number is used to validate the employee. The employee's first name and surname are not used to validate the employee. The value provided should match a configured Employee within AMT.	O
OccupationalHealthAndSafetyCode	The value provided should match a configured **OH&S** Code within AMT.	O

8.5.3 Business Rules – Operation Part

Field Name	Business Rule	Optional/ Required
SourceOfSupplyCode	The value provided should match a configured **Source of Supply** Code within AMT. This field is used together with **PartNumber** and the asset's **OrganisationCode** to uniquely identify the part within AMT. If this value is not provided, the part cannot be validated against an existing part.	O

<table>
<tr><th>Field Name</th><th>Business Rule</th><th>Optional/ Required</th></tr>
<tr><td>PartNumber</td><td>This field is used together with SourceOfSupplyCode and the asset's OrganisationCode to uniquely identify the part within AMT.</td><td>R</td></tr>
<tr><td>AMTPurchaseOrderID</td><td>Ignored</td><td>O</td></tr>
<tr><td>ExpectedAvailabilityDate</td><td>Check AMT CONFIGURATION
<table>
<tr><th colspan="2">OptEditionPlanStatus</th></tr>
<tr><th>Value</th><th>Action</th></tr>
<tr><td>1</td><td>This value is used to calculate the PartOrderStatusCode.</td></tr>
<tr><td>2</td><td>Value provided is used. User cannot change the value.</td></tr>
<tr><td>3</td><td>Value provided is used. User can change the value.</td></tr>
</table></td><td>O</td></tr>
<tr><td>CostCentreCode</td><td>The value provided should match a configured CostCentre Code within AMT.</td><td>O</td></tr>
<tr><td>CostBearerCode</td><td>The value provided should match a configured CostBearer Code within AMT.
If no value is provided, the default AMT CostBearer Code will be used.</td><td>O</td></tr>
<tr><td>ExpenseElementCode</td><td>The value provided should match a configured Expense Element Code within AMT.</td><td>O</td></tr>
<tr><td>WorkGroupCode</td><td>The value provided should match a configured Workgroup Code within AMT.
If no value is provided, the default AMT Workgroup Code will be used.
This value is used in conjunction with the Site Code of the work order header to determine the correct Workgroup.</td><td>O</td></tr>
<tr><td>SupplierCode</td><td>The value provided should match a configured Supplier Code within AMT.</td><td>O</td></tr>
<tr><td>CurrencyCode</td><td>The value provided should match a configured Currency Code within AMT.
If no value is provided, the default AMT Currency Code will be used.</td><td>O</td></tr>
<tr><td>PartAvailabilityStatusCode</td><td>The value provided must match a valid part availability status code in AMT. Valid values are:
Not Ordered
Ordered
Ready
Cancelled</td><td>O</td></tr>
<tr><td>Reserved Indicator</td><td>The valid values are:
0 - This Part is not reserved for this job
1 - This Part is reserved for this job</td><td>O</td></tr>
<tr><td>NoMoreWorkIdicator</td><td>The valid values are:
0 - There is more work for this operation
1 – There is no more work for this operation</td><td>O</td></tr>
</table>

8.5.4 Business Rules – Operation Labour

Field Name	Business Rule	Optional/ Required
LabourActivityCode	The value provided should match a configured **LabourActivity** Code within AMT.	R
Employee	Only the employee number is used to validate the employee. The employee's first name and surname are not used to validate the employee. The value provided should match a configured Employee within AMT.	O
CostCentreCode	The value provided should match a configured **CostCentre** Code within AMT.	O
CostBearerCode	The value provided should match a configured **CostBearer** Code within AMT.	O
ExpenseElementCode	The value provided should match a configured **Expense Element** Code within AMT.	O
WorkGroupCode	The value provided should match a configured **Workgroup** Code within AMT. If no value is provided, the default AMT WorkGroup Code will be used. This value is used in conjunction with the **Site** Code of the work order header to determine the correct WorkGroup.	O
CurrencyCode	The value provided should match a configured **Currency** Code within AMT. If no value is provided, the default AMT Currency Code will be used.	O

8.5.5 Business Rules – Operation Misc

Field Name	Business Rule	Optional/ Required
MiscDescription		R
SupplierCode	The value provided should match a configured **Supplier** Code within AMT.	O
MiscCategoryCode	The value provided should match a configured **Category** Code within AMT.	O
CostBearerCode	The value provided should match a configured **CostBearer** Code within AMT. If no value is provided, the default AMT CostBearer Code will be used.	O
ExpenseElementCode	The value provided should match a configured **Expense Element** Code within AMT	O
WorkGroupCode	The value provided should match a configured **Workgroup** Code within AMT. This value is used in conjunction with **Site** Code of the work order header to determine the correct Workgroup.	O

Field Name	Business Rule	Optional/ Required
CurrencyCode	The value provided should match a configured **Currency** Code within AMT. If no value is provided, the default AMT Currency Code will be used.	O
AMTPurchaseOrderID	Ignored	O

8.5.6 Processing Rules

1. One or more work orders can be included in the same message.
2. Each work order is processed individually. Failure of a single work order is reported, and processing continues.
3. Work orders cannot be duplicated. After the initial create, subsequent requests will be rejected with an error message. The **UpdateWorkOrder** interface should be used to change an existing work order.
4. **RespondWorkOrder** is returned in response to this message.

8.5.7 Data Structure

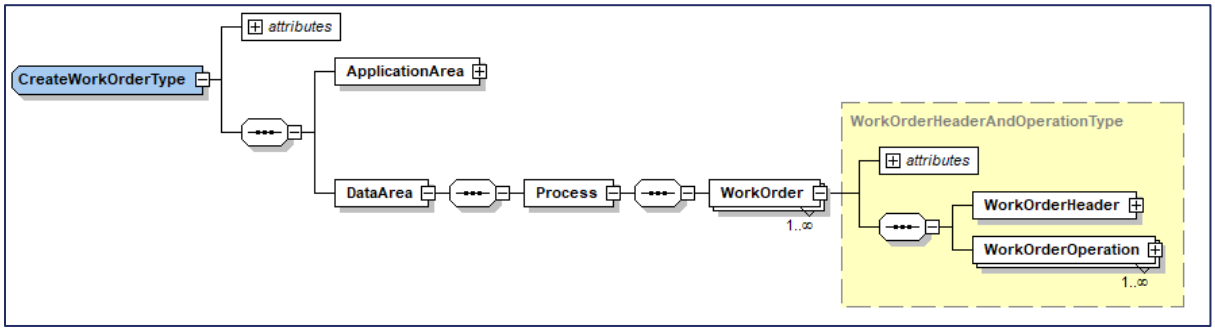


Figure 12 CreateWorkOrder Data Area

8.6 CreateBacklog

This interface is used to create an AMT work order using information from an external system. Create Backlog is almost identical to CreateWorkOrder, with the difference being that a work order number is not required in the request message, and the response message will return the AMTWorkOrderID for use in other integration functions.

To avoid errors in maintaining the business rules between CreateWorkOrder and CreateBacklog, these sections list the differences to CreateWorkOrder only. Items not listed below will be identical to the CreateWorkOrder process.

8.6.1 Business Rules – Work Order Header

The following business rules are different to CreateWorkOrder, otherwise refer to section 8.5.1 for business rules.

Field Name	Business Rule	Optional/ Required
AMTWorkOrderID	**Does not exist in the message**	N/A
WorkOrderNumber	Does not exist in the message	N/A

8.6.2 Business Rules – Work Order Operation

Refer to section 8.5.2 for business rules.

8.6.3 Business Rules – Operation Part

Refer to section 8.5.3 for business rules.

8.6.4 Business Rules – Operation Labour

Refer to section 8.5.4 for business rules.

8.6.5 Business Rules – Operation Misc

Refer to section 8.5.5 for business rules.

8.6.6 Processing Rules

1. One or more Backlogs can be included in the same message.
2. Each backlog is processed individually. Failure of a single backlog is reported, and processing continues.
3. **RespondCreateBacklog** is returned in response to this message.

8.6.7 Data Structure

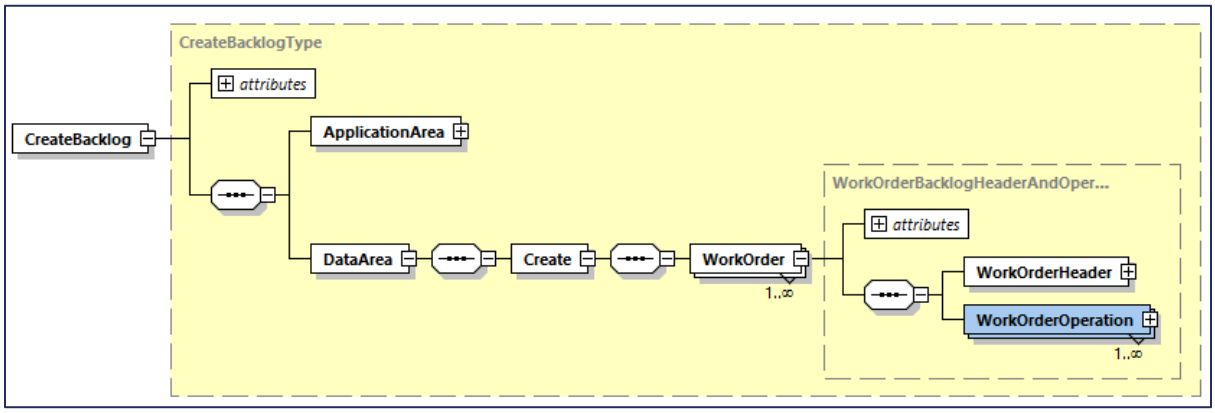


Figure 13 CreateBacklog Data Area

8.7 UpdateWorkOrder

This interface is used to update a work order that exists in AMT based on information from an external system.

8.7.1 Business Rules – Work Order Header

Field Name	Business Rule	Optional/ Required
AMTWorkOrderID	Either this ID or the **WorkOrderNumber** must be provided to identify the work order.	Choice
WorkOrderNumber	Either this ID or the **AMTWorkOrderID** must be provided to identify the work order.	Choice

<table>
<tr><th>Field Name</th><th>Business Rule</th><th>Optional/ Required</th></tr>
<tr><td>BranchCode</td><td>The value provided should match a configured Bench Code within AMT.</td><td>O</td></tr>
<tr><td>SiteCode</td><td>The value provided should match a configured Site Code within AMT.</td><td>O</td></tr>
<tr><td>CustomerCode</td><td>The value provided should match a configured Customer Code within AMT.</td><td>O</td></tr>
<tr><td>StrategyIndicator</td><td>Only the following values are accepted:
0 – Not related to a strategy task
1 – Related to a strategy task</td><td>O</td></tr>
<tr><td>ModifierCode</td><td>The value provided should match a configured Modifier Code within AMT.</td><td>O</td></tr>
<tr><td>TaskTypeCode</td><td>The value provided should match a configured Task Type Code within AMT.</td><td>O</td></tr>
<tr><td>TaskCounterCode</td><td>The value provided should match a configured Task Counter Code within AMT.</td><td>O</td></tr>
<tr><td>MaintenanceTypeCode</td><td>The value provided should match a configured Maintenance Type Code within AMT.</td><td>O</td></tr>
<tr><td>PriorityCode</td><td>The value provided should match a configured Priority Code within AMT.</td><td>O</td></tr>
<tr><td>SourceCode</td><td>The value provided should match a configured Source Code within AMT.</td><td>O</td></tr>
<tr><td>PartReadyIndicator</td><td>Only the following values are accepted:
0 – Parts NOT ready or available
1 – Parts ready and available
Check AMT CONFIGURATION<table><tr><th colspan="2">AutoLookupPartsReadyStatus</th></tr><tr><th>Value</th><th>Action</th></tr><tr><td>0</td><td>The value provided will be used, but can be overwritten by a user.</td></tr><tr><td>1</td><td>The value provided will be ignored and calculated by AMT. Once PartOrderStatusCode =3 for all parts, this Indicator is set to 1.</td></tr><tr><td colspan="2">The setting OptEditionPlanStatus is only used if AutoLookupPartReadyStatus = 1.</td></tr></table></td><td>O</td></tr>
<tr><td>OtherResourceReadyIndicator</td><td>Only the following values are accepted:
0 – Other required resources NOT ready
1 – Other required resources ready and available</td><td>O</td></tr>
</table>

Field Name	Business Rule	Optional/ Required
WorkOrderCompletionCode	Only the following values are accepted: • **N** – Normal Operation • **S** – Skip. Job not performed, but completed • **A** – Abandon work order and remove settlement • **AL** – Abandon work order and maintain settlement	O
PlanningStatusCode	Only the following values are accepted: • **OUT** – Outstanding • **YTS** – Yet to Start • **IP** – In Progress • **COMP** – Completed • **ABAN** - Abandoned	O
TargetDate	Values provided in this field will be ignored. Will be deprecated in a future version.	O
JobDate	Values provided in this field will be ignored. Will be deprecated in a future version.	O
WorkLocationCode	The value provided should match a configured **Location** Code within AMT.	O
ResponsibleWorkGroupCode	The value provided should match a configured **Workgroup** Code within AMT. This value is used in conjunction with **Site** Code of the work order header to determine the correct WorkGroup.	O
ResponsibleEmployee	Only the employee number is used to validate the employee. The employee's first name and surname are not used to validate the employee. The value provided should match a configured Employee within AMT.	O
BreakdownIndicator	Only the following values are accepted: • **0** – Not related to a breakdown • **1** – Breakdown related	O
SymptomCode	The value provided should match a configured **Symptom Status** Code within AMT.	O
CauseCode	The value provided should match a configured **Cause** Code within AMT.	O
ServiceCode	The value provided should match a configured **Service** Code within AMT.	O
WarrantyIndicator	Only the following values are accepted: • **0** – Not related to a Warranty • **1** – Warranty Related	O

Field Name	Business Rule	Optional/ Required
DurabilityIndexIndicator	Only the following values are accepted: • **0** – Not related to a Warranty • **1** – Warranty Related	O
OccurrenceTypeCode	The value provided should match a configured **Occurrence Type** Code within AMT.	O
CostResponsibilityCode	The value provided should match a configured **Responsibility** Code within AMT. Values provided in this field will be ignored. Will be deprecated in a future version.	O
AssetCostCode	The value provided should match a configured **Asset Cost** Code within AMT.	O
ParentWorkOrderNumber	Values provided in this field will be ignored. Will be deprecated in a future version.	O
MaintenancePeriodCode	The value provided should match a configured **Maintenance Period** Code within AMT.	O
RegulatoryCode	The value provided should match a configured **Regulatory** Code within AMT.	O
PlanningGroupCode	The value provided should match a configured **Planning Group** within AMT.	O
MOTCode	The value provided should match a configured **Maintenance Order Type** within AMT.	O

8.7.2 Business Rules – Work Order Operation

Field Name	Business Rule	Optional/ Required
OperationNumber	Unique within a work order. Only existing operations matching this ID are updated.	R
AMTOperationID	Unique within AMT. If provided, operations matching this ID are updated.	O
OperationWorkStatusCode	The value provided should match a configured **OperationWorkStatus** Code within AMT.	O
ResponsibleEmployee	Only the employee number is used to validate the employee. The employee's first name and surname are not used to validate the employee. The value provided should match a configured Employee within AMT.	O
OccupationalHealthAndSafetyCode	The value provided should match a configured **OH&S** Code within AMT.	O
NoMoreWorkIdicator	The valid values are: • **0** – There is more work for this operation • **1** – There is no more work for this operation	O

8.7.3 Business Rules – Operation Part

Field Name	Business Rule	Optional/ Required
SourceOfSupplyCode	The value provided should match a configured **Source of Supply** code within AMT. This field is used together with PartNumber and the asset's OrganisationCode to uniquely identify the part within AMT. In the case where this value is not provided, the part will not be able to be validated against an existing part.	O
PartNumber	This field is used together with SourceOfSupplyCode and the asset's OrganisationCode to uniquely identify the part within AMT.	R
AMTPurchaseOrderID	Used for Part matching when AMTPartItemID is not provided.	O
AMTPartItemID	If provided, this ID will be used to match existing Part line items. If not provided, a best-match scenario, as documented in the processing rules, will be used.	O

<table>
<tr><th>Field Name</th><th>Business Rule</th><th>Optional/ Required</th></tr>
<tr><td>PartOrderStatusCode</td><td>Only the following values are accepted:
1 – Not Operated
2 – Ordered
3 – Ready/Available
4 – Cancelled
Check AMT CONFIGURATION<table><tr><th colspan="2">OptEditionPlanStatus</th></tr><tr><th>Value</th><th>Action</th></tr><tr><td>1</td><td>Value provided is ignored. AMT will calculate the PartOrderStatusCode. See note below.</td></tr><tr><td>2</td><td>Value provided is used. User cannot change the value.</td></tr><tr><td>3</td><td>Value provided is used. User can change the value.</td></tr><tr><td colspan="2">This setting is only used if AutoLookupPartReadyStatus = 1</td></tr></table>Calculation logic for value = 1<table><tr><th>ExpectedAvailabilityDate</th><th>PartOrderStatusCode</th></tr><tr><td>In the past</td><td>3 (Ready)</td></tr><tr><td>In the future with PurchaseOrderNumber</td><td>2 (Ordered)</td></tr><tr><td>Other cases</td><td>1 (Not Ordered)</td></tr></table></td><td>O</td></tr>
<tr><td>ExpectedAvailabilityDate</td><td>Check AMT CONFIGURATION<table><tr><th colspan="2">OptEditionPlanStatus</th></tr><tr><th>Value</th><th>Action</th></tr><tr><td>1</td><td>This value is used to calculate the PartOrderStatusCode.</td></tr><tr><td>2</td><td>Value provided is used. User cannot change the value.</td></tr><tr><td>3</td><td>Value provided is used. User can change the value.</td></tr></table></td><td>O</td></tr>
<tr><td>CostCentreCode</td><td>The value provided should match a configured CostCentre Code within AMT.</td><td>O</td></tr>
<tr><td>CostBearerCode</td><td>The value provided should match a configured CostBearer Code within AMT.</td><td>O</td></tr>
</table>

Field Name	Business Rule	Optional/ Required
ExpenseElementCode	The value provided should match a configured **Expense Element** Code within AMT.	O
WorkGroupCode	The value provided should match a configured **Workgroup** Code within AMT. This value is used in conjunction with **Site** Code of the work order header to determine the correct WorkGroup.	O
SupplierCode	The value provided should match a configured **Supplier** Code within AMT.	O
CurrencyCode	The value provided should match a configured **Currency** Code within AMT. If a Currency Code is not provided, the Default AMT currency code will be used.	O
Reserved Indicator	The only valid values are: • **0** – This Part is not reserved for this job • **1** – This Part is reserved for this job	O

8.7.4 Business Rules – Operation Labour

Field Name	Business Rule	Optional/ Required
LabourActivityCode	The value provided should match a configured **LabourActivity** Code within AMT.	O
Employee	Only the employee number is used to validate the employee. The employee's first name and surname are not used to validate the employee. The value provided should match a configured Employee within AMT.	O
AMTLabourItemID	If provided, this ID will be used to match existing Labour line items. If not provided, a best-match scenario, as documented in the processing rules, will be used.	O
CostCentreCode	The value provided should match a configured **CostCentre** Code within AMT.	O
CostBearerCode	The value provided should match a configured **CostBearer** Code within AMT.	O
ExpenseElementCode	The value provided should match a configured **Expense Element** Code within AMT.	O
WorkGroupCode	The value provided should match a configured **Workgroup** Code within AMT. This value is used in conjunction with **Site** Code of the work order header to determine the correct WorkGroup.	O
CurrencyCode	The value provided should match a configured **Currency** Code within AMT. If a Currency Code is not provided, the Default AMT currency code will be used.	O

8.7.5 Business Rules – Operation Misc

Field Name	Business Rule	Optional/ Required
SupplierCode	The value provided should match a configured **Supplier** Code within AMT.	R
MiscCategoryCode	The value provided should match a configured **Category** Code within AMT.	O
AMTMiscItemID	If provided, this ID will be used to match existing **Misc** line items. If not provided, a best-match scenario, as documented in the processing rules, will be used.	O
CostBearerCode	The value provided should match a configured **CostBearer** Code within AMT.	O
ExpenseElementCode	The value provided should match a configured **Expense Element** Code within AMT.	O
WorkGroupCode	The value provided should match a configured **Workgroup** Code within AMT. This value is used in conjunction with **Site** Code of the work order header to determine the correct WorkGroup.	O
CurrencyCode	The value provided should match a configured **Currency** Code within AMT. If a Currency Code is not provided, the Default AMT currency code will be used.	O
AMTPurchaseOrderID	Used to match Misc Items when AMTMiscItemID is not provided.	O

8.7.6 Processing Rules

1. One or more work orders can be included in the same message.
2. Each work order is processed individually. Failure of a single work order is reported, and processing continues.
3. Update requests can be duplicated – the latest message takes precedence.
4. **WorkOrderNumber** is used to determine whether the work order exists in AMT. If the work order is not found, an error is returned.
5. No items are removed by this interface – quantity should be set to zero.
6. Consider the setting **Update Workorder from Workorder Settlement,** which applies to each equipment. If this is false, work orders cannot be updated against the asset using this interface. The setting can be found in the **AMT Multi Editor Asset** Configuration.
7. **Parts**, **Labour** and **Misc** items that do not have a valid operation are matched to the first AMT Operation, so will be created in that operation if no matching item can be found.

8. Consider the following AMT configuration items:

   a. ManualEntryActualsParts

Value	Rule
1	The Parts element under each operation in the message will **NOT** be processed.
2	The Parts element under each operation in the message will be processed according to the Business Rules provided above.
3	The Parts element under each operation in the message will **NOT** be processed.

   b. ManualEntryActualsLabour

Value	Rule
1	The Labour element under each operation in the message will **NOT** be processed.
2	The Labour element under each operation in the message will be processed according to the Business Rules provided above.
3	The Labour element under each operation in the message will **NOT** be processed.

   c. ManualEntryActualsMisc

Value	Rule
1	The Misc element under each operation in the message will **NOT** be processed.
2	The Misc element under each operation in the message will be processed according to the Business Rules provided above.
3	The Misc element under each operation in the message will **NOT** be processed.

9. Parts within an operation are updated if they exist or added if they do not match. The value for PartItemID is used as the primary match. If this value is not provided, the following fields are used to identify parts:

   a. SourceOfSupplyCode

   b. Partnumber

   c. AMTPurchaseOrderID (optionally)

   d. SupplierCode (optionally used when ERPIsPOSystem = 0)

10. Labour within an operation is updated if a corresponding entry exists; otherwise, a new labour item is added. The value for LabourItemID is used as the primary match. If this value is not provided, the following fields are used to identify labour items:

    a. WorkgroupCode

    b. Employee

    c. FinancialPeriod

    d. CostBearerCode

e. CostCentreCode

f. ExpenseElementCode

g. CurrencyCode

11. Misc items within an operation are updated if a corresponding entry exists, otherwise, a new misc item is added. The value for MiscItemID is used as the primary match. If this value is not provided, the following fields are used to identify Misc items:

    a. Description

    b. MiscCategoryCode

    c. AMTPurchaseOrderID (optionally)

    d. SupplierCode (optionally used when ERPIsPOSystem = 0)

12. **RespondWorkOrder** is returned in response to this message.

8.7.7 Data Structure

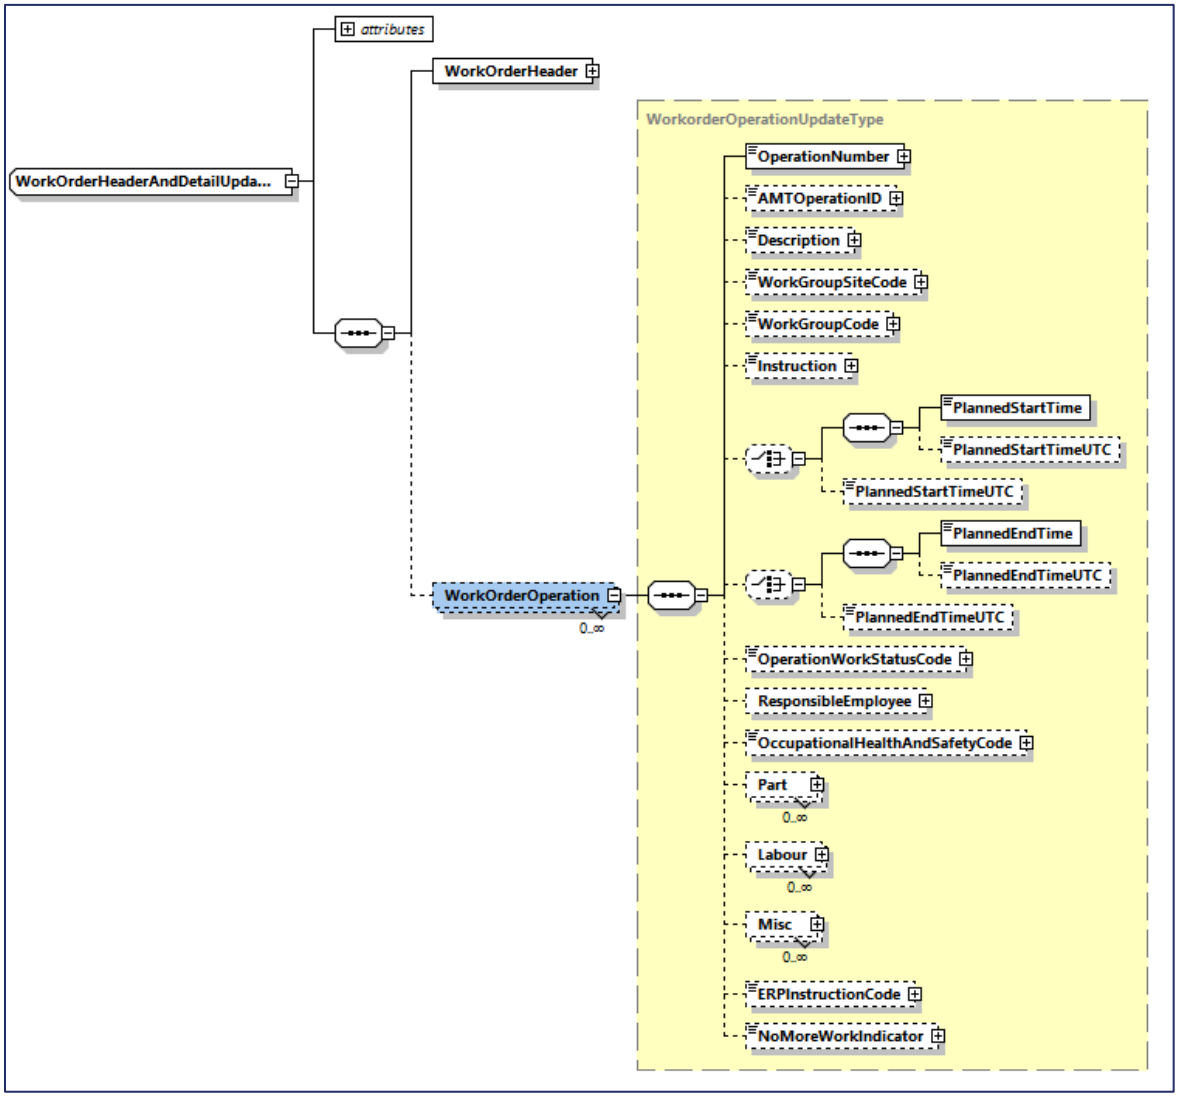


Figure 14 UpdateWorkOrder Data Area

8.8 GetWorkOrder

This interface is used to retrieve work orders from AMT, based on the given search criteria.

8.8.1 Business Rules Search Criteria

Field Name	Business Rule	Optional/ Required
OrganisationCode	The value provided is matched against a configured **Organisation** code within AMT. The value is derived from the asset to which the work order relates.	O
SourceOfSupplyCode	The value provided is matched against a configured **Source of Supply** code within AMT.	O
PartNumber	The complete **PartNumber** is matched.	O
AssetName	The complete **AssetName** is matched.	O
AMTWorkOrderID	The exact **AMTWorkOrderID** is matched.	O
WorkOrderNumber	The exact **WorkOrderNumber** is matched.	O
CustomerCode	The value provided is matched against a configured **Customer** code within AMT.	O
ComponentCode	The value provided is matched against a configured **Component** code within AMT.	O
TaskTypeCode	The value provided is matched against a configured **TaskType** code within AMT.	O
PlanningStatusCode	The value provided is matched against a configured **Planning Status** code within AMT.	O
TargetDateStartDate	Items after this date are returned.	O
TargetDateEndDate	Items before this date are returned.	O
ActualDateStartDate	Items after this date are returned.	O
ActualDateEndDate	Items before this date are returned.	O
MaintenanceperiodCode	The value provided is matched against a configured **MaintenancePeriod** code within AMT. Not currently implemented.	O
ExternalBacklogID	The exact **External Backlog ID** is matched.	O
LastModifiedDate	Items whose last modified timestamp is equal to or greater than this date/time are included.	O

8.8.2 Processing Rules

1. All elements are optional.
2. All items within a list element are considered as a logical OR.
3. Each list is considered as a logical AND
4. The use of a non-existent code will result in an error condition.
5. **ShowWorkOrder** is returned in response to this message

8.8.3 Data Structure

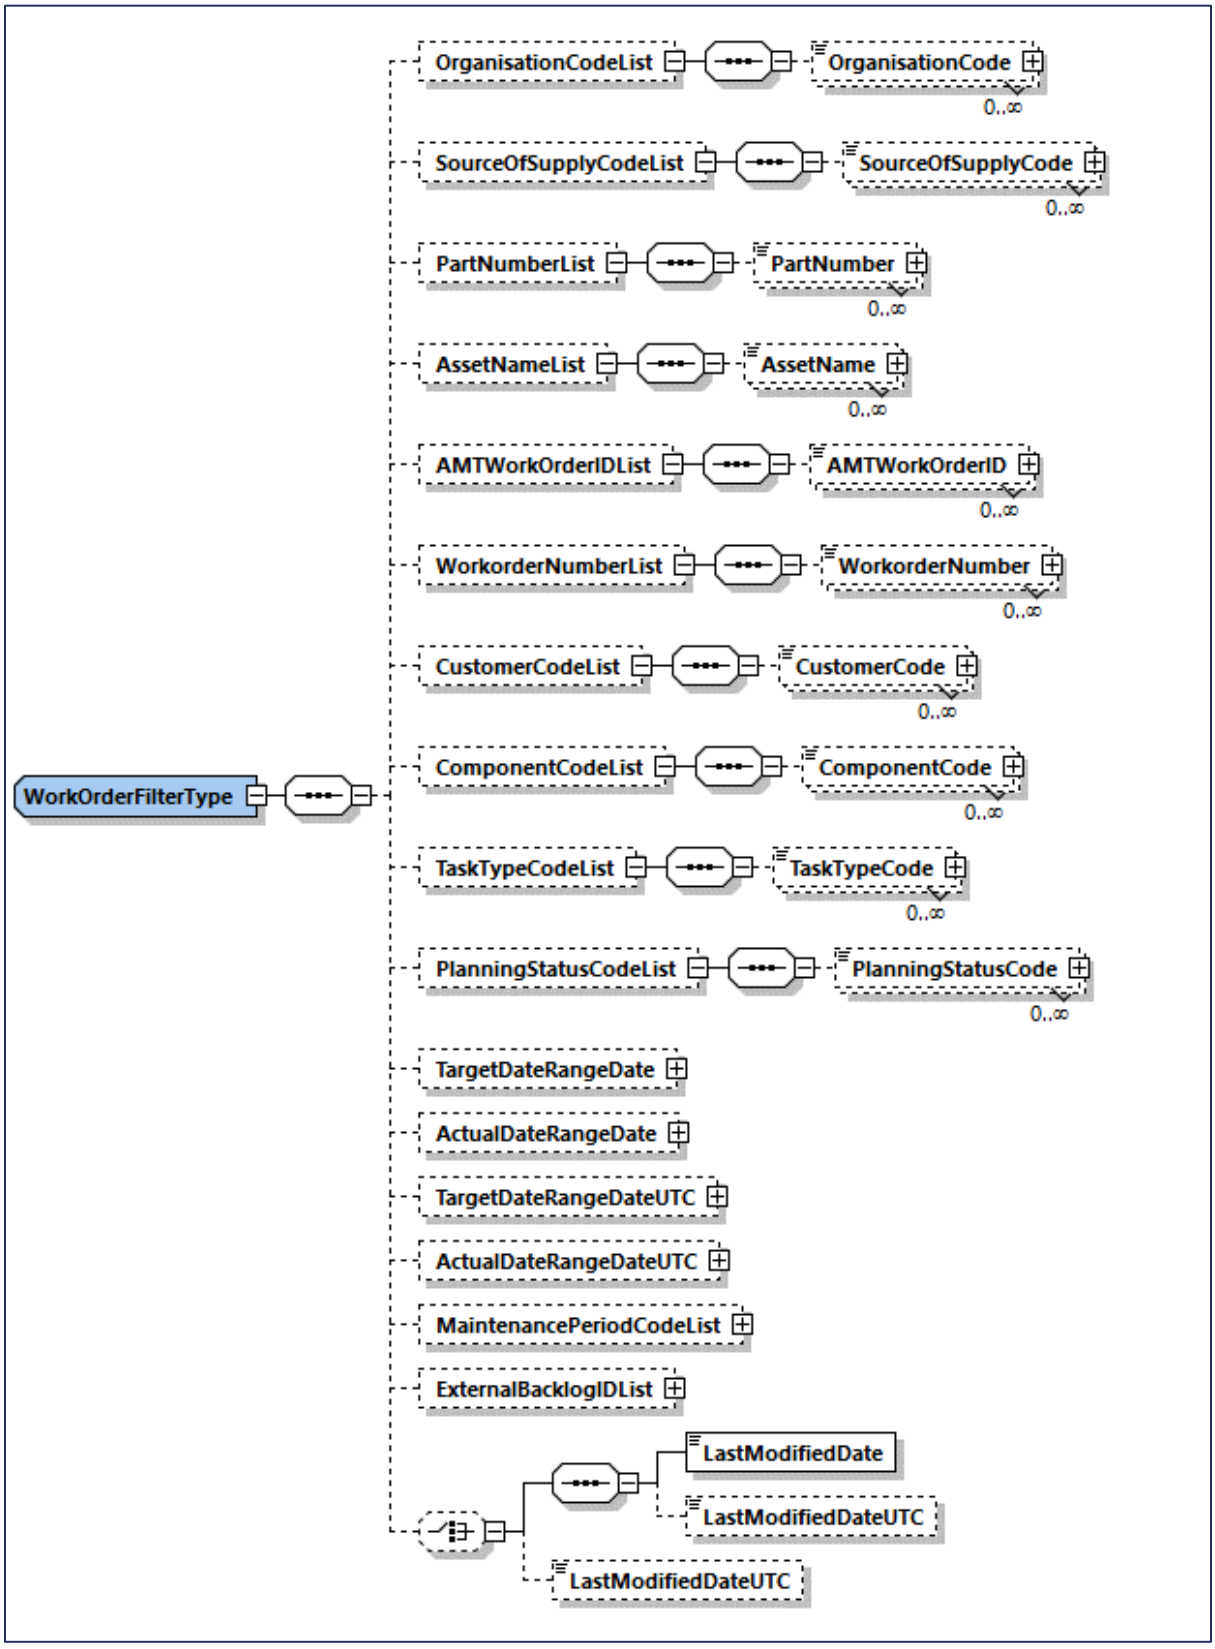


Figure 15 GetWorkOrder Data Area

8.9 GetServiceReport

This interface is used to retrieve work orders from AMT based on the given search criteria. Typically, GetServiceReport is used with the TaskDelayHours parameter to retrieve closed work orders where the completed date is older than the current date less the TaskDelayHours parameter.

8.9.1 Business Rules Search Criteria

Field Name	Business Rule	Optional/ Required
OrganisationCode	The value provided is matched against a configured **Organisation** code within AMT. The value is derived from the asset to which the work order relates.	O
SourceOfSupplyCode	The value provided is matched against a configured **Source of Supply** code within AMT.	O
PartNumber	The complete **PartNumber** is matched.	O
AssetName	The complete Asset Name is matched.	O
AMTWorkOrderID	The exact **AMTWorkOrderID** is matched.	O
WorkOrderNumber	The exact **WorkOrderNumber** is matched.	O
CustomerCode	The value provided is matched against a configured **Customer** code within AMT.	O
ComponentCode	The value provided is matched against a configured **Component** code within AMT.	O
TaskTypeCode	The value provided is matched against a configured **TaskType** code within AMT.	O
PlanningStatusCode	The value provided is matched against a configured **Planning Status** code within AMT.	O
TargetDateStartDate	Items after this date are returned.	O
TargetDateEndDate	Items before this date are returned.	O
ActualDateStartDate	Items after this date are returned.	O
ActualDateEndDate	Items before this date are returned.	O
MaintenancePeriodCode	The value provided is matched against a configured **MaintenancePeriod** code within AMT. Not currently implemented.	O
ExternalBacklogID	The exact **ExternalBacklogID** is matched.	O
TaskDelayHours	Filters work orders with actual completion time less than the current time minus this parameter.	O
LastModifiedDate	Items whose last modified timestamp is equal to or greater than this date/time are included.	O

8.9.2 Processing Rules:

1. All elements are optional.
2. All items within a list element are considered as a logical OR.
3. Each list is considered as a logical AND.
4. The use of a non-existent code will result in an error condition.
5. **ShowWorkOrder** is returned in response to this message.

8.9.3 Data Structure

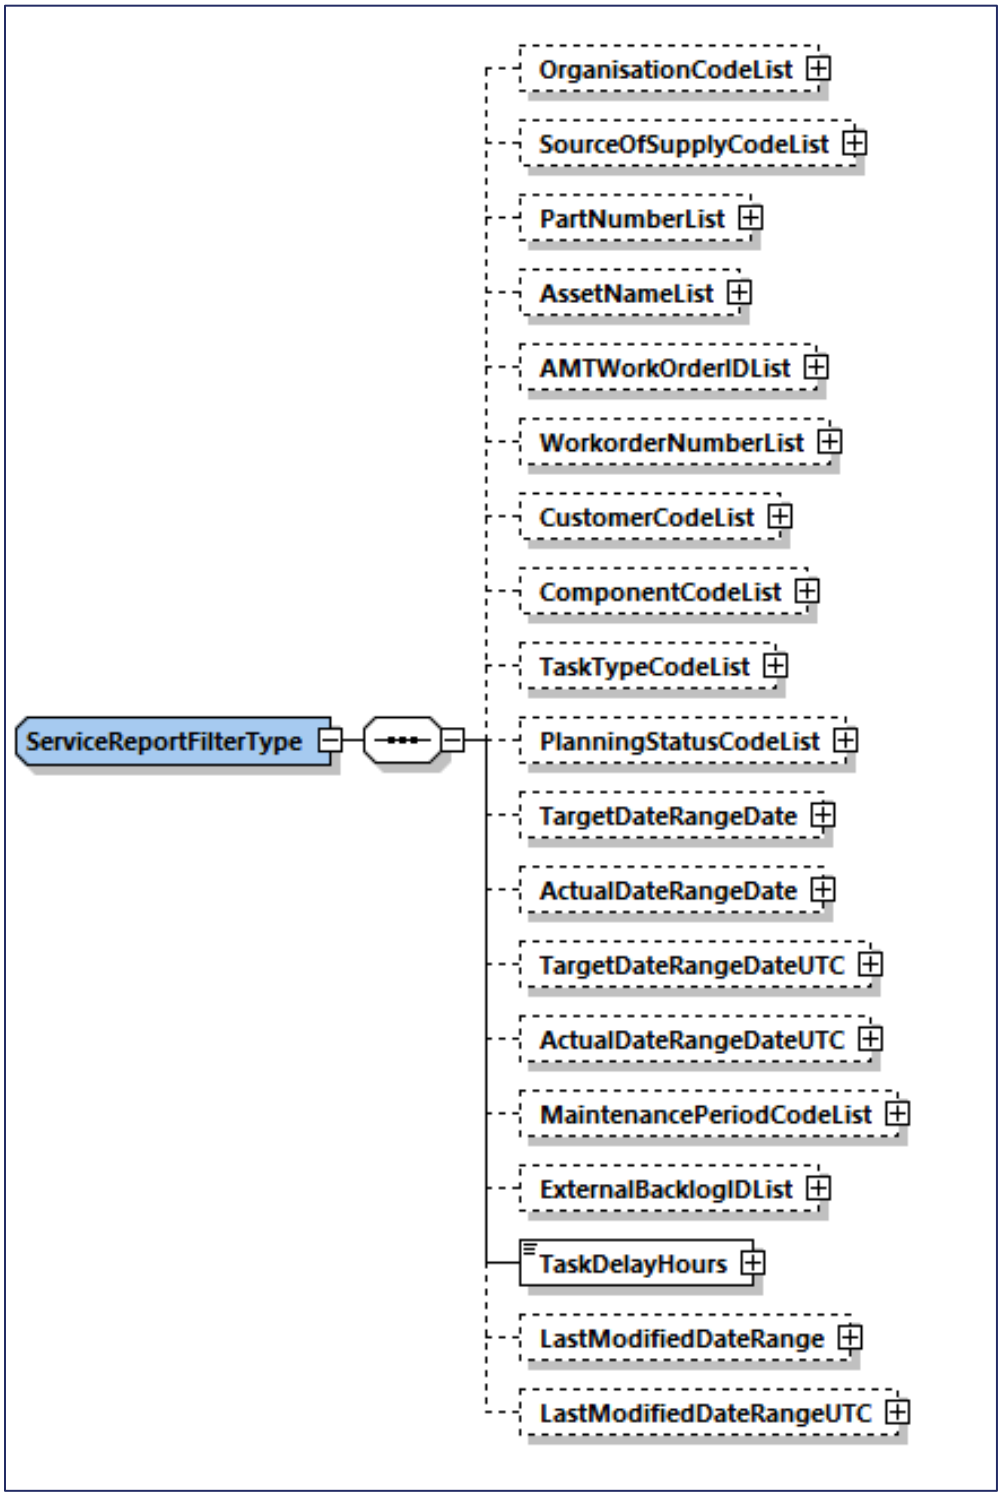


Figure 16 GetServiceReport Data Area

8.10 ProcessWorkOrderFinancialSummary

This interface is used to create or change the financial summary of a work order in AMT.

8.10.1 Business Rules – Financial Summary

<table>
<tr><th>Field Name</th><th>Business Rule</th><th>Optional/ Required</th></tr>
<tr><td>WorkOrderNumber</td><td>This is used in conjunction with TaskNumber to identify the WorkOrderFinancialSummary record.
If this matches an existing AMT work order, the summary will be linked to the work order.
If this ID does not match and existing AMT work order, the summary will be created, but no work order will be linked.</td><td>R</td></tr>
<tr><td>TaskNumber</td><td>This is used in conjunction with WorkOrderNumber to identify the WorkOrderFinancialSummary record.</td><td>R</td></tr>
<tr><td>OpenDate</td><td>Check AMT CONFIGURATION
<table>
<tr><th colspan="2">Use_Transaction_WO_Cost</th></tr>
<tr><th>Value</th><th>Action</th></tr>
<tr><td>No</td><td>Use the date that the work order was opened in the ERP</td></tr>
<tr><td>Yes</td><td>Use the date that this settlement is relevant for</td></tr>
</table>
Can be omitted if OpenDate UTC is provided</td><td>R</td></tr>
<tr><td>OpenDateUTC</td><td>If provided, will be converted and used as the OpenDate above.
If OpenDate is provided, this value will be ignored.</td><td></td></tr>
<tr><td>ExchangeRateValue</td><td></td><td>R</td></tr>
<tr><td>ClosePeriod</td><td>The value provided represents a FinancialPeriod and must be in the format YYYYMM.</td><td>O</td></tr>
<tr><td>ComponentCode</td><td>The value provided should match a configured Component Code within AMT.</td><td>O</td></tr>
<tr><td>ModifierCode</td><td>The value provided should match a configured Modifier Code within AMT.</td><td>O</td></tr>
<tr><td>TaskTypeCode</td><td>The value provided should match a configured TaskType Code within AMT.</td><td>O</td></tr>
<tr><td>TaskCounterCode</td><td>The value provided should match a configured TaskCounter Code within AMT.</td><td>O</td></tr>
<tr><td>OccurrenceTypeCode</td><td>The value provided should match a configured OccurenceType Code within AMT.</td><td>O</td></tr>
<tr><td>SymptomCode</td><td>The value provided should match a configured Symptom Code within AMT.</td><td>O</td></tr>
<tr><td>CauseCode</td><td>The value provided should match a configured Cause Code within AMT.</td><td>O</td></tr>
<tr><td>CurrencyCode</td><td>The value provided should match a configured Currency Code within AMT.</td><td>R</td></tr>
</table>

Field Name	Business Rule	Optional/ Required
StatutoryCurrencyCode	The value provided should match a configured **Currency** Code within AMT.	O
MaintenancePeriodCode	When AMT is configured to use STOs, this should match the ExternalId of an STO in AMT.	O
OverheadGroupCode	The value provided should match a configured **OverheadGroup** Code within AMT.	O
MOTCode	The value provided should match a configured **MaintenanceOrderType** Code in AMT.	O

8.10.2 Business Rules – Financial Summary Detail

Field Name	Business Rule	Optional/ Required
CostBearerCode	The value provided should match a configured **Cost Bearer** Code within AMT.	R
LabourHourValue	Provide 0 if no value is available.	R
WorkGroupSiteCode	The value provided should match a configured **Site** Code within AMT.	O
WorkGroupCode	The value provided should match a configured **WorkGroup** Code within AMT. This value is used in conjunction with **WorkGroupSiteCode** to determine the correct WorkGroup.	O
CostCentreCode	The value provided should match a configured **CostCentre** Code within AMT.	O
CostCategoryCode	The value provided should match a configured **Cost Category** Code within AMT.	O
ExpenseElementCode	The value provided should match a configured **Expense Element** Code within AMT.	O
PartsCostAtCostValue	Provide 0 if no value is available.	R
PartsCostAtSellValue	Provide 0 if no value is available.	R
LabourCostAtCostValue	Provide 0 if no value is available.	R
LabourCostAtSellValue	Provide 0 if no value is available.	R
MiscCostAtCostValue	Provide 0 if no value is available.	R
MiscCostAtSellValue	Provide 0 if no value is available.	R

8.10.3 Processing Rules

1. One or more **FinancialSummary** can be included in the same message.
2. Each **FinancialSummary** is processed individually. Failure of a single summary is reported, and processing continues.
3. The **WorkorderNumber** and **TaskNumber** are used to check if the financial summary exists.
4. If the **FinancialSummary** does not exist:
    a. A new FinancialSummary is created.

b. Any value against a provided optional tag is used.

c. If an optional tag is not provided, the value is not set in AMT unless a specific business rule exists to manage this case.

5. If the **FinancialSummary** does exist:

   a. All **FinancialDetail** records are removed from the Financial Summary.

   b. **FinancialDetail** records will be created.

   c. The financial summary will be updated with new provided values.

   d. Any value against a provided tag will be overwritten.

   e. If no tag is provided, the existing values will remain as-is.

6. The **FinancialSummary** should be a point-in-time statement of the settlement, not the variance since the last summary.

7. **RespondWorkOrder** is returned in response to this message.

8.10.4 Data Structure

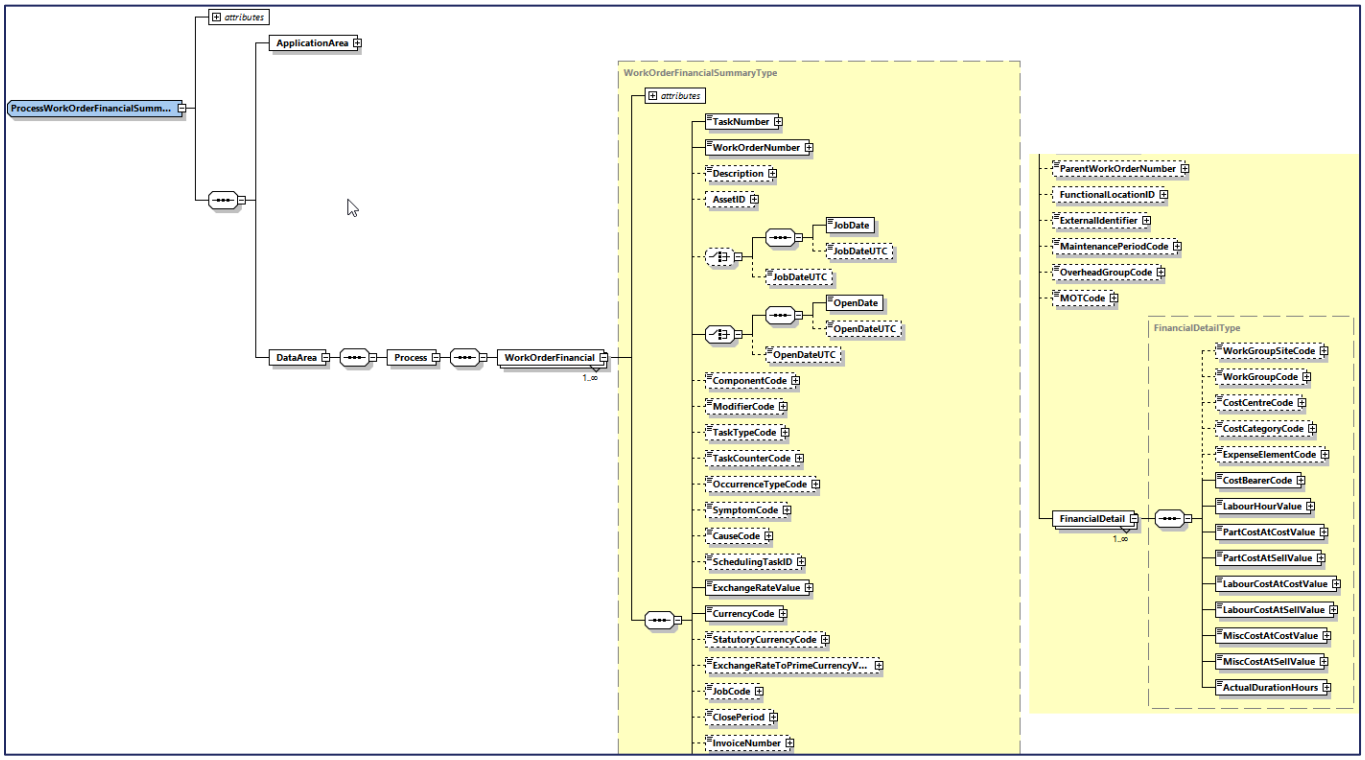


Figure 17 ProcessWorkOrderFinancialSummary Data Area

8.11 ProcessWorkOrderGLEntry

This interface is used to add new GL cost records into AMT. This interface can also be used to update previously imported GL cost records, provided the GL ID sent corresponds to an existing ID in AMT.

8.11.1 Business Rules

Messages should contain all work order settlements that had financial transactions in the month. The costs are for that month's financial transactions to the General Ledger.

Field Name	Business Rule	Optional/ Required
GeneralLedgerID	Forms the key for the AMT record.	R
WorkOrderNumber	The **WorkOrderNumber** provided will be used to match existing work orders during the reconciliation process.	R
ModelCode	The value provided should match a configured **Model** Code within AMT. Used together with SerialNumber and RegistrationCounter to uniquely identify the asset.	R
SerialNumber	Used together with ModelCode and RegistrationCounter to uniquely identify the asset.	R
RegistrationCounter	The value provided should match a configured **Registration Counter** within AMT. Used together with Model and SerialNumber to uniquely identify the asset. If this is not provided, the default value will be used.	O
CostBearerCode	The value provided should match a configured **CostBearer** Code within AMT.	R
GeneralLedgerSource	Only the following values are accepted: • Work order This is used because other AMT entities can also receive GL entries, so this is to ensure that the source is explicitly described.	R
FinancialPeriodYear		R
FinancialPeriodMonth	The period should be in the format "—MM", where MM is a 2-digit number from 01 to 12. An alternative format is a number from 1 to 12.	R
TransactionDate		R
CostAtCostValue	This value should be positive. Refunds are shown as negative values.	R
CostAtSellValue	This value should be positive. Refunds are shown as negative values.	R
CurrencyCode	The value provided should match a configured **Currency** Code within AMT. If the currency is not supplied, the assumption is that the currency is the AMT Prime Currency.	O

8.11.2 Processing Rules

1. One or more GL records can be included in the same message.
2. Each GL record is processed individually. Failure of a single record is reported, and processing continues.
3. **GeneralLedgerID** determines if a record exists in AMT.
4. If a record does not exist, the record is created.
5. If a record does exist, the record is updated.
6. GL records can be duplicated - the record processed last will take precedence.
7. **RespondWorkOrder** is returned upon completion of processing.

8.11.3 Data Structure

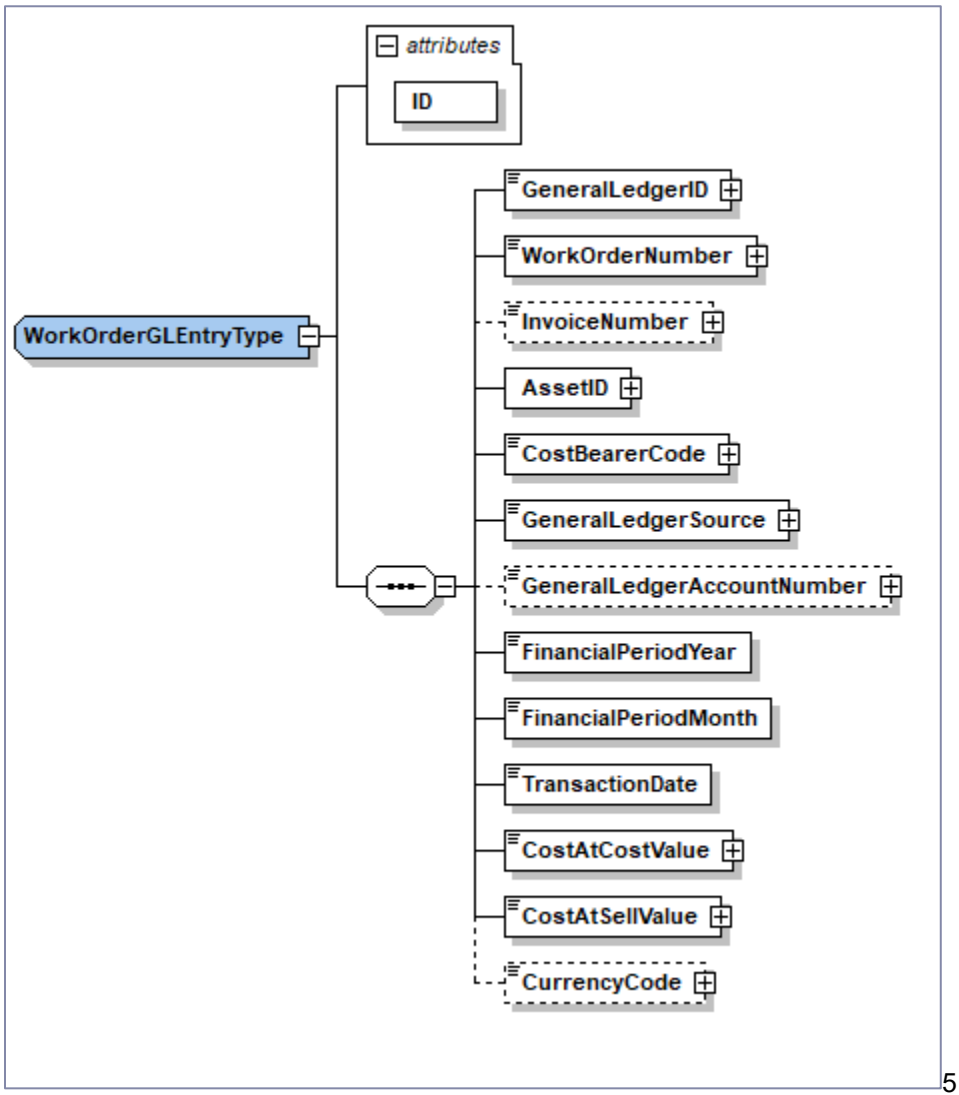


Figure 18 ProcessWorkOrderGLEntry

8.12 SendNotification

This interface is used to send a notification from AMT to an external system. The interface is currently triggered when a new notification is loaded from AMT Mobile 2.0.

When the notification is created in AMT, the SendNotification message will include documents linked to it. The documents are attached to the message header as MIME attachments.

SendNotificationMessages.xsd and SendNotification.wsdl are the relevant schema files to use when developing the external integration client for this function. These define the correct message that will be received externally from AMT and must be responded with to AMT. The postman collection provides example messages.

8.12.1 Business Rules

There are no specific business rules related to the SendNotification message. All information is provided, as it is stored in AMT.

Field Name	Business Rule	Optional/ Required
NotificationNumber	AMT **Notification Number**.	R
ModelCode	**Model** Code for the Asset the Notification is raised for.	R
SerialNumber	**Asset Serial Number**. This can be the Manufacturer's Serial Number or any other Unique Identifier for the Asset.	R
RegistrationCounter	Used to track multiple "lives" of an asset.	O
AssetName	The name of the **Asset** as displayed in AMT.	O
NotificationType	Indicates the type of notification.	R
Notification Title	Short description of the notification.	R
RepairDescription	Long description of the notification.	O
Priority	The priority of the issue in the notification.	R
Breakdown	Identifies if the notification involves a breakdown. Values are 0 or 1, with 1 indicating a breakdown has occurred.	R
ObjectPart	The **Object Part** on the notification, if available. Otherwise, the component code of the asset for the notification.	O
ModifierCode	The **Modifier Code** for the component on the asset.	O
DateRaisedUTC	Date the notification was raised.	R
DateRequiredUTC	Date the notification is required by.	R
Symptom	The code indicating the symptom (or damage) of the defect.	O
SymptomDescription	A long description of the symptom (or damage).	O
Cause	The code indicating the cause of the notification.	O
CauseDescription	A long description of the cause.	O
RaisedBy	The person who raised the notification.	R
PlanningGroupCode	The **Planning Group** responsible for planning the notification	O
WorkGroupCode	The **Work Group** responsible for actioning the notification	O
SiteCode	The **Site Code** for the notification	O

Field Name	Business Rule	Optional/ Required
WorkGroupSiteCode	The **Site** Code for the **Work Group** Code	O
AMTWorkOrderID	Not used	O
WorkOrderNumber	Work order number	O

8.12.2 Processing Rules

- This is an outbound interface that is triggered when a new notification is created from AMT Mobile Notification checklists. Sentinel configuration controls the frequency of sending new notifications.
- All saved information is packaged in the **SendNotification** message and sent.
- One or more **Notifications** can be included in the same message. Typically, only one is sent at a time.
- The external system should respond with **SendNotificationResponse.** The notification created in the external system is returned as **ExternalERPNotificationNumber** and is updated on the Notification in AMT.

8.12.3 Data Structure

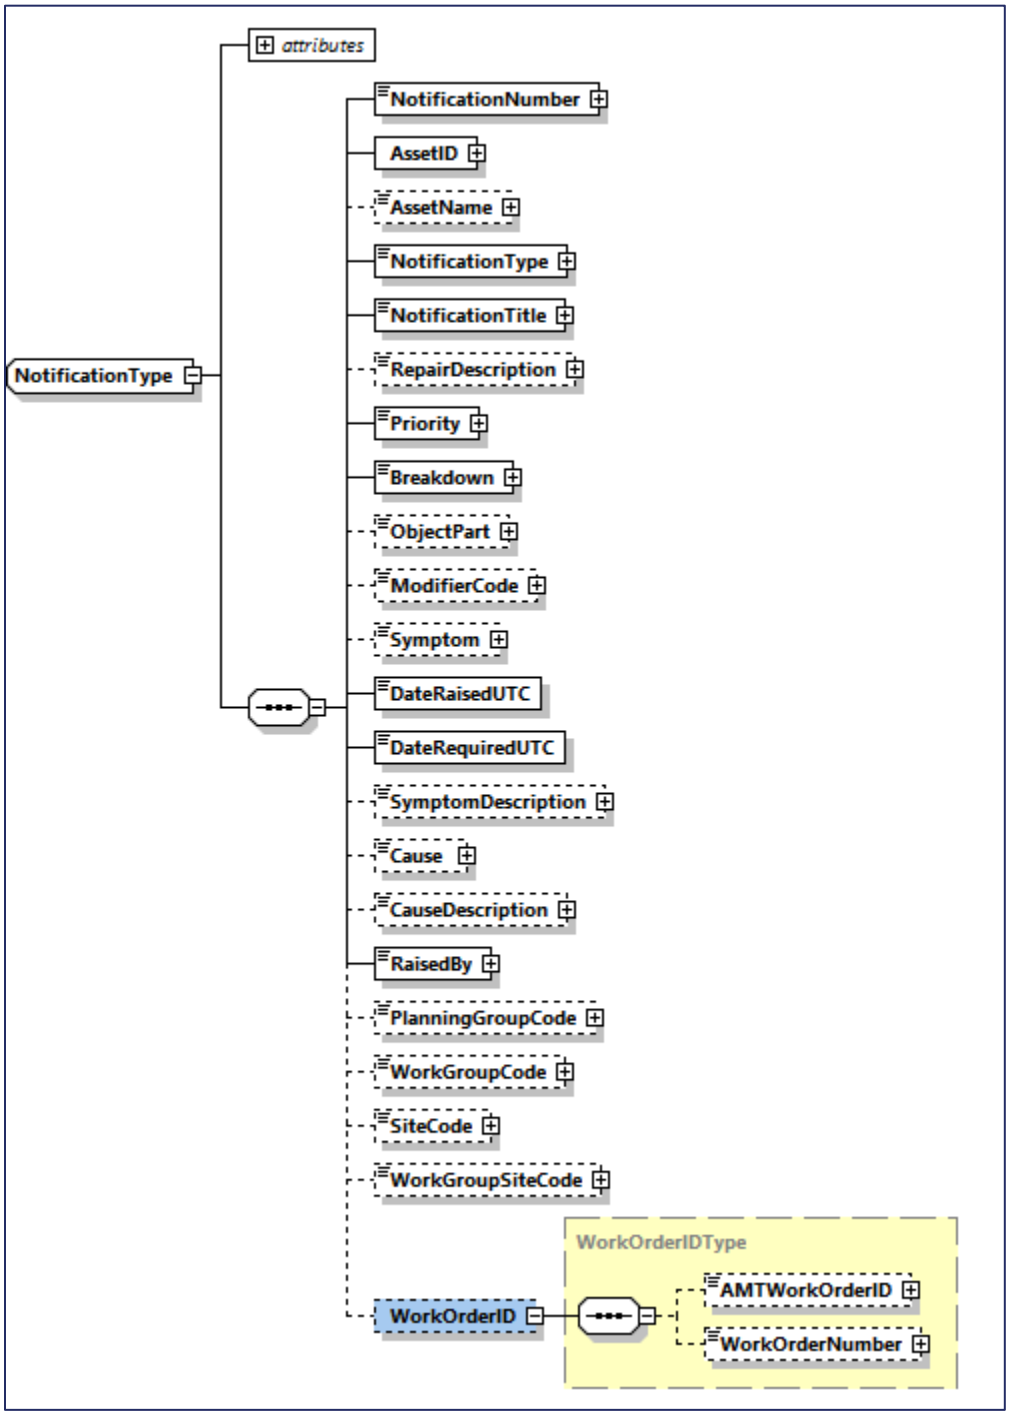


Figure 19 SendNotificationType

8.13 UpdateNotificationStatus

This interface is used to update a notification that exists in AMT based on information from an external system.

8.13.1 Business Rules

Field Name	Business Rule	Optional/ Required
ExternalERPNotificationNumber	The Notification number created in the external system from the SendNotification process.	R
Priority	The new priority of the notification.	O
ExternalWorkOrderNumber	If the external system has linked the notification to a work order, that external Work Order number can be updated into AMT. This is not validated against any AMT work order number.	O
NotificationStatus	The new status of the notification.	O

8.13.2 Processing Rules

- The interface is initiated from the external system when a change is made to the status of the notification in the external system.
- One or more **Notification Status** updates can be included in the same message.
- The response to this message is **RespondNotification**.

8.13.3 Data Structure

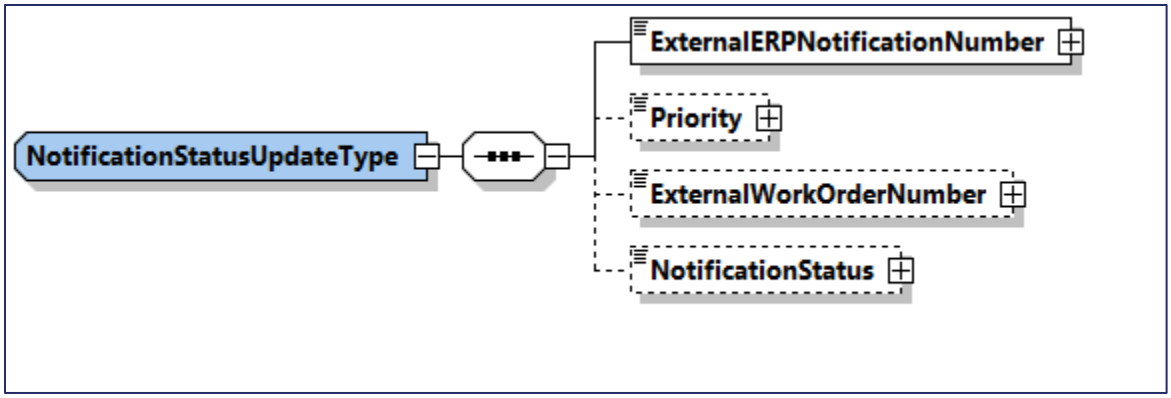


Figure 20 NotificationStatusUpdateType

8.14 SendWorkOrderOperationStatus

This interface is used to send operation work status information along with the operation's Actual Start and End time, for a work order operation from AMT. This is an outbound interface that is triggered when an operation work status change is made to an existing work order operation in AMT.

SendWorkOrderMessages.xsd and SendWorkOrderOperationStatus.wsdl are the relevant schema files to use when developing the external integration client for this function. These define the correct message that will be received externally from AMT and must be responded to by AMT. The postman collection provides example messages.

8.14.1 Processing Rules

Field Name	Business Rule
AMTWorkOrderID	The unique work order number as created in AMT.
WorkOrderNumber	The unique work order number as created by and external work order system. This will only be provided if a work order number has previously been provided by the external system.
AMTOperationID	The unique AMTID for the work order operation.
OperationNumber	The visible operation number for the work order operation in AMT (usually 1, 2, 3 or 10, 20, 30, for example).
OperationWorkStatusCode	The relevant code for the current operation work status is returned by AMT.

8.14.2 Processing Status

1. The interface is initiated when a change is made to the operation work status of a work order operation
2. All saved information is packaged in the message and sent.
3. One or more Status updates can be included in the same message. Typically, only one is sent at a time.
4. The external system should respond with **SendWorkOrderOperationStatusResponse.**

8.14.3 Data Structure

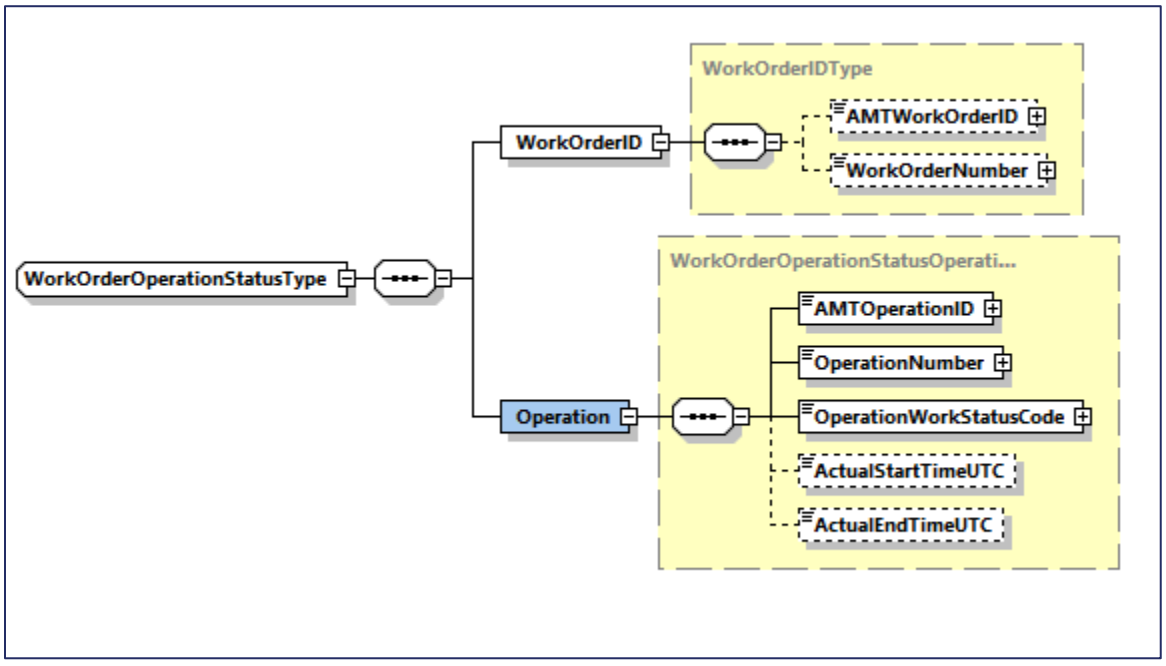


Figure 21 SendWorkOrderOperationStatus Data Area

8.15 SendWorkOrderCompletionComments

This interface is used to send work completion information for a work order from AMT. This is an outbound interface that is triggered when work order completion details are changed in AMT. Work order completion information is defined as the fields Object Part, Symptom Code, Cause Code, Symptom Description, Cause Description and Repair Description within the AMT work order.

SendWorkOrderMessages.xsd and SendWorkOrderCompletionComments.wsdl are the relevant schema files to use when developing the external integration client for this function. These define the correct message that will be received externally from AMT and must be responded to by AMT. The postman collection provides example messages.

8.15.1 Business Rules

There are no specific business rules related to completion comments. All information is provided, as it is stored, in AMT.

8.15.2 Processing Rules

1. The interface is initiated when a change is made to the completion comments fields of a work order (Symptom Code, Cause Code, Symptom Description, Cause Description and Repair Description).
2. All saved information is packaged in the message and sent.
3. One or more completion comment updates can be included in the same message. Typically, only one is sent at a time.
4. The external system should respond with **SendWorkOrderCompletionCommentsResponse.**

8.15.3 Data Structure

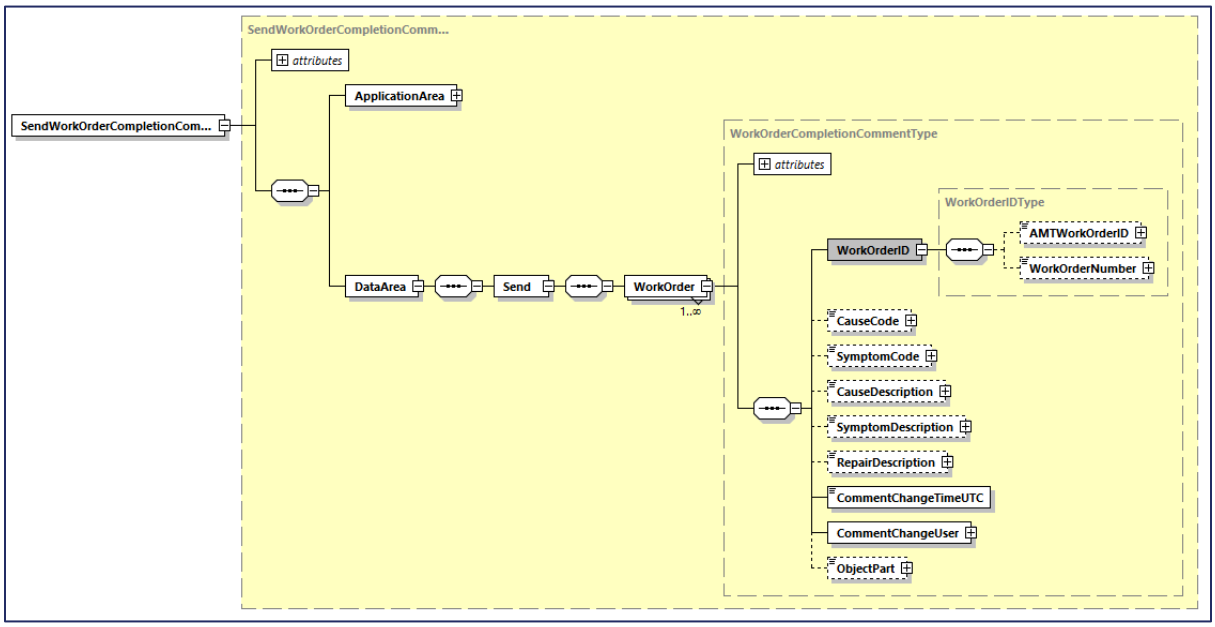


Figure 22 SendWorkOrderCompletionComments Data Area

8.16 ProcessSTO

This interface is used to update STO details in AMT from external systems.

8.16.1 Business Rules

Field Name	Business Rule	Optional/ Required
ExternalId	This is the identifier for the STO reference in the external system. The identifier is the unique key to determining which STO in AMT to update.	R
BranchCode	The value provided must match a configured **Branch** Code within AMT.	O
SiteCode	The value provided must match a configured **Site Name** within AMT. Note that the Site Name is used, not the Site Code.	O
FleetCode	The value provided must match a configured **Fleet** in AMT.	O
CategoryCode	The value provided must match a configured **STO Category** code in AMT.	
AMTUserLoginID	The value provided must match the **Database ID** of a User configured in AMT. Typically, external integration will not know this and will use the AMTUserName field to specify a User for the Project Manager. Note that if both **AMTUserLoginID** and **AMTUserName** are provided, only **AMTUserLoginID** will be validated and used to determine the Project Manager.	O
AMTUserName	The value provided must match the configured **Login Name** of a User in AMT.	O
PlanningGroup	The value provided must match a configured **Planning Group** code in AMT.	O
StatusCode	The value provided must match a configured **STO Status** code in AMT.	O
Archived	The only valid values are: • 0 – False • 1 – True	O
PlannedStartUTC	A valid date must be provided	O
PlannedEndUTC	A valid date must be provided	O
ActualStartUTC	A valid date must be provided	O
ActualEndUTC	A valid date must be provided	O
CanMove	The only valid values are: • **0** – False • **1** – True	O
MoveToleranceDays Minus	A valid integer must be provided	O
MoveTolderanceDays Plus	A valid integer must be provided	O

8.16.2 Processing Rules

1. One or more STO records can be included in the same message.
2. Each STO record is processed individually. Failure of a single record is reported, and processing continues.
3. **ExternalID** determines if a record exists in AMT.
4. If a record does not exist, the record is created.
5. If a record does exist, the record is updated.
6. STO records can be duplicated - the record processed last will take precedence.
7. **RespondSTO** is returned upon completion of processing.

8.16.3 Data Structure

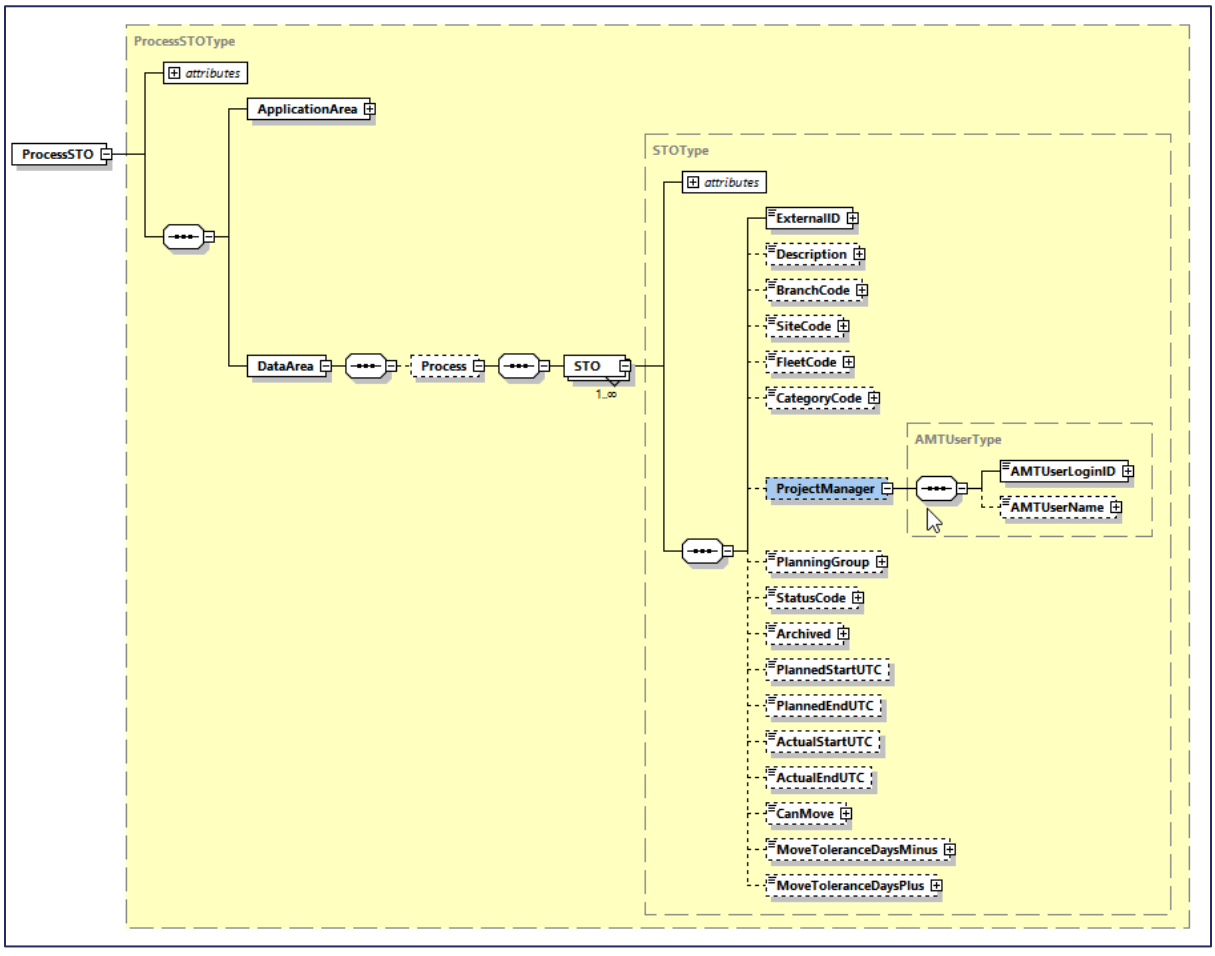


Figure 23 Process Data Area

8.17 CreateNotification

This interface is used to create a notification in AMT based on information from an external system.

8.17.1 Business Rules

The following default rules apply to fields not available in the **Create Notification** interface.

- The task type will default to the system default task type.
- The task counter will default to the system default task counter.
- The Notification **AssigneeID** will default to 1.

Field Name	Business Rule	Optional/ Required
NotificationNumber	This is the AMT Notification Number. As this is allocated by AMT, and an external system can't know this, it will error if a value is provided	O
ExternalERPNotificationNumber	The unique identifier of the Notification in the external system.	O
NotificationTitle	Title of the notification	R
ModelCode	The value provided should match a configured **Model** within AMT. Used together with SerialNumber and RegistrationCounter to uniquely identify the asset.	R
SerialNumber	The value provided should match a configured **Model** within AMT. Used together with ModelCode and RegistrationCounter to uniquely identify the asset.	R
RegistrationCounter	The value provided should match a configured **Registration Counter** within AMT. Used together with ModelCode and SerialNumber to uniquely identify the asset. If this is not provided, the default value will be used.	O
AssetName	The value provided should match the Name of the Asset ID in the message. If an **AssetName** is provided and it does not match the AssetID, an error will occur.	O
NotificationType	The value provided should match a configured **Notification Type** within AMT.	R
NotificationStatus	The value provided should match a configured **Notification Status** within AMT. If no notification status is provided, the default value will be used.	O
ComponentCode	The value provided should match a configured **Component** Code within AMT. If no component code is provided, the default component code will be used.	O
ModifierCode	The value provided should match a configured **Modifier** Code within AMT. If no modifier code is provided, the default modifier code will be used.	O
RaisedBy	This is the name of the person raising the notification. This is a free-format field.	R
DateRaisedUTC	The date raised cannot be in the future.	O
DateRequiredUTC	The date required should not be in the past.	O
Priority	The value provided should match a configured **Priority** code within AMT.	R

Field Name	Business Rule	Optional/ Required
Breakdown	The only valid values are: • 0 – False • 1 – True If no value is provided, a default of 0 (false) will be used.	O
Symptom	The value provided should match a configured **Symptom** Code within AMT.	O
Cause	The value provided should match a configured **Cause** Code within AMT.	O
PlanningGroupCode	The value provided should match a configured **Planning Group** Code within AMT.	O
WorkGroupSiteCode	The value provided should match a configured **Site** Code within AMT. This is required if a work group code is provided.	O
WorkGroupCode	The value provided should match a configured **Work Group** Code within AMT. Both site code and work group code are used to determine whether the work group is valid.	O
ObjectPart	The value provided should match a configured **Object Part** within AMT.	O

8.17.2 Processing Rules

1. One or more notifications can be included in the same message.
2. Each notification is processed individually. Failure of a single notification is reported, and processing continues.
3. **ExternalERPNotificationNumber** must be unique in AMT. If a notification already exists with this reference, an error will be returned.
4. **RespondCreateNotification** is returned in response to this message.

8.17.3 Data Structure

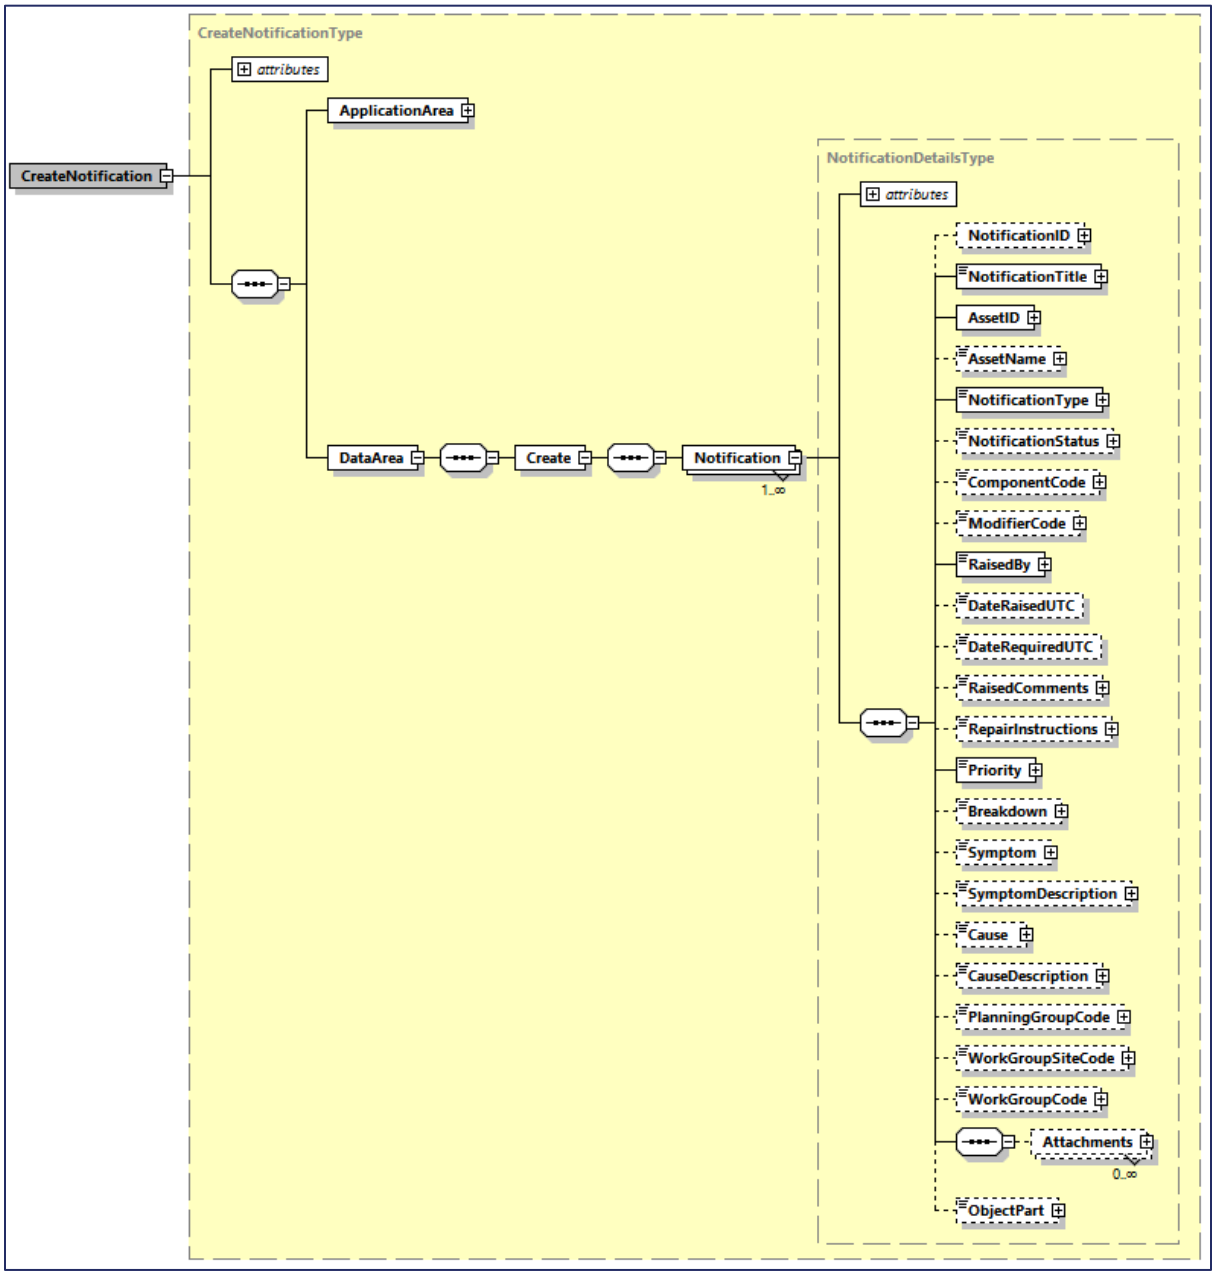


Figure 24 CreateNotification Data Area

9 Response Formats

9.1 AcknowledgeWorkOrder

This payload should be returned in response to the following interfaces. This response has the externally created work order that is used to bind AMT work orders to the external system.

- SendWorkOrder
- SendWorkOrderStatus
- SendWorkOrderLabourActual
- SendWorkOrderCompletionComments

9.1.1 Data Structure

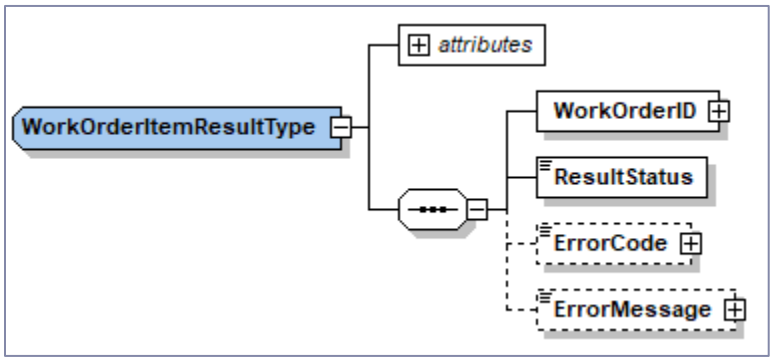


Figure 25 AcknowledgeWorkOrder

9.2 AcknowledgeWorkOrderOperation

This payload should be returned in response to the following interfaces:

- SendWorkOrderOperationStatus

9.2.1 Data Structure

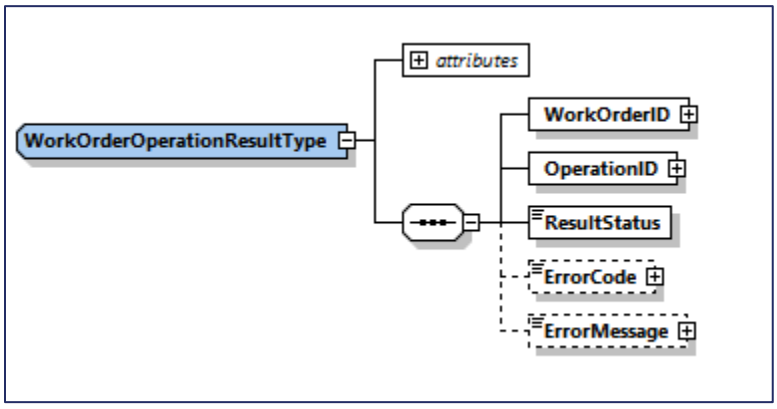


Figure 26 AcknowledgeWorkOrderOperation

9.3 RespondWorkOrder

The payload is returned in response to the following interfaces:

- CreateWorkOrder
- UpdateWorkOrder
- ProcessWorkOrderFinancialSummary
- ProcessWorkOrderFinancialSummary

9.3.1 Data Structure

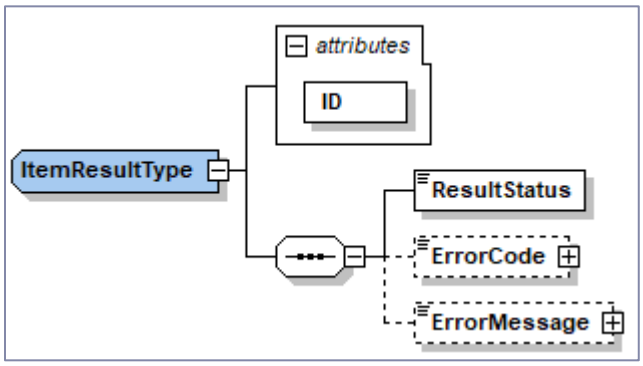


Figure 27 RespondWorkOrder Data Area

9.4 ShowWorkOrder

The payload is returned in response to the following interfaces:

- GetWorkOrder

9.4.1 Data Structure

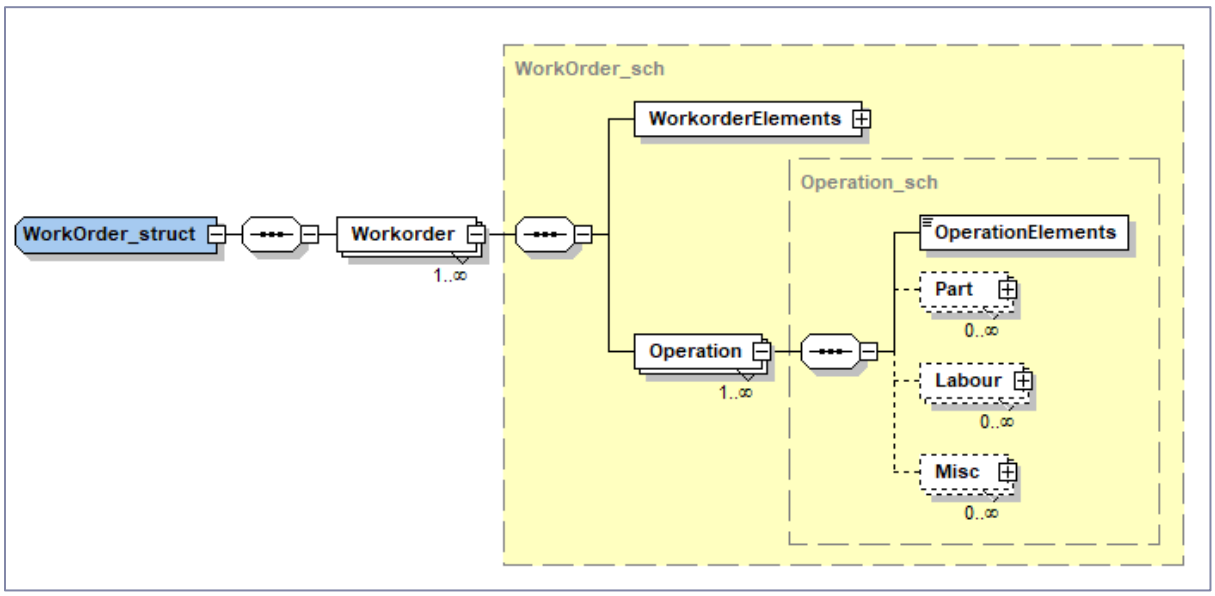


Figure 28 ShowWorkOrder (schematic representation)

9.5 AcknowledgeNotification

This payload is returned in response to the following interfaces. This response has the externally created notification number that is used to bind AMT notification to the external system:

- Send Notification
- CreateNotification

9.5.1 Data Structure

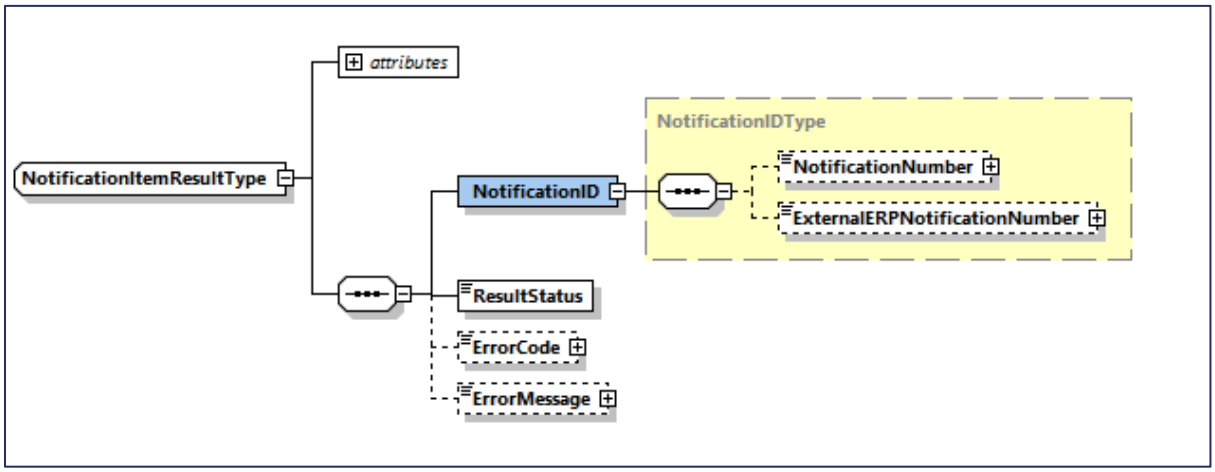


Figure 29 AcknowledgeNotification (schematic representation)

9.6 RespondNotification

This payload is returned in response to the following interfaces:

- UpdateNotificationStatus

9.6.1 Data Structure

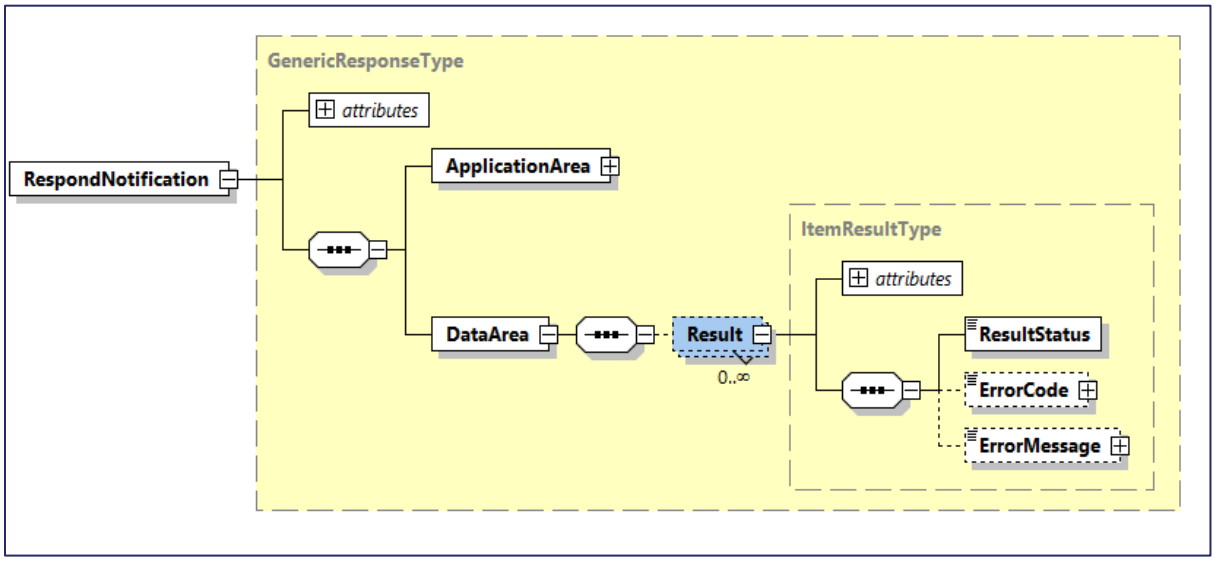


Figure 30 RespondNotification (schematic representation)

9.7 RespondSTO

This payload is returned in response to the following interfaces:

- ProcessSTO

9.7.1 Data Structure

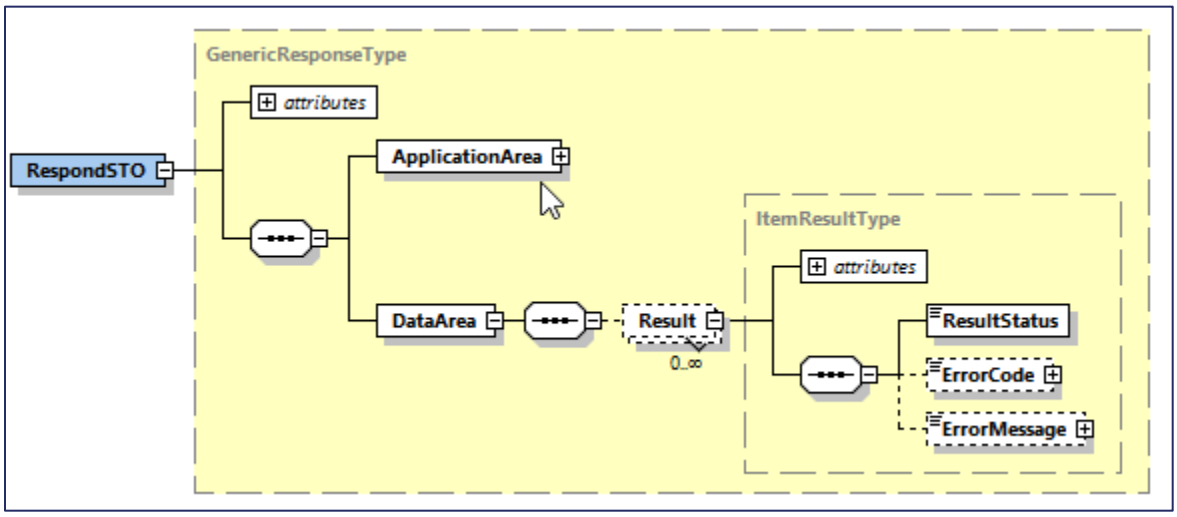


Figure 31 RespondSTO (schematic representation)

9.8 RespondCreateBacklog

This payload is returned in response to the following interfaces:

- CreateBacklog

9.8.1 Data Structure

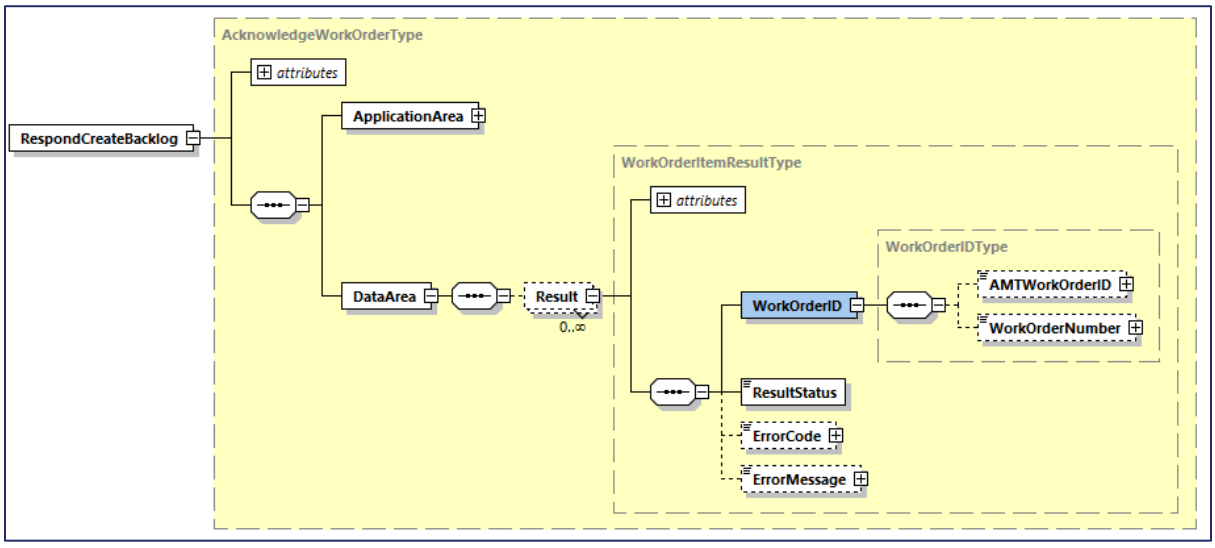


Figure 32 RespondCreateBacklog (schematic representation)

9.9 RespondCreateNotification

This payload is returned in response to the following interfaces:

- CreateNotification

9.9.1 Data Structure

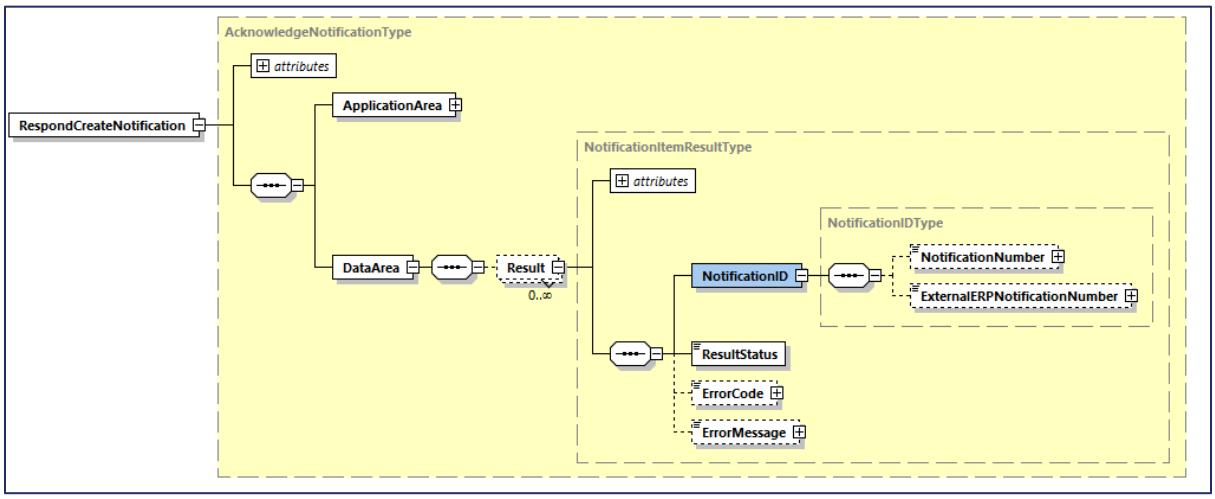


Figure 33 RespondCreateNotification (schematic representation)

9.10 SendWorkOrderResponse

This payload is returned in response to the following interfaces:

- SendWorkOrder

9.10.1 Data Structure

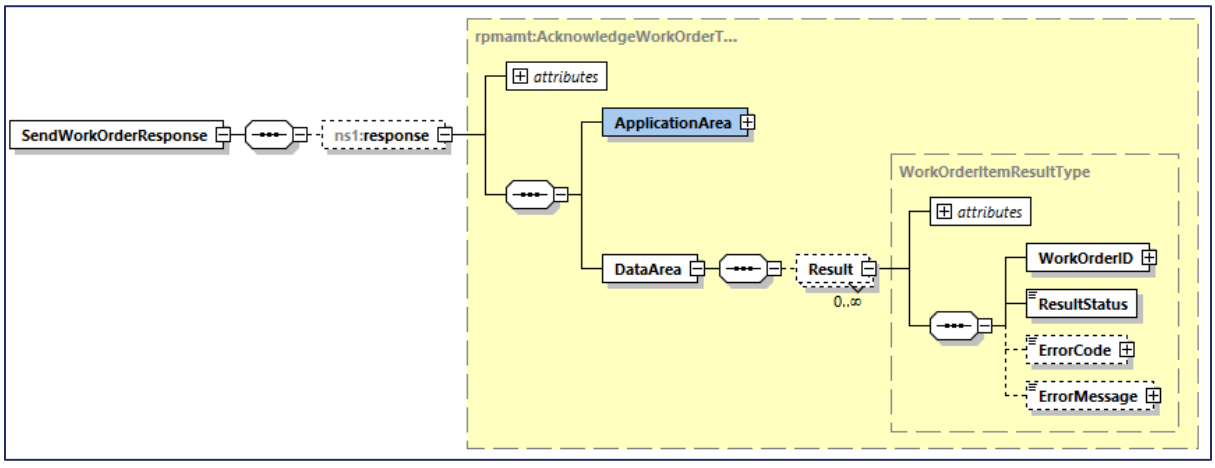


Figure 34 SendWorkOrderResponse (schematic representation)

9.11 SendWorkOrderStatusResponse

This payload is returned in response to the following interfaces:

- SendWorkOrderStatus

9.11.1 Data Structure

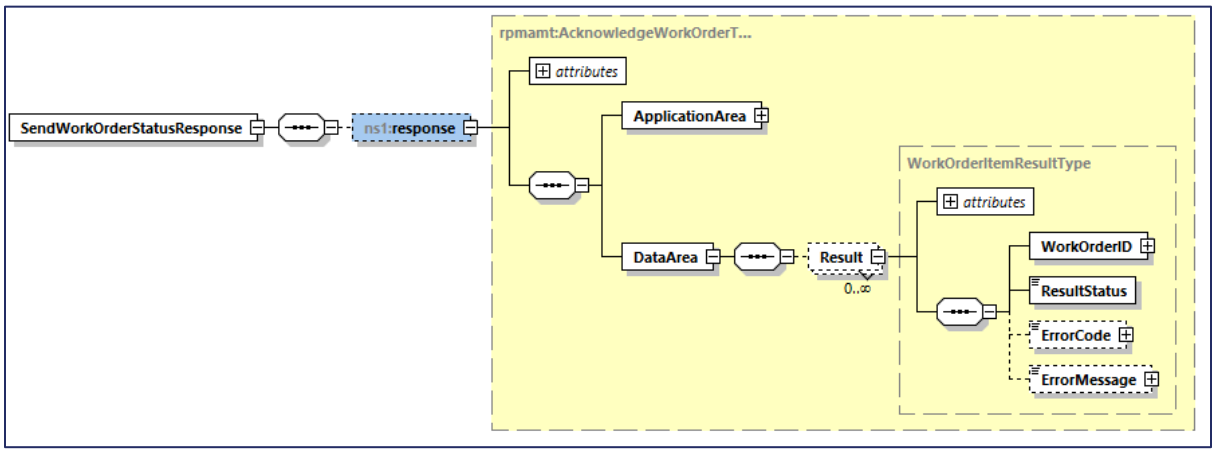


Figure 35 SendWorkOrderStatusResponse (schematic representation)

9.12 SendWorkOrderLabourActualResponse

This payload is returned in response to the following interfaces:

- SendWorkOrderLabourActual

9.12.1 Data Structure

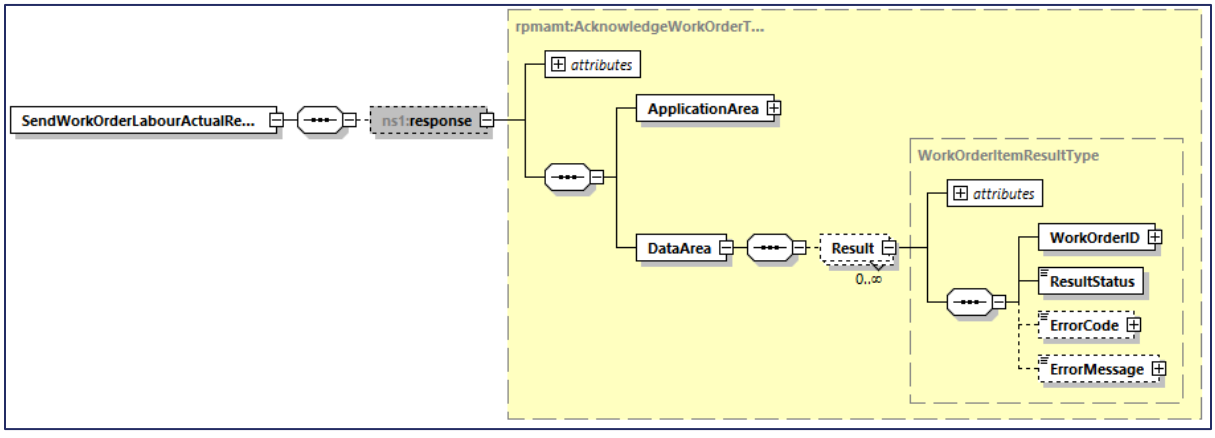


Figure 36 SendWorkOrderLabourActualResponse (schematic representation)

9.13 SendWorkOrderDocumentsResponse

This payload is returned in response to the following interfaces:

- SendWorkOrderDocuments

9.13.1 Data Structure

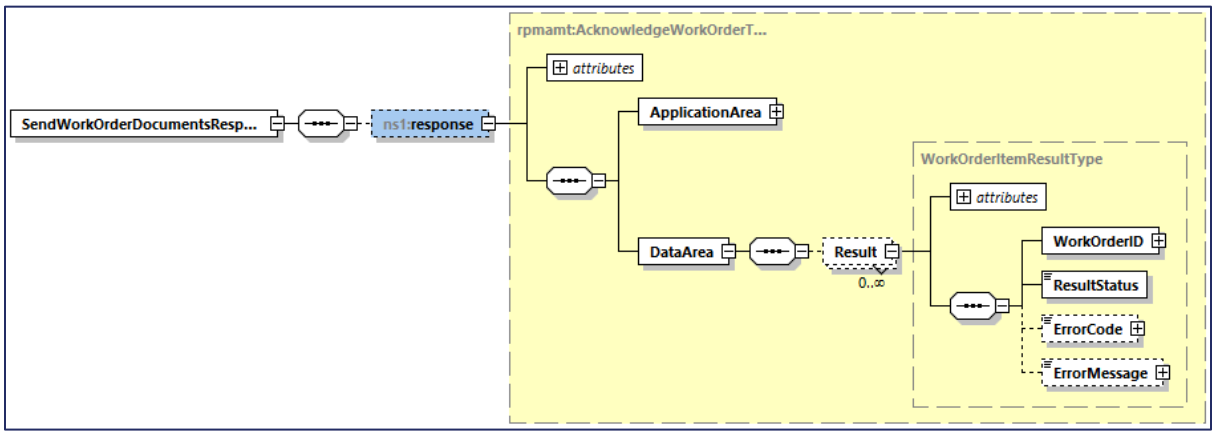


Figure 37 SendWorkOrderDocumentsResponse (schematic representation)

9.14 SendNotificationResponse

This payload is returned in response to the following interfaces:

- SendNotification

9.14.1 Data Structure

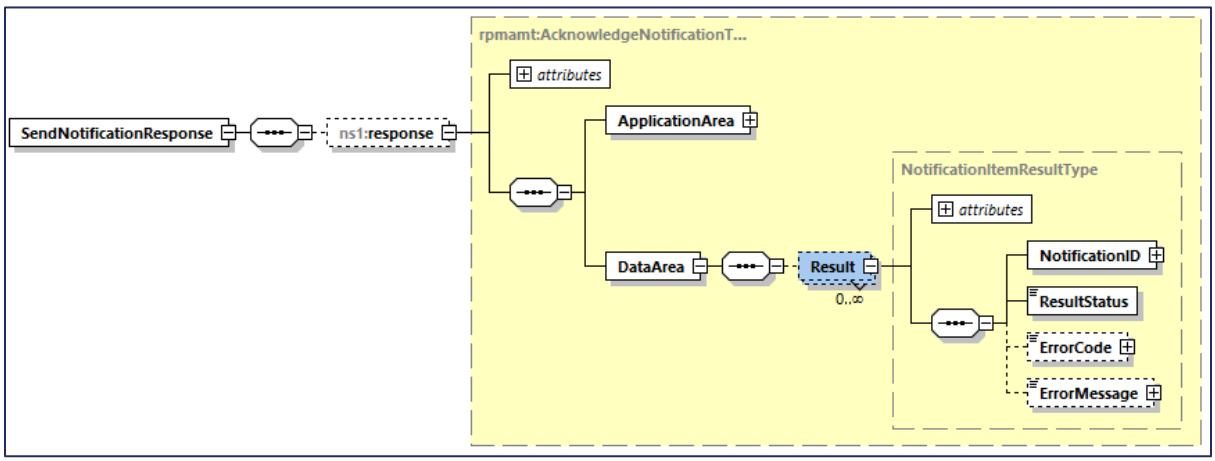


Figure 38 SendNotificationResponse (schematic representation)

9.15 SendWorkOrderOperationStatusResponse

This payload is returned in response to the following interfaces:

- SendWorkOrderOperationStatus

9.15.1 Data Structure

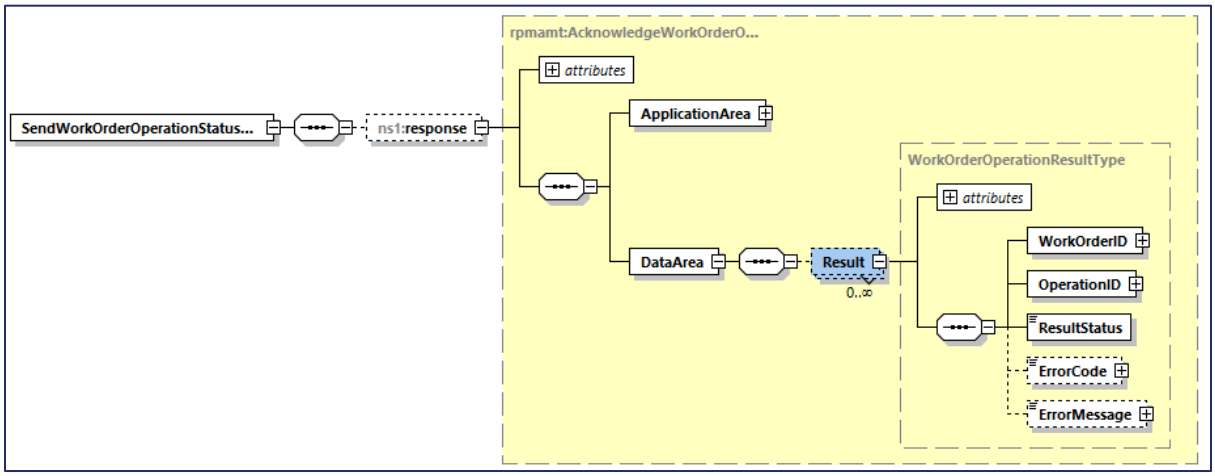


Figure 39 SendWorkOrderOperationStatusResponse (schematic representation)

9.16 SendWorkOrderCompletionCommentsResponse

This payload is returned in response to the following interfaces:

- SendWorkOrderCompletionComments

9.16.1 Data Structure

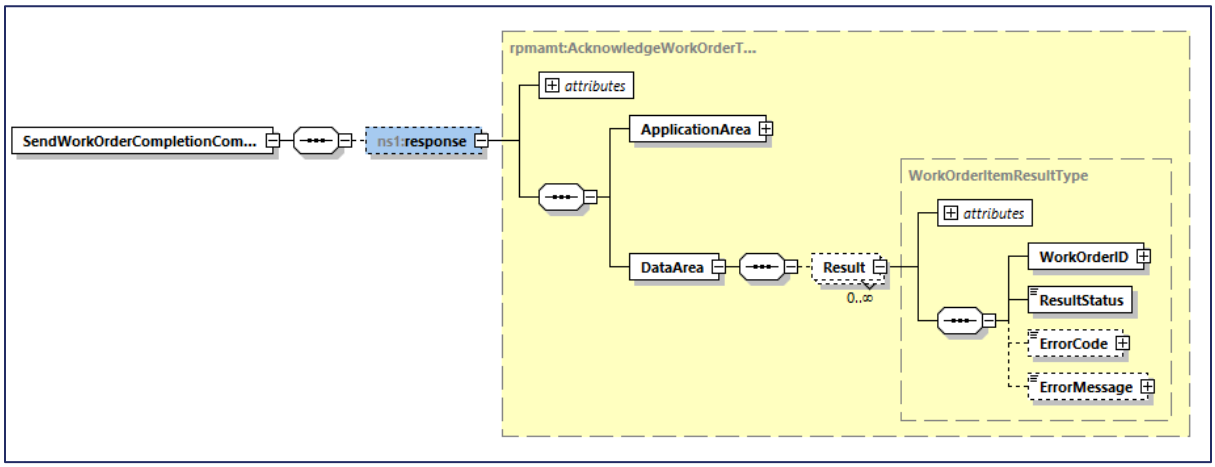


Figure 40 SendWorkOrderCompletionCommentsResponse (schematic representation)