## FROM ABOVE

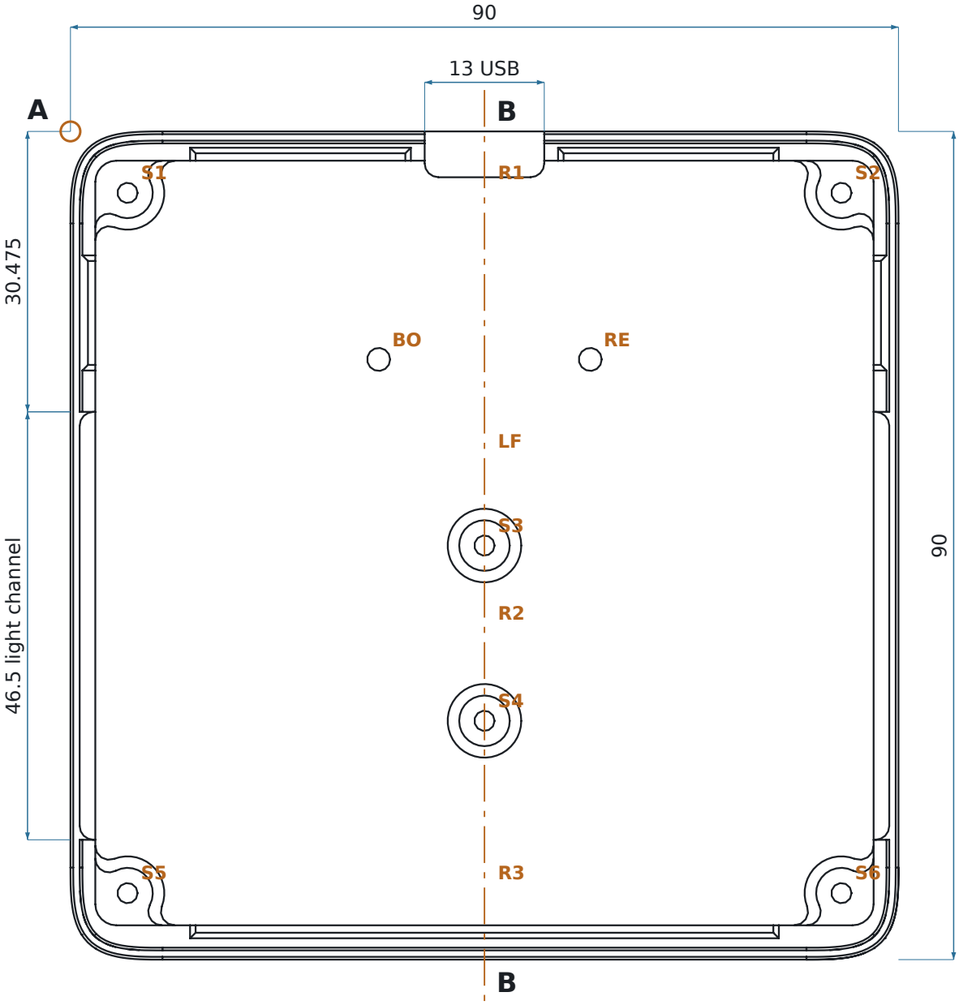


## FROM BELOW (mirrored left to right)

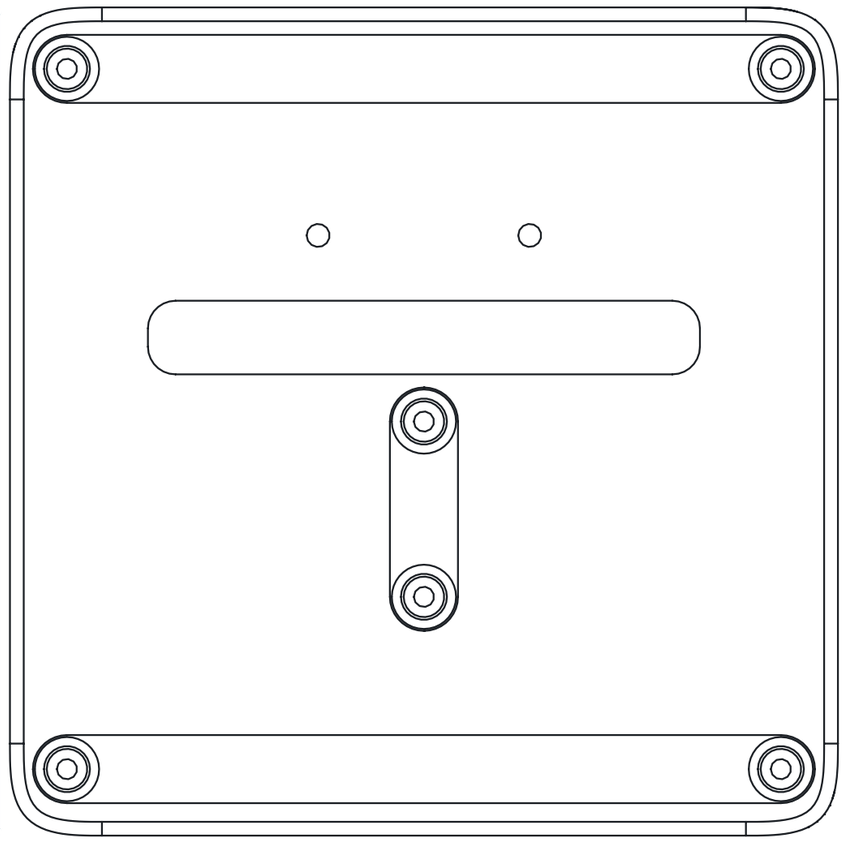

# macropad case: base, CNC variant

## Holes and recesses, from datum A

| tag | X | Y |
|---|---|---|
| ⌀2.2 through; counterbore ⌀4.4 to 2.9 from below | | |
| 45° cone ⌀7 to ⌀5, starting 0.6 from below | | |
| S1 | 6.2 | 6.675 |
| S2 | 83.8 | 6.675 |
| S3 | 45 | 45 |
| S4 | 45 | 64.05 |
| S5 | 6.2 | 82.775 |
| S6 | 83.8 | 82.775 |
| ⌀2.5 through (BOOT) | | |
| BO | 33.5 | 24.775 |
| ⌀2.5 through (RESET) | | |
| RE | 56.5 | 24.775 |
| slot 85 x 7.4, full-radius ends, 0.6 deep from below | | |
| R1 | 45 | 6.675 |
| slot 7.4 x 26.45, full-radius ends, 0.6 deep from below | | |
| R2 | 45 | 54.525 |
| slot 85 x 7.4, full-radius ends, 0.6 deep from below | | |
| R3 | 45 | 82.775 |
| pocket 60 x 8, R3, 0.4 deep from below | | |
| LF | 45 | 35.875 |

## SECTION B-B

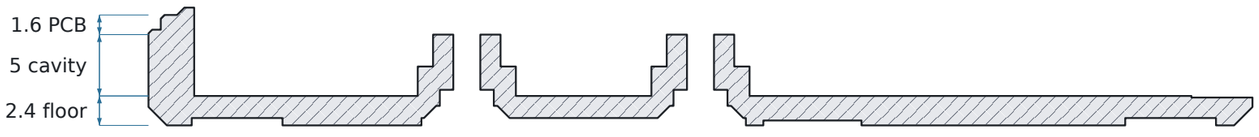


## GAP AND LAP JOINT, front wall, 8:1

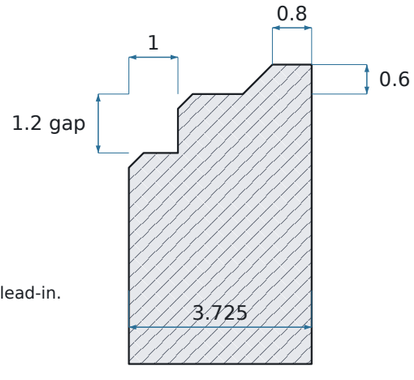


Scale 1.5:1 plans, 2:1 section, 8:1 detail, on A3. Dimensions in mm, computed from the model.
Datum A: back-left corner of the box round the outline, seen from above. X to the right, Y toward the front.
3-axis, two setups: inside up, then underside up.
Every pocket corner is R1.5 or larger: a 3 mm end mill reaches them all.
45 degree chamfers: 1.5 on the underside rim, 0.3 on the two rims at the gap, the flank and ends of the lap ridges, the cones under the foot recesses, the USB lead-in.
The rim steps in 1 mm over the top 1.2 mm, all round: that is the gap. Cut it with the side of the end mill in setup 1.
Outline corners: one quintic Bezier each, control points 10, 6 and 2 mm from the box corner on both sides. Take the curve from the STEP file.
General tolerance: ISO 2768-m is a proposal. Nothing has been made or measured.