

# Technical Information Manual

Revision n. 7 26 November 2012

> MOD. DT5742 16+1 CH 12 BIT 5 GS/S DIGITIZER MANUAL REV.7

NPO: 00100/09:5742x.MUTx/07

CAEN will repair or replace any product within the guarantee period if the Guarantor declares that the product is defective due to workmanship or materials and has not been caused by mishandling, negligence on behalf of the User, accident or any abnormal conditions or operations.

CAEN declines all responsibility for damages or injuries caused by an improper use of the Modules due to negligence on behalf of the User. It is strongly recommended to read thoroughly the CAEN User's Manual before any kind of operation.



CAEN reserves the right to change partially or entirely the contents of this Manual at any time and without giving any notice.

# **Disposal of the Product**

The product must never be dumped in the Municipal Waste. Please check your local regulations for disposal of electronics products.



**MADE IN ITALY**: We stress the fact that all the boards are made in Italy because in this globalized world, where getting the lowest possible price for products sometimes translates into poor pay and working conditions for the people who make them, at least you know that who made your board was reasonably paid and worked in a safe environment. (this obviously applies only to the boards marked "MADE IN ITALY", we can not attest to the manufacturing process of "third party" boards).





Mod. DT5742 16+1 Ch. 12 bit 5 GS/s Switched-Capacitor Digitizer 26/11/2012

# Revision date:

**Revision:** 

# TABLE OF CONTENTS

1. Gl	ENERAL DESCRIPTION	7
1.1.	Overview	7
1.2.	BLOCK DIAGRAM	9
2. TI	ECHNICAL SPECIFICATIONS	10
2.1.	PACKAGING AND COMPLIANCY	10
2.2.	Power requirements	10
2.3.	Front Panel	10
2.4 2.4 2.4	EXTERNAL CONNECTORS	11 11 11
	4.5. Optical LINK connector	
2.5. 2.5	OTHER COMPONENTS	
TECH	HNICAL SPECIFICATIONS TABLE	14
3. FU	UNCTIONAL DESCRIPTION	15
3.1.	ANALOG INPUT STAGE	15
3.2.	DOMINO RING SAMPLING	16
3.3.	TR0 Input	17
3.4.	CLOCK DISTRIBUTION	18
3.5	DATA CORRECTION	19 20
	EVENT STRUCTURE	
3.7. 3.7	TRIGGER MANAGEMENT	
3.8.		
	TEST PATTERN GENERATOR	28
	TEST PATTERN GENERATOR	29 29
3.9	RESET, CLEAR AND DEFAULT CONFIGURATION	29 29 29
3.9 3.10.	RESET, CLEAR AND DEFAULT CONFIGURATION	



### Title: Mod. DT5742 16+1 Ch. 12 bit 5 GS/s Switched-Capacitor Digitizer

Revision date: Revision: 26/11/2012

	3.11.	OPTICAL LINK AND USB ACCESS	32
4.	. SO	FTWARE TOOLS	33
5.	ВО	ARD INTERNAL REGISTERS	36
	5.1.	CONFIGURATION ROM (0xF000-0xF084; R)	38
	5.2.	GROUP N CHANNEL THRESHOLD (0x1n80; R/W)	38
	5.3.	GROUP N STATUS (0x1n88; r)	39
	5.4.	DAUGHTER BOARD FW REVISION (0x1n8C; R)	39
	5.5.	GROUP N CHANNEL DC OFFSET (0x1n98; r/w)	39
	5.6.	GROUP N ADC CONFIGURATION (0x1n9C; R/W)	40
	5.7.	DRS4 TEMPERATURE (0x1nA0; r)	40
	5.8.	CHANNEL N DAC SEL (0x1nA4; R/W)	40
	5.9.	GROUP N CHANNEL TRIGGER MASK (0x1nA8; r/w)	40
	5.10.	MEMORY CALIBRATION TABLES ENABLE (0x1nCC; r/w)	40
	5.11.	MEMORY CALIBRATION TABLES DATA (0x1nD0; r/w)	40
	5.12.	GROUP N TR THRESHOLD (0x1nD4; r/w)	41
	5.13.	GROUP N TR DC OFFSET (0x1nDC; r/w)	42
	5.14.	GROUP CONFIGURATION REGISTER (0x8000; r/w)	43
	5.15.	GROUP CONFIGURATION BIT SET (0x8004; w)	43
	5.16.	GROUP CONFIGURATION BIT CLEAR (0x8008; W)	43
	5.17.	Buffer Organization (0x800C; r/w)	44
	5.18.	CUSTOM SIZE (0x8020; R/W)	44
	5.19.	Initial test wave value (0x807C)	44
	5.20.	Sampling Frequency (0x80D8)	44
	5.21.	ACQUISITION CONTROL (0x8100; r/w)	44
	5.22.	ACQUISITION STATUS (0x8104; R)	45
	5.23.	SOFTWARE TRIGGER (0x8108; w)	45
	5.24.	TRIGGER SOURCE ENABLE MASK (0x810C; R/W)	45
	5.25.	FRONT PANEL TRIGGER OUT ENABLE MASK (0x8110; r/w)	46
	5.26.	Post Trigger Setting (0x8114; r/w)	46
	5.27.	FRONT PANEL I/O DATA (0x8118; r/w)	46
	5.28.	FRONT PANEL I/O CONTROL (0x811C; r/w)	46
	5.29.	GROUP ENABLE MASK (0x8120; R/W)	47
	5.30.	ROC FPGA FIRMWARE REVISION (0x8124; r)	47
	5.31.	EVENT STORED (0x812C; r)	47



# **Document type:** Tit User's Manual (MUT) Mo

Mod. DT5742 16+1 Ch. 12 bit 5 GS/s Switched-Capacitor Digitizer

Revision date: Revision:

26/11/2012

5.32.	SET MONITOR DAC (0x8138; R/W)	47
5.33.	BOARD INFO (0x8140; R)	47
5.34.	MONITOR MODE (0x8144; R/W)	47
5.35.	EVENT SIZE (0x814C; R)	48
5.36.	CONTROL (0xEF00; R/W)	48
5.37.	Status (0xEF04; r)	48
5.38.	Interrupt Status ID (0xEF14; r/w)	48
5.39.	INTERRUPT EVENT NUMBER (0xEF18; R/W)	48
5.40.	BLOCK TRANSFER EVENT NUMBER (0xEF1C; R/W)	48
5.41.	SCRATCH (0xEF20; r/w)	49
5.42.	SOFTWARE RESET (0xEF24; w)	49
5.43.	SOFTWARE CLEAR (0xEF28; w)	49
5.44.	FLASH ENABLE (0xEF2C; R/W)	49
5.45.	FLASH DATA (0xEF30; R/W)	49
5.46.	CONFIGURATION RELOAD (0xEF34; w)	49
6. IN	STALLATION	50
6.1.	Power ON sequence	50
6.2.	POWER ON STATUS	50
6.3.	FIRMWARE UPGRADE	50
6.4.	Drivers	51
LIST	OF FIGURES	
Fig. 1.1	: Mod. DT5742 Desktop Waveform Digitizer	7
FIG. 1.2	: Mod. DT5742 Block Diagram	9
FIG. 2.1	: MOD. DT5742 FRONT PANEL	10
FIG. 2.2	: MCX CONNECTOR	11
FIG. 2.3	: AMP CLK IN CONNECTOR	11
FIG. 2.4	: LC OPTICAL CONNECTOR	12
FIG. 3.1	: Analog input diagram	15
FIG. 3.2	: Input diagram	16
FIG. 3.3	: TR0 logic block diagram	17
FIG. 3.4	: CLOCK DISTRIBUTION DIAGRAM	18
FIG. 3.5	: SAMPLED WAVEFORM AND NOISE HISTOGRAM BEFORE CELL OFFSET CORRECTION	19
FIG. 3.6	: SAMPLED WAVEFORM AND NOISE HISTOGRAM AFTER CELL OFFSET CORRECTION	19
FIG. 3.7	: SAMPLED WAVEFORM AND NOISE HISTOGRAM AFTER INDEX SAMPLING CORRECTION	20





# **Title:** Mod. DT5742 16+1 Ch. 12 bit 5 GS/s Switched-Capacitor Digitizer

Revision date: Revision:

26/11/2012

Fig. 3.8: Sampled TR0 signal in GR0 and GR1 before time correction	21
Fig. 3.9: Sampled TR0 signal in Group 0 and 1 after time correction	21
Fig. 3.10: INL time profile of DRS chips 0 and 1 before time correction	22
Fig. 3.11: INL time profile of DRS chips 0 and 1 after time correction	22
Fig. 3.12: Event Format	23
Fig. 3.13: Group Data Format	24
FIG. 3.14: BLOCK DIAGRAM OF TRIGGER MANAGEMENT.	26
Fig. 3.15: FPGA test waveform.	28
FIG. 3.16: EXAMPLE OF BLOCK TRANSFER READOUT	31
FIG. 4.1: BLOCK DIAGRAM OF THE SOFTWARE LAYERS	33
Fig. 4.2: WaveDump output waveforms	34
FIG. 4.3: CAENSCOPE OSCILLOSCOPE TAB	34
Fig. 4.4: CAENUpgrader Graphical User Interface	35
FIG. 4.5: DPP CONTROL SOFTWARE GRAPHICAL USER INTERFACE AND ENERGY PLOT	35
LIST OF TABLES	
TABLE 1.1: AVAILABLE ITEMS	8
TABLE 2.2: FRONT PANEL LEDS	13
TABLE 2.3: MOD. DT5742 TECHNICAL SPECIFICATIONS	14
TABLE 5.1: ADDRESS MAP FOR THE MOD. DT5742	36
TABLE 5.2: ROM ADDRESS MAP FOR THE MOD. DT5742	38

User's Manual (MUT)

Mod. DT5742 16+1 Ch. 12 bit 5 GS/s Switched-Capacitor Digitizer

**Revision date:** Revision: 26/11/2012 7

# 1. General description

## 1.1. Overview



Fig. 1.1: Mod. DT5742 Desktop Waveform Digitizer

The Mod. DT5742 is a Desktop module housing 16+1 Channels 12bit 5GS/s Switched Capacitor Digitizer based on DRS4 chip, with 1 Vpp input dynamic range on single ended MCX coaxial connectors.

The DC offset is adjustable via a 16-bit DAC in the  $\pm 1V$  range (channel by channel, or channel-group by channel-group.

The analog input signals are continuously sampled into the DRS4s in a circular analog memory buffer (1024 cells); default sampling frequency is 5GS/s; 2.5GS/s and 1GS/s frequencies can be also programmed. As a trigger signal arrives, all analog memory buffers are frozen and subsequently digitized with a 12bit resolution into a digital memory buffer. The available digital memory versions are 128 events per channel (mod. DT5742) and 1024 events per channel (mod. DT5742B), where 1 event = 1024x12bit) allowing to store subsequent events, even if the readout is not yet started. Moreover, since the digital memory buffers work like FIFOs, the readout activity does not affect write operations of subsequent events.

A common board trigger can be provided via either software, or by TRG-IN input.

A special fast analog trigger input TR0 (TTL/NIM levels compatible), can be used as lolatency external trigger signal. This special input can be also sampled into the DRS4s analog memory buffers for applications where high resolution timing and time analysis with a common reference signal (like a trigger or system clock) is required. During analog to digital conversion process, the DT5742 cannot handles other triggers, this is called Dead Time. This time will be increased if also TR0 channel is added to the acquisition of the analog inputs.

The module DT5742 features a PLL for clock synthesis with a selectable internal or external reference clock source.

Multi-board synchronization can be done by driving a clock on CLOCK-IN input, allowing all DRS4s to run synchronously with this external reference. All analog inputs will be sampled at the same time without time drift, allows high resolution timing and time analysis across multiple DT5742.

The board houses a daisy chainable Optical Link able to transfer data at 80 MB/s, thus it is possible to connect up to 8 ADC boards (256+16 ADC channels) to a single Optical

**NPO:** 00100/09:5742x.MUTx/07

**Filename:** DT5742\_REV7

Number of pages:

51



**Title:** Mod. DT5742 16+1 Ch. 12 bit 5 GS/s Switched-Capacitor Digitizer

Revision date: Revision:

26/11/2012 7

Link Controller; a USB2.0 compatible port is also featured. Optical Link and USB access are internally arbitrated.

Table 1.1: Available items

Code	Description
WDT5742XAAAA	DT5742 - 16+1 Ch. 12 bit 5 GS/s Switched-CapacitorDigitizer: 128 events/ch (1kS/event), EP3C16, SE
WDT5742BXAAA	DT5742B - 16+1 Ch. 12 bit 5 GS/s Switched-Capacitor Digitizer: 1024 events/ch (1kS/event), EP3C16,SE
WA654XAAAAAA	A654 - Single Channel MCX to LEMO Cable Adapter
WA654K4AAAAA	A654 KIT4 - 4 MCX TO LEMO Cable Adapter
WA2818XAAAAA	A2818 - PCI Optical Link
WA3818AXAAAA	A3818 - PCle 1 Optical Link
WA3818BXAAAA	A3818 - PCIe 2 Optical Link
WA3818CXAAAA	A3818 - PCIe 4 Optical Link
WAI2730XAAAA	Al2730 - Optical Fibre 30 m. simplex
WAI2720XAAAA	Al2720 - Optical Fibre 20 m. simplex
WAI2705XAAAA	Al2705 - Optical Fibre 5 m. simplex
WAI2703XAAAA	Al2703 - Optical Fibre 30cm. simplex
WAY2730XAAAA	AY2730 - Optical Fibre 30 m. duplex
WAY2720XAAAA	AY2720 - Optical Fibre 20 m. duplex
WAY2705XAAAA	AY2705 - Optical Fibre 5 m. duplex

Mod. DT5742 16+1 Ch. 12 bit 5 GS/s Switched-Capacitor Digitizer

Revision date: **Revision:** 26/11/2012

#### 1.2. **Block Diagram**

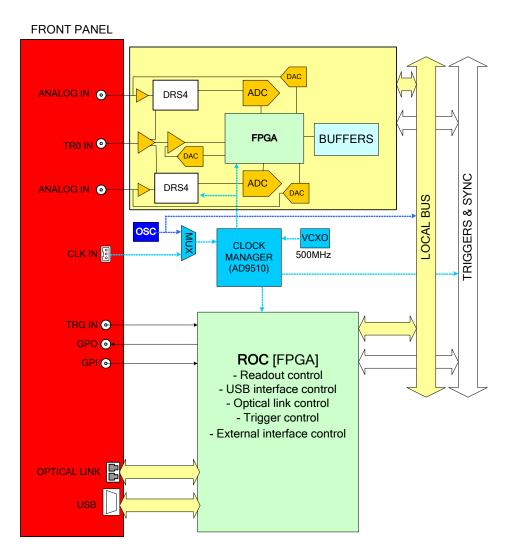


Fig. 1.2: Mod. DT5742 Block Diagram

The function of each block will be explained in detail in the subsequent sections.

00100/09:5742x.MUTx/07

Filename: DT5742\_REV7 Number of pages:

User's Manual (MUT)

Mod. DT5742 16+1 Ch. 12 bit 5 GS/s Switched-Capacitor Digitizer

Revision date: Revision:

26/11/2012

# 2. Technical specifications

## 2.1. Packaging and Compliancy

The unit is a Desktop module housed in a 154x50x164 mm<sup>3</sup> alloy box.

# 2.2. Power requirements

The module is powered by the external AC/DC stabilized power supply provided with the digitizer and included in the delivered kit.

The board's typical power consumption is 1.7A (@+12V).

**Note.:** Using a different power supply source, like battery or linear type, it is recommended the source to provide +12V and, at least, 2A; the power jack is a 2.1mm type, a suitable cable is the RS 656-3816 type (or similar).

## 2.3. Front Panel

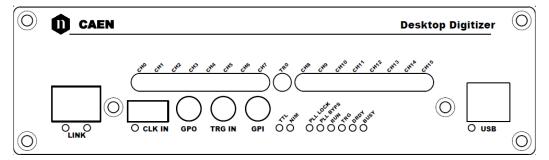


Fig. 2.1: Mod. DT5742 front panel

**Document type:**User's Manual (MUT)

Title:

Mod. DT5742 16+1 Ch. 12 bit 5 GS/s Switched-Capacitor Digitizer

Revision date: Revision:

**Revision date: Rev** 26/11/2012 7

### 2.4. External connectors

### 2.4.1. ANALOG INPUT connectors

### 2.4.2. INPUT connectors



Fig. 2.2: MCX connector

Function:

Analog input, single ended, Zin=50 $\Omega$ ; TR[1,0] (Fast TRG) input, Zin=50 $\Omega$ 

Mechanical specifications:

MCX connector (CS 85MCX-50-0-16 SUHNER)

Suggested plug: MCX-50-2-16 type Suggested cable: RG174 type

### 2.4.3. CONTROL connectors

### Function:

- GPO: General purpose output (NIM/TTL, on Rt =  $50\Omega$ ); used as output for trigger propagation
- TRG IN: External trigger input (NIM/TTL, Zin= 50Ω)
- GPI: General purpose input (NIM/TTL, Zin=50Ω)

Mechanical specifications: 00-type LEMO connectors

### 2.4.4. ADC REFERENCE CLOCK connectors




Fig. 2.3: AMP CLK IN Connector

Function:

CLK IN: External clock/Reference input, AC coupled (diff. LVDS, ECL, PECL, LVPECL, CML), Zdiff=  $110\Omega$ .

Mechanical specifications:

AMP 3-102203-4 AMP MODUII

 NPO:
 Filename:
 Number of pages:
 Page:

 00100/09:5742x.MUTx/07
 DT5742\_REV7
 51
 11

Mod. DT5742 16+1 Ch. 12 bit 5 GS/s Switched-Capacitor Digitizer

**Revision date:** 26/11/2012

**Revision:** 

## 2.4.5. Optical LINK connector

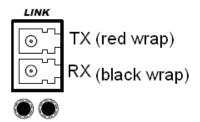


Fig. 2.4: LC Optical Connector

Mechanical specifications:

LC type connector; to be used with Multimode 62.5/125µm cable with LC connectors on both sides

Electrical specifications:

Optical link for data readout and slow control with transfer rate up to 80MB/s; daisy chainable.

### 2.4.6. USB Port

Mechanical specifications:
B type USB connector
Electrical specifications:
USB 2.0 and USB 1.1 compliant

**Document type:** Title: User's Manual (MUT) Mod. DT5

Mod. DT5742 16+1 Ch. 12 bit 5 GS/s Switched-Capacitor Digitizer

Revision date: Revision:

26/11/2012 7

# 2.5. Other components

# 2.5.1. Displays

The front panel hosts the following LEDs:

**Table 2.2: Front panel LEDs** 

Name:	Colour:	Function:
CLK_IN	green	External clock enabled.
NIM	green	Standard selection for GPO, TRG IN, GPI.
TTL	green	Standard selection for GPO, TRG IN, GPI.
USB	green	Data transfer activity
LINK	green/yellow	Network present; Data transfer activity
PLL LOCK	green	The PLL is locked to the reference clock
PLL BYPS	green	The reference clock drives directly ADC clocks; the PLL circuit is switched
		off and the PLL_LOCK LED is turned off.
RUN	green	RUN bit set
TRG	green	Triggers are accepted
DRDY	green	Event/data (depending on acquisition mode) are present in the Output Buffer
BUSY	red	All the buffers are full

 NPO:
 Filename:
 Number of pages:
 Page:

 00100/09:5742x.MUTx/07
 DT5742\_REV7
 51
 13

Page:

14

**Document type:** User's Manual (MUT)

Mod. DT5742 16+1 Ch. 12 bit 5 GS/s Switched-Capacitor Digitizer

**Revision date: Revision:** 

26/11/2012

# **Technical specifications table**

Table 2.3: Mod. DT5742 technical specifications

Package	Desktop module; 154x50x164 mm³ (WxHxD), Weight: 630 gr							
Analog Input	16 channels (MCX 50 Ohm) Single-ended Input range: 1 Vpp Bandwidth: >500MHz Programmable DAC for Offset Adjust x ch. adjustment range: ±1V							
TR0 Input	MCX 50 Ohm, NIM/TTL For fast local trigger and high resolution timing reference							
Switched Capacitor array	Based on DRS4 chip Switched capacitor ADC 1024 storage cells per channels (200 ns recorded time per event) Continuously sampled up to 5 GS/s simultaneously on each channels After trigger analog samples are digitized by external ADC.							
Digital Conversion	Resolution: 12 bit							
Dead Time	110μs Analog inputs only; 181μs Analog inputs + TR0 input							
ADC Sampling Clock generation	Sampling clock generation supports two operating modes: - PLL mode - internal reference (50 MHz local oscillator) - PLL mode - external reference on CLK_IN (Jitter<100ppm, Frequency 50 MHz).							
Digital I/O	CLK_IN (AMP Modu II):  - AC coupled differential input clock LVDS, ECL, PECL, LVPECL, CML (single ended NIM/TTL available on request)  - Jitter<100ppm TRG_IN (LEMO 50 Ohm, NIM/TTL) GPI (LEMO 50 Ohm, NIM/TTL)							
ADC and Memory controller FPGA	1 Altera Cyclone EP3C16 for 16+1 channels							
Memory Buffer	128 event/ch or 1024 event/ch (1024 samples per event) Multi Event Buffer with independent read and write access.							
Trigger	Common Trigger - TRG_IN (External signal) - Software (from USB or Optical Link) Fast local trigger - Programmable threshold on the special input channel TR0							
Optical Link	CAEN proprietary protocol, up to 80 MB/s transfer rate, Daisy chainable: it is possible to connect up to 8/32 ADC modules to a single Optical Link Controller (Mod. A2818/A3818)							
USB interface	USB2.0 compliant Up to 30 MB/s transfer rate							
Upgrade	Firmware can be upgraded via USB/Optical Link							
Software	Libraries (C and LabView), Demos and Software tools for Windows and Linux							

Mod. DT5742 16+1 Ch. 12 bit 5 GS/s Switched-Capacitor Digitizer


**Revision date:** 26/11/2012

**Revision:** 

# 3. Functional description

#### 3.1. **Analog input stage**

Input dynamic is 1Vpp on single ended MCX coaxial connectors (Zin= 50 Ohm). A 16bit DAC allows to add up to ±1V DC offset in order to preserve the full dynamic range also with uni-polar positive or negative input signal. The input bandwidth ranges from DC to 500 MHz.



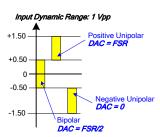


Fig. 3.1: Analog input diagram

00100/09:5742x.MUTx/07

Filename: DT5742\_REV7

Page: Number of pages:

**Document type:** 

User's Manual (MUT)

Mod. DT5742 16+1 Ch. 12 bit 5 GS/s Switched-Capacitor Digitizer

**Revision date: Revision:** 

26/11/2012

#### 3.2. **Domino Ring Sampling**

The analog input signals are continuously sampled into the DRS4s (Domino Ring Sampler), which consists of an on-chip inverter chain (domino wave circuit) generating a maximum 5GS/s sampling frequency; 2.5GS/s and 1GS/s frequencies can be also programmed (see § 5.19). No external sampling clock is required.

This signal opens write switches in all 9 sampling channels, where the differential input signals are sampled (1024 sampling capacitance cells per channel).

After being started, the domino wave runs continuously in a circular fashion (after the end of the ring, samples are over written) until decoupled from the write switches by a trigger signal, which freezes the currently stored signal in the sampling capacitance cells.

Subsequently the cells are multiplexed into the 12 bit ADCs whose output are stored by the FPGA into the Digital Memory Buffer and ready for readout in the shape of events data.

A 16bit DAC allow to add up to ±1V DC offset in order to preserve the full dynamic range also with uni-polar positive or negative input signals

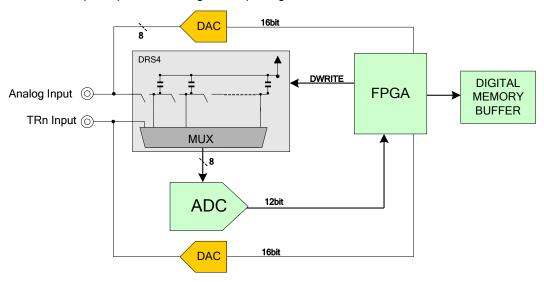


Fig. 3.2: Input diagram

Detailed documentation of the DRS4 is available at http://drs.web.psi.ch/

Filename: 00100/09:5742x.MUTx/07 DT5742\_REV7 Number of pages:

Page:

**Document type:** Title User's Manual (MUT) Mod

Mod. DT5742 16+1 Ch. 12 bit 5 GS/s Switched-Capacitor Digitizer

**Revision date:** Revision: 26/11/2012 7

## 3.3. TR0 Input

The module feature the fast trigger input TR0 with extended level amplitude (TTL/NIM compatible); TR0 is common to all channels. TR0 can be used as external trigger (see § 3.6). Moreover it can be also sampled into the DRS4s analog memory buffers for applications where high resolution timing and time analysis with a common reference signal (like a trigger or system clock) is required; this is achieved through the Configuration Register, "Signal TR0 Readout Enable" bit setting (see § 5.14) allows to store TR0 input with samples coming both from group 0 and 1.

In order to be sampled, the TR0 signal must be compatible with the DRS4 chips input dynamics (1V), therefore on DT5742 mezzanine Rev.0 PCB the TR0 signal is attenuated by a factor 3; on DT5742 mezzanine Rev.1 PCB the TR0 signal is attenuated by a factor 2, therefore if TR0 signal larger than 2V is going to be sampled, an external attenuator shall be used.

To properly handle bipolar signals and also unipolar positive or negative signal, a 16 bit DAC allows to add a DC offset to TR0; offset value can be programmed via Group n TR DC Offset register (see § 5.13)

When the TR0 is used as trigger, it is processed by an internal comparator, whose threshold can be programmed via Group n TR Threshold register (see § 5.12): as the threshold is exceeded, the FPGA triggers the DRS4's and samples digitizing takes place. The trigger signals can be sensed either on the leading or the trailing edge, depending on Configuration register setting (see § 5.14).

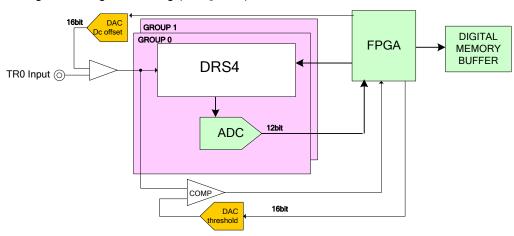


Fig. 3.3: TR0 logic block diagram

**NPO: Filename:** 00100/09:5742x.MUTx/07 DT5742\_REV7

Number of pages:

Page:

**Document type:**User's Manual (MUT)

Title:

Mod. DT5742 16+1 Ch. 12 bit 5 GS/s Switched-Capacitor Digitizer

**Revision date:** Revision: 26/11/2012 7

### 3.4. Clock Distribution

The module features a PLL for clock synthesis with a selectable internal or external reference clock source.

Multi-board synchronization can be done by driving a clock on CLOCK-IN input, allowing all DRS4s to run synchronously with this external reference. All analog inputs will be sampled at the same time without time drift, allows high resolution timing and time analysis across multiple modules.

The module clock is provided by OSC-CLK and REF-CLK.

OSC-CLK is a fixed 50MHz clock provided by an on board oscillator; it handles Optical Link, USB and Local Bus (communication between motherboard and mezzanine boards; see red traces in the figure below).

REF-CLK handles trigger logic, acquisition logic (samples storage into RAM, buffer freezing on trigger) through a clock chain. Such domain can use either an external (via front panel signal) or an internal (via local oscillator) source; in the latter case OSC-CLK and REF-CLK will be synchronous (the operation mode remains the same anyway).

REF-CLK is processed by AD9520 device, which delivers clock out signals to to ADCs, and to the trigger logic (refer to AD9520 data sheet for more details, available on <a href="http://www.analog.com/">http://www.analog.com/</a>

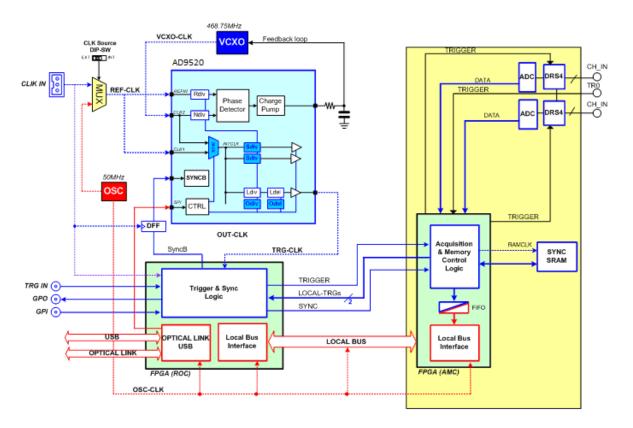


Fig. 3.4: Clock distribution diagram

 NPO:
 Filename:
 Number of pages:
 Page:

 00100/09:5742x.MUTx/07
 DT5742\_REV7
 51
 18

User's Manual (MUT)

Mod. DT5742 16+1 Ch. 12 bit 5 GS/s Switched-Capacitor Digitizer

Revision date: **Revision:** 26/11/2012

#### 3.5. Data correction

Three types of data correction are required, in order to compensate for unavoidable construction differences in the DRS4 chips. All boards are factory calibrated during production test and correction parameters are saved on board. Application software provided by CAEN recovers automatically the calibration parameters and runs them in order to correct the stored data events.

#### 3.5.1. Cell offset correction

Unavoidable construction differences between the "analog memory cells" (see § 3.1) require an amplitude calibration algorithm.

The following images show the sampled waveform and noise histogram before and after correction:

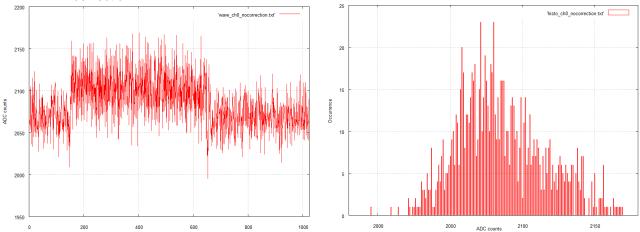


Fig. 3.5: Sampled waveform and noise histogram before cell offset correction

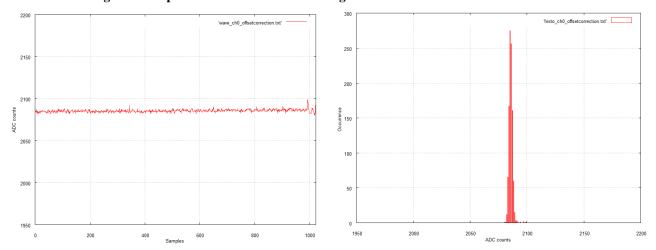


Fig. 3.6: Sampled waveform and noise histogram after cell offset correction

Filename: Number of pages: Page: 00100/09:5742x.MUTx/07 DT5742\_REV7 19

Page:

20

**Document type:** Title: User's Manual (MUT) Mod.

Mod. DT5742 16+1 Ch. 12 bit 5 GS/s Switched-Capacitor Digitizer

 Revision date:
 Revision:

 26/11/2012
 7

## 3.5.2. Index sampling correction

It has been observed a fixed pattern noise, introduced by the DRS4, over the last samples (~30 samples) in a waveform, therefore the "index sampling correction" is necessary; this correction actually reduces this noise, thus, anytime the best accuracy is required, the last ~30 samples should be rejected.

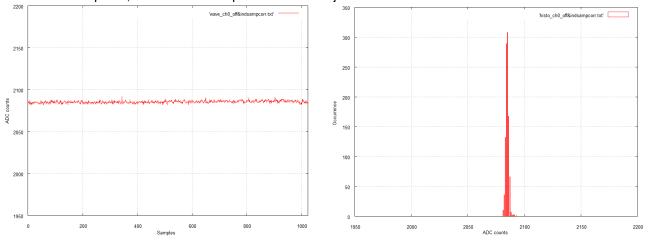


Fig. 3.7: Sampled waveform and noise histogram after index sampling correction

 NPO:
 Filename:
 Number of pages:

 00100/09:5742x.MUTx/07
 DT5742\_REV7
 51

User's Manual (MUT)

Mod. DT5742 16+1 Ch. 12 bit 5 GS/s Switched-Capacitor Digitizer

Revision date: 26/11/2012

Revision:

#### 3.5.3. Time correction

The sampling sequence is handled by the DRS4 through 1024 physical delay lines; the unavoidable construction differences between such delay lines must be compensated through a time calibration. The following figures show the fast trigger signal (TR0) sampled by the DRS chip related to Group 0 and 1 and the integral non linearity (INL) time profile of DRS chips, before and after correction:

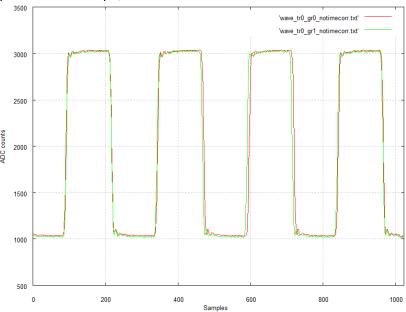


Fig. 3.8: Sampled TR0 signal in GR0 and GR1 before time correction

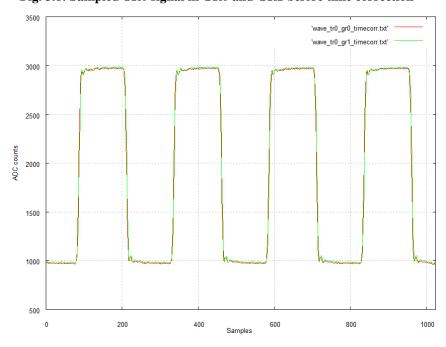


Fig. 3.9: Sampled TR0 signal in Group 0 and 1 after time correction

Filename: 00100/09:5742x.MUTx/07 DT5742\_REV7 Number of pages:

Page:

Mod. DT5742 16+1 Ch. 12 bit 5 GS/s Switched-Capacitor Digitizer

**Revision date:** 26/11/2012

**Revision:** 

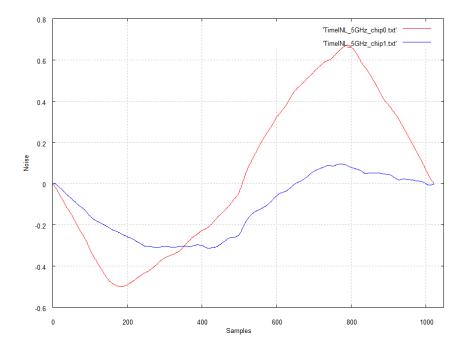


Fig. 3.10: INL time profile of DRS chips 0 and 1 before time correction

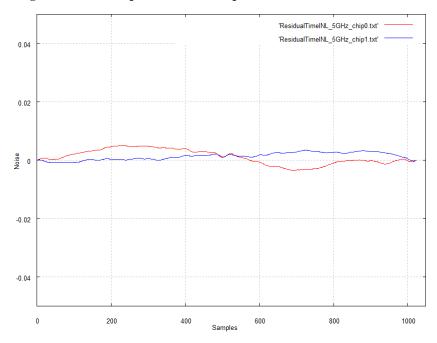


Fig. 3.11: INL time profile of DRS chips 0 and 1 after time correction

Mod. DT5742 16+1 Ch. 12 bit 5 GS/s Switched-Capacitor Digitizer

Revision date: Revision:

26/11/2012 7

## 3.6. Event structure

An event is structured as follows:

- Header (four 32-bit words)
- Data (variable size and format)

The event can be readout either via USB or Optical Link; data format is 32 bit word.

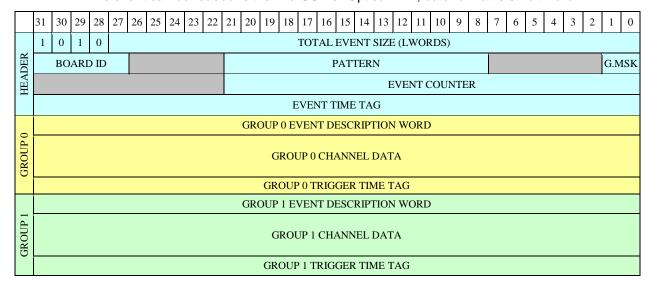


Fig. 3.12: Event Format

The Header is composed by four words, namely:

- Size of the event (number of 32 bit words)
- Board ID (GEO); 16 bit pattern, latched on the LVDS I/O as one trigger arrives; Group Mask (=1: Groups participating to event; ex GR0 and GR1 participating → Gr\_Mask: 0x3, this information must be used by the software to acknowledge what Group the samples are coming from; the first event contains the samples from the Group with the lowest number)
- Event Counter: It is the trigger counter; it can count either accepted triggers only, or all triggers (see § 5.18).
- Trigger Time Tag: It is a 32 bit counter (31 bit count + 1 overflow bit), which is reset as acquisition starts and is incremented at each sampling clock hit. It is the trigger time reference.

Each group is composed by 8 analog channels (group 0 = channel 0 - 7, group 1 = channel 8 - 15) and by the special channel TR0: such signal is common to both groups; it can be used as Local Trigger or "digitized" and stored with the data for high resolution timing analysis between the ADC channels and the TR0 itself.

TR0 can trigger Group 0 and Group 1 and can be stored with data from Group 0 (therefore the stored waveform will be labelled as Tr00) and with data from Group 1 (therefore the stored waveform will be labelled as Tr01).

 NPO:
 Filename:
 Number of pages:
 Page:

 00100/09:5742x.MUTx/07
 DT5742\_REV7
 51
 23

Mod. DT5742 16+1 Ch. 12 bit 5 GS/s Switched-Capacitor Digitizer

Revision date: Revision:

26/11/2012 7

### The part of an event related to each group has the following format (example of Group 0):

31	3	0 29	28	27	26	25	24	23	3 22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	1 3	2	1	0
0	(	0		S	STAR	ΓINI	DEX	CE	ELL			0	0	FR	EQ	0	0	0	TR	SIZE CH 07											
			SO-CH	I2 (I	LO)								S0-CH1 S0-CH0																		
S0-CH5(LO) S0-CH4																	S0-0	СНЗ						S0-	CH2(	HI)					
					S0-0	CH7											S0-0	СН6								S	0-0	CH5(F	H)		
			S1-CH	I2 (L	LO)								S1-0	CH1											S1-	CH0					
S	1-0	CH5(I	LO)						S1-0	CH4											S1-0	СНЗ						S1-	CH2(	HI)	
					S1-0	CH7											S1-0	СН6								S	1-0	CH5(F	II)		
				:	S(N-1)	)-CH	[7									S	(N-1	)-CH	<b>I</b> 6							S(N	<b>V</b> -1	)-CH5	(HI)		
		S	2-TR	00 (1	LO)								S1-7	R00										S0-TR00							
S	5-T	R00(	LO)						S4-T	R00											S3-T	R00				S1-CH2(HI)   S1-CH5(HI)   S(N-1)-CH5(HI)   S0-TR00   S2-TR00(HI)   S5-TR00(HI)					
	S7-TR00											S6-T	R00								S	5-7	R00(1	HI)							
	S(N-1)- TR00								S(N-2)- TR00									S(N-3)- TR00(HI)													
31	3	30												Tl	RIGO	BER	ΤΙΜΙ	ЕТА	.G												

Fig. 3.13: Group Data Format

In the Group Event Description Word (yellow in the figure above) the following fields are shown:

- Bit [29:20] Start Index Cell of DRS4 related to this event
- Bit [17:16] (sampling frequency):
  - 00 = 5GS/s
  - 01 = 2.5GS/s
  - 10 = 1GS/s
  - 11 = not used
- Bit [12] (tr):
- 0 = TR0 signal not present in readout
- 1 = TR0 signal present in readout
- Bit [11:0] Size related to channel 0-7 (number of 32 bit words): when each channel has 1024 samples, "Size Ch 0-7" is 0xC00.

If readout of TR0 is disabled, data related to such channel (light blue in figure above) are not present in the event; if readout of TR0 is enabled, data size related to such channel is Size TR0 = (Size Ch 0-7)/8.

Trigger Time Tag records the Trigger arrival time; each bin has a 8.5ns width.

 NPO:
 Filename:
 Number of pages:
 Page:

 00100/09:5742x.MUTx/07
 DT5742\_REV7
 51
 24



Mod. DT5742 16+1 Ch. 12 bit 5 GS/s Switched-Capacitor Digitizer

Revision date: Revision:

26/11/2012 7

### 3.6.1. Memory FULL management

Bit5 of Acquisition Control register (see § 5.21), allows to select Memory FULL management mode:

In Normal Mode the board becomes full, whenever all buffers are full; otherwise ("Always one buffer free" mode) it is possible to always keep one buffer free: board becomes full, whenever N-1buffers are full; with N = nr. of blocks.

In Normal Mode, the board waits until one buffer is filled since FULL status is exited (whether the trigger is overlapped or not). The board exits FULL status at the moment which the last datum from the last channel participating to the event is read.

In "Always one buffer free" mode, one buffer cannot be used (therefore it is NOT POSSIBLE, with this mode, to set Buffer Code to 0000; see § 5.18), but this allows to eliminate dead time when FULL status is exited.

**NPO: Filename:** 00100/09:5742x.MUTx/07 DT5742\_REV7

Number of pages: Page: 51 25

**Document type:**User's Manual (MUT)

Title:
Mod. DT5742 16+1 Ch. 12 bit 5 GS/s Switched-Capacitor Digitizer

Revision date: Revision:

26/11/2012 7

# 3.7. Trigger management

Signal digitization can be triggered basically in two ways:

- Common trigger: a trigger produced via software (via USB or Optical Link) or sent via front panel TRG\_IN signal (NIM/TTL signal on LEMO connector, 50 Ohm impedance.). In this case, all the channels in a board share the same trigger.
- Low latency trigger: a logic level fed directly into the DRS4 via the front panel TR0 signal.

As a trigger signal arrives, the analog buffers related to that trigger, are frozen and then digitized with a 12bit resolution ADC into the digital memory buffer.

During analog to digital conversion process, the module cannot handles other triggers; this "Dead Time" is larger if also TR0 input channel is sampled together with the analog inputs (see §3.3).

The TR0 is actually an analog input, but it is also TTL/NIM compatible; in order to use it as low latency external trigger signals, it is necessary to set properly the Configuration Register "Local TR0 Trigger Enable" bit (see §3.3).

Once the acquisition is triggered in one of the ways described above, digitization takes place as described in § 3.2.

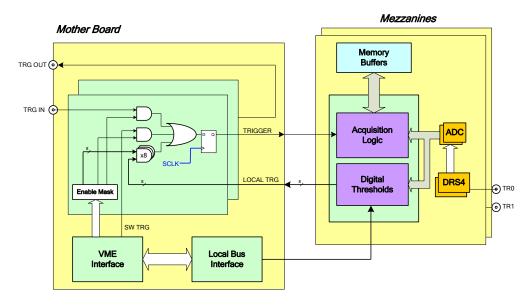


Fig. 3.14: Block diagram of Trigger management

**NPO: Filename:** 00100/09:5742x.MUTx/07 DT5742\_REV7

Number of pages:

Page:



Mod. DT5742 16+1 Ch. 12 bit 5 GS/s Switched-Capacitor Digitizer

**Revision date:** Revision: 26/11/2012 7

### 3.7.1. Trigger distribution

The OR of all the enabled trigger sources, after being synchronized with the internal clock, becomes the global trigger of the board and is fed in parallel to all the channels, which store an event.

A Trigger Out is also generated on the relevant front panel TRG\_OUT connector (NIM or TTL), and allows to extend the trigger signal to other boards.

For example, in order to start the acquisition on all the channels in the chain, as one of the channels ramps over threshold, the Local Trigger must be enabled as Trigger Out, the Trigger Out must then be fed to a Fan Out unit; the obtained signal has to be fed to the External Trigger Input of all the boards in the chain (including the board which generated the Trigger Out signal).

**NPO:** 00100/09:5742x.MUTx/07

**Filename:** DT5742\_REV7


Number of pages:

**Revision date:** Revision: 26/11/2012 7

# 3.8. Test pattern generator

The FPGA can emulate the ADC and write into memory a sawtooth signal for test purposes. It can be enabled via Group Configuration register, see § 5.13.

The following figure shows the test waveforms for Group 0 (Ch 0..7) and Group 1 (Ch 8..15) respectively.

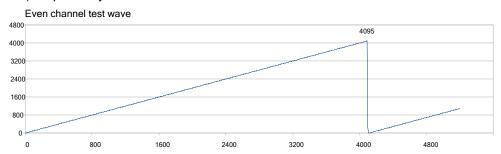



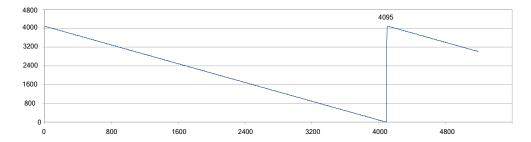


Fig. 3.15: FPGA test waveform

Since an event is made up of up to 1024 samples, the test event samples only a "portion" of the sawtooth; the start point of the sampling can be programmed via Initial Test Wave Value register (see § 5.19); for example if this register is set to 0x0FF then the channels in the Group 0 samples the ramp between 255 and 1278; the channels in the Group 1 instead samples the complementary value, therefore between 3840 and 2817.

**Document type:** Title User's Manual (MUT) Mod

Mod. DT5742 16+1 Ch. 12 bit 5 GS/s Switched-Capacitor Digitizer

**Revision date:** Revision: 26/11/2012 7

# 3.9. Reset, Clear and Default Configuration

### 3.9.1. Global Reset

Global Reset is performed at Power ON of the module or via a Software Reset, see § 5.42. It allows to clear the data off the Output Buffer, the event counter and performs a FPGAs global reset, which restores the FPGAs to the default configuration. It initializes all counters to their initial state and clears all detected error conditions.

## 3.9.2. Memory Reset

The Memory Reset clears the data off the Output Buffer.

The Memory Reset can be forwarded via a write access to Software Clear Register (see § 5.43).

**NPO:** 00100/09:5742x.MUTx/07

**Filename:** DT5742\_REV7

Number of pages:

51

Mod. DT5742 16+1 Ch. 12 bit 5 GS/s Switched-Capacitor Digitizer

**Revision date:** Revision: 26/11/2012 7

## 3.10. Data transfer capabilities

The board supports 32bit single data readout and block transfers; the events, once written in the SRAMs (Memory Event Buffers), become available for readout via USB or Optical Link. During the memory readout, the board can continue to store more events (independently from the readout) on the free buffers. The acquisition process is therefore "deadtimeless", until the memory becomes full.

Although the memories are SRAMs, addresses are taken them from a FIFO. Therefore, data are read from the memories sequentially, according to the selected Readout Logic, from a memory space mapped on 4Kbytes (0x0000÷0x0FFC).

The events are readout sequentially and completely, starting from the Header of the first available event, followed by the Trigger Time Tag, the Event Counter and all the samples of the group channels (from 0 to 7). Once an event is completed, the relevant memory buffer becomes free and ready to be written again (old data are lost). After the last word in an event, the first word (Header) of the subsequent event is readout. It is not possible to readout an event partially.

### 3.10.1.1. Single data transfer

This mode allows to readout a word per time, from the header (actually 4 words) of the first available event, followed by all the words until the end of the event, then the second event is transferred. The exact sequence of the transferred words is shown in § 3.6.

We suggest, after the 1<sup>st</sup> word is transferred, to check the Event Size information and then do as many cycles as necessary (actually Event Size -1) in order to read completely the event.

**NPO:** 00100/09:5742x.MUTx/07

**Filename:** DT5742\_REV7

Number of pages:

51

**Document type:**User's Manual (MUT)

Title:

Mod. DT5742 16+1 Ch. 12 bit 5 GS/s Switched-Capacitor Digitizer

**Revision date:** Revision: 26/11/2012 7

### 3.10.1.2. Block transfers

Block transfer allows, via a single channel access, to read N events in sequence, N is set via the Block Transfer Event Number register (see § 5.40).

```
[Event Size] = [2*(Group Size)] + [16 bytes]
```

Group Size depends on Custom Size setting (see § 5.18) and whether TR0 signal is stored in the event or not.

Then it is necessary to perform as many cycles as required in order to readout the programmed number of events.

We suggest to enable Bus error signal during Block transfer cycles, in order to end the cycle avoiding filler readout. The last Block transfer cycle will not be completed, it will be ended by Bus error signal after the #N event in memory is transferred (see example in the figure below).

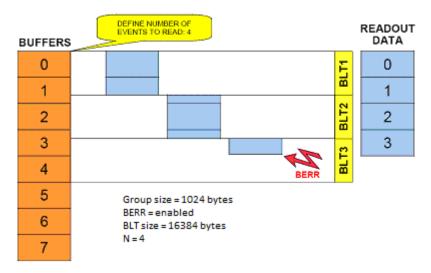


Fig. 3.16: Example of Block transfer readout

### 3.10.2. Event Polling

A read access to Event Size register (see § 5.35) allows "polling" the number of 32 bit words composing the next event to be read: this permits to perform a properly sized (according to the Event Size information) Block transfer readout from the Memory Event Buffer.

**NPO:** 00100/09:5742x.MUTx/07

**Filename:** DT5742\_REV7

Number of pages:

51

Page:

32



**Document type:** User's Manual (MUT)

Mod. DT5742 16+1 Ch. 12 bit 5 GS/s Switched-Capacitor Digitizer

**Revision date:** Revision: 26/11/2012 7

# 3.11. Optical Link and USB access

The board houses a USB2.0 compliant port, providing a transfer rate up to 30 MB/s, and a daisy chainable Optical Link able to transfer data at 80 MB/s; the latter allows to connect up to eight DT5742 to a single Optical Link Controller: for more information, see <a href="https://www.caen.it">www.caen.it</a> (path: <a href="https://products//pro

The parameters for read/write accesses via optical link are Address Modifier, Base Address, data Width, etc; wrong parameter settings cause Bus Error.

Control Register bit 3 allows to enable the module to broadcast an interrupt request on the Optical Link; the enabled Optical Link Controllers propagate the interrupt on the PCI bus as a request from the Optical Link is sensed.

 NPO:
 Filename:
 Number of pages:

 00100/09:5742x.MUTx/07
 DT5742\_REV7
 51

Mod. DT5742 16+1 Ch. 12 bit 5 GS/s Switched-Capacitor Digitizer 26/11/2012

Revision date:

Revision:

# 4. Software tools

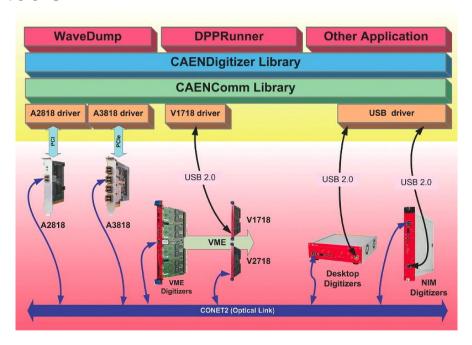


Fig. 4.1: Block diagram of the software layers

CAEN provides drivers for both the physical communication channels (USB and the proprietary CONET Optical Link managed by the A2818 PCI card or A3818 PCIe cards; see § 6.4), a set of C and LabView libraries, demo applications and utilities. Windows and Linux are both supported. The available software is the following:

- CAENComm library contains the basic functions for access to hardware; the aim of this library is to provide a unique interface to the higher layers regardless the type of physical communication channel. The CAENComm requires the CAENVMELib library to be installed even in the cases where the VME is not used.
- CAENDigitizer is a library of functions designed specifically for the digitizer family and it supports also the boards running special DPP (Digital Pulse Processing) firmware. The purpose of this library is to allow the user to open the digitizer, program it and manage the data acquisition in an easy way: with few lines of code the user can make a simple readout program without the necessity to know the details of the registers and the event data format. The CAENDigitizer library implements a common interface to the higher software layers, masking the details of the physical channel and its protocol, thus making the libraries and applications that rely on the CAENDigitizer independent from the physical layer. The library is based on the CAENComm library that manages the communication at low level (read and write access). CAENVMELib and CAENComm libraries must be already installed on the host PC before installing the CAENDigitizer; however, both CAENVMELib and CAENComm libraries are completely transparent to the user.

**NPO:** 00100/09:5742x.MUTx/07

**Filename:** DT5742\_REV7

Number of pages:

Mod. DT5742 16+1 Ch. 12 bit 5 GS/s Switched-Capacitor Digitizer

Revision date: Revision:

26/11/2012

WaveDump is a Console application that allows to program the digitizer (according to a text configuration file that contains a list of parameters and instructions), to start the acquisition, read the data, display the readout and trigger rate, apply some post processing (such as FFT and amplitude histogram), save data to a file and also plot the waveforms using the external plotting tool "gnuplot", available on internet for free. This program is quite basic and has no graphics but it is an excellent example of C code that demonstrates the use of libraries and methods for an efficient readout and data analysis. NOTE: WaveDump does not work with digitizers running DPP firmware. The users who intend to write the software on their own are suggested to start with this demo and modify it according to their needs. For more details please see the WaveDump User Manual and Quick Start Guide (Doc nr.: UM2091, GD2084 ).

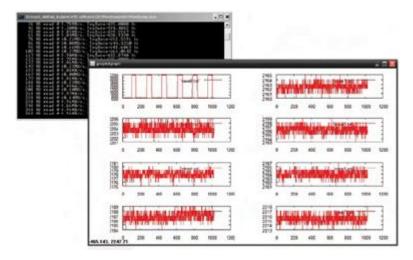


Fig. 4.2: WaveDump output waveforms

CAENScope is a fully graphical program that implements a simple oscilloscope: it allows to see the waveforms, set the trigger thresholds, change the scales of time and amplitude, perform simple mathematical operations between the channels, save data to file and other operations. CAENscope is provided as an executable file; the source codes are not distributed. NOTE: CAENScope does not work with digitizers running DPP firmware and it is not compliant with x742 digitizer family. For more details please see the CAENScope Quick Start Guide GD2484.



Fig. 4.3: CAENScope oscilloscope tab

Filename: Number of pages: Page: 00100/09:5742x.MUTx/07 DT5742\_REV7 34

**Document type:** 

User's Manual (MUT)

Mod. DT5742 16+1 Ch. 12 bit 5 GS/s Switched-Capacitor Digitizer

Revision date: Revision: 26/11/2012 7

CAENUpgrader is a software composed of command line tools together with a Java Graphical User Interface (for Windows and Linux OS). CAENUpgrader allows in few easy steps to upload different firmware versions on CAEN boards, to upgrade the VME digitizers PLL, to get board information and to manage the firmware license. CAENUpgrader requires the installation of 2 CAEN libraries (CAENComm, CAENVMELib) and Java SE6 (or later). CAENComm allows CAENUpgrader to access target boards via USB or via CAEN proprietary CONET optical link.



Fig. 4.4: CAENUpgrader Graphical User Interface

DPP Control Software is an application that manages the acquisition in the digitizers which have DPP firmware installed on it. The program is made of different parts: there is a GUI whose purpose is to set all the parameters for the DPP and for the acquisition; the GUI generates a textual configuration file that contains all the parameters. This file is read by the Acquisition Engine (DPPrunner), which is a C console application that programs the digitizer according to the parameters, starts the acquisition and manage the data readout. The data, that can be waveforms, time stamps, energies or other quantities of interest, can be saved to output files or plotted using gnuplot as an external plotting tool, exactly like in WaveDump. NOTE: so far DPP Control Software is developed for Mod. x724 and Mod. x720 digitizer series.

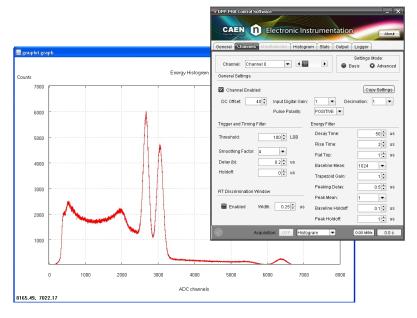


Fig. 4.5: DPP Control Software Graphical User Interface and Energy plot

 NPO:
 Filename:
 Number of pages:
 Page:

 00100/09:5742x.MUTx/07
 DT5742\_REV7
 51
 35

User's Manual (MUT)

Mod. DT5742 16+1 Ch. 12 bit 5 GS/s Switched-Capacitor Digitizer

Revision date: **Revision:** 

26/11/2012

# 5. Board internal registers

The following sections will describe in detail the registers (accessible via software in 32bit r/w mode) content.

Registers whose name begins with "Group n", are referred to channel groups, with index "n" in the address is either 0 or 1; each group is composed by eight subsequent channels

N.B.: bit fields that are not described in the register bit map are reserved and must not be over written by the User.

Table 5.1: Address Map for the Mod. DT5742

REGISTER NAME	ADDRESS	MODE	H,	RES	S_RI	ES	CLR
EVENT READOUT BUFFER	0x0000-0x0FFC	R		Х	Х		Х
Group n Channel THRESHOLD	0x1n80	R/W		Х	Х		
Group n STATUS	0x1n88	R		Х	Х		
Daughter board FW revision	0x1n8C	R					
Group n BUFFER OCCUPANCY	0x1n94	R		Χ	Х		Х
Group n Channel DC offset	0x1n98	R/W		X	Х		
Group n DAC SEL	0x1nA4	R/W		Χ	Х		
DRS4 n Temperature	0x1nA0	R		Х	Х		
Group n CH. TRIG ENABLE MASK	0x1nA8	R/W		Χ	Х		
Memory Calib. Tab. ENABLE	0x1nCC	R/W		Х	Х		
Memory Calib. Tab. DATA	0x1nD0	R/W		Х	Х		
Group n TR THRESHOLD	0x1nD4	R/W		Х	Х		
Group n TR DC offset	0x1nDC	R/W		Χ	Х		
Group CONFIGURATION	0x8000	R/W		Х	Х		
Group CONFIG. BIT SET	0x8004	W		Х	Х		
Group CONFIG. BIT CLEAR	0x8008	W		Х	Х		
BUFFER ORGANIZATION	0x800C	R/W		Χ	Х		
CUSTOM SIZE	0x8020	R/W		Х	Х		
INITIAL TEST WAVE	0x807C	R/W		Χ	Х		
SAMPLING FREQUENCY	0x80D8	R/W		Х	Х		
ACQUISITION CONTROL	0x8100	R/W		Χ	Х		
ACQUISITION STATUS	0x8104	R		Х	Х		
SW TRIGGER	0x8108	W					
TRIG. SOURCE ENABLE MASK	0x810C	R/W		Х	Х		
FRONT PAN. TRIG_OUT EN. MASK	0x8110	R/W		Χ	Х		
POST TRIGGER SETTING	0x8114	R/W		Χ	Х		
FRONT PANEL I/O DATA	0x8118	R/W		X	Х		
FRONT PANEL I/O CONTROL	0x811C	R/W		X	Х		
Group ENABLE MASK	0x8120	R/W		X	Х		
ROC FPGA FIRMWARE REVISION	0x8124	R					
EVENT STORED	0x812C	R		X	Х		Х
SET MONITOR DAC	0x8138	R/W		X	Х		
BOARD INFO	0x8140	R					
MONITOR MODE	0x8144	R/W		X	X		





Title: Mod. DT5742 16+1 Ch. 12 bit 5 GS/s Switched-Capacitor Digitizer **Revision date:** 26/11/2012 **Revision:** 

REGISTER NAME	ADDRESS	MODE	H_RES	S_RES	CLR
EVENT SIZE	0x814C	R	Х	Х	Х
CONTROL	0xEF00	R/W	Х		
STATUS	0xEF04	R			
INTERRUPT STATUS ID	0xEF14	R/W	Х		
INTERRUPT EVENT NUMBER	0xEF18	R/W	Х	Х	
BLOCK TR. EVENT NUMBER	0xEF1C	R/W	Х	Х	
SCRATCH	0xEF20	R/W	Х	Х	
SW RESET	0xEF24	W			
SW CLEAR	0xEF28	W			
FLASH ENABLE	0xEF2C	R/W	Х		
FLASH DATA	0xEF30	R/W	Х		
CONFIGURATION RELOAD	0xEF34	W			
CONFIGURATION ROM	0xF000-0xF3FC	R			

**Document type:**User's Manual (MUT)

Title:
Mod. DT5742 16+1 Ch. 12 bit 5 GS/s Switched-Capacitor Digitizer

**Revision date:** Revision: 26/11/2012 7

# 5.1. Configuration ROM (0xF000-0xF084; r)

The following registers contain some module's information, they are 32bit accessible (read only):

• **OUI**: manufacturer identifier (IEEE OUI)

Version: purchased versionBoard ID: Board identifier

Revision: hardware revision identifier

Serial MSB: serial number (MSB)Serial LSB: serial number (LSB)

Table 5.2: ROM Address Map for the Mod. DT5742

Description	Address	Content
checksum	0xF000	0xA4
checksum_length2	0xF004	0x00
checksum_length1	0xF008	0x00
checksum_length0	0xF00C	0x20
constant2	0xF010	0x83
constant1	0xF014	0x84
constant0	0xF018	0x01
c_code	0xF01C	0x43
r_code	0xF020	0x52
oui2	0xF024	0x00
oui1	0xF028	0x40
oui0	0xF02C	0xE6
vers	0xF030	DT5742: 0x70 DT5742B: 0x71
board2	0xF034	0x02
board1	0xF038	0x16
board0	0xF03C	0x6E
revis3	0xF040	0x00
revis2	0xF044	0x00
revis1	0xF048	0x00
revis0	0xF04C	0x01
sernum1	0xF080	0x00
sernum0	0xF084	0x16

These data are written into one Flash page; at Power ON the Flash content is loaded into the Configuration RAM, where it is available for readout.

# 5.2. Group n Channel Threshold (0x1n80; r/w)

Bit	Function
[31:0]	reserved

Page:

**Document type:** Title:
User's Manual (MUT) Mod. DT574

Mod. DT5742 16+1 Ch. 12 bit 5 GS/s Switched-Capacitor Digitizer

**Revision date: Revision:** 26/11/2012 7

## 5.3. **Group n Status (0x1n88; r)**

Bit	Function
[9]	Mezzanine PCB rev: 1 = 1
	0 = 0
[8]	DRS Chips Busy
[7]	Group Odd PLL Lock
[6]	Group Even PLL Lock
[5]	reserved
[4]	Group Odd Enable
[3]	Group Even Enable
[2]	SPI Bus Busy: 1 = Busy 0 = SPI ready
[1]	Memory empty
[0]	Memory full

### 5.4. Daughter board FW revision (0x1n8C; r)

Bit	Function
[31:16]	Revision date in Y/M/DD format
[15:8]	Firmware Revision (X)
[7:0]	Firmware Revision (Y)

Bits [31:16] contain the Revision date in Y/M/DD format.

Bits [15:0] contain the firmware revision number coded on 16 bit (X.Y format).

Example: revision 1.3 of 12<sup>th</sup> June 2010 is: 0xA6120103

# 5.5. Group n Channel DC offset (0x1n98; r/w)

Bit	Function
[19:16]	Channel index from 0x0 to 0x7 (only one DAC ch.) or 0xF (all DAC ch.)
[15:0]	DAC Data

The input DC offset can be adjusted group per group and channel per channel by means of a programmable 16bit DAC; there is a DAC serving each group (8 channels).

Default value 0x8F00 (about 0mV, for input bipolar signals.)

The channel index field (bits [19:16]) is used only in write access. In read access, channel index must be set on CH DAC SEL register (see Channel DAC Select register).

For example, in order to set the DAC Value 0x6C00 for channel 15 (channel 7 of group 1) a write access to address 0x1198 with value 0x76C00 must be performed.

In order to readout the channel 15 DAC Value, a write access to address 0x11A4 with value 0x7 must be performed, and then a read access to address 0x1198.

**WARNING:** Before writing this register it is necessary to check that the "SPI Bus Busy" flag in the Status Register (§ 0) is set to "0", otherwise the process of writing will not give error messages out but it will not run properly!

 NPO:
 Filename:
 Number of pages:

 00100/09:5742x.MUTx/07
 DT5742\_REV7
 51

User's Manual (MUT)

**Title:** Mod. DT5742 16+1 Ch. 12 bit 5 GS/s Switched-Capacitor Digitizer

Revision date: Revision:

26/11/2012

# 5.6. Group n ADC Configuration (0x1n9C; r/w)

Bit	Function
[31:0]	reserved

### 5.7. DRS4 temperature (0x1nA0; r)

Bit	Function
[7:0]	DRS4 temperature from 0°C to 127°C

### 5.8. Channel n DAC SEL (0x1nA4; r/w)

Bit	Function
[3:0]	DAC Channel index for readout, from 0x0 to 0x7.

For example, in order to read the channel 15 DAC Value, a write access to address 0x11A4 with value 0x7 (channel 15 is channel 7 of group 1) must be performed, and then a read access to address 0x1198.

### 5.9. Group n Channel Trigger Mask (0x1nA8; r/w)

Bit	Function
[31:0]	reserved

# 5.10. Memory Calibration Tables Enable (0x1nCC; r/w)

Bit	Function
[0]	1 = Memory Calibration Tables ENABLED 0 = Memory Calibration Tables DISABLED

This register allows to access the memory location where calibration data are stored (see § 3.5). CAUTION: before writing this register it is necessary to verify that SPI Bus Busy Flag in the Status register (§ 0) is 0 and, in any case, its use is reserved to experienced Users, since a wrong value written in the Memory Calibration Data will erase the module's calibration pattern.

# 5.11. Memory Calibration Tables Data (0x1nD0; r/w)

	Bit	Function
Ī	[7:0]	Data to be serialized or read from Memory Tables calibration

This register allows to access the memory location where calibration data are stored (see § 3.5). CAUTION: before writing this register it is necessary to verify that SPI Bus Busy Flag in the Status register (§ 0) is 0 and, in any case, its use is reserved to experienced Users, since a wrong value written in the Memory Calibration Data will erase the module's calibration pattern.

**NPO:** 00100/09:5742x.MUTx/07

**Filename:** DT5742\_REV7

Number of pages:

40

Page:



Title:

Mod. DT5742 16+1 Ch. 12 bit 5 GS/s Switched-Capacitor Digitizer

Revision date: Revision:

26/11/2012 7

### 5.12. Group n TR Threshold (0x1nD4; r/w)

Bit	Function
[15:0]	Threshold

The threshold on TR0 for local trigger generation can be set by a programmable 16bit DAC. One TR0 signal is common to two groups, therefore, for example write access to either 0x10D4 or 0x11D4 leads to the same setting for TR0 input.

For TR0 Threshold setting example, see the paragraph below.

**WARNING:** Before writing this register it is necessary to check that the "SPI Bus Busy" flag in the Status Register (§ 0) is set to "0", otherwise the process of writing will not give error messages out but it will not run properly!

Mezzanine PCB Rev.0

Mod. DT5742 16+1 Ch. 12 bit 5 GS/s Switched-Capacitor Digitizer

Revision date: Revision:

26/11/2012 7

# 5.13. Group n TR DC offset (0x1nDC; r/w)

I	Bit	Function
	[15:0]	DC Offset

The TR0 signal offset can be set by a programmable 16bit DAC.

TR0 signal is common to both groups, therefore, for example write access to either 0x10DC or 0x11DC leads to the same setting for TR0 input.

If you are sending bipolar or negative signal to TR0, you have to set the TR0 Offset to 0x1000 (default setting); if you are sending positive signal to TR0, you have to set the TR0 Offset to 0x4000.

TR0 setting examples (trigger level on half voltage swing):

Mezzanine PCB Rev.1
ECL signal on TR0
TR0 DC Offset = 0x55A0 (write 0x55A0 at address 0x10DC or 0x11DC) TR0 Threshold = 0x6666 (write 0x6666 at address 0x10D4 or 0x11D4)
NIM signal on TR0
TR0 DC Offset = 0x8000 (write 0x8000 at address 0x10DC or 0x11DC) TR0 Threshold = 0x51C6 (write 0x51C6 at address 0x10D4 or 0x11D4)
Negative signal on TR0: V= 0 ÷ -400mV
TR0 DC Offset = 0x8000 (write 0x8000 at address 0x10DC or 0x11DC) TR0 Threshold = 0x5C16 (write 0x5C16 at address 0x10D4 or 0x11D4)
Negative signal on TR0: V= 0 ÷ -200mV
TR0 DC Offset = 0x8000 (write 0x8000 at address 0x10DC or 0x11DC) TR0 Threshold = 0x613E (write 0x613E at address 0x10D4 or 0x11D4)
Bipolar signal on TR0
TR0 DC Offset = 0x8000 (write 0x8000 at address 0x10DC or 0x11DC) TR0 Threshold = 0x6666 (write 0x6666 at address 0x10D4 or 0x11D4)
TTL on TR0 or Positive signal on TR0: $V = 0 \div \ge 2V$
TR0 DC Offset = 0xA800 (write 0xA800 at address 0x10DC or 0x11DC) TR0 Threshold = 0x6666 (write 0x6666 at address 0x10D4 or 0x11D4)
Positive on TR0: $V = 0 \div 2V$
TR0 DC Offset = $0x91A7$ (write $0x91A7$ at address $0x10DC$ or $0x11DC$ ) TR0 Threshold = $0x6666$ (write $0x6666$ at address $0x10D4$ or $0x11D4$ )

NIM signal on TR0
TR0 DC Offset = $0x1000$ (write $0x1000$ at address $0x10DC$ or $0x11DC$ ) TR0 Threshold = $0x717D$ (write $0x717D$ at address $0x10D4$ or $0x11D4$ )
Negative signal on TR0: V= 0 ÷ -400mV
TR0 DC Offset = $0x1000$ (write $0x1000$ at address $0x10DC$ or $0x11DC$ ) TR0 Threshold = $0x6E72$ (write $0x6E72$ at address $0x10D4$ or $0x11D4$ )
Bipolar signal on TR0
TR0 DC Offset = $0x1000$ (write $0x1000$ at address $0x10DC$ or $0x11DC$ ) TR0 Threshold = $0x6C80$ (write $0x6C80$ at address $0x10D4$ or $0x11D4$ )
TTL on TR0 or Positive signal on TR0: V= 0 ÷ ≥2V
TR0 DC Offset = 0x4000 (write 0x4000 at address 0x10DC or 0x11DC) TR0 Threshold = 0x7158 (write 0x7158 at address 0x10D4 or 0x11D4)
On boards with Mazzanines DCP Boy 1 it is suggested to use an external attenuator in

On boards with Mezzanines PCB Rev.1 it is suggested to use an external attenuator, in order to handle TR0 positive signals larger than +2V.

**WARNING:** Before writing this register it is necessary to check that the "SPI Bus Busy" flag in the Status Register (§ 0) is set to "0", otherwise the process of writing will not give error messages out but it will not run properly!

Mod. DT5742 16+1 Ch. 12 bit 5 GS/s Switched-Capacitor Digitizer

Revision date: Revision:

26/11/2012

## 5.14. Group Configuration Register (0x8000; r/w)

Bit	Function
[31:28]	Select monitor signal from daughter board 0000= no signal 0001= all fast trigger 0010= accepted fast trigger 0011= busy
[27:13]	reserved (MUST ALWAYS BE SET TO 0)
[12]	TR0 Trigger Enable: when this bit is 1, TR0 signal is used as local trigger:  0= TR0 Local Trigger disabled (Default)  1= TR0 Local Trigger enabled
[11]	Signal TR0 Readout Enable: when this bit is 1, signal TR0 is present in data readout:  0= Signal TR0 Readout disabled (Default)  1= Signal TR0 Readout enabled
[10:9]	reserved (MUST ALWAYS BE SET TO 0)
[8]	Individual Trigger: must be 1
[7]	reserved (MUST ALWAYS BE SET TO 0)
[6]	TR0 Trigger polarity: 0= Rising Edge (Default) 1= Falling Edge.
[5]	reserved (MUST ALWAYS BE SET TO 0)
[4]	reserved (MUST ALWAYS BE SET TO 1)
[3]	Test Mode: when this bit is 1, the ADC samples are replaced by a sawtooth generated by the FPGA 0= Normal mode (data from the DRS4 and ADC, Default) 1= Test Mode (emulated data: from the sawtooth generator)
[2:0]	reserved (MUST ALWAYS BE SET TO 0)

There are three ways to write the content of the Configuration Register:

- Normal Write (at address 0x8000): the content of the register is fully overwritten by the new data.
- Bit Set Mode (at address 0x8004): writing '1' in one bit, will set that bit; writing '0' leaves the bit unchanged.
- Bit Clear Mode (at address 0x8008): writing '1' in one bit, will clear that bit; writing '0' leaves the bit unchanged.

The use of the Bit Set/Clear modes are recommended when concurrent processes can access the register; this prevents a process to operate on the content of the register while another process has already changed it. The read access to the Control Register can be done at 0x8000 address.

# 5.15. Group Configuration Bit Set (0x8004; w)

Bit	Function
1.31.(1)	Bits set to 1 means that the corresponding bits in the Group Configuration register are set to 1.

# 5.16. Group Configuration Bit Clear (0x8008; w)

Bit	Function
	Bits set to 1 means that the corresponding bits in the Group Configuration register are set to 0.

Mod. DT5742 16+1 Ch. 12 bit 5 GS/s Switched-Capacitor Digitizer User's Manual (MUT)

Revision date: **Revision:** 26/11/2012

#### **Buffer Organization (0x800C; r/w)** 5.17.

Bit	Function
[31:0]	reserved (always set to 0)

#### 5.18. Custom Size (0x8020; r/w)

Bit	Function
[1:0]	00 = 1024 sample/ch 01 = 520 sample/ch 10 = 256 sample/ch 11 = 136 sample/ch

This register must not be written while acquisition is running.

#### 5.19. Initial test wave value (0x807C)

ĺ	Bit	Function
	[11:0]	Test wave start value

#### 5.20. Sampling Frequency (0x80D8)

Bit	Function
[1:0]	00 = 5 GS/s 01 = 2.5 GS/s 10 = 1 GS/s 11 = reserved (do not use)

This register must not be written while acquisition is running.

#### Acquisition Control (0x8100; r/w) 5.21.

Bit	Function
[5]	0 = Normal Mode (default): board becomes full, whenever all buffers are full 1 = Always keep one buffer free: board becomes full, whenever N-1 buffers are full; N = 1024
[4]	reserved
[3]	0 = COUNT ACCEPTED TRIGGERS 1 = COUNT ALL TRIGGERS allows to reject overlapping triggers (see § 3.5)
[2]	0 = Acquisition STOP 1 = Acquisition RUN allows to RUN/STOP Acquisition
[1:0]	reserved

Bit [2] allows to Run and Stop data acquisition; when such bit is set to 1 the board enters Run mode and a Memory Reset (see § 3.9.2) is automatically performed. When bit [2] is reset to 0 the stored data are kept available for readout. In Stop Mode all triggers are neglected.

Title:

Mod. DT5742 16+1 Ch. 12 bit 5 GS/s Switched-Capacitor Digitizer

Revision date: Revision:

26/11/2012

# 5.22. Acquisition Status (0x8104; r)

Bit	Function
[8]	Board ready for acquisition (PLL and ADCs are synchronized correctly)  0 = not ready  1 = ready  This bit should be checked after software reset to ensure that the board will enter immediately run mode after RUN mode setting; otherwise a latency between RUN mode setting and Acquisition start might occur.
[7]	PLL Status Flag (see § 2.5.1): 0 = PLL loss of lock 1 = no PLL loss of lock NOTE: flag can be restored to 1 via read access to Status Register (see § 5.37)
[6]	PLL Bypass mode (see § 2.5.1 ): 0 = No bypass mode 1 = Bypass mode
[5]	Clock source (see § 3.4): 0 = Internal 1 = External
[4]	EVENT FULL: it is set to 1 as the maximum nr. of events to be read is reached
[3]	EVENT READY: it is set to 1 as at least one event is available to readout
[2]	0 = RUN off 1 = RUN on
[1:0]	reserved

# 5.23. Software Trigger (0x8108; w)

	Bit	Function
I	[31:0]	A write access to this location generates a trigger via software

# 5.24. Trigger Source Enable Mask (0x810C; r/w)

	Bit	Function
	[31]	0 = Software Trigger Disabled 1 = Software Trigger Enabled
	[30]	0 = External Trigger Disabled 1 = External Trigger Enabled
Ī	[29:0]	reserved

EXTERNAL TRIGGER ENABLE (bit30) enables the board to accept the TRG\_IN SW TRIGGER ENABLE (bit 31) enables the board to accept the software trigger (see § 5.23).

User's Manual (MUT)

Mod. DT5742 16+1 Ch. 12 bit 5 GS/s Switched-Capacitor Digitizer

Revision date: **Revision:** 

26/11/2012

#### 5.25. Front Panel Trigger Out Enable Mask (0x8110; r/w)

Bit	Function
[31]	0 = Software Trigger Disabled 1 = Software Trigger Enabled
[30]	0 = External Trigger Disabled 1 = External Trigger Enabled
[29:2]	reserved
[1]	0 = Group 1 trigger disabled 1 = Group 1 trigger enabled
[0]	0 = Group 0 trigger disabled 1 = Group 0 trigger enabled

This register bits[3:0] enable the groups to generate a trigger as the TR0 signal exceeds the set threshold (see § 5.10). EXTERNAL TRIGGER ENABLE (bit30) enables the board to generate the TRG OUT. SW TRIGGER ENABLE (bit 31) enables the board to broadcast a software trigger (see § 5.23).

#### 5.26. Post Trigger Setting (0x8114; r/w)

Bit	Function	
[9:0]	Size of the post trigger window	

The register value sets the size of the post trigger window (expressed in steps of about 8.5ns); the maximum value for the post trigger is 0x3FF.

NOTE: This setting is valid from Firmware revision 0.3 on. For previous revisions, the register is over 7 bits and the maximum value for the post trigger is 0x7F

#### 5.27. Front Panel I/O Data (0x8118; r/w)

Bit	Function	
[15:0]	Front Panel I/O Data	

Allows to Readout the logic level of LVDS I/Os and set the logic level of LVDS Outputs.

#### 5.28. Front Panel I/O Control (0x811C; r/w)

Bit	Function
[1]	0= panel output signals (GPO) enabled 1= panel output signals (GPO) enabled in high impedance
	0 = TRG/CLK are NIM I/O Levels 1 = TRG/CLK are TTL I/O Levels

46

**Document type:** Title User's Manual (MUT) Mod

Mod. DT5742 16+1 Ch. 12 bit 5 GS/s Switched-Capacitor Digitizer

**Revision date:** Revision: 26/11/2012 7

## **5.29. Group Enable Mask (0x8120; r/w)**

Bit	Function
[1]	0 = Group 1 disabled 1 = Group 1 enabled
[0]	0 = Group 0 disabled 1 = Group 0 enabled

Enabled groups provide the samples which are stored into the events (and not erased). The mask cannot be changed while acquisition is running.

### 5.30. ROC FPGA Firmware Revision (0x8124; r)

Bit	Function
[31:16]	Revision date in Y/M/DD format
[15:8]	Firmware Revision (X)
[7:0]	Firmware Revision (Y)

Bits [31:16] contain the Revision date in Y/M/DD format.

Bits [15:0] contain the firmware revision number coded on 16 bit (X.Y format).

## 5.31. Event Stored (0x812C; r)

Bit	Function
[31:0]	This register contains the number of events currently stored in the Output Buffer

This register value cannot exceed the maximum number of available buffers according to setting of buffer size register.

# 5.32. Set Monitor DAC (0x8138; r/w)

Bit	Function
[31:0]	reserved

# 5.33. Board Info (0x8140; r)

Bit	Function
[15:8]	Memory size (Mbyte/Group, DT5742: 0x01; DT5742B: 0x08)
[7:0]	Board Type (DT5742: 0x06)

# 5.34. Monitor Mode (0x8144; r/w)

Bit	Function
[31:0]	reserved

**Document type:** Title User's Manual (MUT) Mod

Mod. DT5742 16+1 Ch. 12 bit 5 GS/s Switched-Capacitor Digitizer

**Revision date: Revision:** 26/11/2012 7

5.35. Event Size (0x814C; r)

Bit	Function
[31:0]	Nr. of 32 bit words in the next event

## 5.36. Control (0xEF00; r/w)

Bit	Function
[4]	reserved, must be set to 1
	0 = Optical Link interrupt disabled 1 = Optical Link interrupt enabled
[2:0]	reserved, must be set to 0

Interrupt request can be removed by accessing this register and disabling the active interrupt level

### 5.37. Status (0xEF04; r)

Bit	Function	
	0 = Slave Terminated Transfer Flag: no terminated transfer 1 = Slave Terminated Transfer Flag: one transfer has been terminated by DT5742 (unsupported register access or block transfer prematurely terminated in event aligned reaout)	
[1]	reserved	
[0]	0 = No Data Ready 1 = Event Ready	

# 5.38. Interrupt Status ID (0xEF14; r/w)

Bit	Function	
	This register contains the STATUS/ID that the module places on the data stream during the Interrupt Acknowledge cycle	

# 5.39. Interrupt Event Number (0xEF18; r/w)

Bit	Func	tion
[9:0]	INTERRUPT EVENT NUMBER	

If interrupts are enabled, the module generates a request whenever it has stored in memory a Number of events > INTERRUPT EVENT NUMBER

# 5.40. Block Transfer Event Number (0xEF1C; r/w)

Bit	Function	
[7:0]	This register defines the maximum number of events that can be transferred in a Block Transfer Cycle, after which the board asserts the Bus Error to stop the transfer. Allowed setting is between 0 (meaning no limit) and 255.	

Mod. DT5742 16+1 Ch. 12 bit 5 GS/s Switched-Capacitor Digitizer

**Revision date:** Revision: 26/11/2012 7

# 5.41. Scratch (0xEF20; r/w)

Bit	Function	
[31:0]	Scratch (to be used to write/read words for test purposes)	

## 5.42. Software Reset (0xEF24; w)

Bit	Function
	A write access to this register causes a board reset (the acquisition is stopped, all the registers are set to the default settings and all data are cleared).

# 5.43. Software Clear (0xEF28; w)

Bit	Function	
1.31.(1)	A write access to this register causes a data clear (the registers setting is not modified).	

# 5.44. Flash Enable (0xEF2C; r/w)

Bit	Function
[0]	0 = Flash write ENABLED 1 = Flash write DISABLED

This register is handled by the Firmware upgrade tool.

# 5.45. Flash Data (0xEF30; r/w)

Bit	Function
[7:0]	Data to be serialized towards the SPI On board Flash

This register is handled by the Firmware upgrade tool.

# 5.46. Configuration Reload (0xEF34; w)

Ì	Bit	Function
	[31:0]	A write access to this register causes a software reset (see § 3.9), a reload of Configuration ROM parameters and a PLL reconfiguration.

Page:

User's Manual (MUT)

Mod. DT5742 16+1 Ch. 12 bit 5 GS/s Switched-Capacitor Digitizer

**Revision date:** Revision: 26/11/2012 7

## 6. Installation

### 6.1. Power ON sequence

To power ON the board follow this procedure:

- 1. connect the 12V dc power supply to the DT5742
- 2. power up the DT5742

### 6.2. Power ON status

At power ON the module is in the following status:

- the Output Buffer is cleared;
- registers are set to their default configuration

### 6.3. Firmware upgrade

The DT5742 firmware is stored onto on-board non-volatile memory. The board hosts one FPGA on the mainboard and one FPGA on the mezzanine (i.e. one FPGA per 16+1 channels). The channel FPGAs firmware is identical. A unique file is provided that will updated all the FPGA at the same time.

The programming file has the extension .CFA (CAEN Firmware Archive) and is a sort of archive format file aggregating all the standard firmware files compatible with the same family of digitizers.

CFA and its name follows this general scheme:

x742\_revX.Y\_W.Z.CFA

#### where:

- x742 are all the boards the file is compliant to all the models of the 742 family see Table 1.1)
- X.Y is the major/minor revision number of the mainboard FPGA
- W.Z is the major/minor revision number of the channel FPGA

CAEN provides a firmware upgrade tool (see § 4) that can be used with either USB or optical link paths. Firmware updates are available in the Digitizer web page, while the software package, application notes and user manual are available in the CAENUpgrader web page at <a href="https://www.caen.it">www.caen.it</a>; follow the instructions for installation and usage.

WARNING: in case of programming failures, the board hosts a backup image of factory firmware. Please contact CAEN at <a href="mailto:support.frontend@caen.it">support.frontend@caen.it</a> for instuctions in order to restore the backup image.

Once the board is successfully powered with backup firmware, the standard firmware image can be reprogrammed.

 NPO:
 Filename:
 Number of pages:

 00100/09:5742x.MUTx/07
 DT5742\_REV7
 51

**Document type:** Title User's Manual (MUT) Mod

Mod. DT5742 16+1 Ch. 12 bit 5 GS/s Switched-Capacitor Digitizer

Revision date: Revision:

26/11/2012 7

### 6.4. Drivers

DT5742 needs CAEN USB driver to be installed in order to use the USB communication channel:

- Download the driver package compliant to your Operating System (Windows or Linux) on CAEN web site in the 'Software/Firmware' area at the digitizer page.
- Uncompress the package to your host.
- For Windows users:
  - **Installer option:** with the hardware not connected, run the single installer file and complete the installation Wizard. Then, connect the hardware and the driver will be automatically find by the OS.
  - Driver files option: connect the hardware; then, perform the driver installation by pointing Windows to the folder where driver files have been extracted.
- For Linux users: follow the installation instructions inside the README file in the package.

The detailed procedure for Windows is described in the document "First Installation Guide to Desktop Digitizers & MCA" downloadable at <a href="https://www.caen.it">www.caen.it</a> in the digitizer web page.

Concerning the OPTICAL LINK communication channel, please refer to A2818 PCI card or A3818 PCIe cards User Manual for driver installation.

**NPO:** 00100/09:5742x.MUTx/07

**Filename:** DT5742\_REV7

Number of pages:

51

Page: 51