


(a) DC: the return spreads over the whole plane (least resistance)

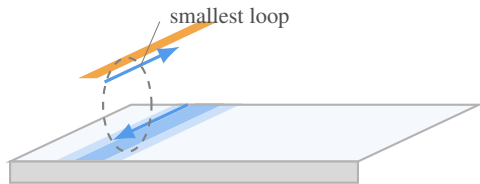

(b) high frequency: the return hugs the trace (least inductance)