




TRAINING – ENGINEERING – TECHNOLOGY

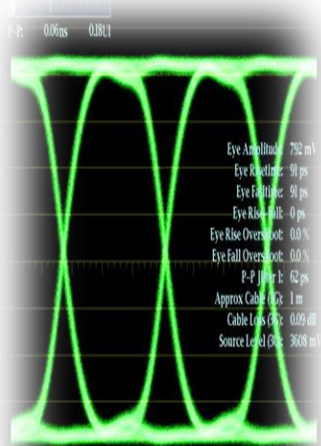

Eye Amplitude: 752 mV
Eye RiseTime: 91 ps
Eye FallTime: 91 ps
Eye RiseFall: 0 ps
Eye Rise Overshoot: 0.0 %
Eye Fall Overshoot: 0.0 %
P-P Jitter: 62 ps
Approx Cable Loss: 1 m
Cable Loss (dB): 0.09 dB
Source Level (dB): 36.08 mV

Video Testing and Measurement



Mike Dhonau
mike.dhonau@korell.co.uk
+44 7740 818 125

Korell

Lecture Outline

- Introduction

- Why do we test?
- Tolerances
- Picture quality assessment
- Types of testing & Monitoring
- Accuracy and calibration
- Standards and specifications
- Broadcast chain & measurement domains
- Test equipment

- Signal Domain Tests

- What can go wrong?
- Analogue Video
- Digital Video

- Video Domain Tests

- What can go wrong?
- Single channel tests
- Component tests
- Test waveforms and displays
- Noise measurements

- Picture Monitor Grading & Setup

- Revision of Monitor Principles
- Monitor Grading
- Monitor Setup – Adjustments and test signals

Lecture Outline

- Introduction

- Why do we test?
- Tolerances
- Picture quality assessment
- Types of testing & Monitoring
- Accuracy and calibration
- Standards and specifications
- Broadcast chain & measurement domains
- Test equipment

- Signal Domain Tests

- What can go wrong?
- Analogue Video
- Digital Video

- Video Domain Tests

- What can go wrong?
- Single channel tests
- Component tests
- Test waveforms and displays
- Noise measurements

- Picture Monitor Grading & Setup

- Revision of Monitor Principles
- Monitor Grading
- Monitor Setup – Adjustments and test signals

- Why do we test video systems?
 - To ensure that the picture quality for the viewer is acceptable.
- What factors affect picture quality?
 - Quality of the source pictures.
 - Signal distortion/picture degradation introduced by the components of the broadcast chain.
 - Quality of the viewer's television.
 - Viewing conditions.
- Tolerance
 - The amount of distortion which is acceptable.
 - For example: We might say that tolerance for HF loss/gain is 10%. This means that the amount of HF loss/gain should be 10% or less.
 - Tolerances can be set for the whole broadcast chain.
 - Each component in the broadcast chain can be given tolerance, such that when the distortions caused by each component add up, the total is within tolerance for the whole chain.





- Suppose that subjective tests show that viewers will accept **11%** of some kind of impairment.
 - for example **high frequency (HF) loss**.



- Suppose that subjective tests show that viewers will accept **11%** of some kind of impairment.
 - for example **high frequency (HF) loss**.

- The **total tolerance** could be allocated to a notional broadcast chain, as follows:

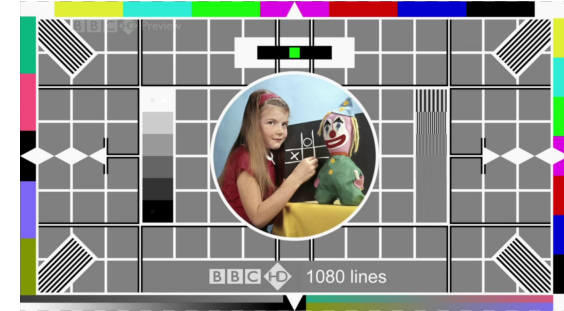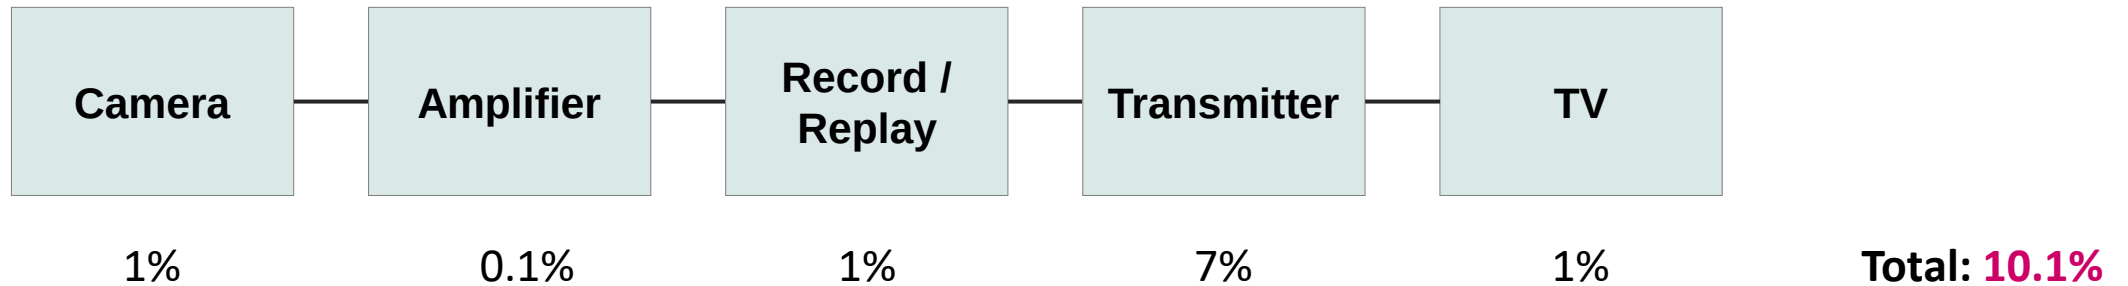

- If **each part** of the chain is measured to ensure that it is **within tolerance**, then the **total impairment** for the **whole chain** should be such that the **picture is acceptable** in terms of **HF loss**.
- Conclusion:** You may well **not see** unacceptable levels of impairment if you are only looking at **part** of the broadcast chain.








- The quality of a TV picture can be assessed by people looking at picture monitors / TVs.
 - Experts
 - Members of the public (Non-expert)
- It is helpful to have a **standard way** of **describing** visual picture distortion.
 - EBU created a **grading scale** – now described in ITU-R BT.500 (Methodology for the subjective assessment of the quality of television pictures)


Five Grade Scale			
Quality		Impairment	
5	Excellent	5	Imperceptible
4	Good	4	Perceptible, but not annoying
3	Fair	3	Slightly annoying
2	Poor	2	Annoying
1	Bad	1	Very annoying



1 – very Annoying

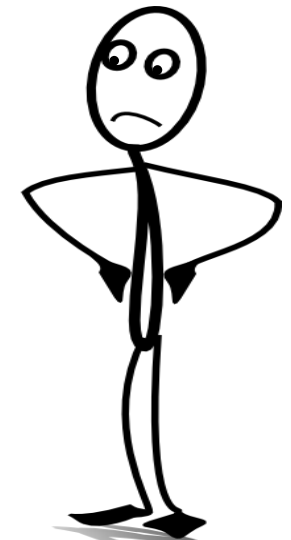


- **ITU-R BT.500** describes:
 - Type of assessment
 - Under optimum conditions - These are typically called quality assessments.
 - Under non-optimum conditions – These are typically called impairment assessments.
 - Assessment methods
 - For example the EBU Double-stimulus Impairment Scale
 - Viewing conditions
 - Laboratory (reference) environment.
 - Home environment.
 - Monitor setup, resolution and contrast (**ITU-R BT.814** and **BT.815**)
 - Selection of test material.
 - Observers and their instructions.
 - Presentations of results.

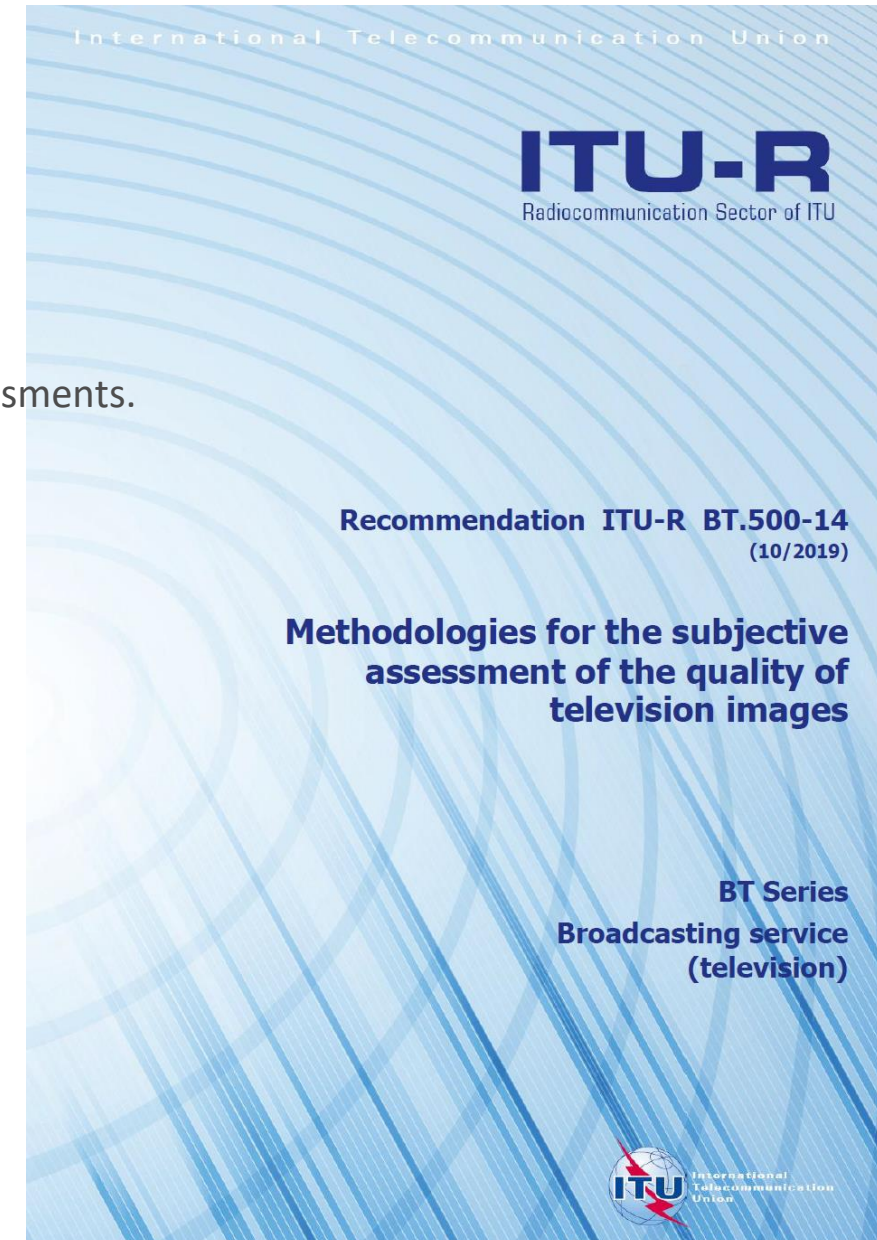


- ITU-R BT.500 was designed with **CRT displays** in mind.
- For **flat panel displays** it is supplemented by:
 - **ITU-R BT.2022**
 - General viewing conditions for subjective assessment of quality of SDTV and HDTV television pictures on flat panel displays.
 - **ITU-R BT.2129**
 - User requirements for a Flat Panel Display (FPD) as a Master monitor in an HDTV programme production environment.
- **Automatic Picture Quality Assessment** can be done for certain types of impairment such as noise and coding artefacts.
 - For example: Tektronix PQA600C



- Operational monitoring and testing
 - Monitoring ‘live’ signals in a studio, OB or playout area.
 - Quality checking final programmes for delivery to playout.
- System Testing
 - Offline testing of a piece of equipment or system as part of fault finding or routine maintenance.
- Acceptance Testing
 - Testing of a piece of equipment or system before it can be accepted for something, such as sale, purchase or before it is used for broadcasting.

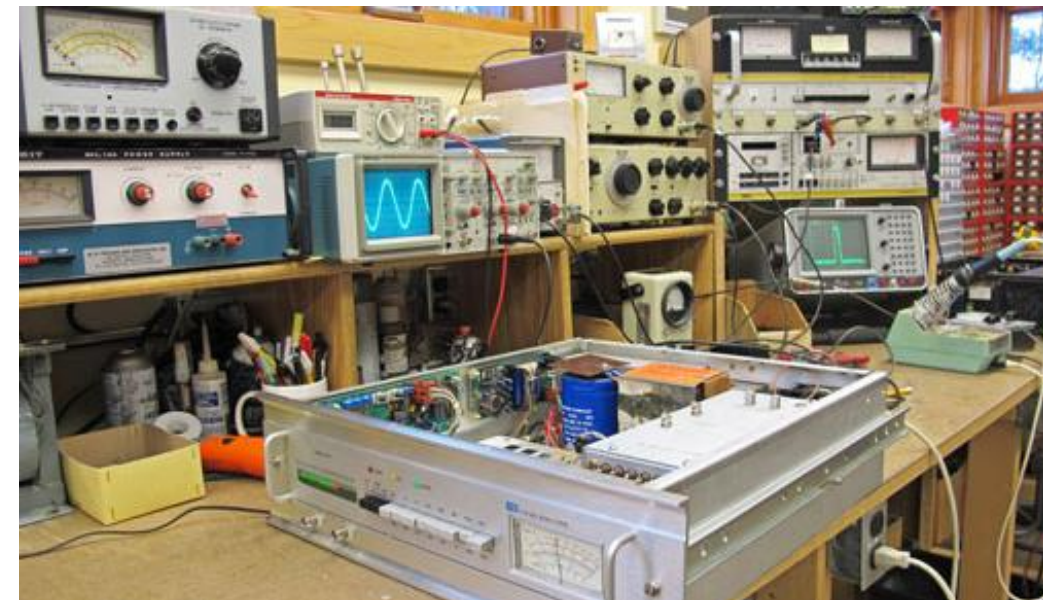

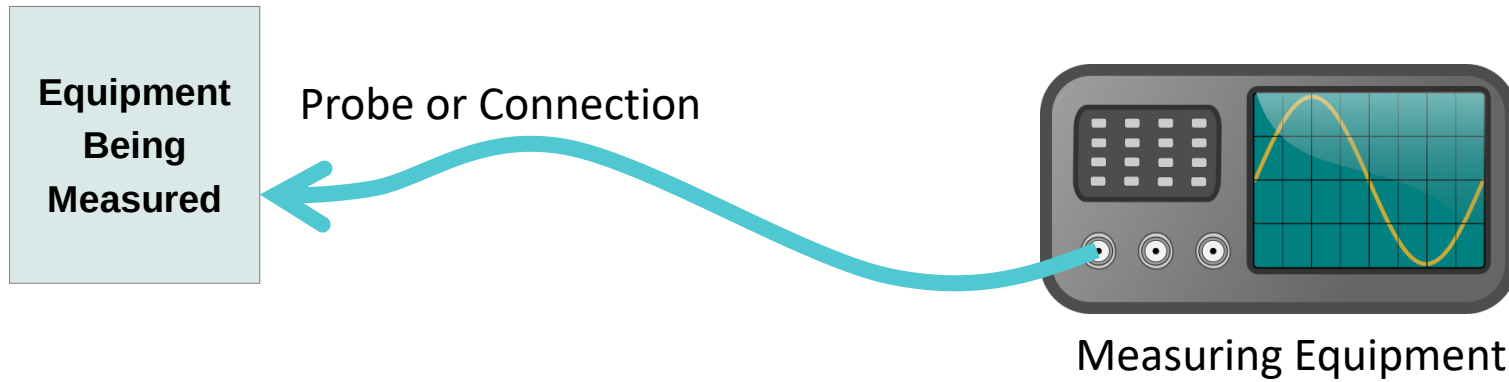



- How accurate is the reading? What are the possible sources of error?

1) Measuring Equipment.


- Precision – how many decimal places?
- Accuracy – But is it right?
- Calibration – Equipment is compared to a reference and setup up to be ‘correct’


Accuracy = Precision + Calibration

- 2) Loss/gain and distortion in the probe/cable.
- 3) Loading – connecting the probe changes the level.

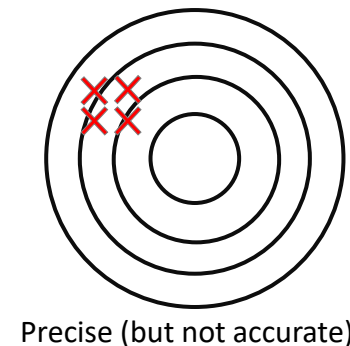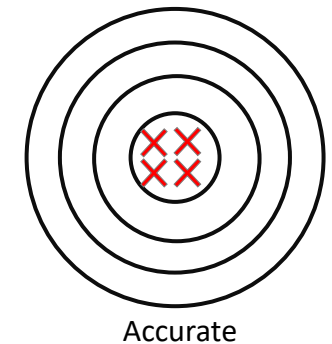




- When testing, we are usually **comparing** the results to a **reference**, such as a **standard** or **specification**.
- Video Signals and Formats.
 - Video standards such as **ITU-R BT.709**
 - File format standards such as **MXF**.
 - **SMPTE ST 377-1:2019**
 - Stream/data formats such as **MPEG Transport Streams**
 - **MPEG-2 Part 1**, formally known as **ISO/IEC standard 13818-1** or **ITU-T Rec. H.222.0**
- Video Equipment and Systems.
 - Manufacture specifications.
 - Broadcasters' acceptance criteria.
 - Installation project requirements/specifications.
- TV Programmes.
 - Programme delivery specification such as **AS-11 DPP**.
- These can overlap, and one standard may refer to another.

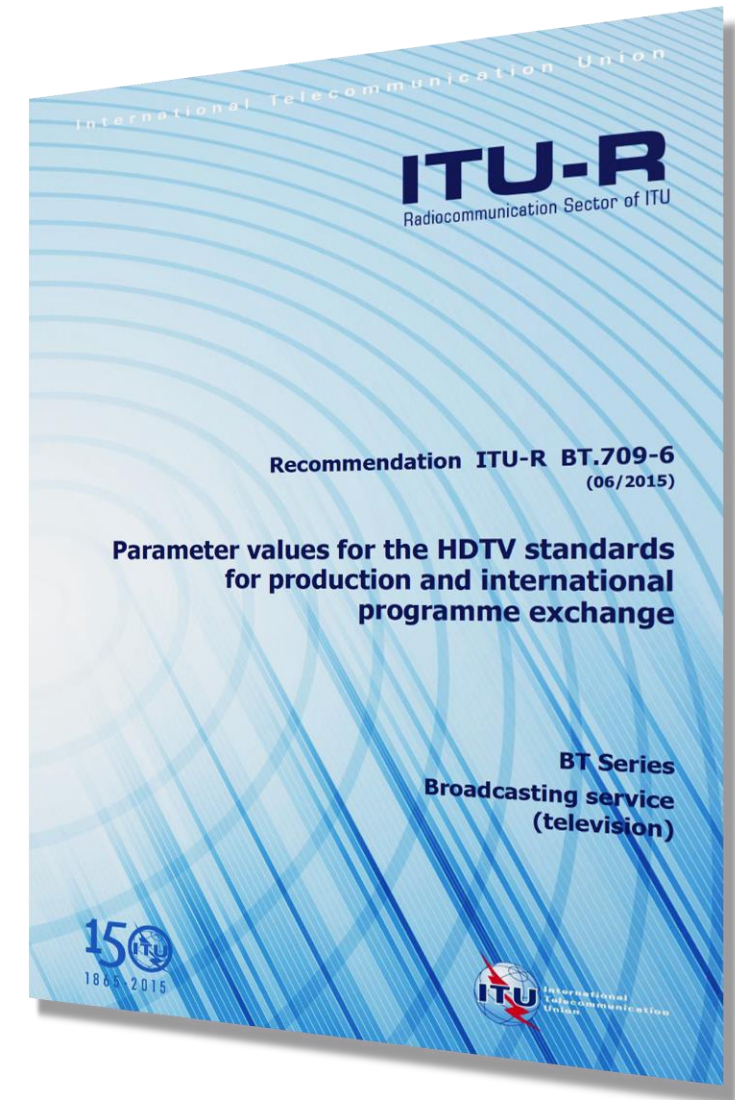

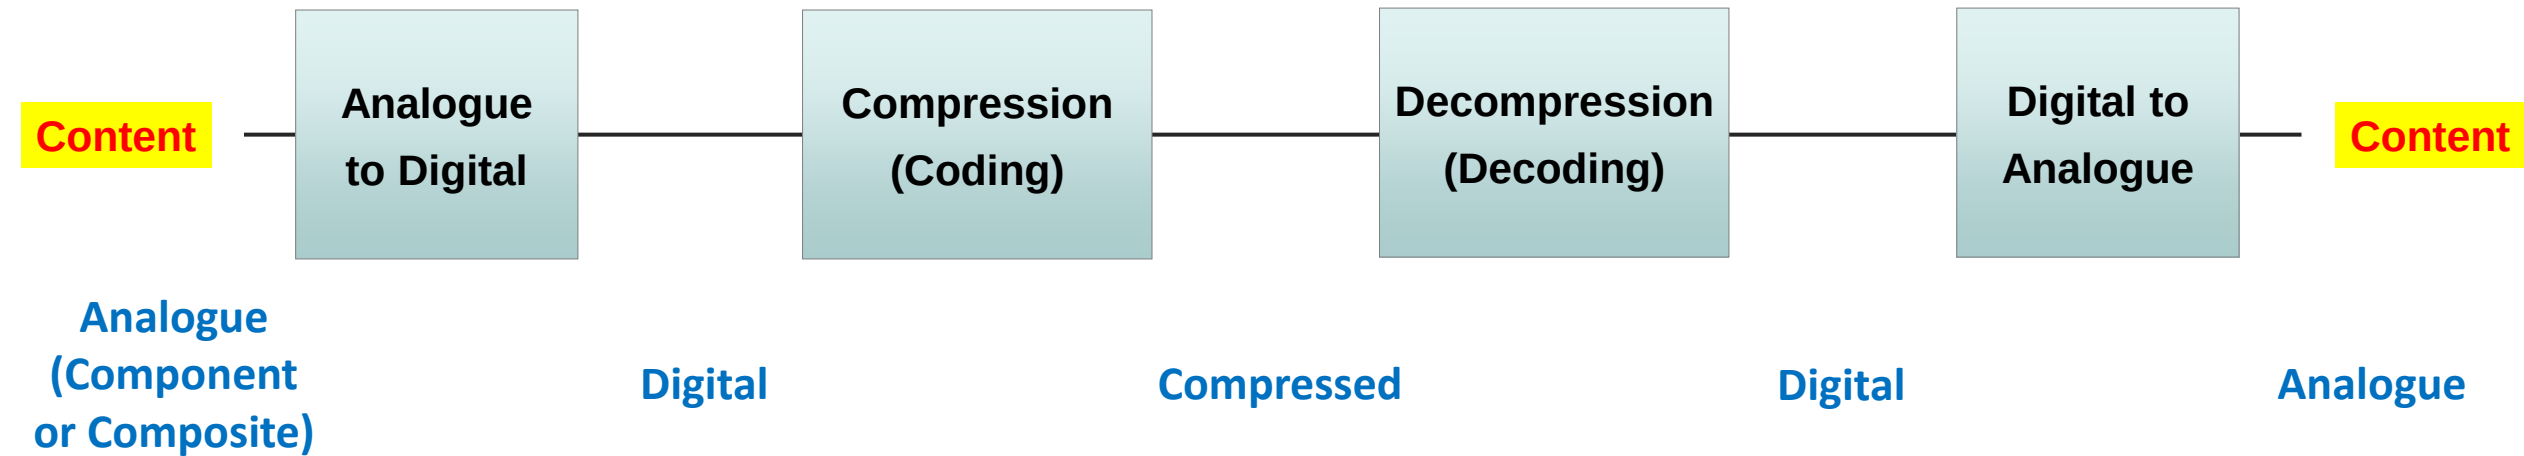

- Each stage has appropriate tests and measurements that can be made.
- For example:
 - **Analogue:** HF loss, Chrominance-Luminance Delay, Video Level, Gamut
 - **Digital:** Eye Height, Data Format
 - **Compressed:** Coding Artefacts
 - **Content:** Photo Sensitive Epilepsy (PSE)
- The above diagram is greatly simplified...




- Analogue or digital processing.
- CRT or LCD display.
- Bandwidth for Analogue TV: $>10\text{MHz}$ (SD) $>40\text{MHz}$ (HD).
- Often have TV trigger modes.
- High bandwidth scopes may allow eye display for SDI.
- Input impedance usually $>1\text{M}\Omega$.
 - Need to use **T-piece** and a **75Ω** termination for video.

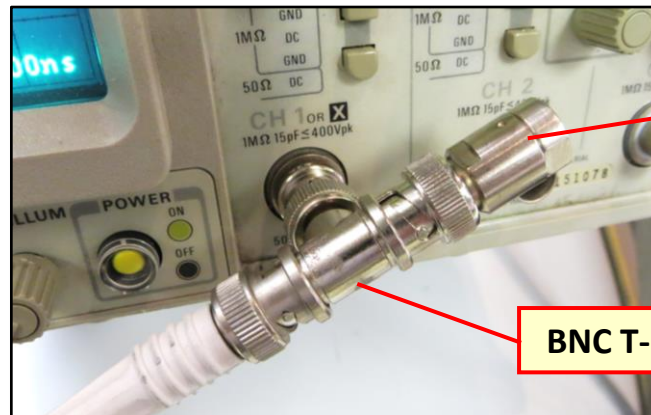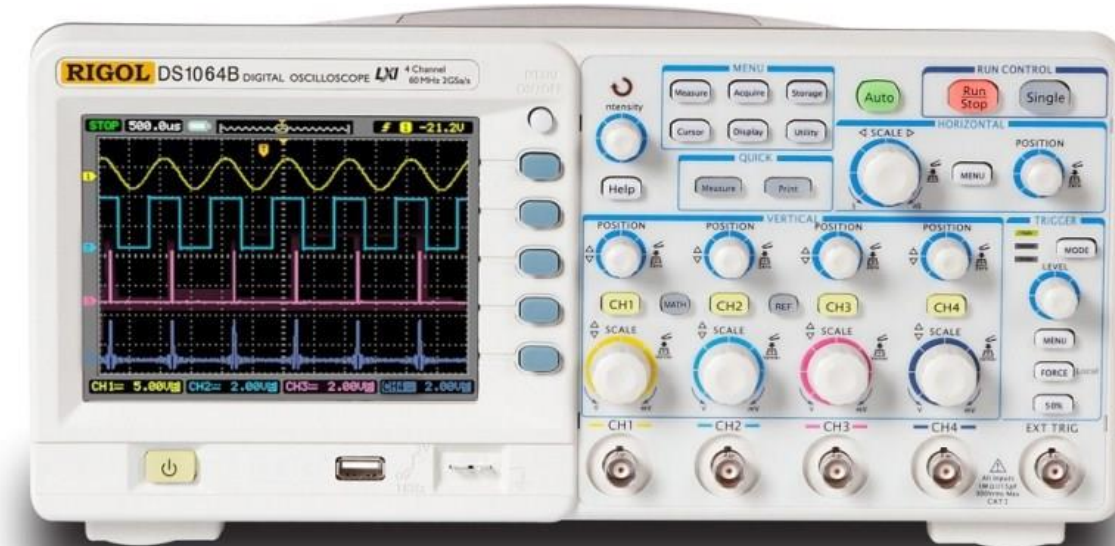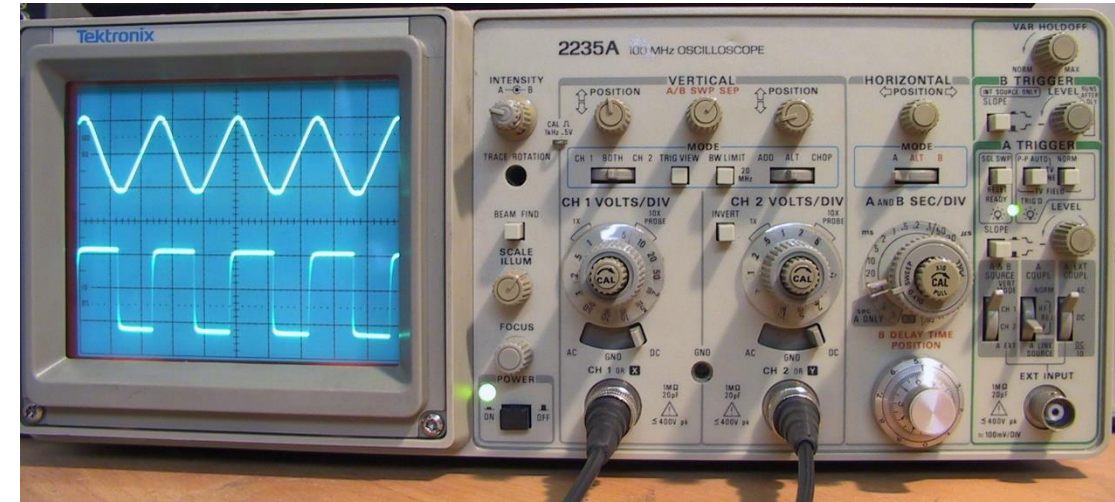

BNC 75Ω Termination


BNC T-Piece

- Available for analogue composite, analogue component, SDI, and video over IP.
- Older designs had CRT displays.
- New designs tend to have LCD type displays, or connect to external computer monitor.
- May also be implemented in software for use with a computer with a video input, or be built into editing software.
- **75Ω** inputs – active or passive loop-through.
- Offer various display/measurement options:
 - Waveform, Parade, Vector, Lightning, Bowtie, Arrow/Gamut, Eye Display, Picture, Signal Data, Ancillary Data, Embedded Audio

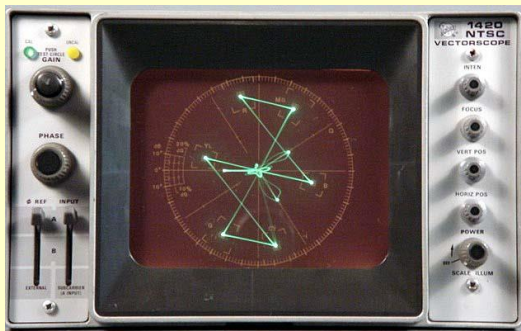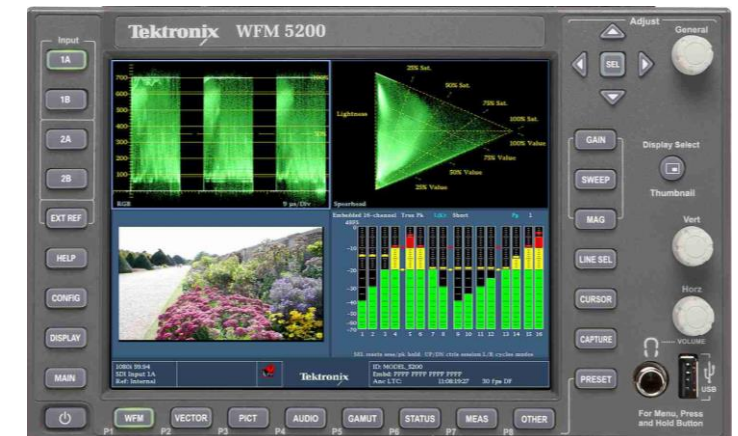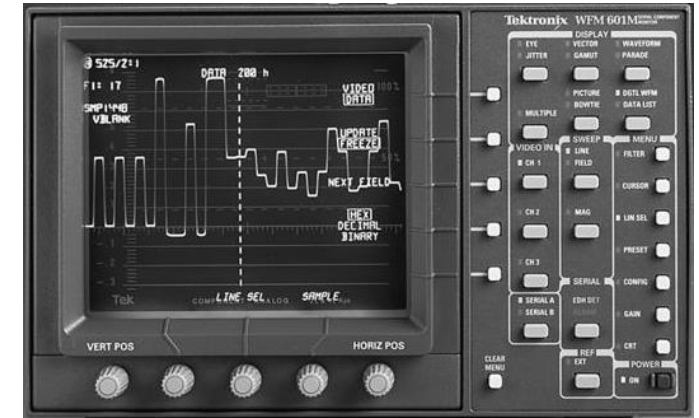

This is a **vectorscope** - a type of waveform monitor for analysing the **chrominance**.

It essentially a graph of **R-Y** against **B-Y**. No longer made, the vector display is incorporated into most waveform monitors. [More later...](#)

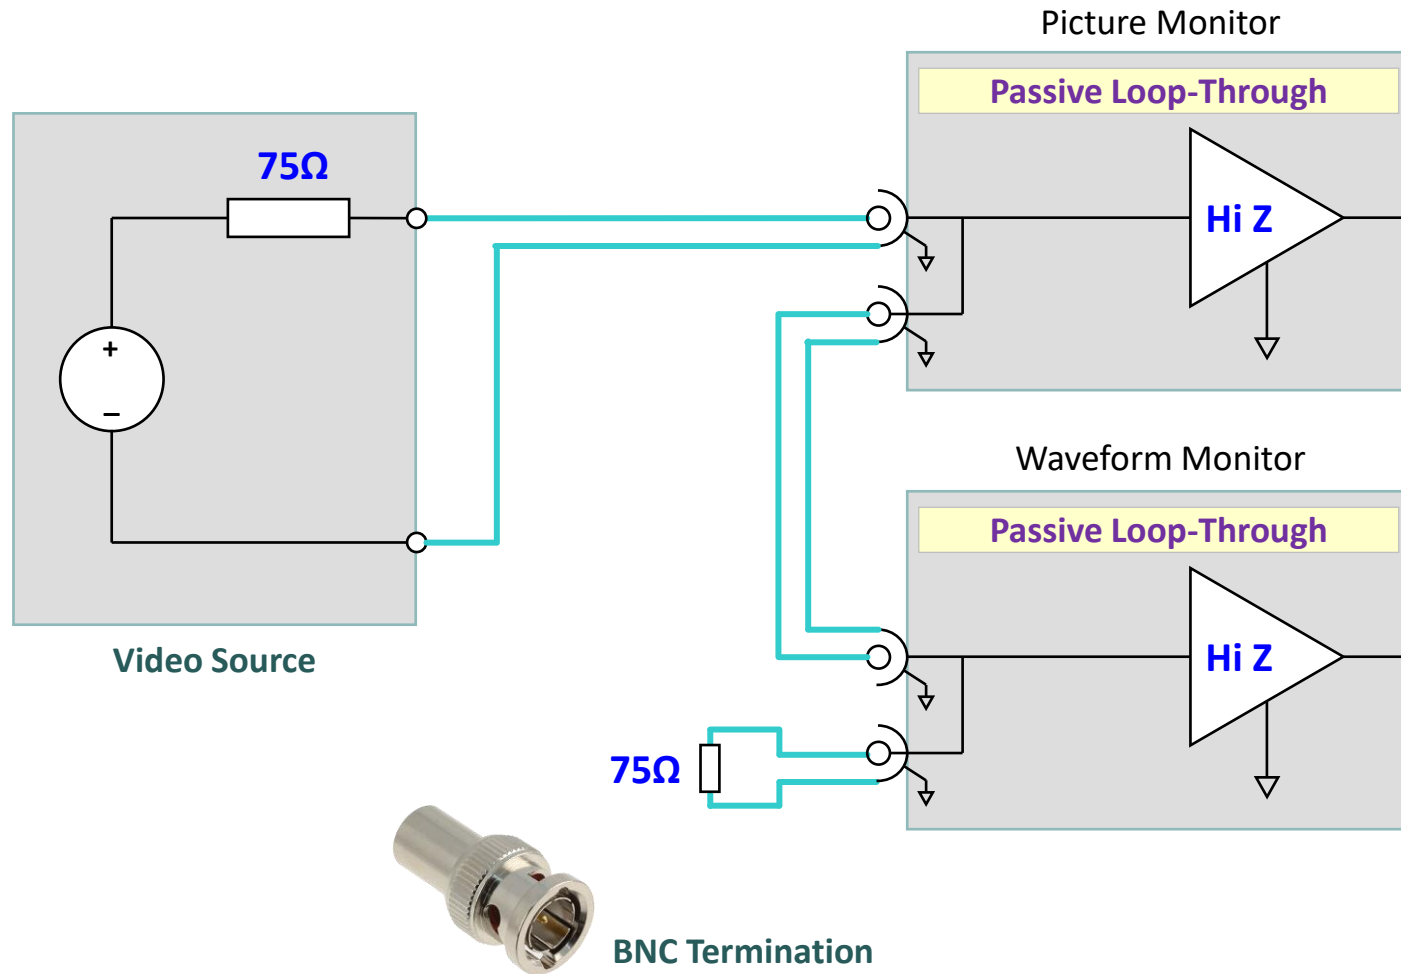


- Automatic Quality Checking

- Automatically check media files before broadcast.
Can check signal format, metadata, content.


- Examples:

- Interra Systems – Baton,
- Tektronix – Cerify.

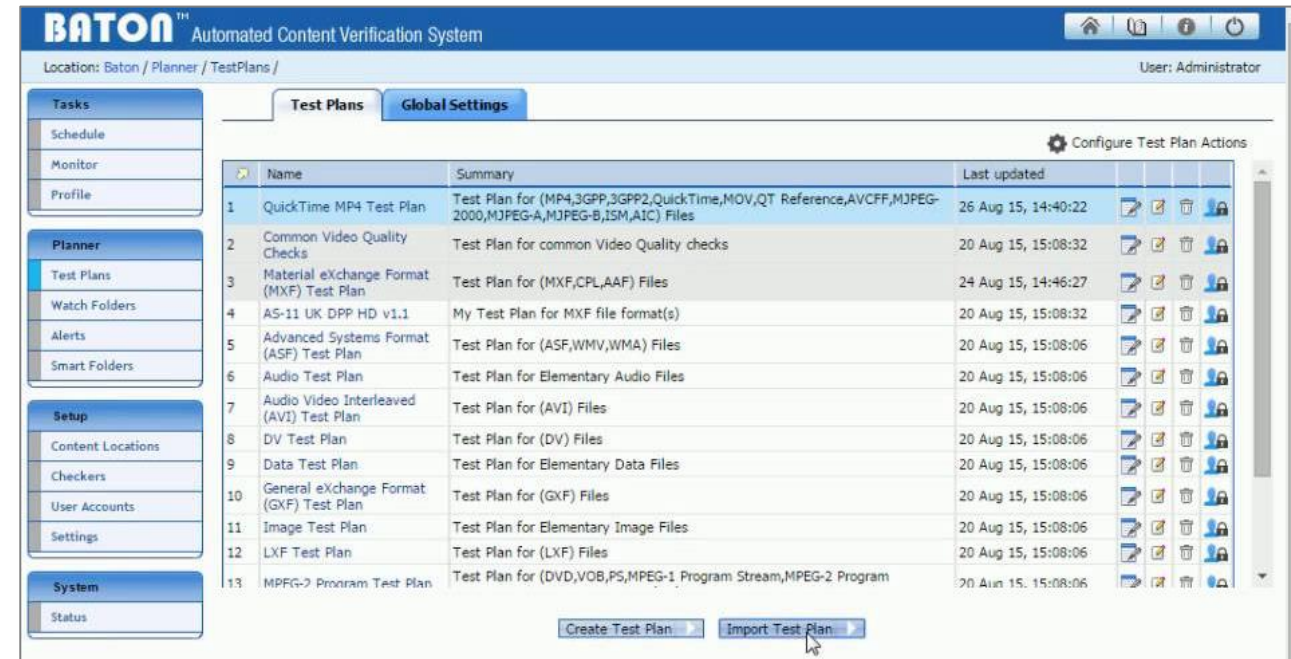

- TV Monitor Analyzer

- Some monitors have this feature built in (require an external probe).
- Good for accurate, repeatable setup of displays.

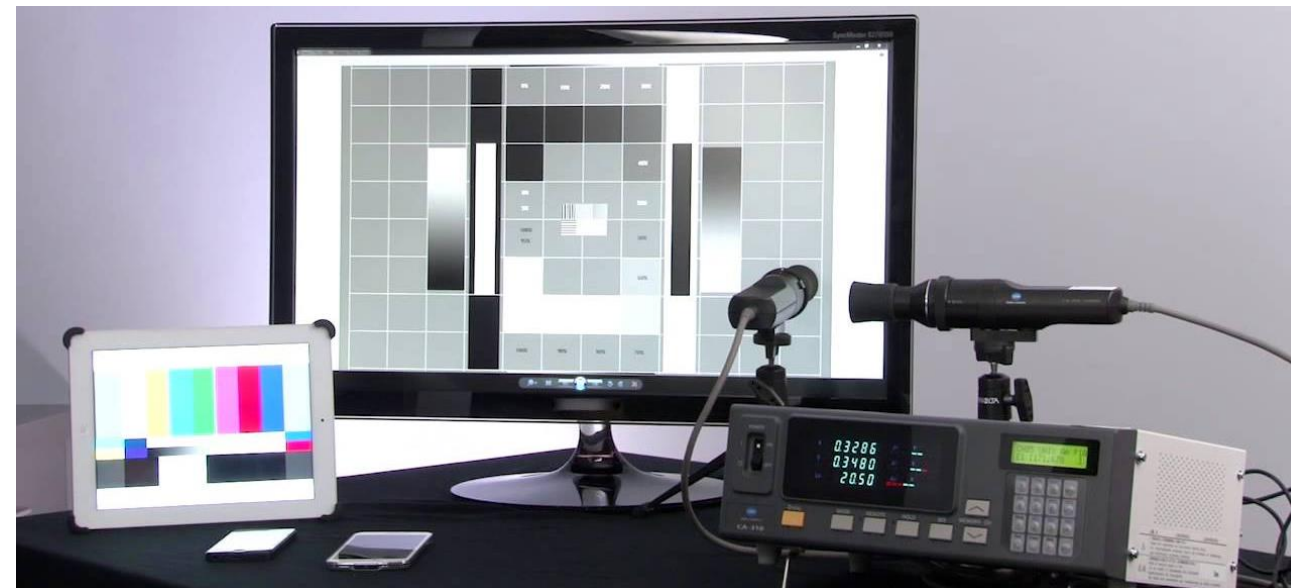

Lecture Outline

- Introduction

- Why do we test?
- Tolerances
- Picture quality assessment
- Types of testing & Monitoring
- Accuracy and calibration
- Standards and specifications
- Broadcast chain & measurement domains
- Test equipment

- Signal Domain Tests

- What can go wrong?
- Analogue Video
- Digital Video

- Video Domain Tests

- What can go wrong?
- Single channel tests
- Component tests
- Test waveforms and displays
- Noise measurements

- Picture Monitor Grading & Setup

- Revision of Monitor Principles
- Monitor Grading
- Monitor Setup – Adjustments and test signals

Lecture Outline

- Introduction

- Why do we test?
- Tolerances
- Picture quality assessment
- Types of testing & Monitoring
- Accuracy and calibration
- Standards and specifications
- Broadcast chain & measurement domains
- Test equipment

- Signal Domain Tests

- What can go wrong?
- Analogue Video
- Digital Video




- Video Domain Tests

- What can go wrong?
- Single channel tests
- Component tests
- Test waveforms and displays
- Noise measurements




- Picture Monitor Grading & Setup

- Revision of Monitor Principles
- Monitor Grading
- Monitor Setup – Adjustments and test signals




- Signals are distributed over links using:
 - Copper wires or fibres (either sometimes called cables).
 - Radio from terrestrial transmitters or satellites.
- We will call the link a **channel**.
- The signals sent over the **channel** may carry **analogue** information or **digital** information.
- To accurately pass the signals, we require the following of the **channel**:
 - **Gain** and **propagation delay** should be **independent of frequency**.
 - If this is not the case the **channel** is said to cause **Linear Distortion**.
 - **Gain** and **propagation delay** should be the **same for all input levels**.
 - If this is not the case the **channel** is said to cause **Non-Linear Distortion**.
 - **Unwanted signals will not be added** by the transmission channel
 - Unwanted signals are called **Noise**.

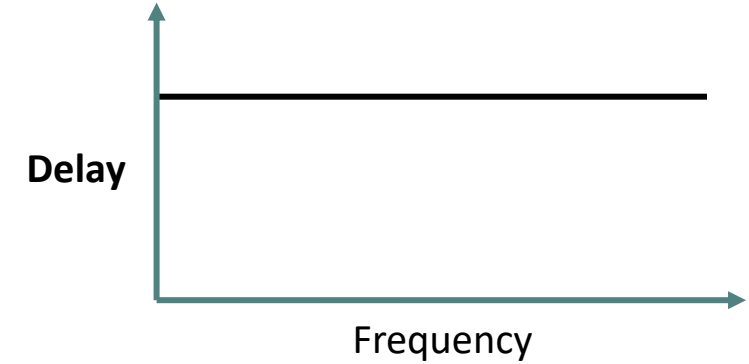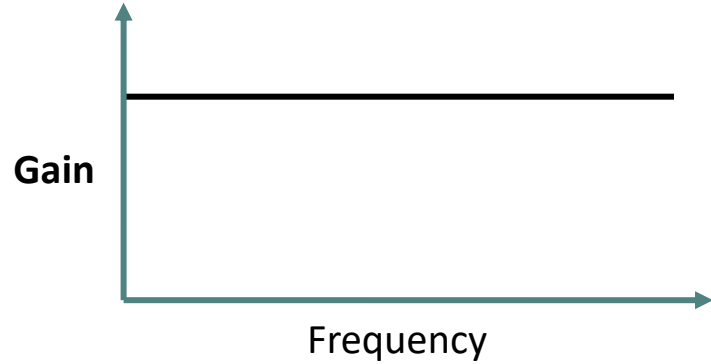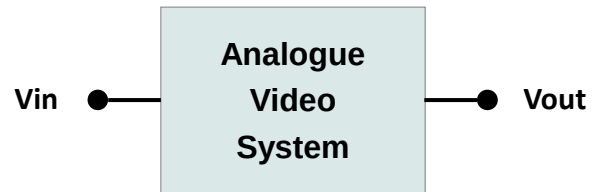




Response of a Channel with **No** Linear Distortions

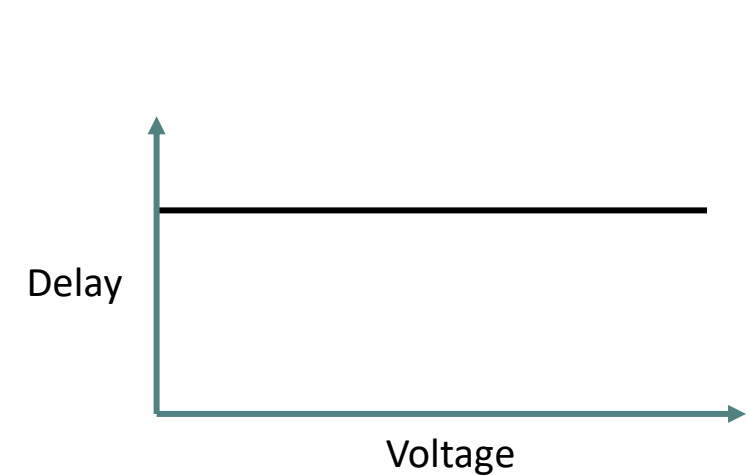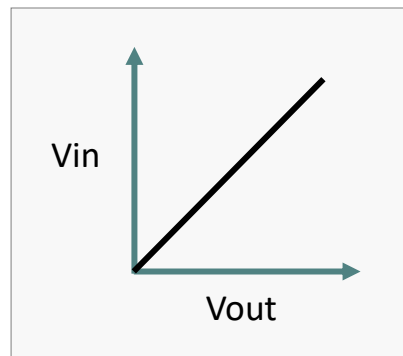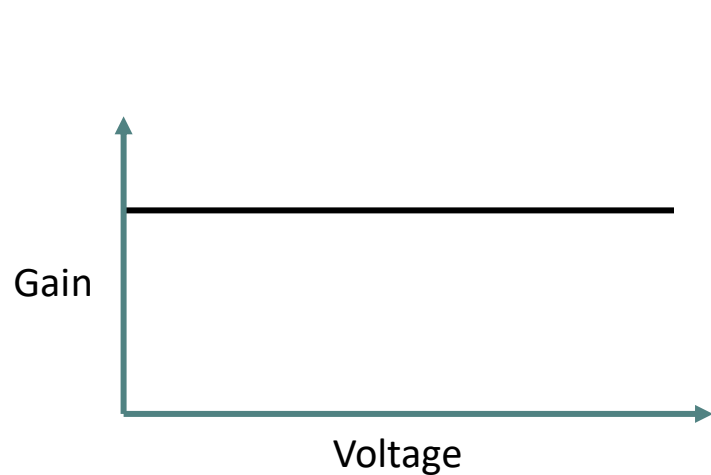

Response of a Channel with **No** Non-Linear Distortions

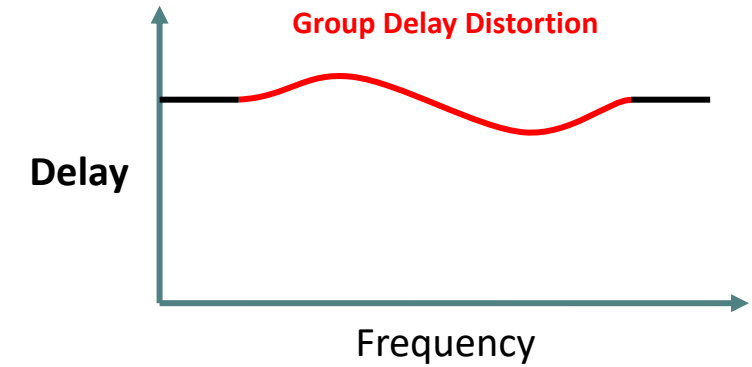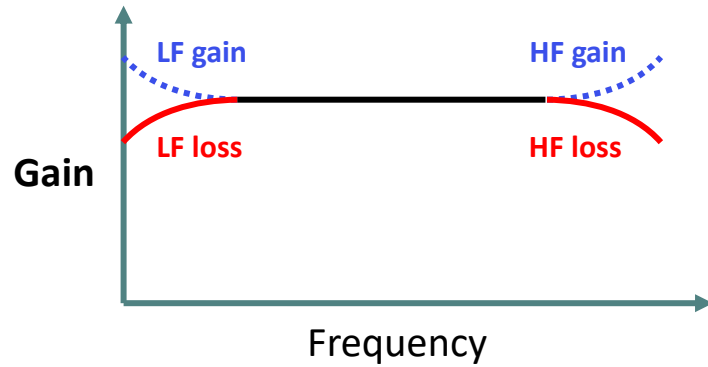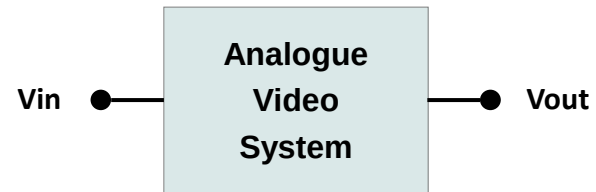

Linear Distortions

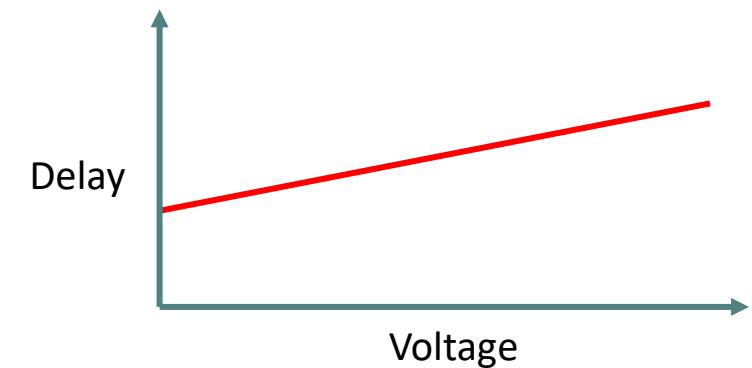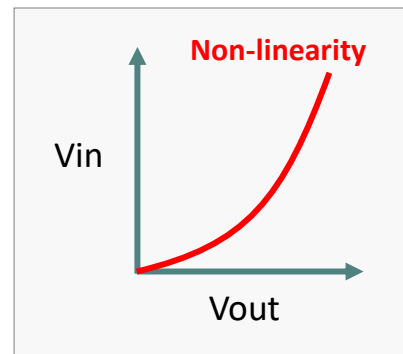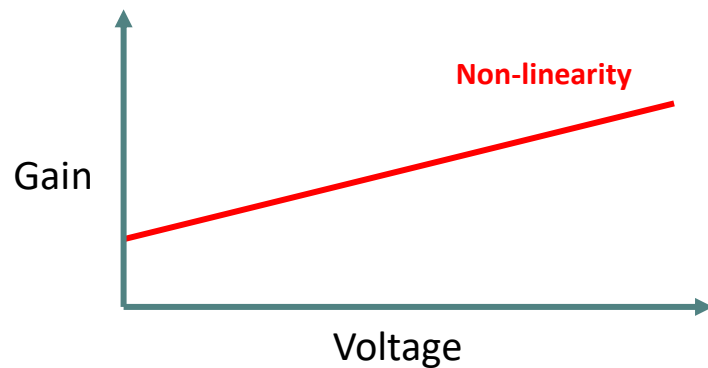


Non-Linear Distortions

- When the channel is carrying analogue video, distortions will directly affect the picture (video signal domain).

- HF Gain/Loss

- **Over-sharp / soft** pictures. Possibility of **ringing** or **overshoots**.
- Chrominance/Luminance gain errors in composite signals.

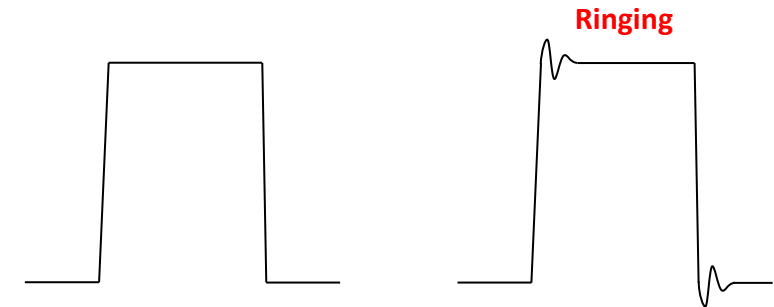

- Group Delay Errors

- **Different frequencies** are **delayed** by **different** amounts.
- Effect is **ringing/smearing** on edges (which can look like soft pictures).




- LF Gain/Loss

- Light/dark **streaking** after bright objects.



- Non-Linearity


- Black or white **crushing/clipping**.
- Differential Gain/Phase in composite systems (Chrominance gain/phase varies with Luminance level).

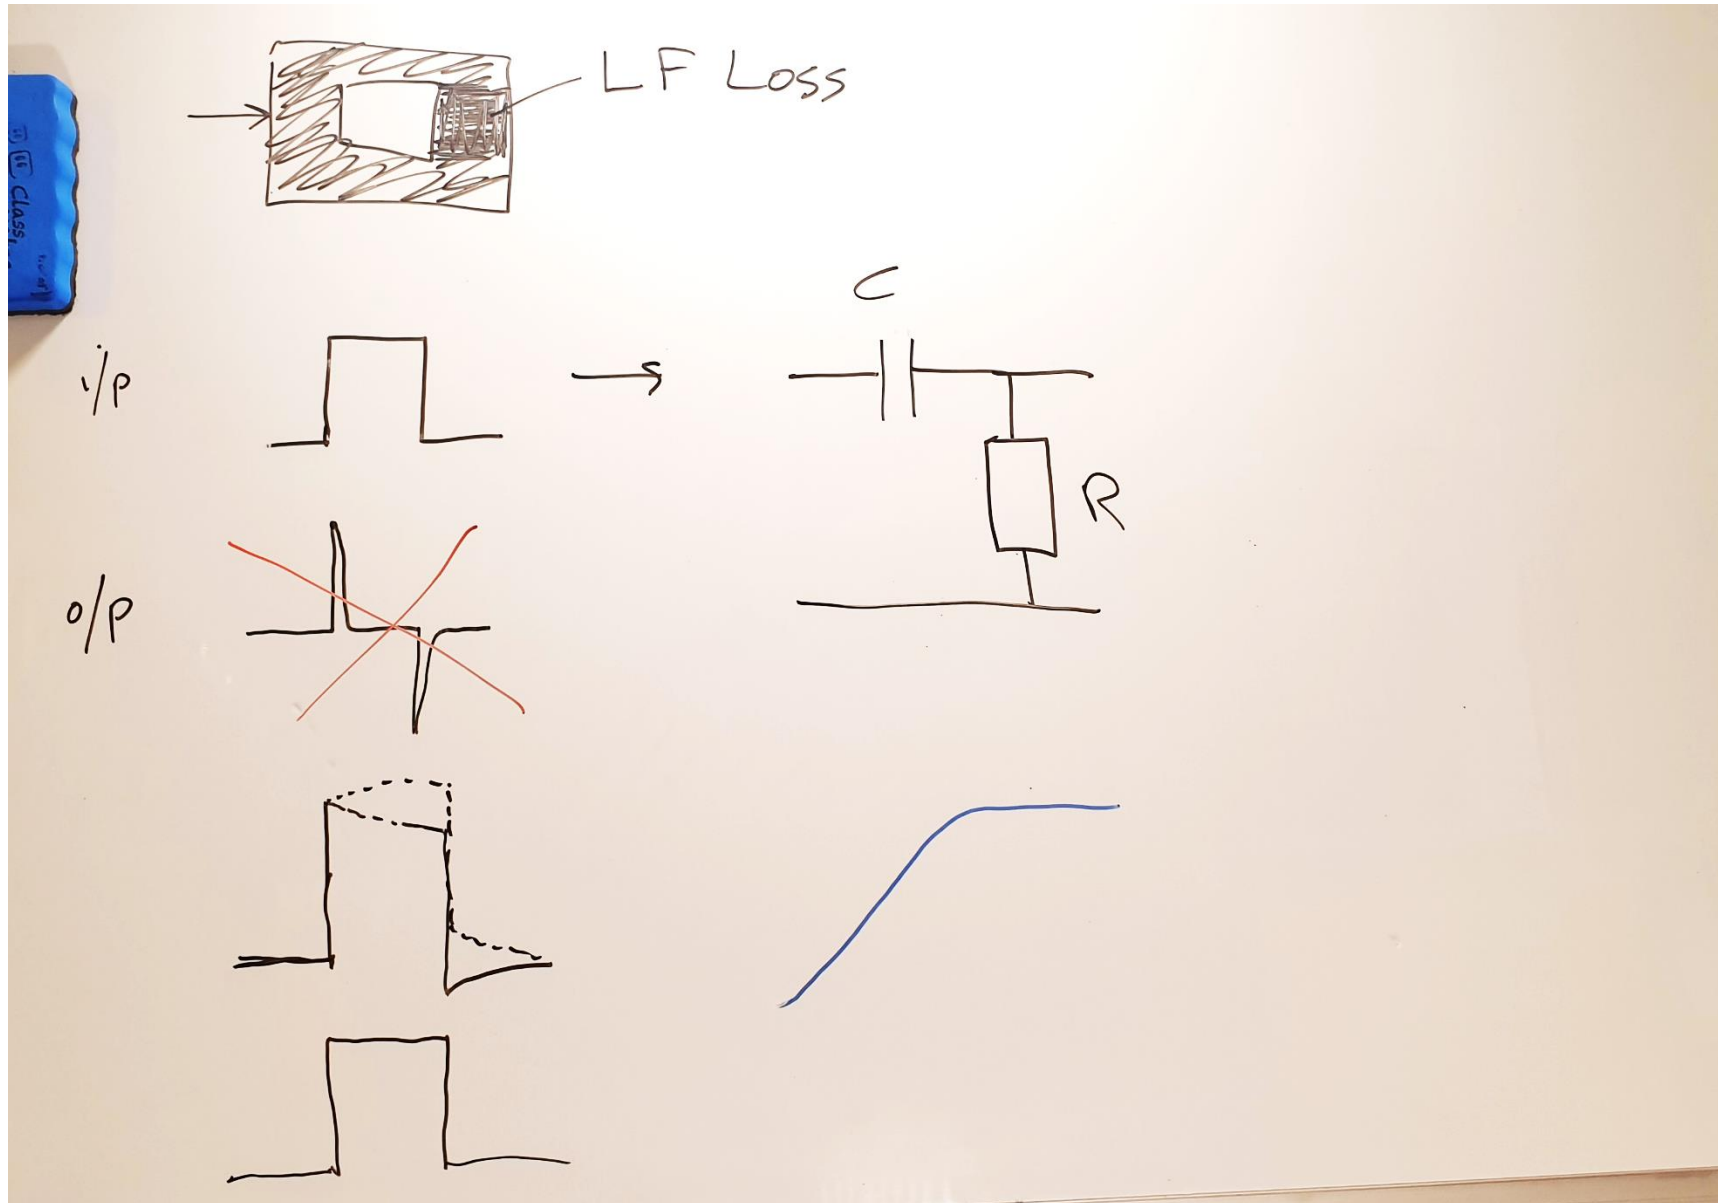


- With analogue video, there is a direct correlation between the Signal Domain and the Video Domain. Therefore, most of the tests cover both.

- Frequency Response Tests


- Multiburst
- Line Sweep
- Zone Plate

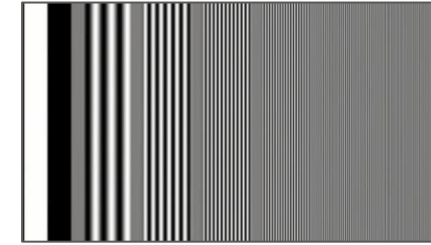

Multiburst

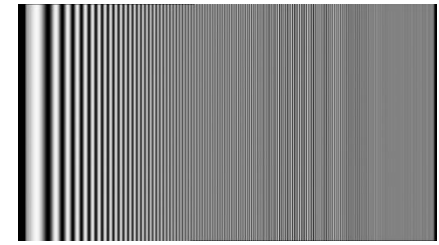

Line Sweep

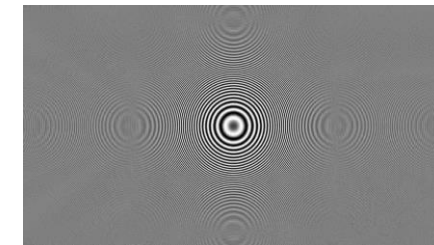

Zone Plate

- Frequency Response Tests

- Pulse & Bar – Designed be representative of real pictures.
- 50Hz Square Wave – For testing low frequency response.




Pulse & Bar




50Hz Square Wave

- Non Linearity Tests

- Ramp/Sawtooth
- Staircase
- Composite Ramp/Staircase

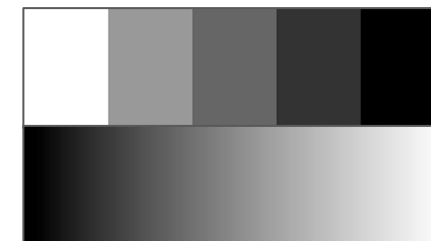


Staircase & Ramp

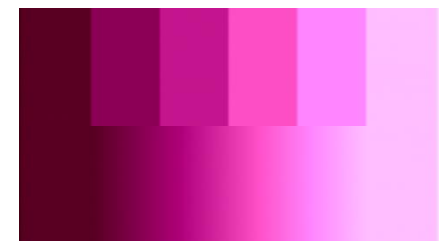

Composite Staircase & Ramp

- To measure frequency response, you could use Line Frequency Sweep.

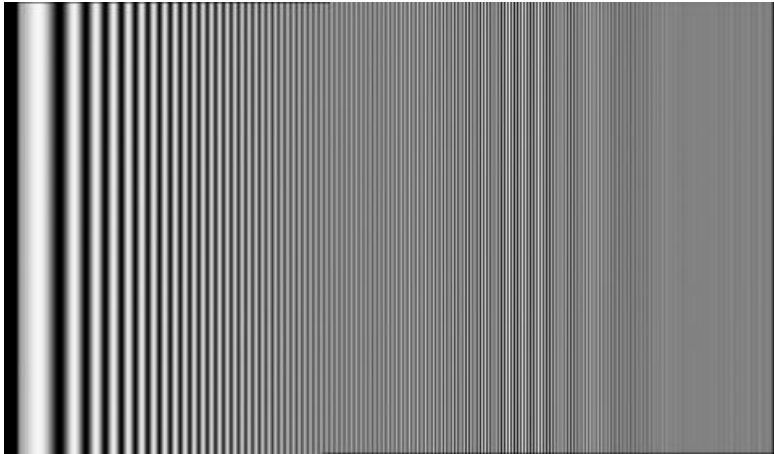

Line Sweep

- **Pulse and Bar** is designed to measure frequency response in a way that gives a **better indication** of the effect of distortion on **real pictures**.

- It has **3** main parts:

1) 2T Pulse



- Good for showing HF Loss/Gain and Group Delay Distortion
 - Pulse amplitude (pulse to bar ratio) – HF
 - Pulse ringing – Group Delay

2) Bar


- Bar Tilt – LF Loss/Gain

3) Composite Pulse



- Added to show the effects on the Chrominance

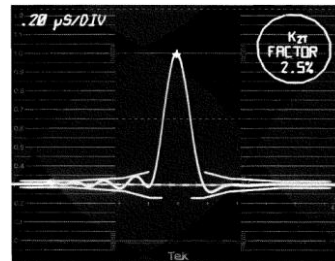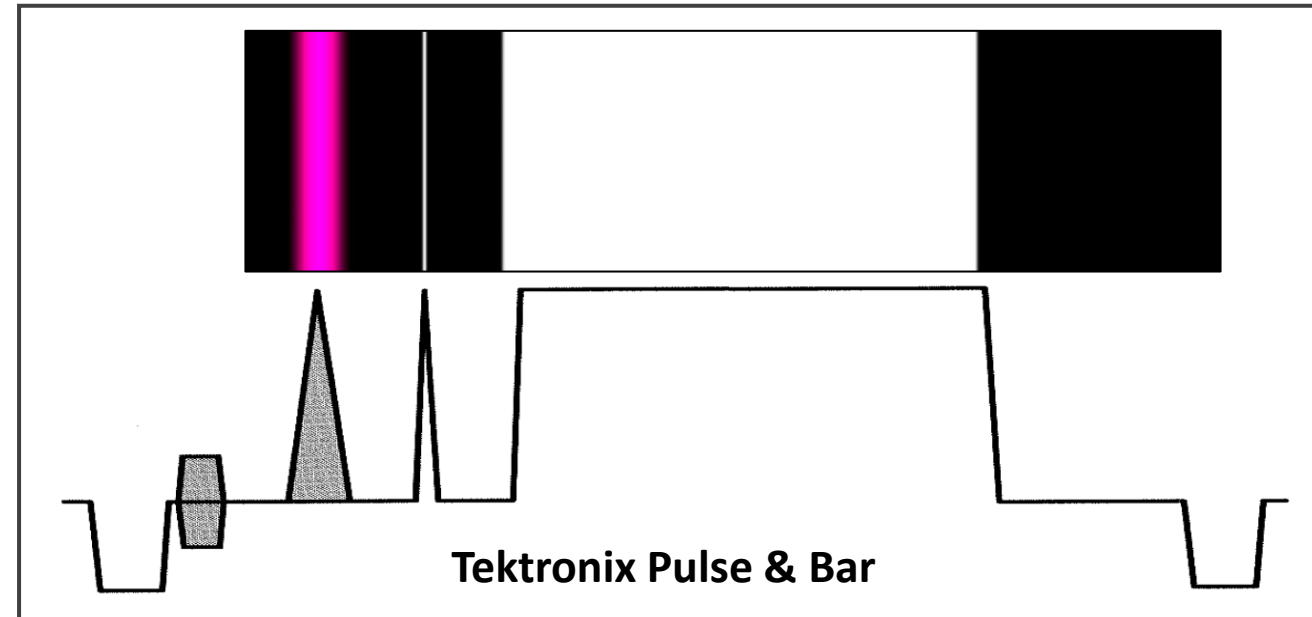

2T Pulse Showing Effects of Group Delay

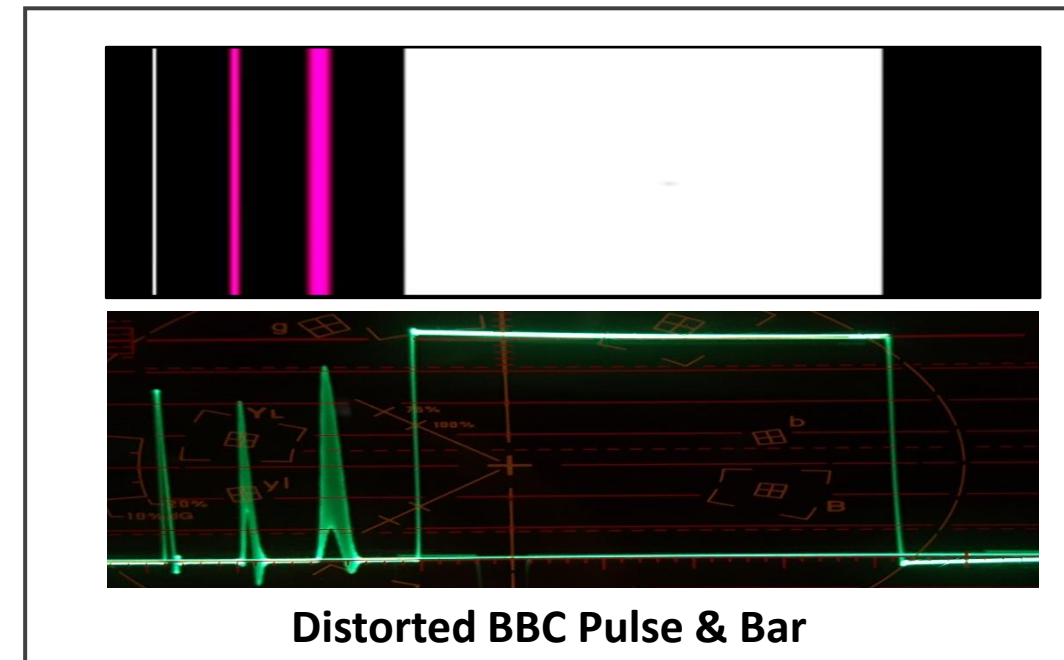


- A common cause of **HF loss** is long cable runs is **skin effect**.
 - **Skin effect** causes the resistance of the cable to increase with frequency.
 - **Current** flows only along the **outer part** of the cable (the **skin**).
 - **Cross-sectional area** of the skin **reduces with frequency**.
 - Can be compensated for with **equalisation**.
 - **Several km** of transmission is possible, if properly equalised.
- A common cause of **LF loss/gain** is **dried up capacitors** in **old analogue equipment**.

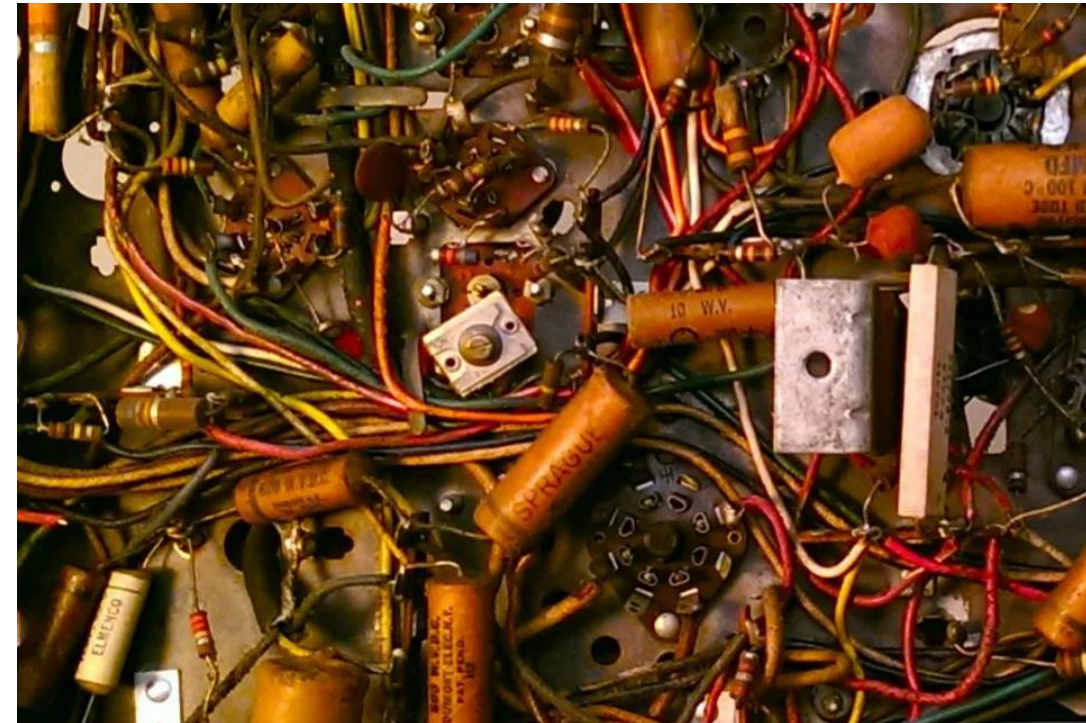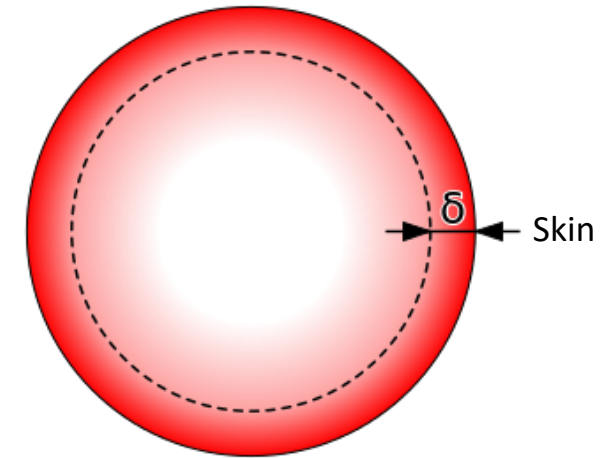

- Small distortions of the signal channel are less important.
- Nearly all **SDI equipment** is **auto-equalising**.
- Distances of up to **200m** for HD, **600m** for SD are typically possible.
 - Very dependent on the cable type.
- SDI is very prone to errors caused by **signal reflections** from **unterminated/damaged** cables.
- An SDI receiver needs to be able to:
 - **Distinguish** between a **high voltage** and a **low voltage**.
 - Determine where the **changes** take place.
- An **eye display** and the **eye height** allow us to assess the likelihood of this being the case.

- **Eye display** shows the voltage on the wire.
 - With the oscilloscope timebase **triggered** on the digital **clock edges**.
- **Eye height** represents signal integrity.
- Display also gives an indication of **Jitter** (varying delay).

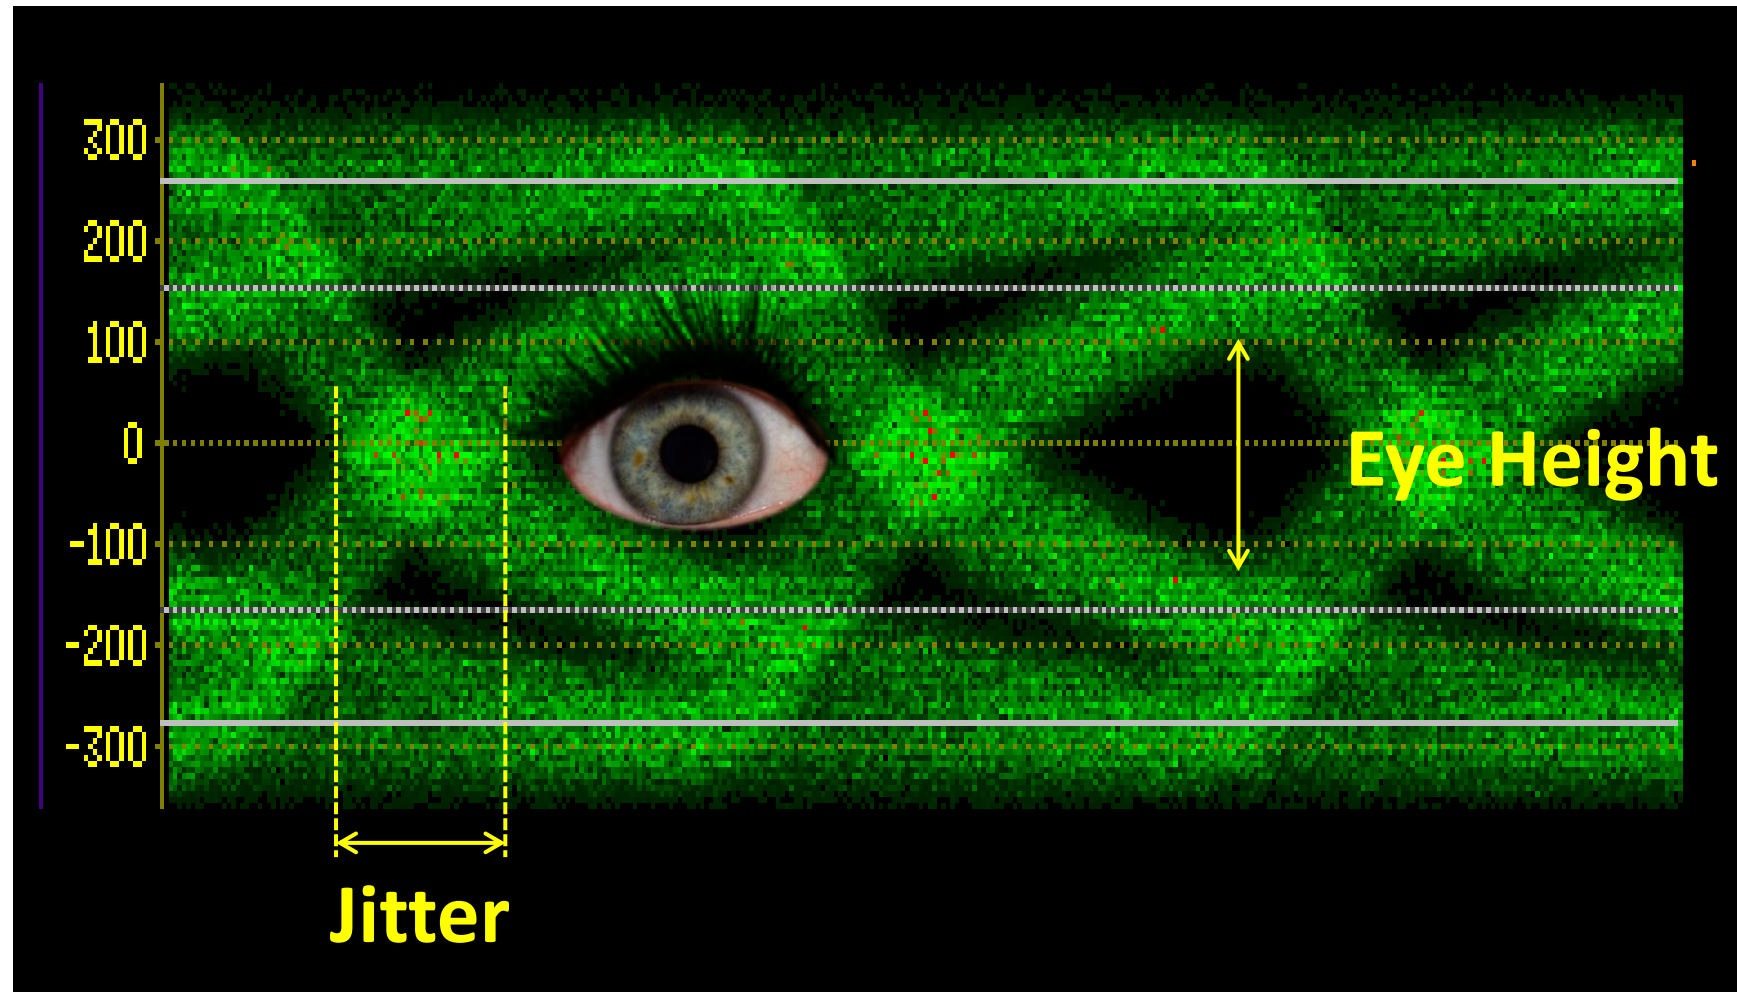

- Some waveform monitors will show graphs of jitter, with various filters applied.



- A picture designed to make it likely that, after **scrambling**, there will be a **pattern of digits** which is **most challenging** to the receiver.
- There are 2 common types:


1) Cable Equalizer Test

- Y = 198h C = 300h (magenta)
- The repetition of **19 zeros** followed by **1 one** or **19 ones** followed by **1 zero** will test the ability of the equalizers, input buffers and coupling network (AC-coupling capacitor or transformer) to handle baseline wander and low frequency content.


2) Phase Locked Loop Test

- Y = 110h C = 200h (dark grey)
- The repetition of **20 zeros** followed by **20 ones** will test the ability of the Receive Clock and Data Recovery (CDR) PLL to remain locked for patterns with **very low transition density**.
- The transition from high transition density to low transition density affects the gain and bandwidth of the PLL, making it a challenging pattern to recover with no errors.

- They can be combined in a **single test pattern**, often called **SDI Checkfield**.

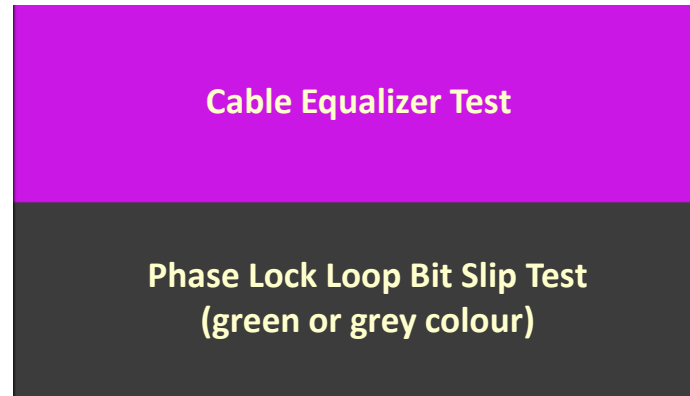

Monitor View

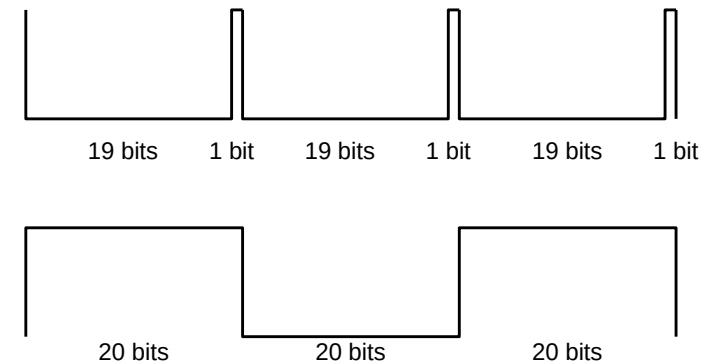

Worst Case Serial Waveform

Lecture Outline

- Introduction

- Why do we test?
- Tolerances
- Picture quality assessment
- Types of testing & Monitoring
- Accuracy and calibration
- Standards and specifications
- Broadcast chain & measurement domains
- Test equipment

- Signal Domain Tests

- What can go wrong?
- Analogue Video
- Digital Video

- Video Domain Tests

- What can go wrong?
- Single channel tests
- Component tests
- Test waveforms and displays
- Noise measurements

- Picture Monitor Grading & Setup

- Revision of Monitor Principles
- Monitor Grading
- Monitor Setup – Adjustments and test signals



Lecture Outline

- Introduction

- Why do we test?
- Tolerances
- Picture quality assessment
- Types of testing & Monitoring
- Accuracy and calibration
- Standards and specifications
- Broadcast chain & measurement domains
- Test equipment

- Signal Domain Tests

- What can go wrong?
- Analogue Video
- Digital Video

- Video Domain Tests

- What can go wrong?
- Single channel tests
- Component tests
- Test waveforms and displays
- Noise measurements

- Picture Monitor Grading & Setup


- Revision of Monitor Principles
- Monitor Grading
- Monitor Setup – Adjustments and test signals

- We have **already** looked at **video domain** test for **Analogue video**.
 - Because the **video domain** and **signal domain** for analogue are essentially the **same**.
- The **video domain** of an **SDI video signal** can potentially suffer from the **same problems as analogue** video
 - Although it is usually **much less likely**.
- So we can use the **same techniques** to look at the frequency response, gain, delay response and noise (including **quantisation noise**) of **each component** channel within the SDI signal.


- With any **component video** (such as that carried as SDI or analogue), there can be **gain/delay errors** between the **3 components**.
- **RGB is much less robust** in this respect than **Y, Pr, Pb**
 - Because such errors cause errors in the luminance signal – human vision is most sensitive to this.
- Possible causes of component video **inter-channel gain and delay errors** include:
 - Incorrect cable lengths / terminations
 - Incorrect adjustment of timing within equipment using digital processing

• Test Waveforms:

- Bowtie
 - Requires a **special measurement mode** on the waveform monitor.
- Colour Bars (100% and 75%).

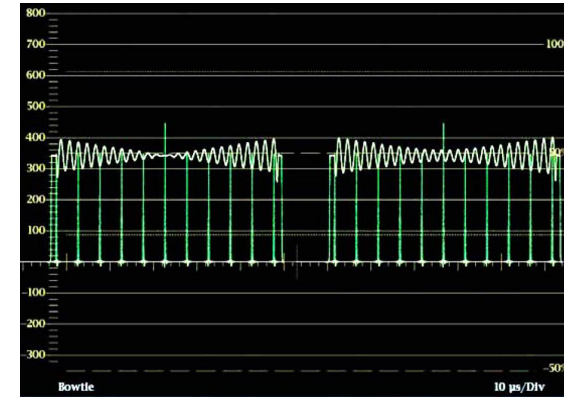


Bowtie Display of the Bowtie Waveform

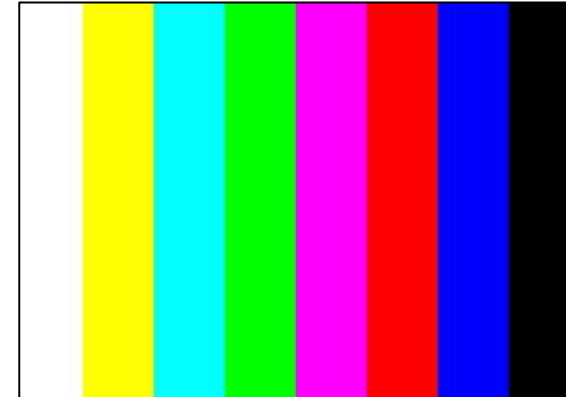


100% Colour Bars

• Display Modes:


- Bowtie
- Vector
- Lightning
- Parade
- Overlay

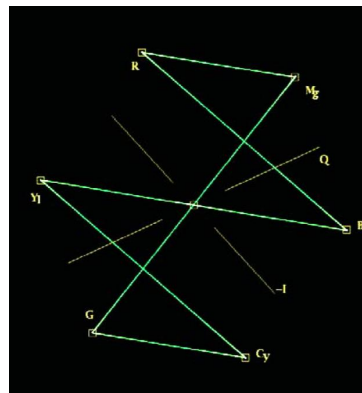

Vector Display

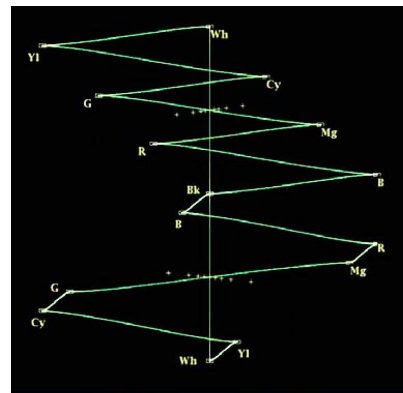

Lightning Display


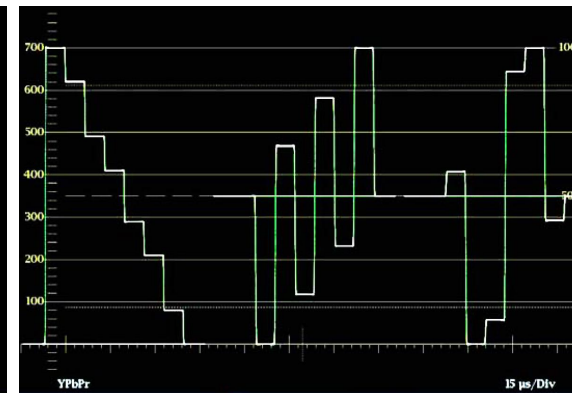


Parade Display of Y Pb Pr





Overlay Display of Y Pb Pr, magnified horizontally to show the green/magenta transition

- 100% colour bars have the primary and secondary colours, black and white.
- The coloured parts are 100% saturated and 100% amplitude.

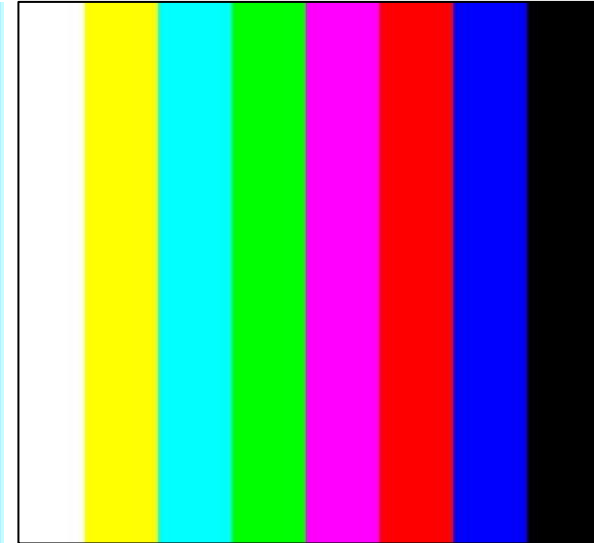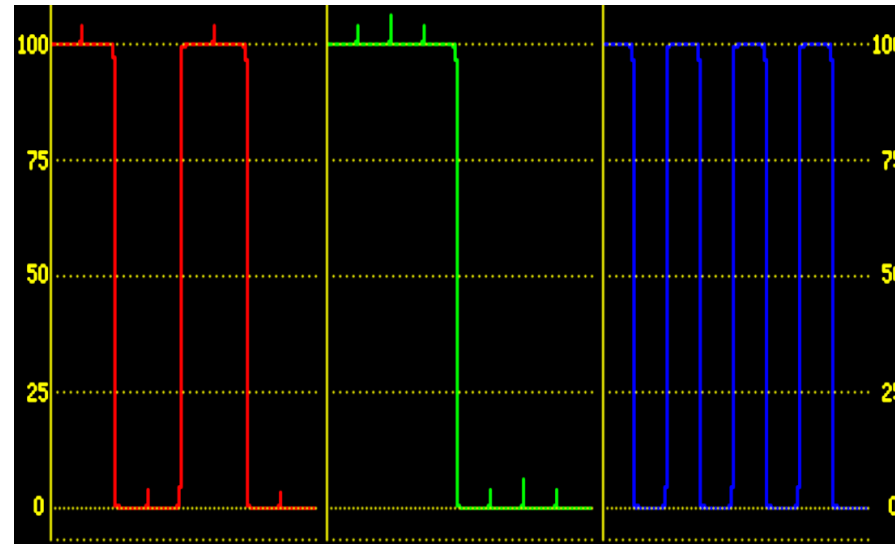


- 75% colour bars (EBU Bars) have the same colours.
- The coloured parts are 100% saturated but only 75% amplitude (they are darker than the colours in 100% bars).

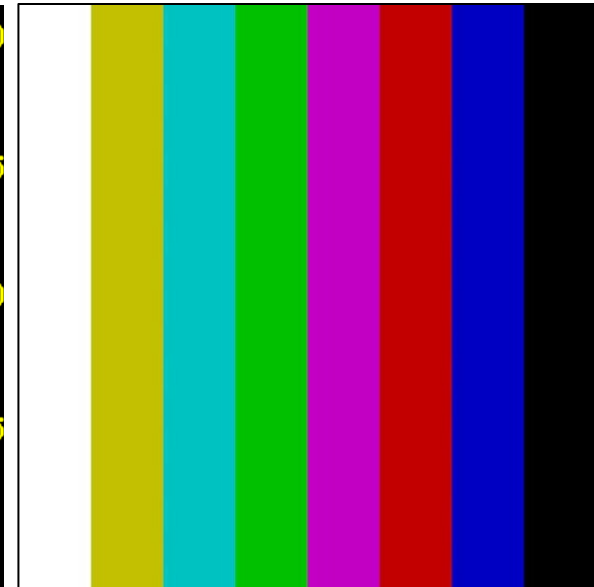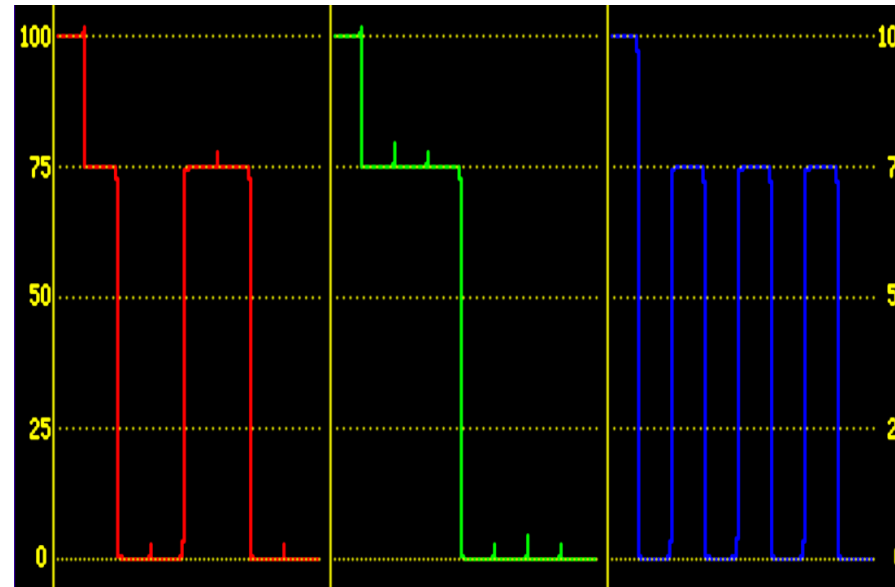




100% Colour Bars (Rec 601)

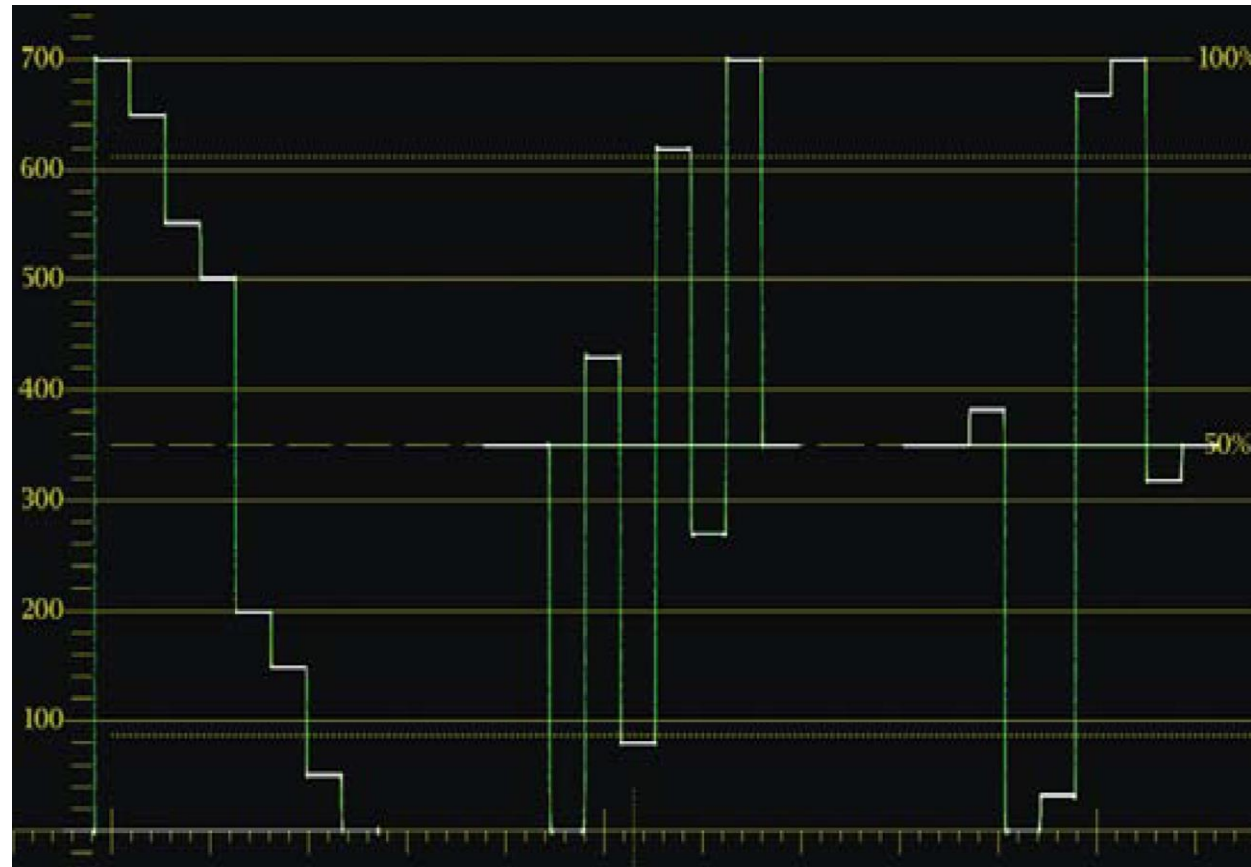


100% Colour Bars – HD (Rec 709)


- The full range of reproducible colours in a TV system can be represented by combinations of **Red**, **Green** and **Blue** signals between **0%** and **100%**.
- It is possible to create **Y**, **Pr**, **Pb** component or **PAL/NTSC** signals that are within their specific limits, yet converted back to RGB they result in signals **above 100%** or **below 0%**.
- Another cause of such signals could be video sources, such as cameras, which **do not clip** the signals at **100%**.
- This is called a **gamut error**.
- Such signals are called **invalid**.

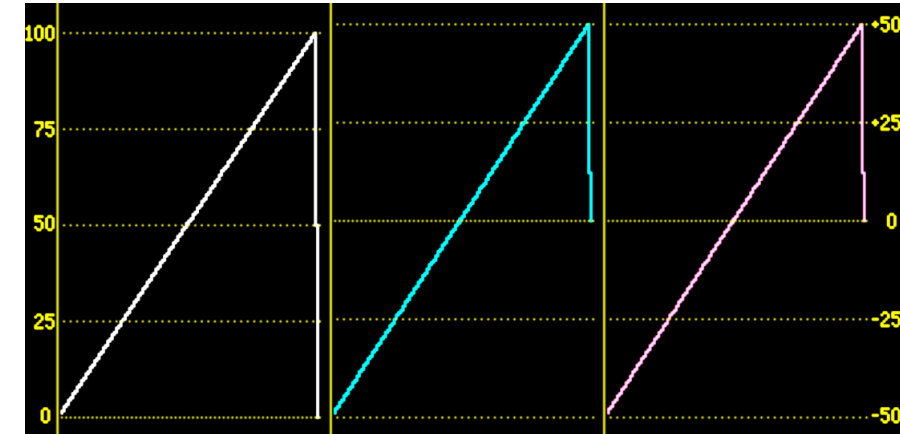


A Ramp signal on all the components (Y, Pb, Pr). All components are within range.

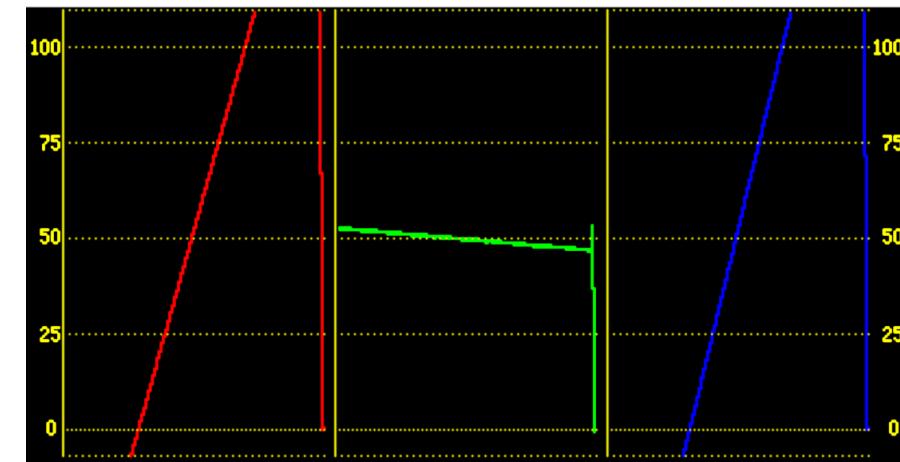




The same signal converted to RGB. R and B are well out of range (Gamut Error)

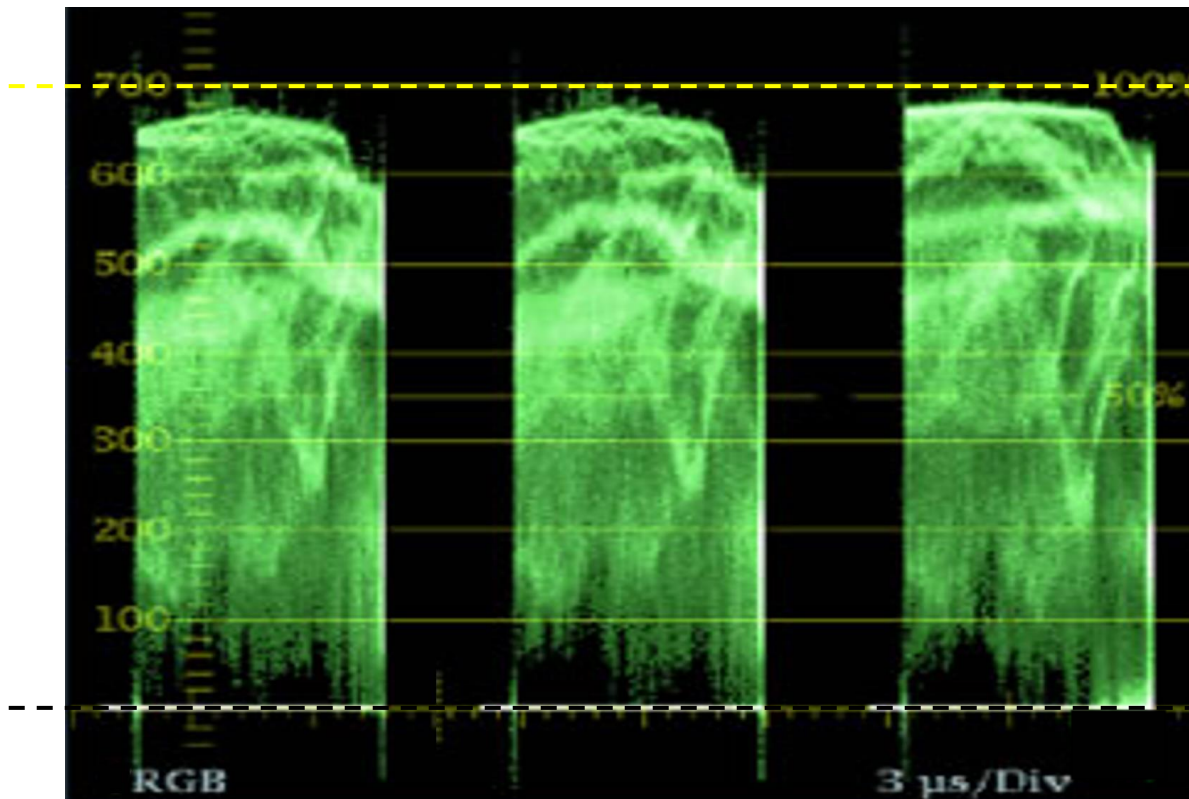

Gamut OK

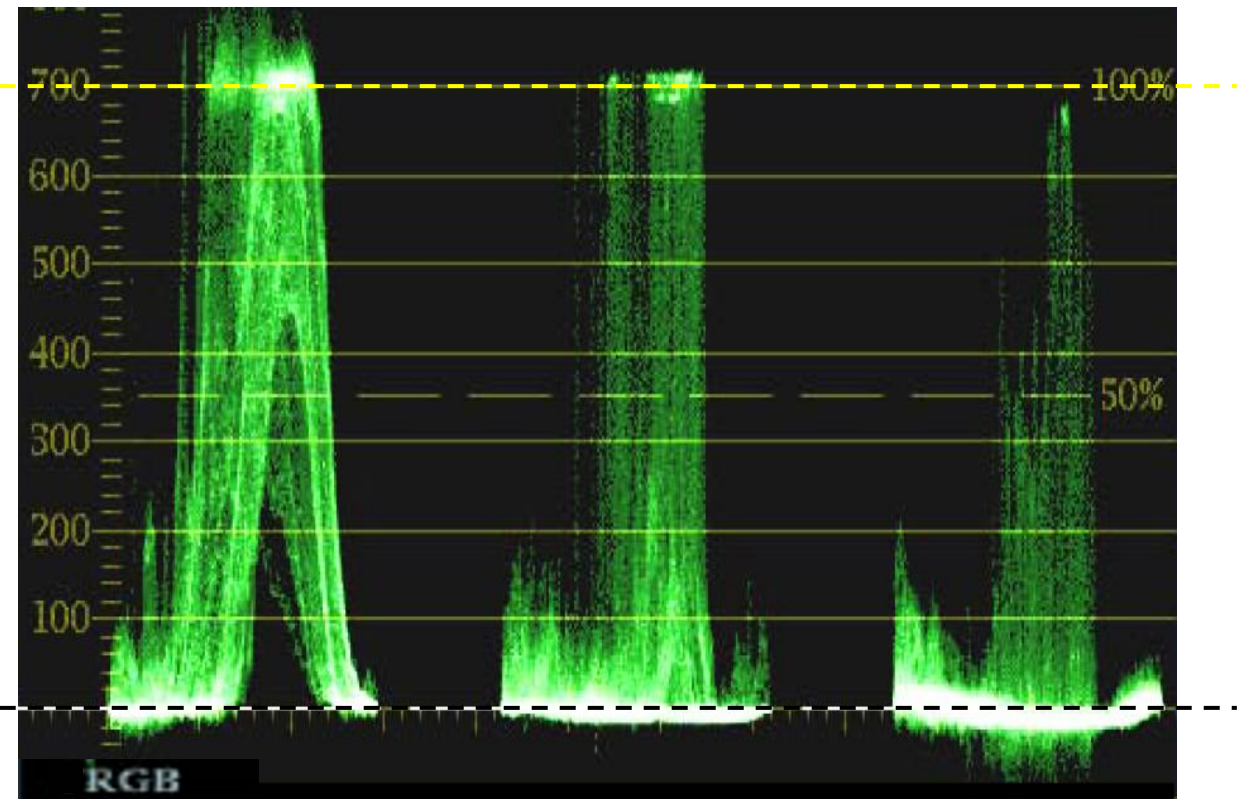

Gamut Error

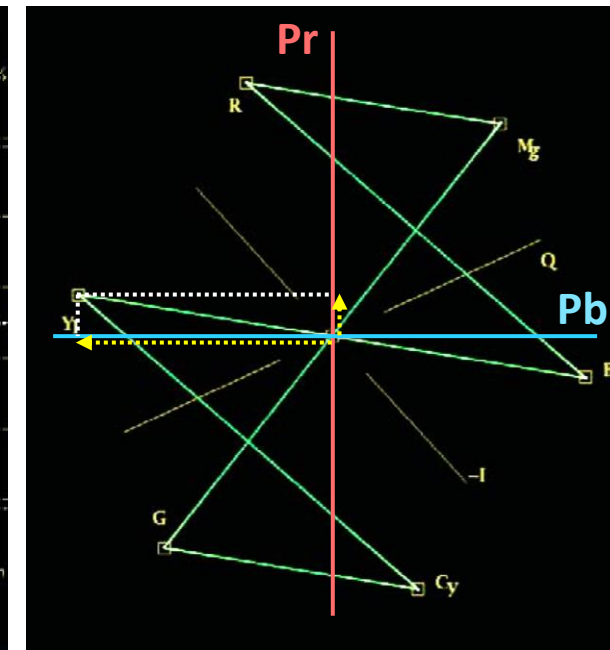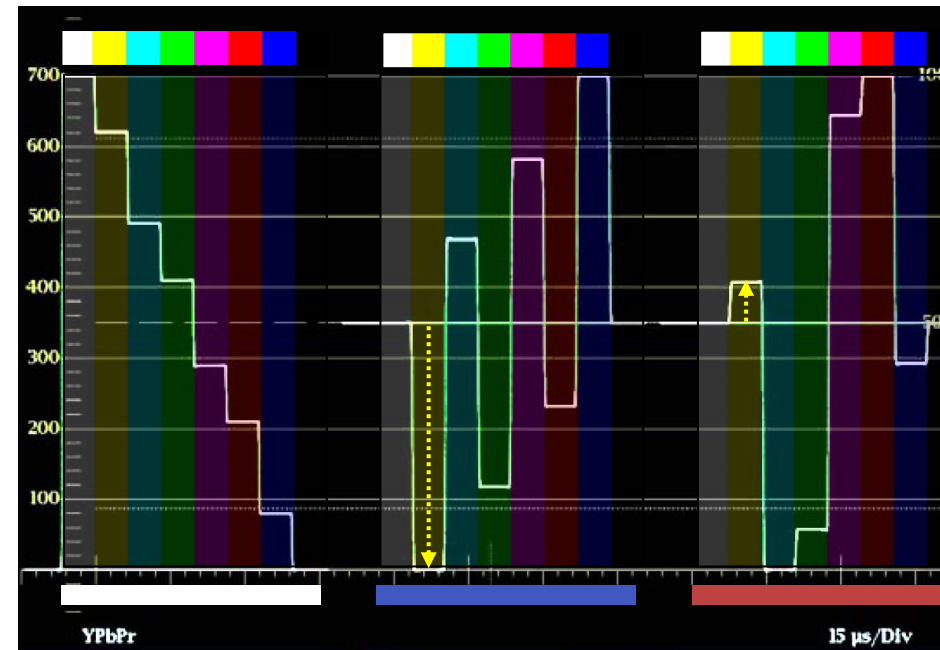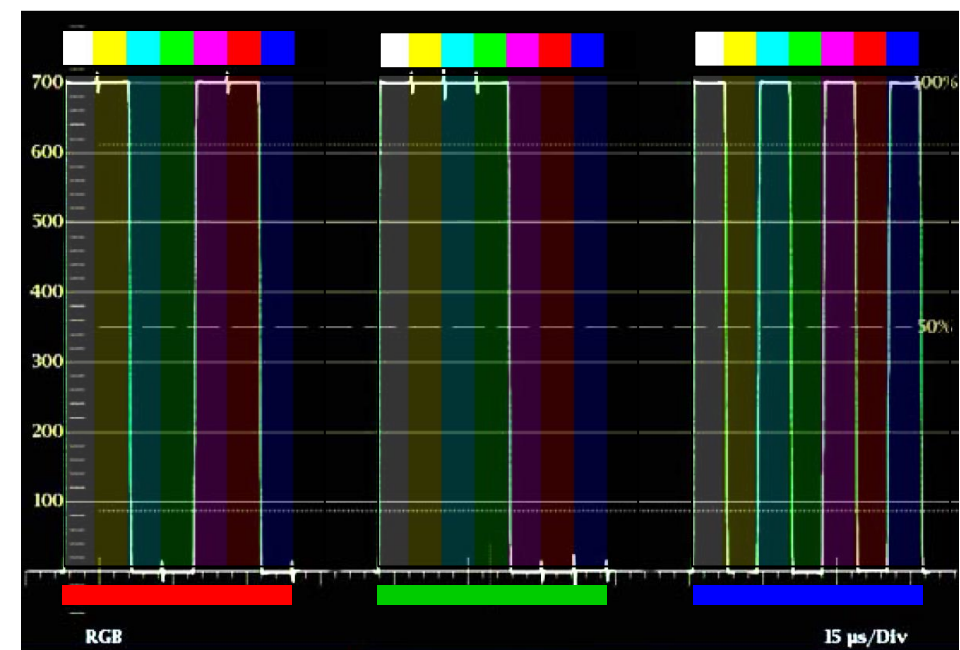

RGB Parade Display – 100% Colour Bars


- 1 line worth of time – Red, Green, Blue.
- Commonly used in editing and post production.

Y, Pb, Pr Parade Display – 100% Colour Bars

- 1 line worth of time – Y, Pb, Pr.
- Pr and Pb waveforms have been lifted up to allow comparison with Y.
- Useful for general monitoring of component signals (inc. SDI) in TV studios and master control.


Vector Display – 100% Bars

- Vertical Axis – Pr
- Horizontal Axis – Pb
- Y not shown.
- Useful for lining up cameras on grayscale chart.

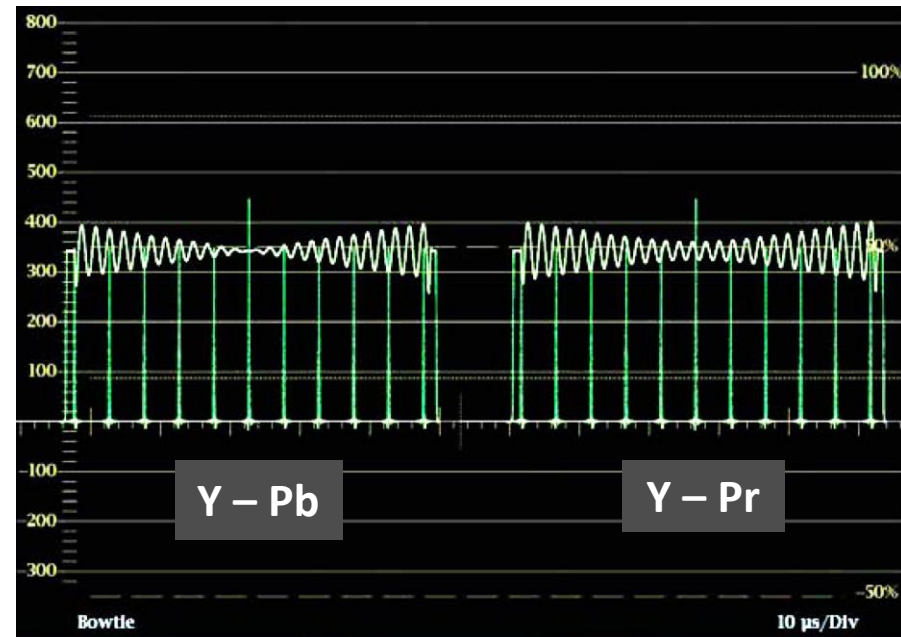


Bowtie Display

- Left side: **Y - Pb**
- Right side: **Y - Pr**
- Bowtie waveform consists of:
 - **500kHz Y**, **502kHz Pr** and **Pb**.
- Designed to **cancel out** in the **centre** if **levels** and **delay** between components are **correct**.

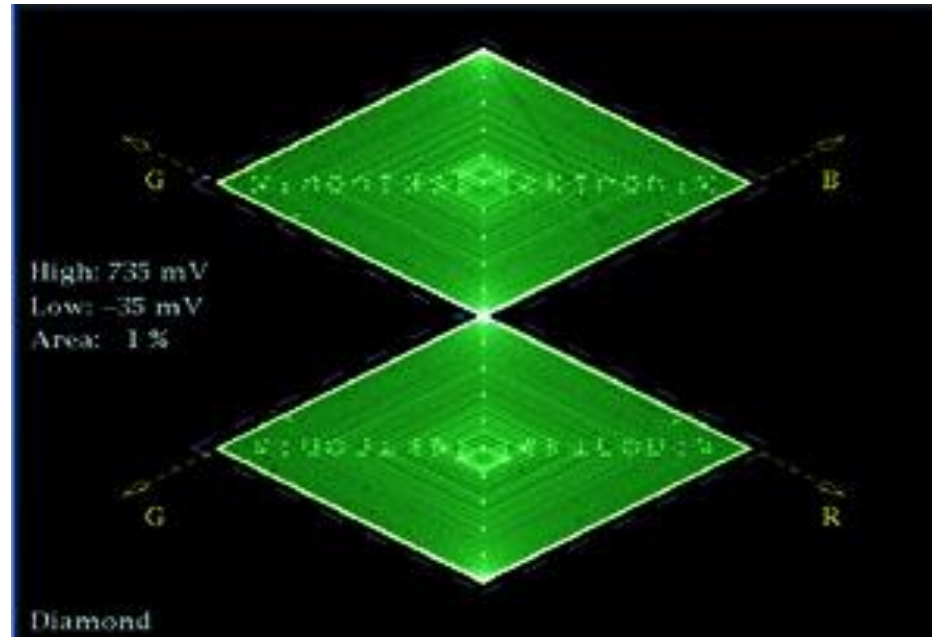


Diamond

- Shows RGB levels in a way designed to highlight **Gamut errors**.
- There is an equivalent display for NTSC and PAL called '**Arrow**'.

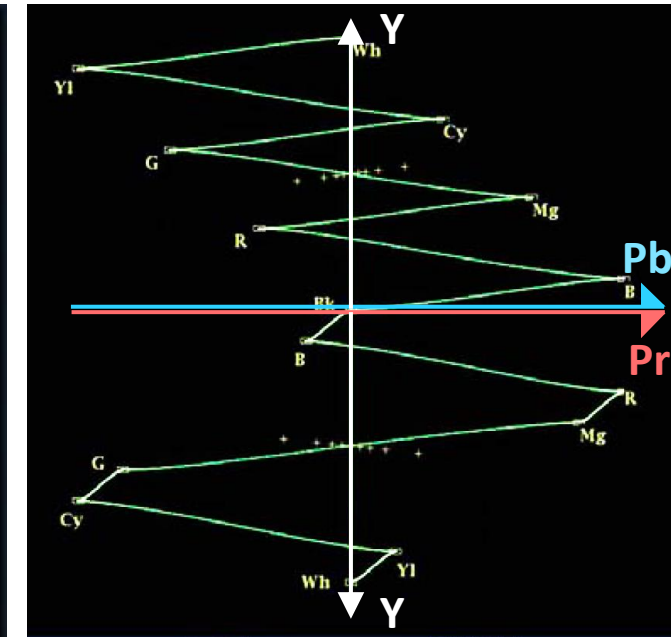

Lightning Display – 100% Bars

- Top: **Y against Pb**
 - **Y** increasing vertically upwards.
- Bottom: **Y Against Pr**
 - **Y** increasing vertically downwards.
- Bendy transitions show delay between channels.


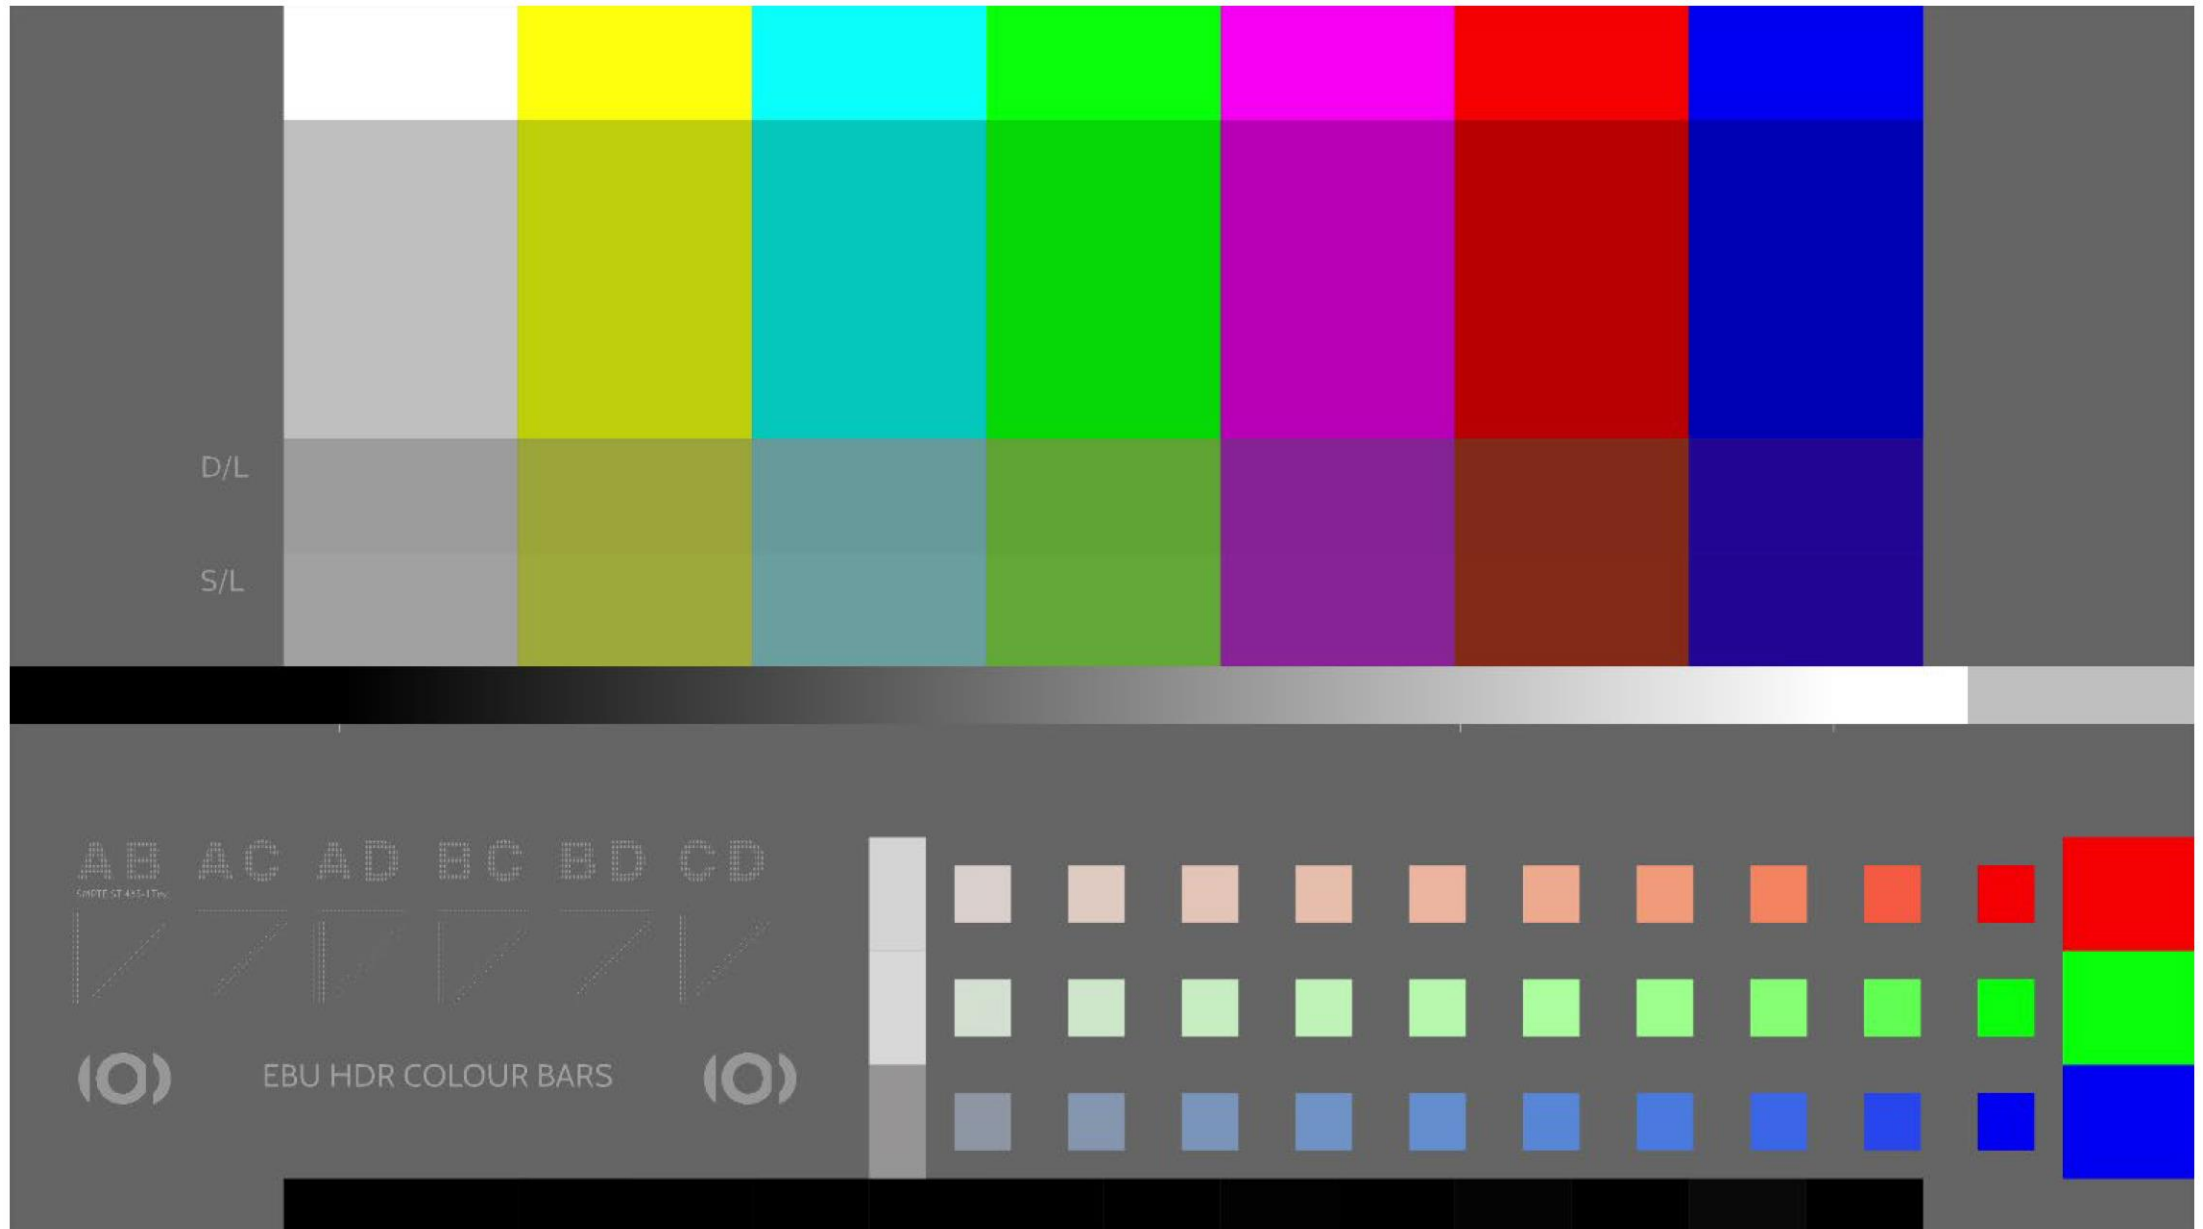






- There are usually 2 types of noise which are looked for:
 - **Random Noise** Usually measured above line frequency (15kHz for SD)
 - **Coherent Noise** (such as **mains hum**) Measured below 15kHz
- Expressed in **dB** as the **ratio** between **rms noise voltage** and **peak signal** (0.7V).

$$20 \log_{10} \left(\frac{V_{\text{noise (rms)}}}{0.7 \text{ V}} \right)$$

- To measure noise in the presence of video, a ‘**quiet**’ part of the video is gated out.
- **Weighting filters** can be applied:
 - Luminance Weighting: bias the reading towards low frequency noise which looks worse.
 - Chrominance Weighting: bias the reading toward noise around colour subcarrier frequency which gives rise to low frequency colour noise.

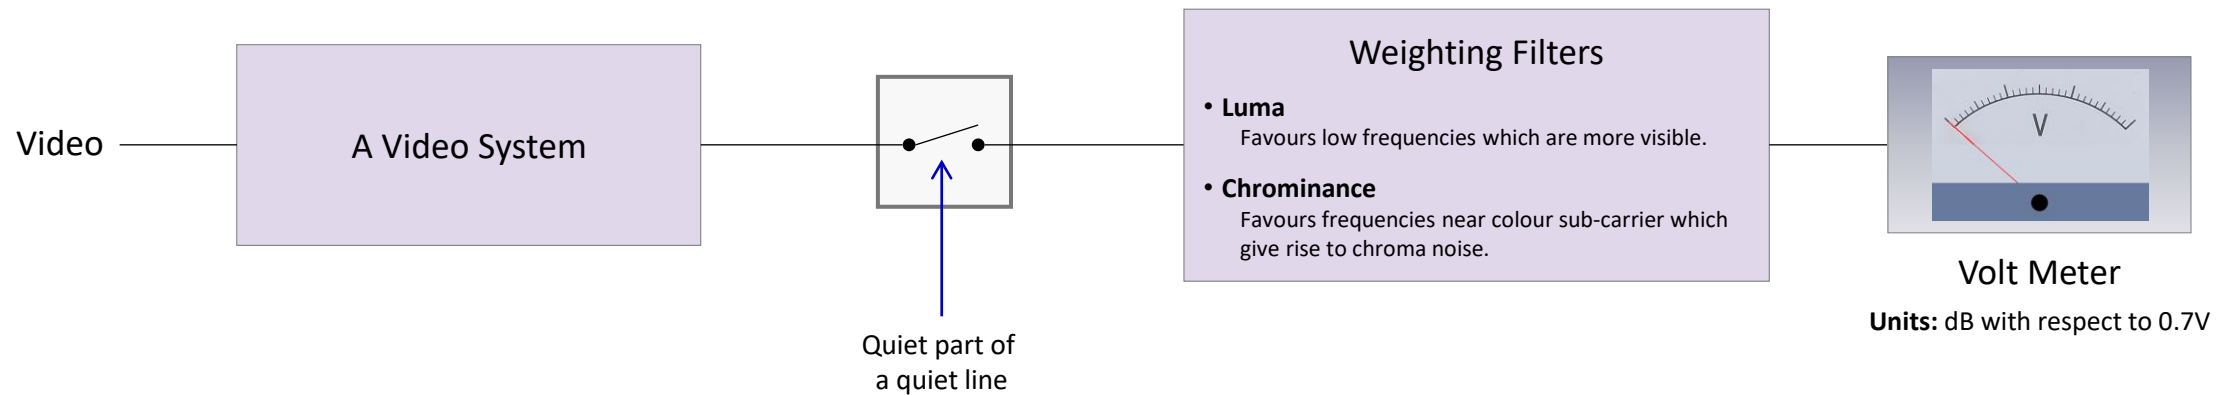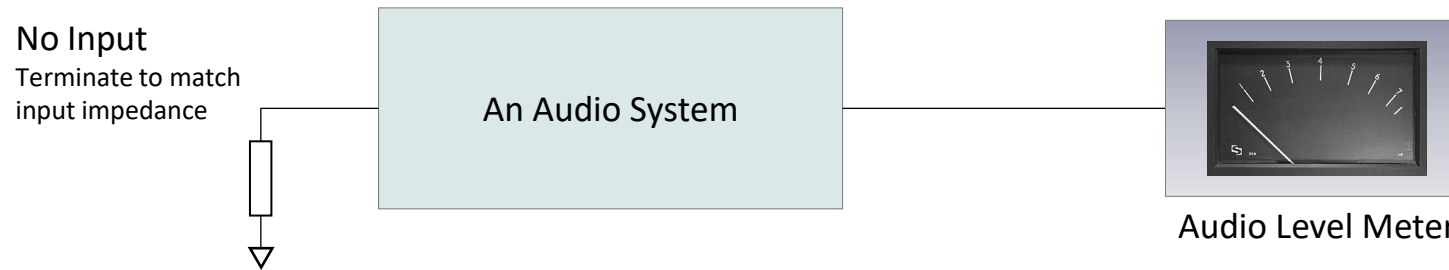

- The digitisation process add **quantisation noise** to the video.
- This is the **difference** between the **analogue levels** and the **fixed levels** after the video has been **quantised** into digital levels.
 - 1024 available levels for a 10 bit system, 256 levels for an 8 bit system (although not all levels are used for the actual signal).

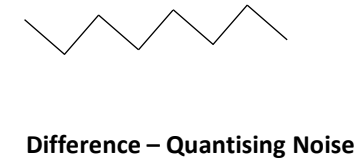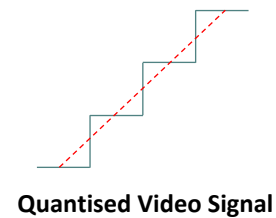

- Quantisation noise can be measured using a **ramp waveform** passed through a **digital system**.
- The ramp is **nulled out** in the **test set** by adding a **perfect inverse analogue ramp**.
- The resulting **quantising noise** is measured using similar techniques to the those used for random noise.

Lecture Outline

- Introduction

- Why do we test?
- Tolerances
- Picture quality assessment
- Types of testing & Monitoring
- Accuracy and calibration
- Standards and specifications
- Broadcast chain & measurement domains
- Test equipment

- Signal Domain Tests

- What can go wrong?
- Analogue Video
- Digital Video

- Video Domain Tests

- What can go wrong?
- Single channel tests
- Component tests
- Test waveforms and displays
- Noise measurements

- Picture Monitor Grading & Setup

- Revision of Monitor Principles
- Monitor Grading
- Monitor Setup – Adjustments and test signals

Lecture Outline

- Introduction

- Why do we test?
- Tolerances
- Picture quality assessment
- Types of testing & Monitoring
- Accuracy and calibration
- Standards and specifications
- Broadcast chain & measurement domains
- Test equipment

- Signal Domain Tests


- What can go wrong?
- Analogue Video
- Digital Video

- Video Domain Tests

- What can go wrong?
- Single channel tests
- Component tests
- Test waveforms and displays
- Noise measurements


- Picture Monitor Grading & Setup

- Revision of Monitor Principles
- Monitor Grading
- Monitor Setup – Adjustments and test signals

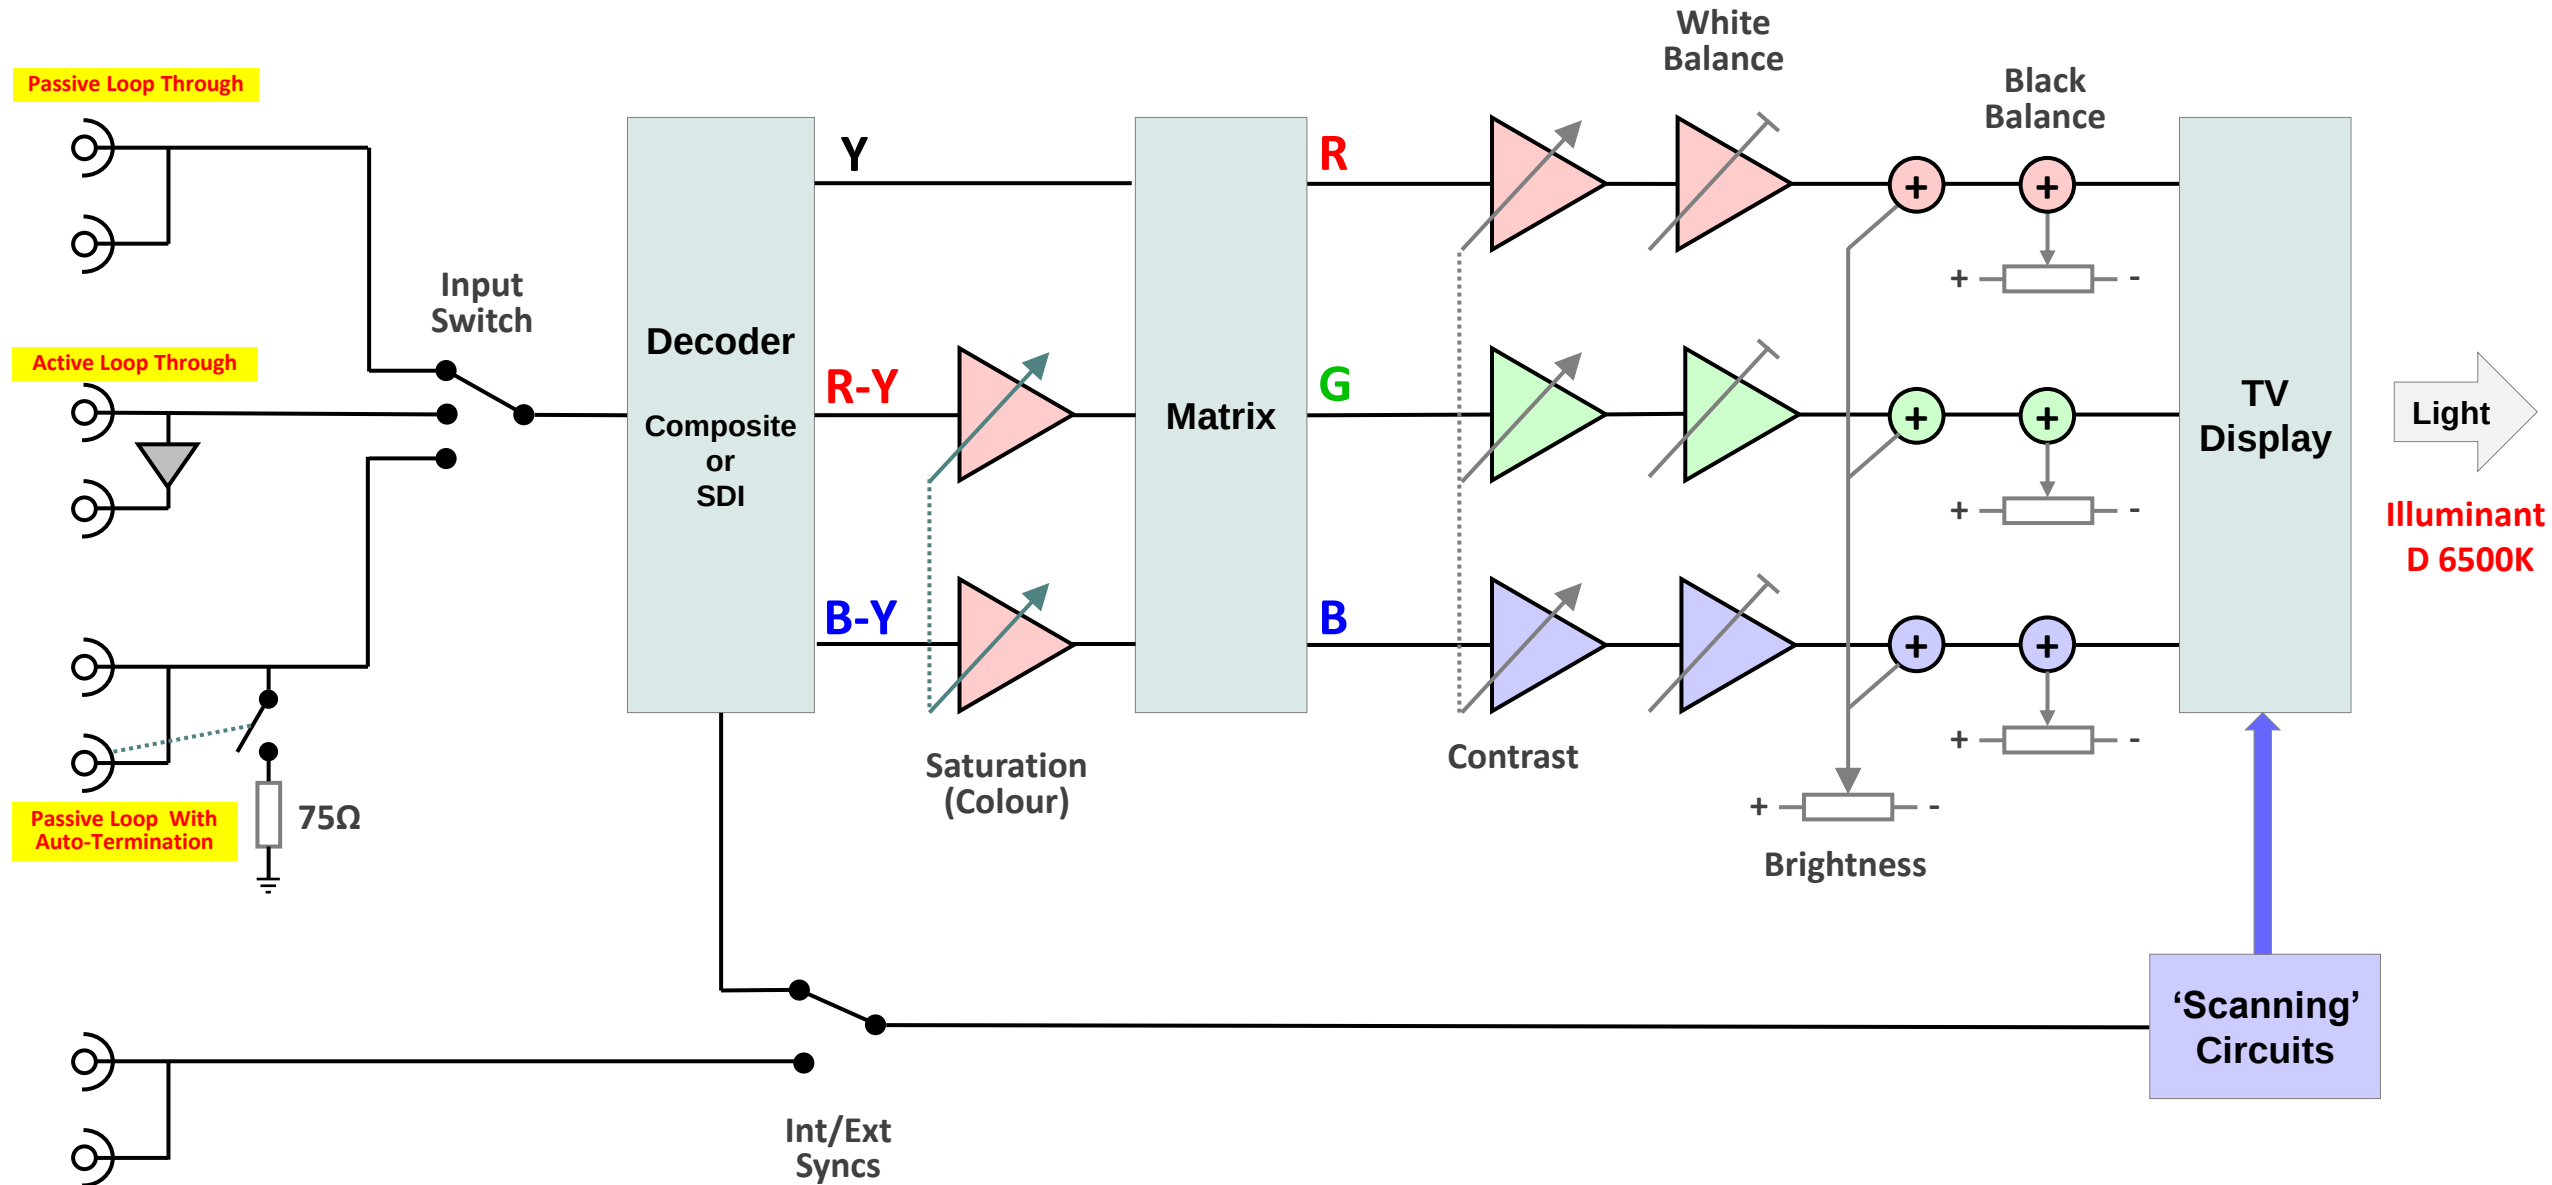


• CRT

- A glass structure containing a near **vacuum**.
- An **electron gun** fires a **beam of electrons** at a **phosphor** on the rear of the screen.
- The excited phosphor **emits light proportional to beam current**.
- **Magnetic fields** from **2 sets of coils** are used to **scan** the beam horizontally and vertically.

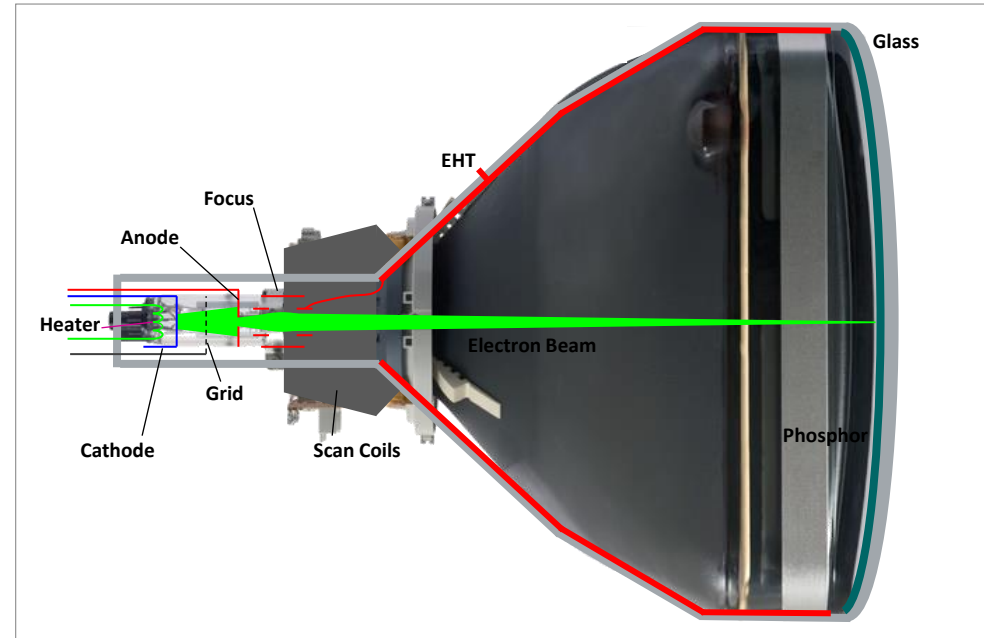


• Plasma

- Pixels consist of **phosphor coated glass capsules**, filled with **low pressure gas** (neon or xenon) which is excited by nearby electrodes.
- The gas emits **ultra violet light** which **excites the phosphor**.
- Brightness variations are created by **switching** the pixel on and off quickly (**Pulse Width Modulation**).

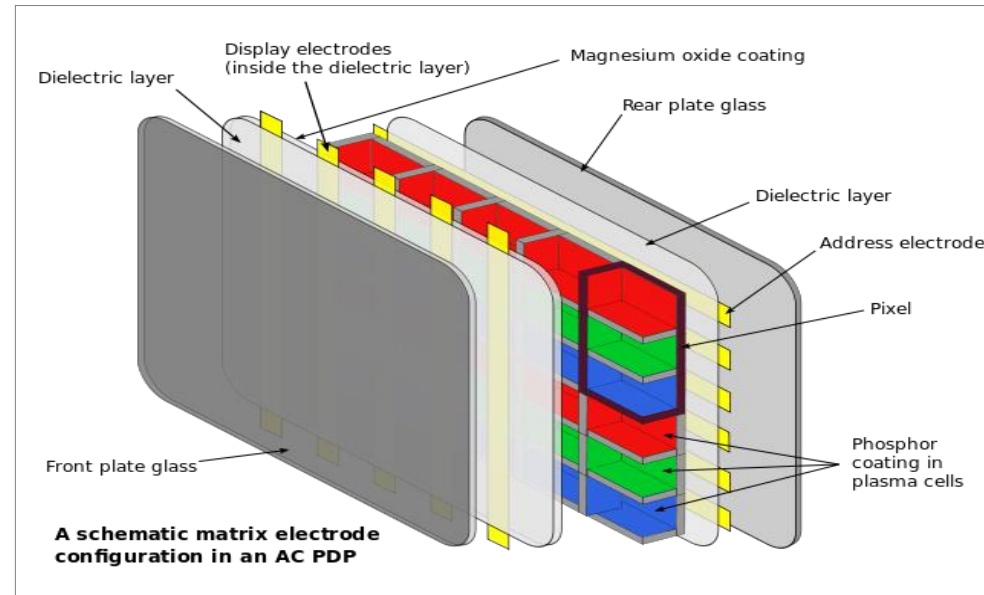


• CRT

- A glass structure containing a near **vacuum**.
- An **electron gun** fires a **beam of electrons** at a **phosphor** on the rear of the screen.
- The excited phosphor **emits light proportional to beam current**.
- **Magnetic fields** from **2 sets of coils** are used to **scan** the beam horizontally and vertically.


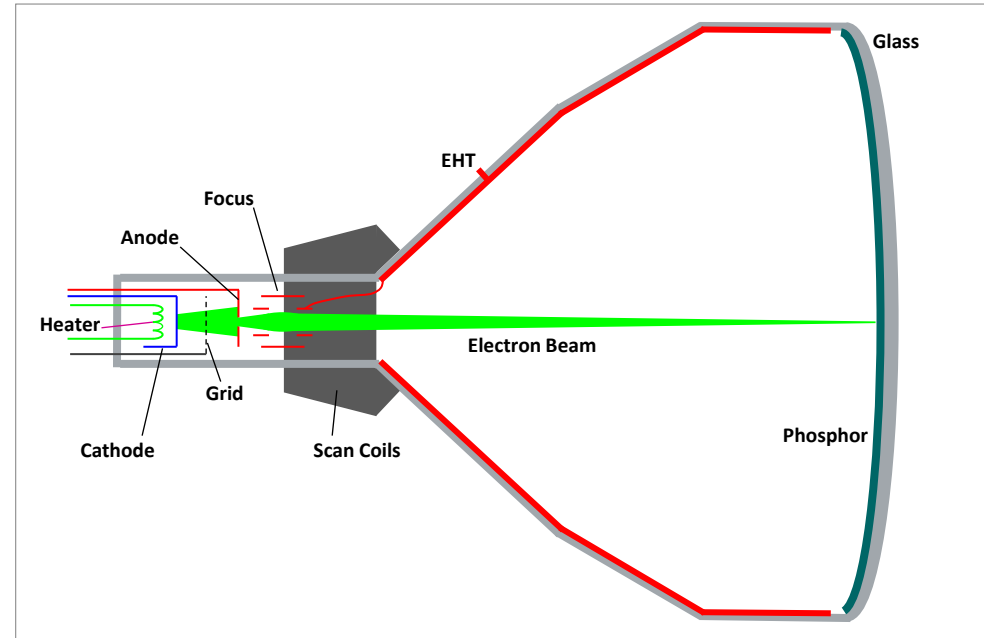



• Plasma


- Pixels consist of **phosphor coated glass capsules**, filled with **low pressure gas** (neon or xenon) which is excited by nearby electrodes.
- The gas emits **ultra violet light** which **excites the phosphor**.
- Brightness variations are created by **switching** the pixel on and off quickly (**Pulse Width Modulation**).

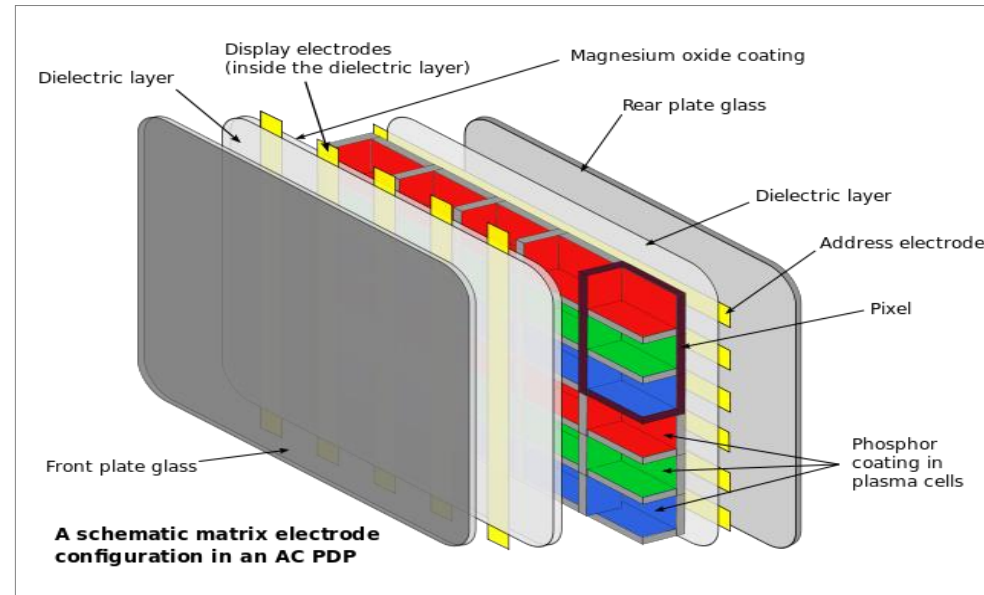

- LCD
 - Each pixel consists of **liquid crystal** between **2 polarizing filters** which are perpendicularly polarized.
 - There is a **backlight** behind the pixels – **cold-cathode fluorescent** or **LED** (These are sometimes called LED TVs for marketing purposes).
 - Without the liquid crystal, the backlight would be **blocked** by the filters.
 - The liquid crystal **twists the polarization** of light by **90°** allowing light to pass through.
 - An **electric field** from nearby electrodes changes the polarization of the liquid crystal. In the extreme case the polarization will be zero and the filters will block all the light. Varying the voltage will proportionally vary the light.
- LED
 - Each pixel is an Light Emitting Diode.
 - Very large display screens can be made with arrays of individual LEDs.
 - Or they can be made using integrated techniques.
 - The main technologies are OLED (Organic LED) and MicroLED.

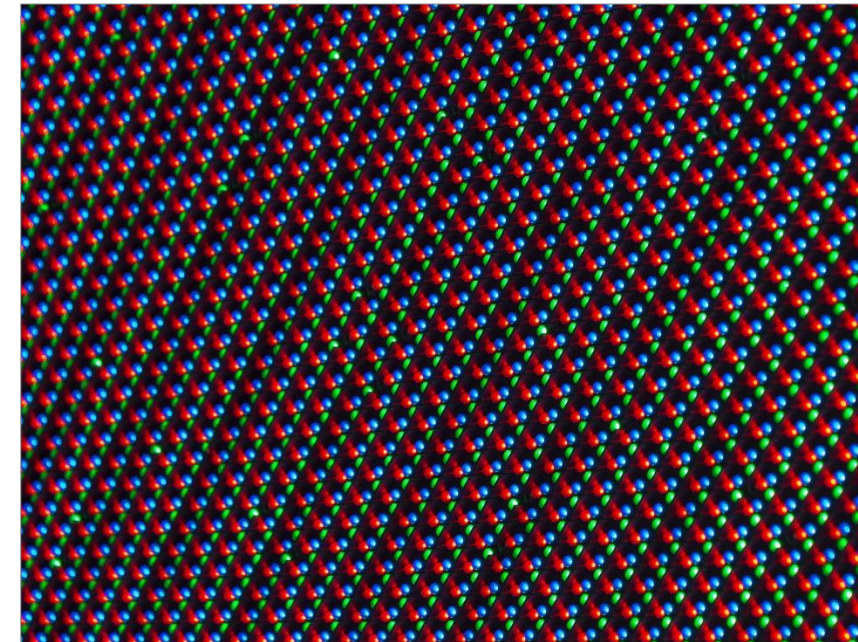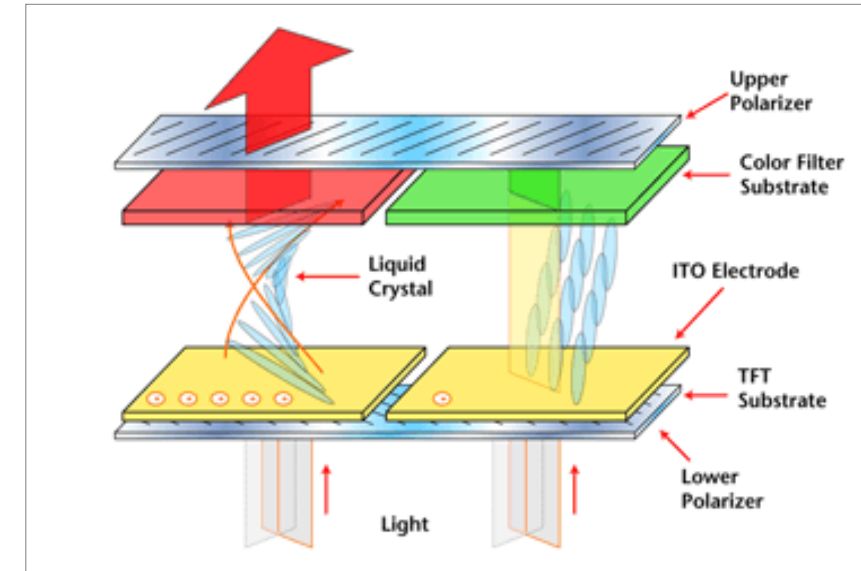

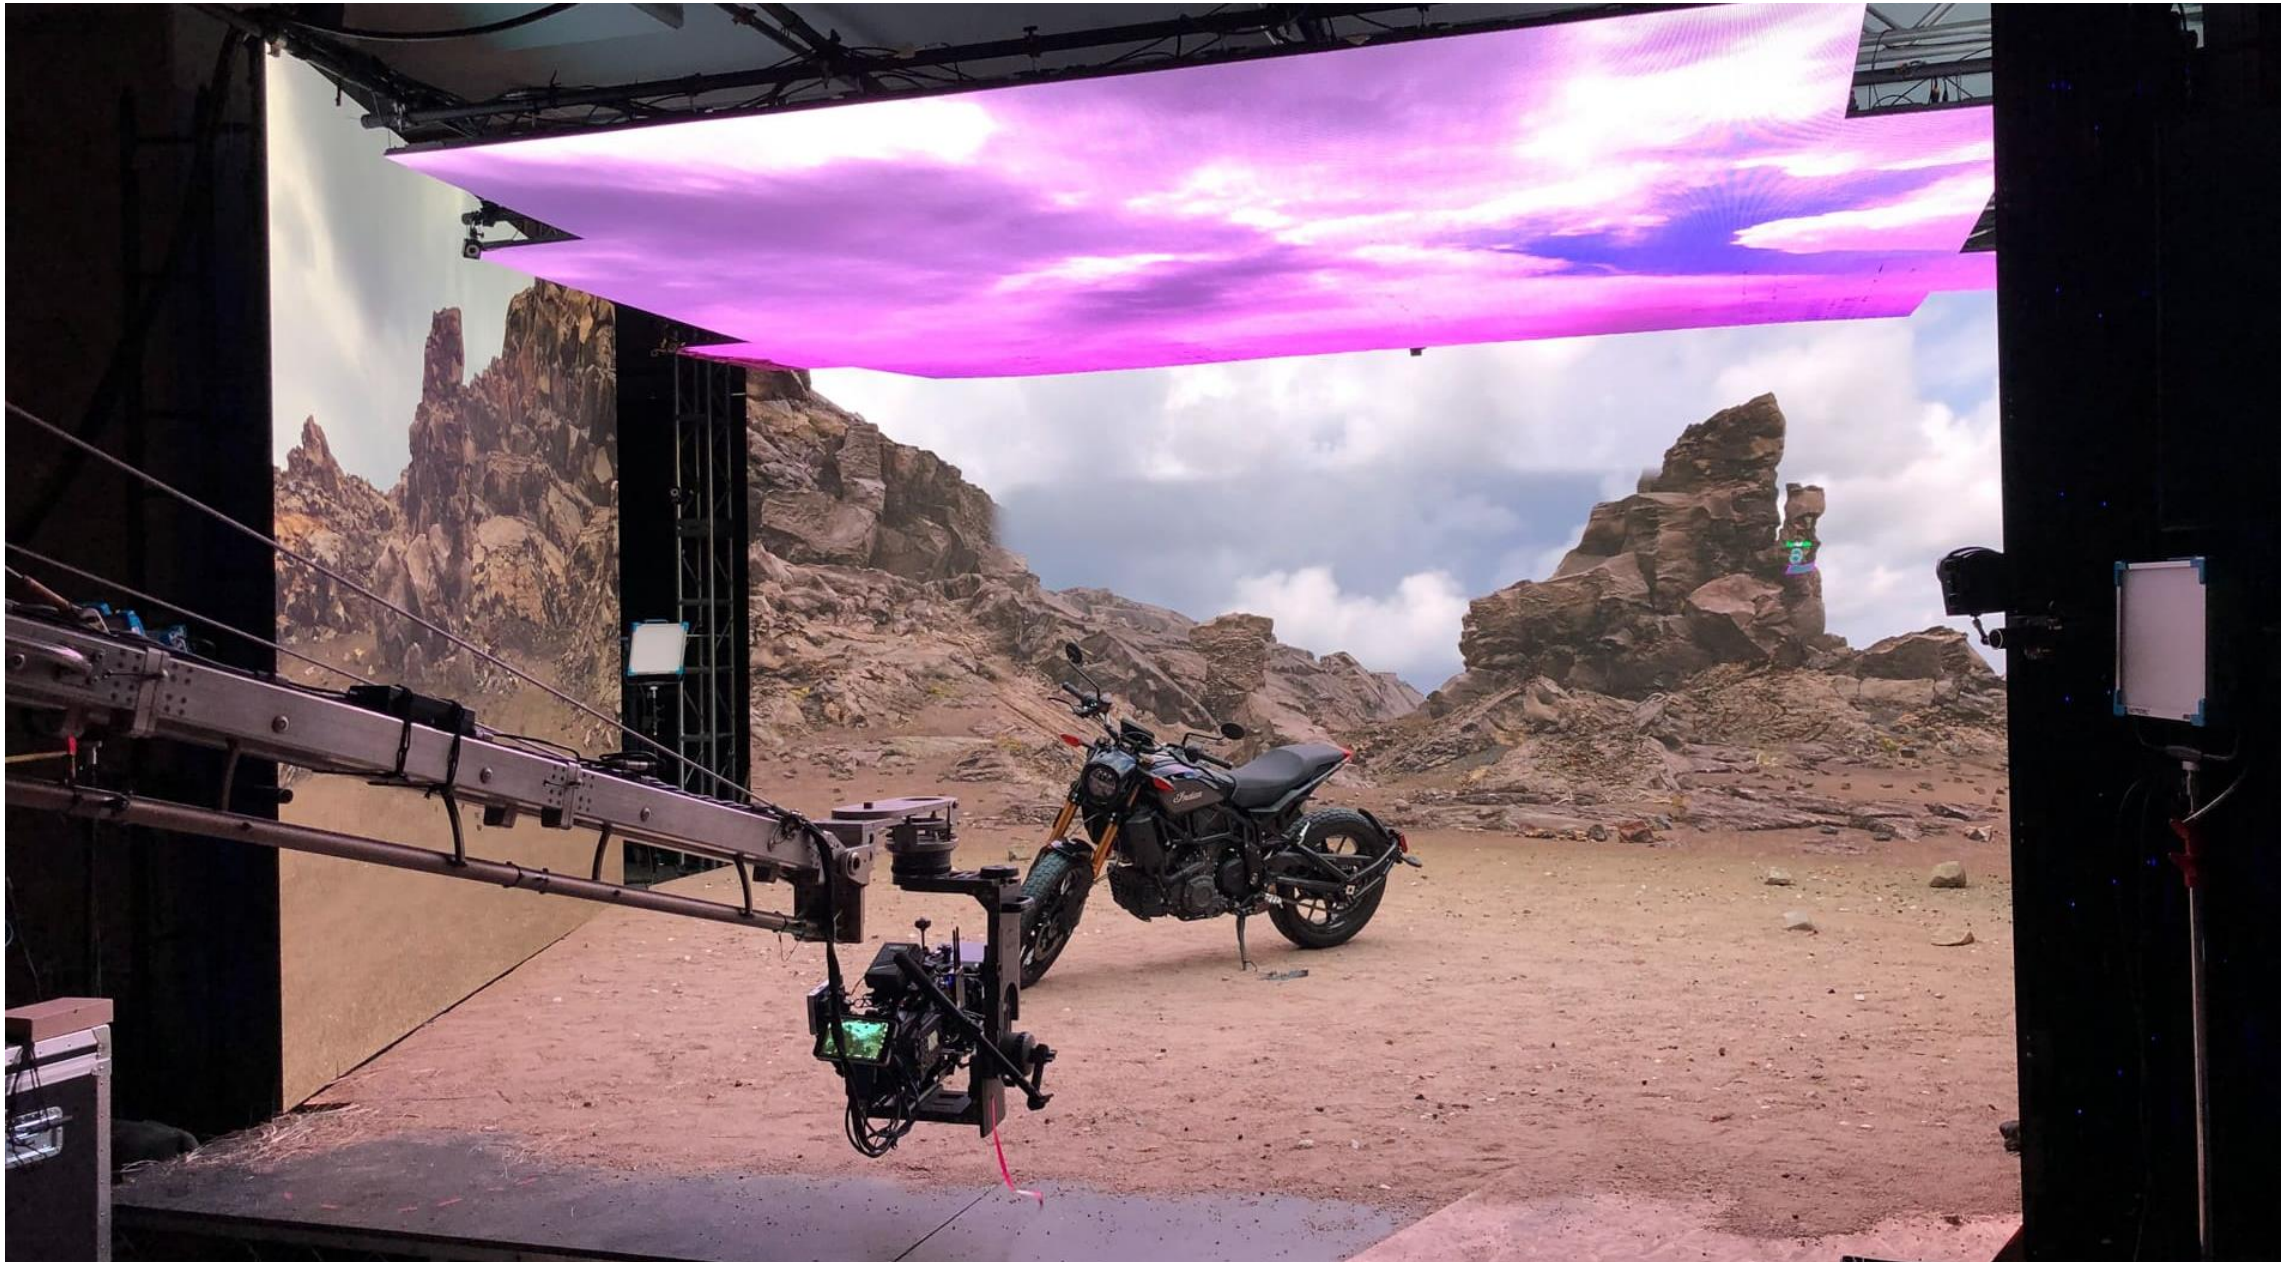

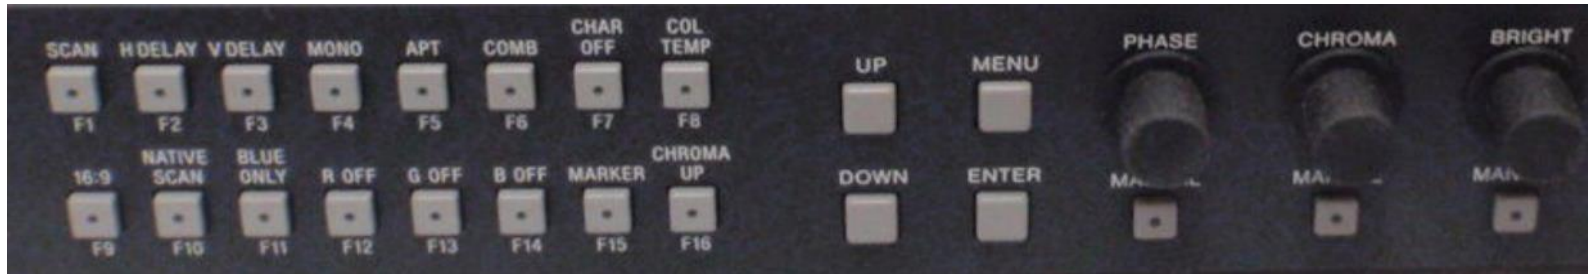

- Professional and broadcast monitors have extra facilities compared to a domestic TV. For example:
 - External Syncs
 - Under-scan
 - Adjustable white and black balance
 - Adjustable and preset brightness, contrast and saturation
 - Monochrome button
 - Switching on/off individual R, G, B channels
 - Blue only button (or blue to monochrome)
 - Loop-Thru Inputs
 - Display shift (pulse cross)
 - Allows you to see the blanking interval



- **Grade 1** – for high-grade technical quality evaluation:
 - For camera colour control, colour grading, lighting control etc.
 - Must possess at least the **quality properties** of the **equipment to be assessed**.
 - State-of-the-art technology - **Artefacts** should **not be masked** nor additional artefacts introduced.
 - A ‘measuring instrument’ for visual evaluation of image quality.
 - **Desirable:** Native scanning mode of the signal - **progressive** or **interlaced**.
- **Grade 2**
 - For **preview, control walls, edit suites, control rooms** - if no picture quality manipulation done.
 - **Similar** facilities to a **Grade 1 monitor**.
 - **Wider tolerances** on its specification than a Grade 1 monitor, so **cheaper, smaller, lighter**.
- **Grade 3**
 - For **observation/presence** – audio production, dialogue dubbing, commentary positions, **audience displays**.
 - Similar to high end domestic/consumer displays – **extra features:** Inputs, mounting, robustness.



- Basic Adjustments

- Brightness
- Contrast
- Saturation (Colour)

**4 most commonly
made adjustments**

- Colour Balance

- White balance - individual RGB contrast (also called gain).
- Black balance - individual RGB brightness (also called D.C. level, lift/sit, bias).



- Other checks

- Especially in Grade 3 monitors, make sure any aperture (sharpness) controls are not set too high (which results in overshoots/ringing on edges and over emphasizes noise).
- Turn off unnecessary video processing ('smooth motion' etc.)



- CRT Adjustments (historical interest only)

- Picture geometry (grill/crosshatch test patter), Picture size (test card), Purity (red field), Convergence – individual RGB geometry (grill/crosshatch test pattern).



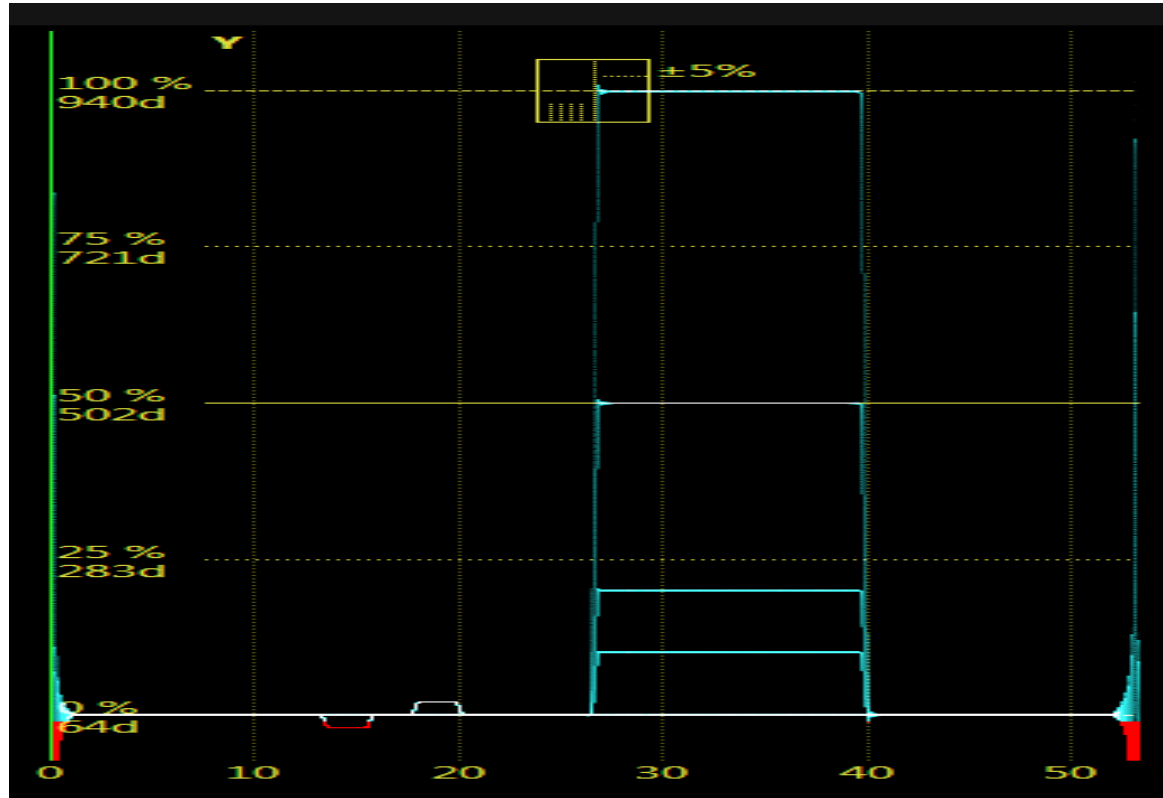

PLUGE - Correct Brightness

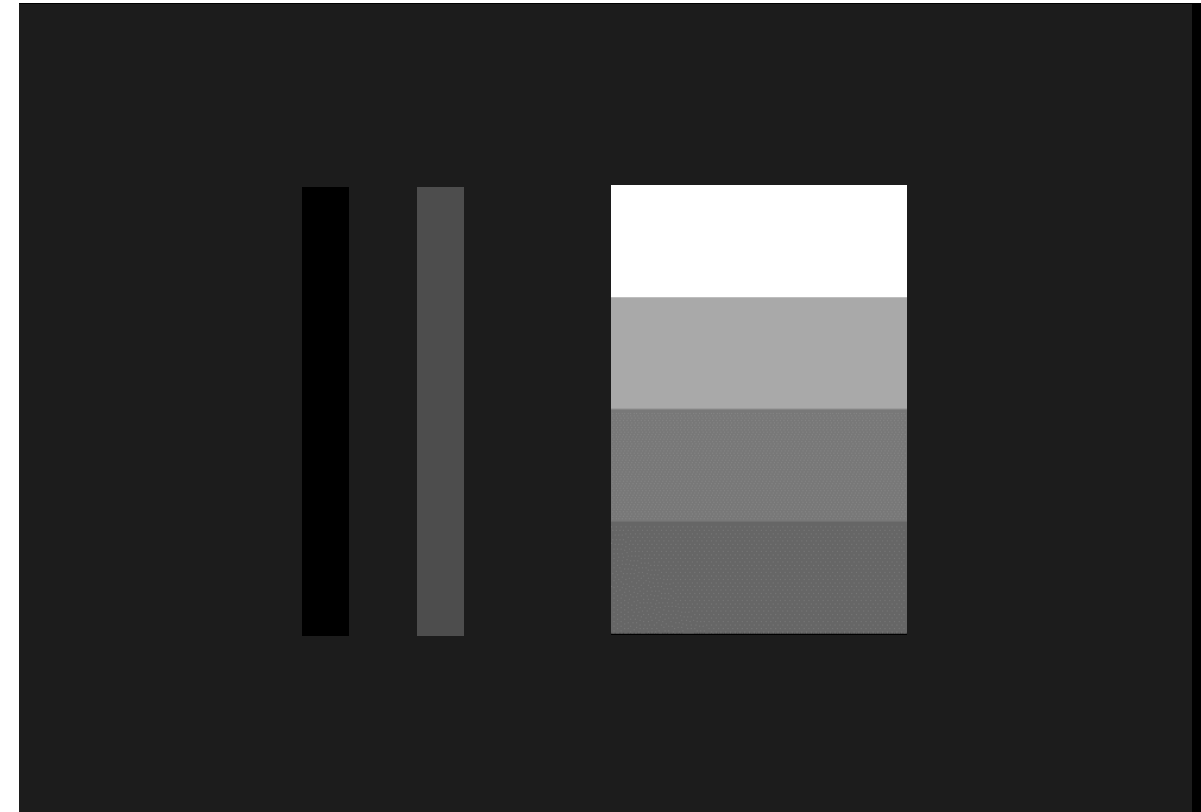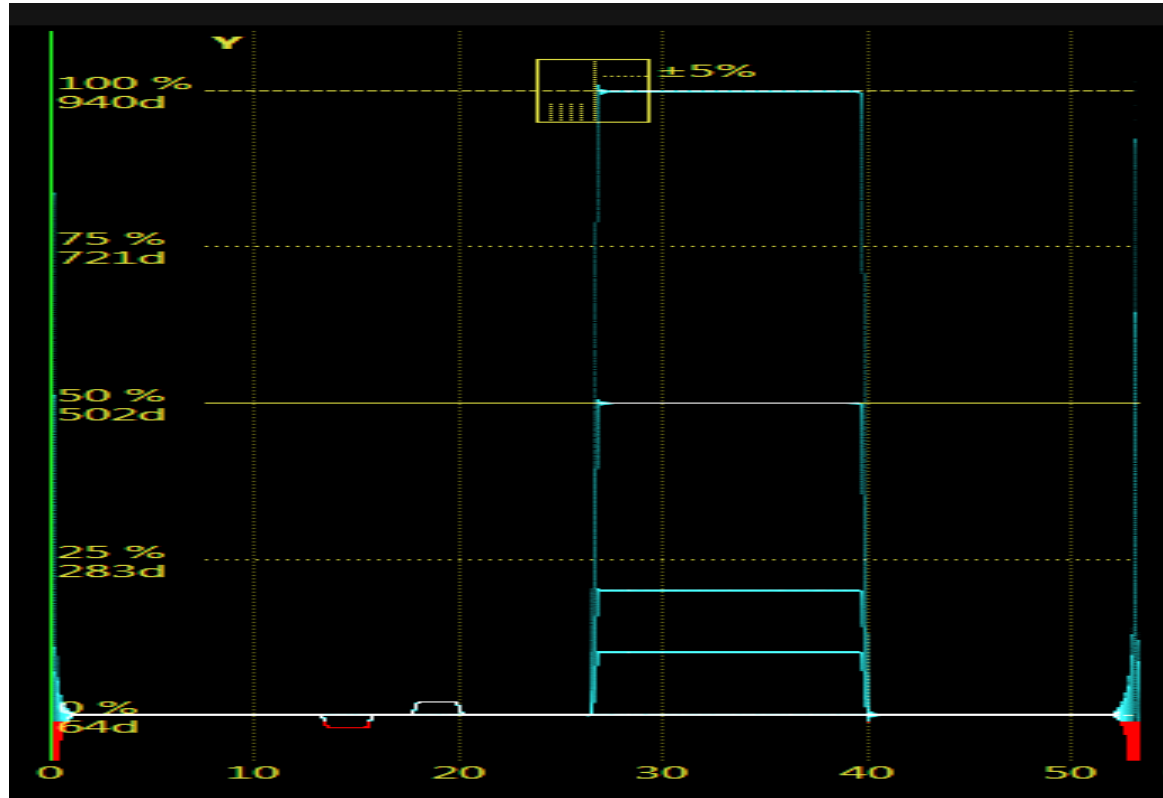

PLUGE - Brightness set too high

- SMPTE Colour Bars were designed for NTSC analogue colour systems.
- Often available from test signal generators in other formats.
- Usefully, they contain a PLUGE section.




- Test cards can be used for checking / lineup of monitors, cameras, telecines, and signal paths.
- Here are a few:



BBC Test Card W




Philips Test Pattern

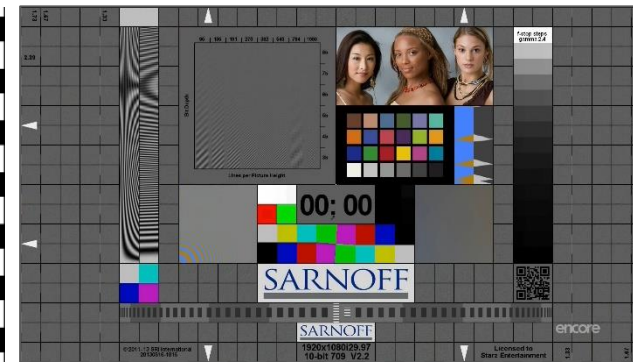


SRI Visualiser


<https://youtu.be/OEqPFr4ftJM>

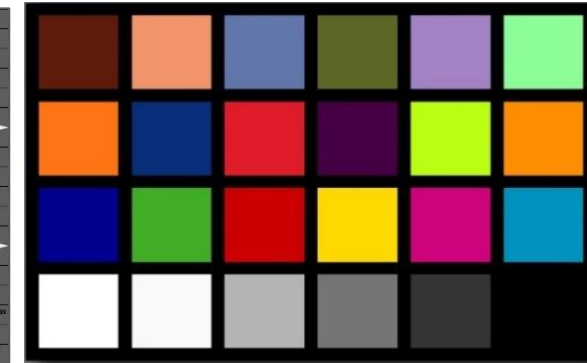


Macbeth Colour Checker

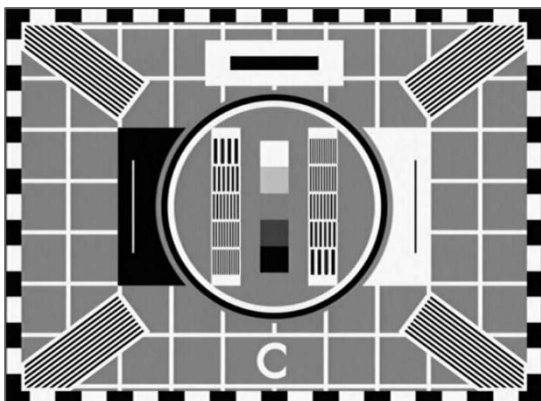

BBC Testcard C - Telecine Lineup

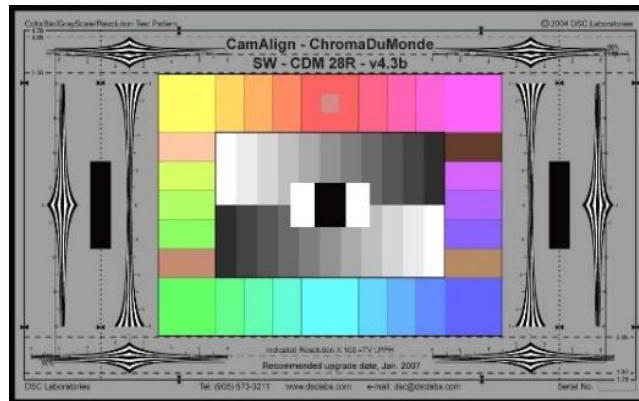

DSC Labs ChromaDuMonde

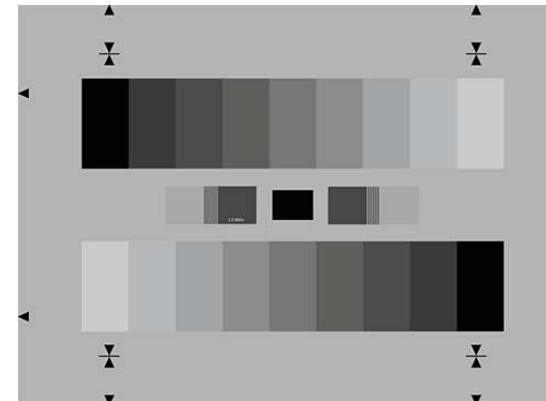


Studio Camera Greyscale



Hitomi Matchbox VALID

<https://youtu.be/02xegvEhKoY>


- Brightness – DC Shift
 - Use **PLUGE**.
 - Adjust so that the **+2%** strip can be seen, **-2%** strip cannot.
- Contrast – Gain
 - Use **PLUGE**.
 - Make **white parts** acceptably bright without clipping
 - Or match to a **reference** using a **spot light meter** or **monitor analyser**.
- Saturation
 - Use **100% Bars**.
 - Look at **blue signal only**.
 - Adjust until **blue** and **white** bars look equally bright
 - Ideally use bars with a **white strip** such as **SMPTE bars** or ‘**Tartan Bars**’
 - So that **blue** and **white** are adjacent.

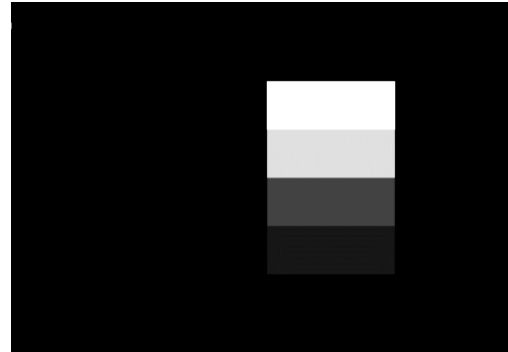


Brightness too Low



Brightness Correct

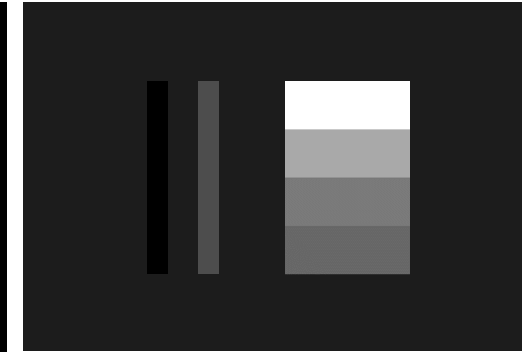


Brightness too High

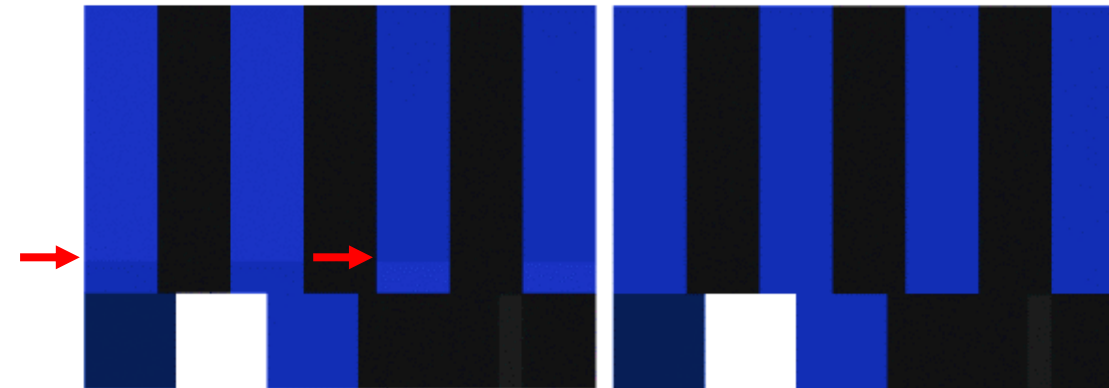



Saturation too low (SMPTE Bars)

Saturation correct (SMPTE Bars)

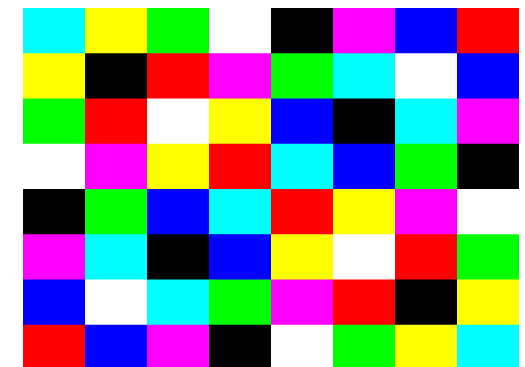

Tartan Bars

- Colour Balance used to done manually:
 - First, adjust Brightness and Contrast using **PLUGE**.
 - For **Colour Balance** use **PLUGE** or **Greyscale**.
 - **Compare** monitor to be adjusted to a monochrome **Illuminant D65 reference monitor**.
 - Adjust **white balance** and **black balance** controls for a **visual match**.
- Use a **Colour Analyser**:
 - Use suitable test signal.
 - Usually generated by the analyser.
 - Connect analyser probe to monitor screen.
 - Follow analyser instructions and adjust white and black balance.
- Use a Monitor Probe:
 - Connect **monitor probe** to monitor screen.
 - Find the correct menu and press the **‘auto adjust button’** or whatever.

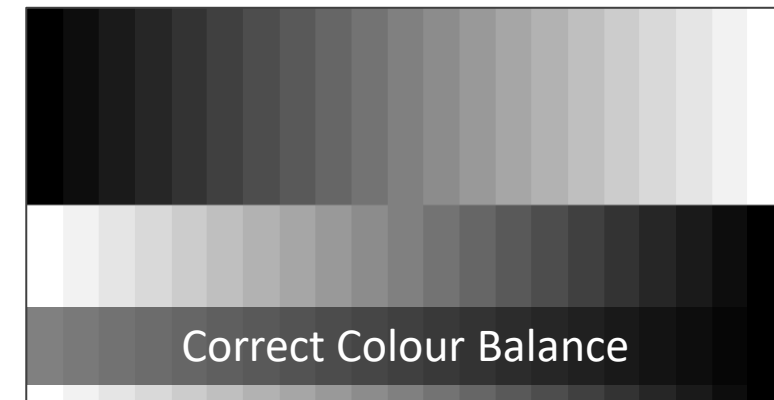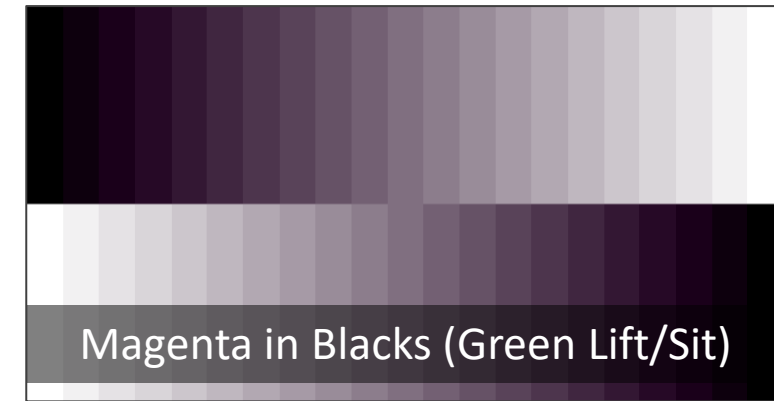


- Can be used to adjust a broadcast monitor.
- Can be used to adjust a computer display usually via software/driver.



ITU-R BT.500-13	Methodology for the subjective assessment of the quality of television pictures
ITU-R BT.814	Specifications and alignment procedures for setting of brightness and contrast of displays
ITU-R BT.815	Specification of a signal for measurement of the contrast ratio of displays
ITU-R BT.2022	General viewing conditions for subjective assessment of quality of SDTV and HDTV television pictures on flat panel displays.
EBU Tech 3320	User Requirements for Video Monitors in Television Production
EBU Tech 3263	Specification of Grade 1 Colour Production Monitors (CRT)
EBU Tech 3325	Methods for the Measurement of the Performance of Studio Monitors

The End

Questions?

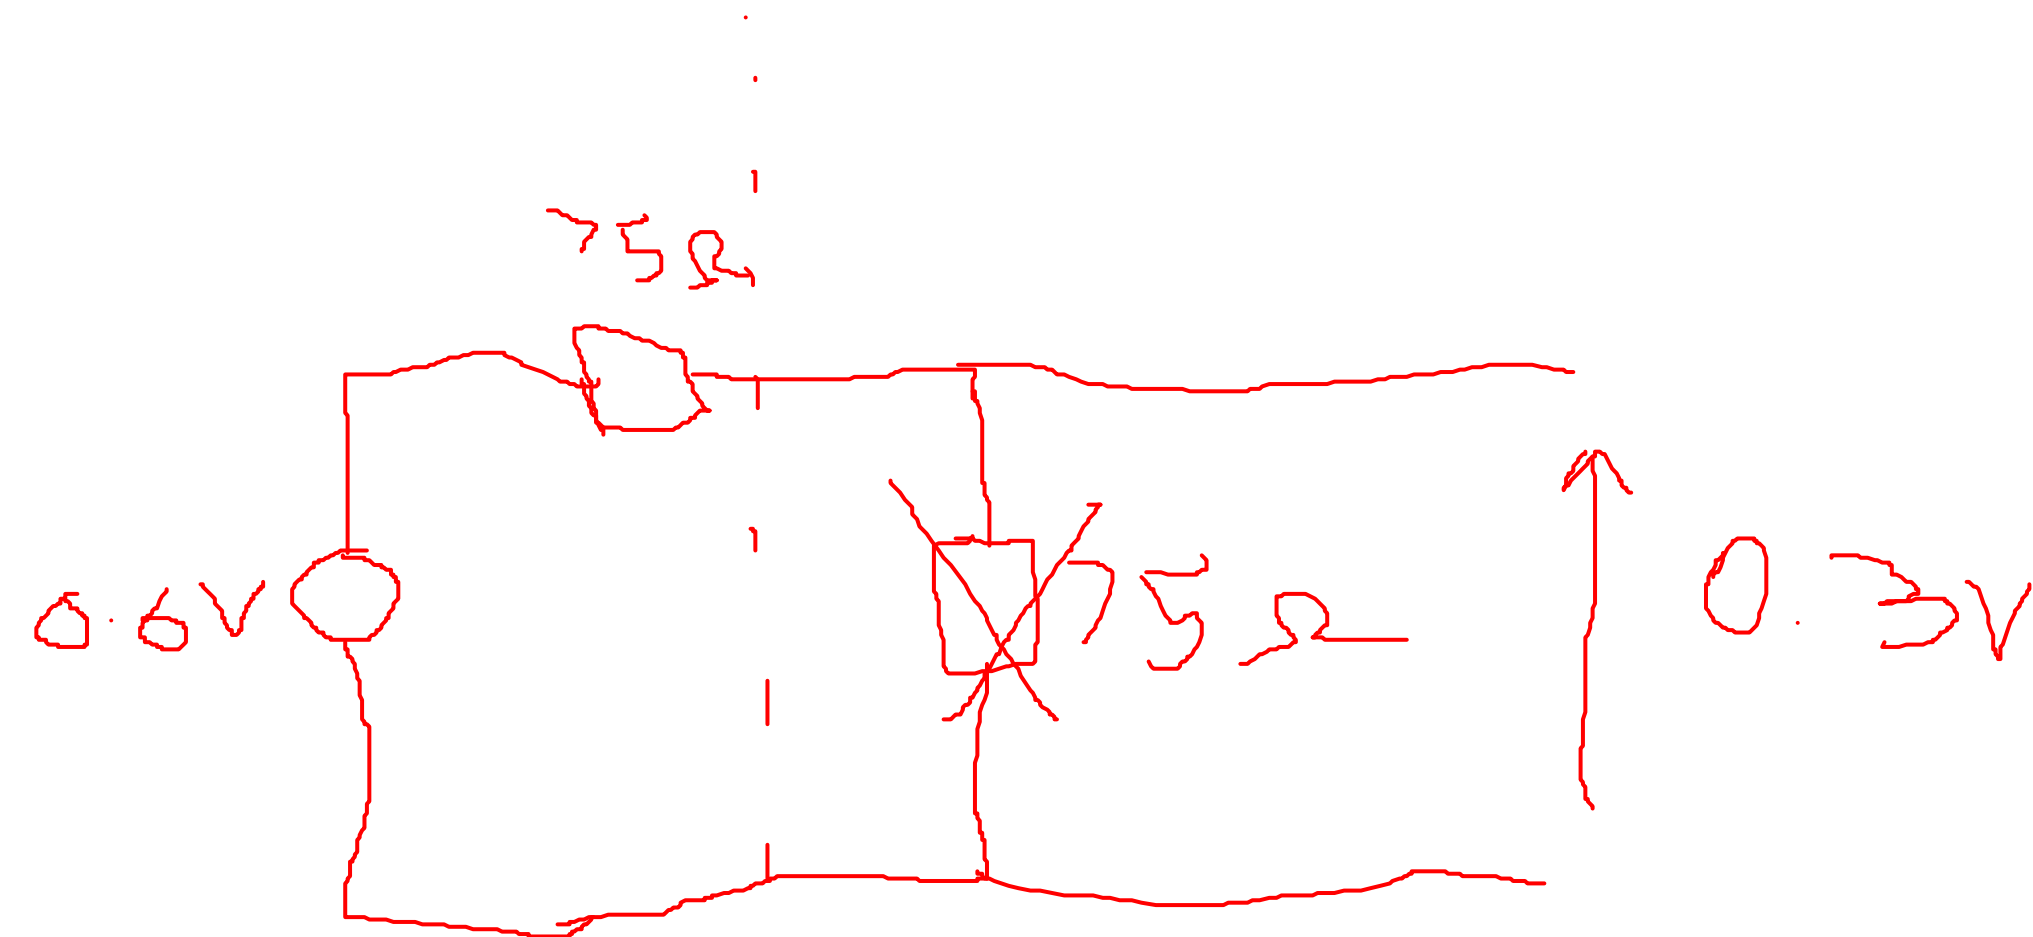

$$\frac{2 \times 3 \times 10^8}{3}$$

$$2 \times 10^8$$

$$S = \frac{D}{T}$$

$$D = S \times T$$

$$595 \times 10^{-9} \times 2 \times 10^8$$

$$= 119 \text{ m} \quad \therefore 59.5 \text{ m}$$

