Version 2.0 November 2012 © 2007-2012 Cadence Design Systems, Inc. All rights reserved worldwide. Portions of this material are © Si2, Inc. All rights reserved. Reprinted with permission. Printed in the United States of America.

Cadence Design Systems, Inc. (Cadence), 2655 Seely Ave., San Jose, CA 95134, USA.

Open SystemC, Open SystemC Initiative, OSCI, SystemC, and SystemC Initiative are trademarks or registered trademarks of Open SystemC Initiative, Inc. in the United States and other countries and are used with permission.

Trademarks: Trademarks and service marks of Cadence Design Systems, Inc. contained in this document are attributed to Cadence with the appropriate symbol. For queries regarding Cadence's trademarks, contact the corporate legal department at the address shown above or call 800.862.4522. All other trademarks are the property of their respective holders.

Restricted Permission: This publication is protected by copyright law and international treaties and contains trade secrets and proprietary information owned by Cadence. Unauthorized reproduction or distribution of this publication, or any portion of it, may result in civil and criminal penalties. Except as specified in this permission statement, this publication may not be copied, reproduced, modified, published, uploaded, posted, transmitted, or distributed in any way, without prior written permission from Cadence. Unless otherwise agreed to by Cadence in writing, this statement grants Cadence customers permission to print one (1) hard copy of this publication subject to the following conditions:

- 1. The publication may be used only in accordance with a written agreement between Cadence and its customer.
- 2. The publication may not be modified in any way.
- 3. Any authorized copy of the publication or portion thereof must include all original copyright, trademark, and other proprietary notices and this permission statement.
- 4. The information contained in this document cannot be used in the development of like products or software, whether for internal or external use, and shall not be used for the benefit of any other party, whether or not for consideration.

Disclaimer: Information in this publication is subject to change without notice and does not represent a commitment on the part of Cadence. Except as may be explicitly set forth in such agreement, Cadence does not make, and expressly disclaims, any representations or warranties as to the completeness, accuracy or usefulness of the information contained in this document. Cadence does not warrant that use of such information will not infringe any third party rights, nor does Cadence assume any liability for damages or costs of any kind that may result from use of such information.

Restricted Rights: Use, duplication, or disclosure by the Government is subject to restrictions as set forth in FAR52.227-14 and DFAR252.227-7013 et seq. or its successor

Contents

Preface	. 7
About This Manual	. 8
Additional References	. 8
Reporting Problems or Errors in Manuals	. 8
Customer Support	. 9
Cadence Online Support	
Other Support Offerings	
Documentation Conventions	10
1	
Introduction	11
In this Guide	12
Cadence Tools Supporting the Common Power Format	
2	
Creating a CPF File	
Introduction	
Creating a CPF File for an MSV Design	
Complete CPF File for MSV Example	
Steps to Create the CPF File for MSV Design	
Creating a CPF File for a Design Using PSO Methodology	
Complete CPF File for PSO Example	
Steps to Create the CPF File for Design Using PSO	44
Creating a CPF File for a Design Using DVFS Methodology	
Complete CPF File for DVFS Example	
Steps to Create the CPF File for DVFS Design	74
<u>3</u>	
Process of Creating the CPF Content	99
<u>Overview</u>	
	

Using a Single CPF File 10 Using Multiple CPF Files 10	
<u>4</u>	
 <u>Hierarchical Flow</u> 1	15
Introduction to Hierarchical Flow	
 CPF for Hierarchical Flow	
Technology CPF File — tech.cpf	22
Top CPF File	
Macro CPF — ram.cpf	30
Soft IP CPF — tdsp.cpf	
Steps to Create the CPF File	32
Understanding the CPF file of the Macro Cell	33
Understanding the CPF file of the Soft IP	35
Creating the CPF File for the Top-Level Design	36
5 Modeling Special Cells	4.5
Modeling Special Cells14	
Modeling Level Shifters	
Types of Level Shifters	
Modeling a Power Level Shifter	
Modeling a Ground Level Shifter14	
Modeling a Power and Ground Level Shifter	
Modeling an Enabled Level Shifter1	
Modeling a Bypass Level Shifter19	
Modeling a Multi-Stage Level Shifter1	
Modeling a Multi-bit Level Shifter Cell	
Modeling Isolation Cells	
Types of Isolation Cells	
Modeling an Isolation Cell to be Placed in the Unswitched Domain 16	
Modeling An Isolation Cell for Ground Switchable Domain16	
Modeling An Isolation Cell for Power Switchable Domain 16	
Modeling An Isolation Cell for Power and Ground Switchable Domains 16	
Modeling An Isolation Cells that Can Be Placed in Any Domain	
Modeling An Isolation Cell Without Enable Pin	67

	Modeling An Isolation Clamp Cell	168
	Modeling an Isolation-Level Shifter Combo Cell	170
	Modeling an Isolation Cell with Multiple Enable Pins	171
	Modeling an Isolation Latch with a Set or Reset Pin	173
	Modeling a Multi-bit Isolation Cell	175
	Modeling a Complex Isolation Cell	176
Mc	odeling State Retention Cells	177
	Types of State Retention Cells	177
	State Retention Cell that Restores when Power is Turned On	178
	State Retention Cell that Restores when Control Signal is Deactivated	179
	State Retention Cells with Save and Restore Controls	180
	State Retention Cells without Save or Restore Control	182
	Modeling a Complex State Retention Cell	183
Mc	odeling Power Switch Cells	184
	Types of Power Switch Cells	184
	Modeling a Single Stage Power Switch Cell	185
	Modeling a Power Switch cell with Gate Bias	186
	Modeling a Single Stage Ground Switch Cell	188
	Modeling a Dual-Stage Power Switch Cell	189
	Modeling a Dual-Stage Ground Switch Cell	191
Mc	odeling Pad Cells	193
	Using a Pad Cell Definition to Create a Simplified Pad Cell Model	194
	Using a CPF Macro Model to Create a Detailed Pad Cell Model	197
Mc	odeling a Voltage Regulator	198
	Power Domain Mapping of a Power Source Domain	202
	Simulation Semantic	203

Preface

- About This Manual on page 8
- Additional References on page 8
- Reporting Problems or Errors in Manuals on page 8
- Customer Support on page 9
- <u>Documentation Conventions</u> on page 10

Common Power Format User Guide Preface

About This Manual

This document describes how to capture the power intent for your design using the Si2 Common Power Format (CPF), a standardized format for specifying power-saving techniques early in the design process, to deliver an end-to-end low-power design solution to IC engineers.

To use this manual, you should be familiar with IC power consumption concepts.

Additional References

For information on what is new or changed in CPF version 2.0 see *What's New in Common Power Format.*

For reference information about the Common Power Format (CPF), refer to <u>Common Power</u> <u>Format Language Reference</u>

The following sources are helpful references, but are not included with the product documentation:

- TclTutor, a computer aided instruction package for learning the Tcl language: http://www.msen.com/~clif/TclTutor.html.
- TCL Reference, *Tcl and the Tk Toolkit*, John K. Ousterhout, Addison-Wesley Publishing Company

Reporting Problems or Errors in Manuals

The Cadence[®] Help online documentation, lets you view, search, and print Cadence product documentation. You can access Cadence Help by typing cdnshelp from your Cadence tools hierarchy.

Contact Cadence Customer Support to file a CCR if you find:

- An error in the manual
- An omission of information in a manual
- A problem using the Cadence Help documentation system

Preface

Customer Support

Cadence offers live and online support, as well as customer education and training programs.

Cadence Online Support

The Cadence[®] online support website offers answers to your most common technical questions. It lets you search more than 40,000 FAQs, notifications, software updates, and technical solutions documents that give you step-by-step instructions on how to solve known problems. It also gives you product-specific e-mail notifications, software updates, service request tracking, up-to-date release information, full site search capabilities, software update ordering, and much more.

For more information on Cadence online support go to:

http://support.cadence.com

Other Support Offerings

- **Support centers**—Provide live customer support from Cadence experts who can answer many questions related to products and platforms.
- **Software downloads**—Provide you with the latest versions of Cadence products.
- Education services—Offers instructor-led classes, self-paced Internet, and virtual classroom.
- University software program support—Provides you with the latest information to answer your technical questions.

For more information on these support offerings go to:

http://www.cadence.com/support

Common Power Format User Guide Preface

Documentation Conventions

To aid the readers understanding, a consistent formatting style has been used throughout this manual.

The list below describes the syntax conventions used for the CPF constraints.

literal	Nonitalic words indicate keywords that you must type literally. These keywords represent command or option names.	
arguments and options	Words in italics indicate user-defined arguments or options for which you must substitute a name or a value.	
I	Vertical bars (OR-bars) separate possible choices for a single argument.	
[]	Brackets denote options. When used with OR-bars, they enclose a list of choices from which you can choose one.	
{ }	Braces denote arguments and are used to indicate that a choice is required from the list of arguments separated by OR-bars. You must choose one from the list.	
	{ argument1 argument2 argument3 }	
•••	Three dots () indicate that you can repeat the previous argument. If the three dots are used with brackets (that is, [argument]), you can specify zero or more arguments. If the three dots are used without brackets (argument), you must specify at least one argument, but can specify more.	
#	The pound sign precedes comments.	

1

Introduction

- In this Guide on page 12
- Cadence Tools Supporting the Common Power Format on page 13

Introduction

In this Guide

This document describes how to capture the power intent for your design using the Si2 Common Power Format (CPF), a standardized format for specifying power-saving techniques early in the design process, to deliver an end-to-end low-power design solution to IC engineers.

<u>Chapter 2, "Creating a CPF File,"</u> shows all the commands needed in a complete CPF file for different advanced low power techniques. For more information about the CPF command syntax, refer to the <u>Common Power Format Language Reference.</u>

Note: For the sake of simplicity, the CPF creation described in this document assumes that you start with RTL code that does not contain any instantiations of low power logic.

<u>Chapter 3, "Process of Creating the CPF Content,"</u> shows different approaches to create the CPF content.

<u>Chapter 4, "Hierarchical Flow,"</u> shows the additional constructs you need to create a CPF file for a hierarchical flow.

<u>Chapter 5, "Modeling Special Cells,"</u> shows how to model some of the special power cells needed to support the advanced low power techniques.

Introduction

Cadence Tools Supporting the Common Power Format

- Encounter Conformal Low Power
- Encounter Digital Implementation System
- Encounter Power System
- Encounter RTL Compiler
- Encounter Test Architect
- Encounter Timing System
- Incisive Enterprise Simulator
- Incisive Palladium

Note: For information on the product option, feature, or package that supports CPF, contact your local sales or AE contact.

Refer to the product documentation of the tools for information on

- How CPF is used in the tool
- The tool command(s) related to CPF
- When to read the CPF file in the tool flow
- The CPF commands supported by the tool

Introduction

Creating a CPF File

- Introduction on page 16
- Creating a CPF File for an MSV Design on page 17
 - □ Complete CPF File for MSV Example on page 20
 - □ Steps to Create the CPF File for MSV Design on page 23
- Creating a CPF File for a Design Using PSO Methodology on page 37
 - □ Complete CPF File for PSO Example on page 41
 - Steps to Create the CPF File for Design Using PSO on page 44
- Creating a CPF File for a Design Using DVFS Methodology on page 62
 - □ Complete CPF File for DVFS Example on page 69
 - □ Steps to Create the CPF File for DVFS Design on page 74

Creating a CPF File

Introduction

This chapter shows you what the content of a complete CPF file looks like for the following low power techniques:

- Creating a CPF File for an MSV Design
- Creating a CPF File for a Design Using PSO Methodology
- Creating a CPF File for a Design Using DVFS Methodology


Each section is self-contained. If you are interested in only one technique, you will find all the information you need for that low power technique in that section.

This implies that if you intend to use several techniques, you might find some repetition.

This chapter assumes a non-hierarchical flow. For more information about the hierarchical flow, refer to <u>Chapter 4</u>, "<u>Hierarchical Flow</u>."

For simplicity, only one CPF file is created.

Note: Other chapters will show use of multiple CPF files.



The content of the CPF file can change through the design process. The tools in the design process need different information. Therefore you can start the design with an incomplete CPF file.

Creating a CPF File

Creating a CPF File for an MSV Design

A Multiple Supply Voltage (MSV) design uses multiple supply voltages for the core logic. In <u>Figure 2-1</u> on page 18 the top design and instance inst_A operate at voltage VDD1, while instance inst_B operates on voltage VDD2 and instance inst_C operates at voltage VDD3.

A portion of the design that operates at the same operating voltage (that is, uses the same *main* power supply) belongs to the **power domain** that corresponds to that operating voltage.

A steady state of the design is called a **power mode**. Pure MSV designs have only one power mode because the operating voltage of the power domains is assumed not to change. A power mode will also have a typical set of timing constraints associated with it.

To pass signals between portions of the design that operate on different voltages, *level* shifters are needed.

The majority of cells in a power domain are driven by the same power supply, except for the level shifters which are driven by multiple power supplies.

Level shifters have two sets of power and ground pins, and are therefore associated with two power domains: a *primary* and a *secondary power domain*.

- A power domain X is a *secondary* power domain of a special low power instance if the primary power and ground nets of domain X provide the power supply to the *secondary* power and (or) ground pins of the special low power instance.
- A power domain Y is a *primary* power domain of a a special low power instance if the primary power and ground nets of domain Y provide the power supply to the *primary* power and ground pins (follow-pins) of the special low power instance.

The tools reading CPF can derive the primary and secondary power domains for level shifters. For more information, refer to <u>Input and Ouput Domains of Level Shifters</u>.

Figure 2-1 Example of MSV Design

Operating Voltage (OV)	Instances Operating on OV	Libraries characterized for OV	Power Domains for OV
VDD1: 0.8	top, inst_A	lib1 lib2	PD1
VDD2: 1.0	inst_B	lib3	PD2
VDD3: 1.2	inst_C	lib4	PD3


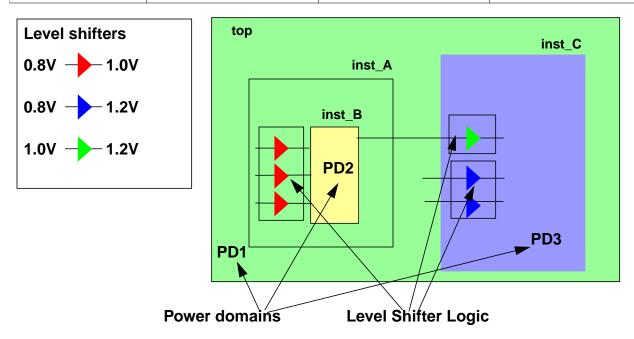


Figure <u>2-1</u> shows the typical operating voltage for each power domain. To check if the design functions correctly when slightly different operating conditions apply, typically a multi-corner timing analysis is done for the worst and best case corner. A pure MSV design has only one state of the design, so two views can be considered as shown in Figure <u>2-2</u>. The design must function correctly in both corners for the same set of timing constraints that is typically specified for a given state of the design (power mode).


Figure 2-2 Multi-Corner Timing Analysis

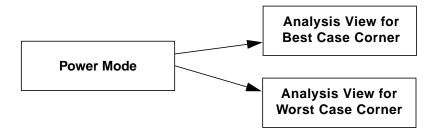

Creating a CPF File

When analyzing a view of the design, you need to indicate the corners at which the power domains are operating, as shown in Figure <u>2-3</u>.

Figure 2-3 Relation of Analysis View with Power Domains and Operating Corners

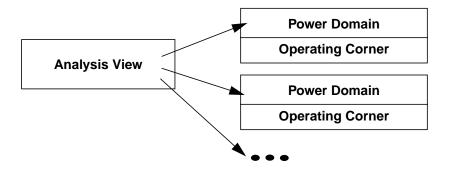

Operating corners are not only characterized by a set of operating conditions, but also by the library sets to be used for that corner, because the timing and power characteristics of the cells depend on the operating conditions. Typically different libraries are used for the different corners.

<u>Table 2-1</u> on page 19 indicates for the design of <u>Figure 2-1</u> on page 18 the libraries that must be used to analyze the views.

Table 2-1 Operating Corners for the Power Domains of the MSV Design

Operating Corner	Operating Condition			Libraries
Name	process	temperature	voltage	
BC_PD1	1	0	0.88	lib1_bc, lib2_bc
BC_PD2	1	0	1.1	lib3_bc
BC_PD3	1	0	1.32	lib4_bc
WC_PD1	1	125	0.72	lib1_wc, lib2_wc
WC_PD2	1	125	0.9	lib3_wc
WC_PD3	1	125	1.08	lib4_wc

As it is obvious that all this information is related to the power intent of the design, it makes sense to describe this information in the CPF file.

Creating a CPF File

Complete CPF File for MSV Example

```
set cpf version 1.1
Technology part of the CPF
# define the library sets
define_library_set -name set1_bc -libraries {lib1_bc lib2_bc}
define library set -name set1 wc -libraries {lib1 wc lib2 wc}
define library set -name set2 bc -libraries lib3 bc
define library set -name set2 wc -libraries lib3 wc
define_library_set -name set3_bc -libraries lib4_bc
define_library_set -name set3_wc -libraries lib4_wc
# define the level shifters
define level shifter cell -cells LVLLHEHX* \
   -input_voltage_range 0.8 \
   -output_voltage_range 1.0 \
   -output_power_pin VDD \
   -ground VSS \
   -direction up \
   -valid_location from
define_level_shifter_cell -cells LVLLHX* \
   -input_voltage_range 0.8 \
   -output_voltage_range 1.2
   -output_power_pin VDD \
   -direction up
   -ground VSS \
   -valid location to
define_level_shifter_cell -cells LVLLHELX* \
   -input_voltage_range 1.0 \
   -output_voltage_range 1.2 \
   -output_power_pin VDD \
   -direction up
   -ground VSS \
   -valid location to
Design part of the CPF
set_design top
# create power domains
create_power_domain -name PD1 -default
create_power_domain -name PD2 -instances instance_B
create_power_domain -name PD3 -instances instance_C
# create nominal conditions
create_nominal_condition -name low -voltage 0.8
create_nominal_condition -name medium -voltage 1.0
create_nominal_condition -name high -voltage 1.2
```

Creating a CPF File

```
# create power mode
create power mode -name PM -domain conditions {PD1@low PD2@medium PD3@high} \
-default
# associate library sets with nominal conditions
update nominal condition -name low -library set set1 wc
update_nominal_condition -name medium -library_set set2_wc
update nominal condition -name high -library set set3 wc
# create rules for level shifter insertion
create_level_shifter_rule -name lsr1 -from PD1 -to PD2
create_level_shifter_rule -name lsr2 -from PD2 -to PD3
create level shifter rule -name lsr3 -from PD1 -to PD3
# Additional Information for Logic Synthesis
# specify power targets
set power target -leakage 30 -dynamic 250
# specify timing constraints
update power mode -name PM -sdc files top.sdc
# specify activity information
update power mode -name PM -activity file top.tcf -activity file weight 100
# update the rules
update level shifter rules -names lsr1 -location from
update level shifter rules -names {lsr2 lsr3} -location to
# Additional Information for Physical Implementation
# declare power and ground nets
create_ground_nets -nets VSS
create_power_nets -nets VDD1 -voltage 0.8
create_power_nets -nets VDD2 -voltage 1.0
create_power_nets -nets VDD3 -voltage 1.2
# (optional) create global connections
# create_global_connection -net VSS -pins VSS
# create_global_connection -domain PD1 -net VDD1 -pins VDD
# create global connection -domain PD2 -net VDD2 -pins VDD
# create_global_connection -domain PD3 -net VDD3 -pins VDD
# add implementation info for power domains
update_power_domain -name PD1 -primary_power_net VDD1 -primary_ground_net VSS
update_power_domain -name PD2 -primary_power_net VDD2 -primary_ground_net VSS
update_power_domain -name PD3 -primary_power_net VDD3 -primary_ground_net VSS
# create operating corners
create_operating_corner -name BC_PD1 \
   -process 1 -temperature 0 -voltage 0.88 -library set set1 bc
```

Creating a CPF File

```
create_operating_corner -name BC_PD2 \
    -process 1 -temperature 0 -voltage 1.0 -library_set set2_bc
create_operating_corner -name BC_PD3 \
    -process 1 -temperature 0 -voltage 1.32 -library_set set3_bc
create_operating_corner -name WC_PD1 \
    -process 1 -temperature 125 -voltage 0.72 -library set set1 wc
create_operating_corner -name WC_PD2 \
   -process 1 -temperature 125 -voltage 0.9 -library_set set2_wc
create_operating_corner -name WC_PD3 \
    -process 1 -temperature 125 -voltage 1.08 -library_set set3_wc
# create analysis views
create_analysis_view -name AV_BC -mode PM \
    -domain_corners {PD1@BC_PD1 PD2@BC_PD2 PD3@BC_PD3}
create analysis view -name AV WC -mode PM \
    -domain_corners {PD1@WC_PD1 PD2@WC_PD2 PD3@WC_PD3}
end design
```

Creating a CPF File

Steps to Create the CPF File for MSV Design

This section describes the information to include in a CPF file for an MSV design. The example shown in <u>Figure 2-1</u> on page 18 is used throughout this section.

A CPF file has technology-related information and design-related information.

For an MSV design, the technology-related information lists the libraries that you want to use for the design and identifies the library cells that can be used as level shifters.

- Specifying the Libraries on page 24
- Specifying the Level Shifter Cells to Use on page 25

The design-related information captures the power intent and constraints.

- <u>Declaring the Design Described in the CPF File</u> on page 82
- Specifying Units Used on page 26
- Specifying the Naming Styles Used on page 27
- Specifying the Power Domains on page 28
- Specifying the Operating Voltages Used in the Design on page 28
- Associating a Nominal Condition with a Power Domain on page 29
- Specifying the Libraries to Use for a Condition on page 29
- Specifying the Rules to Create Level Shifter Logic on page 30
- Specifying Power Constraints on page 31
- Specifying Timing Constraints on page 31
- Specifying Activity Information on page 31
- Updating the Rules with Implementation Information on page 32

The following information is needed for physical implementation:

- Specifying the Global Power and Ground Nets on page 33
- Specifying the Global Connections on page 34
- Specifying Additional Information for Power and Ground Routing on page 34
- Specifying the Operating Corners on page 35
- Specifying the Analysis Views on page 36

Creating a CPF File

Specifying the Libraries

➤ To group libraries that are characterized for a specific set of operating conditions, use the define library set command:

```
define_library_set -name library_set
    -libraries library_list
```

For the example in <u>Figure 2-1</u> on page 18, six library sets are defined: one library set for the best and worst case operating conditions of each power domain.

```
define_library_set -name set1_bc -libraries {lib1_bc lib2_bc}
define_library_set -name set1_wc -libraries {lib1_wc lib2_wc}
define_library_set -name set2_bc -libraries lib3_bc
define_library_set -name set2_wc -libraries lib3_wc
define_library_set -name set3_bc -libraries lib4_bc
define_library_set -name set2_wc -libraries lib3_wc
```

Creating a CPF File

Specifying the Level Shifter Cells to Use

➤ To identify which cells in the libraries can be used as level shifters, use the define level shifter cell command.

For more information on how to model different types of level shifters, refer to <u>Modeling Level Shifters</u> on page 146.

For applications that do not read .lib files, you must specify the library cells to allow the application to identify the instances of these cells in the netlist.

An MSV design may need different level shifters depending on the voltage gaps to bridge. For the example in <u>Figure 2-1</u> on page 18, the following command defines a set of level shifters that can be used from a power domain operating on 0.8V to a power domain operating on 1.0V.

```
define_level_shifter_cell -cells LVLLHEHX* \
    -input_voltage_range 0.8 \
    -output_power_pin VDD \
    -output_voltage_range 1.0 \
    -direction up \
    -ground VSS \
    -valid_location from
```

Creating a CPF File

Declaring the Design Described in the CPF File

➤ To identify the design for which the CPF file is created, use the following command:

```
set design module
```

where module refers to the name of the top module of the design to which the power information in the CPF file applies.

For the example in <u>Figure 2-1</u> on page 18:

```
set_design top
```

To indicate when the power information for this module ends, use the following command:

```
end design
```

Specifying Units Used

You can specify the units that will be used for the power and time values in CPF commands.

> To specify the power unit used, use the following command

```
set power unit [pW|nW|uW|mW|W]
```

Default: mW

> To specify the time unit used, use the following command

```
set time unit [ns|us|ms]
```

Default: ns

Note: These commands are optional if you use the default values.

Creating a CPF File

Specifying the Naming Styles Used

➤ To specify the hierarchy separator used in the CPF file, use the following command set hierarchy separator [character]

The default separator is the period (.).

The format of a name in RTL and in the netlist can be different. When you want to use the RTL names in the CPF file, but you are reading a gate-level netlist, you need to specify how the base name and bit information are represented in the netlist.

➤ To specify the format used to name flip-flops and latches in the netlist starting from the register names in the RTL description, use the following command

```
set register naming style [string%s]
Default: _reg%s
```

➤ To specify the format used to name the design objects in the netlist starting from multi-bit arrays in the RTL description, use the following command

```
set array naming style [string]
Default: \[%d\]
```

For more information on these two commands, refer to <u>Individual Registers Names</u> in the Common Power Format Language Reference.

Note: These three commands are optional if you use the default values.

Creating a CPF File

Specifying the Power Domains

➤ To identify portions of the design that operate on the same voltage, associate these portions with a power domain using the create power domain command:

```
create_power_domain -name power_domain
  [-instances instance_list] [-boundary_ports pin_list] [-default]
```

Note: The following options of create_power_domain are irrelevant for a pure MSV (non-switchable) design: -shutoff_condition, external_controlled_shutoff, -default_isolation_condition, -default_restore_edge, -default_save_edge, -default_restore_level, -default_save_level, -power_up_states, -active_state_conditions, and -base_domains.

For the example in Figure 2-1 on page 18:

```
create-power_domain -name PD1 -default
create_power_domain -name PD2 -instances inst_B
create_power_domain -name PD3 -instances inst_C
```

Note: CPF requires that the top module belongs to the default power domain.

Specifying the Operating Voltages Used in the Design

In CPF, operating voltages are associated with *nominal conditions*.

➤ To specify the operating voltages used in the design, use the create nominal condition command:

```
create_nominal_condition -name string
-voltage {voltage | voltage_list}
[-ground_voltage {voltage | voltage_list}]
```

Note: The following options of create_nominal_condition are irrelevant for a pure MSV design: -state, -pmos_bias_voltage and -nmos_bias_voltage.

For the example in Figure 2-1 on page 18 three nominal conditions are defined.

```
create_nominal_condition -name low -voltage 0.8
create_nominal_condition -name medium -voltage 1.0
create_nominal_condition -name high -voltage 1.2
```



In CPF, operating voltages are not directly associated with power domains. When using other low power techniques such as power shut off (PSO) or dynamic voltage frequency scaling (DVFS), the operating voltage of a power domain can change and different power domains can use the same operating voltage at different times.

Creating a CPF File

Associating a Nominal Condition with a Power Domain

In CPF, nominal conditions are associated with power domains for a given design mode (here referred to as *power mode*).

A pure MSV design (a design that uses multiple supply voltages but no other low power techniques such as PSO or DVFS methodology) is considered to have only one power mode and each power domain can be associated with only one nominal condition.

➤ To associate the nominal conditions with the power domains, use the create power mode command:

```
create_power_mode -name string
   -domain conditions domain condition list -default
```

Note: The -group_modes option of the create_power_mode command is only relevant for a hierarchical flow. For more information, refer to Chapter 4, "Hierarchical Flow."

Use the following format to specify a *domain condition* (association of a power domain with its nominal condition):

```
domain_name@nominal_condition_name
```

For the example in Figure 2-1 on page 18:

```
create_power_mode -name PM -domain_conditions {PD1@low PD2@medium PD3@high} \
-default
```

Note: CPF requires that one power mode is specified as the default power mode.

Specifying the Libraries to Use for a Condition

You already grouped libraries that are characterized for a specific set of operating conditions in a library set.

➤ To specify which library set to use for a specific nominal condition, use the <u>update nominal condition</u> command:

```
update_nominal_condition -name condition
   -library_set library_set
```

Typically, you specify here the libraries for the worst case condition. For the example in Figure 2-1 on page 18:

```
update_nominal_condition -name low -library_set set1_wc
update_nominal_condition -name medium -library_set set2_wc
update_nominal_condition -name high -library_set set3_wc
```

Creating a CPF File

Specifying the Rules to Create Level Shifter Logic

Depending on your technology, you may need level shifters when passing any signals

- From a power domain with a lower voltage to a power domain with a higher voltage
- From a power domain with a higher voltage to a power domain with a lower voltage
- In both cases
- To create the rule to be used between power domains or a set of pins, use the create_level_shifter_rule command:

```
create_level_shifter_rule -name string
   {-pins pin_list | -from power_domain_list | -to power_domain_list}...
   [-exclude pin_list]
```

For the example in Figure 2-1 on page 18:

```
create_level_shifter_rule -name lsr1 -from PD1 -to PD2
create_level_shifter_rule -name lsr2 -from PD2 -to PD3
create_level_shifter_rule -name lsr3 -from PD1 -to PD3
```

Creating a CPF File

Specifying Power Constraints

Note: This information is optional in the CPF file.

➤ To specify the targets for leakage and dynamic power in the current design, use the set power target command:

```
set_power_target
     { -leakage float | -dynamic float
     | -leakage float -dynamic float }
```

The power constraints must be specified using the power units defined with the set_power_unit command.

For the example in <u>Figure 2-1</u> on page 18:

```
set_power_target -leakage 30 -dynamic 250
```

Specifying Timing Constraints

Note: This information is optional in the CPF file.

➤ To specify the timing constraints for the current design, use the -sdc_files option of the <u>update power mode</u> command:

```
update_power_mode -name mode
{-sdc_files | -setup_sdc_files | -hold_sdc_files} sdc_file_list
```

For the example in Figure 2-1 on page 18:

```
update_power_mode -name PM -sdc_files top.sdc
```

Specifying Activity Information

Note: This information is optional in the CPF file.

> To specify the activity information that can be used for power analysis, use

```
update_power_mode -name mode
    -activity_file file -activity_file_weight weight
```

Supported formats for the activity files are VCD, TCF, and SAIF.

If the design has several modes, you can specify the relative weight of the activities per mode for optimization purpose. Because an MSV design has only one power mode, the weight for the file must be 100.

For the example in <u>Figure 2-1</u> on page 18:

```
update_power_mode -name PM -activity_file top.tcf -activity_file_weight 100
```

Creating a CPF File

Updating the Rules with Implementation Information

You can specify additional information for level shifters, such as, where to place them, what cells to use, or what prefix to use for the added level shifters in the design.

➤ To specify the location or the type of level shifters to be used, use the update level shifter rules command:

For the example in Figure 2-1 on page 18:

```
update_level_shifter_rules -names lsr1 -location from
update_level_shifter_rules -names {lsr2 lsr3} -location to
```

Creating a CPF File

Specifying the Global Power and Ground Nets

➤ To declare (or create) the nets connected to the power supplies, use the create ground nets and commands:

```
create_ground_nets -nets net_list
    [-voltage string]
    [-user_attributes string_list]
    [-peak_ir_drop_limit float]
    [-average_ir_drop_limit float]

create_power_nets -nets net_list
    [-voltage string]
    [-user_attributes string_list]
    [-peak_ir_drop_limit float]
    [-average_ir_drop_limit float]
```

Note: The following options of create_ground_nets and create_power_nets are irrelevant for the pure MSV design: -external_shutoff_condition, and -internal.

For the example in Figure 2-1 on page 18:

```
create_ground_nets -nets VSS
create_power_nets -nets VDD1 -voltage 0.8
create_power_nets -nets VDD2 -voltage 1.0
create_power_nets -nets VDD3 -voltage 1.2
```

Creating a CPF File

Specifying the Global Connections

➤ To specify how to connect global nets, such as power and ground nets, use the create global connection command:

```
create_global_connection
    -net net
    -pins pin_list
    [-domain domain | -instances instance_list]
```

For the example in <u>Figure 2-1</u> on page 18:

```
create_global_connection -net VSS -pins VSS
create_global_connection -domain PD1 -net VDD1 -pins VDD
create_global_connection -domain PD2 -net VDD2 -pins VDD
create_global_connection -domain PD3 -net VDD3 -pins VDD
```

Specifying Additional Information for Power and Ground Routing

> To specify additional information that applies to power and ground routing, use

For the example in <u>Figure 2-1</u> on page 18:

```
update_power_domain -name PD1 -primary_power_net VDD1
update_power_domain -name PD2 -primary_power_net VDD2
update_power_domain -name PD3 -primary_power_net VDD3
```

Here the update_power_domain command for power domain PD1 indicates that VDD1 is the main power net for all cells of power domain PD1.

Creating a CPF File

Specifying the Operating Corners

The design must be able to perform under different sets of operating conditions (process, voltage, and temperature values). Because the timing and power characteristics of the cells depend on the operating conditions, different library sets that contain the characterization information for the different conditions are used. An operating corner shows which library set to use for a given operating condition.



Different portions of the design can operate at the same voltage and yet use dedicated library sets. In this case, it is possible to have multiple operating corners with the same operating conditions.

➤ To define an operating corner, use the <u>create operating corner</u> command.

```
create_operating_corner
    -name string
    -voltage float [-ground_voltage float]
    [-process float]
    [-temperature float]
    -library_set library_set
```

Note: The -pmos_bias_voltage and -nmos_bias_voltage options of create operating corner are irrelevant for a design not using substrate biasing.

For the design in Figure 2-1 on page 18, six operating corners were specified.

The following command specifies to use library set set1_bc for operating corner BC_PD1. The process value of the operating corner is 1, the temperature is 0°C and the operating voltage is 0.88V. This operating corner is defined for best case conditions.

```
create_operating_corner -name BC_PD1 \
    -process 1 -temperature 0 -voltage 0.88 -library_set set1_bc
```

Creating a CPF File

Specifying the Analysis Views

The design must function correctly in each power mode not only under typical conditions, but also under extreme conditions. Typically a multi-mode multi-corner timing analysis will be done for the worst case and the best case conditions.

An analysis view associates a specific operating corner with each power domain in the specified power mode. You need to make sure that all operating corners for a view correspond to either best or worst case conditions.

➤ To define an analysis view, use the <u>create analysis view</u> command.

```
create_analysis_view
   -name string
   -mode mode
   -domain_corners domain_corner_list
   [-user attributes string list]
```

Note: The <code>-group_views</code> option of <code>create_analysis_view</code> is only relevant in a hierarchical flow. For more information, refer to Chapter 4, "Hierarchical Flow."

Use the following format to specify a domain corner:

```
domain_name@corner_name
```



The CPF file can contain several analysis views with the same domain and corner information for a power mode. For a multi-mode multi-corner analysis, some implementation and timing analysis tools need unique views to associate with different parasitic corners.

For the design in Figure 2-1 on page 18, two analysis views were specified.

The following command specifies analysis view AV_BC for power mode PM1. For this view the operating corners for the best case operating conditions are associated with the three power domains.

```
create_analysis_view -name AV_BC -mode PM1 \
    -domain_corners {PD1@BC_PD1 PD2@BC_PD2 PD3@BC_PD3}
```


Creating a CPF File for a Design Using PSO Methodology

A design using power shut off (**PSO**) implementation is a design of which some portions can be switched on and off as needed (or possibly) to save leakage and dynamic power.

Logic blocks (hierarchical instances), leaf instances, and pins that use the same *main* power supply and that can be simultaneously switched on or off are said to belong to the same *power domain*. The example design in Figure 2-4 has three power domains:

- The top-level of the design, top, and hiearchical instances, inst_C and pm_inst, are always switched on: they belong to domain PD1
- Hierarchical instances inst_A and inst_B are always switched on and off simultaneously: they belong to power domain PD2
- Hierarchical instance inst_D can be switched on and off independently from hierarchical instances inst_A and inst_B: it belongs to power domain PD3

Figure 2-4 Example of Design with PSO

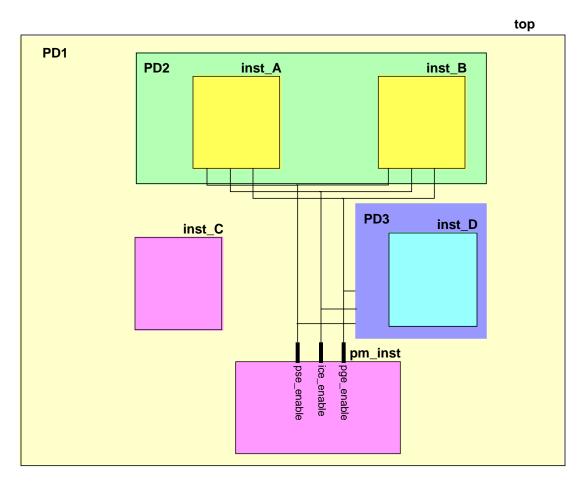

Creating a CPF File

Power domain PD1 is never powered down. It is called an <u>unswitched</u> domain.

Power domains PD2 and PD3 can be powered down. They are referred to as switchable domains. CPF distinguishes between <u>internal switchable</u>, and <u>on-chip</u> controlled external switchable domains.

A steady state of the design in which some power domains are switched on and some power domains are switched off is called a **power mode**. In a power mode, each power domain operates on a specific nominal condition. Different timing constraints can be associated with each power mode. Table 2-2 shows the three power modes of the example design.

Table 2-2 Power Modes

Power Mode	Power Domain		
	PD1	PD2	PD3
PM1	1.1V	1.1V	1.1V
PM2	1.1V	0.0V	1.1V
PM3	1.1V	0.0V	0.0V

Note: A voltage of 0.0V indicates that the power domain is off.

To prevent that unknown states in the power domains that are powered down propagate to the domains that remain powered on *isolation cells* are needed at the boundaries of the power domains that are powered down. Most of the time, isolation cells are inserted at the output boundaries of the powered down domains. You can, however, also insert isolation cells at the input boundaries.

To facilitate powered down blocks to resume normal operation, **state retention cells** can be used for some sequential cells to keep their previous state prior to power down.

For switchable domains you need to indicate how the power supply is connected and disconnected from the gates.

- For internal switchable domains, you must add *power switch logic*.
- For external switchable domains, the power switch logic is not part of the chip, so you must indicate that an external power shut-off method is used.

For this example we are assuming that power domains PD2 and PD3 are internal switchable.

Special control signals are used to shut down a power domain, enable state retention, and control the working of the power switch logic. <u>Table 2-3</u> on page 39 shows the signals used in this example.

Creating a CPF File

Table 2-3 Signals Controlling the Power Domains

Power Domain	Control Signals			
l ower bomain	power switch	isolation cell	state retention cell	
PD1	no control signal	no control signal	no control signal	
PD2	ps_enable[0]	ice_enable[0]	pge_enable[0]	
PD3	ps_enable[1]	ice_enable[1]	pge_enable[1]	

When a domain is switchable, it derives its power from another power domain through either internal or external power switch logic.

In this example, power domain PD2 derives its power from power domain PD1, then PD1 is called the **secondary** (or base) domain for PD2, which is referred to as the **primary** (or derived) domain.

When defining a (primary) power domain you can indicate its secondary domain and under which condition the domain will be shut down.

The majority of instances in a power domain are driven by the same power supply. For switchable domains, it is the primary power and ground nets of the (primary) power domain to which the instances belong that provide the power supply to the power and ground pins (follow-pins) of the cells.


On the other hand, isolation cells and state retention cells are driven by multiple power supplies. These special low power instances have at least two sets of power and ground pins, and are therefore associated with two power domains: the *primary* domain is the domain that provides the power supply to their primary set of power and ground pins. The *secondary* domain is the domain whose primary power and ground nets provide the power supply to the secondary power and ground pins of the special low power instances.

It is recommended that you specify the secondary domain for these special low power instances, but if you do not specify this information, the tools can use some rules to derive the secondary domain. For more information, refer to <u>Secondary Power Domain of Isolation Instances</u>, and <u>Secondary Domain of Retention Logic</u>.

If the design can operate in different power modes, you need to check if the design functions correctly in each of these modes not only at the typical conditions but also when slightly different operating conditions apply. Typically a multi-mode multi-corner timing analysis will be done for the worst case and the best case corner. The design must function correctly in both corners for the same set of timing constraints that is specified for that power mode. Figure 2-5 on page 40 shows that an analysis (view) can be done for each corner of the power mode.


Creating a CPF File

Figure 2-5 Multi-Corner Timing Analysis for a Power Mode

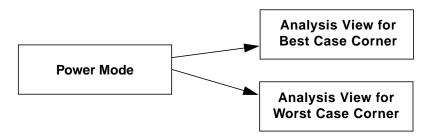

When analyzing a view of the design, you need to indicate the corners at which the power domains are operating, as shown in Figure 2-6.

Figure 2-6 Relation of Analysis View with Power Domains and Operating Corners

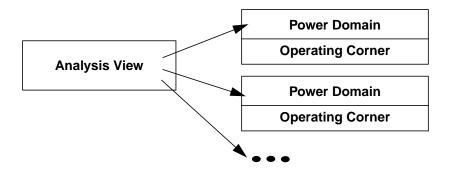

Operating corners are not only characterized by a set of operating conditions, but also by the library sets to be used for that corner, because the timing and power characteristics of the cells depend on the operating conditions. Typically different libraries are used for the different corners.

Table 2-4 indicates which library sets must be used for the design in <u>Figure 2-4</u> on page 37 to check the conditions.

Table 2-4 Operating Corners

Operating Corner	Оре	erating Condit	Library set	
Name	process	temperature	voltage	, , , , , , , , , , , , , , , , , , , ,
ВС	1	0	0.99	lib1_bc, lib2_bc
WC	1	125	1.21	lib1_wc, lib2_wc

As is obvious that all this information is related to the power intent of the design, it makes sense to describe this information in the CPF file.

Creating a CPF File

Complete CPF File for PSO Example

```
set cpf version 1.1
Technology part of the CPF
# define the library sets
define_library_set -name set1_wc -libraries {lib1_wc lib2_wc}
define library set -name set1 bc -libraries {lib1 bc lib2 bc}
# define the isolation cells
define_isolation_cell -cells ISOLN* -enable EN -valid_location on
# define the always on cell
define_always_on_cell -cells "BUFGX2M BUFGX8M INVGX2M INVGX8M"
# define the state retention cell
define state retention cell -cells *DRFF* -restore function RETN
# define the power switch cells
define_power_switch_cell -cells "hd8DM hd16DM hd32DM hd64DM" \
   -stage 1 enable SLEEP -type header
define_power_switch_cell -cells "hd8M hd16M hd32M hd64M" \
   -stage_1_enable !SLEEP -type header
define_power_switch_cell -cells "ft8DM ft16DM" \
   -stage 1 enable !SLEEPN -type footer
define power switch cell -cells "ft8M ft16M" \
   -stage_1_enable SLEEPN -type footer
Design part of the CPF
# identify the design for which the CPF file is created
set_design top
# create power domains
create power domain -name PD1 -default
create_power_domain -name PD2 -instances {inst_A inst_B} \
-shutoff_condition {pse_enable[0]} -base_domains PD1
create_power_domain -name PD3 -instances inst_D \
-shutoff_condition {pse_enable[1]} -base_domains PD1
# create nominal conditions
create_nominal_condition -name off -voltage 0
create_nominal_condition -name on -voltage 1.1
# create power modes
create_power_mode -name PM1 -domain_conditions {PD1@on PD2@on PD3@on} -default
create_power_mode -name PM2 -domain_conditions {PD1@on PD3@on}
create_power_mode -name PM3 -domain_conditions {PD1@on}
# associate library sets with nominal conditions
update_nominal_condition -name on -library_set set1_wc
```

```
# create rules for isolation logic insertion
create_isolation_rule -name iso1 -from PD2
-isolation_condition {pm_inst.ice_enable[0]}
create_isolation_rule -name iso2 -to PD1\
-isolation_condition {pm_inst.ice_enable[1]} -isolation_output high
# create rules for state retention insertion
create_state_retention_rule -name st1 -domain PD2 \
-restore_edge {!pm_inst.pge_enable[0]}
create_state_retention_rule -name st2 -domain PD3 \
-restore_edge {!pm_inst.pge_enable[1]}
# Additional Information for Logic Synthesis
# specify power targets
set_power_target -leakage 30 -dynamic 250
# specify timing constraints
update power mode -name PM1 -sdc files pm1.sdc
update power mode -name PM2 -sdc files pm2.sdc
update_power_mode -name PM1 -activity_file top.tcf -activity_file_weight 100
# update the rules with implementation info
update isolation rules -names isol -location to -cells ISOLNX2M
update_isolation_rules -names iso2 -location to -cells ISOLNX2M
# Additional Information for Physical Implementation
# declare power and ground nets
create_power_nets -nets VDD -voltage 1.1
create_power_nets -nets {VDD_SW1 VDD_SW2} -internal
create ground nets -nets VSS -voltage 0
# (optional) create global connections
create_global_connection -net VDD -pins VDD
create_global_connection -net VSS -pins VSS
# rules for power switch insertion
create_power_switch_rule -name SW1 -domain PD2 -external_power_net VDD
create_power_switch_rule -name SW2 -domain PD3 -external_power_net VDD
update_power_switch_rule -name SW1 -cells hd32M -prefix CDN_
update_power_switch_rule -name SW2 -cells hd32M -prefix CDN_
# add implementation info for power domains
update_power_domain -name PD1 -primary_power_net VDD -primary_ground_net VSS
update_power_domain -name PD2 -primary_power_net VDD_SW1 -primary_ground_net VSS
update_power_domain -name PD3 -primary_power_net VDD_SW2 -primary_ground_net VSS
# create operating corners
create_operating_corner -name BC \
   -process 1 -temperature 0 -voltage 1.21 -library_set set1_bc
```

```
create_operating_corner -name WC \
    -process 1 -temperature 125 -voltage 0.99 -library_set set1_wc
# create analysis views
create_analysis_view -name AV_PM1_bc -mode PM1 \
    -domain_corners {PD1@BC PD2@BC PD3@BC}
create_analysis_view -name AV_PM1_wv -mode PM1 \
    -domain_corners {PD1@WC PD2@WC PD3@WC}
create_analysis_view -name AV_PM2_bc -mode PM2 \
    -domain_corners {PD1@BC PD2@BC PD3@BC}
create_analysis_view -name AV_PM2_wc -mode PM2 \
    -domain_corners {PD1@WC PD2@WC PD3@WC}
create_analysis_view -name AV_PM3_bc -mode PM3 \
    -domain_corners {PD1@BC PD2@BC PD3@BC}
create analysis view -name AV PM3 wc -mode PM3 \
    -domain_corners {PD1@WC PD2@WC PD3@WC}
\# indicate when the power information for the design ends
end design
```

Creating a CPF File

Steps to Create the CPF File for Design Using PSO

This section describes the information to include in a CPF file for a design using the PSO methodology. The example shown in Figure 2-4 on page 38 is used throughout this section.

A CPF file has technology-related information and design-related information.

For a design using the PSO methodology, the technology-related information lists the libraries that you want to use for the design and identifies the library cells that can be used as isolation cells, power switch cells and state retention cells.

- Specifying the Libraries on page 46
- Specifying the Isolation Cells to Use on page 46
- Specifying the Always-On Cells on page 47
- Specifying the State Retention Cells to be Used on page 48
- Specifying the Power Switch Cells to be Used on page 49

The design-related information captures the power intent and constraints.

- <u>Declaring the Design Described in the CPF File</u> on page 50
- Specifying Units Used on page 50
- Specifying Naming Styles Used on page 51
- Specifying the Power Domains on page 52
- Specifying the Operating Voltage Used in the Design on page 52
- Specifying the Static Behavior in each Power Mode on page 53
- Specifying the Libraries to Use for a Condition on page 53
- Specifying the Rules to Create Isolation Logic on page 54
- Specifying the Rules to Create State Retention Logic on page 55
- Specifying Power Constraints on page 55
- Specifying Timing Constraints on page 56
- Specifying Activity Information on page 56
- Updating the Rules with Information for Implementation on page 57

Creating a CPF File

The following information is needed for physical implementation:

- Specifying the Power and Ground Nets on page 58
- Specifying the Global Connections on page 58
- Specifying the Rules for the Power Switch Logic on page 59
- Specifying Additional Information for Power and Ground Routing on page 59
- Specifying the Operating Corners on page 60
- Specifying the Analysis Views on page 61

Creating a CPF File

Specifying the Libraries

➤ To group libraries that are characterized for a specific set of operating conditions, use the define library set command:

```
define_library_set -name library_set
    -libraries library_list
```

For the example in <u>Figure 2-4</u> on page 37, we assume only one main power supply, which implies that the definition of one library set is sufficient.

```
define_library_set -name set1_wc -libraries {lib1_wc lib2_wc}
define_library_set -name set1_bc -libraries {lib1_bc lib2_bc}
```

Specifying the Isolation Cells to Use

➤ To identify which cells in the libraries can be used as isolation cells, use the define_isolation_cell command.

For more information on how to model different types of isolation cells, refer to <u>Modeling</u> <u>Isolation Cells</u> on page 161.

For applications that do not read .lib files, you must specify these library cells to allow these applications to identify instances of isolation cells in the netlist.

For the example in <u>Figure 2-4</u> on page 37:

```
define_isolation_cell -cells ISOLN* -enable EN -valid_location on
```

Creating a CPF File

Specifying the Always-On Cells

Always-on cells are special cells whose power supply has to be continuous on even when the power supply for the rest of the logic in the power domain is off.

Always-on cells are used for example

- To drive the control signals of the state retention cells in a domain that is being powered down
- In combination with isolation cells that are inserted in the power domain that is switched off to ensure that the driver of the enable pin of the isolation cells is never switched off.
- ➤ To identify which cells in the libraries can be used as always-on cells, use the define always on cell command.

Note: Outputs of cells that are always on, are always-on drivers.

For applications that do not read .lib files, you must specify these library cells to allow these applications to identify the instances of these cells in the netlist.

For the example in Figure 2-4 on page 37,

```
define_always_on_cell -cells "BUFGX2M BUFGX8M INVGX2M INVGX8M"
```

Creating a CPF File

Specifying the State Retention Cells to be Used

➤ To identify which cells in the libraries can be used as state retention cells, use the define state retention cell command.

For more information on how to model different types of state retention cells, refer to <u>Modeling State Retention Cells</u> on page 177.

For applications that do not read .lib files, you must specify these library cells to allow these applications to identify the instances of these cells in the netlist.

For the example in Figure 2-4 on page 37,

```
define_state_retention_cell -cells *DRFF* -restore_function RETN
```

This command indicates that when the restore pin RETN is set to 1, the state of the specified cells will be restored to the value saved after exiting power shut-off mode.

Creating a CPF File

Specifying the Power Switch Cells to be Used

➤ To identify which cells in the libraries can be used as power switch cells, use the define power switch cell command.

For more information on how to model different types of power switch cells, refer to <u>Modeling Power Switch Cells</u> on page 184.

For applications that do not read .lib files, you must specify the library cells to allow the applications to identify the instances of these cells in the netlist.

For the example in Figure 2-4 on page 37,

```
define_power_switch_cell -cells "hd8DM hd16DM hd32DM hd64DM" \
    -stage_1_enable SLEEP -type header

define_power_switch_cell -cells "hd8M hd16M hd32M hd64M" \
    -stage_1_enable !SLEEP -type header

define_power_switch_cell -cells "ft8DM ft16DM" \
    -stage_1_enable !SLEEPN -type footer

define_power_switch_cell -cells "ft8M ft16M" \
    -stage_1_enable SLEEPN -type footer
```

Creating a CPF File

Declaring the Design Described in the CPF File

➤ To identify the design for which the CPF file is created, use the following command:

```
set design module
```

where module refers to the name of the top module of the design to which the power information in the CPF file applies.

For the example in <u>Figure 2-4</u> on page 38:

```
set_design top
```

To indicate when the power information for this module ends, use the following command:

```
end design
```

Specifying Units Used

You can specify the units that will be used for the power and time values in CPF commands.

> To specify the power unit used, use the following command

```
set power unit [pW|nW|uW|mW|W]
```

Default: mW

> To specify the time unit used, use the following command

```
set time unit [ns|us|ms]
```

Default: ns

Note: These commands are optional if you use the default values.

Creating a CPF File

Specifying Naming Styles Used

➤ To specify the hierarchy separator used in the CPF file, use the following command set hierarchy separator [character]

The default separator is the period (.).

The format of a name in RTL and in the netlist can be different. When you want to use the RTL names in the CPF file, but you are reading a gate-level netlist, you need to specify how the base name and bit information are represented in the netlist.

➤ To specify the format used to name flip-flops and latches in the netlist starting from the register names in the RTL description, use the following command

```
set register naming style [string%s]
Default: _reg%s
```

➤ To specify the format used to name the design objects in the netlist starting from multi-bit arrays in the RTL description, use the following command

```
set array naming style [string]
Default: \[%d\]
```

For more information on these two commands, refer to <u>Individual Registers Names</u> in the Common Power Format Language Reference.

Note: These three commands are optional if you use the default values.

Creating a CPF File

Specifying the Power Domains

➤ To identify portions of the design that operate on the same voltage and that can be simultaneously switched on or off, associate these portions with a power domain using the create power domain command:

```
create_power_domain -name power_domain
   [-instances instance_list] [-boundary_ports pin_list] [-default]
   [-shutoff_condition expression [-external_controlled_shutoff]]
   [-default_isolation_condition expression ]
   [-default_restore_edge expr | -default_save_edge expr
   |-default_restore_edge expr -default_save_edge expr
   |-default_restore_level expr -default_save_level expr ]
   [-power_up_states {high|low|random}]
   [-active_state_conditions active_state_condition_list]
```

The -shutoff_condition determines when the power domain is switched off. If this option is not specified, the power domain is an <u>unswitched</u> domain.

For the example in Figure 2-4 on page 37:

```
create-power_domain -name PD1 -default
create_power_domain -name PD2 -instances {inst_A inst_B} \
-shutoff_condition {pse_enable[0]} -base_domains PD1
create_power_domain -name PD3 -instances inst_D \
-shutoff_condition {pm_inst.pse_enable[1]} -base_domains PD1
```

Power domains PD2 and PD3 have power domain PD1 as their secondary power domain.

Note: CPF requires that the top module belongs to the default power domain.

Specifying the Operating Voltage Used in the Design

In CPF, operating voltages are associated with *nominal conditions*.

➤ To specify the operating voltages used in the design, use the create nominal condition command:

```
create_nominal_condition -name string
    -voltage {voltage | voltage_list} [-state {on | off | standby}]
    [-ground_voltage {voltage | voltage_list}]
```

Note: The -pmos_bias_voltage and -nmos_bias_voltage options of create_nominal_condition are irrelevant for a design not using substrate biasing.

The example in <u>Figure 2-4</u> on page 37 uses only one operating voltage, but you can also specify a nominal condition whose voltage is 0.

```
create_nominal_condition -name off -voltage 0
create_nominal_condition -name on -voltage 1.1
```

Creating a CPF File

Specifying the Static Behavior in each Power Mode

➤ To define the static behavior of the design in a power mode, you need to specify the nominal condition of each power domain in that mode, using the create power mode command:

```
create_power_mode -name string
   -domain_conditions domain_condition_list
[-default]
```

Note: The -group_modes option of the create_power_mode command is only relevant for a hierarchical flow. For more information, refer to Chapter 4, "Hierarchical Flow."

Use the following format to specify a *domain condition* (association of a power domain with its nominal condition in the power mode being defined):

```
domain_name@nominal_condition_name
```

For the example in <u>Figure 2-4</u> on page 37:

```
create_power_mode -name PM1 -domain_conditions {PD1@on PD2@on PD3on} -default
create_power_mode -name PM2 -domain_conditions {PD1@on PD3@on}
create_power_mode -name PM3 -domain_conditions {PD1@on}
```

Note: CPF requires that one power mode is specified as the default power mode.

Note: When a domain is not specified in the list of domain conditions, it is considered to be switched off in the specified mode. For example, power domain PD2 is not specified in the list of conditions for power mode PM2, but referring to <u>Table 2-2</u> on page 38, power domain PD2 is switched off in this mode. It is recommended not to rely on the default behavior and to specify all power domains when defining a power mode.

Specifying the Libraries to Use for a Condition

You already grouped libraries that are characterized for a specific set of operating conditions in a library set.

➤ To specify which library set to use for a specific nominal condition, use the update nominal condition command:

```
update_nominal_condition -name condition
   -library_set library_set
```

For the example in <u>Figure 2-4</u> on page 37:

```
update nominal condition -name on -library set set1 wc
```

Creating a CPF File

Specifying the Rules to Create Isolation Logic

➤ To define when isolation cells must be added or to specify which pins must be isolated, use the create isolation rule command:

```
create_isolation_rule
    -name string
    [-isolation_condition expression | -no_condition]
    {-pins pin_list | -from power_domain_list | -to power_domain_list}...
    [-exclude pin_list]
    [-isolation_target {from|to}]
    [-isolation_output { high | low | hold | tristate}]
    [-secondary_domain power_domain]
```

Typically, isolation logic is needed to isolate signals going from a power domain being switched down to a power domain that remains on. If an input of a powered down domain requires a stable signal for electrical reasons, isolation is required even if the signal goes from a powered on domain to a powered down domain.

Referring to <u>Table 2-2</u> on page 38, isolation logic will be needed in power modes 2 and 3 for any nets going from power domain PD2 to PD1 and PD3, and for any nets going from power domains PD3 and PD2 to PD1.

For the example in Figure 2-4 on page 37:

```
create_isolation_rule -name iso1 -from PD2 \
  -isolation_condition {pm_inst.ice_enable[0]}
create_isolation_rule -name iso2 -to PD1\
  -isolation_condition {pm_inst.ice_enable[1]} -isolation_output high
```

In this example, the secondary power domain was not specified for the isolation instances. In this case, the tools will use the power domain of the logic that drives the enable pins. That logic is the pm_inst instance which belongs to power domain PD1.

Creating a CPF File

Specifying the Rules to Create State Retention Logic

To define the rule for replacing selected registers or all registers in the specified power domain with state retention registers, use the <u>create state retention rule</u> command.

```
create_state_retention_rule
    -name string
{    -domain power_domain | -instances instance_list }
    [ -exclude instance_list ]
    [ -restore_edge expr | -save_edge expr
    | -restore_edge expr -save_edge expr
    | -restore_level expr -save_level expr ]
    [ -restore_precondition expr] [-save_precondition expr]
    [-target_type {flop|latch|both}]
    [-secondary_domain domain]
```

For the example in Figure 2-4 on page 37:

```
create_state_retention_rule -name st1 -domain PD2 \
-restore_edge {!pm_inst.pge_enable[0]}
create_state_retention_rule -name st2 -domain PD3 \
-restore_edge {!pm_inst.pge_enable[1]}
```

In this example, the secondary power domain was not specified for the state retention logic. In this case, the tools will use the secondary (or base) power domain of its primary domain. That logic is the pm_inst instance which belongs to power domain PD1.

Specifying Power Constraints

Note: This information is optional in the CPF file.

➤ To specify the targets for leakage and dynamic power in the current design, use the set power target command:

For the example in Figure 2-4 on page 37:

```
set_power_target -leakage 30 -dynamic 250
```

Creating a CPF File

Specifying Timing Constraints

Note: This information is optional in the CPF file.

➤ To specify the timing constraints for the current design, use the -sdc_files option of the update power mode command:

```
update_power_mode -name mode
{-sdc_files | -setup_sdc_files | -hold_sdc_files} sdc_file_list
```

For the example in Figure 2-4 on page 37:

```
update_power_mode -name PM1 -sdc_files pm1.sdc
update_power_mode -name PM2 -sdc_files pm2.sdc
```

Specifying Activity Information

Note: This information is optional in the CPF file.

> To specify the activity information that can be used for power analysis, use

```
update_power_mode -name mode
    -activity_file file -activity_file_weight weight
```

Supported formats for the activity files are VCD, TCF, and SAIF.

If the design has several modes, you can specify the relative weight of the activities per mode.

For the example in <u>Figure 2-4</u> on page 37, only the activity file for the default power mode is specified:

```
update_power_mode -name PM1 -activity_file top.tcf -activity_file_weight 100
```

Creating a CPF File

Updating the Rules with Information for Implementation

1. To specify the location or the type of isolation cells to be used, use the update isolation rules command:

2. To append the specified rules for state retention logic with implementation information, use the update state retention rules command:

```
update_state_retention_rules
    -names rule_list
    { -cell_type string
    | -cells cell_list| -set_reset_control} ...
```

Note: This information is optional in the CPF file.

For the example in <u>Figure 2-4</u> on page 37:

```
update_isolation_rules -names iso1 -location to -cells ISOLNX2M update_isolation_rules -names iso2 -location to -cells ISOLNX2M
```

Creating a CPF File

Specifying the Power and Ground Nets

➤ To declare (or create) the nets connected to the power supplies, use the create ground nets and create power nets commands:

```
create_ground_nets -nets net_list
    [-voltage string]
    [-external_shutoff_condition expression | -internal]
    [-user_attributes string_list]
    [-peak_ir_drop_limit float]
    [-average_ir_drop_limit float]

create_power_nets -nets net_list
    [-voltage string]
    [-external_shutoff_condition expression | -internal]
    [-user_attributes string_list]
    [-peak_ir_drop_limit float]
    [-average_ir_drop_limit float]
```

Note: Power and ground nets referenced in an update_power_domain command can be either always on or can be switchable power nets depending on the power domain specification. Other power and ground nets are considered to be always on unless you specify the -external_shutoff_condition option.

For the example in Figure 2-4 on page 37,

```
create_power_nets -nets VDD -voltage 1.1
create_power_nets -nets {VDD_SW1 VDD_SW2} -internal
create ground nets -nets VSS -voltage 0
```

Specifying the Global Connections

➤ To specify how to connect global nets, such as power and ground nets, use the create global connection command:

```
create_global_connection
    -net net
    -pins pin_list
    [-domain domain | -instances instance_list]
```

For the example in Figure 2-4 on page 37:

```
create_global_connection -net VDD -pins VDD
create_global_connection -net VSS -pins VSS
```

Creating a CPF File

Specifying the Rules for the Power Switch Logic

1. To specify how a single power switch must connect the external and internal power or ground nets for the specified power domain, use the create power switch rule command.

```
create_power_switch_rule
   -name string
   -domain power_domain
   {-external_power_net net | -external_ground_net net}
```

You can specify one or more commands for a power domain depending on whether you want to control the switchable power domain by a single switch or multiple switches.

2. To append the specified rules for power switch logic with implementation information, use the update power switch rule command:

```
update_power_switch_rule
    -name string
{    -enable_condition_1 expression [-enable_condition_2 expression]
    | -acknowledge_receiver_1 express [-acknowledge_receiver_2 express]
    | -cells cell_list
    | -gate_bias_net power_net
    | -prefix string
    | -peak_ir_drop_limit float
    | -average_ir_drop_limit float } ..
```

For the example in <u>Figure 2-4</u> on page 37:

```
create_power_switch_rule -name SW1 -domain PD2 -external_power_net VDD
create_power_switch_rule -name SW2 -domain PD3 -external_power_net VDD
update_power_switch_rule -name SW1 -cells hd32M -prefix CDN_
update_power_switch_rule -name SW2 -cells hd32M -prefix CDN_
```

Specifying Additional Information for Power and Ground Routing

> To specify additional information that applies to power and ground routing, use

For the example in Figure 2-4 on page 37:

```
update_power_domain -name PD1 -primary_power_net VDD -primary_ground_net VSS update_power_domain -name PD2 -primary_power_net VDD_SW1 -primary_ground_net VSS update power domain -name PD3 -primary power net VDD SW2 -primary ground net VSS
```

Creating a CPF File

Specifying the Operating Corners

The design must be able to perform under different sets of operating conditions (process, voltage, and temperature values). Because the timing and power characteristics of the cells depend on the operating conditions, different library sets that contain the characterization information for the different conditions are used. An operating corner shows which library set to use for a given operating condition.



Different portions of the design can operate at the same voltage and yet use dedicated library sets. In this case, it is possible to have multiple operating corners with the same operating conditions. <u>Table 2-4</u> on page 40 illustrates this case.

➤ To define an operating corner, use the <u>create operating corner</u> command.

```
create_operating_corner
    -name string
    -voltage float [-ground_voltage float]
    [-process float]
    [-temperature float]
    -library_set library_set
```

Note: The -pmos_bias_voltage and -nmos_bias_voltage options of create_operating_corner are irrelevant for a design not using substrate biasing.

For the design in Figure 2-4 on page 37, two operating corners were specified.

The following command specifies to use library set set1_wc for operating corner wc. The process value of the operating corner is 1, the temperature is 125°C and the operating voltage is 0.99V. This operating corner is defined for worst case conditions.

```
create_operating_corner -name WC \
    -process 1 -temperature 125 -voltage 0.99 -library_set set1_wc
```

Creating a CPF File

Specifying the Analysis Views

The design must function correctly in each power mode not only under typical conditions, but also under extreme conditions. Typically a multi-mode multi-corner timing analysis will be done for the worst case and the best case conditions.

An analysis view associates a specific operating corner with each power domain in the specified power mode. You need to make sure that all operating corners for a view correspond to either best or worst case conditions.

➤ To define an analysis view, use the <u>create analysis view</u> command.

```
create_analysis_view
   -name string
   -mode mode
   -domain_corners domain_corner_list
   [-user attributes string list]
```

Note: The <code>-group_views</code> option of <code>create_analysis_view</code> is only relevant in a hierarchical flow. For more information, refer to Chapter 4, "Hierarchical Flow."

Use the following format to specify a domain corner:

```
domain_name@corner_name
```



The CPF file can contain several analysis views with the same domain and corner information for a power mode. For a multi-mode multi-corner analysis, some implementation and timing analysis tools need unique views to associate with different parasitic corners.

For the design in Figure 2-7 on page 63, six analysis views were specified.

The following command specifies analysis view AV_PM1 for power mode PM1. For this view the operating corners for the best case operating conditions are associated with the three power domains.

```
create_analysis_view -name AV_PM1 -mode PM1 \
    -domain_corners {PD1@BC PD2@BC PD3@BC}
```

Creating a CPF File

Creating a CPF File for a Design Using DVFS Methodology

Dynamic voltage frequency scaling (DVFS) reduces the power in the chip by scaling down the voltage and frequency when peak performance is not required.

A design using DVFS can be seen as a special case of an MSV design operating in multiple design modes.

- In a pure MSV design different portions of the design operate on different voltages and these portions *remain* operating at their respective operating voltage.
- In a DVFS design, in addition some portions can dynamically *change* to other voltages depending on the design mode or can even be switched off.

Consequently, a DVFS design must satisfy different constraints in different design modes.

Requirements for DVFS Designs


DVFS designs require variable power supply(ies) that can generate the required voltage levels with minimal transition energy losses and a quick voltage transient response.

When scaling the voltage, the frequency must be scaled accordingly to meet signal propagation delay requirements.

A power scheduler can intelligently compute the appropriate frequency and voltage levels needed to execute the various applications.

Figure 2-7 Example of DVFS Design

Instances Operating on same Operating Voltage	Corresponding Power Domain	I intaring light for all modes	
dtmf_recvr_core, pm_inst	AO	ao_bc_0v99, ao_wc_0v99	
		ao_bc_0v792, ao_wc_0v792	
TDSP_CORE_INST	TDSPCORE	tdsp_bc_0v792, tdsp_wc_0v792	
PLLCLK_INST	PLL	ao_bc_0v99, ao_wc_0v99	

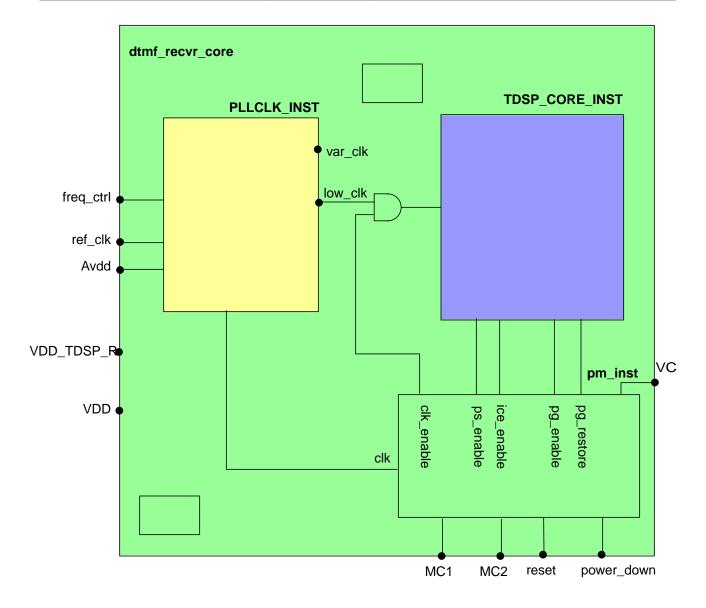

Creating a CPF File

The dtmf_recvr_core design shown in <u>Figure 2-7</u> on page 63 has several other blocks which for the sake of simplicity are not shown here. However, they all operate at the same voltage as the top-level of the design.

The voltage of the top-level design is scaled depending on the requested function of the design. If the processing speed is critical a higher voltage is used, if the processing speed is not critical, the voltage is dynamically scaled down together with the clock frequency to save power. For this design we assume that the voltage supply is dynamically controlled external to the chip. The input power signal for the top-level and the blocks that operate at the same voltage is VDD.

Note: The design used here uses both DVFS and PSO methodology.

The dtmf_recvr_core design further contains

■ The TDSP_CORE_INST block

This digital signal processing block operates at a lower voltage because its processing speed is not critical. When the block does not need to be operational, it is shut down.

The power input for this block is Vdd_TDSP_R. The clk_enable signal disables the clock when the block is shut down.

■ The PLLCLK_INST block

This block is used to generate the clocks needed by all the blocks in the design. It has a reference clock, ref_clk, that is used to generate all other clocks.

Because the design uses two operating voltages, two clock signals are created:

- ☐ The low_clk clock signal which feeds the TDSP_CORE_INST block has a constant lower frequency.
- ☐ The var_clk clock signal feeds the top-level design and other blocks and can vary in clock frequency depending on the operating voltage.

The freq_ctrl signal ensures that the frequency of the var_clk signal used for the top-level design is scaled proportional to the voltage.

Because this block is an analog block, it needs to operate at a constant voltage to ensure correct working. It therefore needs a dedicated power input, Avdd.

■ The pm_inst block

This block generates all power control signals for the chip.

This block operates at the same voltage as the top-level of the design.

Creating a CPF File

In DVFS designs, a collection of logic blocks (hierarchical instances) and leaf instances that use the same *main* power supply and whose voltage and frequency can *simultaneously* change or be switched off belong to the same *power domain*.

The example design in Figure 2-7 on page 63 has the following power domains.

- The PLLCLK_INST block is the only block in the design that operates at constant voltage 0.99V. This block belongs to power domain PLL.
- The TDSP_CORE_INST block operates at voltage 0.792V and it is the only block that is shut down at certain times. This block belongs to power domain TDSPCORE.
- The pm_inst block, the top-level design and the remaining blocks are always powered on but their operating voltage and frequency can change. They belong to power domain AO.

Power domains PLL and AO are never powered down. They are referred to as an <u>unswitched</u> domain. Power domain TDSPCORE can be powered down and is called a switchable domain. CPF distinguishes between <u>internal switchable</u>, and <u>on-chip</u> controlled external switchable domains.

A steady state of a design in which some power domains are switched on and some power domains are switched off is called a **power mode**. In a power mode, each power domain operates on a specific voltage (nominal condition). Table 2-5 shows the operating voltages for each of the power domains in the three power modes of the dtmf_recvr_core design. The voltages shown in this table correspond to the worst case voltages. The typical voltages for the design would be 1.1V and 0.88V.

Table 2-5 Power Modes

Power Mode		Corresponding Power Domain			
	AO	PLL	TDSPCore		
full	0.99	0.99	0.792		
slow	0.99	0.99	0.0		
sleep	0.792	0.99	0.0		

To pass signals between portions of the design that operate on different voltages, *level* shifters are needed.

To prevent unknown states from propagating from a power domain that is powered-down to a power domain that remains on, *isolation cells* are needed at the boundaries of the power domains that are powered down. Most of the time, isolation cells are inserted at the output

Creating a CPF File

boundaries of the powered down domains. You can, however, also insert isolation cells at the input boundaries.

To facilitate powered down blocks to resume normal operation, **state retention cells** can be used for some sequential cells to keep their previous state prior to power up.

To connect and disconnect the power supply from the gates in a power domain, you must add **power switch logic** or use an external power shut-off method.

For switchable domains you need to indicate how the power supply is connected and disconnected from the gates.

- For internal switchable domains, you must add *power switch logic*.
- For external switchable domains, the power switch logic is not part of the chip, so you must indicate that an *external power shut-off method* is used.

For this example we are assuming that power domain TDSPCore is internal switchable.

Special control signals are used to control the supply voltage, shut down a power domain, enable state retention, restore the state of the registers when powering up a power domain, and control the working of the power switch logic. Table 2-6 shows the signals used in this design example.

Table 2-6 Signals Controlling the Power Domains

Power				
Domain	voltage control	power switch	isolation cell	state retention cell
AO	VC	no control signal	no control signal	no control signal
PLL	no control signal	no control signal	no control signal	no control signal
TDSPCore	no control signal	ps_enable	iso_enable	pg_enable and pg_restore

When a domain is switchable, it derives its power from another power domain through either internal or external power switch logic.

In this example, power domain TDSPCore derives its power from power domain AO, then AO is called the **secondary** (or base) domain for TDSPCore, which is referred to as the **primary** (or derived) domain.

When defining a (primary) power domain you can indicate its secondary domain and under which condition the domain will be shut down.

Creating a CPF File

The majority of instances in a power domain are driven by the same power supply. For switchable domains, it is the primary power and ground nets of the (primary) power domain to which the instances belong that provide the power supply to the power and ground pins (follow-pins) of the cell.

On the other hand, level shifters, isolation cells and state retention cells are driven by multiple power supplies. These special low power instances have at least two sets of power and ground pins, and are therefore associated with two power domains.

For level shifters, the primary and a secondary power domain are defined as follows:

- A power domain X is a **secondary** power domain of a special low power instance if the primary power and ground nets of domain X provide the power supply to the **secondary** power and (or) ground pins of the special low power instance.
- A power domain Y is a *primary* power domain of a a special low power instance if the primary power and ground nets of domain Y provide the power supply to the *primary* power and ground pins (follow-pins) of the special low power instance.

The tools reading CPF can derive the primary and secondary power domains for level shifters. For more information, refer to Input and Ouput Domains of Level Shifters.

For isolation cells and state retention cells the primary and a secondary power domain are defined as follows:


- the *primary* domain is the domain that provides the power supply to their primary set of power and ground pins.
- The **secondary** domain is the domain whose primary power and ground nets provide the power supply to the secondary power and ground pins of the isolation cells and state retention cells.

For isolation cells and state retention cells, it is recommended that you specify the secondary domain for the isolation cells and state retention cells, but if you do not specify this information, the tools can use some rules to derive the secondary domain. For more information, refer to Secondary Power Domain of Isolation Instances, and Secondary Domain of Retention Logic.

When the design can operate in different power modes, you need to check if the design functions correctly in each of these modes not only at the typical conditions but also when slightly different operating conditions apply. Typically a multi-mode multi-corner timing analysis will be done for the worst case and the best case corner. The design must function correctly in both corners for the same set of timing constraints that is specified for that power mode. Figure 2-8 on page 68 shows that an analysis (view) can be done for each corner of the power mode.

Creating a CPF File

Figure 2-8 Multi-Corner Timing Analysis for a Power Mode

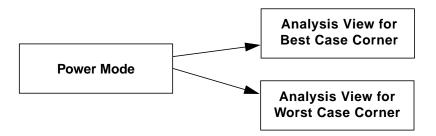

When analyzing a view of the design, you need to indicate the corners at which the power domains are operating, as shown in Figure 2-9.

Figure 2-9 Relation of Analysis View with Power Domains and Operating Corners

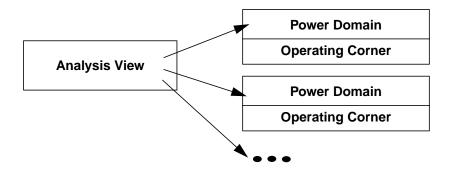


Table 2-7 indicates which library sets must be used for this design to check the conditions.

Table 2-7 Operating Corners

Operating Corner	Operating Condition			Library set
Name	process	temperature	voltage	
BC08COM_AO	1	0	0.968	ao_bc_0v792
BC08COM_TDSP	1	0	0.968	tdsp_bc_0v792
BCCOM_AO	1	0	1.21	ao_bc_0v99
WC08COM_AO	1	125	0.792	ao_wc_0v792
WC08COM_TDSP	1	125	0.792	tdsp_wc_0v792
WCCOM_AO	1	125	0.99	ao_wc_0v99

As is obvious that all this information is related to the power intent of the design, it makes sense to describe this information in the CPF file.

Creating a CPF File

Complete CPF File for DVFS Example

```
set cpf version 1.1
Technology part of the CPF
set libdir ../LIBS
set lib_0v99_wc " $libdir/timing/tcbn45lpbwp_c060907wc.lib "
set lib ao wc " $libdir/timing/tcbn45lpbwp wc0d720d9.lib \
               $libdir/timing/pllclk_slow.lib \
               $libdir/timing/ram_256x16A_slow.lib \
               $libdir/timing/rom_512x16A_slow.lib "
set lib 0v99 bc " $libdir/N45/timing/tcbn45lpbwp c060907bc.lib "
set lib_ao_bc " $libdir/timing/tcbn45lpbwp_bc0d881d1.lib \
               $libdir/timing/pllclk_slow.lib \
               $libdir/timing/ram_256x16A_slow.lib \
               $libdir/timing/rom 512x16A slow.lib "
set lib_0v792_wc " $libdir/timing/tcbn45lpbwp_c060907wc0d72.lib "
set lib_tdsp_wc " $libdir/timing/tcbn45lpbwp_wc0d90d72.lib \
                 $libdir/timing/tcbn45lpbwphvt wc0d72.lib \
                 $libdir/timing/tcbn45lpbwp_wc0d72_ptlv1.lib "
set lib_0v792_bc " $libdir/timing/tcbn451pbwp_c060907bc0d88.lib "
set lib_tdsp_bc " $libdir/timing/tcbn45lpbwp_bc1d10d88.lib
                 $libdir/timing/tcbn45lpbwphvt_bc0d88.lib \
                 $libdir/timing/tcbn45lpbwp bc0d88 ptlvl.lib "
# define the library sets
define_library_set -name ao_wc_0v99 -libraries "$lib_0v99_wc $lib_ao_wc"
define library set -name ao bc 0v99 -libraries "$lib 0v99 bc $lib ao bc"
define library set -name ao wc 0v792 -libraries "$lib 0v792 wc $lib ao wc"
define_library_set -name ao_bc_0v792 -libraries "$lib_0v792_bc $lib_ao_bc"
define library set -name tdsp wc 0v792 -libraries "$lib 0v792 wc $lib tdsp wc"
define library set -name tdsp bc 0v792 -libraries "$lib 0v792 bc $lib tdsp bc"
# define the level shifters
define_level_shifter_cell -cells LVL*HLD*
   -input_voltage_range 0.792:0.99:0.099 \
   -output_voltage_range 0.792:0.99:0.099 \
   -direction down \
   -output_power_pin VDD \
   -ground VSS \
   -valid_location to
define_level_shifter_cell -cells PTLVL*HLD* \
   -input_voltage_range 0.792:0.99:0.099 \
   -output_voltage_range 0.792:0.99:0.099 \
   -direction down \
   -output_power_pin TVDD \
   -ground VSS \
   -valid location to
```

```
define_level_shifter_cell -cells LVLLHD* \
    -input_voltage_range 0.792:0.99:0.099 \
    -output_voltage_range 0.792:0.99:0.099 \
    -input_power_pin VDDL \
    -output_power_pin VDD \
    -direction up
    -ground VSS \
    -valid_location to
# define the enable level-shifter cell
define_level_shifter_cell -cells LVLLHCD* \
    -input_voltage_range 0.792:0.99:0.099 \
    -output_voltage_range 0.792:0.99:0.099 \
    -enable NSLEEP \
    -input_power_pin VDDL \
    -output_power_pin VDD \
    -direction up
    -ground VSS \
    -valid_location to
# define the isolation cells
define isolation cell -cells iso* \
    -power VDD \
    -ground VSS \
    -enable NSLEEP \
    -valid location to
# define the always on cell
define_always_on_cell -cells {PTBUFFD2BWP} \
    -power_switchable VDD -power TVDD -ground VSS
# define the state retention cell
define_state_retention_cell -cells { RSDFCSRHD2BWP } \
    -clock_pin CP \
    -power TVDD \
   -power_switchable VDD \
    -ground VSS \
    -save_function "SAVE" \
    -restore_function "!NRESTORE"
# define the power switch cells
define_power_switch_cell -cells {HDRDID1BWPHVT HDRDIAOND1BWPHVT} \
    -power_switchable VDD -power TVDD \
    -stage_1_enable !NSLEEPIN1 \
   -stage_1_output NSLEEPOUT1 \
   -stage_2_enable !NSLEEPIN2 \
   -stage_2_output NSLEEPOUT2 \
   -type header
Design part of the CPF
set_design dtmf_recvr_core
set_time_unit ms
set_hierarchy_separator "/"
set constraintDir ../mmmc
```

```
# create nominal conditions
create nominal condition -name high ao -voltage 0.99
create_nominal_condition -name low_ao -voltage 0.792
create_nominal_condition -name low_tdsp -voltage 0.792
create nominal condition -name off -voltage 0
# create power domains
create_power_domain -name AO -default \
   -active state conditions {low ao@"!VC" high ao@"VC"}
create power domain -name TDSPCore -instances TDSP CORE INST \
   -shutoff_condition {PM_INST/ps_enable} -base_domains AO
create_power_domain -name PLL -instances PLLCLK_INST \
   -boundary_ports {refclk vcom vcop ibias pllrst}
# create power modes
create_power_mode -name full \
   -domain_conditions {AO@high_ao PLL@high_ao TDSPCore@low_tdsp} -default
create power mode -name slow \
   -domain_conditions {AO@high_ao PLL@high_ao TDSPCore@off}
create_power_mode -name sleep \
   -domain_conditions {AO@low_ao PLL@high_ao TDSPCore@off}
# create rules for level shifter insertion
create_level_shifter_rule -name LSRULE_H2L -from AO -to TDSPCore \
   -exclude {PM_INST/ps_enable PM_INST/pg_enable PM_INST/pg_restore}
create_level_shifter_rule -name LSRULE_H2L_AO -from AO -to TDSPCore \
   -pins {PM_INST/ps_enable PM_INST/pg_enable PM_INST/pg_restore}
create_level_shifter_rule -name LSRULE_H2L_PLL -from PLL -to AO
# create rule for isolation logic insertion
create_isolation_rule -name ISORULE -from TDSPCore
   -isolation_condition "!PM_INST/iso_enable" -isolation_output high
# create rule for state retention insertion
create state retention rule -name SRPG TDSP \
   -domain TDSPCore \
   -restore_edge {!PM_INST/pg_restore} \
   -save_edge {PM_INST/pg_enable}
# Optional Information for RTL Simulation
update_power_domain -name AO -transition_latency {low_ao high_ao@0.8:1.2}
update_power_domain -name AO -transition_latency {high_ao low_ao@0.2:0.3}
update_power_domain -name TDSPCore -transition_latency {off low_tdsp@2.0:2.5}
# Additional Information for Logic Synthesis
# associate library sets with nominal conditions
update_nominal_condition -name high_ao -library_set ao_wc_0v99
update_nominal_condition -name low_ao -library_set ao_wc_0v792
update nominal condition -name low tdsp -library set tdsp wc 0v792
```

```
# specify timing constraints
update_power_mode -name full \
    -sdc_files ${constraintDir}/dtmf_recvr_core_gate.sdc
update_power_mode -name slow \
   -sdc_files ${constraintDir}/dtmf_recvr_core_gate.sdc
update_power_mode -name sleep \
    -sdc_files ${constraintDir}/dtmf_recvr_core_dull.sdc
# update the rules
update level shifter rules -names LSRULE H2L -cells LVLHLD2BWP -location to
update_level_shifter_rules -names LSRULE_H2L_AO -cells PTLVLHLD2BWP -location to
update_level_shifter_rules -names LSRULE_H2L_PLL -cells LVLHLD2BWP -location to
update isolation rules -names ISORULE -location to -cells LVLLHCD2BWP
update state retention rules -names SRPG TDSP \
    -cell RSDFCSRHD2BWP -library_set tdsp_wc_0v792
# Additional Information for Physical Implementation
# declare power and ground nets
create_power_nets -nets VDD -voltage {0.792:0.99:0.198}
create power nets -nets VDD TDSP R -voltage 0.792
create power nets -nets Avdd -voltage 0.99
create_power_nets -nets VDD_TDSPCore -internal -voltage 0.792
create ground nets -nets VSS
create ground nets -nets Avss
# create global connections
create global connection -domain AO -net VDD TDSPCore -pins VDDL
create global connection -domain AO -net VDD -pins VDD
create_global_connection -domain AO -net VSS -pins VSS
create global connection -domain PLL -net Avdd -pins avdd!
create_global_connection -domain PLL -net Avss -pins agnd!
create_global_connection -domain PLL -net VDD -pins VDDL
create global connection -domain PLL -net Avdd -pins VDD
create_global_connection -domain PLL -net Avss -pins VSS
create_global_connection -domain TDSPCore -net VSS -pins VSS
create global connection -domain TDSPCore -net VDD TDSP R -pins TVDD
create global connection -domain TDSPCore -net VDD TDSPCore -pins VDD
# rule for power switch insertion
create_power_switch_rule -name TDSPCore_SW -domain TDSPCore \
   -external power net VDD
update power switch rule -name TDSPCore SW -cells HDRDID1BWPHVT \
   -prefix CDN_SW_ -acknowledge_receiver_1 switch_en_out
# add implementation info for power domains
update_power_domain -name AO -primary_power_net VDD -primary_ground_net VSS
```

Creating a CPF File

```
update_power_domain -name TDSPCore -primary_power_net VDD_TDSPCore \
-primary ground net VSS
update_power_domain -name PLL -primary_power_net Avdd -primary_ground_net Avss
# create operating corners
create_operating_corner -name BCCOM_AO \
    -process 1 -temperature 0 -voltage 1.21 -library_set ao_bc_0v99
create_operating_corner -name WCCOM_AO \
    -process 1 -temperature 125 -voltage 0.99 -library_set ao_wc_0v99
create operating corner -name BC08COM AO \
    -process 1 -temperature 0 -voltage 0.968 -library_set ao_bc_0v792
create_operating_corner -name BC08COM_TDSP \
    -process 1 -temperature 0 -voltage 0.968 -library_set tdsp_bc_0v792
create operating corner -name WC08COM AO \
    -process 1 -temperature 125 -voltage 0.792 -library set ao wc 0v792
create_operating_corner -name WC08COM_TDSP \
    -process 1 -temperature 125 -voltage 0.792 -library_set tdsp_wc_0v792
# create analysis views
create_analysis_view -name AV_full_MIN_RC1 -mode full \
    -domain_corners {AO@BCCOM_AO PLL@BCCOM_AO TDSPCore@BC08COM_TDSP}
create_analysis_view -name AV_full_MIN_RC2 -mode full \
    -domain corners {AO@BCCOM AO PLL@BCCOM AO TDSPCore@BC08COM TDSP}
create_analysis_view -name AV_full_MAX_RC1 -mode full \
    -domain corners {AO@WCCOM AO PLL@WCCOM AO TDSPCore@WC08COM TDSP}
create_analysis_view -name AV_full_MAX_RC2 -mode full \
    -domain_corners {AO@WCCOM_AO PLL@WCCOM_AO TDSPCore@WC08COM_TDSP}
create_analysis_view -name AV_slow_MIN_RC1 -mode slow \
    -domain corners {AO@BCCOM AO PLL@BCCOM AO TDSPCore@BC08COM TDSP}
create analysis view -name AV slow MAX RC1 -mode slow \
    -domain corners {AO@WCCOM AO PLL@WCCOM AO TDSPCore@WC08COM TDSP}
create_analysis_view -name AV_sleep_MIN_RC1 -mode sleep \
    -domain corners {AO@BC08COM AO PLL@BCCOM AO TDSPCore@BC08COM TDSP}
create_analysis_view -name AV_sleep_MAX_RC1 -mode sleep \
    -domain_corners {AO@WC08COM_AO PLL@WCCOM_AO TDSPCore@WC08COM_TDSP}
end design
```

Creating a CPF File

Steps to Create the CPF File for DVFS Design

This section describes the information to include in a CPF file for a design using the DVFS methodology. The example shown in <u>Figure 2-7</u> on page 63 is used throughout this section.

For a design using the DVFS methodology, the technology-related information lists the libraries that you want to use for the design and identifies the library cells that can be used as level shifters, isolation cells, always-on cells, power switch cells and state retention cells.

- Specifying the Libraries on page 76
- Specifying the Level Shifter Cells to Use on page 77
- Specifying the Isolation Cells to Use on page 78
- Specifying the Always-On Cells on page 79
- Specifying the State Retention Cells to be Used on page 80
- Specifying the Power Switch Cells to be Used on page 81

The design-related information captures the power intent and constraints.

The following information is needed for both design creation and logic verification:

- <u>Declaring the Design Described in the CPF File</u> on page 82
- Specifying the Units Used on page 82
- Specifying the Naming Styles Used on page 83
- Specifying the Operating Voltages Used in the Design on page 84
- Specifying the Power Domains on page 85
- Specifying the Static Behavior in each Power Mode on page 86
- Specifying the Rules to Create Level-Shifter Logic on page 87
- Specifying the Rules to Create Isolation Logic on page 88
- Specifying the Rules to Create State Retention Logic on page 89
- Specifying the Time to Transition between Power States on page 90
- Specifying the Power Constraints on page 91
- Specifying the Timing Constraints on page 91
- Specifying the Activity Information on page 91

Creating a CPF File

■ Updating the Rules with Implementation Information on page 92

The following information is needed for physical implementation:

- Specifying the Global Power and Ground Nets on page 93
- Specifying the Global Connections on page 94
- Specifying the Rules for the Power Switch Logic on page 95
- Specifying Additional Information for Power and Ground Routing on page 96
- Specifying the Operating Corners on page 97
- Specifying the Analysis Views on page 98

Creating a CPF File

Specifying the Libraries

➤ To group libraries that are characterized for a specific set of operating conditions, use the define library set command:

```
define_library_set -name library_set
    -libraries library_list
```

For the design in <u>Figure 2-7</u> on page 63, six library sets are defined: one library set for the best and worst case operating conditions of each power domain.

The following command defines the library set to be used for the main portion of the design (AO power domain). The libraries were characterized for the worst condition. The command uses two variables defined in the CPF file to pass two library lists.

```
define_library_set -name ao_wc_0v99 -libraries "$lib_0v99_wc $lib_ao_wc"
```

Creating a CPF File

Specifying the Level Shifter Cells to Use

➤ To identify which cells in the libraries must be used as level shifters, use the define level shifter cell command.

For more information on how to model different types of level shifters, refer to <u>Modeling Level Shifters</u> on page 146.

For applications that do not read .lib files, you must specify the library cells to allow the application to identify the instances of these cells in the netlist.

When you define the input_voltage_range for a pure MSV design, the value for the -input_voltage_range and -output_voltage_range options is a single voltage value. For DVFS designs, the level shifters must be able to support a range and thus in this case you must specify a range as value for these options:

```
lower_bound:upper_bound:step
```

For the design in Figure 2-7 on page 63, four groups of level shifters are specified.

The following command selects a group of level shifters whose input and output voltages can range between 0.792V and 0.99V in increments of 0.099V. The cells can only be used from a higher to a lower voltage and must be placed in the destination power domain.

```
define_level_shifter_cell -cells PTLVL*HLD* \
    -input_voltage_range 0.792:0.99:0.099 \
    -output_voltage_range 0.792:0.99:0.099 \
    -direction down
    -output_power_pin TVDD -ground VSS \
    -valid location to
```

Creating a CPF File

Specifying the Isolation Cells to Use

➤ To identify which cells in the libraries must be used as isolation cells, use the <u>define isolation cell</u> command.

For more information on how to model different types of isolation cells, refer to <u>Modeling</u> <u>Isolation Cells</u> on page 161.

For applications that do not read .lib files, you must specify these library cells to allow these applications to identify instances of isolation cells in the netlist.

For the design in <u>Figure 2-7</u> on page 63 isolation cells are needed at the boundaries of the the TDSP_CORE_INST block. For this design, one command is specified.

The following command selects cells whose enable pin is called NSLEEP, and whose valid location is the destination power domain. The command also specifies that the names of the power and ground pins of the corresponding LEF cells is called VDD and VSS, respectively.

```
define_isolation_cell -cells iso* \
    -power VDD \
    -ground VSS \
    -enable NSLEEP \
    -valid location to
```

Creating a CPF File

Specifying the Always-On Cells

Always-on cells are special cells whose power supply has to be continuous on even when the power supply for the rest of the logic in the power domain is off.

Always-on cells are used for example

- To drive the control signals of the state retention cells in a domain that is being powered down
- In combination with isolation cells that are inserted in the power domain that is switched off to ensure that the driver of the enable pin of the isolation cells is never switched off.
- ➤ To identify which cells in the libraries must be used as always-on cells, use the define always on cell command.

Note: Outputs of cells that are always on, are always-on drivers.

For applications that do not read .lib files, you must specify the library cells to allow the application to identify the instances of these cells in the netlist.

For the design in Figure 2-7 on page 63, always-on cells are needed to drive the control signals of the state retention cells in the TDSP_CORE_INST block. For the design, one command is specified.

The following command specifies to use the PTBUFFD2BWP cell. It also specifies that in the corresponding LEF cell, the name of the pin connected to the power that is switched off is VDD, the name of the pin connected to the power that remains on while the power domain is shut off is TVDD, and the name of the pin connected to the ground is VSS.

```
define_always_on_cell -cells {PTBUFFD2BWP} \
    -power switchable VDD -power TVDD -ground VSS
```

Creating a CPF File

Specifying the State Retention Cells to be Used

➤ To identify which cells in the libraries must be used as state retention cells, use the define state retention cell command.

For more information on how to model different types of state retention cells, refer to <u>Modeling State Retention Cells</u> on page 177.

For applications that do not read .lib files, you must specify the library cells to allow the application to identify the instances of these cells in the netlist.

For the design in <u>Figure 2-7</u> on page 63, state retention cells are needed for the TDSP_CORE_INST block. For the design one command was specified.

The following command selects the RSDFCSRHD2BWP cell and specifies that clock pin is CP, that the state of the cell is saved when pin SAVE is active high and that the state of the cell will be restored when pin NRESTORE is active low. It also specifies that in the corresponding LEF cell, the name of the pin connected to the power that is switched off is VDD, the name of the pin connected to the power domain is shut off is TVDD, and the name of the pin connected to the ground is VSS.

```
define_state_retention_cell -cells { RSDFCSRHD2BWP } \
    -clock_pin CP \
    -power TVDD \
    -power_switchable VDD \
    -ground VSS \
    -save_function "SAVE" \
    -restore_function "!NRESTORE"
```

Creating a CPF File

Specifying the Power Switch Cells to be Used

➤ To identify which cells in the libraries must be used as power switch cells, use the define power switch cell command.

For more information on how to model different types of power switch cells, refer to <u>Modeling Power Switch Cells</u> on page 184.

For applications that do not read .lib files, you must specify these library cells to allow these application to identify the instances of these cells in the netlist.

For the design in <u>Figure 2-7</u> on page 63 power switch cells are needed for the TDSP_CORE_INST block. For the design one command was specified.

The following command specifies to use the HDRDID1BWPHVT and HDRDIAOND1BWPHVT cells. It also specifies that the corresponding LEF cell must be a header cell and that the name of the pin connected to the power that is switched off is VDD and the name of the pin connected to the power that remains on while the power domain is shut off is TVDD. It further specifies that the power switch is turned on when a low value is applied to both the NSLEEPIN1 and NSLEEPIN2 pins and that both output pins are the buffered outputs of the corresponding input pins.

```
define_power_switch_cell -cells {HDRDID1BWPHVT HDRDIAOND1BWPHVT} \
    -power_switchable VDD -power TVDD \
    -stage_1_enable !NSLEEPIN1 \
    -stage_1_output NSLEEPOUT1 \
    -stage_2_enable !NSLEEPIN2 \
    -stage_2_output NSLEEPOUT2 \
    -type header
```

Creating a CPF File

Declaring the Design Described in the CPF File

➤ To identify the design for which the CPF file is created, use the following command:

```
set design module
```

where module refers to the name of the top module of the design to which the power information in the CPF file applies.

For the design in Figure 2-7 on page 63:

```
set_design dtmf_recvr_core
```

To indicate when the power information for this module ends, use the following command:

```
end design
```

Specifying the Units Used

You can specify the units that will be used for the power and time values in CPF commands.

➤ To specify the power unit used, use the following command

```
set power unit [pW|nW|uW|mW|W]
```

Default: mW

To specify the time unit used, use the following command

```
set time unit [ns|us|ms]
```

Default: ns

Note: These commands are optional if you use the default values.

For the design in <u>Figure 2-7</u> on page 63 the default value was assumed for the power unit., but the time unit was specified:

```
set_time_unit ms
```

Creating a CPF File

Specifying the Naming Styles Used

➤ To specify the hierarchy separator used in the CPF file, use the following command set hierarchy separator [character]

The default separator is the period (.).

The format of a name in RTL and in the netlist can be different. When you want to use the RTL names in the CPF file, but you are reading a gate-level netlist, you need to specify how the base name and bit information are represented in the netlist.

➤ To specify the format used to name flip-flops and latches in the netlist starting from the register names in the RTL description, use the following command

```
set register naming style [string%s]
Default: _reg%s
```

➤ To specify the format used to name the design objects in the netlist starting from multi-bit arrays in the RTL description, use the following command

```
set array naming style [string]
Default: \[%d\]
```

For more information on these two commands, refer to <u>Individual Registers Names</u> in the Common Power Format Language Reference.

Note: These three commands are optional if you use the default values.

For the design in Figure 2-7 on page 63 the hierarchy separator was specified:

```
set_hierarchy_separator "/"
```

Creating a CPF File

Specifying the Operating Voltages Used in the Design

In CPF, operating voltages are associated with *nominal conditions*.

➤ To specify the operating voltages used in the design, use the create nominal condition command:

```
create_nominal_condition -name string
    -voltage {voltage | voltage_list} [-state {on | off | standby}]
    [-ground_voltage {voltage | voltage_list}]
```

Note: The -pmos_bias_voltage and -nmos_bias_voltage options of create_nominal_condition are irrelevant for a design not using substrate biasing.

For the design in Figure 2-7 on page 63 four nominal conditions are defined.

The following command defines the nominal condition for the highest voltage used in the design.

```
create_nominal_condition -name high_ao -voltage 0.99
```

Creating a CPF File

Specifying the Power Domains

➤ To identify portions of the design that use the same *main* power supply and whose voltage and frequency can *simultaneously* change or be switched off, associate these portions with a power domain using the <u>create power domain</u> command:

```
create_power_domain -name power_domain
   [-instances instance_list] [-boundary_ports pin_list] [-default]
   [-shutoff_condition expression [-external_controlled_shutoff]]
   [-default_isolation_condition expression ]
   [-default_restore_edge expr | -default_save_edge expr
   |-default_restore_edge expr -default_save_edge expr
   |-default_restore_level expr -default_save_level expr ]
   [-power_up_states {high|low|random}]
   [-active_state_conditions active_state_condition_list]
   [-base_domains domain_list]
```

The -shutoff_condition determines when the power domain is switched off. If this option is not specified, the power domain is an <u>unswitched</u> domain.

Note: CPF requires that the top module belongs to the default power domain.

For the design in <u>Figure 2-7</u> on page 63 three power domains are created.

The following command defines the AO power domain as the default power domain of the scope, and specifies that the power domain operates at different voltages with different control conditions.

```
create_power_domain -name AO -default \
    -active_state_conditions {low_ao@"!VC" high_ao@"VC"}
```

The following command defines the PLL power domain. It associates the hierarchical instance, PLLCLK_INST, and the I/O ports refclk, vcom, vcop, ibias, and pllrst with this domain. These ports are ports that feed signals that are only needed by the PLLCLK_INST instance.

```
create_power_domain -name PLL -instances PLLCLK_INST \
    -boundary_ports {refclk vcom vcop ibias pllrst}
```

Creating a CPF File

Specifying the Static Behavior in each Power Mode

➤ To define the static behavior of the design in a power mode, you need to specify the nominal condition of each power domain in that mode using the create power mode command:

```
create_power_mode -name string
  -domain_conditions domain_condition_list
[-default]
```

Note: The -group_modes option of the create_power_mode command is only relevant for a hierarchical flow. For more information, refer to Chapter 4, "Hierarchical Flow."

Use the following format to specify a *domain condition* (association of a power domain with its nominal condition in the power mode being defined):

```
domain_name@nominal_condition_name
```

For the design in Figure 2-7 on page 63 three power modes are defined.

The following command defines power mode, full, which corresponds to the power mode in which the full functionality can be accessed. This command specifies that both power domains AO and PLL are operating at nominal condition high_ao, while power domain TDSPCore is operating at nominal condition low_tdsp.

```
create_power_mode -name full \
    -domain_conditions {AO@high_ao PLL@high_ao TDSPCore@low_tdsp} -default
```

Note: When a domain is not specified in the list of domain conditions, it is considered to be switched off in the specified mode. For example, power domain TDSPCore could be omitted from the list of conditions for power modes slow and sleep, because referring to <u>Table 2-5</u> on page 65, power domain TDSPCore is switched off in both modes. It is recommended not to rely on the default behavior and to specify all power domains when defining a power mode.

For example the following two commands are equal:

```
create_power_mode -name slow \
    -domain_conditions {AO@high_ao PLL@high_ao TDSPCore@off}
create_power_mode -name slow \
    -domain_conditions {AO@high_ao PLL@high_ao}
```

Creating a CPF File

Specifying the Rules to Create Level-Shifter Logic

Depending on your technology, you may need level shifters when passing any signals

- From a power domain with a lower voltage to a power domain with a higher voltage
- From a power domain with a higher voltage to a power domain with a lower voltage
- In both cases
- ➤ To create the rule to be used between power domains or a set of pins, use the create level shifter rule command:

```
create_level_shifter_rule -name string
   {-pins pin_list | -from power_domain_list | -to power_domain_list}...
   [-exclude pin_list]
```

For the design in Figure 2-7 on page 63, three sets of level shifter rules were created.

The following command creates a rule between power domains AO and TDSPCore and specifies to exclude the ps_enable, pg_enable, and pg_restore pins on the pm_instance block from level-shifter insertion.

```
create_level_shifter_rule -name LSRULE_H2L -from AO -to TDSPCore \
    -exclude {PM_INST/ps_enable PM_INST/pg_enable PM_INST/pg_restore}
```

Creating a CPF File

Specifying the Rules to Create Isolation Logic

➤ To define when isolation cells must be added or to specify which pins must be isolated, use the create isolation rule command:

Typically, isolation logic is needed to isolate signals going from a power domain being switched down to a power domain that remains on. However, if an input of a powered down domain requires a stable signal for electrical reasons, isolation is required even if the signal goes from a powered on domain to a powered down domain. Also, when a power domain is in the standby state, and all inputs to this power domain must be stable, isolation of the inputs will be required.

Referring to <u>Table 2-5</u> on page 65, isolation logic is needed in power modes slow and sleep for any nets going from power domain TDSPCore to AO and PLL.

For the design in Figure 2-7 on page 63, one isolation rule was created.

The following command specifies to isolate all pins driving nets going from power domain TDSPCore to any other power domain. The pins must be isolated when the iso_enable signal becomes active low. The command further specifies that the output of the isolation gates must be high when the isolation condition is true.

```
create_isolation_rule -name ISORULE -from TDSPCore \
    -isolation_condition "!PM_INST/iso_enable" -isolation_output high
```

Creating a CPF File

Specifying the Rules to Create State Retention Logic

➤ To define the rule for replacing selected registers or all registers in the specified power domain with state retention registers, use the create state retention rule command.

```
create_state_retention_rule
    -name string
{    -domain power_domain | -instances instance_list }
    [ -exclude instance_list ]
    [ -restore_edge expr | -save_edge expr
    | -restore_edge expr -save_edge expr
    | -restore_level expr -save_level expr]
    [ -restore_precondition expr] [-save_precondition expr]
    [-target_type {flop|latch|both}]
    [-secondary_domain domain]
```

For the design in <u>Figure 2-7</u> on page 63, one rule was created. Because this design has only one power domain that is powered down, state retention rules are only needed for this power domain.

The following command creates a state retention rule for power domain TDSPCore and specifies that the states of the state retention cells in this domain will be saved when pg_enable signal becomes active high. The states of the state retention cells will be restored when the pg_restore signal becomes active low. The secondary power domain is not specified for the state retention logic. In this case, the tools will use the secondary (or base) power domain of its primary domain. That logic is the PM_INST instance which belongs to power domain AO.

```
create_state_retention_rule -name SRPG_TDSP \
   -domain TDSPCore \
   -restore_edge {!PM_INST/pg_restore} \
   -save_edge {PM_INST/pg_enable}
```

Creating a CPF File

Specifying the Time to Transition between Power States

➤ To specify the transition states between power states for a power domain, use the update power domain command with one of the following options:

```
update_power_domain
    -name domain
{    -transition_slope [float:]float |
    | -transition_latency {from_nom latency_list}
    | -transition_cycles {from_nom cycle_list clock_pin} }
```

The design in Figure 2-7 on page 63 can have four possible transitions.

For power domain AO, the two possible transitions are from nominal condition low_ao to high_ao and vice versa.

For power domain TDSPCore, the two possible transitions are from nominal condition off to low_tdsp and vice versa. Typically, the transition time from the on state to the off state is not important and therefore it is not defined here.

The following command defines the minimum amd maximum transition time from nominal condition off to low_tdsp for power domain TDSPCore.

```
update_power_domain -name TDSPCore -transition_latency {off low_tdsp@2.0:2.5}
```

Specifying the Libraries to Use for a Condition

You already grouped libraries that are characterized for a specific set of operating conditions in a library set.

➤ To specify which library set to use for a specific nominal condition, use the update nominal condition command:

```
update_nominal_condition -name condition
   -library_set library_set
```

For the design in <u>Figure 2-7</u> on page 63, library sets are specified for each nominal condition, except for nominal condition, off. The following command links library set ao_wc_0v99 to nominal condition $high_{ao}$.

```
update nominal condition -name high ao -library set ao wc 0v99
```

Creating a CPF File

Specifying the Power Constraints

Note: This information is optional in the CPF file.

➤ To specify the targets for leakage and dynamic power in the current design, use the set power target command:

For the design in Figure 2-7 on page 63, no power constraints were specified.

Specifying the Timing Constraints

Note: This information is optional in the CPF file.

➤ To specify the timing constraints for the current design, use the -sdc_files option of the update power mode command:

```
update_power_mode -name mode
    {-sdc_files | -setup_sdc_files | -hold_sdc_files} sdc_file_list
```

For the design in <u>Figure 2-7</u> on page 63, separate timing constraints were defined for each of the modes.

The following command specifies the constraints to be used to optimize or analyze the design for the full power mode (when full functionality must be available). The directory of the SDC file is specified through a variable which was defined in the CPF file.

```
update_power_mode -name full \
    -sdc_files ${constraintDir}/dtmf_recvr_core_gate.sdc
```

Specifying the Activity Information

Note: This information is optional in the CPF file.

To specify the activity information that can be used for power analysis, use

```
update_power_mode -name mode
    -activity_file file -activity_file_weight weight
```

Supported formats for the activity files are VCD, TCF, and SAIF.

If the design has several modes, you can specify the relative weight of the activities per mode. For the design in <u>Figure 2-7</u> on page 63, no activity information was specified.

Creating a CPF File

Updating the Rules with Implementation Information

1. To specify the location or the type of level shifters to be used, use the update level shifter rules command:

```
update_level_shifter_rules -names rule_list
   { -location {from | to | parent | any}
   | -within_hierarchy instance
   | -cells cell_list
   | -prefix string }...
```

For the design in Figure 2-7 on page 63, three of the four level shifter rules were updated.

The following command specifies that for rule LSRULE_H2L only level shifter cell LVLHLD2BWP can be used and all level shifters must be placed in the destination power domain.

```
update level shifter rules -names LSRULE H2L -cells LVLHLD2BWP -location to
```

2. To specify the location or the type of isolation cells to be used, use the <u>update isolation rules</u> command:

For the design in <u>Figure 2-7</u> on page 63, only one isolation rule was created and this rule was updated.

The following command specifies that for rule ISORULE only cell LVLLHCD2BWP can be used and all isolation cells must be placed in the destination power domain.

```
update isolation rules -names ISORULE -cells LVLLHCD2BWP -location to
```

3. To append the specified rules for state retention logic with implementation information, use the update_state_retention_rules command:

```
update_state_retention_rules
    -names rule_list
    { -cell_type string
    | -cells cell_list| -set_reset_control} ...
```

For the design in <u>Figure 2-7</u> on page 63, only one state retention rule was created and this rule was updated.

The following command specifies that for rule SRPG_TDSP, only the following state retention cell RSDFCSRHD2BWP from library set tdsp_wc_0v792 can be used.

```
update_state_retention_rules -names SRPG_TDSP \
    -cell RSDFCSRHD2BWP -library_set tdsp_wc_0v792
```

Creating a CPF File

Specifying the Global Power and Ground Nets

➤ To declare (or create) the nets connected to the ground and power supplies, use the create ground nets and create power nets commands:

```
create_ground_nets -nets net_list
    [-voltage string]
    [-external_shutoff_condition expression | -internal]
    [-user_attributes string_list]
    [-peak_ir_drop_limit float]
    [-average_ir_drop_limit float]

create_power_nets -nets net_list
    [-voltage string]
    [-external_shutoff_condition expression | -internal]
    [-user_attributes string_list]
    [-peak_ir_drop_limit float]
    [-average ir drop limit float]
```

Note: Power and ground nets referenced in an update_power_domain command can be either always on or can be switchable power nets depending on the power domain specification. Other power and ground nets are considered to be always on unless you specify the -external_shutoff_condition option.

For the design in <u>Figure 2-7</u> on page 63, four power nets and two ground nets are declared. One power net is connected to the variable power supply. One power net is needed for the <u>PLL</u> power domain. Two power nets are needed for the <u>TDSPCore</u> power domain: one power net can be switched off, another power net is needed to retain the states of the state retention cells.

The following command declares power net VDD. This net is connected to a power supply that can vary from 0.792 V to 0.99V in increments of 0.198V. This power net belongs to power domain AO because that is the power domain whose voltage can be dynamically scaled.

```
create_power_nets -nets VDD -voltage {0.792:0.99:0.198}
```

Creating a CPF File

Specifying the Global Connections

➤ To specify how to connect global nets, such as power and ground nets to the cell pins, use the create global connection command:

```
create_global_connection
    -net net
    -pins pin_list
    [-domain domain | -instances instance_list]
```

If you omit the -domain or -instances option, the global connection applies to the specified pins of the entire design.

If you combine -pins and -domain options, only those pins in the specified list that also belong to the specified power domain are connected.

If you combine -pins and -instances options, only those pins in the specified list that also belong to the specified instances are connected.

For the design in Figure 2-7 on page 63, eleven global connections were specified.

The following command specifies that net VDD must be connected to all cell pins named VDD in power domain AO.

```
create_global_connection -domain AO -net VDD -pins VDD
```

Creating a CPF File

Specifying the Rules for the Power Switch Logic

1. To specify how a single power switch must connect the external and internal power or ground nets for the specified power domain, use the create power switch rule command.

```
create_power_switch_rule
   -name string
   -domain power_domain
{-external_power_net net | -external_ground_net net}
```

You can specify one or more commands for a power domain depending on whether you want to control the switchable power domain by a single switch or multiple switches.

2. To append the specified rules for power switch logic with implementation information, use the update power switch rule command:

```
update_power_switch_rule
    -name string
{    -enable_condition_1 expression [-enable_condition_2 expression]
    | -acknowledge_receiver_1 express [-acknowledge_receiver_2 express]
    | -cells cell_list
    | -gate_bias_net power_net
    | -prefix string
    | -peak_ir_drop_limit float
    | -average_ir_drop_limit float } ...
```

For the design in <u>Figure 2-7</u> on page 63, one rule was created. Because this design has only one power domain that is powered down, power switch rules are only needed for this power domain.

The first command creates a power switch rule for power domain TDSPCore and specifies that the source pin of the power switch must be connected to net VDD TDSP R.

The second command specifies that for rule <code>TDSPCore_SW</code>, only cell <code>HDRDID1BWPHVT</code> can be used. The command also specifies to use the <code>CDN_SW_</code> prefix for the created logic and to connect the <code>switch</code> en out pin to the output pin of the power switch cell.

```
create_power_switch_rule -name TDSPCore_SW -domain TDSPCore \
    -external_power_net VDD_TDSP_R

update_power_switch_rule -name TDSPCore_SW -cells HDRDID1BWPHVT \
    -prefix CDN_SW_ -acknowledge_receiver_1 switch_en_out
```

Creating a CPF File

Specifying Additional Information for Power and Ground Routing

To specify additional information that applies to power and ground routing, use the update power domain command with one of the following options:

For the design in Figure 2-7 on page 63, three update_power_domain commands were specified.

The following command specifies that AVDD is the main power net for all functional gates in power domain PLL, while Avss is the ground net.

```
update_power_domain -name PLL -primary_power_net Avdd -primary_ground_net Avss
```

Creating a CPF File

Specifying the Operating Corners

The design must be able to perform under different sets of operating conditions (process, voltage, and temperature values). Because the timing and power characteristics of the cells depend on the operating conditions, different library sets that contain the characterization information for the different conditions are used. An operating corner shows which library set to use for a given operating condition.



Different portions of the design can operate at the same voltage and yet use dedicated library sets. In this case, it is possible to have multiple operating corners with the same operating conditions. <u>Table 2-7</u> on page 68 illustrates this case.

➤ To define an operating corner, use the <u>create operating corner</u> command.

```
create_operating_corner
    -name string
    -voltage float [-ground_voltage float]
    [-process float]
    [-temperature float]
    -library_set library_set
```

Note: The -pmos_bias_voltage and -nmos_bias_voltage options of create operating corner are irrelevant for a design not using substrate biasing.

For the design in Figure 2-7 on page 63, six operating corners were specified.

The following command specifies to use library set ao_wc_0v99 for operating corner wccom_ao. The process value of the operating corner is 1, the temperature is 125°C and the operating voltage is 0.99V. This operating corner is defined for worst case conditions.

```
create_operating_corner -name WCCOM_AO \
    -process 1 -temperature 125 -voltage 0.99 -library_set ao_wc_0v99
```

Creating a CPF File

Specifying the Analysis Views

The design must function correctly in each power mode not only under typical conditions, but also under extreme conditions. Typically a multi-mode multi-corner timing analysis will be done for the worst case and the best case conditions.

An analysis view associates a specific operating corner with each power domain in the specified power mode. You need to make sure that all operating corners for a view correspond to either best or worst case conditions.

➤ To define an analysis view, use the <u>create analysis view</u> command.

```
create_analysis_view
   -name string
   -mode mode
   -domain_corners domain_corner_list
   [-user attributes string list]
```

Note: The <code>-group_views</code> option of <code>create_analysis_view</code> is only relevant in a hierarchical flow. For more information, refer to Chapter 4, "Hierarchical Flow."

Use the following format to specify a domain corner:

```
domain_name@corner_name
```



The CPF file can contain several analysis views with the same domain and corner information for a power mode. For a multi-mode multi-corner analysis, some implementation and timing analysis tools need unique views to associate with different parasitic corners.

For the design in Figure 2-7 on page 63, eight analysis views were specified.

The following command specifies analysis view AV_full_MIN_RC1 for power mode full. For this view the operating corners for the best case operating conditions are associated with the three power domains.

```
create_analysis_view -name AV_full_MIN_RC1 -mode full \
    -domain_corners {AO@BCCOM_AO PLL@BCCOM_AO TDSPCore@BC08COM_TDSP}
```

3

Process of Creating the CPF Content

- Overview on page 100
- <u>Using a Single CPF File</u> on page 103
- <u>Using Multiple CPF Files</u> on page 107

Process of Creating the CPF Content

Overview

The content of the CPF file can grow through the design process. The tools in the design process need different information. Therefore you can start the design with an incomplete CPF file.

- At the design stage, low power verification checks the following aspects of a design using PSO methodology:
 - Power up and power down of the design
 - State retention and restoration
 - Enabling and disabling of isolation

To perform low power verification, you need the following minimum set of commands to specify the power structures when starting from RTL:

```
set_design
end_design
create_power_domain
create_nominal_condition
create_power_mode
create_state_retention_rule
create_isolation_rule
```

At the logic implementation stage, logic synthesis adds the required level shifter logic, isolation logic, state retention logic, and power switch logic to the gate-level netlist, and test synthesis adds the required test logic.

To drive synthesis and test, you need at least the following commands in addition to the commands listed above:

```
define_library_set
define_isolation_cell
define_level_shifter_cell
define_state_retention_cell
update_nominal_condition
update power mode
```

At the physical implementation stage, ATPG, and signoff, you need at least the following commands in addition to all commands listed above:

```
create_power_nets
create_ground_nets
create_global_connection
create_power_switch_rule
update_power_switch_rule
```

Process of Creating the CPF Content

update_power_domain
create_operating_corner
create_analysis_view

Note: You can run gate-level simulation after both logic and physical implementation.

Even when the CPF file that you read in contains more CPF commands than the tool needs, the tool will just read the ones it needs and will ignore the other ones.

The content change can be handled in several ways:

- You can start with a CPF file and add to this file as you go through the design process.
 See <u>Using a Single CPF File</u>.
- You can include additional commands in a separate file and source it in the original CPF file.


See Using Multiple CPF Files.

A CPF file contains both the power intent for the design and the technology information. When you use multiple CPF files, you can capture the technology information in a separate file. Library-related definitions are captured in the define_xxx commands.

The power intent for the design captures the different power domains, the different power modes and transitions, and the specifications for the power logic. The power intent of the design is captured in the <code>create_xxx</code> commands. Implementation tools need more detailed information which is captured in the <code>update_xxx</code> commands. This information can be captured in a separate file.

The example shown in <u>Figure 3-1</u> on page 102 is used to illustrate different approaches of CPF creation.

Figure 3-1 Example Design for CPF

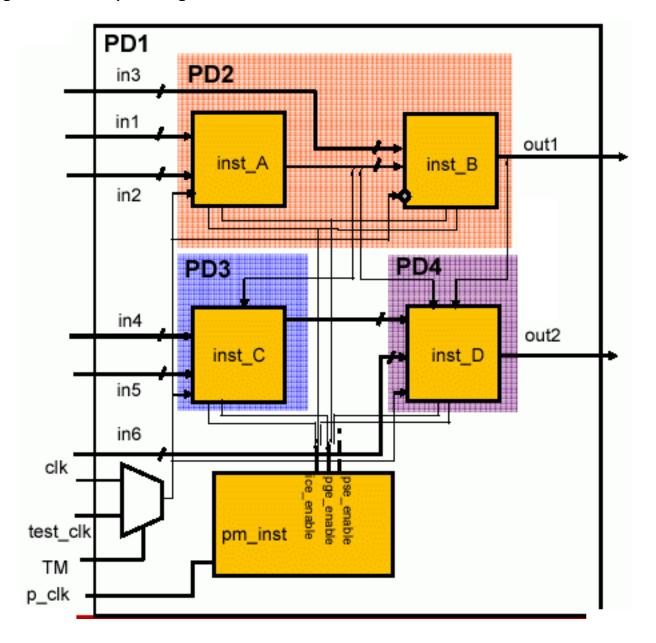

Using a Single CPF File

```
Technology part of the CPF
# define the level shifters
define_level_shifter_cell -cells LVLHLEHX* \
   -input_voltage_range 1.2 \
   -output_power_pin VDD \
   -output_voltage_range 0.8 \
   -direction down \
   -output_voltage_input_pin EN \
   -ground VSS \
   -enable EN \
   -valid_location to
define_level_shifter_cell -cells LVLHLELX* \
   -input_voltage_range 1.2 \
   -output power pin VDD \
   -output_voltage_range 0.8 \
   -direction down \
   -output_voltage_input_pin EN \
   -ground VSS \
   -enable EN \
   -valid_location to
define_level_shifter_cell -cells LVLHLX* \
   -input_voltage_range 1.2 \
   -output_power_pin VDD \
   -output voltage range 0.8 \
   -direction down \
   -ground VSS \
   -valid location to
define level shifter cell -cells LVLLHEHX* \
   -input_voltage_range 0.8 \
   -output_power_pin VDD \
   -input_power_pin VDDI \
   -output_voltage_range 1.2 \
   -direction up \
   -output_voltage_input_pin EN \
   -ground VSS \
   -valid_location to
define_level_shifter_cell -cells LVLLHX* \
   -input_voltage_range 0.8 \
   -output_voltage_range 1.2
   -input_power_pin VDDI \
   -output_power_pin VDD \
   -direction up \
   -ground VSS \
   -valid location to
# define the isolation cells
define_isolation_cell -cells ISOLN* \
   -enable EN \
   -power VDD -ground VSS \
   -valid location to
```

Process of Creating the CPF Content

```
# define the always on cell
define_always_on_cell -cells "BUFGX2M BUFGX8M INVGX2M INVGX8M" \
    -power_switchable VDD -power VDDG -ground VSS
# define the power switch cells
define power switch cell -cells "HEAD8DM HEAD16DM HEAD32DM HEAD64DM" \
   -stage_1_enable !SLEEP \
   -type header \
   -stage_1_output SLEEPOUT \
   -power VDDG \
   -power switchable VDD
define_power_switch_cell -cells "HEAD8M HEAD16M HEAD32M HEAD64M" \
    -stage_1_enable !SLEEP \
   -type header \
   -power VDDG \
   -power switchable VDD
define_power_switch_cell -cells "FOOT8DM FOOT16DM" \
   -stage_1_enable SLEEPN \
   -type footer \
   -stage 1 output SLEEPNOUT \
   -ground VSSG \
    -ground switchable VSS
define_power_switch_cell -cells "FOOT8M FOOT16M" \
   -stage 1 enable SLEEPN \
   -type footer \
   -ground VSSG \
    -ground switchable VSS
# define the state retention cell
define_state_retention_cell -cells *DRFF* -restore_function RETN \
    -power VDDG \
    -power switchable VDD \
   -ground VSS
# define the library sets
set vendor_08v_list "\
../LIBS/vendor_130/vendor13sp_tt_0p8v_25c.lib \
../LIBS/vendor_130LL/vendor1130e_ll_tt_0p8v_25c.lib \
../LIBS/vendor_130SP/vendor1130e_sp_tt_0p8v_25c.lib "
set vendor_120v_list "\
../LIBS/vendor_130/vendor13sp_tt_0p8v_1p2v_25c.lib \
../LIBS/vendor_130LL/vendorl130e_ll_tt_1p2v_25c.lib \
../LIBS/vendor_130SP/vendorl130e_sp_tt_1p2v_25c.lib
define_library_set -name vendor_120v -libraries $vendor_120v_list
define_library_set -name vendor_08v -libraries $vendor_08v_list
Design part of the CPF
set design top
set hierarchy separator "/"
# create power domains
create power domain -name PD1 -default
```

Process of Creating the CPF Content

```
create_power_domain -name PD2 -instances {inst_A inst_B} \
    -shutoff_condition {pm_inst/pse_enable[0]}
create_power_domain -name PD3 -instances inst_C \
    -shutoff_condition {pm_inst/pse_enable[1]}
create_power_domain -name PD4 -instances inst_D \
    -shutoff condition {pm inst/pse enable[2]}
create_power_domain -name LD1 -instances pm_inst/pd_inst*
# define the nominal conditions
create_nominal_condition -name point_8v -voltage 0.8
update_nominal_condition -name point_8v -library_set vendor_08v
create_nominal_condition -name one_p_2v -voltage 1.2
update_nominal_condition -name one_p_2v -library_set vendor_120v
create_nominal_condition -name off -voltage 0
# specify the power mode info
create_power_mode -name PM1 -default -domain_conditions {PD1@point_8v \
PD2@point_8v PD3@point_8v PD4@point_8v LD1@one_p_2v}
update power mode -name PM1 -sdc files ../CPF/1.0/cml.sdc
create_power_mode -name PM2 -domain_conditions {PD1@point_8v PD2@off \
PD3@point_8v PD4@point_8v LD1@one_p_2v}
create power mode -name PM3 -domain conditions {PD1@point 8v PD2@off PD3@off \
PD4@point_8v LD1@one_p_2v}
create_power_mode -name PM4 -domain_conditions {PD1@point_8v PD2@off PD3@off \
PD4@off LD1@one_p_2v}
# create rules for state retention insertion
create_state_retention_rule -name st1 -domain PD2 \
-restore_edge {!pm_inst/pge_enable[0]}
create_state_retention_rule -name st2 -domain PD3 \
-restore_edge {!pm_inst/pge_enable[1]}
create_state_retention_rule -name st3 -domain PD4 \
-restore_edge {!pm_inst/pge_enable[2]}
# create rules for isolation logic insertion
create_isolation_rule -name iso1 -from PD2
-isolation_condition {pm_inst/ice_enable[0]}
create_isolation_rule -name iso2 -from PD3 \
-isolation_condition {pm_inst/ice_enable[1]}
create isolation rule -name iso3 -from PD4 \
-isolation_condition {pm_inst/ice_enable[2]}
# create rules for level shifter insertion
create_level_shifter_rule -name ls1 -to LD1
create_level_shifter_rule -name ls2 -from LD1
# declare power and ground nets
create_power_nets -nets VDD_0.8 -voltage 0.8
create_power_nets -nets VDD2 -voltage 0.8
create power nets -nets VDD3 -voltage 0.8
create_power_nets -nets VDD4 -voltage 0.8
create power nets -nets VDDH -voltage 1.2
create_ground_nets -nets VSS
# create global connections
```

Process of Creating the CPF Content

```
create_global_connection -domain PD1 -net VDD_0.8 -pins VDD
create_global_connection -domain PD1 -net VDD_0.8 -pins VDDG create_global_connection -domain PD1 -net VSS -pins VSS create_global_connection -domain PD1 -net VSS -pins VSSG
create_global_connection -domain PD2 -net VDD2 -pins VDD
create global connection -domain PD2 -net VDD 0.8 -pins VDDG
create_global_connection -domain PD2 -net VSS -pins VSS
create_global_connection -domain PD2 -net VSS -pins VSSG
create_global_connection -domain PD3 -net VDD3 -pins VDD
create_global_connection -domain PD3 -net VDD_0.8 -pins VDDG
create_global_connection -domain PD3 -net VSS -pins VSS
create_global_connection -domain PD3 -net VSS -pins VSSG
create_global_connection -domain PD4 -net VDD4 -pins VDD
create_global_connection -domain PD4 -net VDD_0.8 -pins VDDG
create_global_connection -domain PD4 -net VSS -pins VSS
create global connection -domain PD4 -net VSS -pins VSSG
create_global_connection -domain LD1 -net VDDH -pins VDD
create_global_connection -domain LD1 -net VDD_0.8 -pins VDDI
create_global_connection -domain LD1 -net VSS -pins VSS
# add implementation info for power domains
update_power_domain -name LD1 -internal_power_net VDDH
update_power_domain -name PD1 -internal_power_net VDD_0.8
update_power_domain -name PD2 -internal_power_net VDD2
update_power_domain -name PD3 -internal_power_net VDD3
update power domain -name PD4 -internal power net VDD4
# update the rules
update_state_retention_rules -names st1 -cell_type DRFF -library_set vendor_08v update_state_retention_rules -names st2 -cell_type DRFF -library_set vendor_08v update_state_retention_rules -names st3 -cell_type DRFF -library_set vendor_08v
update_isolation_rules -names iso1 -location to -cells ISOLNX2M
update isolation rules -names iso2 -location to -cells ISOLNX2M
update_isolation_rules -names iso3 -location to -cells ISOLNX2M
update_level_shifter_rules -names ls1 -cells LVLLHX2M -location to -prefix RC_LS
# specify the power switch rule information
create_power_switch_rule -name SW1 -domain PD2 -external_power_net VDD_0.8
update_power_switch_rule -name SW1 -cells HEAD32M -prefix CDN_
create_power_switch_rule -name SW2 -domain PD3 -external_power_net VDD_0.8
update power switch rule -name SW2 -cells HEAD32M -prefix CDN
create_power_switch_rule -name SW3 -domain PD4 -external_power_net VDD_0.8
update_power_switch_rule -name SW3 -cells HEAD32M -prefix CDN_
```

end design

Process of Creating the CPF Content

Using Multiple CPF Files

In this case a master CPF file is created in which two other supporting CPF files with additional CPF commands are sourced.

- pf_design_1.cpf (see <u>Figure 3-2</u> on page 108) contains the basic information used by most tools.
- library_vendor_130.cpf (see <u>Figure 3-3</u> on page 110) contains the technology-related information.

This information will typically be provided by the library vendor.

■ pf_design_1_impl.cpf (see <u>Figure 3-4</u> on page 112) contains implementation-specific information.

The commands in this file can be added later in the flow.

Process of Creating the CPF Content

Figure 3-2 Content of the pf_design_1.cpf File (Master CPF File)

```
#start of master CPF file
source library vendor 130.cpf
set vendor_08v_list "\
../LIBS/vendor_130/vendor13sp_tt_0p8v_25c.lib \
../LIBS/vendor_130LL/vendorl130e_ll_tt_0p8v_25c.lib \
../LIBS/vendor_130SP/vendorl130e_sp_tt_0p8v_25c.lib
set vendor 120v list "\
../LIBS/vendor_130/vendor13sp_tt_0p8v_1p2v_25c.lib \
../LIBS/vendor_130LL/vendorl130e_ll_tt_1p2v_25c.lib
../LIBS/vendor_130SP/vendorl130e_sp_tt_1p2v_25c.lib
define library set -name vendor 120v -libraries $vendor 120v list
define_library_set -name vendor_08v -libraries $vendor_08v_list
Design part of the CPF
set_design top
set_hierarchy_separator "/"
# create power domains
create_power_domain -name PD1 -default
create_power_domain -name PD2 -instances {inst_A inst_B} \
    -shutoff_condition {pm_inst/pse_enable[0]}
create_power_domain -name PD3 -instances inst_C \
   -shutoff_condition {pm_inst/pse_enable[1]}
create_power_domain -name PD4 -instances inst D \
    -shutoff_condition {pm_inst/pse_enable[2]}
create_power_domain -name LD1 -instances pm_inst/pd_inst*
# create nominal conditions
create_nominal_condition -name point_8v -voltage 0.8
create_nominal_condition -name one_p_2v -voltage 1.2
create_nominal_condition -name off -voltage 0
# create power modes
create_power_mode -name PM1 -default -domain_conditions {PD1@point_8v \
PD2@point_8v PD3@point_8v PD4@point_8v LD1@one_p_2v}
create_power_mode -name PM2 -domain_conditions {PD1@point_8v PD2@off \
PD3@point 8v PD4@point 8v LD1@one p 2v}
create_power_mode -name PM3 -domain_conditions {PD1@point_8v PD2@off \
PD3@off PD4@point_8v LD1@one_p_2v}
create_power_mode -name PM4 -domain_conditions {PD1@point_8v PD2@off \
PD3@off PD4@off LD1@one p 2v}
# create rules for state retention insertion
create_state_retention_rule -name st1 -domain PD2 \
-restore_edge {!pm_inst/pge_enable[0]}
create_state_retention_rule -name st2 -domain PD3 \
-restore_edge {!pm_inst/pge_enable[1]}
create_state_retention_rule -name st3 -domain PD4 \
-restore_edge {!pm_inst/pge_enable[2]}
```

Process of Creating the CPF Content

create rule for isolation logic insertion

```
create_isolation_rule -name iso1 -from PD2 \
   -isolation_condition {pm_inst/ice_enable[0]}
create_isolation_rule -name iso2 -from PD3 \
   -isolation_condition {pm_inst/ice_enable[1]}
create_isolation_rule -name iso3 -from PD4 \
   -isolation_condition {pm_inst/ice_enable[2]}
# create rules for level shifter insertion
create_level_shifter_rule -name ls1 -to LD1
create_level_shifter_rule -name ls2 -from LD1
```

source pf_design_1_impl.cpf

end_design

Process of Creating the CPF Content

Figure 3-3 Content of the library_vendor_130.cpf File

```
Technology part of the CPF
# define the level shifters
define_level_shifter_cell -cells LVLHLEHX* \
    -input_voltage_range 1.2 \
    -output_power_pin VDD \
    -output voltage range 0.8 \
    -direction down \
    -output_voltage_input_pin EN \
    -ground VSS \
   -enable EN \
    -valid location to
define_level_shifter_cell -cells LVLHLELX* \
    -input_voltage_range 1.2 \
    -output_power_pin VDD \
    -output_voltage_range 0.8 \
    -direction down \
    -output_voltage_input_pin EN \
    -ground VSS \
    -enable EN \
   -valid location to
define_level_shifter_cell -cells LVLHLX* \
   -input_voltage_range 1.2 \
    -output_power_pin VDD \
    -output_voltage_range 0.8 \
    -direction down \
    -ground VSS \
    -valid location to
define_level_shifter_cell -cells LVLLHEHX* \
    -input_voltage_range 0.8 \
    -output_power_pin VDD \
    -input_power_pin VDDI \
    -output_voltage_range 1.2 \
    -direction up \
    -output_voltage_input_pin EN \
    -ground VSS \
    -valid location to
define_level_shifter_cell -cells LVLLHX* \
    -input_voltage_range 0.8 \
    -output_voltage_range 1.2 \
    -input_power_pin VDDI
    -output_power_pin VDD \
    -direction up
    -ground VSS \
    -valid location to
# define the isolation cells
define_isolation_cell -cells ISOLN* \
    -enable EN \
    -power VDD -ground VSS \
-valid_location to
# define the always on cell
define always on cell -cells "BUFGX2M BUFGX8M INVGX2M INVGX8M" \
    -power_switchable VDD -power VDDG -ground VSS
```

Process of Creating the CPF Content

```
# define the power switch cells
define_power_switch_cell -cells "HEAD8DM HEAD16DM HEAD32DM HEAD64DM" \
    -stage_1_enable !SLEEP \
    -type header \
   -stage_1_output SLEEPOUT \
   -power VDDG \
   -power_switchable VDD
define_power_switch_cell -cells "HEAD8M HEAD16M HEAD32M HEAD64M" \
   -stage_1_enable_!SLEEP \setminus
    -type header \
   -power VDDG \
    -power_switchable VDD
define_power_switch_cell -cells "FOOT8DM FOOT16DM" \
   -stage_1_enable SLEEPN \
   -type footer \
   -stage 1 output SLEEPNOUT \
   -ground VSSG \
   -ground_switchable VSS
define_power_switch_cell -cells "FOOT8M FOOT16M" \
   -stage 1 enable SLEEPN \
    -type footer \
   -ground VSSG \
    -ground_switchable VSS
# define the state retention cell
define_state_retention_cell -cells *DRFF* -restore_function RETN \
   -power VDDG \
    -power_switchable VDD \
    -ground VSS
```

Process of Creating the CPF Content

Figure 3-4 Content of the pf_design_1_impl.cpf File

```
#start of implementation information
```

```
# associate library sets with nominal conditions
```

```
update_nominal_condition -name point_8v -library_set vendor_08v
update_nominal_condition -name one_p_2v -library_set vendor_120v
```

specify timing constraints

```
update power mode -name PM1 -sdc files ../CPF/1.0/cm1.sdc
```

declare power and ground nets

```
create_power_nets -nets VDD_0.8 -voltage 0.8
create_power_nets -nets VDD2 -voltage 0.8
create_power_nets -nets VDD3 -voltage 0.8
create_power_nets -nets VDD4 -voltage 0.8
create_power_nets -nets VDDH -voltage 1.2
create_ground_nets -nets VSS
```

create global connections

```
create_global_connection -domain PD1 -net VDD_0.8 -pins VDD
create_global_connection -domain PD1 -net VDD_0.8 -pins VDDG
create_global_connection -domain PD1 -net VSS -pins VSS
create global connection -domain PD1 -net VSS -pins VSSG
create_global_connection -domain PD2 -net VDD2 -pins VDD
create_global_connection -domain PD2 -net VDD_0.8 -pins VDDG
create_global_connection -domain PD2 -net VSS -pins VSS
create global connection -domain PD2 -net VSS -pins VSSG
create_global_connection -domain PD3 -net VDD3 -pins VDD
create_global_connection -domain PD3 -net VDD_0.8 -pins VDDG
create_global_connection -domain PD3 -net VSS -pins VSS
create global connection -domain PD3 -net VSS -pins VSSG
create_global_connection -domain PD4 -net VDD4 -pins VDD
create_global_connection -domain PD4 -net VDD_0.8 -pins VDDG
create_global_connection -domain PD4 -net VSS -pins VSS
create global connection -domain PD4 -net VSS -pins VSSG
create_global_connection -domain LD1 -net VDDH -pins VDD
create_global_connection -domain LD1 -net VDD_0.8 -pins VDDI
create_global_connection -domain LD1 -net VSS -pins VSS
```

add implementation info for power domains

```
update_power_domain -name LD1 -internal_power_net VDDH update_power_domain -name PD1 -internal_power_net VDD_0.8 update_power_domain -name PD2 -internal_power_net VDD2 update_power_domain -name PD3 -internal_power_net VDD3 update_power_domain -name PD4 -internal_power_net VDD4
```

update the rules

```
update_state_retention_rules -names st1 -cell_type DRFF -library_set vendor_08v update_state_retention_rules -names st2 -cell_type DRFF -library_set vendor_08v update_state_retention_rules -names st3 -cell_type DRFF -library_set vendor_08v update_isolation_rules -names iso1 -location to -cells ISOLNX2M update_isolation_rules -names iso2 -location to -cells ISOLNX2M update_isolation_rules -names iso3 -location to -cells ISOLNX2M update_level_shifter_rules -names ls1 -cells LVLLHX2M -location to -prefix RC_LS
```

Process of Creating the CPF Content

specify the rules for power switch insertion

```
create_power_switch_rule -name SW1 -domain PD2 -external_power_net VDD_0.8
update_power_switch_rule -name SW1 -cells HEAD32M -prefix CDN_

create_power_switch_rule -name SW2 -domain PD3 -external_power_net VDD_0.8
update_power_switch_rule -name SW2 -cells HEAD32M -prefix CDN_

create_power_switch_rule -name SW3 -domain PD4 -external_power_net VDD_0.8
update_power_switch_rule -name SW3 -cells HEAD32M -prefix CDN_
```

Process of Creating the CPF Content

4

- Introduction to Hierarchical Flow on page 116
- <u>CPF for Hierarchical Flow</u> on page 121
- Steps to Create the CPF File on page 132

Hierarchical Flow

Introduction to Hierarchical Flow

In <u>Chapter 2, "Creating a CPF File,"</u> you learned about the CPF constructs to describe three of the most used low power techniques in a non-hierarchical flow. In this chapter, you will learn more about the additional constructs you need to use for a bottom-up hierarchical flow.

Typically in a bottom-up *hierarchical* flow, the design instantiates IPs.

If an IP is designed or implemented with a complex power structure, the IP will have a separate CPF file to describe its power intent.

CPF distinguishes the following categories:

- A *hard non-custom IP* is a block that has been synthesized and placed and routed, but small modifications can still be made. It is also referred to as a *hard IP*.
- A hard custom IP is a block that is mostly implemented by hand. Custom IP users cannot make any changes to the block. Examples are third-party memories. A hard custom IP is also referred to as a macro cell.
- A **soft IP** is a design module that can be supplied by a third-party. Users have the full capability to (re-)synthesize and place and route the design. Examples are synthesizable CPU cores, and so on.

When the IP is instantiated at the top level, *power domain mapping* is required to indicate which power domains from the top-level need to provide power supplies to the IP.

Mapping a power domain of a block (IP) to another power domain at the top level when the block is instantiated in the top-level design involves

- 1. Connecting the primary power and ground pins or nets of the block-level domain to the primary power and ground net of the domain specified at the top level
- 2. Merging the elements of the power domain of the block into the top-level domain
- 3. Merging the power modes
- 4. Resolving the precedence of the power domain settings
- 5. Resolving the precedence of the top-level and block-level rules

Once a block-level power domain is mapped into a top-level power domain, the two power domains are considered identical and all instances of the two domains share the same power characteristics. For example, the standard cell instances of the two power domains will have their primary power and ground pin (follow pins) connected together to the same primary power and ground nets.

Hierarchical Flow


A simplified view of a DTMF receiver, the design used to illustrate the hierarchical flow, is shown in <u>Figure 4-1</u> on page 117.

The DTMF receiver design uncompresses and accumulates an eight-bit uLaw encoded dual tone data sampled over a100 millisecond period into a dual buffer memory.

Once an entire sample has been received embedded DSP (TDSP) cores will read the input buffer and execute a modified discrete Fourier transform (DFT) algorithm to calculate a partial frequency spectrum. Upon completion the DSP cores forward the resulting frequency response data for comparison to values corresponding to DTMF digits. If a match is found the 8 bit ASCII digit is presented at the output of the core.

The voltage of the core is scaled depending on the requested function of the design. If the processing speed is critical a higher voltage is used, if the processing speed is not critical, the voltage is dynamically scaled down together with the clock frequency to save power. For this design we assume that the voltage supply is dynamically controlled external to the chip.

Figure 4-1 Example of Hierarchical Design

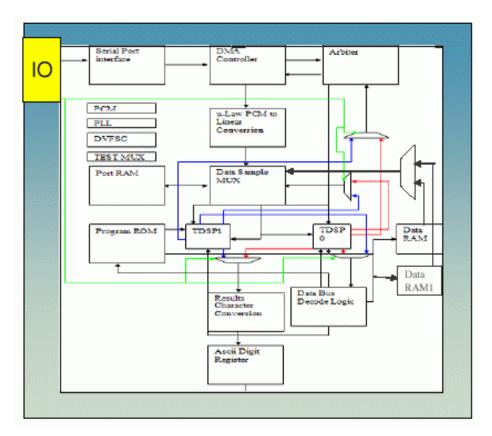

Hierarchical Flow

The core of the design is the DTMF_INST instance. The I/O pads are instantiated in a hierarchical instance IOPADS_INST. The DTMF receiver design further contains

A PLL block

This block is used to generate the clocks needed by all the blocks in the design. It has a reference clock, refclk, that is used to generate all other clocks.

Because the design uses two operating voltages, two clock signals are created.

This analog block needs to operate at a constant voltage to ensure correct operation. It therefore needs a dedicated power input, Avdd.

■ Two TDSP cores: TDSP0 and TDSP1 (in Figure 4-1 on page 117)

These two digital signal processing blocks can operate at a higher voltage and frequency, and at a lower voltage and frequency when the processing speed is not critical. When the blocks do not need to be operational, they are powered down.

A dvfs_en signal at the input of the chip indicates to the dvfs_controller when the voltage and frequency can be adjusted. The controller sends a signal to the PLL and to the external voltage regulator to adjust the clock frequency and the voltage, respectively.

These blocks are instances of the soft block, tdsp_core. The tdsp.cpf file describes the power intent of this soft block.

■ Data RAM1 is a special RAM that can retain its memory when it is powered down. This RAM can operate at the same voltages as the design core.

This RAM is an instance of the hard custom IP, $ram_256x16A$. The ram.cpf file describes the power intent of this RAM instance.

■ Data RAM is a regular RAM.

This RAM can only operate at one voltage. It can also be powered down when not operational. This RAM does not retain its memory when it is powered down.

■ The pm_inst block (not shown in <u>Figure 4-1</u> on page 117)

This block generates all power control signals for the chip.

This block operates at the same voltage as the top-level of the design.

The top-level of the design has the following power domains:

■ The PDpll power domain contains the PLL block (DTMF_INST/PLLCLK_INST) and some of the IO pads (for example, IOPADS_INST/Prefclkip) that are connected to this block.

Hierarchical Flow

- The PDtdsp power domain contains the two TDSP cores (DTMF_INST/TDSP_CORE_INST) and the special RAM (DTMF INST/RAM 128x16 TEST INST1).
- The PDram power domain contains the regular RAM (DTMF_INST/RAM_128x16_TEST_INST).
- The PDshutoff_io power domain contains two I/O instances that can be powered down.
- The PDdefault power domain contains all other blocks that do not belong to any special power domain. All these blocks operate in DVFS mode.
- The PDram_virtual power domain contains no blocks.

Power domains PDdefault, PDpll and PDram_virtual are <u>unswitched</u> domains. Power domains PDtdsp, PDram, and PDshutoff io are switchable domains.

Power domain PDshutoff_io is an on-chip controlled external switchable domain, while power domains PDtdsp and PDram are internal switchable domains; they can be switched off through an internal power switch network. The external power supply for the power switch network of power domain PDtdsp is provided by the power domain PDram is provided by the power domain PDram is provided by the power domain PDram_virtual.PDdefault is the secondary power domain for domain PDtdsp, while PDram_virtual is the secondary power domain PDram.

Table 4-1 shows the operating voltages for each of the power domains in the different power modes of the design.

Table 4-1 Voltages of the Power Domains at the Top Level in the Different Power Modes

Power Mode	Corresponding Power Domain					
	PDdefault	PDshutoff_io	PDpll	PDram_virtual	PDram	PDtdsp
PMdvfs1	0.81	0.81	0.81	0.72	0.72	0.81
PMdvfs1_off	0.81	0.81	0.81	0.72	0	0
PMdvfs1_shutoffio_off	0.81	0	0.81	0.72	0	0
PMdvfs2	0.72	0.72	0.81	0.72	0.72	0.72
PMdvfs2_off	0.72	0.81	0.81	0.72	0	0
PMdvfs2_shutoffio_off	0.72	0	0.81	0.72	0	0
PMscan	0.81	0.81	0.81	0.72	0.72	0.81

Hierarchical Flow

<u>Table 4-2</u> on page 120 shows the different control signals needed at the top-level of the design to isolate logic, turn off the power supply switches, and save and restore the retention states. The always on domains do not need any control signals.

Table 4-2 Signals Controlling the Power Domains at the Top Level

Power Domain	Control Signals					
	power switch	isolation cell	state retention cell			
PDdefault	no control signal	no control signal	no control signal			
PDpII	no control signal	no control signal	no control signal			
PDram_virtual	no control signal	no control signal	no control signal			
PDram	!power_switch_enable	!isolation_enable	no control signal			
PDtdsp	!power_switch_enable	!isolation_enable	no control signal ¹			
PDshutoff_io	io_shutoff_ack	!spi_ip_isolate	no control signal			

^{1.} Although no state retention rules are specified at the top-level domain, state retention rules are defined for the special RAM, defined through the ram.cpf (see Macro CPF— ram.cpf), and for the soft block, defined through the tdsp.cpf (see Soft IP CPF— tdsp.cpf).

All control signals are generated by the power control manager (PM_INST) which is an instance of the core.

<u>Table 4-3</u> on page 120 lists the operating corners for the design for the corresponding operating voltages.

Table 4-3 Operating Corners

Operating Corner	Operating Voltage
PMdvfs2_bc	0.88
PMdvfs1_bc	0.99
PMdvfs1_wc	0.81
PMdvfs2_wc	0.72

CPF for Hierarchical Flow lists the complete CPF files used for this design.

<u>Steps to Create the CPF File</u> describes the specifics to create a CPF file for a hierarchical flow, assuming your design is using a hard and soft IP for which you have the CPF descriptions.

Hierarchical Flow

CPF for Hierarchical Flow

- Technology CPF File tech.cpf on page 122
- Top CPF File on page 125
- Macro CPF ram.cpf on page 130
- Soft IP CPF tdsp.cpf on page 131

Technology CPF File — tech.cpf

```
set cpf version 1.1
if { [set_instance] == [set_hierarchy_separator] } {
set libdir ../LIBS/N45GS/timing
set libdir io ../LIBS/N65LP/timing
Technology part of the CPF
define_always_on_cell -cells PTBUFFD2BWP \
   -power switchable VDD -power TVDD -ground VSS
define_isolation_cell -cells ISO* \
   -power VDD -ground VSS \
   -enable ISO \
   -valid location to
define_level_shifter_cell -cells LVL*HLD* \
   -input_voltage_range 0.72:0.81:0.09 \
   -output_voltage_range 0.72:0.81:0.09 \
   -direction down \
   -output_power_pin VDD \
   -ground VSS \
   -valid_location to
define level shifter cell -cells PTLVL*HLD* \
   -input voltage range 0.72:0.81:0.09 \
   -output_voltage_range 0.72:0.81:0.09 \
   -direction down \
   -output_power_pin TVDD \
   -ground VSS \
   -valid location to
define level shifter cell -cells LVLLHCD* \
   -input_voltage_range 0.72:0.81:0.09 \
   -output_voltage_range 0.72:0.81:0.09 \
   -enable NSLEEP \
   -input_power_pin VDDL \
   -output_power_pin VDD \
   -direction up \
   -ground VSS \
   -enable NSLEEP \
   -valid location to
define level shifter cell -cells LVLLHD* \
   -input voltage range 0.72:0.81:0.09 \
   -output_voltage_range 0.72:0.81:0.09 \
   -input_power_pin VDDL \
   -output_power_pin VDD \
   -direction up \
   -ground VSS '
   -valid location to
define_power_switch_cell -cells {HDRDID1BWPHVT HDRDIAOND1BWPHVT} \
   -power_switchable VDD -power TVDD \
   -stage 1 enable NSLEEPIN1 -stage 1 output NSLEEPOUT1 \
   -stage_2_enable NSLEEPIN2 -stage_2_output NSLEEPOUT2 \
   -type header
```

```
define state_retention_cell \
   -cells {MSRSDFCSNQHD2BWP}
   -cell_type "master_slave"
   -clock pin CP \
   -power_TVDD -power_switchable VDD \
   -ground VSS \
   -restore check "!CP" \
   -save_function "!CP" \
   -always_on_components DFF_inst
define state_retention_cell \
   -cells {RSDFCSRHD2BWP} \
   -clock_pin CP \
   -power_TVDD -power_switchable VDD \
   -ground VSS \
   -save_function "SAVE" \
   -cell_type "ballon_latch" \
   -restore_function "!NRESTORE" \
   -always_on_components save_data
## DEFINE LIBRARY SET
set lib 0v81 wc base "$libdir/tcbn45qsbwpwc.lib"
set lib 0v81 wc extra "\
   $libdir/tcbn45lpbwp_c070208wc0d720d9_modified.lib \
   $libdir/tcbn45lpbwp_c070208wc0d90d9_modified.lib \
   $libdir/tcbn45lpbwp_c070208wc_modified.lib \
   $libdir/pllclk_slow.lib \
   $libdir/ram_256x16A_slow_syn.lib \
   $libdir/rom_512x16A_slow_syn.lib
set lib 0v81 bc base "$libdir/tcbn45qsbwpbc.lib "
set lib_0v81_bc_extra "\
   $libdir/tcbn45lpbwp_c070208bc0d881d1_modified.lib \
   $libdir/tcbn45lpbwp_c070208bc1d11d1_modified.lib \
   $libdir/tcbn45lpbwp c070208bc modified.lib \
   $libdir/pllclk_slow.lib \
    $libdir/ram_256x16A_slow_syn.lib \
   $libdir/rom_512x16A_slow_syn.lib
set lib 0v72 wc base "$libdir/tcbn45qsbwpwc 0d72.lib "
set lib_0v72_wc_extra "\
   $libdir/tcbn45lpbwp_c070208wc0d90d72_modified.lib \
   $libdir/tcbn45lpbwphvt_c070208wc0d72_modified.lib \
   $libdir/tcbn45lpbwp_c070208wc0d72_ptlvl_modified.lib \
    $libdir/tcbn45lpbwp_c070208wc0d720d72_modified.lib \
   $libdir/ram 256x16A slow syn.lib \
   $libdir/rom_512x16A_slow_syn.lib
set lib_0v72_bc_base "$libdir/tcbn45gsbwpbc_0d88.lib "
set lib 0v72 bc extra "\
   $libdir/tcbn45lpbwp_c070208bc1d10d88_modified.lib \
   $libdir/tcbn45lpbwphvt c070208bc0d88 modified.lib \
   $libdir/tcbn45lpbwp_c070208bc0d88_ptlvl_modified.lib \
   $libdir/tcbn45lpbwp_c070208bc0d880d88_modified.lib \
    $libdir/ram 256x16A fast syn.lib \
   $libdir/rom 512x16A slow syn.lib
```

Hierarchical Flow

Top CPF File

```
set cpf version 1.1
set_hierarchy_separator /
set design dtmf chip
set constraintDir $env(test PATH)/RELEASE/mmmc
include tech.cpf
## create power domains
create power domain -name PDdefault -default
update_power_domain -name PDdefault -primary_power_net VDD -primary_ground_net VSS
create power domain -name PDshutoff io \
   -instances {IOPADS INST/Pspifsip IOPADS INST/Pspidip} \
   -boundary_ports {spi_fs spi_data} \
   -shutoff_condition {io_shutoff_ack} \
   -external_controlled_shutoff
update power domain -name PDshutoff io -primary power net VDD IO \
   -primary_ground_net VSS
create_power_domain -name PDpll
   -instances {DTMF_INST/PLLCLK_INST \
              IOPADS INST/Pibiasip \
              IOPADS_INST/Ppllrstip \
              IOPADS INST/Prefclkip \
              IOPADS_INST/Pvcomop
              IOPADS_INST/Pvcopop}
   -boundary_ports { ibias reset refclk vcom vcop pllrst }
update power domain -name PDpll -primary power net Avdd -primary ground net Avss
create power domain -name PDram virtual
update_power_domain -name PDram_virtual -primary_power_net VDDL \
   -primary ground net VSS
create_power_domain -name PDram \
   -shutoff_condition {!DTMF_INST/PM_INST/power_switch_enable} \
   -base_domains PDram_virtual \
   -instances DTMF_INST/RAM_128x16_TEST_INST
update_power_domain -name PDram -primary_power_net VDDL_sw -primary_ground_net VSS
create_power_domain -name PDtdsp \
   -shutoff_condition {!DTMF_INST/PM_INST/power_switch_enable} \
   -base domains PDdefault
update_power_domain -name PDtdsp -primary_power_net VDD_sw -primary_ground_net VSS
## create power modes
create_nominal_condition -name nom_0v81 -voltage 0.81
update_nominal_condition -name nom_0v81 -library_set wc_0v81
create nominal condition -name nom 0v72 -voltage 0.72
update_nominal_condition -name nom_0v72 -library_set wc_0v72
create_power_mode -name PMdvfs1 \
   -domain_conditions {PDpll@nom_0v81 PDdefault@nom_0v81 PDtdsp@nom_0v81 \
```

```
PDram@nom_0v72 PDshutoff_io@nom_0v81 \
                       PDram virtual@nom 0v72} \
    -default
update_power_mode -name PMdvfsl -sdc_files ${constraintDir}/dtmf_dvfsl.sdc
create_power_mode -name PMdvfs1_off \
    -domain_conditions {PDpll@nom_0v81 PDdefault@nom_0v81 PDshutoff_io@nom_0v81 \
                       PDram_virtual@nom_0v72}
create_power_mode -name PMdvfs1_shutoffio_off \
    -domain_conditions {PDpll@nom_0v81 PDdefault@nom_0v81 PDram_virtual@nom_0v72}
create power mode -name PMdvfs2 \
    -domain conditions {PDpll@nom 0v81 PDdefault@nom 0v72 PDtdsp@nom 0v72 \
                       PDram@nom_0v72 PDshutoff_io@nom_0v72 \
                       PDram_virtual@nom_0v72}
update_power_mode -name PMdvfs2 -sdc_files ${constraintDir}/dtmf_dvfs2.sdc
create_power_mode -name PMdvfs2_off \
    -domain conditions {PDpll@nom 0v81 PDdefault@nom 0v72 PDshutoff io@nom 0v72 \
                       PDram virtual@nom 0v72}
create_power_mode -name PMdvfs2_shutoffio_off \
    -domain_conditions {PDpll@nom_0v81 PDdefault@nom_0v72 PDram_virtual@nom_0v72}
create_power_mode -name PMscan \
    -domain conditions {PDpll@nom 0v81 PDdefault@nom 0v81 PDtdsp@nom 0v81 \
   PDram@nom 0v72 PDshutoff io@nom 0v81 PDram virtual@nom 0v72}
update_power_mode -name PMscan -sdc_files ${constraintDir}/dtmf_scan.sdc
## domain mapping
set_instance DTMF_INST/TDSP_CORE_INST0 \
   -domain_mapping { {PDtdsp_block PDtdsp} } \
-port_mapping { {retention_save DTMF_INST/PM_INST/state_retention_save} \
               {retention_restore DTMF_INST/PM_INST/state_retention_restore} }
include tdsp.cpf
set_instance DTMF_INST/TDSP_CORE_INST1 \
    -domain_mapping { {PDtdsp_block PDtdsp} } \
-port_mapping { {retention_save DTMF_INST/PM_INST/state_retention_save} \
               {retention_restore DTMF_INST/PM_INST/state_retention_restore} }
include tdsp.cpf
set instance DTMF INST/RAM 128x16 TEST INST1/RAM 128x16 INST \
    -domain mapping { {RAM DEFAULT PDtdsp} }
include ram.cpf
```

```
## create isolation and level shifter rules
create_isolation_rule -name ISORULE1 \
   -from PDtdsp \
   -to PDdefault
   -isolation_condition {!DTMF_INST/PM_INST/isolation_enable} \
   -isolation_output high
create_isolation_rule -name ISORULE3 \
   -from PDram \
   -to PDdefault \
   -isolation_condition {!DTMF_INST/PM_INST/isolation_enable} \
   -isolation_output high
create isolation rule -name ISORULE4 \
   -from PDshutoff io \
   -isolation condition {!DTMF INST/PM INST/spi ip isolate} \
   -isolation_output low
create level shifter rule -name LSRULE H2L3 \
   -from PDdefault \
   -to PDram \
   -exclude { DTMF_INST/PM_INST/power_switch_enable }
update level shifter rules -names LSRULE H2L3 -location to -cells LVLHLD2BWP
create_level_shifter_rule -name LSRULE_H2L3_SW \
   -from PDdefault \
   -to PDram \
   -pins { DTMF INST/PM INST/power switch enable }
update level shifter rules -names LSRULE H2L3 SW \
   -location to \
   -cells PTLVLHLD2BWP \
   -prefix CPF_LS_SW
create level shifter rule -name LSRULE L2H2 \
   -from PDram \
   -t.o
       PDdefault
create level shifter rule -name LSRULE H2L PLL \
   -from PDpll
create_level_shifter_rule -name LSRULE_L2H3
   -from PDdefault
   -to
       PDpll
## create power net
create_power_nets -nets VDD -voltage {0.72:0.81:0.09}
create_power_nets -nets VDD_sw -internal -voltage {0.72:0.81:0.09}
```

```
create power nets -nets VDDL -voltage 0.72
create power nets -nets VDDL sw -internal -voltage 0.72
create power nets -nets Avdd -voltage 0.81
create_power_nets -nets VDD_IO -voltage {0.72:0.81:0.09} \
   -external shutoff condition {io shutoff ack}
create ground nets -nets Avss -voltage 0
create ground nets -nets VSS -voltage 0
## create analysis view
create operating corner -name PMdvfs2 bc \
   -process 1 -temperature 0 -voltage 0.88
    -library set bc 0v72
create_operating_corner -name PMdvfs1_bc \
   -process 1 -temperature 0 -voltage 0.99 \
   -library set bc 0v81
create operating corner -name PMdvfs1 wc \
    -process 1 -temperature 125 -voltage 0.81 \
    -library set wc 0v81
create_operating_corner -name PMdvfs2_wc \
    -process 1 -temperature 125 -voltage 0.72 \
    -library_set wc_0v72
create_analysis_view -name AV_dvfs1_BC -mode PMdvfs1
    -domain_corners {PDpll@PMdvfs1_bc PDdefault@PMdvfs1_bc PDtdsp@PMdvfs1_bc \
                  PDram@PMdvfs2 bc PDshutoff io@PMdvfs1 bc}
create_analysis_view -name AV_dvfs1_WC -mode PMdvfs1 \
    -domain_corners {PDpll@PMdvfs1_wc PDdefault@PMdvfs1_wc PDtdsp@PMdvfs1_wc \
                  PDram@PMdvfs2 wc PDshutoff io@PMdvfs1 wc}
create_analysis_view -name AV_dvfs1_off_BC -mode PMdvfs1_off \
   -domain corners {PDpll@PMdvfs1 bc PDdefault@PMdvfs1 bc \
                  PDshutoff io@PMdvfs1 bc}
create_analysis_view -name AV_dvfs1_off_WC -mode PMdvfs1_off \
    -domain_corners {PDpll@PMdvfs1_wc PDdefault@PMdvfs1_wc \
                  PDshutoff io@PMdvfs1 wc}
create analysis view -name AV dvfsl shutoffio off BC -mode PMdvfsl shutoffio off \
    -domain_corners {PDpll@PMdvfs1_bc PDdefault@PMdvfs1_bc}
create_analysis_view -name AV_dvfs1_shutoffio_off_WC -mode PMdvfs1_shutoffio_off \
   -domain corners {PDpll@PMdvfs1 wc PDdefault@PMdvfs1 wc}
create analysis view -name AV dvfs2 BC -mode PMdvfs2 \
    -domain corners {PDpll@PMdvfs1 bc PDdefault@PMdvfs2 bc PDtdsp@PMdvfs2 bc \
                  PDram@PMdvfs2_bc PDshutoff_io@PMdvfs2_bc}
create_analysis_view -name AV_dvfs2_WC -mode PMdvfs2 \
    -domain corners {PDpll@PMdvfs1 wc PDdefault@PMdvfs2 wc PDtdsp@PMdvfs2 wc \
                  PDram@PMdvfs2 wc PDshutoff io@PMdvfs2 wc}
```

```
create_analysis_view -name AV_PMdvfs2_off_BC -mode PMdvfs2_off \
   -domain_corners {PDpll@PMdvfs1_bc PDdefault@PMdvfs2_bc \
                  PDshutoff_io@PMdvfs2_bc}
create_analysis_view -name AV_PMdvfs2_off_WC -mode PMdvfs2_off \
   -domain_corners {PDpll@PMdvfs1_wc PDdefault@PMdvfs2_wc \
                  PDshutoff io@PMdvfs2 wc}
create_analysis_view -name AV_dvfs2_shutoffio_off_BC -mode PMdvfs2_shutoffio_off \
   -domain_corners {PDpll@PMdvfs1_bc PDdefault@PMdvfs2_bc}
create_analysis_view -name AV_dvfs2_shutoffio_off_WC -mode PMdvfs2_shutoffio_off \
   -domain corners {PDpll@PMdvfs1 wc PDdefault@PMdvfs2 wc}
create_analysis_view -name AV_scan_BC -mode PMscan \
   -domain_corners {PDpll@PMdvfs1_bc PDdefault@PMdvfs1_bc PDtdsp@PMdvfs1_bc \
                  PDram@PMdvfs2_bc PDshutoff_io@PMdvfs1_bc}
create analysis view -name AV scan WC -mode PMscan \
   -domain corners {PDpll@PMdvfs1 wc PDdefault@PMdvfs1 wc PDtdsp@PMdvfs1 wc\
                  PDram@PMdvfs2_wc PDshutoff_io@PMdvfs1_wc}
##power switch, level shifter, isolation cell
create power switch rule -name PDram SW -domain PDram -external power net VDDL
update_power_switch_rule -name PDram_SW \
   -cells HDRDID1BWPHVT \
   -prefix CDN_SW_RAM
create_power_switch_rule -name PDtdsp_SW -domain PDtdsp -external_power_net VDD
update_power_switch_rule -name PDtdsp_SW \
   -cells HDRDID1BWPHVT \
   -prefix CDN_SW_TDSP
end design
```

Hierarchical Flow

Macro CPF — ram.cpf

```
set_cpf_version 1.1
set_macro_model ram_256x16A
# This is a special RAM that retains its memory when it is powered down
# RAM has one power domain
create_power_domain -name RAM_DEFAULT -default \
        -boundary_ports {A* D* CLK CEN WEN Q*}
update_power_domain -name RAM_DEFAULT -primary_power_net VDD \
        -primary_ground_net VSS
# incomplete iso rule specified: the required iso value at inputs
# when driving domain is off
create_isolation_rule -name RAM_iso -isolation_output high -to RAM_DEFAULT
        -pins {A* D* CLK CEN WEN}
create_state_retention_rule -name RAM_ret -instances mem* -save_edge !CLK
end_macro_model
```

Hierarchical Flow

Soft IP CPF — tdsp.cpf

```
set cpf version 1.1
set_design tdsp_core -ports { retention_save retention_restore }
include tech.cpf
## create power domains
create_power_domain -name PDtdsp_block -default
update_power_domain -name PDtdsp_block -primary_power_net VDDtdsp_SW \
  -primary ground net VSStdsp
create_nominal_condition -name nom_0v72 -voltage 0.72
update_nominal_condition -name nom_0v72 -library_set wc_0v72
create nominal condition -name off -voltage 0
create isolation rule -name PDtdsp iso -to PDtdsp block -isolation output low
## create power modes
create power mode -name PMtdsp ON \
  -domain_conditions {PDtdsp_block@nom_0v72} \
  -default
create_power_mode -name PMtdsp_OFF \
  -domain conditions {PDtdsp block@off}
## low power rules
create state retention rule -name PDtdsp retention rule \
  -domain PDtdsp block -save edge retention save \
  -restore_edge {!retention_restore}
update_state_retention_rules -names PDtdsp_retention_rule \
  -cell_type "ballon_latch"
end design
```

Hierarchical Flow

Steps to Create the CPF File

Note: The example shown in Figure 4-1 on page 117 is used throughout this section.

- Understanding the CPF file of the Macro Cell on page 133
- Understanding the CPF file of the Soft IP on page 135
- Creating the CPF File for the Top-Level Design on page 136

Hierarchical Flow

Understanding the CPF file of the Macro Cell

A macro cell can have a behavioral model to describe its functionality. Implementation and verification tools therefore have to rely on the CPF modeling of the internal power network using the boundary ports. This section shows some of the constructs you can expect in a CPF macro model.

For the complete CPF macro model used in this design, refer to Macro CPF — ram.cpf.

1. The definition of a CPF macro model starts with a <u>set_macro model</u> command that specifies the name of the library cell that represents the macro cell.

For the macro model used in the design in Figure 4-1 on page 117:

```
set_macro_model ram_256x16A
```

2. The definition ends with an end macro model command.

The commands set_macro_model and end_macro_model delimit the scope of a macro model description.

All commands between set_macro_model and end_macro_model describe the internal implementation of the macro cell.

3. The CPF macro model lists all the power domains that the macro cell contains.

Only the (boundary) input and output pins of the macro cell are visible to the outside world. The input and output pins that belong to a specific power domain are specified through the <code>-boundary_ports</code> option of the corresponding <code>create_power_domain</code> command.

The domain definition indicates whether the domain is always on or switchable. For switchable domains, the definition also indicates how the domain is powered down.

The CPF macro model used in the design in <u>Figure 4-1</u> on page 117 has one power domain. All of its boundary pins belong to this domain. The power domain is further unswitched.

```
create_power_domain -name RAM_DEFAULT -default \
    -boundary_ports {A* D* CLK CEN WEN Q*}
```

If the pin is an input pin, the power domain driven by the pin is the specified domain. If the pin is an output pin, the domain driving the pin is the specified power domain.

4. The CPF macro model also specifies for each of its power domains the boundary ports that provide the power supply to that domain.

For the CPF macro model used in the design in Figure 4-1 on page 117:

```
update_power_domain -name RAM_DEFAULT -primary_power_net VDD \
    -primary_ground_net VSS
```

Hierarchical Flow

5. If the macro cell has switchable power domains, its CPF macro model can contain isolation rules.

A complete isolation rule in a macro cell describes the isolation logic implemented inside the macro cell. Complete rules contain the isolation condition and isolation output. Complete rules are optional but can be specified for documentation purposes.

IP blocks can have special requirements for input ports. For example, when the domains driving these input ports are switched off, the signals must be held at specific values. For these signals, no isolation condition can be specified because the IP developer has no knowledge of how the IP will be used.

For such cases, isolation rules without enable conditions (neither -isolation_condition nor -no_condition option specified) are specified. Such isolation rules are called *incomplete* isolation rules.

For the CPF macro model used in the design in <u>Figure 4-1</u> on page 117, an incomplete isolation rule specifies the required isolation value at its inputs when the driving domain is powered down.

```
create_isolation_rule -name RAM_iso -to RAM_DEFAULT -isolation_output low \ \ -pins \ \{A*\ D*\ CLK\ CEN\ WEN\}
```

Note: For more information on how incomplete isolation rules are addressed when the macro is used, refer to "Resolve the precedence of the top-level and block-level rules" in Instantiating the Macro Cell in the Top-Level CPF and Loading the Corresponding CPF.

6. If the macro cell has switchable power domains, the CPF macro model can contain state retention rules.

```
For the macro cell in <u>Figure 4-1</u> on page 117, one state retention rule is defined. create_state_retention_rule -name RAM_ret -instances mem* -save_edge !CLK In this example, the memory array register names start with mem.
```

7. If the macro cell contains several switchable power domains, the CPF macro model can list its power modes. This allows the verification tools to check consistency between the modes defined at the top-level and in the macro to ensure that the macro cell is correctly integrated in the design.



Because a macro model is already implemented, there is no need to include a CPF file with technology-related information.

For more information on macro modeling, refer to <u>Modeling a Macro Cell</u> in the *Common Power Format Language Reference*.

Hierarchical Flow

Understanding the CPF file of the Soft IP

As opposed to a macro cell, the power intent of a soft IP still needs to be implemented. A soft IP can therefore be seen as an independent small design.

For the complete CPF of the soft block used in this design, refer to <u>Soft IP CPF — tdsp.cpf</u>.

1. The definition of a soft IP starts with a <u>set design</u> command that specifies the name of the module that represents the soft IP.

If the soft IP requires *virtual* ports (additional ports that do not exist in the definition of this module before implementation) for the control signals of the low power logic such as isolation logic, state-retention logic, and so on, these ports are specified with the -ports option of the <u>set_design</u> command.

For the soft block used in the design in <u>Figure 4-1</u> on page 117:

```
set_design tdsp_core -ports { retention_save retention_restore }
```

The retention_save and retention_restore ports are the virtual ports of the soft IP used in this design.

- 2. The definition ends with an end design command.
- **3.** All commands between set_design and end_design describe the internal power intent of the soft IP.

The constructs used depend on the low power technique used. For more information, see the <u>Chapter 2</u>, "<u>Creating a CPF File.</u>"

Hierarchical Flow

Creating the CPF File for the Top-Level Design

The CPF of the top-level design contains the following information:

- Definition of the power domains at the top level
- Definition of the nominal conditions at the top level
- Definition of the power modes at the top level
- Association of the library sets with the nominal conditions
- Instantiating the Macro Cell in the Top-Level CPF and Loading the Corresponding CPF
- Instantiating a Soft IP in the Top-Level CPF and Loading the Corresponding CPF
- Specification of the rules at the top-level
- Specification of timing constraints, power targets, switching activities per mode
- Declaration of the power and ground nets
- Declaration of the global connections
- Addition of implementation information to the rules
- Specification of the operating corners
- Specification of the analysis views

The steps shown in **bold** are unique to the hierarchical flow and will be further explained here.

For the complete CPF of the top-level design in Figure 4-1 on page 117, refer to Top CPF File.

Hierarchical Flow

Instantiating the Macro Cell in the Top-Level CPF and Loading the Corresponding CPF

When you instantiate a macro cell in the design, you must indicate which CPF macro model applies to the specified instance. This can be done in one of the following ways:

■ First load the CPF macro model, then use the <u>set instance</u> command with the -model option to reference the CPF macro model.

The CPF macro model can be included

- Explicitly (see <u>Example 4-1</u> on page 137)
- ☐ Implicitly using the <u>include</u> command (see <u>Example 4-2</u> on page 137)
- Use the set_instance command without the -model option, immediately followed by the CPF macro model.

The CPF macro model can be included

- □ Explicitly (see Example 4-3 on page 138)
- ☐ Implicitly using the <u>include</u> command (see <u>Example 4-4</u> on page 138)

Example 4-1 Explicit CPF Specification of Macro Loaded before Macro Instantiation

Example 4-2 Implicit CPF Specification of Macro Loaded before Macro Instantiation

Hierarchical Flow

Example 4-3 Explicit CPF Specification of Macro Loaded after Macro Instantiation

```
set_design dtmf_chip
create_power_domain ...
create_nominal_condition ...
update_nominal_condition ...
create_power_mode...
set_instance DTMF_INST/RAM_128x16_TEST_INST1/RAM_128x16_INST \
        -domain_mapping { {RAM_DEFAULT PDtdsp} } }
set_macro_model ram_256x16A
...
end_macro_model
...
end_design
```

Example 4-4 Implicit CPF Specification of Macro Loaded after Macro Instantiation

```
set_design dtmf_chip
create_power_domain ...
create_nominal_condition ...
update_nominal_condition ...
create_power_mode...
set_instance DTMF_INST/RAM_128x16_TEST_INST1/RAM_128x16_INST \
        -domain_mapping { {RAM_DEFAULT PDtdsp} } }
include ram.cpf
...
end_design
```

When you instantiate a macro cell in the design, you must also indicate how the domains of the CPF macro model must be mapped to the domains of the parent level using the -domain_mapping option of the set_instance command. For the example in <u>Figure 4-1</u> on page 117:

```
set_instance DTMF_INST/RAM_128x16_TEST_INST1/RAM_128x16_INST \
    -domain_mapping { {RAM_DEFAULT PDtdsp} }
```

The ram_256x16A model contains one power domain, RAM_DEFAULT. The set_instance command indicates that this domain must be mapped to the PDtdsp domain.

By mapping the domains, the tools will be able to

Connect the primary power and ground pins of the block-level domain to the primary power and ground nets of the corresponding domain specified at the top level.

The primary power and ground pins of power domain RAM_DEFAULT are VDD and VSS, while the primary nets of power domain PDtdsp are VDDL_sw and VSS. This implies that VDD will be connected to VDDL_sw, while the VSS pin will be connected to the VSS net.

Hierarchical Flow

- Merge the elements of each block-level domain into the corresponding top-level domain.

 In this design, the RAM_128x16_TEST_INST1 instance becomes a leaf instance in the PDtdsp domain.
- Merge the power modes of the CPF macro model with the power modes of the top level.

 In this design, the ram_256x16A model does not have a power mode defined, it will have the same power modes as the top-level domain PDtdsp.
- Resolve the precedence of the power domain settings.

Power domain settings are also referred to as domain attributes. For more information, refer to <u>Handling Domain Attributes after Domain Mapping</u> in the *Common Power Format Language Reference*. In this design there are no domain attributes to be resolved.

Resolve the precedence of the top-level and block-level rules.

The CPF macro model used in this design has a state retention rule.

```
create_state_retention_rule -name RAM_ret -instances mem* -save_edge !CLK
```

The top-level domain PDtdsp has no state retention rules. Even if the domain did have a rule, the block-level rule would still overwrite the top-level rule.

The CPF macro model used in this design also has an isolation rule.

```
create_isolation_rule -name RAM_iso -isolation_output low -to RAM_DEFAULT
   -pins {A* D* CLK CEN WEN}
```

The isolation rule RAM_iso is an incomplete rule and applies to the net segments that drive logic in the RAM_DEFAULT domain. It also requires that the output value of the isolation gates be low when isolation is in effect. The rule specifies the isolation requirements at the selected ports of the macro and this information can be used by the top-level CPF to generate the correct isolation rule at this port.

The tools will check the power domain to which the leaf level driver of a net selected by the rule belongs.

- If the leaf-level driver belongs to the same power domain as the port that the rule applies to, or an unswitched power domain, no isolation of that net segment is needed.
- □ If the leaf-level driver belongs to a different switchable power domain, the tools will check if that power domain has a default isolation condition. If a default isolation condition is defined, this condition can be used by the incomplete isolation rule to make the rule complete. If no default isolation condition was defined for the driving power domain, the incomplete isolation rule is treated as a design constraint.

In this design the macro cell is driven by leaf-level drivers in the PDdefault domain, which is a non-switchable domain.

Hierarchical Flow

Instantiating a Soft IP in the Top-Level CPF and Loading the Corresponding CPF

When you instantiate a soft block in the design, you must indicate which CPF specification applies to the specified instance. This can be done in one of the following ways:

■ First load the CPF specification, then use the <u>set instance</u> command with the -design option.

The CPF specification can be included

- □ Explicitly (see Example 4-5 on page 140)
- ☐ Implicitly using the <u>include</u> command (see <u>Example 4-6</u> on page 141)
- Use the set_instance command without the -design option, followed by the CPF specification.

The CPF specification can be included

- □ Explicitly (see Example 4-7 on page 141)
- ☐ Implicitly using the <u>include</u> command (see <u>Example 4-8</u> on page 141)

Example 4-5 Explicit CPF Specification of Soft IP Loaded before Soft IP Instantiation

Hierarchical Flow

Example 4-6 Implicit CPF Specification of Soft IP Loaded before Soft IP Instantiation

Example 4-7 Explicit CPF Specification of Soft IP Loaded after Soft IP Instantiation

Example 4-8 Implicit CPF Specification of Soft IP Loaded after Soft IP Instantiation

Hierarchical Flow

When you instantiate a soft block in the design, you must also indicate

- How the domains of the soft block must be mapped to the domains of the parent level using the -domain_mapping option of the set_instance command.
- How the virtual ports must be mapped to the parent-level drivers using the -port_mapping option of the set_instance command. If there are no virtual ports declared in the corresponding set_design command, this option is not needed.
- The values that must be assigned to the parameters declared in the block-level CPF using the -parameter_mapping option of the set_instance command. If there are no parameters declared in the corresponding set_design command, this option is not needed.

Note: For an example of parameter mapping, see the Examples for the <u>set instance</u> command.

The example in <u>Figure 4-1</u> on page 117 has two instances of the same soft block:

The tdsp_core model contains only one power domain, PDtdsp_block, which is mapped to the PDtdsp power domain for both instances. The two virtual ports for state retention control signals are connected to two output pins of the power control module (PM_INST).

The PDtdsp_block domain is an external switchable block-level domain, so it can be mapped into any type of domain at the top level. For other cases of domain mapping, refer to Handling Power Domain Mapping in the Common Power Format Language Reference.

By mapping the domains, the tools will be able to

- Connect the primary power and ground nets of the block-level domain to the primary power and ground nets of the corresponding domain specified at the top level.
 - The primary power and ground nets of power domain PDtdsp_block are VDDtdsp_SW and VSStdsp, while the primary nets of power domain PDtdsp are VDDL_sw and VSS. This implies that VDDtdsp_SW will be connected to VDDL_sw, while VSStdsp will be connected to the VSS net.
- Merge the elements of each block-level domain into the corresponding top-level domain.

Hierarchical Flow

Because the soft block In this design only has one block domain, the TDSP_CORE_INST0 and TDSP_CORE_INST1 instances becomes instances of the PDtdsp domain.

Merge the power modes of the soft IP with the power modes of the top level.

If all block-level domains are mapped into top-level domains, the top-level mode definitions also become the power modes for the soft block after the domain mapping.

In this design, the tdsp_core model has two power modes defined. Because it's one power domain maps to a top-level power domain, the soft block will have the same power modes as the top-level domain PDtdsp.

For more information, refer to <u>Handling Power Modes after Domain Mapping</u> in the Common Power Format Language Reference.

Resolve the precedence of the power domain settings.

Power domain settings are also referred to as domain attributes. For more information, refer to <u>Handling Domain Attributes after Domain Mapping</u> in the *Common Power Format Language Reference*. In this design there are no domain attributes to be resolved.

Resolve the precedence of the top-level and block-level rules.

The CPF specification of the soft IP used in this design has a state retention rule.

```
create_state_retention_rule -name PDtdsp_retention_rule \
    -domain PDtdsp_block -save_edge retention_save \
    -restore_edge {!retention_restore}
```

The top-level domain PDtdsp has no state retention rules. Even if the domain did have a rule, the block-level rule would still overwrite the top-level rule.

The CPF specification of the soft IP used in this design also has an isolation rule.

```
create_isolation_rule -name PDtdsp_iso -to PDtdsp_block -isolation_output low
```

The isolation rule PDtdsp_iso is an incomplete rule and applies to the net segments that drive logic in the PDtdsp_block domain. It also requires that the output value of the isolation gates be low when isolation is in effect. However to complete the rule, the isolation condition must be derived from the corresponding top-level domain.

The tools will check the power domain to which the leaf level driver of a net selected by the rule belongs.

- If the leaf-level driver belongs to the same power domain, no isolation of that net segment is needed.
- ☐ If the leaf-level driver belongs to a different switchable power domain, the tools will check if that power domain has a default isolation condition. If a default isolation condition is defined, this condition can be used by the incomplete isolation rule to

Hierarchical Flow

make the rule complete. If no default isolation condition was defined for the driving power domain, the incomplete isolation rule is treated as a design constraint.

In this design the IP instances, TDSP_CORE_INSTO and TDSP_CORE_INST1, are driven by leaf-level drivers in the PDdefault domain, which is a non-switchable domain.

For more information refer to <u>Precedence of Rules in the Hierarchical Flow</u> in the Common Power Format Language Reference

5

Modeling Special Cells

- Modeling Level Shifters on page 146
- Modeling Isolation Cells on page 161
- Modeling State Retention Cells on page 177
- Modeling Power Switch Cells on page 184
- Modeling Pad Cells on page 193
- Modeling a Voltage Regulator on page 198

Modeling Special Cells

Modeling Level Shifters

- Types of Level Shifters on page 146
- Modeling a Power Level Shifter on page 147
- Modeling a Ground Level Shifter on page 148
- Modeling a Power and Ground Level Shifter on page 149
- Modeling an Enabled Level Shifter on page 151
- Modeling a Bypass Level Shifter on page 157
- Modeling a Multi-Stage Level Shifter on page 158
- Modeling a Multi-bit Level Shifter Cell on page 160

Types of Level Shifters

To pass signals between portions of the design that operate on different power or ground voltages, level shifters are needed.

CPF can describe many different types of level shifters. The following is a list of the most typical level shifters:

- power level shifters—pass signals between portions of the design that operate on different power voltages but the same ground voltages
- ground level shifters—pass signals between portions of the design that operate on different ground voltages but the same power voltages
- power and ground level shifters—pass signals between portions of the design that operate on different power and ground voltages
- enabled level shifters—level shifters with an enable pin which allows them to be used as isolation cell as well
- bypass level shifters—a level shifter whose level shifting functionality can be bypassed under certain conditions

In addition, CPF can model multi-stage and multi-bit level shifters.

All types of level shifters are defined using the <u>define level shifter cell</u> command. The following sections indicate which command options to use for each type.

Modeling Special Cells


Modeling a Power Level Shifter

To model a power level shifter use the define_level_shifter_cell command with the following options.

```
define_level_shifter_cell
    -cells cell_list [-library_set library_set]
    [-always_on_pins pin_list]
    -input_voltage_range {voltage_list | voltage_range_list}
    -output_voltage_range {voltage_list | voltage_range_list}
    [-direction {up|down|bidir}]
    [-input_power_pin LEF_power_pin] [-output_power_pin LEF_power_pin]
    |-ground LEF_ground_pin}
    [-valid_location {to | from | either}]
```

Figure 5-1 shows a power domain at 0.8V and one at 1.2V. The ground voltage for both domains is 0.0V. In this case, for data signals going from the domain at 0.8V to the domain at 1.2V a power level shifter with direction up is needed, while for data signals going from the domain at 1.2V to the domain at 0.8V a power level shifter with direction down is needed.

Figure 5-1 Power Level Shifter

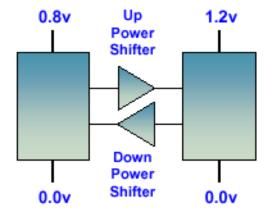

Sample commands to model these power level shifters are:

```
define_level_shifter_cell -cells up_shift \
    -input_voltage_range 0.8:1.0 -output_voltage_range 1.0:1.2 \
    -input_power_pin VDD_IN -output_power_pin VDD_OUT -ground VSS_IN \
    -direction up -valid_location from

define_level_shifter_cell -cells down_shift \
    -input_voltage_range 1.0:1.2 -output_voltage_range 0.8:1.0 \
    -input_power_pin VDD_IN -output_power_pin VDD_OUT -ground VSS_IN \
    -direction down -valid_location from
```


Modeling a Ground Level Shifter

To model ground level shifter use the define_level_shifter_cell command with the following options.

```
define_level_shifter_cell
    -cells cell_list [-library_set library_set]
    [-always_on_pins pin_list]
    -ground_input_voltage_range {voltage_list | voltage_range_list}
    -ground_output_voltage_range {voltage_list | voltage_range_list}
    [-direction {up|down|bidir}]
    [-input_ground_pin LEF_power_pin] [-output_ground_pin LEF_power_pin]
    [-power LEF_ground_pin]
    [-valid location {to | from | either}]
```

The two power domains in Figure 5-2 have the same power supply 1.2V. However, the ground voltage for the first domain is at 0.0V, while the ground voltage for the second domain is at 0.5V. For data signals going from the domain with ground voltage 0.0V to the domain with ground voltage 0.5V a ground level shifter with direction up is required. For data signals going from the domain with ground voltage 0.5V to the domain with ground voltage 0.0V a ground level shifter with direction down is required.

Figure 5-2 Ground Level Shifter

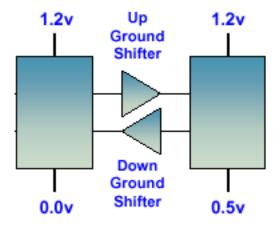

Sample commands to model these ground level shifters are:

```
define_level_shifter_cell -cells up_shift \
    -ground_input_voltage_range 0.0:0.1 -ground_output_voltage_range 0.4:0.5 \
    -input_ground_pin VSS_IN -output_ground_pin VSS_OUT -power VDD_IN \
    -direction up -valid_location from

define_level_shifter_cell -cells down_shift \
    -ground_input_voltage_range 0.4:0.5 -ground_output_voltage_range 0.0:0.1 \
    -input_ground_pin VSS_IN -output_ground_pin VDD_OUT -power VDD_IN \
    -direction down -valid_location from
```


Modeling a Power and Ground Level Shifter

To model a power and ground level shifter, use two define_level_shifter_cell commands: one which defines the power level shifting and one which defines the ground level shifting. Both commands must point to the same cell(s), and must have the same value for the -valid location option.

```
define_level_shifter_cell
     -cells cell_list [-library_set library_set]
     [-always_on_pins pin_list]
    -input_voltage_range {voltage_list | voltage_range_list}
     -output_voltage_range {voltage_list | voltage_range_list}
     [-direction {up|down|bidir}]
     [-input_power_pin LEF_power_pin] [-output_power_pin LEF_power_pin]
     [-ground LEF ground pin]
     [-valid_location {to | from | either}]
define_level_shifter_cell
     -cells cell_list [-library_set library_set]
     [-always_on_pins pin_list]
     -ground_input_voltage_range {voltage_list | voltage_range_list}
     -ground_output_voltage_range {voltage_list | voltage_range_list}
     [-direction {up|down|bidir}]
     [-input_ground_pin LEF_power_pin] [-output_ground_pin LEF_power_pin]
     [-power LEF_ground_pin]
     [-valid_location {to | from | either}]
```

The two power domains in Figure <u>5-3</u> have different power and ground voltages. Going from domain_1 to the domain_2 requires an power level shifter in the up direction and a ground level shifter in the down direction. Going from domain_2 to domain_1 requires a power level shifter in the down direction and a ground level shifter in the up direction.

Figure 5-3 Power and Ground Level Shifter

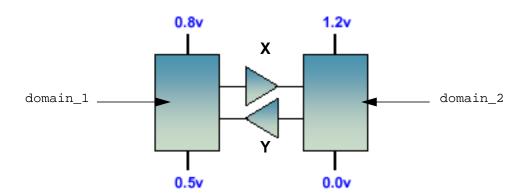

Modeling Special Cells

The following commands models the power and ground level shifter to go from domain_1 to domain_2:

```
define_level_shifter_cell -cells X \
    -input_voltage_range 0.8:1.0 -output_voltage_range 1.0:1.2 \
    -input_power_pin VDD_IN -output_power_pin VDD_OUT -ground VSS_IN \
    -direction up -valid_location from

define_level_shifter_cell -cells X
    -ground_input_voltage_range 0.4:0.5 -ground_output_voltage_range 0.0:0.1 \
    -input_ground_pin VSS_IN -output_ground_pin VSS_OUT -power VDD_OUT \
    -direction down -valid_location from
```

Both commands refer to the same cell, use the same valid location and have opposite directions for the power and ground level shifting.

The following commands models the power and ground level shift to go from domain_2 to domain 1:

```
define_level_shifter_cell -cells Y \
    -input_voltage_range 1.0:1.2 -output_voltage_range 0.8:1.0 \
    -input_power_pin VDD_OUT -output_power_pin VDD_IN -ground VSS_OUT \
    -direction down -valid_location to

define_level_shifter_cell -cells Y \
    -ground_input_voltage_range 0.0:0.1 -ground_output_voltage_range 0.4:0.5 \
    -input_ground_pin VSS_OUT -output_ground_pin VSS_OUT -power VDD_OUT \
    -direction up -valid_location to
```

Modeling Special Cells

Modeling an Enabled Level Shifter

To model a level shifter that can also be used for isolation purposes, use the define_level_shifter_cell command with the -enable option.

This type of cell uses an enable pin to control the voltage shifting. Typically the enable pin is related to the output supplies of the level shifter. In other words, the enable control needs to have the same voltage as the to domain. If both domains are powered on, you can tie the enable to be always active and it works as a level shifter.



To model an isolation-level-shifter combo cell, see <u>Modeling an Isolation-Level Shifter Combo Cell</u> on page 170.

Modeling an Enabled Power Level Shifter

Assume that the power level shifter shown in Figure 5-1 on page 147 also has an enable pin to enable the level-shifting functionality. If the enable signal is inactive for the level shifting purposes, it protects the level shifter cell when the input power supply is powered down and causes the output to be a specific logic value determined by its functionality. However, the driver of the level shifter data pin is not protected. For such a cell to be used for isolation purposes when the driving domain is switched off using a header power switch, its input power pin must be connected to the primary power net of the driving domain. In this case the definition should be adjusted as follows:

```
define_level_shifter_cell -cells up_shift \
    -input_voltage_range 0.8:1.0 -output_voltage_range 1.0:1.2 \
    -input_power_pin VDD_IN -output_power_pin VDD_OUT -ground VSS_IN \
    -direction up -valid_location from \
    -enable en
```

Where en is the enable pin that controls the power shifting. Typically the enable pin is related to the output supplies of the level shifter.

Modeling Special Cells

Modeling an Enabled Ground Level Shifter

Assume that the ground level shifter shown in <u>Figure 5-2</u> on page 148 also has an enable pin to enable the level-shifting functionality. If the enable signal is inactive for the level shifting purposes, it protects the level shifter cell when the input ground supply is shut off and causes the output to be a specific logic value determined by its functionality. However, the driver of the level shifter data pin is not protected. For such a cell to be used for isolation purposes when the driving domain is switched off using a footer ground switch, its input ground pin must be connected to the primary ground net of the driving domain. In this case the definition should be adjusted as follows:

```
define_level_shifter_cell -cells down_shift \
    -ground_input_voltage_range 0.4:0.5 -ground_output_voltage_range 0.0:0.1 \
    -input_ground_pin VSS_IN -output_ground_pin VDD_OUT -power VDD_IN \
    -direction down -valid_location from \
    -enable en
```

Where en is the enable pin that controls the ground shifting. Typically the enable pin is related to the output supplies of the level shifter.

Modeling an Enabled Power and Ground Level Shifter

For power and ground level shifter cells, the enable pin needs to be specified with the definition of the power (ground) level shifter depending on whether the pin needs to control the power (ground) shifting. The layout of the cell determines whether it can be used in a domain that is power-switched (using a header switch cell) or ground-switched (using a footer switch cell). This section will illustrate a couple of examples.

In all examples, data signal A is driven by a power domain whose power and ground supply connects to VDD_IN and VSS_IN, respectively. The data output signal Y feeds in to a domain whose power and ground supply connects to VDD_OUT and VSS_OUT, respectively. This requires a power and ground level shifter cell. In the following examples, the following relations apply:

```
VSS_OUT < VSS_IN
VDD OUT > VDD IN
```


In addition, because the power domain driving A can be switched off, the level shifter must also be an enabled shifter. The required type of the enabled power and ground shifter will depend on whether the power domain is *power* or *ground* switched and on where the enabling logic gets is power and ground supply from.

Modeling Special Cells

Example 1

The type of level shifter shown in Figure <u>5-4</u>, can be used when the power domain driving signal A is ground switched. The power and ground of the enabling logic are connected to VDD_OUT and VSS_OUT, respectively.

Figure 5-4 Type 1: Ground Shifter in Input Stage and Enabling Logic in Output Stage

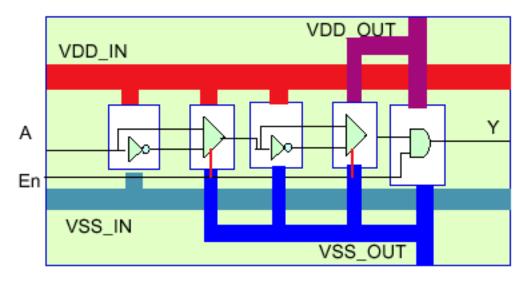

The following CPF commands describe this type 1 power and ground enabled level shifter:

```
define_level_shifter_cell -cells X \
    -ground_input_voltage_range 0.2:0.3 -ground_output_voltage_range 0.1:0.2 \
    -input_ground_pin VSS_IN -output_ground_pin VSS_OUT -power VDD_IN \
    -direction down -valid_location from


define_level_shifter_cell -cells X \
    -input_voltage_range 0.8:1.0 -output_voltage_range 1.0:1.2 \
    -input_power_pin VDD_IN -output_power_pin VDD_OUT -ground VSS_OUT \
    -direction up -valid_location from -enable en
```

Modeling Special Cells

Example 2

The type of level shifter shown in Figure <u>5-5</u>, can be used when the power domain of signal A is power switched. The power and ground of the enabling logic are connected to VDD_OUT and VSS_OUT, respectively.

Figure 5-5 Type 2: Power Shifter in Input Stage and Enable Logic in Output Stage

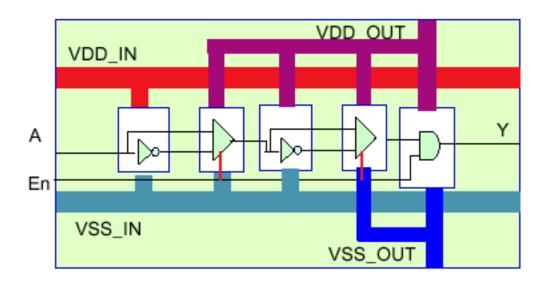

The following CPF commands describe this type 2 of power and ground enabled level shifter:

```
define_level_shifter_cell -cells X \
    -ground_input_voltage_range 0.2:0.3 -ground_output_voltage_range 0.1:0.2 \
    -input_ground_pin VSS_IN -output_ground_pin VSS_OUT -power VDD_OUT \
    -direction down -valid_location from -enable en


define_level_shifter_cell -cells X \
    -input_voltage_range 0.8:1.0 -output_voltage_range 1.0:1.2 \
    -input_power_pin VDD_IN -output_power_pin VDD_OUT -ground VSS_IN \
    -direction up -valid location from
```

Modeling Special Cells

Example 3

The type of level shifter shown in Figure <u>5-6</u>, can be used when the power domain is ground switched. The power and ground of the enabling logic are connected to VDD_IN and VSS_OUT, respectively.

Figure 5-6 Type 3: Ground Shifter and Enable Logic in Input Stage

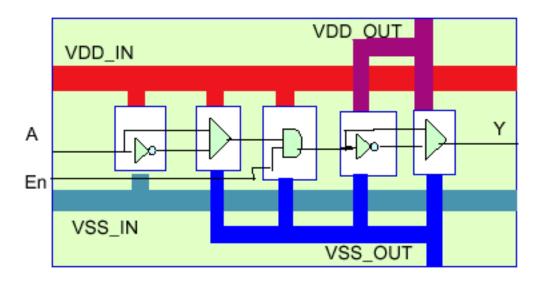

The following CPF commands describe this type 3 of power and ground enabled level shifter:

```
define_level_shifter_cell -cells X \
    -ground_input_voltage_range 0.2:0.3 -ground_output_voltage_range 0.1:0.2 \
    -input_ground_pin VSS_IN -output_ground_pin VSS_OUT -power VDD_IN \
    -direction down -valid_location from -enable en


define_level_shifter_cell -cells X \
    -input_voltage_range 0.8:1.0 -output_voltage_range 1.0:1.2 \
    -input_power_pin VDD_IN -output_power_pin VDD_OUT -ground VSS_OUT \
    -direction up -valid location from
```

Modeling Special Cells

Example 4

The type of level shifter shown in Figure <u>5-7</u>, can be used when the power domain is power switched. The power and ground of the enabling logic are connected to VDD_OUT and VSS_IN, respectively.

Figure 5-7 Type 4: Power Shifter and Enable Logic in Input Stage

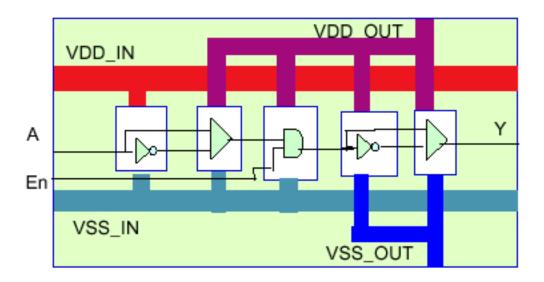

The following CPF commands describe this type 4 of power and ground enabled level shifter:

```
define_level_shifter_cell -cells X \
    -ground_input_voltage_range 0.2:0.3 -ground_output_voltage_range 0.1:0.2 \
    -input_ground_pin VSS_IN -output_ground_pin VSS_OUT -power VDD_OUT \
    -direction down -valid_location from

define_level_shifter_cell -cells X \
    -input_voltage_range 0.8:1.0 -output_voltage_range 1.0:1.2 \
    -input_power_pin VDD_IN -output_power_pin VDD_OUT -ground VSS_IN \
    -direction up -valid location from -enable en
```


Modeling Special Cells

Modeling a Bypass Level Shifter

To model a level shifter whose level shifting functionality can be bypassed under certain conditions, use the define_level_shifter_cell command with the -bypass_enable option.

An example of such a cell is shown in Figure 5-8. When the bp_enable signal is true, the level shifting functionality is bypassed and signal OUT will be coming from the top buffer.

Figure 5-8 Bypass Level Shifter Cell

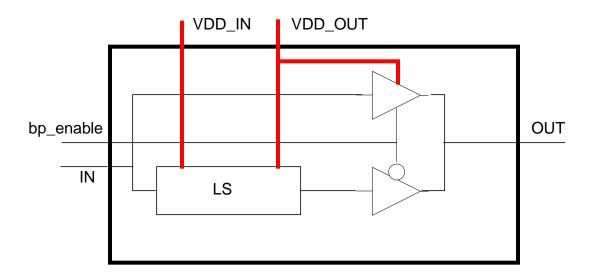

The following CPF command can be used to describe a bypass level shifter:

```
define_level_shifter_cell -cells up_shift \
    -input_voltage_range 0.8:1.0 -output_voltage_range 1.0:1.2 \
    -input_power_pin VDD_IN -output_power_pin VDD_OUT -ground VSS \
    -direction up -valid_location from -bypass_enable bp_enable
```

To apply such a cell for a specific level shifter rule, you need to use the -bypass_condition option of the create_level_shifter_rule command to indicate the signal for the bypass enable pin for the cell.

Modeling Special Cells

Modeling a Multi-Stage Level Shifter


When the voltage difference between the driving (or originating) and receiving (or destination) power domains is large, multiple level shifters or a single multi-stage level shifter might be required.

To model a single multi-stage level shifter cell, define the level-shifter cell with the -multi_stage option in the define_level_shifter_cell command to identify the stage of the multi-stage level shifter to which this definition (command) applies.

For a level shifter cell with N stages, N definitions must be specified for the same cell. Each definition must associate a number from 1 to N for this option to indicate the corresponding stage of this definition. A definition must not have the same stage defined twice.

An example of a single multi-stage level-shifter cell is shown in Figure <u>5-9</u>.

Figure 5-9 Multi-Stage Level Shifter

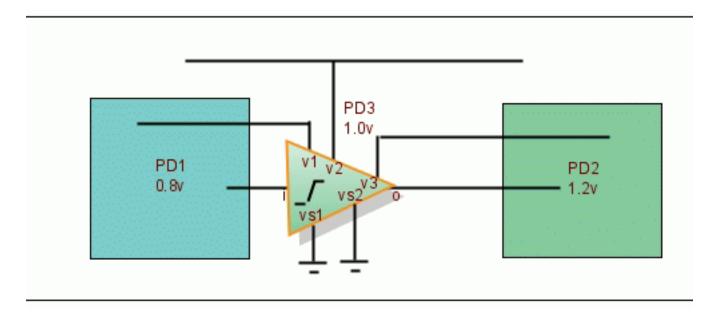

The following CPF commands can be used to describe the single level shifter cell shown in Figure <u>5-9</u>.

```
define_level_shifter_cell -cells fooA -multi_stage 1 -input_power_pin V1 \
-output_power_pin V2 -input_ground_pin VS1 -output_ground_pin VS2
define_level_shifter_cell -cells fooA -multi_stage 2 -input_power_pin V2 \
-input_ground_pin VS2 -output_voltage_pin V3 -output_ground_pin VS2
```

Modeling Special Cells

When you define the level shifter rule, you can indicate in the update_level_shifter_rules command whether to use a single multi-stage level-shifter cell or an ordered list of level-shifter cells:

- To use a single multi-stage level-shifter cell you must use the -through option to specify the subsequent domains for the multi-stage level shifting between the first domain (specified with -from in the create_level_shifter_rule command) and the last domain (specified with -to in the create_level_shifter_rule command).
 - In this case, the cell must have been defined with the <code>-multi_stage</code> option in the define level shifter cell command.
- To use multiple cells, you must specify an ordered list of N cell lists for the -cells option, where N is the number of stages in the level-shifting. Each list contains the cells appropriate for its stage.

Modeling Special Cells

Modeling a Multi-bit Level Shifter Cell


A multi-bit level shifter cell has multiple pairs of input and output pins with each pair serving as a single bit level shifter. An example is shown in Figure <u>5-10</u>.

For the following multi-bit level shifter cells, there is no difference in modeling such a multi-bit cell with respect to the single bit level shifter cell:

- a multi-bit simple level shifter without an enable pin
- a multi-bit enable level shifter with the same enable pin for all bits

If the cell has different enable pins for the input and output pairs, you must model the cell using the -pin_groups option of the define_level_shifter_cell command.

Figure 5-10 Multi-Bit Level Shifter

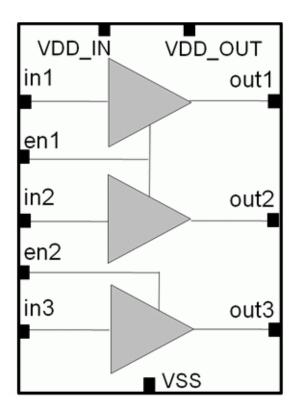

The following CPF command can be used to describe the multi-bit level shifter cell shown in Figure 5-10.

```
define_level_shifter_cell -cells multi_bit_en \
    -input_voltage_range 0.8:1.0 -output_voltage_range 1.0:1.2 \
    -input_power_pin VDD_IN -output_power_pin VDD_OUT -ground VSS \
    -direction up -valid_location from \
    -pin_groups {{in1 out1 en1} {in2 out2 en1} {in3 out3 en2}}
```

Note: -pin groups is a new option introduced in the SI2 CPF 2.0 version.

Modeling Special Cells

Modeling Isolation Cells

- Types of Isolation Cells on page 162
- Modeling an Isolation Cell to be Placed in the Unswitched Domain on page 163
- Modeling An Isolation Cell for Ground Switchable Domain on page 164
- Modeling An Isolation Cell for Power Switchable Domain on page 165
- Modeling An Isolation Cell for Power and Ground Switchable Domains on page 166
- Modeling An Isolation Cells that Can Be Placed in Any Domain on page 167
- Modeling An Isolation Cells that Can Be Placed in Any Domain on page 167
- Modeling An Isolation Clamp Cell on page 168
- Modeling an Isolation-Level Shifter Combo Cell on page 170
- Modeling an Isolation Cell with Multiple Enable Pins on page 171
- Modeling an Isolation Latch with a Set or Reset Pin on page 173
- Modeling a Multi-bit Isolation Cell on page 175
- Modeling a Complex Isolation Cell on page 176

Modeling Special Cells

Types of Isolation Cells

Isolation logic is required when the leaf drivers and leaf loads of a net are in power domains that are not on and off at the same time, or because it is part of the design intent. CPF can describe many different types of isolation cells. Below is a list of the most typical isolation cells:

- Isolation cell to be placed in the unswitched domain
- Isolation cell to be used in a ground switchable domain
- Isolation cell to be used in a power switchable domain
- Isolation cells to be used in a a power or ground switchable domain
- Isolation cells without followpins that can be placed in any domain
- Isolation cells without an enable pin
- Isolation clamp cell
- Isolation-level shifter combo cell

All types of isolation cells are defined using the <u>define isolation cell</u> command. The following sections indicate which command options to use for each type.

Modeling Special Cells


Modeling an Isolation Cell to be Placed in the Unswitched Domain

To model an isolation cell to be placed in an unswitched domain, use the define_isolation_cell command with the following options.

```
define_isolation_cell
    -cells cell_list [-library_set library_set]
    -power LEF_power_pin -ground LEF_ground_pin
    -valid_location on
    { -enable pin | -no_enable {high|low|hold} } [-non_dedicated]
```

Figure 5-11 shows an AND cell that can be used for isolation purposes.

Figure 5-11 Dedicated Isolation Cell in Unswitched Domain

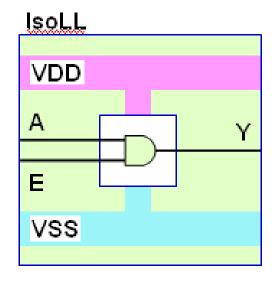

The following command models the isolation cell in Figure 5-11:

```
define_isolation_cell \
    -cells IsoLL \
    -power VDD -ground VSS \
    -enable E \
    -valid_location on
```

Note: If you also want to use the cell in regular logic, you must add the <code>-non_dedicated</code> option. Non-dedicated cells can typically only be placed in the unswitched domain (<code>-valid_location on</code>).


Modeling An Isolation Cell for Ground Switchable Domain

To model an isolation cell to be used in a ground switchable domain, use the define_isolation_cell command with the following options.

```
define_isolation_cell
    -cells cell_list [-library_set library_set]
    [-always_on_pins pin_list]
    -ground_switchable LEF_ground_pin
    -power LEF_power_pin -ground LEF_ground_pin
    [-valid_location { from | to | on | off}]
    { -enable pin | -no_enable {high|low|hold} } [-non_dedicated]
```

Figure <u>5-12</u> shows an AND cell that has the path from power to ground cut off on the ground side. This AND cell can only be used for isolation.

Figure 5-12 Dedicated Ground Switchable Isolation Cell

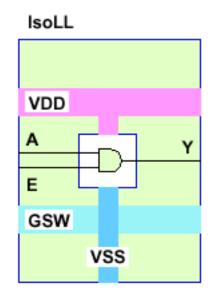

The following command models the isolation cell in Figure <u>5-12</u>:

```
define_isolation_cell \
    -cells IsoLL \
    -ground_switchable GSW \
    -power VDD -ground VSS \
    -enable E \
    -valid_location from
```

Modeling Special Cells


Modeling An Isolation Cell for Power Switchable Domain

To model an isolation cell to be used in a power switchable domain, use the define_isolation_cell command with the following options.

```
define_isolation_cell
    -cells cell_list [-library_set library_set]
    [-always_on_pins pin_list]
    -power_switchable LEF_power_pin
    -power LEF_power_pin -ground LEF_ground_pin
    [-valid_location { from | to | on | off}]
    { -enable pin | -no_enable {high|low|hold} }
```

Figure <u>5-13</u> shows an AND cell that has the path from power to ground cut off on the power side. This AND cell can only be used for isolation.

Figure 5-13 Dedicated Power Switchable Isolation Cell

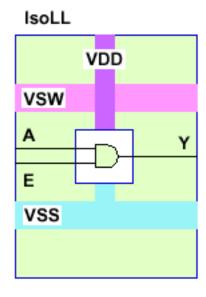

The following command models the isolation cell in Figure <u>5-13</u>:

```
define_isolation_cell \
    -cells IsoLL \
    -power_switchable VSW \
    -power VDD -ground VSS \
    -enable E \
    -valid_location from
```

Modeling Special Cells


Modeling An Isolation Cell for Power and Ground Switchable Domains

To model an isolation cell to be used in a power and ground switchable domain, use the define_isolation_cell command with the following options.

```
define_isolation_cell
    -cells cell_list [-library_set library_set]
    [-always_on_pins pin_list]
    -power_switchable LEF_power_pin -ground_switchable LEF_ground_pin
    -power LEF_power_pin -ground LEF_ground_pin
    [-valid_location { from | to | on | off}]
    { -enable pin | -no_enable {high|low|hold} } }
```

Figure <u>5-14</u> shows an AND cell that has the path from power to ground cut off on the power and ground sides. This AND cell can only be used for isolation.

Figure 5-14 Dedicated Power and Ground Switchable Isolation Cell

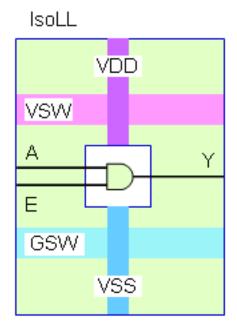

The following command models the isolation cell in Figure <u>5-14</u>:

```
define_isolation_cell \
    -cells IsoLL \
    -power_switchable VSW -ground_switchable GSW \
    -power VDD -ground VSS \
    -enable E \
    -valid_location from
```

Modeling Special Cells

Modeling An Isolation Cells that Can Be Placed in Any Domain

To model an isolation cell to be used in any domain, use the define_isolation_cell command with the following options.

```
define_isolation_cell
    -cells cell_list [-library_set library_set]
    [-always_on_pins pin_list]
    -power LEF_power_pin -ground LEF_ground_pin
    -valid_location any
    { -enable pin | -no_enable {high|low|hold} }
    [-non dedicated]
```

Modeling An Isolation Cell Without Enable Pin

There are special isolation cells which do not have an enable pin but still can clamp output to a logic value when primary power supply is switched off. To model such a cell, use define_isolation_cell command with the following options.

```
define_isolation_cell
    -cells cell_list [-library_set library_set]
    [-always_on_pins pin_list]
    [-power_switchable LEF_power_pin] [-ground_switchable LEF_ground_pin]
    [-power LEF_power_pin] [-ground LEF_ground_pin]
    [-valid_location { from | to | on | off | any}]
    -no_enable {high|low|hold}
```


Note: You can only infer such cells in a design by specifying the create_isolation_rule command with -no_condition option.

Modeling Special Cells

Modeling An Isolation Clamp Cell

An isolation clamp high cell is a simple PMOS transistor with the gate input being used as the enable pin. When its driver is switched off by a ground switch and the enable pin has value 0, the connected net can be clamped to a logic high value as shown in Figure 5-15.



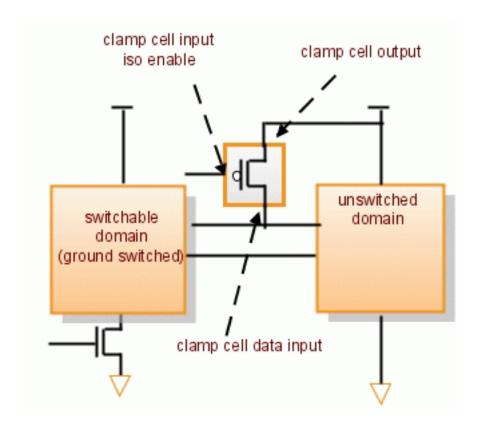


To model an isolation clamp high cell, use the define_isolation_cell command with the following options.

```
define_isolation_cell
   -cells cell_list [-library_set library_set]
   [-always_on_pins pin_list]
   -power LEF_power_pin
   [-valid_location { from | to | on | off | any}]
   -enable pin -clamp high
   [-non_dedicated]
```

An isolation clamp low cell is a simple NMOS transistor with the gate input being used as the enable pin. When its driver is switched off by a power switch and the enable pin has value 1, the connected net can be clamped to a logic low value as shown in Figure 5-16 on page 169.

Modeling Special Cells

Figure 5-16 Isolation clamp low cell

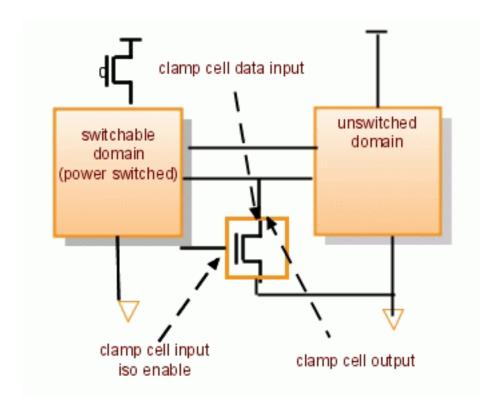

To model an isolation clamp low cell, use the define_isolation_cell command with the following options.

```
define_isolation_cell
    -cells cell_list [-library_set library_set]
    [-always_on_pins pin_list]
    -ground LEF_ground_pin
    [-valid_location { from | to | on | off | any}]
    -enable pin -clamp low
    [-non_dedicated]
```

Due to its special connectivity requirement, to apply such a power or ground clamp cell for a specific isolation rule, you need to use -isolation_output option with either the clamp_high or clamp_low value in the create_isolation_rule command.

Modeling Special Cells

Modeling an Isolation-Level Shifter Combo Cell

A combo cell isolates or protects the input when the driving logic is powered down and generates an output isolation value at the same voltage as the output supply of the cell. Typically the enable pin is related to the input supplies of the cell.

The most common combo cells are the isolation cells with high to low shifting capabilities.

To model a combo cell you need two commands. For example to model an isolation cell for power switchable domain that is also a power level shifter, use the following definitions:

```
define isolation cell
    -cells cell_list [-library_set library_set]
     [-always on pins pin list]
    -power_switchable LEF_power_pin
     -power LEF power pin -ground LEF ground pin
     [-valid location {to | from}]
     { -enable pin | -no enable {high|low|hold} } [-non dedicated]
define level shifter cell
     -cells cell_list [-library_set library_set]
     [-always on pins pin list]
    -input_voltage_range {voltage | voltage_range}
    -output_voltage_range {voltage | voltage_range}
     -direction down
    [-input_power_pin LEF_power_pin] [-output_power_pin LEF_power_pin]
     [-ground LEF ground pin]
     [-valid_location {to | from}]
```

Note: You cannot use the <code>-enable</code> option in the <code>define_level_shifter_cell</code> definition. In addition, you must specify the same value for the <code>-valid_location</code> option in both commands.



If you want to model an enabled level shifter, see <u>Modeling an Enabled Level Shifter</u> on page 151.

Modeling Special Cells

Modeling an Isolation Cell with Multiple Enable Pins


Some isolation cells have besides an enable pin that is related to the non-switchable supply of the cell, additional enable pins that are related to the switchable supply. The switchable enable pin can be used to synchronize the isolation logic right before the non-switchable enable pin is activated or deactivated. To model an isolation cell with multiple enable pins, use the define_isolation_cell command with the following options.


```
define_isolation_cell
    -cells cell_list [-library_set library_set]
    -aux_enables pin_list
    [-power_switchable LEF_power_pin] [-ground_switchable LEF_ground_pin]
    [-power LEF_power_pin] [-ground LEF_ground_pin]
    [-valid_location {from | to | on | off | any}]
    -enable pin [-clamp {high|low}]
```

When you specify an isolation rule that targets these types of isolation cells, you need to use the <u>create_isolation_rule</u> command with the -isolation_control option with control type sync_enable.

Figure $\underline{5-17}$ shows two examples of cells with multiple enable pins. The \underline{iso} enable pin is related to the non-switchable supply \underline{vddc} , while the \underline{en} enable pin is related to the switchable supply \underline{vdd} .

Figure 5-17 Isolation Cells with Multiple Enable Pins

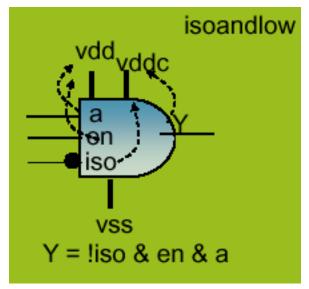

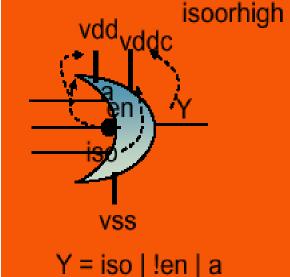

Modeling Special Cells

The following command models the isoandlow and isoorhigh cells in Figure 5-17 on page 171:

```
define_isolation_cell \
    -cells {isoandlow isoorhigh} \
    -aux_enables en \
    -power_switchable vdd \
    -power vddc -ground vss \
    -enable iso
```

The following commands show the isolation rules that target the isolation and isolation rules that target the isolation rules that target the isolation and isolation rules that target the isolation and isolation rules that target the isolation rules that target that target the isolation rules that target the isolation rule

```
create_isolation_rule \
    -name isol \
    -isolation_condition iso_drvr \
    -from PD1 \
    -isolation_output low \
    -isolation_control { {sync_enable en_drvr} } \
    -secondary_domain iso_supply_domain

create_isolation_rule \
    -name iso2 \
    -isolation_condition iso_drvr \
    -from PD1 \
    -isolation_output high \
    -isolation_control { {sync_enable en_drvr} } \
    -secondary_domain iso_supply_domain
```

Modeling an Isolation Latch with a Set or Reset Pin


Some isolation latches are designed with a set or reset pin to ensure that the latch output has a known value at the time when the design is initially powered up. To model an isolation latch with a set or reset pin, use the define_isolation_cell command with the following options.


```
define_isolation_cell
    -cells cell_list [-library_set library_set]
    -always_on_pins pin_list
    [-power_switchable LEF_power_pin] [-ground_switchable LEF_ground_pin]
    [-power LEF_power_pin] [-ground LEF_ground_pin]
    [-valid_location {from | to | on | off | any}]
    -enable pin [-clamp {high|low}]
```

When you specify an isolation rule that targets these types of isolation cells, you need to use the <u>create isolation rule</u> command with the -isolation_control option with control type set or reset and the -isolation_output option with value hold.

Figure 5-18 shows two examples of such latches. The iso enable pin, isoprez (set), the isoclr (reset) pins are all related to the non-switchable supply vddc.

Figure 5-18 Isolation Cells with Set and Reset Pins

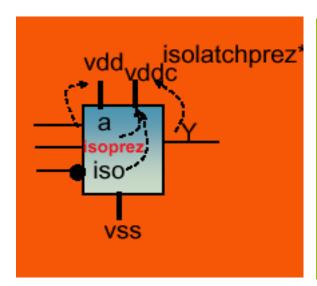

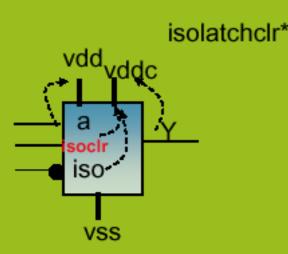

Modeling Special Cells

The following commands model the isolatchclr and isolatchprez cells in Figure 5-18 on page 173:

```
define_isolation_cell
    -cells isolatchclr
    -always_on_pins isoprez
    -power_switchable vdd
    -power vddc -ground vss
    -enable iso

define_isolation_cell
    -cells isolatchclr
    -always_on_pins isoclr
    -power_switchable vdd
    -power vddc -ground vss
    -enable iso
```

The following commands show the isolation rules that targets the isolatchclr and isolatchprez cells in Figure 5-18 on page 173:

```
create_isolation_rule \
    -name iso1 \
    -isolation_condition iso_drvr \
    -from PD1
    -isolation_output hold \
    -isolation_control { {set iso_prez} } \
    -secondary_domain iso_supply_domain

create_isolation_rule \
    -name iso2 \
    -isolation_condition iso_drvr \
    -from PD1 \
    -isolation_output hold \
    -isolation_control { {reset iso_clr} } \
    -secondary_domain iso_supply_domain
```

Modeling Special Cells


Modeling a Multi-bit Isolation Cell

A multi-bit isolation cell has multiple pairs of input and output pins with each pair serving as a single bit isolation cell. An example is shown in Figure <u>5-19</u>.

If the cell uses the same enable pin for all pairs of input and output pins, there is no difference in modeling such a multi-bit cell with respect to the single bit isolation cell.

If the cell has different enable pins for the input and output pairs, you must model the cell using the -pin_groups option of the define_isolation_cell command.



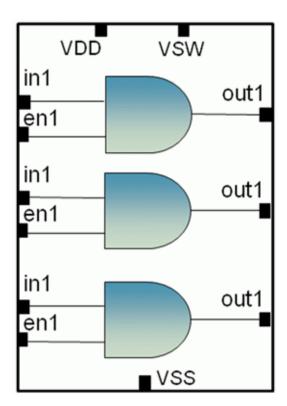

The following CPF command can be used to describe the multi-bit isolation cell for power switchable domain shown in Figure <u>5-19</u> (see <u>Figure 5-13</u> on page 165 for the corresponding single bit cell).

```
define_isolation_cell -cells IsoLL \
-power_switchable VSW \
-power VDD -ground VSS \
-pin_groups {{in1 out1 en1} {in2 out2 en2} {in3 out3 en3}}
```

Modeling Special Cells

Modeling a Complex Isolation Cell

For complex isolation cells that cannot be modeled using the previous techniques, CPF provides a generic mechanism.

To model a complex isolation cell, use the update_isolation_rules command with the following options.

In this case, the first cell specified in the cell list refers to the complicated isolation cell that cannot be modelled using the define_isolation_cell command. The cell name that you specify must correspond to both the model name used in simulation and the cell name used for implementation.

Use the following format for the pin_mapping_list to specify the connection of each cell pin to a pin or port in the design:

```
{cell_pin design_pin_reference}
```

- cell_pin is the name of the pin in the cell definition
- design_pin_reference is one of the following:
 - the name of a design port or instance pin—You can prepend the "!" character to the name if the inverse of the port/pin is used to drive the cell pin
 - ☐ isolation_signal, which refers to the expression in -isolation_condition

If the cell has a corresponding macro model definition in CPF, you can specify the mapping of the domains in the macro model to the top-level domains.

Use the following format to specify a domain mapping:

```
{domain_in_child_scope domain_in_parent_level_scope}
```

The specified domain mapping applies to all instantiations of the specified isolation cell.

If the macro model has multiple power domains defined, this option must be used.

Modeling Special Cells

Modeling State Retention Cells

- <u>Types of State Retention Cells</u> on page 177
- State Retention Cell that Restores when Power is Turned On on page 178
- State Retention Cell that Restores when Control Signal is Deactivated on page 179
- State Retention Cells with Save and Restore Controls on page 180
- State Retention Cells without Save or Restore Control on page 182
- Modeling a Complex State Retention Cell on page 183

Types of State Retention Cells

State retention cells are used for sequential cells to keep their previous state prior to power down.

CPF can describe different types of state retention cells. The following is a list of the most typical state retention cells:

- State Retention Cell with Save Control
- State Retention Cell with Restore Control
- State Retention Cells with Save and Restore Controls
- State Retention Cells without Save or Restore Control


All types of state retention cells are defined using the <u>define state retention cell</u> command. The following sections indicate which command options to use for each type.

State Retention Cell that Restores when Power is Turned On

To model a state retention cell that saves the current value when the control pin becomes active while the power is on, retains the saved value when power is off, and restores the saved value when the power is turned on, use the following command options:

Figure <u>5-20</u> shows an example of such a cell.

Figure 5-20 State Retention with Save Control

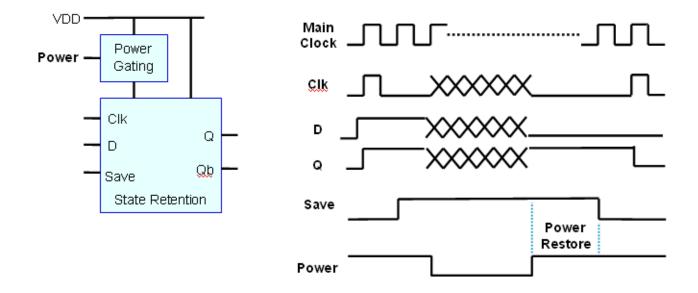

To model the cell shown in Figure <u>5-20</u>, use the following command:


```
define_state_retention_cell -cells SR1 \
    -clock_pin Clk \
    -save_function save \
    -restore_check !Clk -save_check !Clk \
    -power_switchable VSW \
    -power VDD -ground VSS
```

State Retention Cell that Restores when Control Signal is Deactivated

To model a state retention cell that saves the current value when the control pin becomes deactivated and restores the saved value when the control signal becomes activated, use the following command options:

Figure <u>5-21</u> shows an example of such a cell.

Figure 5-21 State Retention with Restore Control

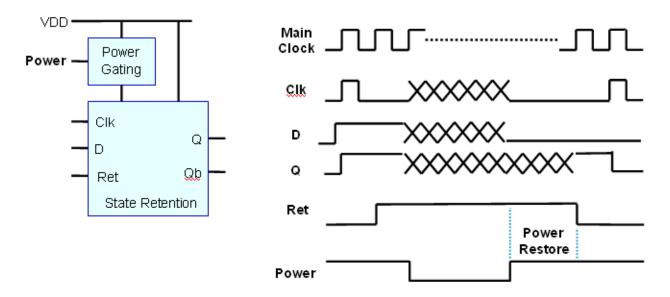

To model the cell shown in Figure <u>5-21</u>, use the following command:

```
define_state_retention_cell -cells SR1 \
    -clock_pin Clk \
    -restore_function !Ret \
    -restore_check !Clk -save_check !Clk \
    -power_switchable VSW \
    -power VDD -ground VSS
```

Modeling Special Cells

State Retention Cells with Save and Restore Controls

If you have a state retention cell with both save and restore control, the cell saves the current value when the save control pin is activated and the power is on, while the cell restores the saved value when the restore control pins is activated. To model such a cell use the following command options:

In this case, the cell saves the current value when the save expression is true and the power is on. The cell restores the saved value when the restore expression is true and the power is on.


It is an error if you use the same pin or same expressions for both the save and restore function. For example the following two commands are not correct:

```
\label{thm:condition} $$ define\_state\_retention\_cell -cells My\_Cell -restore\_function pg -save\_function !pg define\_state\_retention\_cell -cells foo -restore\_function pg -save\_function pg $$
```

Figure 5-22 on page 181 shows an example of such a cell.

Modeling Special Cells

Figure 5-22 State Retention with Save and Restore Controls

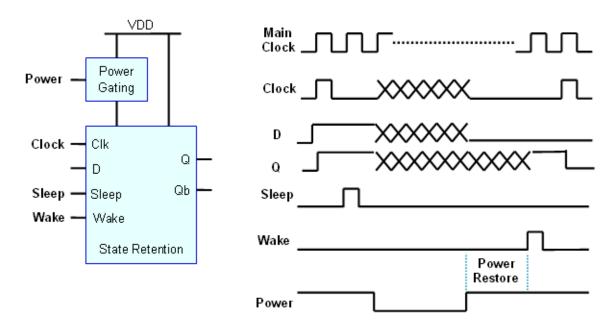

To model the cell shown in Figure <u>5-22</u>, use the following command:

```
define_state_retention_cell -cells SR2 \
    -clock_pin Clk \
    -restore_function Wake -save_function Sleep \
    -restore_check "!Clk" -save_check "!Clk" \
    -power_switchable VSW \
    -power VDD -ground VSS
```

The state will be saved when Sleep is active and the clock is down and the state will also be restored when Wake is active and the clock is down.

Modeling Special Cells

State Retention Cells without Save or Restore Control

A master-slave type state retention cell does not have a save or restore control pin. It has a secondary power or ground pin to provide continuous power supply to the slave latch. The clock signal acts as the retention control signal. As a result, you should use the clock signal for the registers as the restore edge and save edge.

When the clock signal is used as the restore or save signal for a flop, then the synthesis tool will synthesize it using a master-slave type retention cell. For library definition, the clock pin needs to be declared as the only save and restore signal and has to be an always-on pin.

To model such a cell use the following command options:

When you specify a state retention rule that targets these types of state retention cells, you need to use the <u>create state retention rule</u> command with the -save_edge option and the clock signal in the expression.

The following example models master-slave retention cell ms ret:

```
define_state_retention_cell -cells ms_ret \
    -clock_pin CLK \
    -save_function CLK \
    -restore_check "!CLK" -save_check "!CLK"
```

The following command shows the state retention rule that targets cell ms_ret

```
create_state_retention_rule -name sr1 \
   -domain PD1 \
   -save_edge clock
```

Modeling Special Cells

Modeling a Complex State Retention Cell

For complex state retention cells that cannot be modeled using the previous techniques, CPF provides a generic mechanism. To model such a cell, use the update_isolation_rules command with the following options.

In this case, the first cell specified in the cell list refers to the complicated state retention cell that cannot be modelled using the define_state_retention_cell command. The cell name that you specify must correspond to both the model name used in simulation and the cell name used for implementation.

Use the following format for the pin_mapping_list to specify the connection of each cell pin to a pin or port in the design:

```
{cell_pin design_pin_reference}
```

- cell_pin is the name of the pin in the cell definition
- design_pin_reference is one of the following:
 - the name of a design port or instance pin. You can prepend the "!" character to the name if the inverse of the port/pin is used to drive the cell pin
 - save_signal, which refers to the expression in -save_edge or -save_level option
 - restore_signal, which refers to the expression in -restore_edge or -restore_level option

If the cell has a corresponding macro model definition in CPF, you can specify the mapping of the domains in the macro model to the top-level domains.

Use the following format to specify a domain mapping:

```
{domain_in_child_scope domain_in_parent_level_scope}
```

The specified domain mapping applies to all instantiations of the specified state retention cell.

If the macro model has multiple power domains defined, this option must be used.

Modeling Special Cells

Modeling Power Switch Cells

- Types of Power Switch Cells on page 184
- Modeling a Single Stage Power Switch Cell on page 185
- Modeling a Power Switch cell with Gate Bias on page 186
- Modeling a Single Stage Ground Switch Cell on page 188
- Modeling a Dual-Stage Power Switch Cell on page 189
- Modeling a Dual-Stage Ground Switch Cell on page 191

Types of Power Switch Cells

To connect and disconnect the power (or ground) supply from the gates in internal switchable power domains, you must add power switch logic.

CPF can describe different types of power switch cells. The following is a list of the most typical cells:

- single stage power switch cell—single transistor that controls the primary power supply to the logic of an internal switchable domain
- single stage ground switch cell—single transistor that controls the primary ground supply to the logic of an internal switchable domain
- dual-stage power switch—power switch with a weak and strong transistor to control the primary power supply to the logic of an internal switchable domain
- dual-stage ground switch—ground switch with a weak and strong transistor to control the primary ground supply to the logic of an internal switchable domain

All types of power switch cells are defined using the <u>define power switch cell</u> command. The following sections indicate which command options to use for each type.

Modeling a Single Stage Power Switch Cell


To model a single stage power switchable power switch cell use the define_power_switch_cell command with the following options:

```
define_power_switch_cell
    -cells cell_list [-library_set library_set]
    -stage_1_enable expression [-stage_1_output expression]
    -type header
    -power_switchable LEF_power_pin -power LEF_power_pin
    [-ground LEF_ground_pin]
    [-enable_pin_bias [float:]float] [ -gate_bias_pin LEF_power_pin]
    [ -stage_1_on_resistance float ] [ -stage_1_saturation_current float]
    [ -leakage_current float ]
```

In case of an unbuffered power switch cell, you do not need to specify the -stage_1_output and -ground options.

Figure 5-23 shows a power switch cell with an internal buffer. VIN is the pin connected to the unswitched power. VSW is the pin connected to the switchable power that is connected to the logic. When the enable signal Ei is activated the unswitched power is supplied to the logic. As shown in Figure 5-23, this type of cell usually contains a buffer that allows multiple power switch cells to be chained together to form a power switch column or ring. However, the power and ground of this buffer must be unswitchable.

Figure 5-23 Single Stage Power Switch

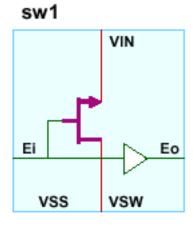

The following command models the power switch cell shown in Figure 5-23:

```
define_power_switch_cell \
    -cells sw1 \
    -stage_1_enable Ei -stage_1_output Eo \
    -type header \
    -power_switchable VSW -power VIN -ground VSS
```


Modeling a Power Switch cell with Gate Bias

To model a single stage power switchable power switch cell with gate bias use the define_power_switch_cell command with the following options:

Typically the enable pin is related to the power and the ground pin. With gate bias the enable pin is related to the gate bias pin and the ground. The voltage on the gate bias pin is larger than the voltage of the power pin. Such as cell creates less leakage power compared to the cell without gate bias.

In Figure 5-24, the gate bias pin is VGB. Assume that input voltage VIN is at 1.2V and the gate bias pin is at 3.3 V.

Figure 5-24 Single Stage Power Switch with Gate Bias

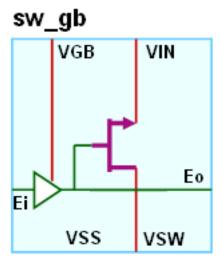

Modeling Special Cells

The following command models the power switch cell shown in Figure <u>5-24</u>:


```
define_power_switch_cell \
    -cells sw1 \
    -stage_1_enable Ei -stage_1_output Eo \
    -type header \
    -power_switchable VSW -power VIN -ground VSS \
    -gate_bias_pin VGB -enable_pin_bias 2.1
```

Modeling a Single Stage Ground Switch Cell

To model a single stage ground switchable power switch cell use the define power switch cell command with the following options:

Figure 5-25 shows a ground switch cell. VSS is the pin connected to the unswitched ground. VSW is the pin connected to the switchable ground that is connected to the logic. When the enable signal Ei is activated the unswitched ground is supplied to the logic. As shown in Figure 5-25, this type of cell usually contains a buffer that allows multiple ground switch cells to be chained together to form a ground switch column or ring. However the power and ground of this buffer must be unswitchable.

Figure 5-25 Single Stage Ground Switch

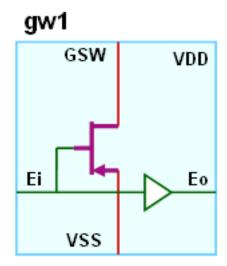

The following command models the ground switch cell shown in Figure <u>5-25</u>:


```
define_power_switch_cell \
    -cells gw1 \
    -stage_1_enable Ei -stage_1_output Eo \
    -type header \
    -ground_switchable GSW -ground VSS -power VDD
```

Modeling a Dual-Stage Power Switch Cell

To model a power switch cell with two stages, use the following command options:

Figure 5-26 shows a dual-stage power switch cell. VIN is the pin connected to the unswitched power. VSW is the pin connected to the switchable power that is connected to the logic. Only when both enable signals Ri and Ei are activated can the unswitched power be supplied to the logic. The Ri enable signal drives the stage-1 (weak) transistor which requires less current to restore the unswitched power. The Ei enable signal drives the stage-2 (strong) transistor which requires more current to fully supply the unswitched power to the logic. This type of cell usually contains two buffers that allow multiple power switch cells to be chained together to form a power switch column or ring. However the power and ground of these buffers must be unswitchable.

Figure 5-26 Dual-Stage Power Switch

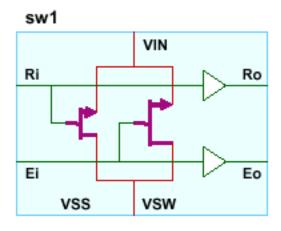

Modeling Special Cells

The following command models the power switch cell shown in Figure 5-26:


```
define_power_switch_cell \
    -cells swl \
    -stage_1_enable Ri -stage_1_output Ro \
    -stage_2_enable Ei -stage_2_output Eo \
    -type header \
    -power_switchable VSW -power VIN -ground VSS
```

Modeling a Dual-Stage Ground Switch Cell

To model a ground switch cell with two stages, use the following command options:

Figure 5-27 shows a dual-stage ground switch cell. VSS is the pin connected to the unswitched ground. GSW is the pin connected to the switchable ground that is connected to the logic. Only when both enable signals Ri and Ei are activated can the unswitched ground be supplied to the logic. The Ri enable signal drives the stage-1 (weak) transistor which requires less current to restore the unswitched ground. The Ei enable signal drives the stage-2 (strong) transistor which requires more current to fully supply the unswitched ground to the logic. This type of cell usually contains two buffers that allow multiple ground switch cells to be chained together to form a ground switch column or ring. However the power and ground of these buffers must be unswitchable.

Figure 5-27 Dual-Stage Ground Switch

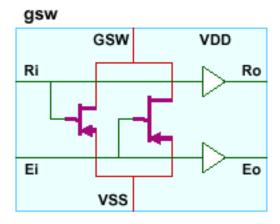

Modeling Special Cells

The following command models the ground switch cell shown in Figure <u>5-27</u>:

```
define_power_switch_cell \
    -cells gsw \
    -stage_1_enable Ri -stage_1_output Ro \
    -stage_2_enable Ei -stage_2_output Eo \
    -type footer \
    -ground_switchable GSW -ground VSS -power VDD
```

Modeling Special Cells

Modeling Pad Cells

CPF provides two methods to model a cell pad:

- Using a Pad Cell Definition to Create a Simplified Pad Cell Model.
- Using a CPF Macro Model to Create a Detailed Pad Cell Model

The detailed model is required when your pad cell contains any of the following:

- □ Internal power switch or state retention
- Complex internal isolation control
- □ Internal feed- through nets for data signals

Note: if you created a simplified and detailed model, the detailed model (macro model definition) will take precedence.

Every instance of a pad cell must be instantiated in CPF:


- ☐ If you created a simplified model, you must declare the pad instances with the create pad rule command.
- If you created a detailed model, you can instantiate the pad instances with the <u>set instance</u> command or with the create_pad_rule command.

An instance is identified as a pad instance if the cell is defined in the <u>define pad cell</u> or there is a macro model definition for the cell that has the <u>set pad ports</u> command included.

Using a Pad Cell Definition to Create a Simplified Pad Cell Model

Consider the pad shown in Figure 5-28 on page 194. This I/O pad cell has one pin (pad) that will be directly connected to the board. The signal coming in through this pin goes through internal level shifting that produces three signals connected to the core of the chip. The input pins pad, resetb, pdn, and pup connect to logic whose power is supplied by VDDO and VSSO, while the three other output pins (din, dout, and oeb) are driven by logic whose power is supplied by VDDC and VSSC.

Figure 5-28 I/O Pad Cell

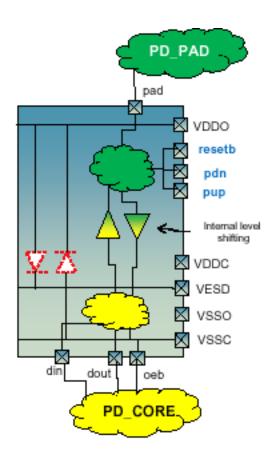

For a simplified pad cell model you need to declare

- The pins that connect directly to the package or the board
- The groups of pins that are related to the same power supplies You can specify a power or ground pin in multiple pin groups.
 Each power and ground pin must belong to at least one group.

Modeling Special Cells

If a group has more than one power (ground) pin, these power (ground) pins are considered to be equivalent for that group.

If a power or ground pin appears in multiple pin groups, the top-level power domains that those groups are mapped to must have the same primary power or ground net defined. Otherwise, it is an error.

Pins in a group without power and ground pins, or not specified in any pin group are considered to be floating pins.

It is an error if you specify a non-power or ground pin in multiple pin groups.

■ The pins which connect to internal isolation logic

This information can be given with the <u>define pad cell</u> command as shown in Figure <u>5-29</u>.

When you defined a simple pad cell model, you need to declare the pad instances using the create_pad_rule command. The pad rule defines how to map the pin groups of the pad instances to the top-level power domains.

/Important

It is an error If a pin group of a pad cell is not specified in the mapping option.

<u>Figure 5-29</u> on page 196 shows an extract of a CPF file with the simplified pad cell definition and pad instantiation for the pad shown in <u>Figure 5-28</u> on page 194.

In this example all instantiations of cell data_io_3V that are connected to the ports of FOO[0:127] follow the same domain mapping specified in the pad rule. The pins resetb, pdn, pup, and pad belong to domain PD_PAD and the power pin VDDO and the ground pin VSSO must be connected to the primary power and ground nets of domain PD_PAD, respectively.

Similarly, the pins din, dout, and oeb belong to domain PD_CORE and the power pin VDDC and the ground pin VSSC must be connected to the primary power and ground nets of domain PD_CORE, respectively.

Modeling Special Cells

Figure 5-29 Pad Cell Definition and Instantiation

Modeling Special Cells

Using a CPF Macro Model to Create a Detailed Pad Cell Model

For the detailed model, you must declare the pins that connect directly to the package or the board in the macro model. Use the <u>set_pad_ports</u> command (between the set_macro_model and end_macro_model commands) to do this.

To model internal diodes in the macro model, you can use the <u>set diode ports</u> command to declare the pins of the macro cell that connect to the positive and negative pins of a diode.

To declare the instances of a pad cell in the CPF file, you can use either the set_instance command or the <u>create pad rule</u> command. The pad rule defines how to map the power domains of the pad cell macro model to the top-level power domains.

<u>Figure 5-29</u> on page 196 shows an extract of a CPF file with the detailed pad cell definition and pad instantiation for the pad shown in <u>Figure 5-28</u> on page 194.

The semantics of this example is the same as for the example shown in <u>Figure 5-29</u> on page 196.

Figure 5-30 Detailed Pad Cell Model and Instantiation

```
set_macro_model data_io_3V
set_pad_ports { pad }

create_power_domain -name PDCore -default \
    -boundary_ ports { din dout oeb}

update_power_domain -name PDCore -primary_power_net VDDC -primary_ground_net VSSC
create_power_domain -name PDIO -boundary_ ports {VDDO VSSO resetb pdn pup pad}


update_power_domain -name PDIO -primary_power_net VDDO -primary_ground_net VSSO
end_macro_model
set_design top
create_power_domain -name PD_PAD ...
create_power_domain -name PD_CORE ...
create_pad_rule -name -of_bond_ports {FOO[ 0: 127]} \
    -mapping { {PDIO PD_PAD} {PDCore PD_CORE}}
...
end design
```

Modeling Special Cells

Modeling a Voltage Regulator

Figure 5-31 on page 198 shows an example of a voltage regulator. Pin HAVDD is the pin to which the high voltage supply needed for the proper operation of the voltage regulator is applied. The reference power and ground supplies are applied to pins AVDD and AVSS, respectively. The control signals to regulate the voltage are applied to pins C1 and C2. Pin VBB corresponds to the output power supply.

Figure 5-31 Voltage Regulator

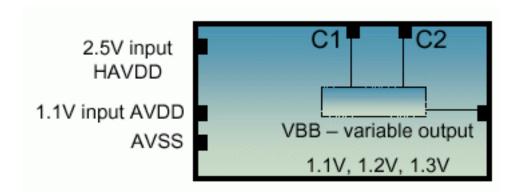

The voltage regulator of Figure <u>5-31</u> has three power domains. The power domain associated with the output power supply is referred to as a *power source domain*.

To model a voltage regulator, you need to use a CPF macro model:

- The power source domain must be identified with the -power_source option in the create_power_domain.
- The power domain of the high input voltage supply must be declared as the base domain (-base_domains) of the power source domain.

Note: The primary supply voltage of the base domain can be different from the voltage of the power source domain.

- The options of the update_power_domain command for the power source domain depend on whether the output power supply is used as power source for the primary power supply or body bias supply of other domains:
 - Use the -primary_power_net option if the power source can only be used a primary power supply of other domains
 - Use the -primary_ground_net option if the power source is a primary ground supply of other domains

This occurs when a top design uses the ground bias supply to control the power

Modeling Special Cells

dissipation and performance and uses the output of the voltage regulator for the ground connection.

- ☐ Use the -pmos_bias_net or -nmos_bias_net option (without the -primary_power_net or -primary_ground_net specification) if the power source can only be used as body bias supply of other domains
- Use the -primary_power_net and -pmos_bias_net options if the power source can be used as a primary power supply and pmos body bias supply of other domains
- ☐ Use the -primary_ground_net and -nmos_bias_net options if the power source can be used as a primary ground supply and nmos body bias supply of other domains

Note: If the macro has an internal regulator whose output supply only drives logic within the macro, the update_power_domain command for the power source domain will not have any primary power, primary ground, or body bias net specifications. The power source domain is then referred to as an *internal power source domain*.

- Specify the reference signal for the power source domain with the set_power_source_reference_pin command.
- In any power mode definition, the nominal condition for the power source domain should have a lower voltage range than the nominal condition for its base domain.

Examples <u>5-1</u> through <u>5-3</u> apply to <u>Figure 5-31</u> on page 198.

Example 5-1 Voltage Regulator Model for Output Power Supply Used as PMOS Body Bias Supply

Power supply VBB will be used as the PMOS body bias supply of top-level domain PDDVFS.

```
set_macro_model regulator
create_power_domain -name PDVIN
update_power_domain -name PDVIN -primary_power_net HAVDD -primary_ground_net AVSS
create_power_domain -name PDVOUT -default -base_domains {PDVIN} -power_source
update_power_domain -name PDVOUT -pmos_bias_net VBB
create_power_domain -name PDREF -boundary_ports {C1 C2}
update_power_domain -name PDREF -primary_power_net AVDD -primary_ground_net AVSS
set_power_source_reference_pin AVDD -domain PDVOUT voltage_range 1.0:1.1
end macro model regulator
set design top
create_power_domain -name PDDefault -default
update_power_domain -name PDDefault -primary_power_net AVDD \
    -primary_ground_net AVSS
create power domain -name PDDirty
update_power_domain -name PDDirty -primary_power_net HighVdd \
    -primary_ground_net VSS
create_power_domain -name PDDVFS -instances ...
update_power_domain -name PDDVFS -primary_power_net VDD -primary_ground_net VSS \
```

Modeling Special Cells

Example 5-2 Voltage Regulator Model for Output Power Supply Used as PMOS Body Bias Supply with Voltage Range Specification

In this example, the CPF contains voltage ranges for the nominal condition of the power source domain but does not specify how the output voltage is controlled. The simulation model could contain the output voltage behavior.

Example 5-3 Voltage Regulator Model for Output Power Supply Used as PMOS Body Bias Supply with Voltage Control Specification

In this example, the CPF does specify how the output voltage is controlled.

```
VBB=1.1v when C1=1, C2=0; VBB=1. 2v when C1=0, C2=1; VBB=1. 3v when C1=1, C2=1
```


```
set macro model regulator
create nominal condition -name LDO1 -voltage 1.1 -pmos bias voltage 1.1
create nominal condition -name LDO2 -voltage 1.1 -pmos bias voltage 1.2
create_nominal_condition -name LDO3 -voltage 1.1 -pmos_bias_voltage 1.3
create_nominal_condition -name HVDD -voltage 2.5 -ground_voltage 0.0
create_nominal_condition -name REF -voltage 1.1 -ground_voltage 0.0
create_power_domain -name PDVIN
update_power_domain -name PDVIN -primary_power_net HAVDD -primary_ground_net AVSS
create_power_domain -name PDVOUT -default -base_domains {PDVIN} -power_source \
    -active_state_conditions { LDO1@"C1&!C2" LDO2@"!C1&C2" LDO3@"C1&C2" }
update_power_domain -name PDVOUT -pmos_bias_net VBB
create power domain -name PDREF -boundary ports {C1 C2}
update_power_domain -name PDREF -primary_power_net AVDD -primary_ground_net AVSS
create_power_mode -name PM1 -default -domain_conditions \
    { PDREF@REF PDVIN@HVDD PDVOUT@LDO1 }
create_power_mode -name PM2 -domain_conditions \
    { PDREF@REF PDVIN@HVDD PDVOUT@LDO2 }
create power mode -name PM3 -domain conditions \
    { PDREF@REF PDVIN@HVDD PDVOUT@LDO3 }
set_power_source_reference_pin AVDD -domain PDVOUT voltage_range 1.1:1.1
end macro model regulator
```

Modeling Special Cells

Example 5-4 Macro Cell with an Internal Regulator

The macro below has an internal power regulator. The macro has no pin to export the internal power supply. Some output data pins are driven by logic that are in tern driven by the internal supply.

Figure 5-32 Internal Voltage Regulator

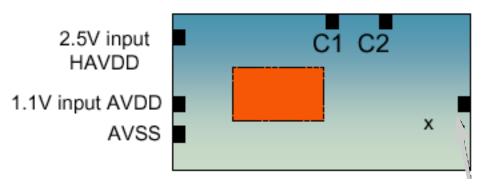

```
set_macro_model regulator
create_power_domain -name PDVIN
update_power_domain -name PDVIN -primary_power_net HAVDD -primary_ground_net AVSS
create_power_domain -name PDVOUT -default -base_domains {PDVIN} -power_source
create_power_domain -name PDREF -boundary_ports {C1 C2}
update_power_domain -name PDREF -primary_power_net AVDD -primary_ground_net AVSS
create_nominal_condition -name OUT -voltage 0.9:1.1
create_nominal_condition -name HDVV -voltage 2.5 -ground_voltage 0.0
create_nominal_condition -name REF -voltage 1.1 -ground_voltage 0.0

create_power_mode -name PM -default -domain_conditions \
    { PDREF@REF PDVIN@HVDD PDVOUT@OUT }
set_power_source_reference_pin AVDD -domain PDVOUT voltage_range 1.1:1.1
end_macro_model regulator
```

Power source domain PDVOUT has no update_power_domain command that contains any primary power, primary ground, or body bias net specifications.

Modeling Special Cells

Power Domain Mapping of a Power Source Domain

There are special semantics for power domain mapping in case of a power source domain,

The top-level domain inherits all the attributes related to the macro model power source domain:

- The top-level domain uses the power ports of a power source domain as either primary supply or body bias supply depending on the specification in the macro model
- If the top-level domain already has a shutoff condition specified, it must be functionally equivalent to the conditions specified for the power source domain and the domain must be an external switchable domain.
- If the top-level domain also has active state conditions specified, it must be functionally equivalent to the corresponding condition specified for the power source domain.

A power source domain can be mapped into multiple top-level domains.

- These top-level domains must have consistent nominal conditions in all power modes
- It is an error if multiple power source domains are mapped into the same top-level domain.

The top-level domain's voltage range (specified across all power modes) must be within the voltage range specified with the power source domain.

- Depending on the definition and usage of the regulator output port, the top-level domain's nominal operating voltages can be any of the following: power voltage, ground voltage, pmos bias voltage, or nmos bias voltage, or a combination of these. For example, if a regulator output port is defined as a pmos bias supply, then among all power mode definitions for the corresponding top level domain, its pmos bias voltage must be within the range of the operating voltage of the corresponding power source domain.
- If a power source domain is switchable, and if the top-level domain it is mapped to is an unswitched domain, the top-level domain becomes switchable with the shutoff condition specified in the macro model using the cell pins. It is an error if a switchable power source domain is mapped into a top-level internal switchable domain.

If a power domain is an *internal* power source domain, the domain cannot be mapped. The update_power_domain command for the power source domain will not have any primary power, primary ground, or body bias port specifications.

Modeling Special Cells

Simulation Semantic

In simulation a power source domain is considered to be corrupted if

- Its base domain is off or operates out of the required voltage ranges
- Its reference pin is corrupted or operates out of the specified voltage ranges

When a power source domain is corrupted, the power domains mapped to this power source domain are corrupted as well. The corruption semantics applies recursively to all domain mappings that root from the power source domain.