Noxtren

WATERPROOF
ELECTRICAL WIRE CONNECTOR KIT

USER GUIDE

01 USER MANUAL

Connector Material: PA66 Nylon	DC Voltage: 24V DC
Terminal Material: Copper	Rated Current: 5-8A
Wire Range: 20-16 AWG (0.5-1.5 mm²)	Waterproof Rating: IP67
Operating Temp: 14°F to 176°F (-10°C to 80°C)	Pin Options: 1/2/3/4/5/6 Pin Connectors

02 PRODUCT OVERVIEW

This waterproof electrical wire connector kit is designed for low-voltage vehicle wiring repair and maintenance. It is suitable for engine bays, chassis wiring, exterior lights, doors, tailgates, and other exposed wire harness areas. With multiple connector options, it can also be used for motorcycles, boats, trailers, outdoor lighting, and garden equipment wiring. Always select the correct connector size, pin configuration, and wire gauge before installation.

03 HOW TO CONTACT US

For any product issues or questions, please contact Customer Service at any time. We are always ready to assist you.

- Email: Noxtren01@outlook.com

04 PARTS IDENTIFICATION

Female Connector

Male Terminal

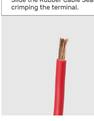

Male Connector

Female Terminal

Red Locking Clip

Rubber Cable Seals

05 INSTALLATION STEPS

Step 1

Prepare a stripped wire. The recommended stripping length is approximately 0.2 in [5 mm].

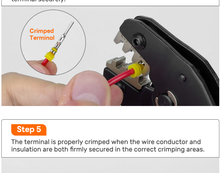

Step 2

Slide the Rubber Cable Seal onto the stripped wire before crimping the terminal.

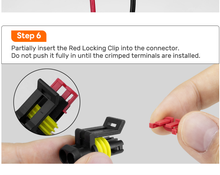

Step 3

Place the terminal onto the stripped wire and Rubber Cable Seal. Gently pinch the rear crimp wings to temporarily hold it in place.

Step 4

Place the terminal into the crimping jaw with the crimping area facing up, then squeeze the crimping tool to crimp the terminal securely.

Step 5

The terminal is properly crimped when the wire conductor and insulation are both firmly secured in the correct crimping areas.

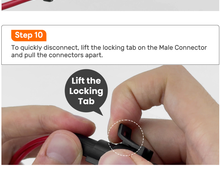

Step 6

Partially insert the Red Locking Clip into the connector.
Do not push it fully in until the crimped terminals are installed.

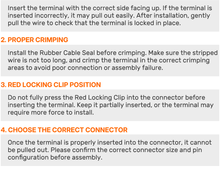

Step 7

Assemble the connector in the direction shown.
Make sure the terminal is properly aligned before insertion.

Step 8

After the crimped terminal is fully inserted, press the Red Locking Clip down until it locks into the connector. Make sure the clip is seated properly before use.

Step 9

Place both the Male Connector and Female Connector with the front side facing up before assembly. Make sure they are positioned in the direction shown in the image.

Step 10

Connector assembly is complete. Make sure all terminals and the Red Locking Clip are securely locked in place.

Step 10

To quickly disconnect, lift the locking tab on the Male Connector and pull the connectors apart.

06 IMPORTANT NOTES

1. TERMINAL DIRECTION

Insert the terminal with the correct side facing up. If the terminal is inserted incorrectly, it may pull out easily. After installation, gently pull the wire to check that the terminal is locked in place.

2. PROPER CRIMPING

Install the Rubber Cable Seal before crimping. Make sure the stripped wire is not too long, and crimp the terminal in the correct crimping areas to avoid poor connection or assembly failure.

3. RED LOCKING CLIP POSITION

Do not fully press the Red Locking Clip into the connector before inserting the terminal. Keep it partially inserted, or the terminal may require more force to install.

4. CHOOSE THE CORRECT CONNECTOR

Once the terminal is properly inserted into the connector, it cannot be pulled out. Please confirm the correct connector size and pin configuration before assembly.