



Sstar System Tool 使用说明

Sstar System Tool 使用说明 V1.0



© 2019 SigmaStar Technology Corp. All rights reserved.

SigmaStar Technology makes no representations or warranties including, for example but not limited to, warranties of merchantability, fitness for a particular purpose, non-infringement of any intellectual property right or the accuracy or completeness of this document, and reserves the right to make changes without further notice to any products herein to improve reliability, function or design. No responsibility is assumed by SigmaStar Technology arising out of the application or use of any product or circuit described herein; neither does it convey any license under its patent rights, nor the rights of others.

SigmaStar is a trademark of SigmaStar Technology Corp. Other trademarks or names herein are only for identification purposes only and owned by their respective owners.



REVISION HISTORY

Revision No.	Description	Date
V1.0	First Release	2019/06/11



TABLE OF CONTENTS

REVISION HISTORY2019i

TABLE OF CONTENTS..... ii

LIST OF TABLES iii

LIST OF FIGURES iii

1. Sstar tool 使用说明 1

 1.1. 适用硬件平台 1



LIST OF TABLES

Table 1: {Table Title} 错误!未定义书签。

LIST OF FIGURES

Figure 1: {Figure Name}..... 错误!未定义书签。


1. SSTAR TOOL 使用说明

1.1. 适用硬件平台

软件开发人员访问 SigmaStar Chip 寄存器，都需要使用 Mstar Debug Tool 硬件工具和 Sstar System Tool 软件工具。

Mstar Debug Tool 硬件工具购买链接如下：

<https://item.taobao.com/item.htm?id=15437784110>

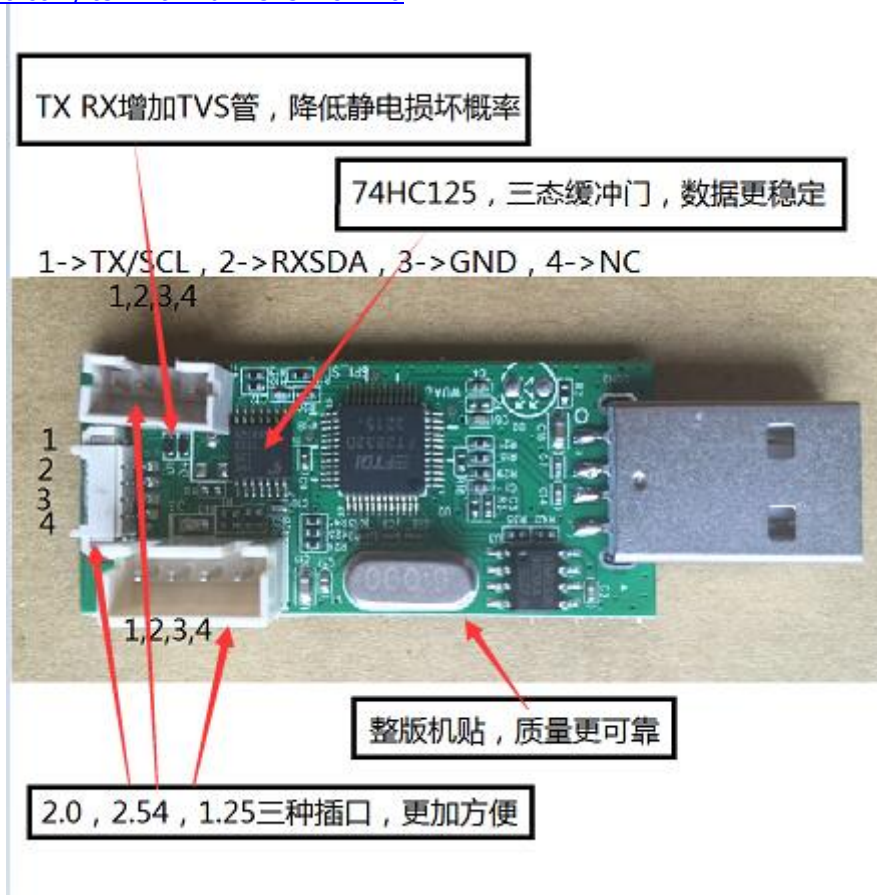

使用 USB 延长线连接 PC 机，安装驱动《debug tool driver for win7》。

打开 Securt CRT 工具，连接串口，并停串口。目前停串口有两种方式：

- 1、进入 mboot，敲命令 `debug`，敲回车，停串口，关闭串口终端（很重要），如下图所示：

```
SigmaStar #  
SigmaStar #  
SigmaStar #  
SigmaStar # debug  
  
debug mode on, cmdline is disabled  
  
SigmaStar #
```

- 2、进入系统，输入 11111（5 个 1），停串口，关闭串口终端（很重要），如下图所示：

```
setHwcursorPhyAddr hwcursor phyaddr has been set!  
[GOP]HalGopUpdateGwinParam 716: GOP_id=011 not support  
[GOP]HalGopSetArgb1555Alpha 1201: GOPId=0x11 not support  
[GOP]HalGopSetArgb1555Alpha 1201: GOPId=0x11 not support  
MI_ModuleDev_RegisterDev Enter  
  
gGfxDevHdl = c10b6000.  
  
fb0: Mstar frame buffer device  
[1]+  Done busybox telnetd  
/ #  
/ #  
/ #  
/ #  
/ # 111  
-/bin/sh: 111: not found  
/ # 1111  
-/bin/sh: 1111: not found  
/ # 11111
```

SStar System Tool 软件界面如下：按照如下顺序依次确认,寄存器是 8bit 还是 16bit。

wriu 0x00142988 0x0f 这个命令表示 Bank:0x1429 寄存器 0x88 的值是 0x0f

wriu 0x00142989 0x04 这个命令表示 Bank:0x1429 寄存器 0x89 的值是 0x04

