



# SECUROS® DISPATCHER

Version 2026

## User Guide

SecurOS Dispatcher User Guide (UG - EN; Version 2026 , build 1 on 4/2/2026).

© Copyright Intelligent Security Systems, 2026.

SecurOS® ("SecurOS") and all respective logos are trademarks of ISS Corp, in the U.S. and/or other countries.

Intelligent Security Systems reserves the right to make changes to both this Manual and to the products it describes. System specifications are subject to change without notice. Nothing contained within this Manual is intended as any offer, warranty, promise or contractual condition, and must not be taken as such.

No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system or translated into any human or computer language in any form by any means without the express written permission of the copyright holder. Unauthorized copying of this publication may not only infringe copyright but also reduce the ability of Intelligent Security Systems to provide accurate and up-to-date information to both users and operators.

# Contents

|                                                                         |           |
|-------------------------------------------------------------------------|-----------|
| <b>1 Preface</b>                                                        | <b>5</b>  |
| 1.1 Scope.....                                                          | 5         |
| 1.2 Target Audience.....                                                | 5         |
| 1.3 Using This Manual.....                                              | 5         |
| 1.4 Getting Technical Support.....                                      | 5         |
| 1.5 Design Convention.....                                              | 6         |
| 1.6 Design Elements.....                                                | 7         |
| <b>2 General Description</b>                                            | <b>8</b>  |
| <b>3 User Roles</b>                                                     | <b>9</b>  |
| <b>4 User Login</b>                                                     | <b>11</b> |
| <b>5 Working with Navigation Panel</b>                                  | <b>12</b> |
| 5.1 Requesting a Break.....                                             | 12        |
| 5.2 Viewing Notifications.....                                          | 14        |
| 5.3 Working with User Menu.....                                         | 15        |
| <b>6 User Role "Control Room Operator"</b>                              | <b>16</b> |
| 6.1 Processing Incidents by "Control Room Operator" User.....           | 16        |
| 6.1.1 Working with Incident Feed.....                                   | 17        |
| 6.1.2 Working with Incident Card.....                                   | 18        |
| 6.1.2.1 Incident Processing.....                                        | 21        |
| 6.1.2.2 Delegating Incident to Superior Operator.....                   | 24        |
| 6.1.2.3 Dismissing the Incident.....                                    | 25        |
| 6.1.3 Working with FaceX Incident Card.....                             | 27        |
| <b>7 User Role "Dispatch Center Operator"</b>                           | <b>30</b> |
| 7.1 Processing Incidents by "Dispatch Center Operator" User.....        | 30        |
| 7.2 Viewing Scheduled Maintenance.....                                  | 30        |
| 7.3 Viewing Directories.....                                            | 33        |
| 7.3.1 Companies Section.....                                            | 34        |
| 7.3.2 Employees Section.....                                            | 35        |
| <b>8 User Role "Senior Dispatch Center Operator"</b>                    | <b>36</b> |
| 8.1 Working with Operators Panel.....                                   | 36        |
| 8.2 Considering the Break Requests.....                                 | 38        |
| 8.3 Processing Incidents by "Senior Dispatch Center Operator" User..... | 40        |
| 8.4 Delegating Incidents to Operator with Specific Role.....            | 41        |
| 8.5 Scheduled Maintenance Management.....                               | 42        |
| 8.5.1 Creating Scheduled Maintenance.....                               | 42        |
| 8.5.2 Editing Scheduled Maintenance.....                                | 44        |
| 8.6 Directories Management.....                                         | 45        |
| 8.6.1 Editing the Companies List.....                                   | 46        |

|                                                                  |           |
|------------------------------------------------------------------|-----------|
| 8.6.2 Editing the List of Company Employees .....                | 47        |
| <b>8.7 Site Management .....</b>                                 | <b>49</b> |
| 8.7.1 Changing the Alarm Status of Site. ....                    | 50        |
| 8.7.2 Configuring the Receiving of Incidents. ....               | 52        |
| <b>8.8 Working with Incident Archive .....</b>                   | <b>53</b> |
| 8.8.1 Searching for Incidents in the Archive. ....               | 54        |
| 8.8.2 Viewing the Archived Incident Card. ....                   | 56        |
| 8.8.3 Changing the Incident Status. ....                         | 56        |
| 8.8.4 Creating Reports. ....                                     | 58        |
| 8.8.5 Viewing Incident Statistics. ....                          | 60        |
| <b>8.9 Viewing History of Operations .....</b>                   | <b>62</b> |
| <b>9 User Role "Emergency Team Operator" .....</b>               | <b>65</b> |
| 9.1 Processing Incidents by "Emergency Team Operator" User. .... | 65        |
| <b>10 Technical Support Information .....</b>                    | <b>69</b> |

# 1 Preface

This section contains general information about this document, the means of its design and use, as well as how to get additional technical support for the product.

## 1.1 Scope

This document is SecurOS Dispatcher user manual that describes the operations available to the operator.

## 1.2 Target Audience

The guide is intended for the SecurOS users who have basic skills in working with web browsers and are familiar with the SecurOS user interface.

## 1.3 Using This Manual

This document is organized in such a way that the user can use both its printed and electronic versions. In the latter case, Adobe Reader features such as bookmarks and hyperlinks are available to navigate through the document. This manual refers to other SecurOS documents, which can be found on the SecurOS installation media or on the ISS company website ([www.issivs.com](http://www.issivs.com)).

This document can be called directly from SecurOS by pressing the **F1** key. In the administration mode, it is possible to open a context help for a given object or utility description by pressing the **F1** key when its settings window or utility window is open. In the operator mode, the **F1** key can be used to open a description of the active window of the current operator interface or utility.

Some SecurOS Modules can be implemented as web applications. It is not possible to call the online help with the **F1** key from the web pages of such applications.

## 1.4 Getting Technical Support

If you have any questions after reading this manual, please address them to your system administrator or supervisor.

For any further information, please contact the Intelligent Security Systems Technical Support Team:

---

**Note.** For all technical support requests, please open a ticket from the ISS Partner Portal: <https://support.issivs.com>. You will need to create an account if you don't already have one.

---

**Table 1.** Technical support phone numbers

| Region                                                                                                                                                                                                                       | Phone                             |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------|
| <b>North America</b>                                                                                                                                                                                                         |                                   |
| United States (HQ) – Florida & New Jersey offices                                                                                                                                                                            | +1 732 855 1111                   |
| Canada                                                                                                                                                                                                                       | +1 778 929 8565                   |
| Mexico                                                                                                                                                                                                                       | +52 1 55 2501 6369                |
| <b>Mexico, Central America &amp; the Caribbean (MCA)</b>                                                                                                                                                                     |                                   |
| Aruba, Barbados, Belize, Costa Rica, Curacao, Dominican Republic, El Salvador, Guatemala, Guyana, Haiti, Honduras, Jamaica, Mexico, Nicaragua, Panama, Puerto Rico, Saint Lucia, Saint Martin, Suriname, Trinidad and Tobago | +52 1 55 2501 6369 (Mexico-based) |
| <b>Spanish Speaking South America (SSA)</b>                                                                                                                                                                                  |                                   |
| Argentina, Bolivia, Chile, Colombia, Ecuador, Paraguay, Peru, Uruguay                                                                                                                                                        | +57 300 442 2808 (Colombia-based) |
| <b>Portuguese Speaking Countries</b>                                                                                                                                                                                         |                                   |
| Brazil, Portugal                                                                                                                                                                                                             | +55 11 2262 2894                  |
| <b>Middle East</b>                                                                                                                                                                                                           |                                   |
| Dubai                                                                                                                                                                                                                        | +971 4 874 7100                   |
| Qatar                                                                                                                                                                                                                        | +974 6 677 8309                   |
| Saudi Arabia                                                                                                                                                                                                                 | +966 54 109 9699                  |
| <b>Europe</b>                                                                                                                                                                                                                |                                   |
| Serbia                                                                                                                                                                                                                       | +381 62 891 0042                  |
| Ukraine                                                                                                                                                                                                                      | +380 44 299 0810                  |
| <b>Africa</b>                                                                                                                                                                                                                |                                   |
| Egypt                                                                                                                                                                                                                        | +20 10 0202 5200                  |

For a faster problem solving, we recommend preparing the service information described in the **Technical Support Information** section before contacting the Technical Support Team.

## 1.5 Design Convention

The following fonts and formatting tools are used to represent various terms and titles in this document.

| Font                           | Description                                                                                                                                                                                    |
|--------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>bold type</b>               | Used in workstation names, utilities and screen forms, windows and dialog boxes, as well as the names of their elements (GUI elements).                                                        |
| <i>italic type</i>             | Used to mark out the SecurOS objects.                                                                                                                                                          |
| <b><i>bold italic type</i></b> | Used to mark out the elements of homogeneous lists.                                                                                                                                            |
| monospace                      | Used to mark out macro text and programming code, file names and their paths. It is also used to specify the necessary options and to mark out values specified by the user from the keyboard. |
| green                          | Used to mark out the cross-references within the document and links to the available external documents.                                                                                       |

## 1.6 Design Elements

**Warning!** Serves to draw the user's attention to the information that is necessary for the correct perception of the following text. As a rule, this information has a warning character.

**Note.** Note text in the topic body.

### ***Additional Information***

Used to display additional information. These types of elements contain, for example, a description of options for executing a task or a reference to additional literature.

## 2 General Description

SecurOS Dispatcher is a software platform for operational centralized control and automated management of incidents: alarm events and security-related processes at large infrastructure facilities.

SecurOS Dispatcher collects and processes data from multiple unrelated subsystems and devices, provides users with the ability to manage them, and work with incidents whose sources are events received from integrated subsystems and devices.

The platform provides efficient operation of hierarchically organized dispatch services, as well as their operational interaction with dependent structures and departments through a unified interface.

SecurOS Dispatcher provides:

- round-the-clock centralized monitoring of the condition of the entire complex of engineering and technical security facilities;
- continuous recording of incidents based on events generated by SecurOS video analytic detectors as well as from any SecurOS integrated executive devices;
- working with incidents through a user-friendly interface, including automation tools and a decision support system;
- long-term storage of incident information;
- logging the actions of operators when they perform standard operating procedures for working with incidents;
- creation of reports on incidents and operator actions for further analysis and management decision making.



## 3 User Roles

User of the SecurOS Dispatcher can be assigned to one or more *Command Centers*. Each *Command Center* is responsible for monitoring specific objects. Monitored objects are understood as *Buildings* and associated *Sites* where devices (detectors) are located. Devices provide the source of alarm events. If an alarm event is detected at the monitored object, the responsible user will be informed of the occurrence of the corresponding incident. A user can receive incidents from all monitored objects that are the responsibility of the *Command Centers* to which the user is assigned. The procedure of working with incidents and the capabilities available to the user are defined by the administrator when configuring the client part of the SecurOS Dispatcher module, which includes assigning roles to users (see [SecurOS Dispatcher Administration Guide](#)).

A description of user roles is provided in Table 2.

**Table 2.** Roles of SecurOS Dispatcher users

| User role                       | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Control Room operator</b>    | The <i>Control Room operator</i> responds to incidents and processes them according to the regulations (see <a href="#">Processing Incidents by "Control Room Operator" User</a> ).                                                                                                                                                                                                                                                                                                                                    |
| <b>Dispatch Center operator</b> | <p>The <i>Dispatch Center operator</i> can perform the following operations:</p> <ul style="list-style-type: none"><li>• Respond to incidents and process them according to the regulations (see <a href="#">Processing Incidents by "Dispatch Center Operator" User</a>).</li><li>• View information about scheduled maintenance (see <a href="#">Viewing Scheduled Maintenance</a>).</li><li>• View information about maintenance companies and their employees (see <a href="#">Viewing Directories</a>).</li></ul> |

| User role                              | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|----------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Senior Dispatch Center operator</b> | <p>The <i>Senior Dispatch Center operator</i> can perform the following operations:</p> <ul style="list-style-type: none"> <li>• View a list of all operators (see <a href="#">Working with Operators Panel</a>).</li> <li>• Respond to incidents and process them according to the regulations (see <a href="#">Processing Incidents by "Senior Dispatch Center Operator" User</a>).</li> <li>• Delegate incidents to an operator with a specific role (see <a href="#">Delegating Incidents to Operator with Specific Role</a>).</li> <li>• Assign scheduled maintenance at controlled facilities (see <a href="#">Scheduled Maintenance Management</a>).</li> <li>• Edit information about maintenance companies and their employees (see <a href="#">Directories Management</a>).</li> <li>• View information about monitored objects, change alarm levels or disable the receipt of events from sensors on the basis of which incidents are generated (see <a href="#">Site Management</a>).</li> <li>• View archived incidents, change their status and create reports (see <a href="#">Working with Incident Archive</a>).</li> </ul> |
| <b>Emergency Team operator</b>         | <p>The <i>Emergency Team operator</i> is notified of the incident if, during the consideration of the incident by one of the operators listed above, it is decided that an emergency response team is required at the incident location. The user with this role can perform the following operations:</p> <ul style="list-style-type: none"> <li>• Respond to incidents and process them (see <a href="#">Processing Incidents by "Emergency Team Operator" User</a>).</li> <li>• View information about maintenance companies and their employees (see <a href="#">Viewing Directories</a>).</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |

## 4 User Login

The application will be launched automatically when starting the SecurOS operator interface (see Figure 1). SecurOS user credentials are required for the authorization.

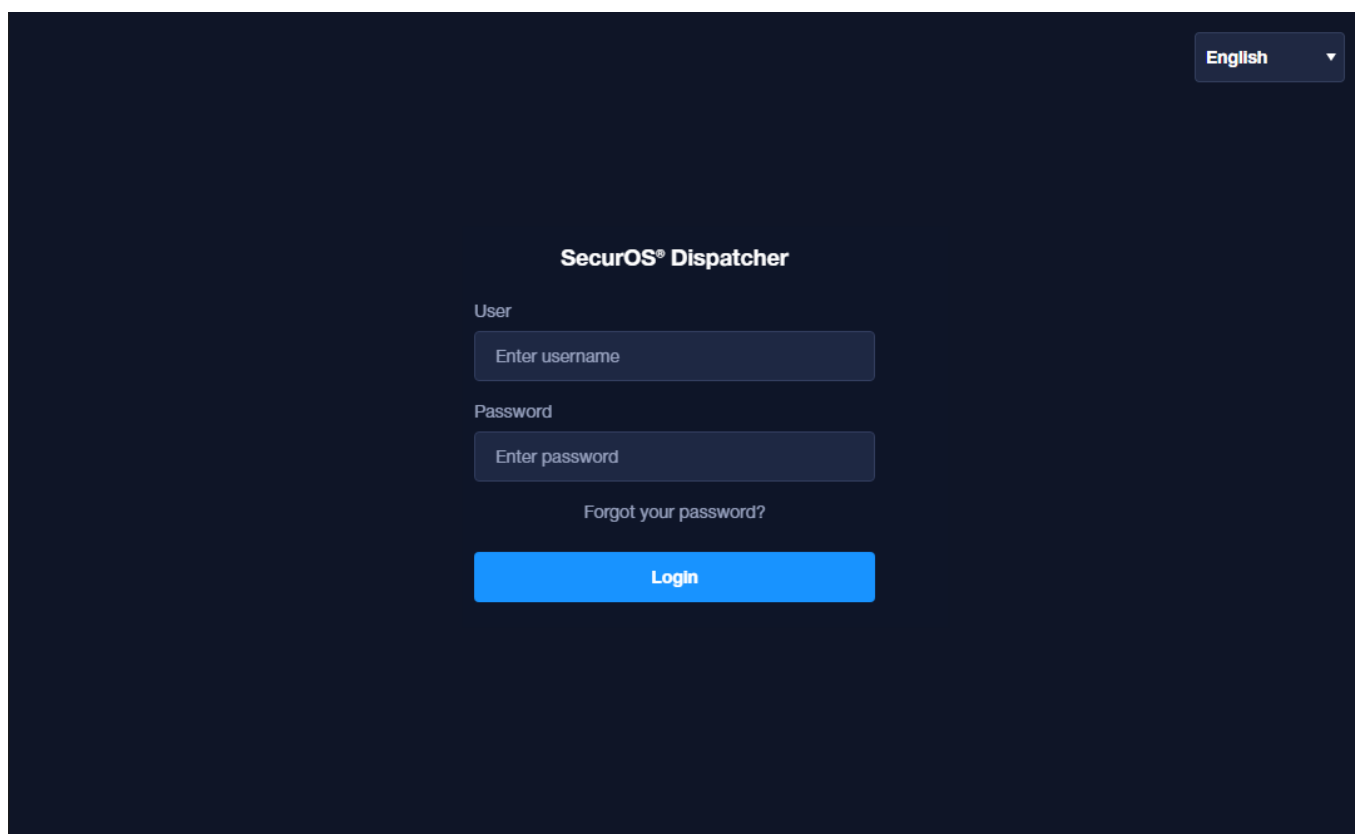
The image shows a dark-themed login window for SecurOS Dispatcher. In the top right corner, there is a language dropdown menu set to 'English'. The main title 'SecurOS® Dispatcher' is centered. Below it, the 'User' section has a text input field with the placeholder 'Enter username'. The 'Password' section has a text input field with the placeholder 'Enter password'. Below the password field is a link that says 'Forgot your password?'. At the bottom, there is a prominent blue 'Login' button.

Figure 1. SecurOS Dispatcher authorization window

### Warning!

1. Contact your system administrator to get SecurOS user credentials.
2. Authorization using Active Directory / LDAP user or SecurOS superuser (`root`) credentials is not possible.
3. Simultaneous logon with the same user account from different computers is not possible.
4. The **User** and **Password** fields are case sensitive.

## 5 Working with Navigation Panel

After successful authorization, the main window of the web application will be opened. At the top of the window, a navigation panel is located (see Figure 2).

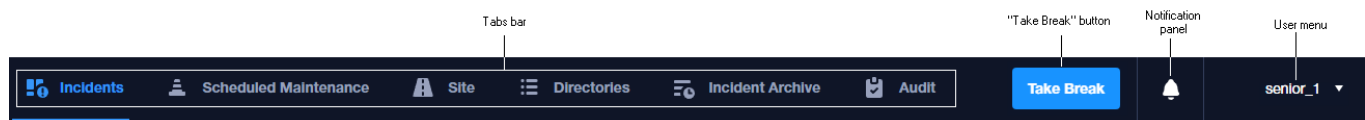


Figure 2. Navigation panel

The navigation panel contains:

- **Tabs bar** – provides navigation between sections. Availability of the sections depends on the role of the authorized user (see [User Roles](#)).
- **Take Break** button – allows the user to request a rest break (see [Requesting a Break](#)).
- **Notification panel** – used to view informational messages (see [Viewing Notifications](#)).
- **User menu** – displays information about the authorized user and provides an ability to customize the interface (see [Working with User Menu](#)).


### 5.1 Requesting a Break

The SecurOS Dispatcher provides a break system to pause the incoming incidents for operators who have temporarily left the workplace and to monitor the timely return of operators. When planning a break, the operator must compose a request that will be subject to consideration by a user with the *Senior Dispatch Center operator* role (see [Considering Break Requests](#)). When a break request is approved, incidents are forwarded to other operators.

To request a break, click the **Take Break** button located on the navigation panel. A form will open on the right side of the interface (see Figure 3), where the following information should be specified:

- A period of time during which the absence from the workplace is expected.
- A comment explaining the reason for the absence.

After completing the form, click the **Send** button.

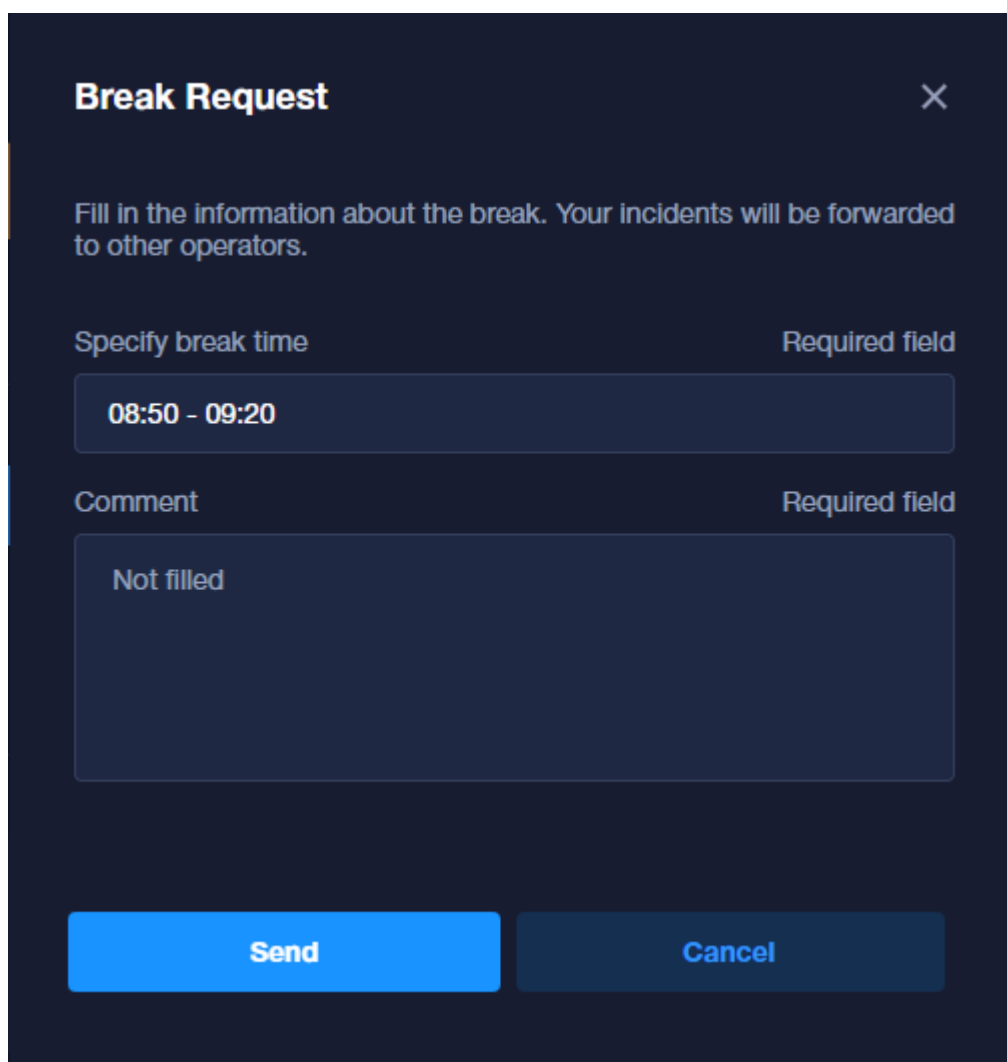

The image shows a 'Break Request' modal form. At the top, it says 'Break Request' with a close button (X). Below that, a message states: 'Fill in the information about the break. Your incidents will be forwarded to other operators.' There are two main input sections. The first is 'Specify break time' with a 'Required field' label and a text input field containing '08:50 - 09:20'. The second is 'Comment' with a 'Required field' label and a large text area containing 'Not filled'. At the bottom, there are two buttons: 'Send' (blue) and 'Cancel' (dark blue).

Figure 3. Break request form

If the break request has been approved, the current user will be notified (see Figure 4). Instead of the **Break** button, a timer is displayed to show how much time is left before the break starts. If the break request has been declined, the current user will also be notified. Details of the break request can be viewed by clicking the **Details** button.

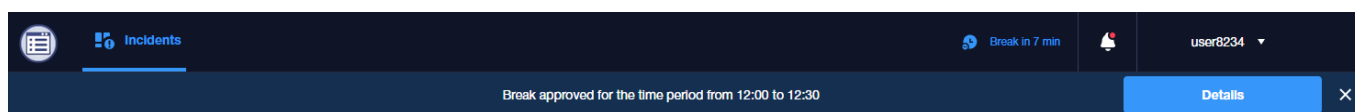


Figure 4. Notifications of approval and declining of a break request

**Notes:**

1. If a break request is declined, a new request can only be created after a certain amount of time set by the *SecurOS Dispatcher Administrator*.
2. Break requests are registered in the history (see [Viewing History of Operations](#)).

During a break, a timer appears in the application workspace showing how much time is left until the break ends (see Figure 5). After returning to the workplace, confirm the end of the break by clicking the **Return to work** button.

**Warning!** If the end of the break has not been confirmed before the timer expires, it is considered that the user has not returned to the workplace on time. All higher operators will be notified of the situation.

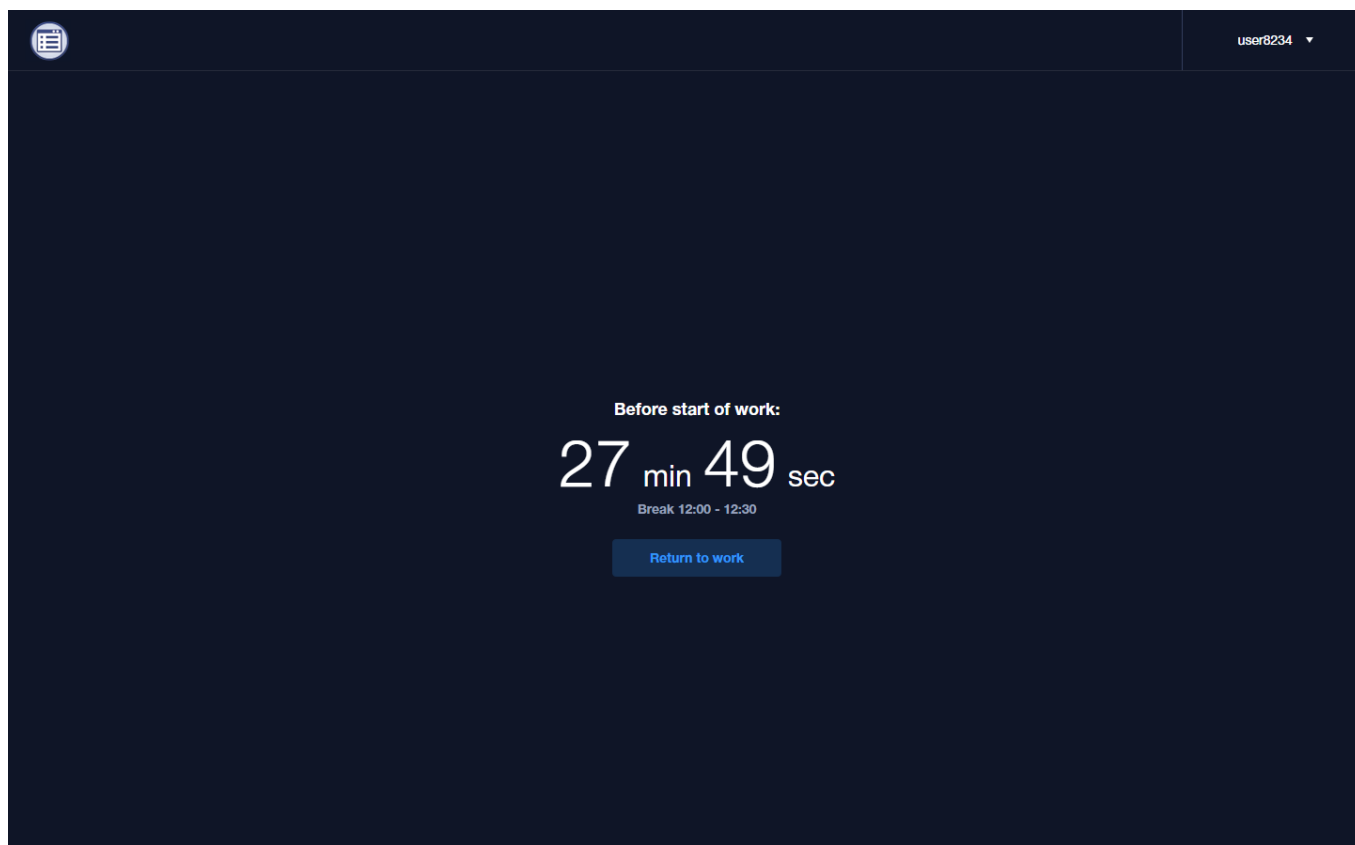


Figure 5. Break end timer

## 5.2 Viewing Notifications

New notifications requiring the operator's attention appear on a special bar that can be opened by clicking the  button (see Figure 6).

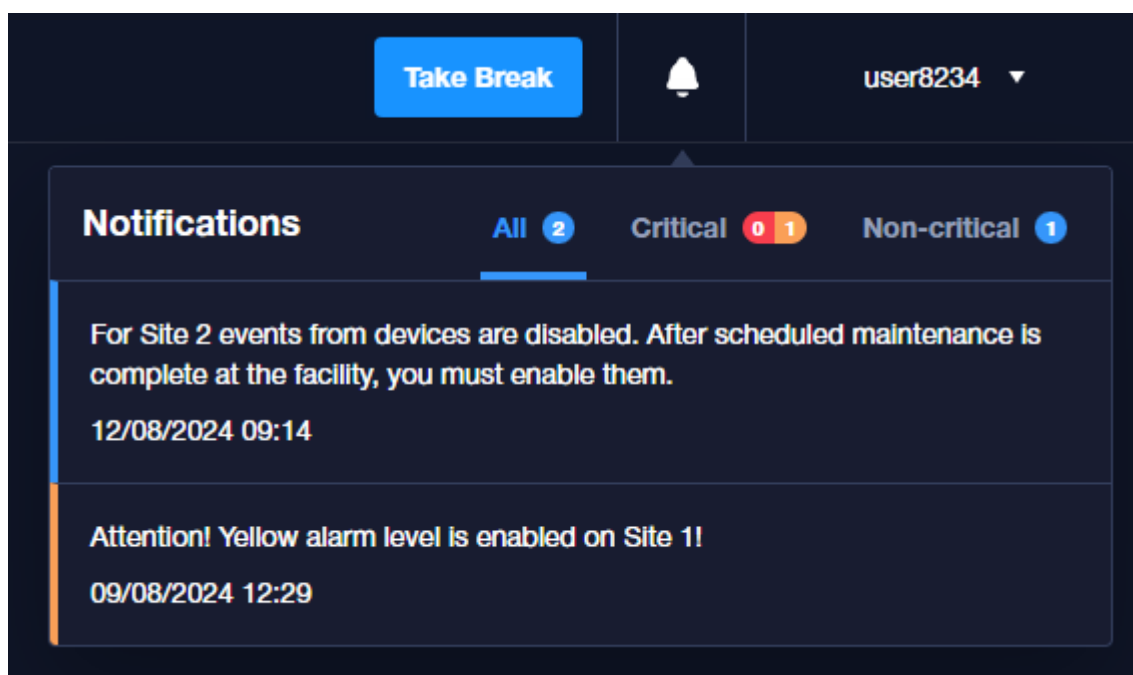


Figure 6. Notification panel

By default, all notifications are displayed in the general feed (**All** tab). Depending on their importance, notifications are categorized into one of the following tabs:

- **Critical** — this category includes notifications related to changes in the alarm level at the monitored facilities (see [Changing the Alarm Status of Site](#)):
  - Raise to a high (yellow) level of alarm.
  - Raise to a critical (red) level of alarm.
- **Non-critical** — this category includes notifications relating to:
  - Break requests (see [Requesting a Break](#) and [Considering Break Requests](#)).
  - Temporary disabling the receipt of events from sensors (see [Configuring the Receiving of Incidents](#)).

Notifications that are no longer relevant disappear from the feed regardless of whether the operator reads them.

## 5.3 Working with User Menu

Click on the username on the right side of the navigation panel to open the user menu. The user menu is shown in Figure 7.

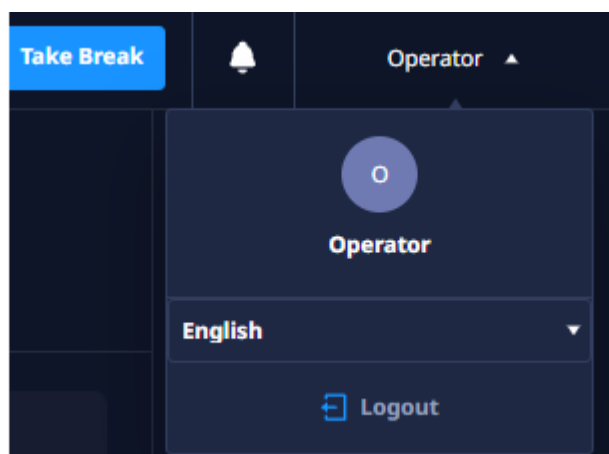


Figure 7. User menu

The user menu can be used to:

- Change the interface language — click on the current language and select your preferred language from the drop-down list.
- End current session — click the  **Logout** button.

---

**Note.** The current user's password must be entered to end the session.

---

## 6 User Role "Control Room Operator"

The user with the *Control Room operator* role responds to the incidents of the *Command Center's* objects to which the *Control Room operator* is assigned (see [Processing Incidents by "Control Room Operator" User](#)).

The appearance of the *Control Room operator* interface is shown in Figure 8.

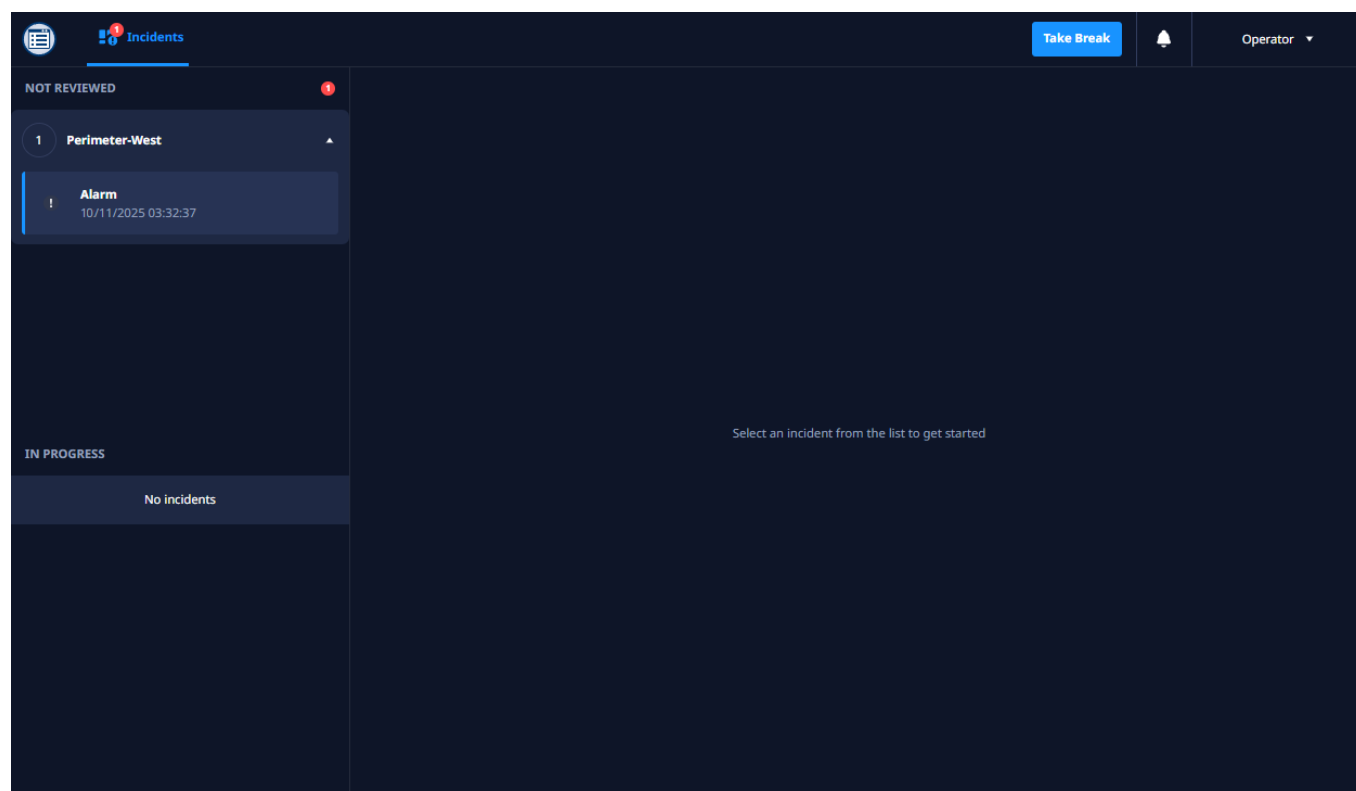


Figure 8. Control Room operator interface

### 6.1 Processing Incidents by "Control Room Operator" User

To get started, select the **Incidents** section on the navigation panel. Operation available in this section:

- [Working with Incident Feed](#).
- [Working with Incident Card](#).
  - [Incident Processing](#).
  - [Delegating Incident to Superior Operator](#).
  - [Dismissing the Incident](#).
- [Working with FaceX Incident Card](#).



### 6.1.1 Working with Incident Feed

All incidents received by the current operator are displayed in the incident feed (see Figure 9).

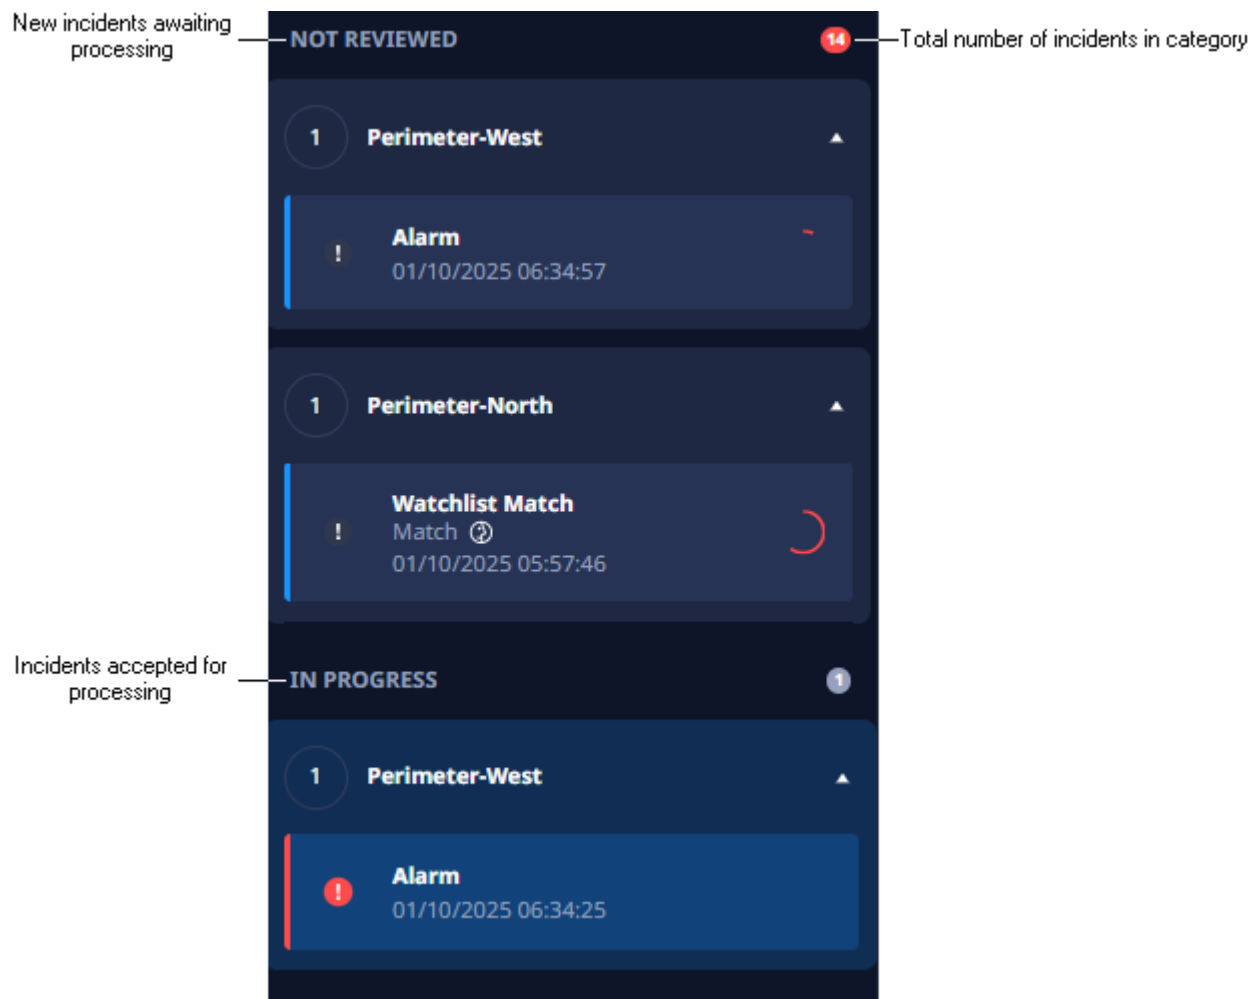


Figure 9. Incident feed

The incident feed consists of two categories:

- **Not reviewed** — this category contains new incidents that need to be responded to.
- **In progress** — this category contains incidents that are accepted by the operator and are currently being processed.

The total number of incidents included in each category is displayed to the right.

All incidents are grouped by administrator-configured attributes (e.g., territorial). The incident group panel (see Figure 10) displays the number and name of the *Site* associated with the monitored object where the incident occurred. If scheduled work is being performed at this *Site* (see [Viewing Scheduled Maintenance](#)), an  icon is displayed to the right of the *Site* name.

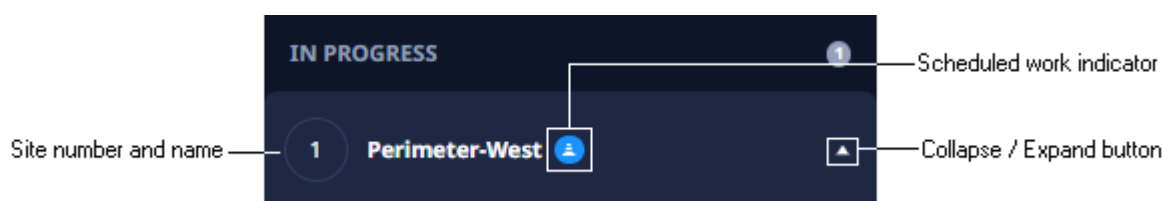


Figure 10. Incident group panel

To hide or display all incidents in the group, click the  (Collapse / Expand) button.

The panel (see Figure 11) displays the following information for each incident:

- Incident priority indicator:
  -  – low priority.
  -  – medium priority.
  -  – high priority.
- Incident title.
- Time of incident occurrence.
- Incident response timeout indicator. When the timeout is reached, the incident becomes overdue.

---

**Note.** The overdue incident disappears from the current operator's incident feed and is delegated to the superior operator. For example, an incident overdue by the *Control Room operator* would be delegated first to the *Dispatch Center operator*, and if the acceptance timeout is reached again, it would be delegated to the *Senior Dispatch Center operator*. An incident overdue by the *Emergency Team operator* would be immediately delegated to the *Senior Dispatch Center operator*.

---

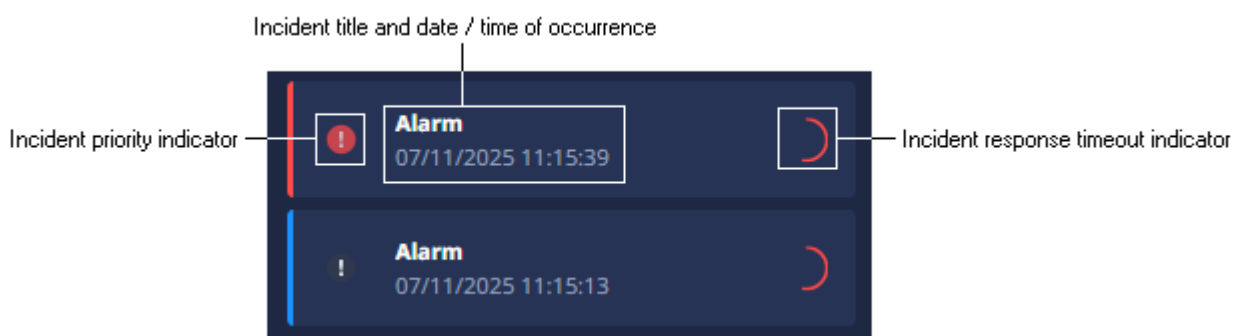


Figure 11. Individual incidents

**Warning!**

1. The incident response timeout continues to expire when the user logs out.
2. The incident response timeout is configured by the *SecurOS Dispatcher Administrator*.

Details of the incident can be viewed in the incident card. To open it, click on the incident in the feed.

### 6.1.2 Working with Incident Card

When an incident is selected in the feed, a card containing detailed information about the incident will be opened (see Figure 12). In the **Action History** section, it is possible to view the entire incident processing history, if available.

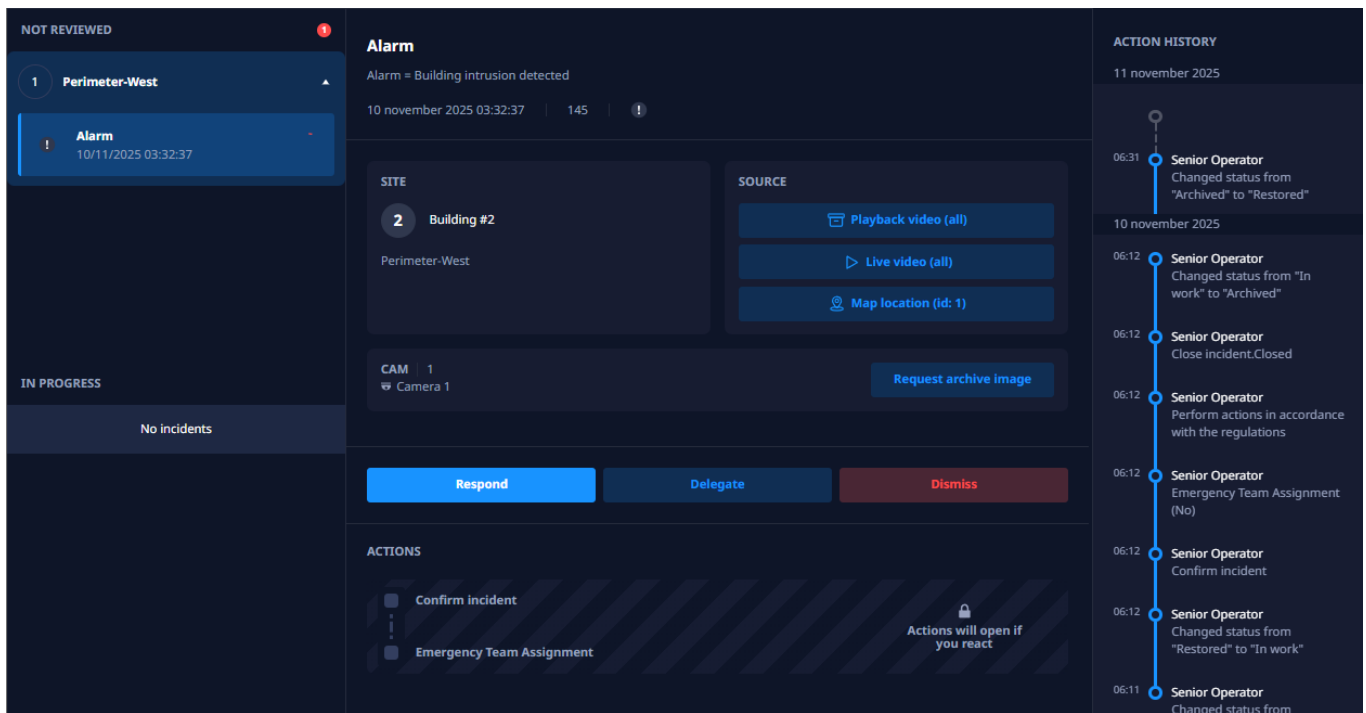


Figure 12. Incident Card

The following information is displayed at the top of the card (see Figure 13):

- 1 – incident title.
- 2 – incident name.
- 3 – date and time of the incident.
- 4 – incident identifier.
- 5 – incident priority.

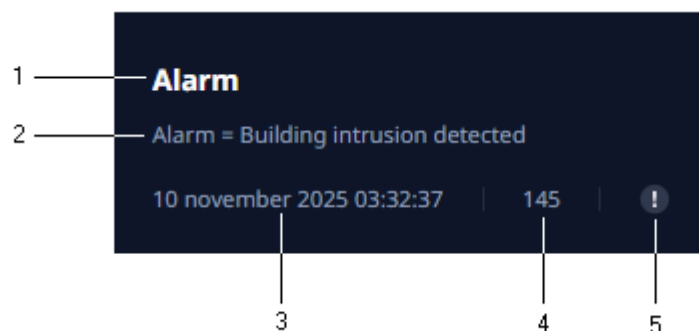


Figure 13. General information about the incident

The **Site** section contains data about the device's location (see Figure 14):

- 1 – *Site* number and name (address).
- 2 – *Building* number.

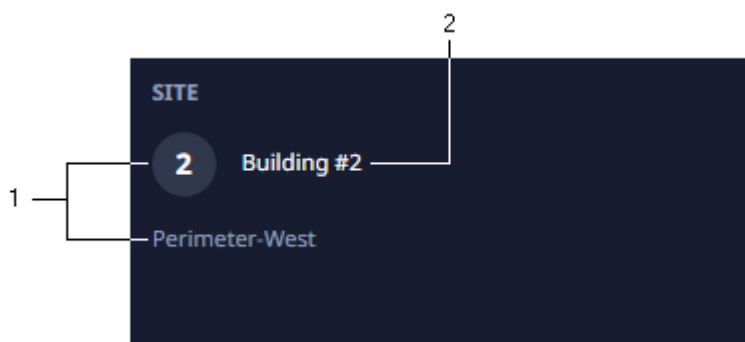


Figure 14. Device location information

Before making a decision regarding the incident, it is necessary to review the video from the *Cameras* associated with the device that generate the incident.

- **Playback video (all)** – click the button to open archived video of all *Cameras* in the *Media Client* at the time of the incident's occurrence.
- **Live video (all)** – click the button to open live video of all *Cameras* in the *Media Client*.
- **Map location** – click button to show the device location in the *Map: GUI* window.
- **Request archive image** – click to display the archive frame at the time of the incident's occurrence. A thumbnail will appear below. Clicking on it will open the full-size image (see Figure 15). Information about the *Camera* from which the frame was received is located to the left of the button.

---

**Note.** Viewing the archive frame or video is unavailable if the archive was not recorded or has been deleted.

---

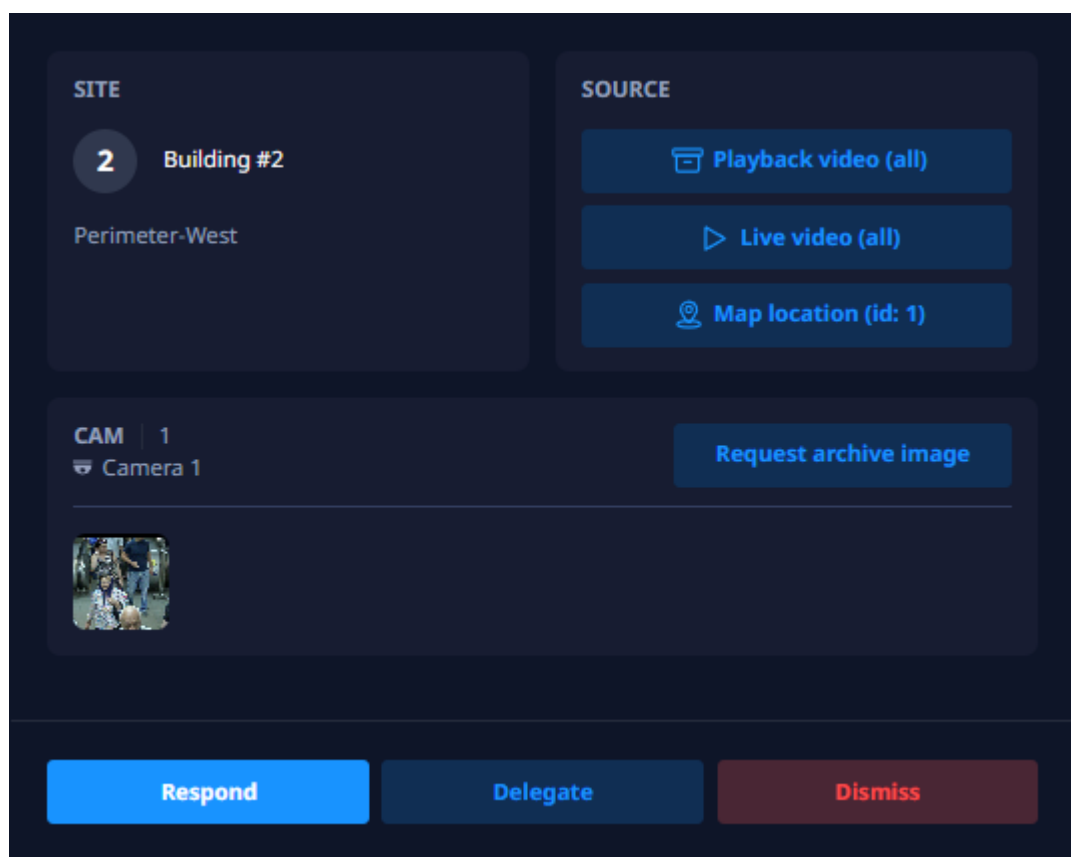


Figure 15. Requested archive image

The specifics of working with a FaceX incident card are described in the section **Working with FaceX Incident Card**.

After viewing the accompanying video materials, the operator may:

- Respond to the incident – if the operator is ready to respond to the incident and process it (see [Incident Processing](#)).
- Delegate the incident to superior operator – if the operator has difficulty dealing with the incident (see [Delegating Incident to Superior Operator](#)).
- Dismiss the incident – If, upon inspection of the accompanying materials, the operator finds no evidence of the incident (see [Dismissing the Incident](#)).

### 6.1.2.1 Incident Processing

**Warning!** Incident processing cannot be canceled.

To respond to the incident, follow these steps:

1. Click the **Respond** button (see [Figure 16](#)).

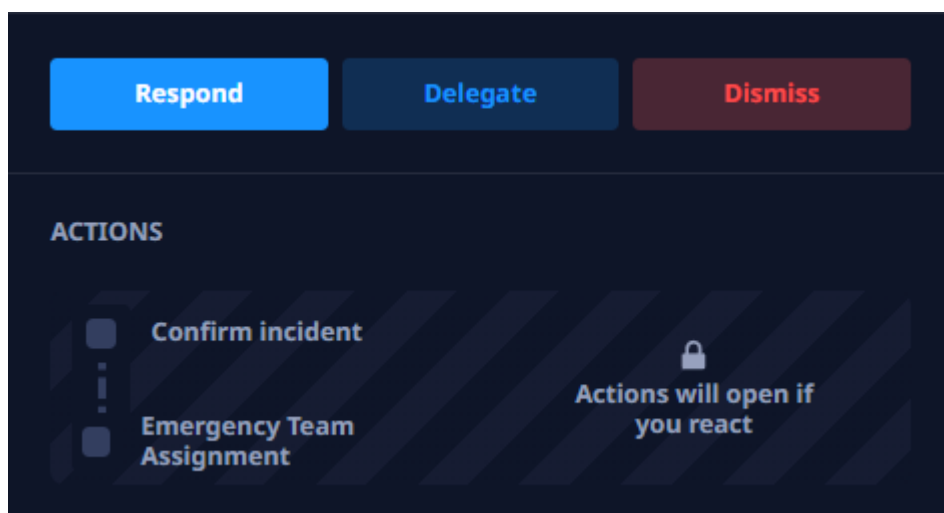


Figure 16. "Respond" button

2. In the opened window, select the response method: respond to the entire group or only to the selected incident (see [Figure 17](#)).

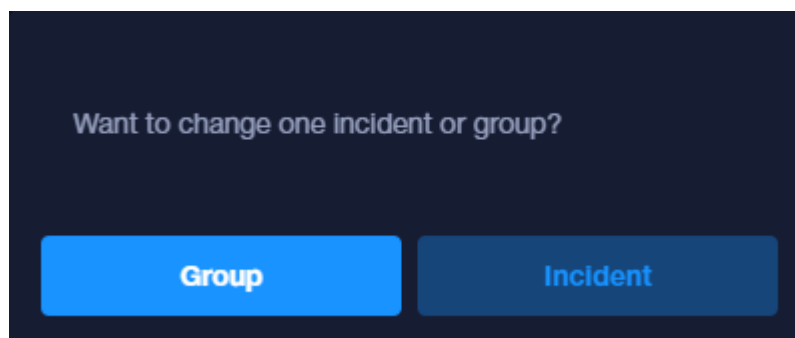


Figure 17. Response method selection window

3. After selecting one of the options, the actions provided for processing this type of incident will be available (see [Figure 18](#)). Click on the tooltip to see the regulations for incident processing.

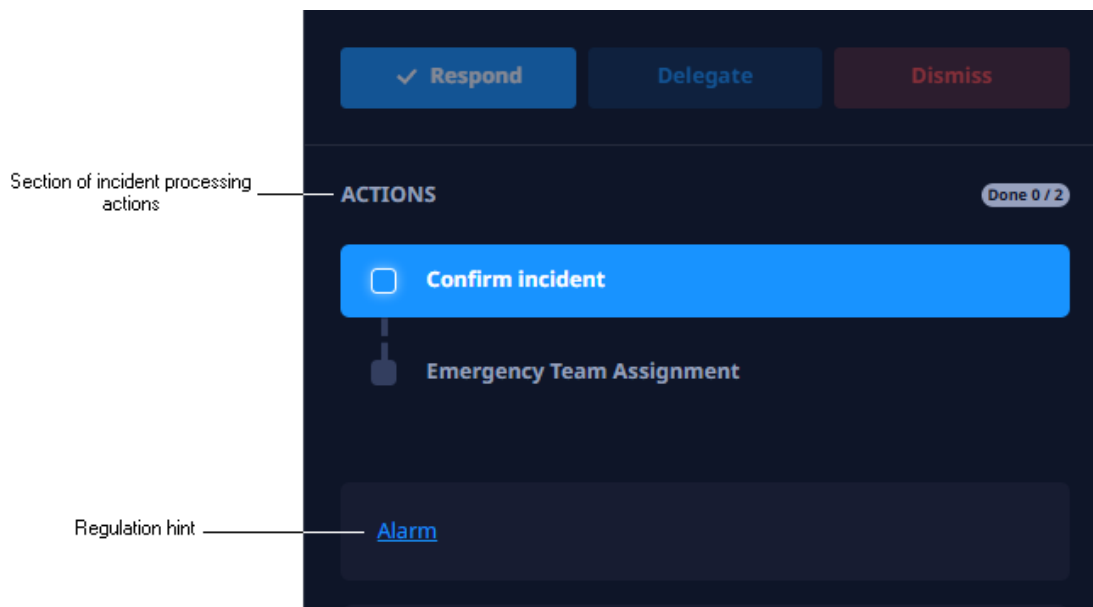


Figure 18. Action section and regulation hint

4. Perform the actions according to the regulations. An example of possible actions is shown in Figure 19.

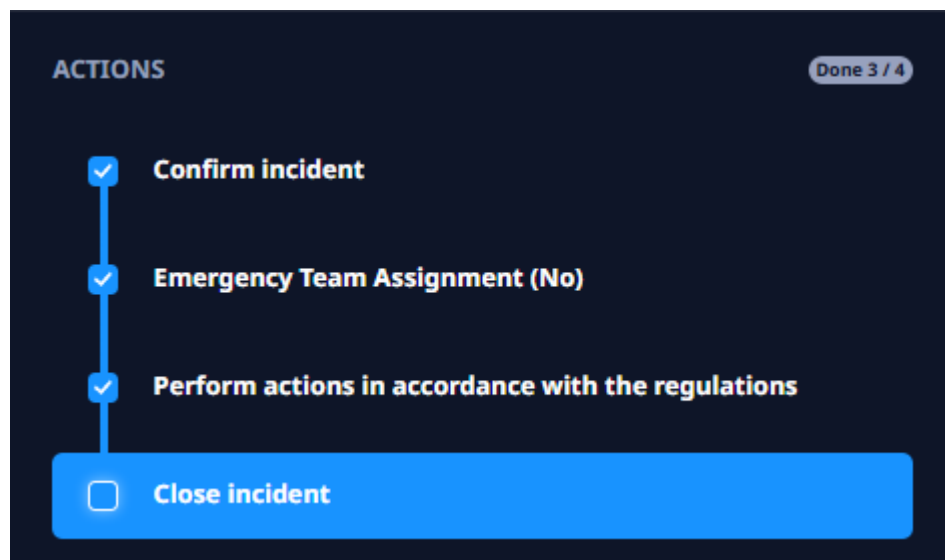


Figure 19. Example of incident processing actions

5. If necessary, text or image files may be attached to the incident after it has been responded to. To do this, click the **Attach File** button in the **Attachments** section (see Figure 20).

---

**Note.** Files in the following formats can be attached: jpg, png, pdf, txt, doc, docx. The size of each file must not exceed 50 MB.

---

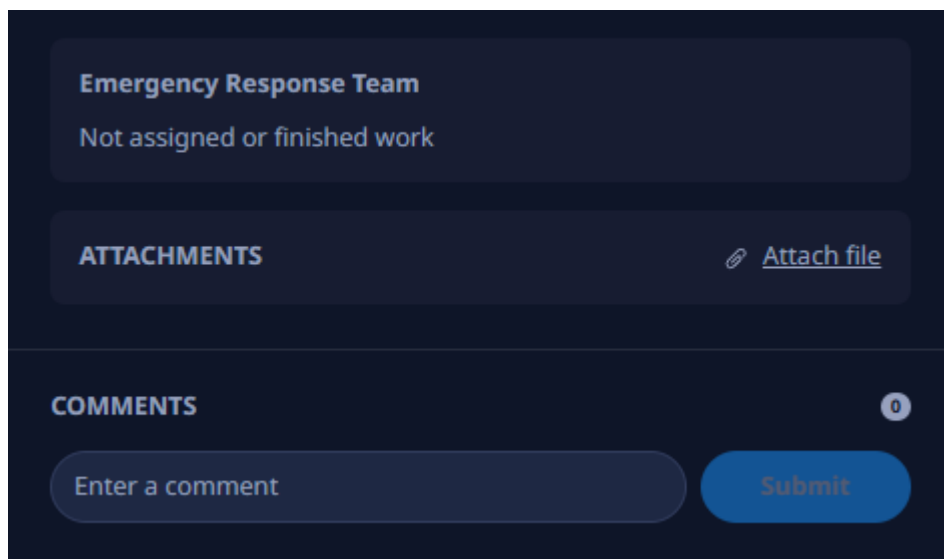


Figure 20. "Attachments" and "Comments" sections

6. If necessary, comments can be added to the incident before and after it is accepted. Comments on the incident will be visible to other operators who will further process it. To submit a comment, type it in the text field in the **Comments** block and click the **Submit** button (see Figure 20).
7. If *Emergency Team operator* is assigned to further process the incident, the incident will immediately disappear from the incident feed and its card will be closed. The *Emergency Team operator* will send a report after processing the incident. To view the report, click the **Open report from Emergency Response Team** button (see Figure 21). An example of the report is shown in Figure 22.

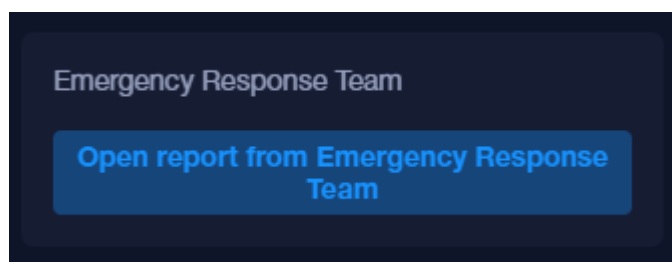


Figure 21. "Open report from Emergency Response Team" button

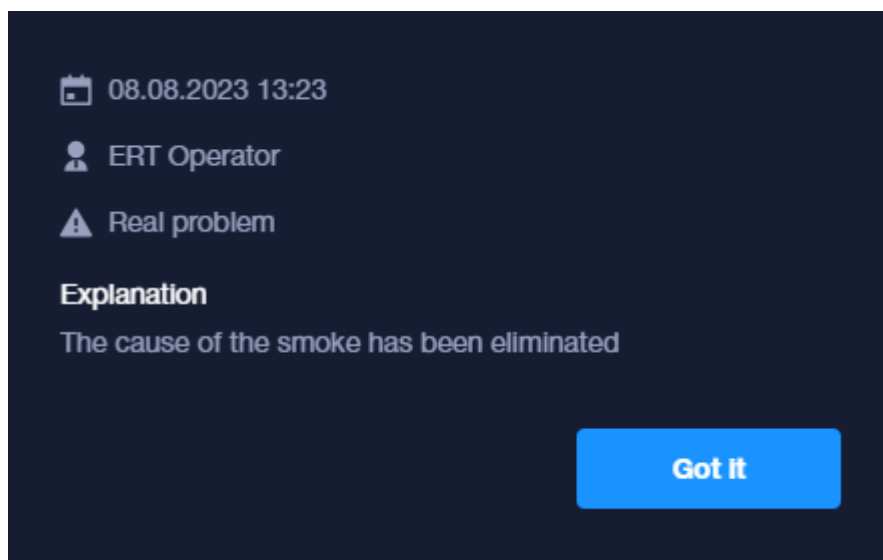


Figure 22. Report from the Emergency Response Team operator

- If incident processing is complete, the **Close incident** window will appear on the right (see Figure 23). Fill in the **Reason of closing** text field with the relevant information and click the **Close incident** button. After closing, the incident will go to the incident archive (see [Working with Incident Archive](#)).

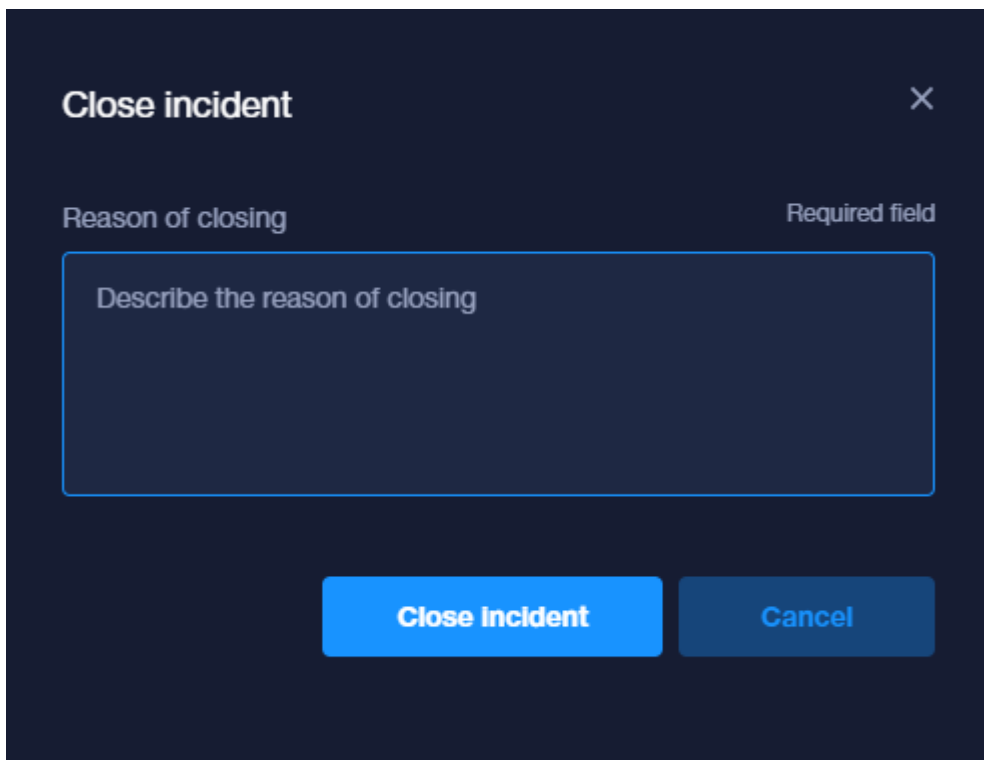
A dark-themed modal window titled "Close incident" with a close button (X) in the top right corner. Below the title, there is a label "Reason of closing" and a "Required field" indicator. A large text input field with a blue border contains the placeholder text "Describe the reason of closing". At the bottom, there are two buttons: a blue "Close Incident" button and a grey "Cancel" button.

Figure 23. "Close incident" window

#### 6.1.2.2 Delegating Incident to Superior Operator

To delegate the incident to a superior operator (*Dispatch Center operator* or *Senior Dispatch Center operator*), follow these steps:

- If necessary, submit a comment to the incident. To submit a comment, type it in the text field in the **Comments** block and click **Send** (see Figure 24).

A dark-themed section titled "COMMENTS" in blue. In the top right corner, there is a blue circle with the number "0". Below the title, there is a large, rounded text input field with the placeholder text "Enter a comment". To the right of the input field is a blue rounded button labeled "Submit".

Figure 24. "Comments" section

- Click the **Delegate** button (see Figure 25).



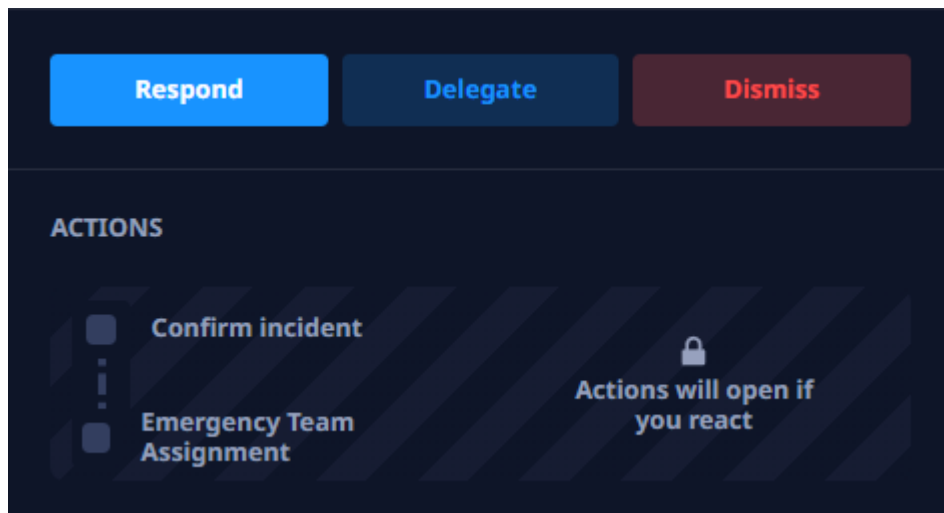



Figure 25. "Delegate" and "Dismiss" buttons

3. Select whether to delegate only one incident or the entire group. Immediately thereafter, the incident (or group of incidents) will be forwarded to the higher operator.

#### 6.1.2.3 Dismissing the Incident

To dismiss the incident, follow these steps:

1. Click the **Dismiss** button. The corresponding window will be opened on the right (see Figure 26).

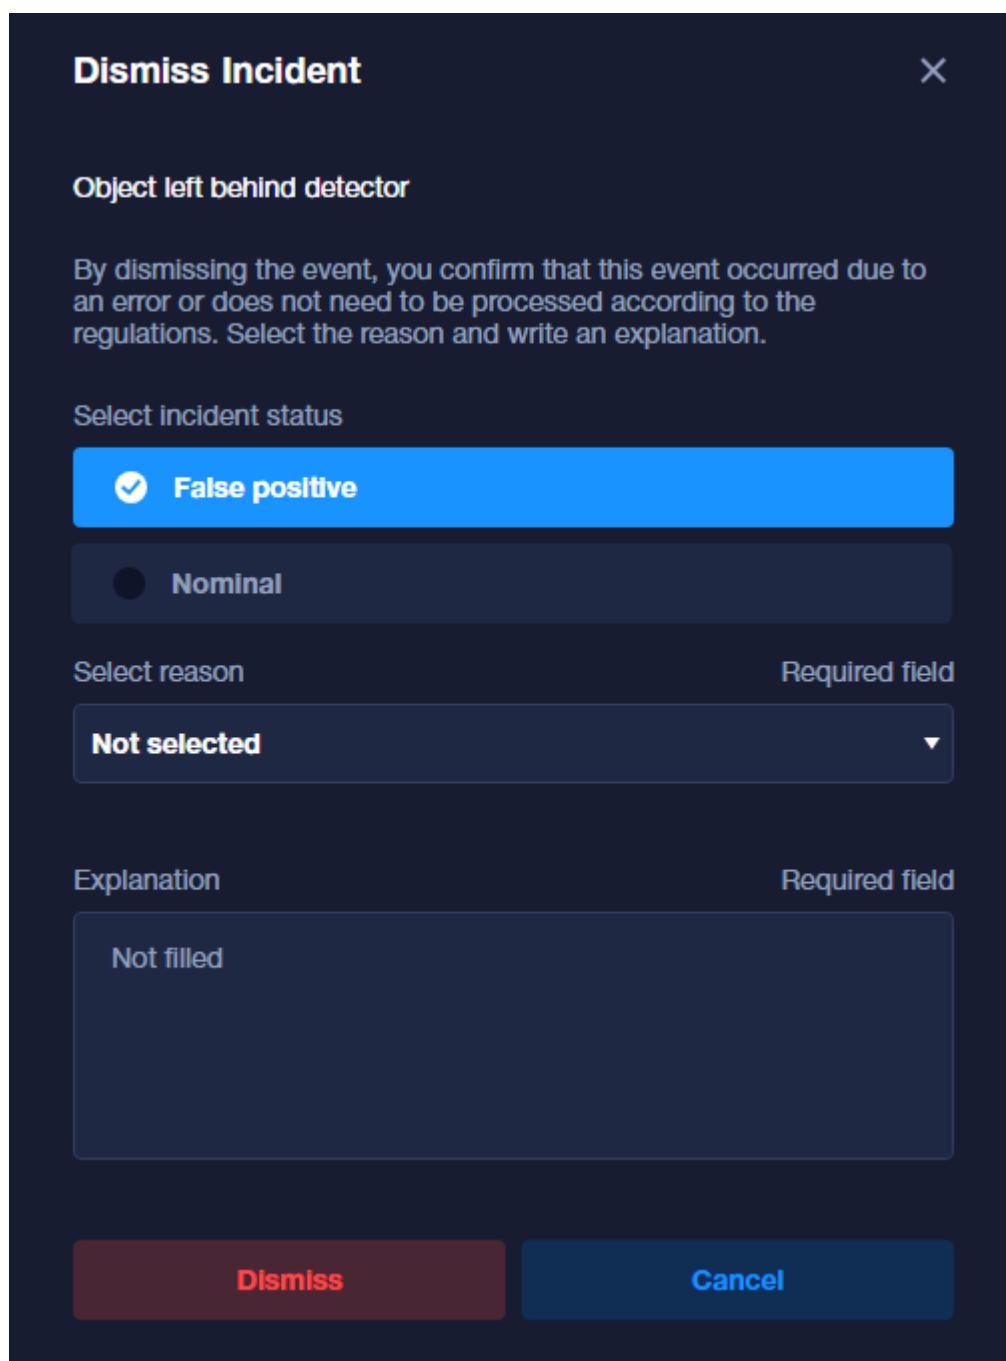

The image shows a 'Dismiss Incident' dialog box with a dark blue background. At the top left is the title 'Dismiss Incident' and a close button 'X' at the top right. Below the title is the incident description 'Object left behind detector'. A paragraph explains that dismissing the event confirms it occurred due to an error or does not need processing. The 'Select incident status' section has two radio buttons: 'False positive' (selected) and 'Nominal'. The 'Select reason' section is a dropdown menu currently showing 'Not selected', with a 'Required field' label. The 'Explanation' section is a large text area currently showing 'Not filled', also with a 'Required field' label. At the bottom are two buttons: 'Dismiss' (red) and 'Cancel' (blue).

Figure 26. Incident dismissal window

2. Select the status to close the incident with:
  - **False positive** — if the incident was generated in error, for example, as a result of incorrect operation of software or hardware.
  - **Nominal** — if an incident was generated reasonably, but its processing according to the regulations is not required.
3. Select the dismissal reason provided for this status.
4. Add a written explanation in the **Explanation** text field.

---

**Note.** Whether an explanation is required is determined by the *SecurOS Dispatcher Administrator*.

---

- Click the **Dismiss** button. After that, the incident will go to the **Incident Archive** (see [Working with Incident Archive](#)).

### 6.1.3 Working with FaceX Incident Card

SecurOS Dispatcher supports processing incidents received from the SecurOS FaceX module. These incidents are handled according to the standard procedure and established regulations. Their key feature is that the incident card displays additional information related to face recognition.

FaceX incidents are displayed in the feed with a special indicator (see [Figure 27](#)).

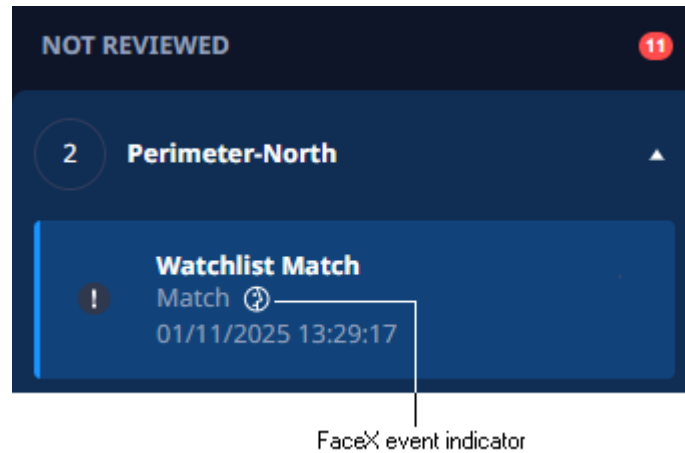


Figure 27. FaceX incident indicator in the feed

When working with a FaceX incident, the **FACEX** section is displayed in its card (see [Figure 28](#))

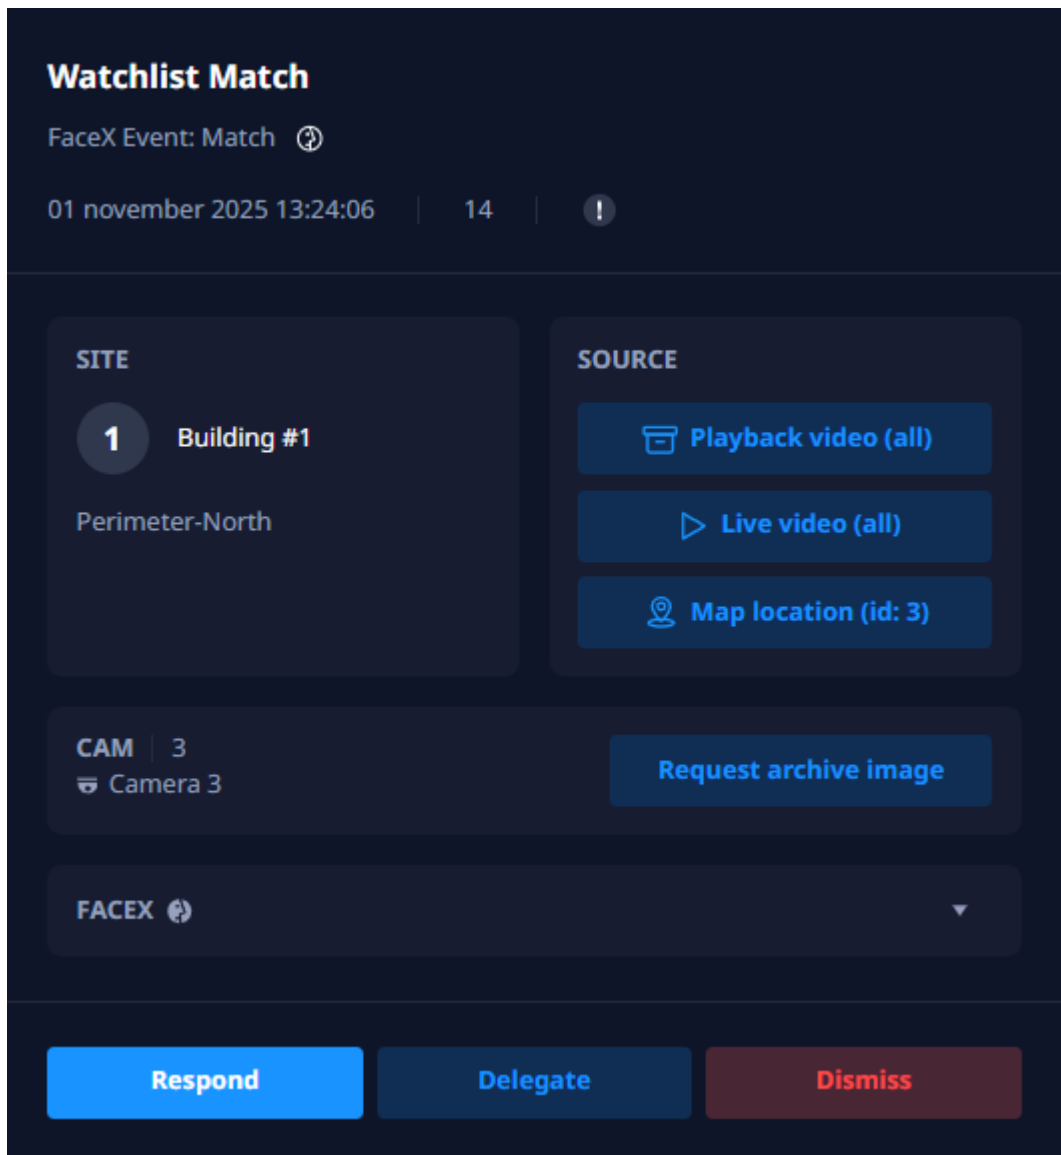


Figure 28. FaceX incident card

Clicking on this section reveals the following information (see Figure 29):

- Name of the recognized person.
- Name of the Watchlist that the match was found against.
- Person's photo from the Watchlist.
- Camera frame.

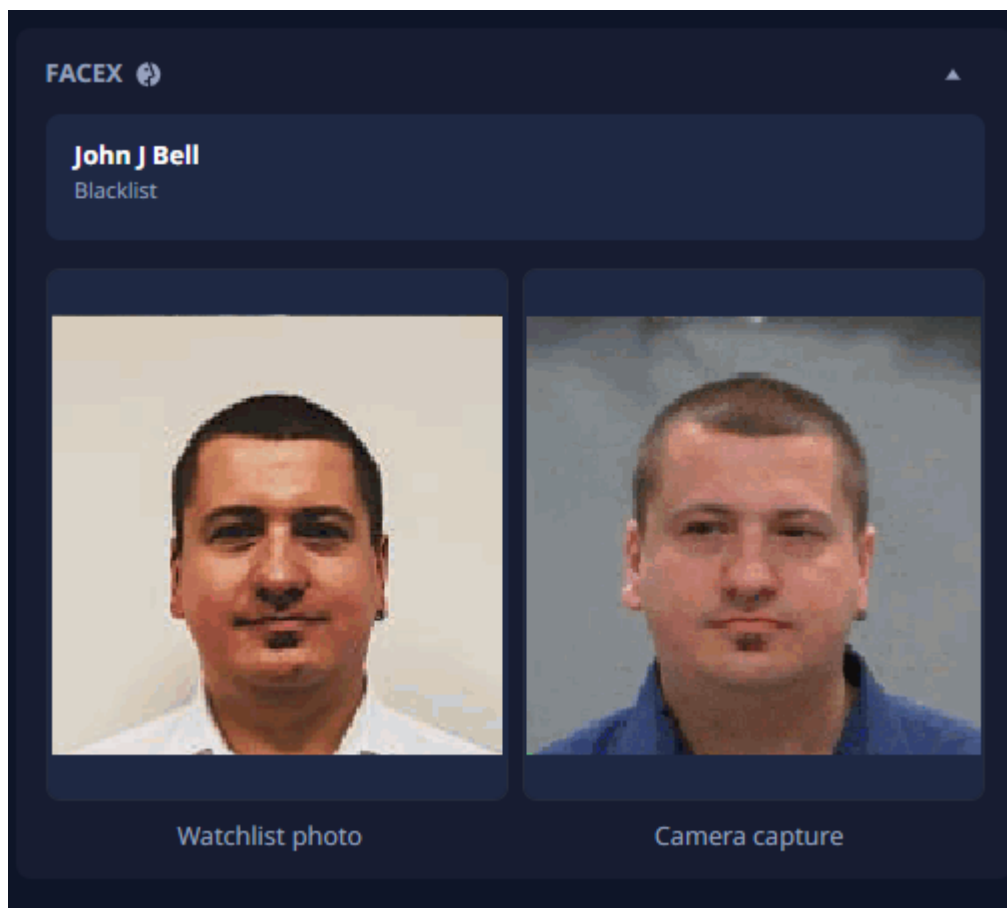


Figure 29. FaceX section in the incident card

## 7 User Role "Dispatch Center Operator"

The following features are available to the user with the *Dispatch Center operator* role:

- **Processing Incidents by "Dispatch Center Operator" User.**
- **Viewing Scheduled Maintenance.**
- **Viewing Directories.**

The appearance of the *Dispatch Center operator* interface is shown in Figure 30.

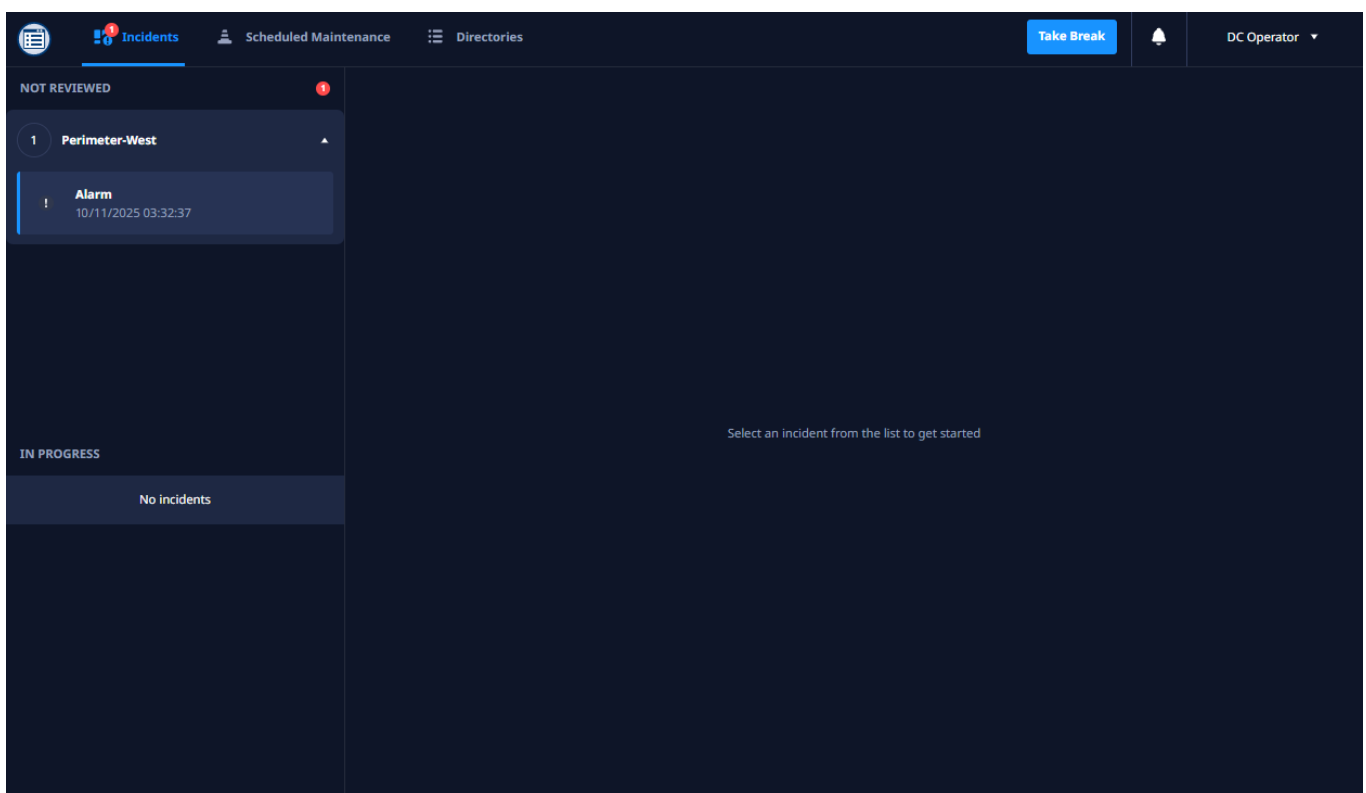


Figure 30. Dispatch Center operator interface

### 7.1 Processing Incidents by "Dispatch Center Operator" User

The *Dispatch Center operator* can process the incidents in the same way as the *Control Room operator* (see **Processing Incidents by "Control Room Operator" User**).

### 7.2 Viewing Scheduled Maintenance

*Dispatch Center operator* can view a list of scheduled maintenance. Scheduled maintenance refers to various repair or maintenance activities carried out at controlled facilities.

**Notes:**

1. Scheduled maintenance is registered by the *Senior Dispatch Center operator* (see [Scheduled Maintenance Management](#)).
2. The **Scheduled Maintenance** section is not available for users with *Control Room operator* and *Emergency Team operator* roles.

Navigate to the **Scheduled Maintenance** section to get started. The appearance of the **Scheduled Maintenance** section is shown in Figure 31.

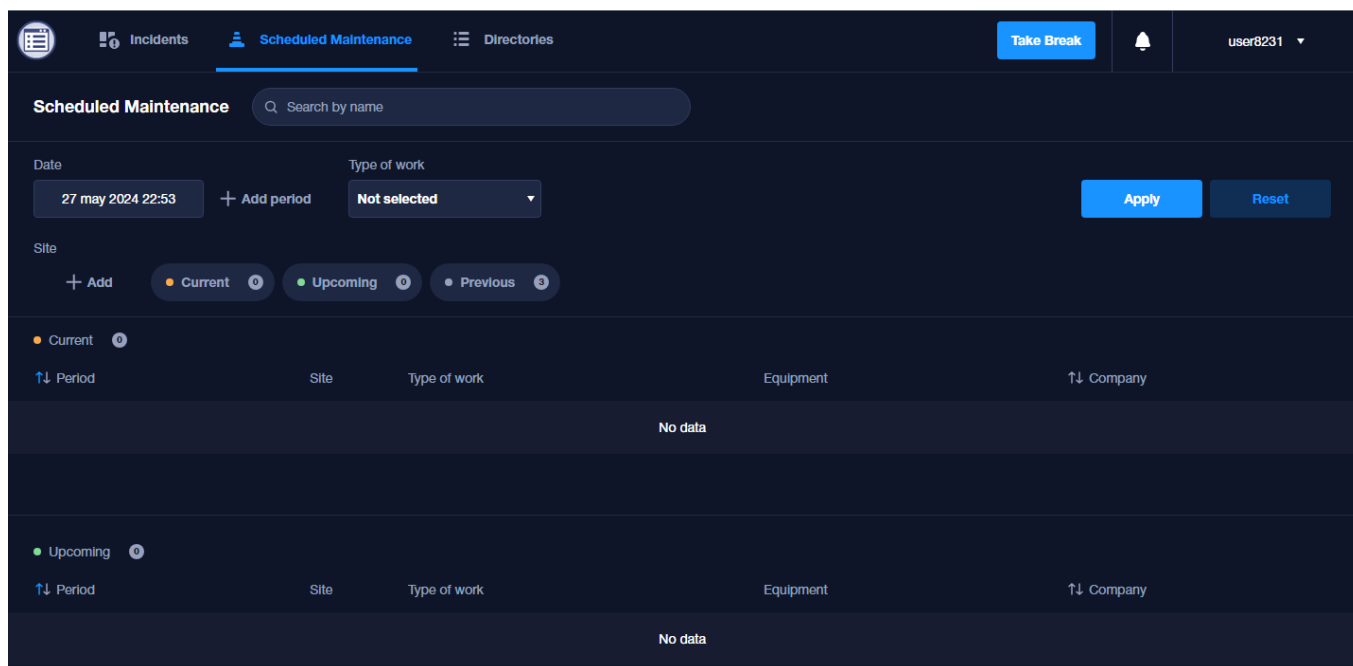


Figure 31. Scheduled Maintenance section

The panel for filtering scheduled maintenance is located at the top of the section (see Figure 32).

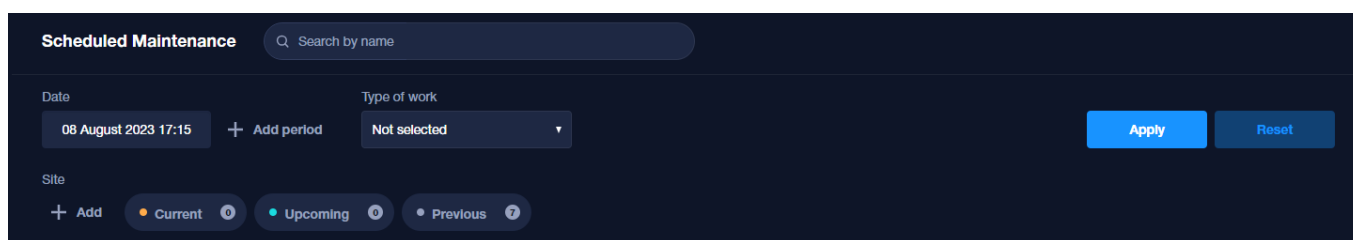


Figure 32. Filter and search panel for scheduled maintenance

The list of scheduled maintenance can be filtered by name of the maintenance company. To do this, enter the maintenance company's name or part of it in the **Search by name** field. When entering characters, the list is filtered automatically taking into account the contents of the search field and other specified parameters (filters by date, type of work, site, status).

To specify the date and time for scheduled maintenance, click the **Date** field. To search by time interval, click the **Add period** button. Specify the start and end date and time of the required scheduled maintenance in the **Period from** and **Period to** fields (see Figure 33).

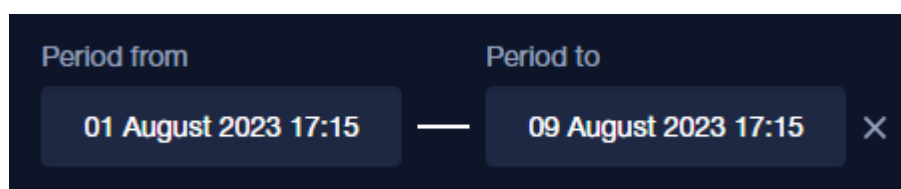


Figure 33. Selecting the search time interval

To filter the list by type of scheduled maintenance, click on the **Type of work** field and select the required type from the drop-down list (see Figure 34).

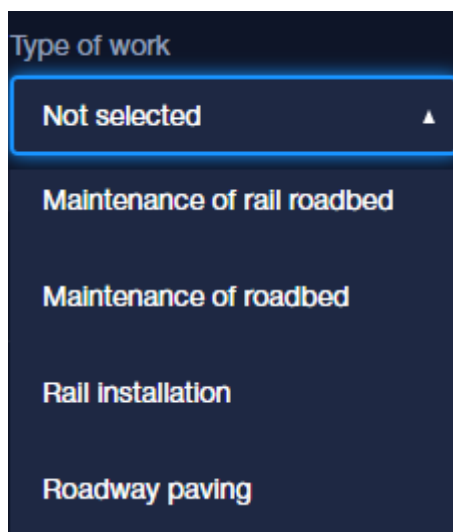


Figure 34. Selecting the type of maintenance work

To filter the list by scheduled maintenance location, click the **Add** button in the **Site** block. Select the *Site* from the drop-down list. To filter the list by scheduled maintenance status, select the required option in the status panel (see Figure 35).

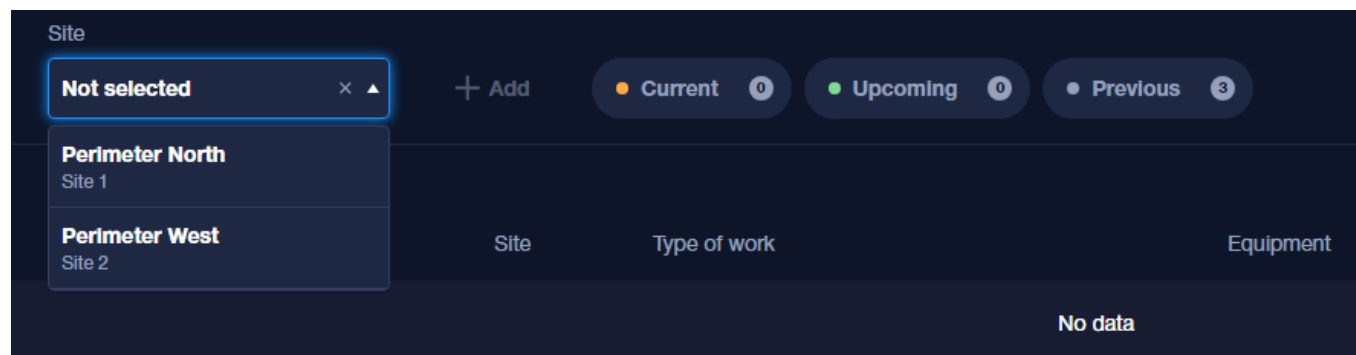


Figure 35. Selecting the status of scheduled maintenance

- **Current** — scheduled maintenance that is currently being performed.
- **Upcoming** — upcoming scheduled maintenance.
- **Previous** — past scheduled maintenance.

To apply to the list the filters described above, click the **Apply** button. An example of the filtered list is shown in Figure 36. To clear all filters and the search field, click the **Reset** button.



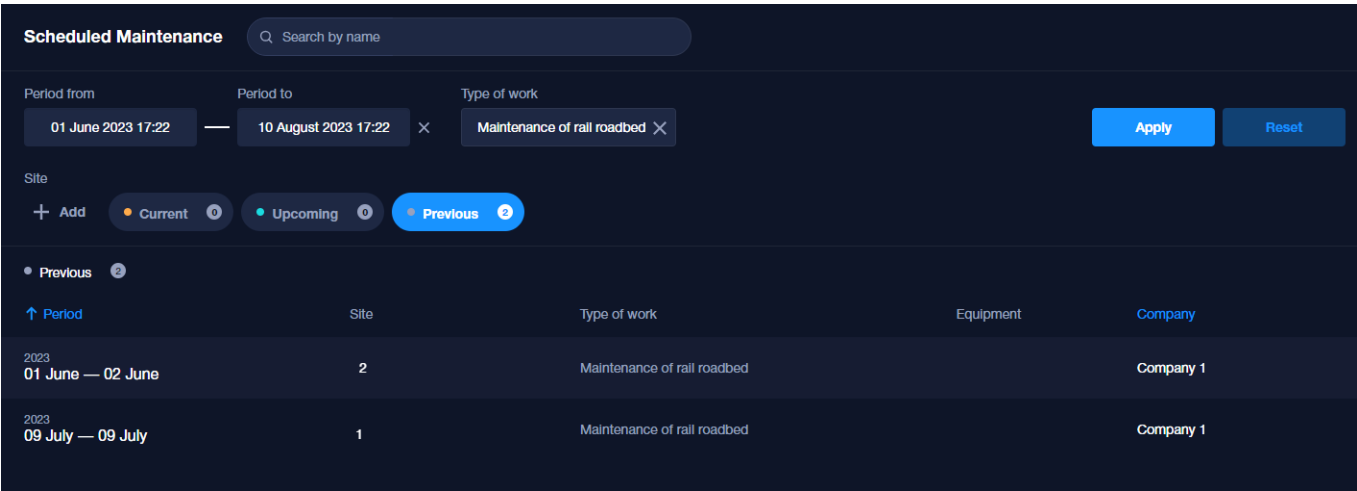


Figure 36. Filtered list of scheduled maintenance

Information about scheduled maintenance is presented as a table:

- **Period** — time interval of the scheduled maintenance.
- **Site** — number of the *Site*, associated with the monitored object where the scheduled maintenance is to be performed.
- **Type of work** — type of scheduled maintenance.
- **Equipment** — any useful information relating to the scheduled maintenance. For example, a detailed list of equipment used.
- **Company** — name of the maintenance company (see [Viewing Directories](#)).

### 7.3 Viewing Directories

Navigate to the **Directories** section to get started. The directory provides access to view information about the companies performing scheduled maintenance (see [Viewing Scheduled Maintenance](#)).

This section describes how to work with the following subsections of the directory:


- [Companies Section](#).
- [Employees Section](#).

Notes:

1. Maintenance companies and their employees are registered by the *Senior Dispatch Center operator* (see [Directories Management](#)).
2. The **Directories** section is unavailable for users with the *Control Room operator* role.

### 7.3.1 Companies Section

When going to the **Directories** section, the **Companies** subsection opens (see Figure 37).

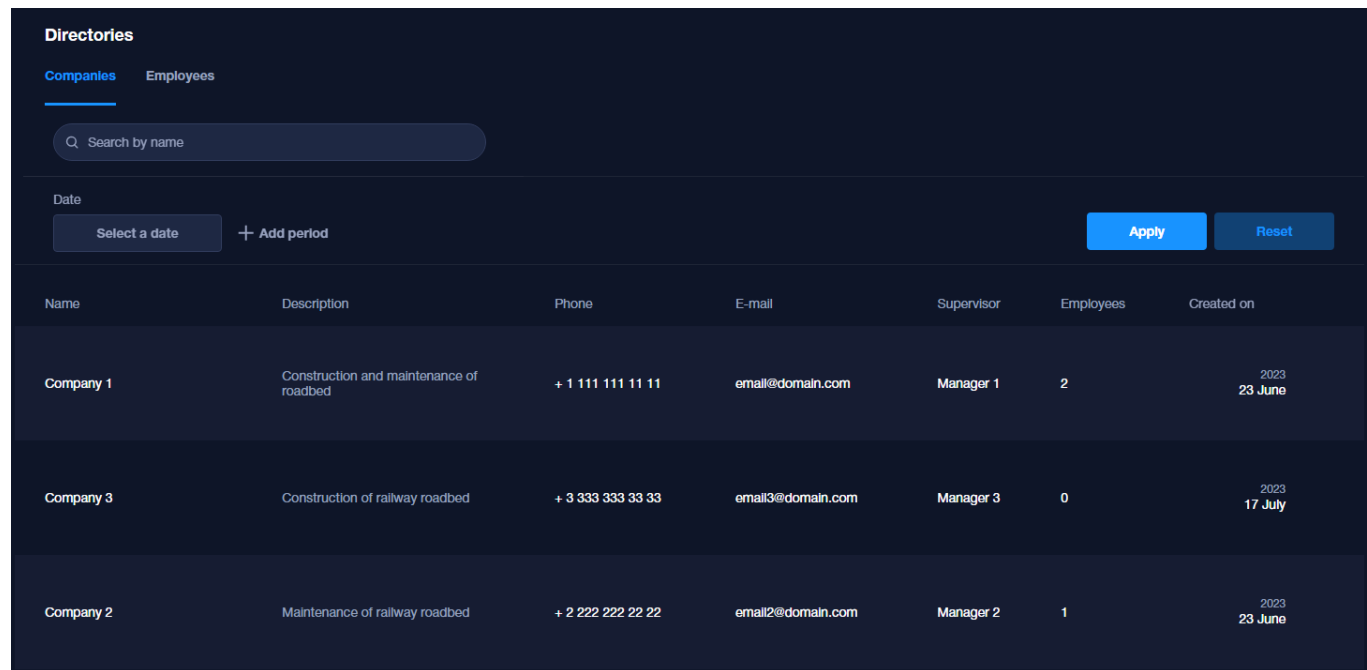

**Directories**

**Companies** Employees

Q Search by name

Date

Select a date + Add period

Apply Reset

| Name      | Description                             | Phone             | E-mail            | Supervisor | Employees | Created on      |
|-----------|-----------------------------------------|-------------------|-------------------|------------|-----------|-----------------|
| Company 1 | Construction and maintenance of roadbed | + 1 111 111 11 11 | email@domain.com  | Manager 1  | 2         | 2023<br>23 June |
| Company 3 | Construction of railway roadbed         | + 3 333 333 33 33 | email3@domain.com | Manager 3  | 0         | 2023<br>17 July |
| Company 2 | Maintenance of railway roadbed          | + 2 222 222 22 22 | email2@domain.com | Manager 2  | 1         | 2023<br>23 June |

Figure 37. Companies section

The list of maintenance companies can be filtered by name. To do this, enter the maintenance company's name or part of it in the **Search by name** field. When characters are entered, the list is filtered automatically according to the contents of the search field.

In the **Date** field, one can specify the date or the time interval of the company's registration in the directory. To specify a time interval, click the **Add period** button and specify the required dates in the corresponding fields. Next click the **Apply** button to apply the set filters.

Information about maintenance companies is presented as a table:

- **Name** — company name.
- **Description** — any useful information about the company, such as the types of maintenance provided.
- **Phone** — phone number to contact the company.
- **E-mail** — e-mail address to contact the company.
- **Supervisor** — name of the company supervisor.
- **Employees** — the number of employees of this company registered in the directory (see [Employees Section](#)).
- **Created on** — date of registration of the company in the directory.

## 7.3.2 Employees Section

Select the **Employees** subsection to view employees of maintenance companies (see Figure 38).

The screenshot shows the 'Directories' section with 'Employees' selected. It includes a search bar 'Search by name', a 'Date' filter with 'Select a date' and '+ Add period' buttons, and a 'Company' filter with a 'Not selected' dropdown. There are 'Apply' and 'Reset' buttons. Below is a table of employees.

| Full name  | Description     | Company   | Phone             | E-mail               | Created on      |
|------------|-----------------|-----------|-------------------|----------------------|-----------------|
| Employee 1 | Company manager | Company 1 | + 1 111 111 11 12 | employee1@domain.com | 2023<br>23 June |
| Employee 3 | Company manager | Company 2 | + 1 222 222 22 22 | employee3@domain.com | 2023<br>13 July |
| Employee 2 | Company manager | Company 1 | + 2 121 212 12 12 | employee2@domain.com | 2023<br>23 June |

Figure 38. Employees section

The list of employees can be filtered by name. To do this, enter the employee's name or part of it in the **Search by name** field. When characters are entered, the list is filtered automatically according to the contents of the search field.

In the **Date** field, one can specify the date or interval of the employee's registration in the directory. To specify a time interval, click the **Add period** button and specify the required dates in the corresponding fields. Select one or more companies of interest using the **Company** drop-down list. Next click the **Apply** button to apply the set filters.

Information about employees is presented as a table:

- **Full name** — employee's name.
- **Description** — any useful information about the employee, such as job title.
- **Company** — employee's company.
- **Phone** — phone number to contact the employee.
- **E-mail** — e-mail address to contact the employee.
- **Created on** — date of registration of the employee in the directory.

## 8 User Role "Senior Dispatch Center Operator"

The following features are available to user with the *Senior Dispatch Center operator* role:

- **Working with Operators Panel.**
- **Considering Break Requests.**
- **Processing Incidents by "Senior Dispatch Center Operator" User.**
- **Delegating Incidents to Operator with Specific Role.**
- **Scheduled Maintenance Management.**
- **Directories Management.**
- **Site Management.**
- **Working with Incident Archive.**
- **Viewing History of Operations.**

The appearance of the *Senior Dispatch Center operator* interface is shown in Figure 39.

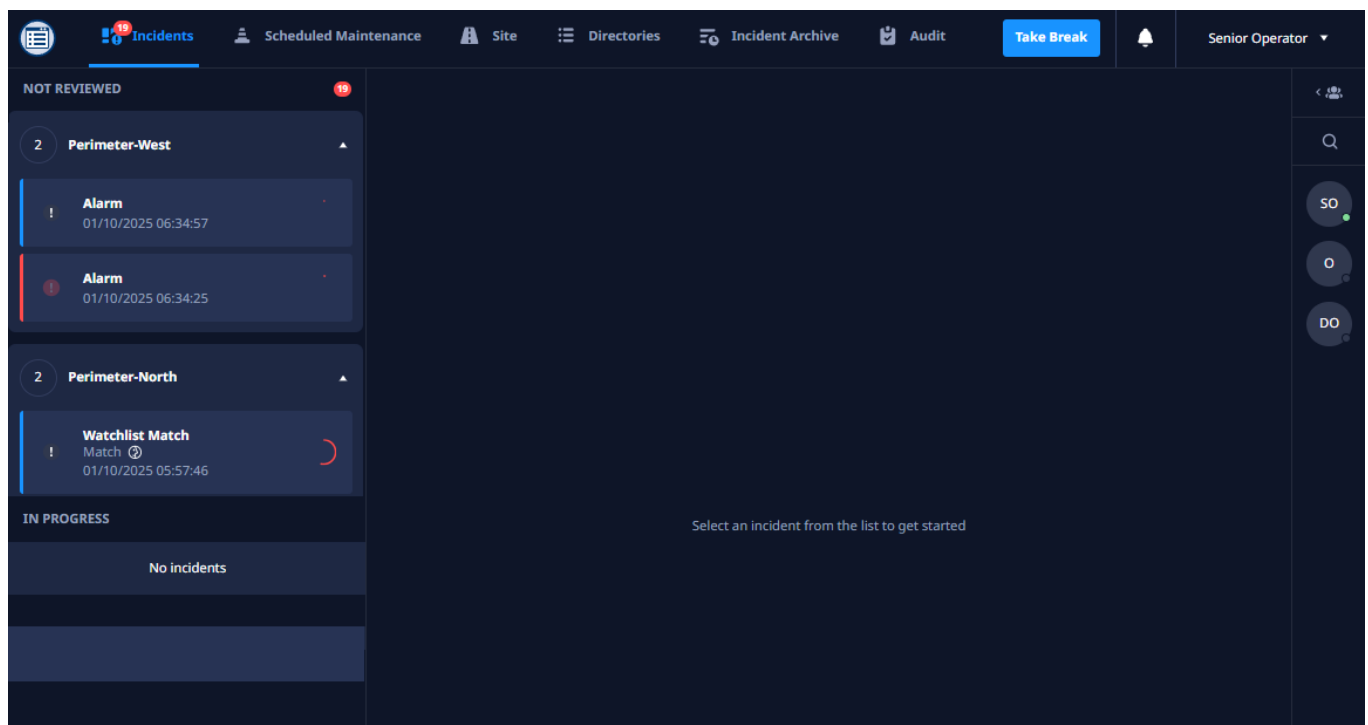


Figure 39. Senior Dispatch Center operator interface

### 8.1 Working with Operators Panel

Using the operators panel, the *Senior Dispatch Center operator* can view a list of operators assigned to each of the existing *Command Centers*. The list of operators can be opened using the  button located at the top of the right side panel (see Figure 40).

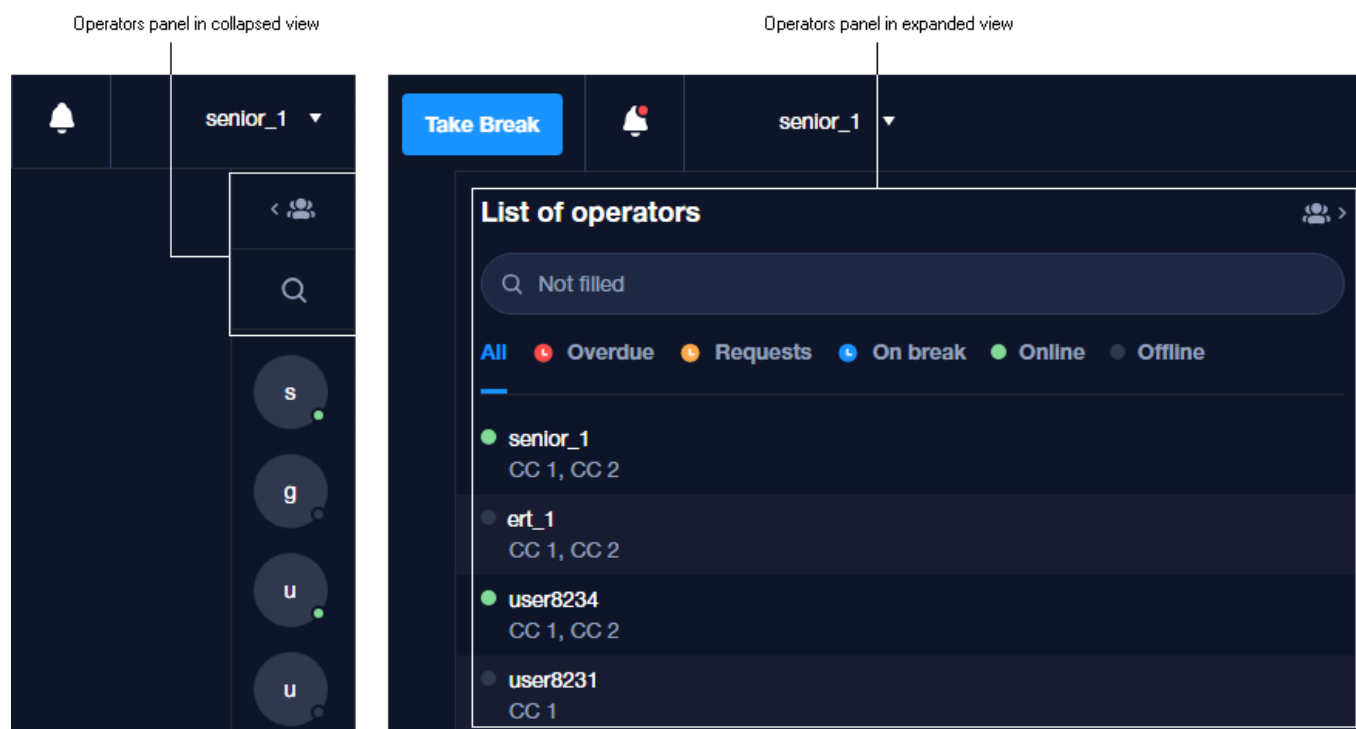


Figure 40. Collapsed and expanded operator panel

The list of operators can be filtered using the  search field by name or the following statuses:

-  **Overdue** — all operators who have not confirmed their return to the workplace at the end of their approved break.
-  **Requests** — all operators who are waiting for a break request to be processed.
-  **On break** — all operators who are currently on a break.
-  **Online** — all operators who are currently online.
-  **Offline** — all operators who are currently offline.

To open the panel with detailed information about a specific operator (see Figure 41), select the operator in the list.

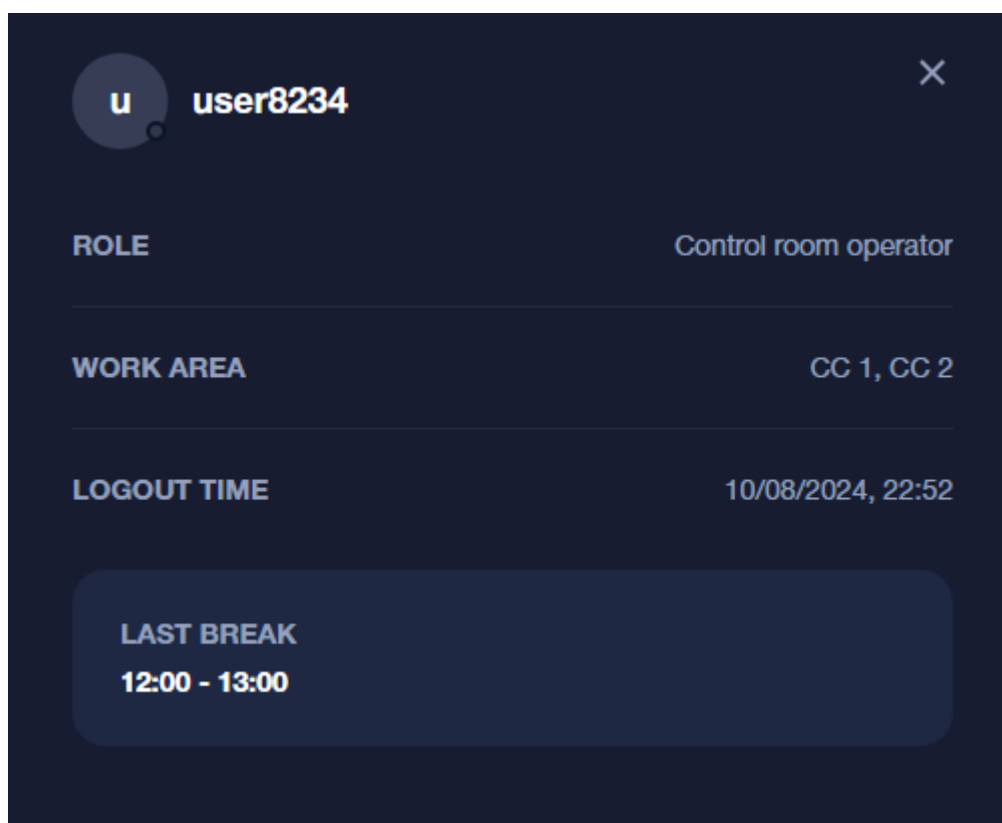


Figure 41. Operator panel

The operator's panel displays their full name (if provided), login, role, associated *Command Centers*, and the last session end time for that operator, if offline at that time. Break request information also appears in this panel (see [Considering Break Requests](#)).

## 8.2 Considering the Break Requests

SecurOS Dispatcher provides a break system to suspend the receipt of incidents by operators who are temporarily absent from the workplace and to monitor the timely return of operators. When planning a break, the operator must create a request that will be subject to consideration by a user with the *Senior Dispatch Center operator* role (see [Requesting a Break](#)).

New requests are displayed as an informational message in the notification panel (see [Viewing Notifications](#)). To proceed to the request consideration, click the **Details** button (see Figure 42).

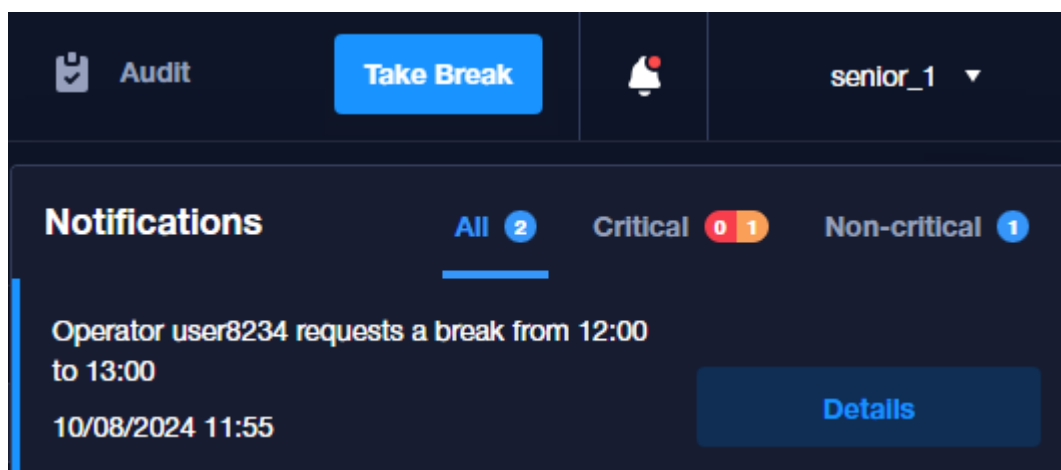


Figure 42. Notification of break request pending consideration

The operator panel that opens will display a break request form (see Figure 43) containing the following information:

- **Decision** — a timer that displays the time remaining to consider the request. If the request has not been processed by the receiving *Senior Dispatch Center operator* before the timer expires, the request is approved or declined automatically by the system.

---

Notes:

1. The time allotted to consider the request is determined by the *SecurOS Dispatcher Administrator*.
  2. Automatic approval or declination of a request is determined by the *SecurOS Dispatcher Administrator*.
- 

- **Break time** — the period of time when the operator plans to be away from the workplace.
- **Comment** — a comment from the operator explaining the need for a break.

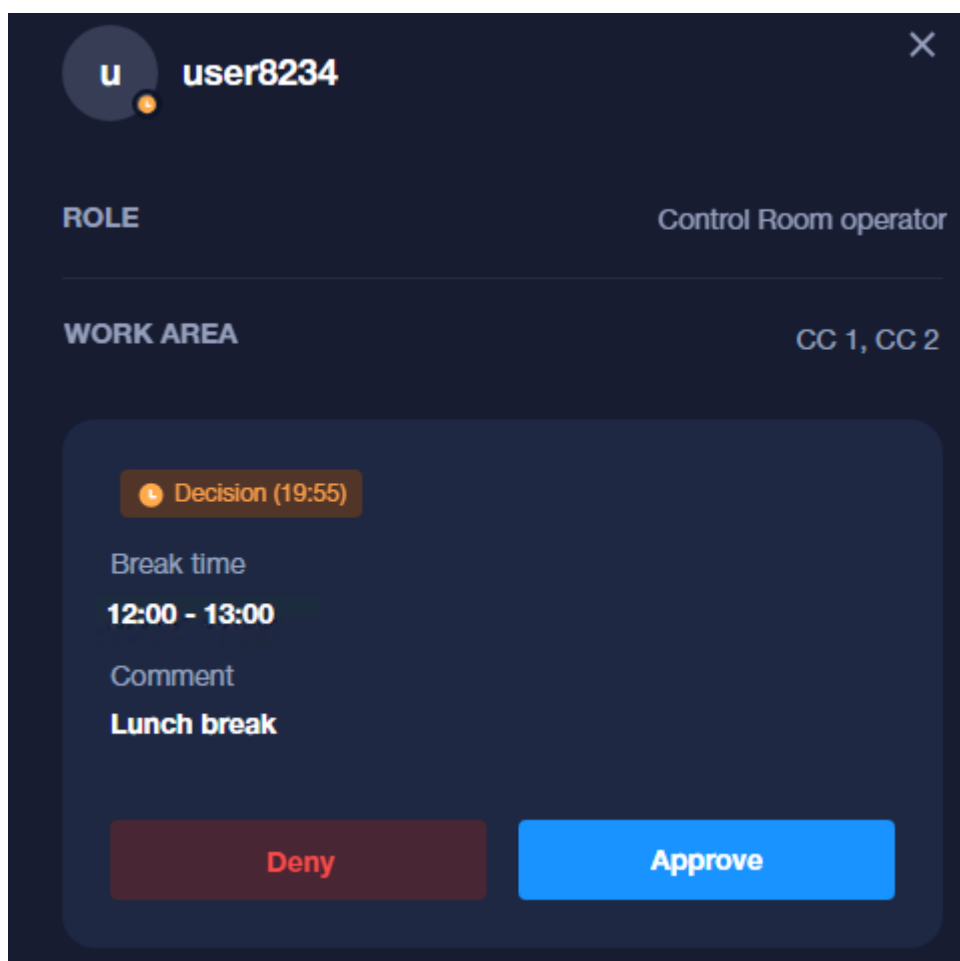
The image shows a dark-themed user interface for a break request form. At the top left, there is a circular profile icon with the letter 'U' and the username 'user8234'. To the right of this is a close button (an 'X' icon). Below the username, the text 'ROLE' is followed by 'Control Room operator'. Further down, 'WORK AREA' is followed by 'CC 1, CC 2'. The main content area is a rounded rectangle containing a timer labeled 'Decision (19:55)' with a clock icon. Below the timer, the text 'Break time' is followed by '12:00 - 13:00'. Then, 'Comment' is followed by 'Lunch break'. At the bottom of the form are two large buttons: a red 'Deny' button and a blue 'Approve' button.

Figure 43. Break request in the operator panel

Based on the information provided by the requester, the person considering the request can make one of two decisions using the appropriate buttons:

- **Deny** — decision to decline the operator's request for a break. If the request is declined, a new break can be requested by the operator again only after some time has elapsed.
- **Approve** — a decision to approve the operator's request for a break.

**Notes:**

1. The amount of time an operator is unavailable to create a new request after a decline is determined by the *SecurOS Dispatcher Administrator*.
2. The history of breaks is recorded as events that can be viewed in the **Audit** section (see [Viewing History of Operations](#)).

If a break has been approved but the operator has not confirmed returning to the workplace at the end of the allotted break time, the *Senior Dispatch Center operator* will be notified. An example of the notification is shown in Figure 44.

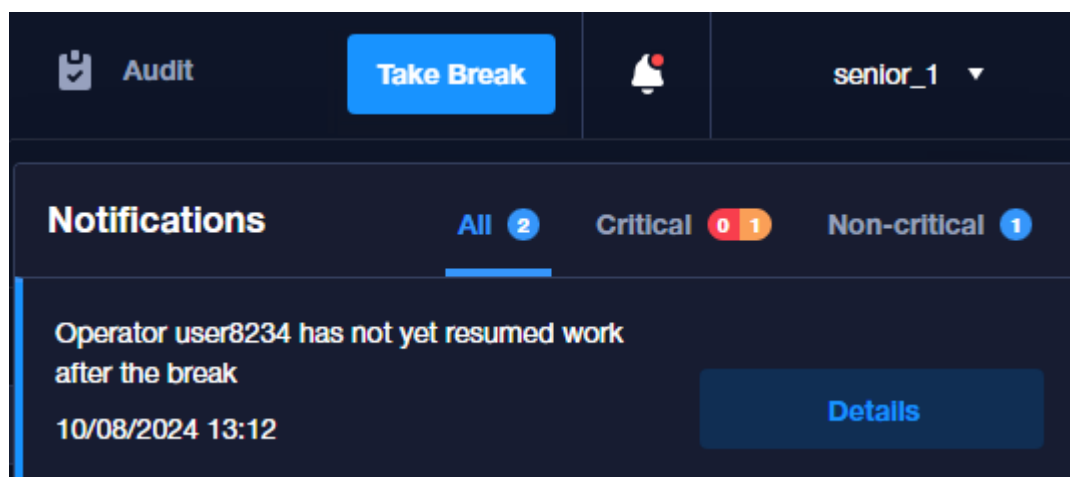


Figure 44. Notification of an overdue break

## 8.3 Processing Incidents by "Senior Dispatch Center Operator" User

The *Senior Dispatch Center operator* can process incidents in the same way as the *Dispatch Center operator* (see [Processing Incidents by "Dispatch Center Operator" User](#)).

The incident feed for this user (see [Working with Incident Feed](#)) also includes incidents overdue by other operators of all types. Detailed information about overdue incidents can be found in the archive (see [Working with Incident Archive](#)). Click the **Overdue** panel (see Figure 45) to access the **Incident Archive** section. The **Overdue** panel displays the number of *Sites* that have incidents registered, as well as the total number of incidents.



User Role "Senior Dispatch Center Operator"

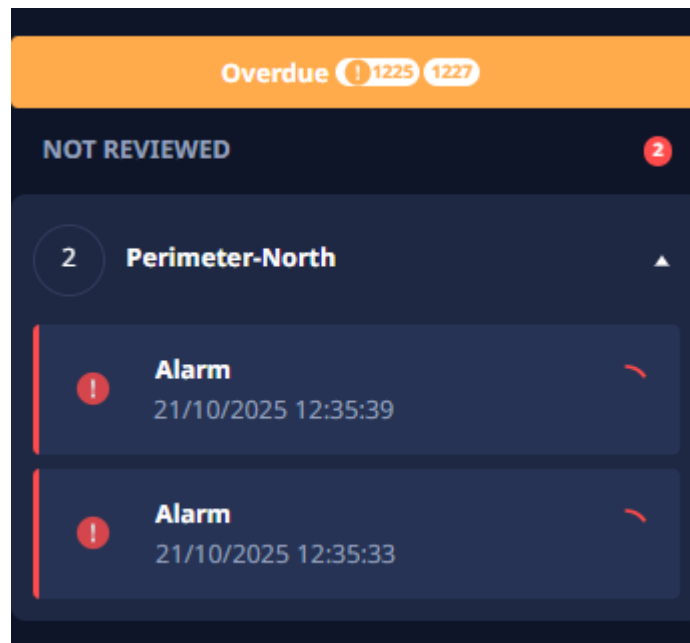


Figure 45. Overdue incidents in the feed of the Supervisor Dispatch Center operator

## 8.4 Delegating Incidents to Operator with Specific Role

To delegate the incident to an operator with a specific role, open the incident card (see [Working with Incident Card](#)) and click the **Delegate** button. The corresponding window will be opened to the right of the incident card (see [Figure 46](#)).

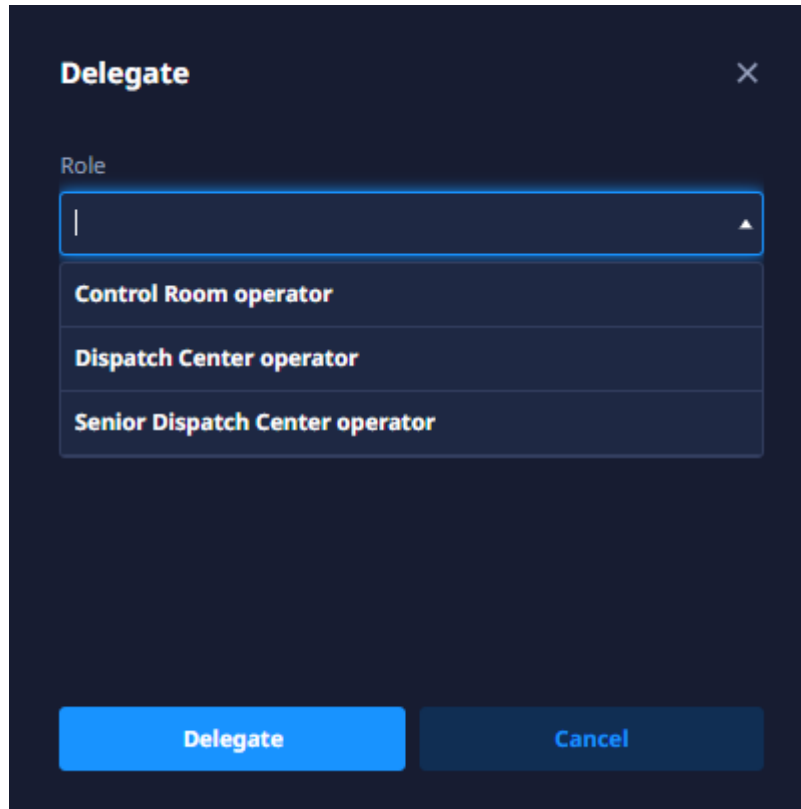


Figure 46. "Delegate" window

Select the required role from the drop-down list and click the **Delegate** button. Immediately thereafter, the incident will be forwarded to the operator with the selected role.

---

**Note.** The list contains only those operators who are assigned to the *Command Center* where the current incident occurred.

---

## 8.5 Scheduled Maintenance Management

Scheduled maintenance management is available only to the *Senior Dispatch Center operator*.

This section describes the following operations:

- **Creating Scheduled Maintenance.**
- **Editing Scheduled Maintenance.**

Viewing the scheduled maintenance list is described in detail in the **Viewing Scheduled Maintenance** section.

### 8.5.1 Creating Scheduled Maintenance

To add a new scheduled maintenance, follow these steps:

1. Click the **Create request** button located in the upper right corner of the **Scheduled Maintenance** window (see Figure 47).

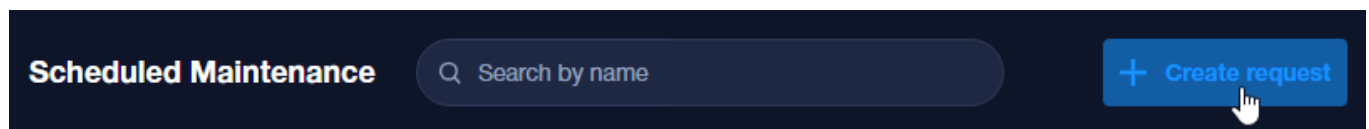


Figure 47. "Create request" button

2. In the **Create request** window form (see Figure 48), specify the following information:
  - **Date** – click the **Add period** button and specify the start and end period of the scheduled maintenance in the corresponding fields.
  - **Site** – click the **Add** button and select from the drop-down list the *Site* where the scheduled maintenance will be performed. To add more *Sites*, click the **Add** button.
  - **Sectors** – select one or more sectors of the *Site* from the drop-down list if necessary.
  - **Type of work** – select the type of scheduled maintenance from the drop-down list.
  - **Company** – select from the drop-down list the company that will perform the scheduled maintenance.
  - **Equipment (description of tools)** – specify the relevant useful information (optional field).
  - **Contacts** – specify the relevant useful information (optional field).

**Create request** [X]

Period from: 15 august 2024 03:23 — Period to: 22 august 2024 03:23 [X]

Site: 1 x Sectors: [ ] [Open]

+ Add

Type of work: Not selected

Company: Not selected

Equipment (description of tools): Not filled [Optional field]

Contacts: Not filled [Optional field]

[Create request] [Cancel]

Figure 48. "Create request" window

3. If it is required to configure incident notifications during the scheduled maintenance, click the **Open** button to the right of the **Site** and **Sector** fields. The **Site** section will be opened in the current **Scheduled Maintenance** section (see Figure 49). After configuring incident notifications (see [Site Management](#)), click the **X** (Close) button in the upper right corner to return to creating a scheduled maintenance.

**Warning!** It is recommended to configure notifications right before the actual start of the scheduled maintenance (see [Editing Scheduled Maintenance](#)), as any changes to the settings will take effect immediately.

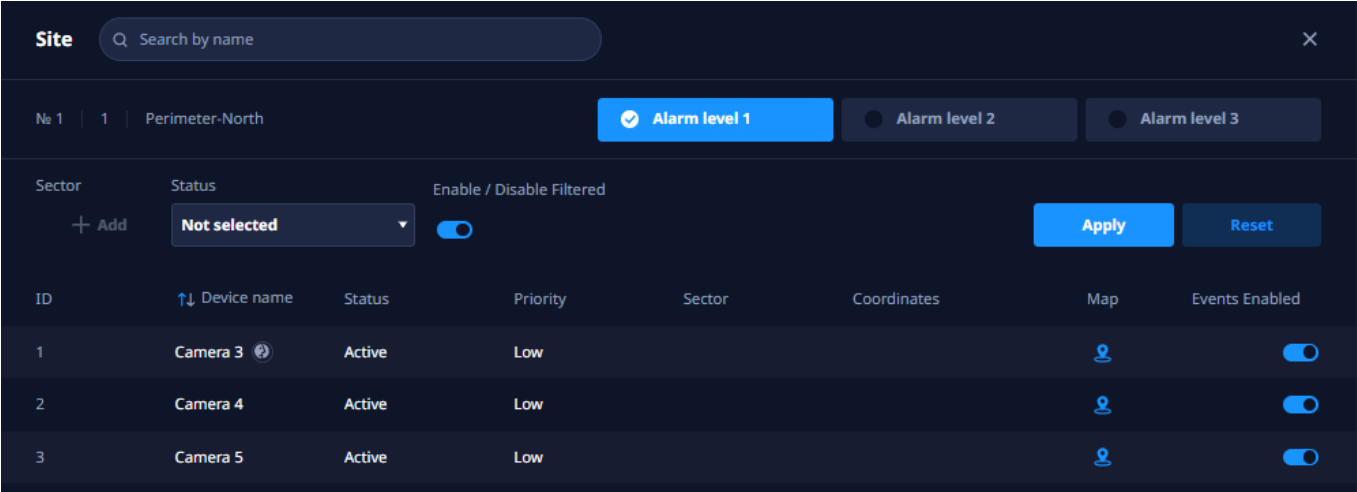


Figure 49. "Site" section

- 4. Click the **Create request** button. To exit without creating a scheduled maintenance, click the **Cancel** button.

8.5.2 Editing Scheduled Maintenance

To edit an existing scheduled maintenance, follow these steps:

- 1. Find the scheduled maintenance in the list (see [Viewing Scheduled Maintenance](#)).
- 2. Click the  (**Edit**) button on the right side of the scheduled maintenance row (see Figure 50).



Figure 50. "Edit" button in the scheduled maintenance list

- 3. Make changes to the data contained in the **Edit** window form (see Figure 51).

The screenshot shows a dark-themed 'Edit' window for scheduled maintenance. At the top right is a close button (X). Below the title bar, there are two date-time pickers: 'Period from' (08 August 2023 13:41) and 'Period to' (24 August 2023 13:41), separated by a horizontal line. Below these are two sections: 'Site' and 'Sectors'. The 'Site' section has a dropdown menu showing '1' and a close button (X). The 'Sectors' section has a dropdown menu showing 'Sector 1' and an 'Open' button. Below these is a '+ Add' button. The 'Type of work' section has a dropdown menu showing 'Maintenance of roadbed'. The 'Company' section has a dropdown menu showing 'Company 1'. The 'Equipment (description of tools)' section is labeled 'Optional field' and contains a text area with 'Not filled'. The 'Contacts' section is also labeled 'Optional field' and contains a text area with 'Not filled'. At the bottom right are two buttons: 'Save changes' and 'Cancel'.

Figure 51. Scheduled maintenance edit window

4. If necessary, edit the incident notification setting.
5. Click the **Save changes** button.

## 8.6 Directories Management

The *Senior Dispatch Center operator* is able to register maintenance companies and their employees (see [Viewing Directories](#)). Maintenance companies can be used when creating scheduled maintenance (see [Viewing Scheduled Maintenance](#), [Scheduled Maintenance Management](#)).

This section describes the following operations:

- [Editing the Companies List](#).
- [Editing the List of Company Employees](#).

## 8.6.1 Editing the Companies List

This section describes the following operations:

- **Adding Company to the Directory.**
- **Editing Company in the Directory.**

### Adding Company to the Directory


To add a maintenance company, follow these steps:

1. Navigate to the **Directories** section and open the **Companies** subsection.
2. Click the **Add company** button (see Figure 52).



Figure 52. "Add company" button

3. In the opened window (see Figure 53), specify the following information:
  - **Name of the company** – name of the maintenance company.
  - **Supervisor** – name of the company's supervisor.
  - **Phone** – phone number of the company's supervisor.
  - **E-mail** – e-mail address of the company's supervisor.
  - **Description** – any useful information related to the contact or company.

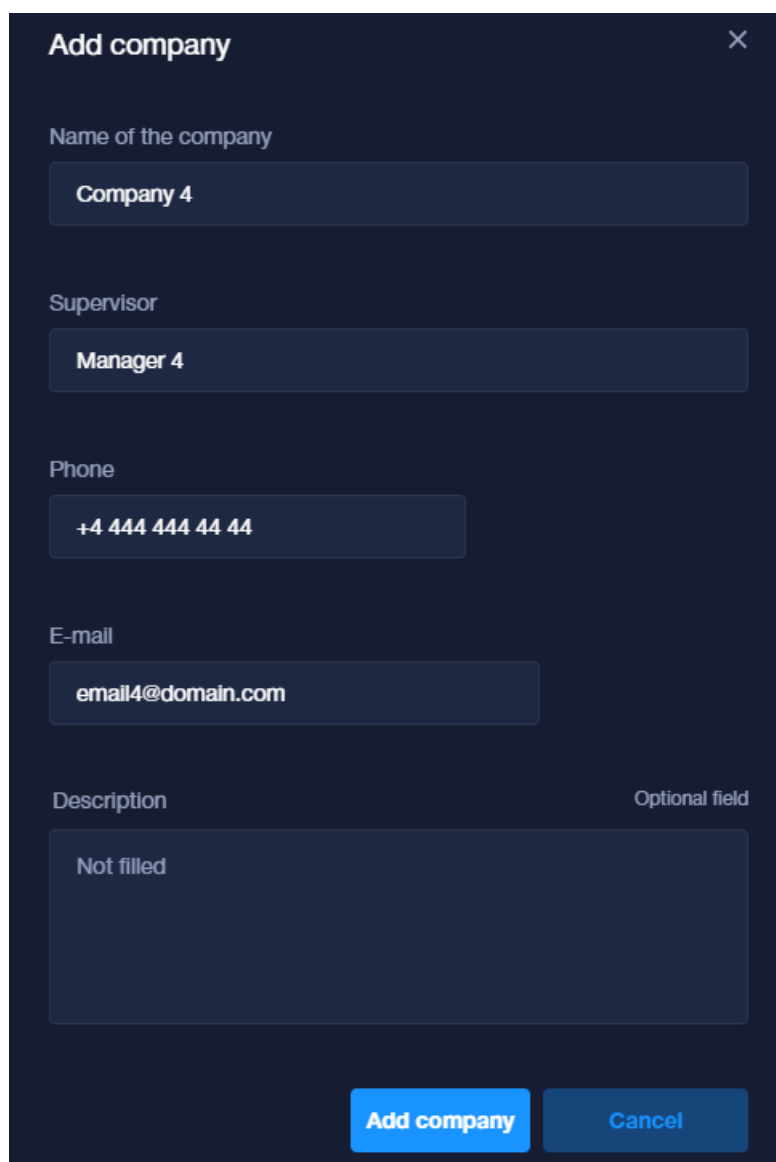

**Add company** ✕

Name of the company

Company 4

Supervisor

Manager 4

Phone

+4 444 444 44 44

E-mail

email4@domain.com

Description Optional field

Not filled

**Add company** **Cancel**

Figure 53. Adding maintenance company window

4. Click the **Add company** button.

### Editing Company in the Directory

To edit a previously added maintenance company, follow these steps:

1. Go to the **Directories** section and open the **Companies** subsection.
2. Search the list for the company whose information needs to be edited and click the  (**Edit**) button.
3. Make the required changes to the existing data on the form.
4. Click the **Save changes** button.

### 8.6.2 Editing the List of Company Employees

This section describes the following operations:

- **Adding company employee to the Directory.**
- **Editing information about company employee.**

### Adding company employee to the Directory

To add a company employee, follow these steps:


1. Navigate to the **Directories** section and open the **Employees** subsection.
2. Click the **Add employee** button (see Figure 54).



Figure 54. "Add employee" button

3. In the opened window (see Figure 55), specify the following information:
  - **Full name** – the employee's full name.
  - **Company** – select a previously created company from the drop-down list (see [Editing the Companies List](#)).
  - **Phone** – phone number of the employee.
  - **E-mail** – e-mail address of the employee.
  - **Description** – any useful information related to the contact or employee.



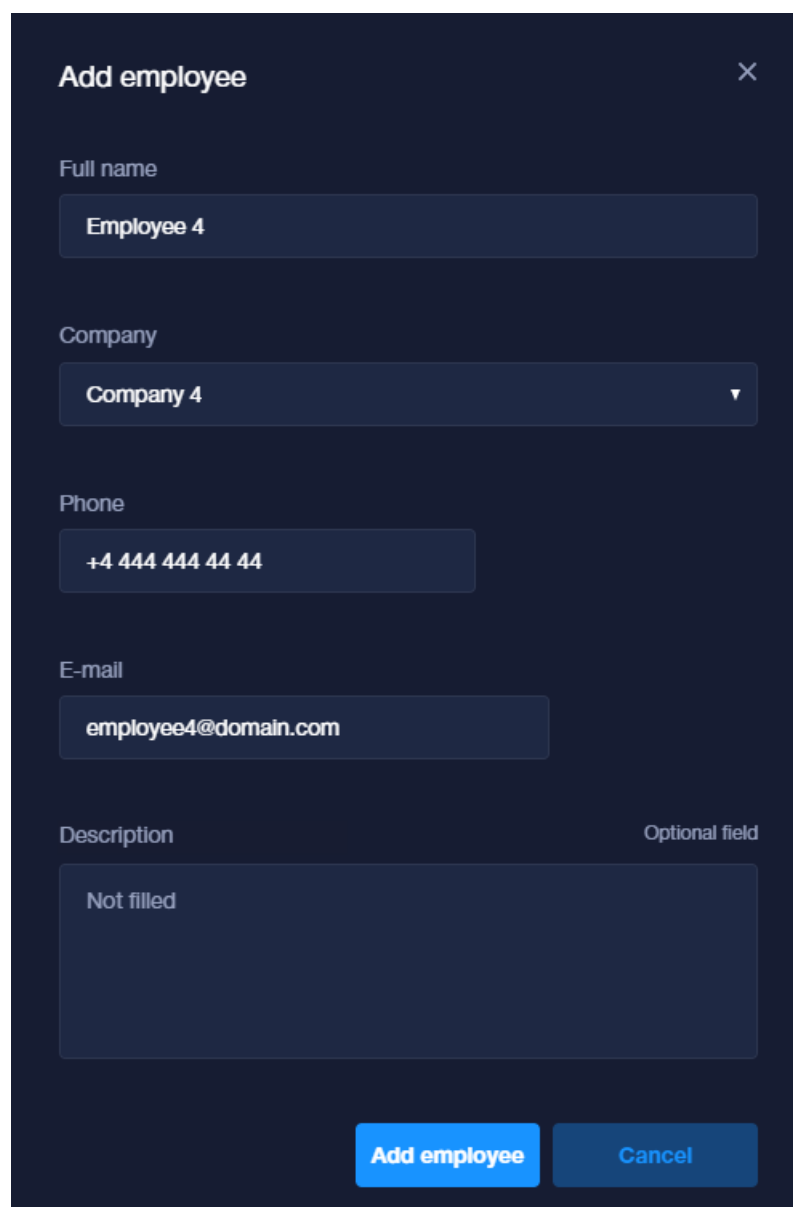

**Add employee** ×

Full name  
Employee 4

Company  
Company 4 ▼

Phone  
+4 444 444 44 44

E-mail  
employee4@domain.com

Description Optional field  
Not filled

Add employee Cancel

Figure 55. Adding company employee window

4. Click the **Add employee** button.

### Editing information about company employee

To edit a previously added company employee, follow these steps:

1. Navigate to the **Directories** section and open the **Employees** subsection.
2. In the list, find the employee whose information should be changed and click the  (**Edit**) button.
3. Make the required changes to the existing data on the form.
4. Click the **Save changes** button.

## 8.7 Site Management

When working with the *Site*, the *Senior Dispatch Center operator* can view the control areas and the devices (sensors) located on them, as well as perform the following operations:

- **Changing the Alarm Status of Site.**
- **Configuring the Receiving of Incidents.**

---

**Note.** *Sites* are configured by the *SecurOS Dispatcher Administrator*.

---

To get started, select the **Site** section on the navigation panel. The appearance of the **Site** section is shown in Figure 56.

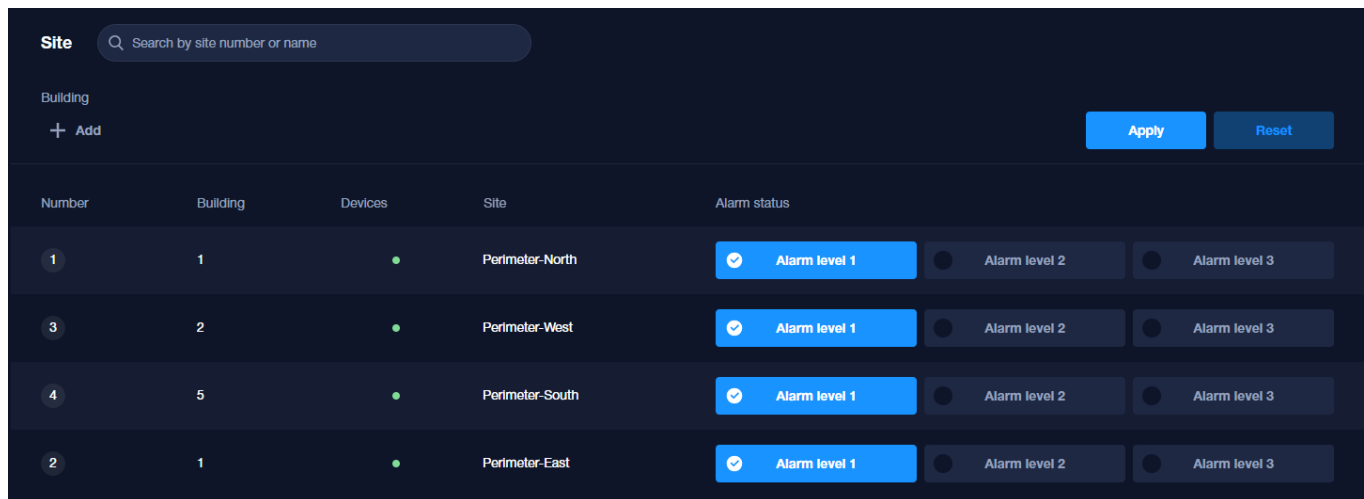


Figure 56. Site section

The top of the section contains a panel that allows filtering the items in the *Site* list:

- **Search by site number or name** – enter full number or name of the *Site* in the search field to automatically filter the list by relevant criteria.
- **Building** – click the **Add** button and select objects from the drop-down list to display only the *Sites* assigned to these objects in the list. Multiple objects can be selected for filtering. After selecting the required objects, click the **Apply** button.

The list of *Sites* is presented as a table where:

- **Number** – number of the *Site*.
- **Building** – number of the *Building*.
- **Devices** – indicator of receiving events from devices (sensors):
  - ● – event receiving is disabled for at least one device of this *Site*;
  - ● – event receiving is enabled for all devices in this *Site*.
- **Site** – name of the *Site*.
- **Alarm status** – indicator buttons for the current alarm level of the *Site*.

### 8.7.1 Changing the Alarm Status of Site

Changing the alarm status of a *Site* provides the ability to notify the responsible operators of any threatening situations in the monitored object. The following alarm levels are provided:

- **Alarm level 1** – blue (basic) alarm level.
- **Alarm level 2** – yellow (high) alarm level.
- **Alarm level 3** – red (critical) alarm level.

---

**Notes:**

1. By default, all *Sites* are set to a blue alarm level (**Alarm level 1**).
  2. The priority of incidents does not depend on the set alarm level.
-

To change the *Site* alarm level, follow these steps:

1. Navigate to the **Site** section.
2. In the **Alarm Status** column, select the required alarm level (see Figure 57).

| Number | Building | Devices | Site            | Alarm status                                                                                                           |
|--------|----------|---------|-----------------|------------------------------------------------------------------------------------------------------------------------|
| 1      | 1        | ●       | Perimeter-North | <input type="radio"/> Alarm level 1 <input checked="" type="radio"/> Alarm level 2 <input type="radio"/> Alarm level 3 |
| 3      | 2        | ●       | Perimeter-West  | <input checked="" type="radio"/> Alarm level 1 <input type="radio"/> Alarm level 2 <input type="radio"/> Alarm level 3 |
| 4      | 5        | ●       | Perimeter-South | <input type="radio"/> Alarm level 1 <input type="radio"/> Alarm level 2 <input checked="" type="radio"/> Alarm level 3 |
| 2      | 1        | ●       | Perimeter-East  | <input checked="" type="radio"/> Alarm level 1 <input type="radio"/> Alarm level 2 <input type="radio"/> Alarm level 3 |

Figure 57. Changing the Site alarm level

3. Confirm the alarm level change in the pop-up window by clicking the **Enable** button (see Figure 58).

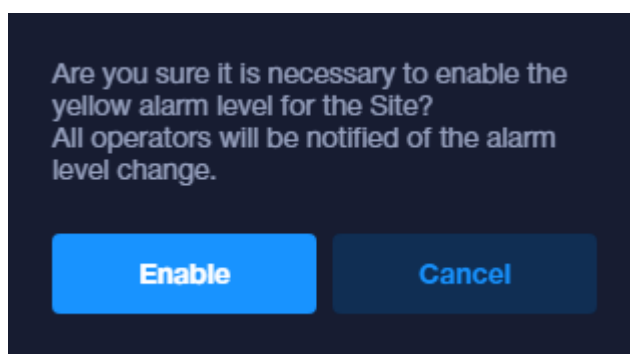


Figure 58. Confirmation of alarm level change

When an alarm is changed to **Level 2** or **Level 3**, a notification will appear in the interface of all operators responsible for the *Site* under the navigation bar (see Figure 59).

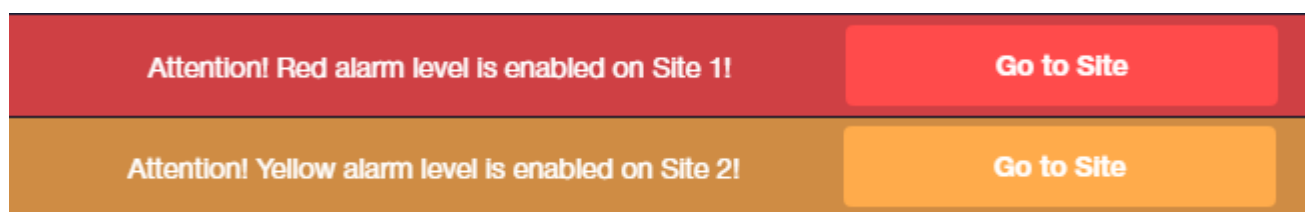


Figure 59. Notifications of critical and high alarm levels

After the threat on the monitored object has disappeared, it is recommended to lower the alarm level to blue, which will disable notifications. To navigate to a *Site* with an elevated alarm level, click the **Go to Site** button located on the right side of the notification.

---

**Note.** The **Go to Site** button is displayed only for users with the *Senior Dispatch Center operator* role.

---

8.7.2 Configuring the Receiving of Incidents

Incidents are generated based on events from devices. Configuring the event reception can help reduce the workload on operators during scheduled maintenance at the monitored object (see [Scheduled Maintenance Management](#)). When events are disabled, the incident reception by operators is completely halted until events are re-enabled. All operators responsible for the monitored object are notified when events are disabled.

**Note.** The ability to configure the receipt of device events is determined by the *SecurOS Dispatcher Administrator*.

To configure receiving events from devices, follow these steps:

- 1. Navigate to the **Sites** section and select the required *Site* where the needed devices are located (see [Site Management](#)).
- 2. In the opened window (see Figure 60), filter the devices by name using the search field at the top. Additional filtering is available by location via the **Sector** field and by current operational state via the **Status** field.

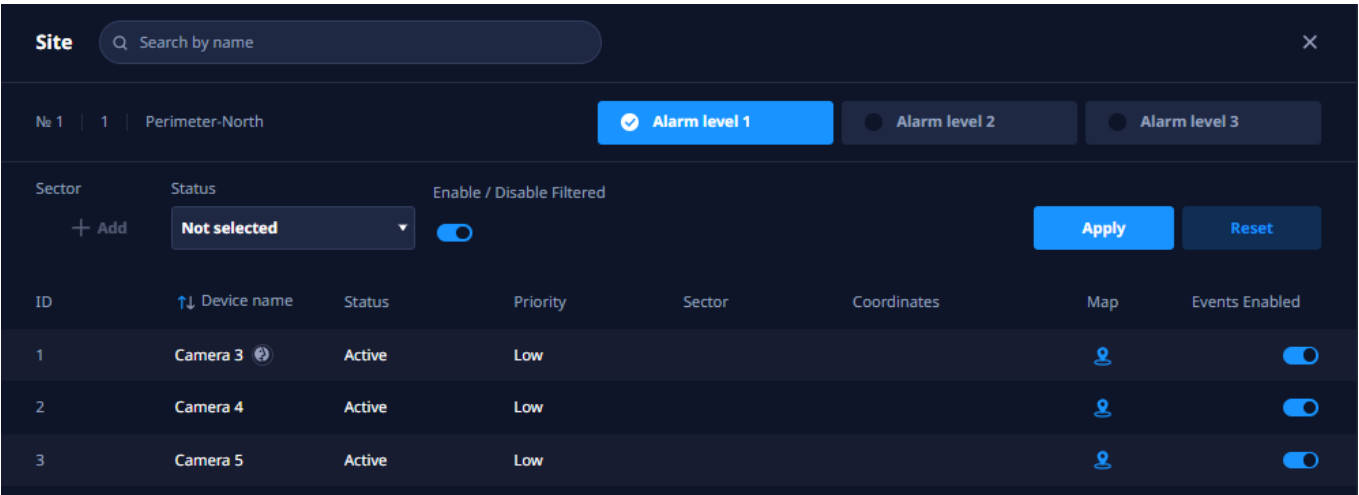


Figure 60. List of site devices

- 3. Click the **Enable Filtered** or **Disable Filtered** switch to apply the corresponding changes to the events from all devices currently displayed in the list. It is possible to configure receiving events only from specific devices using similar switches located in the **Events Enabled** column.

To view device locations in the *Map: GUI* window, click the icon.

When events are disabled, a corresponding notification will appear under the navigation bar in the interface of all operators responsible for the monitored object (see Figure 61).

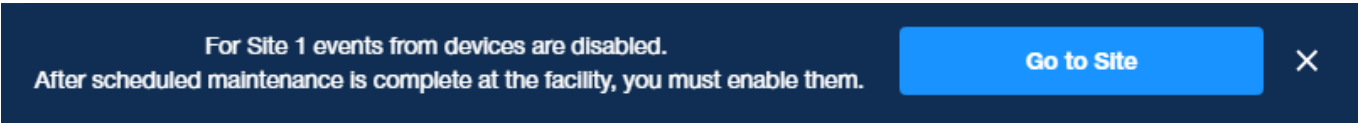


Figure 61. Device disabling notifications

After maintenance on the monitored object is completed, the devices must be re-enabled to receive incidents. To navigate to a *Site* where event reception of events was previously disabled, click the **Go to Site** button located on the right side of the notification.

**Note.** The **Go to Site** button is displayed only for users with the *Senior Dispatch Center operator* role.

## 8.8 Working with Incident Archive

The *Senior Dispatch Center operator* can view information about archived incidents and perform the following operations:

- **Searching for Incidents in the Archive.**
- **Viewing the Archived Incident Card.**
- **Changing the Incident Status.**
- **Creating Reports.**
- **Viewing Incident Statistics.**

To start working with archived incidents, select the **Incident Archive** section on the navigation panel. The appearance of the **Incident Archive** section is shown in Figure 62.

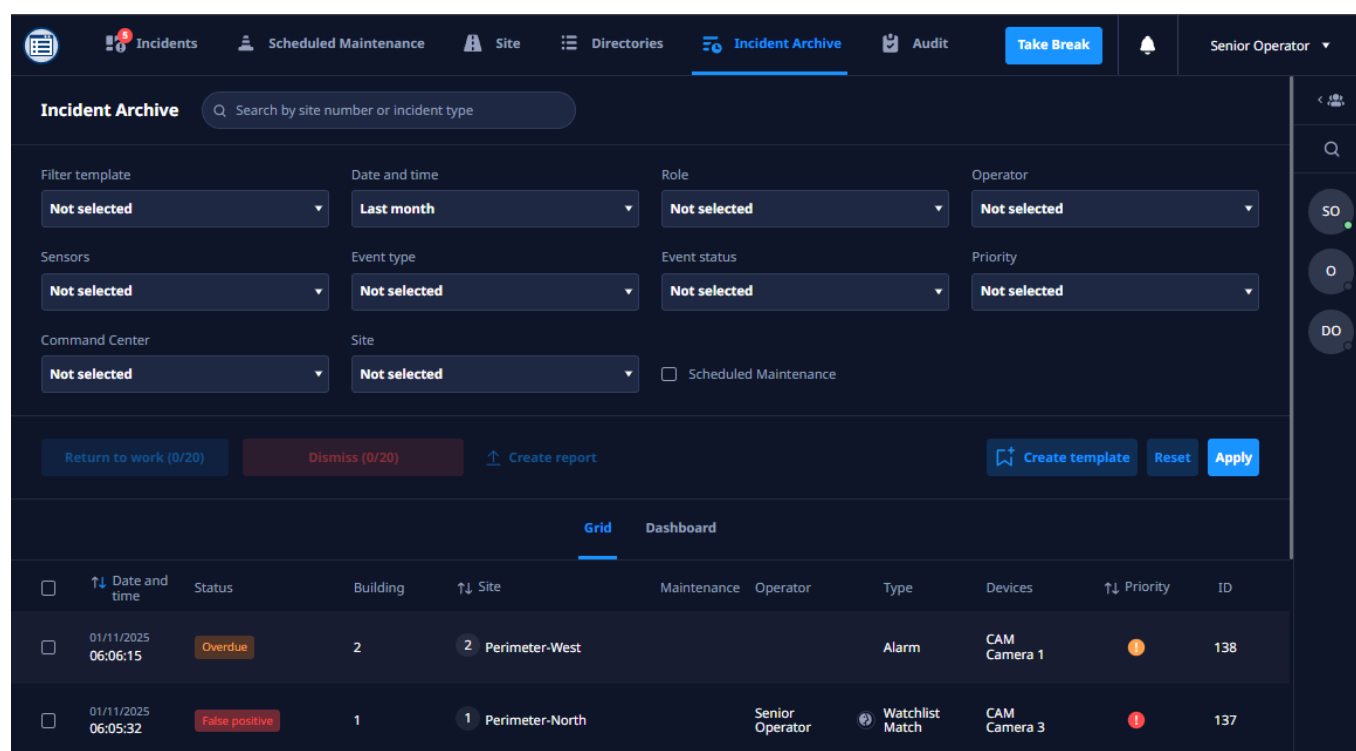


Figure 62. Incident Archive section

The list of archived incidents is presented as a table that contains the following data:

- **Date and time** – the date and time when the incident occurred.
- **Status** – the status the incident was closed with:
  - **Confirmed** – the incident was confirmed and closed after processing by the operator according to the regulations.
  - **False positive** – the incident was dismissed as a false positive during operator consideration.
  - **Nominal** – the incident was dismissed as a nominal during operator consideration, i.e., the incident was not a false positive, but it was not required to be processed according to the regulations.

- **Overdue** – the incident was not considered by the operator within the response timeout period.

**Warning!** Incidents awaiting processing are not displayed in the **Incident Archive**.

- **Building** – identifier of the *Building*.
- **Site** – identifier of the *Site*.
- **Maintenance** – indicator of maintenance activity.
- **Operator** – name of the operator who is processing the incident.
- **Type** – name of the incident.
- **Devices** – type and name of the device (sensor).
- **Priority** – priority of the incident.
- **ID** – identifier of the incident.

### 8.8.1 Searching for Incidents in the Archive

The list of archived incidents can be filtered by *Site* number or incident type. To do this, enter in the **Search by site number or incident type** field the *Site* name or the name of the sensor (device) that generated the incident (see Figure 63). When entering characters, the list is filtered automatically taking into account the contents of the search field and other specified parameters (filters by date, etc.).

Figure 63. Search and filtering panel for the incidents list

Filtering parameters can be set either manually (by clicking the **Apply** button) or using a previously created filter template.

Complete the following fields to create a filter template:

- **Date and time** – specify the time interval when the incidents occurred.
- **Role** – select one or more operator roles.
- **Operator** – select one or more specific operators to display the incidents processed by those operators.
- **Sensors** – select one or more device types.
- **Event type** – select one or more incident types.
- **Event status** – select one or more incident statuses:
  - Confirmed.
  - False positive.

- Nominal.
- Overdue.

- **Priority** – select the importance of the incidents.
- **Command Center** – select one or more *Command Centers*.
- **Site** – select one or more *Sites*.
- **Scheduled Maintenance** – select if it is required to search for incidents that occurred during scheduled maintenance (see [Scheduled Maintenance Management](#)).

Click the **Create template** button. In the opened window, specify a name for the new filter template and click **Save** (see Figure 64).

---

**Note.** Previously created filter template cannot be edited.

---

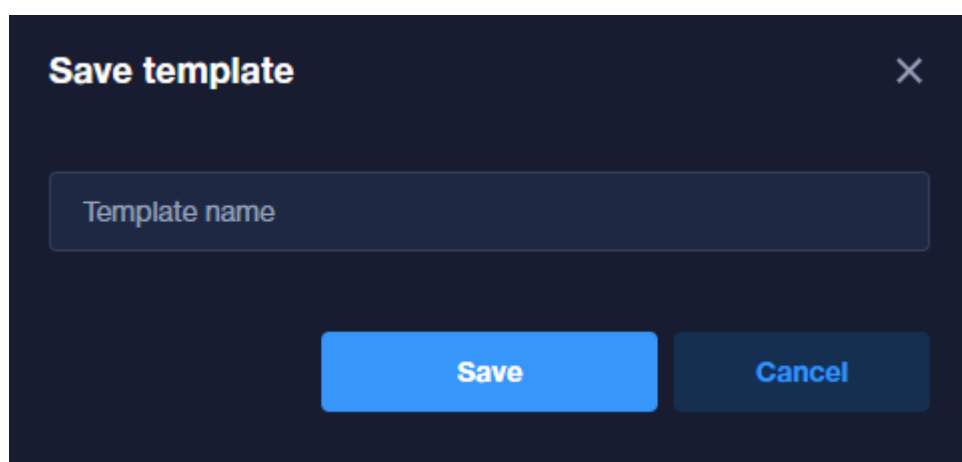


Figure 64. Filter template creation window

Immediately after saving the filter template, it will be available in the **Filter template** drop-down list (see Figure 65). To remove a previously created filter template, click the **X** (**Remove template**) button to the right of its name.

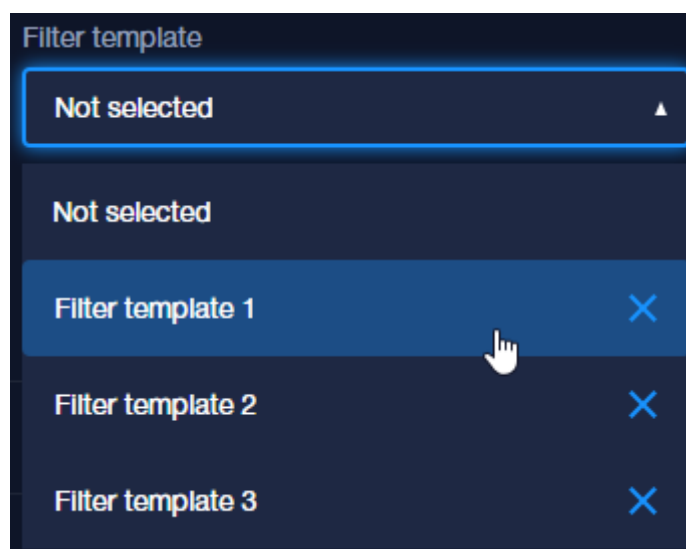


Figure 65. Selecting the filter template

---

**Note.** Previously created filter template cannot be edited.

---

To clear all search parameters (including those set using the template), click the **Reset** button.

## 8.8.2 Viewing the Archived Incident Card

Select the incident from the list to view detailed information about it. In the opened archived incident card (see Figure 66), one can view the history of all actions performed by the operator, view the reports and attachments, or reopen the incident.

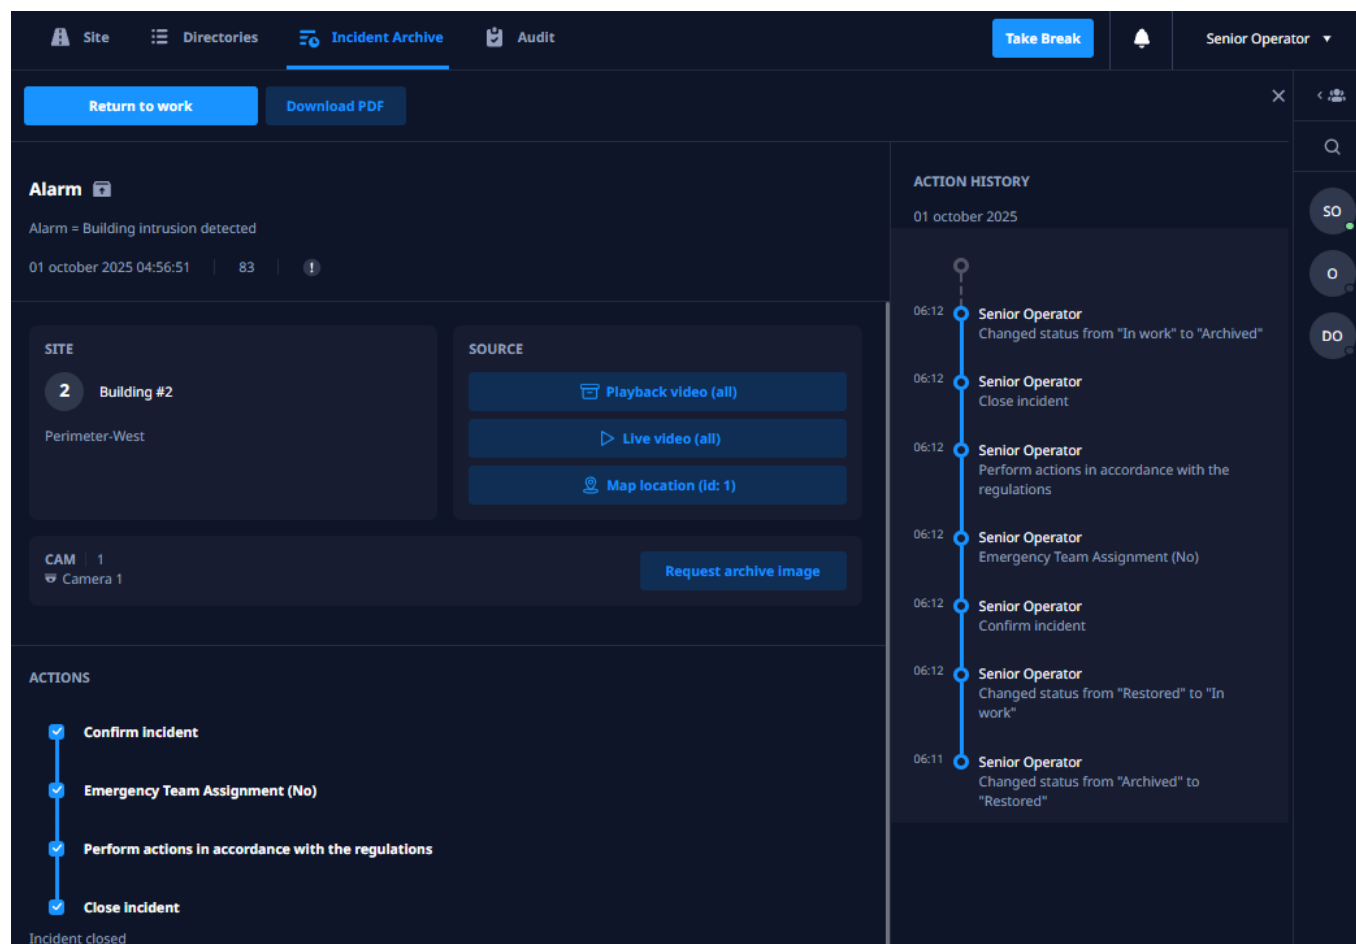


Figure 66. Archived Incident Card

## 8.8.3 Changing the Incident Status

Senior Dispatch Center operator may change the archived incident status, as follows:

- **Reopen the incident.**
- **Dismiss the incident.**

### Reopening the incident

If an incident was archived by mistake or there were irregularities in its processing, it may be reopened and forwarded to the operator to be processed again. To reopen the incident, open its card (see [Viewing the Archived Incident Card](#)) and click the **Return to work** button. Select one of the options on the panel that opens on the right (see Figure 67):

- **Role** — to assign the incident to any operator with a specific role.
- **Operator** — to assign the incident to a specific operator.

Select a specific role or operator from the drop-down list below and click the **Return to work** button located at the bottom of the panel.



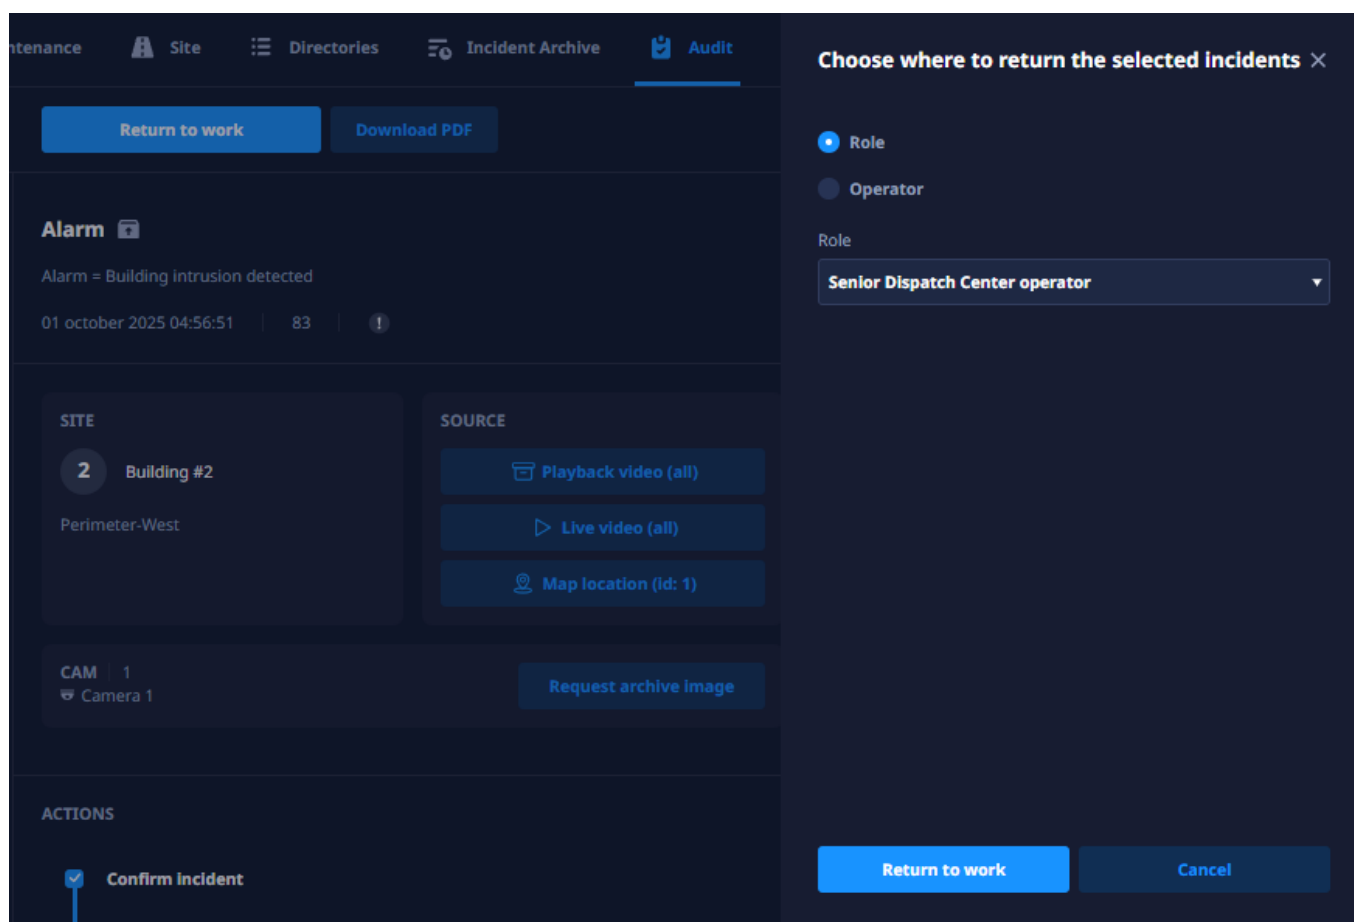


Figure 67. Incident reopening

To reopen more than one incident, follow these steps:

1. Go to the list of archived incidents (see [Working with Incident Archive](#)).
2. If necessary, filter the list (see [Searching for Incidents in the Archive](#)).
3. Select all incidents to be reopened and click the **Return to work** button (see Figure 68).
4. Similar to reopening a single incident (see above), the specific role or operator must be selected.

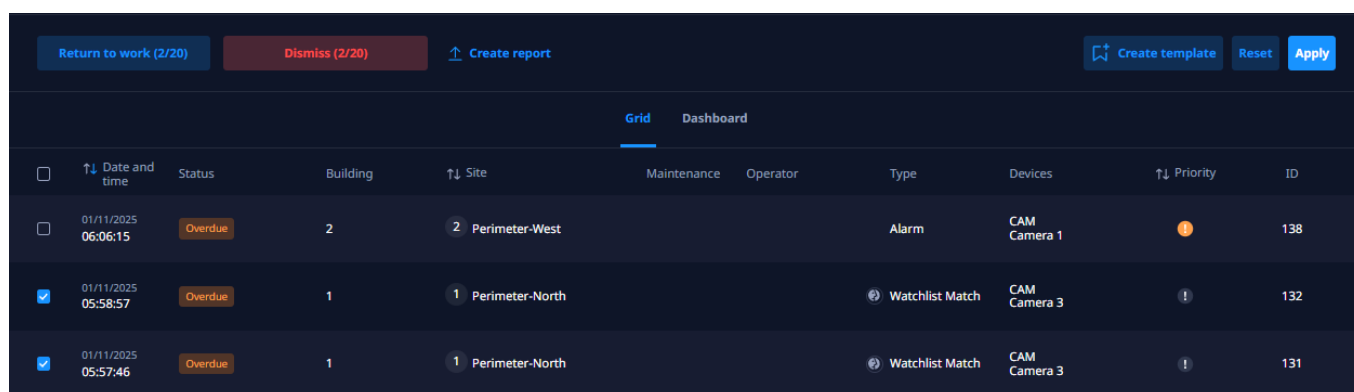


Figure 68. Selecting multiple incidents


## Dismissing the incident

Incidents with an **Overdue** status can be closed in bulk with a dismissal.

To dismiss the incidents, follow these steps:

1. Go to the list of archived incidents (see [Working with Incident Archive](#)).
2. If necessary, filter the list (see [Searching for Incidents in the Archive](#)).

3. Select all overdue incidents that need to be dismissed.
4. Click the **Dismiss** button (see Figure 68).
5. In the window that opens (see Figure 69), select the status, specify the reason and provide an explanation. Click the **Dismiss** button.

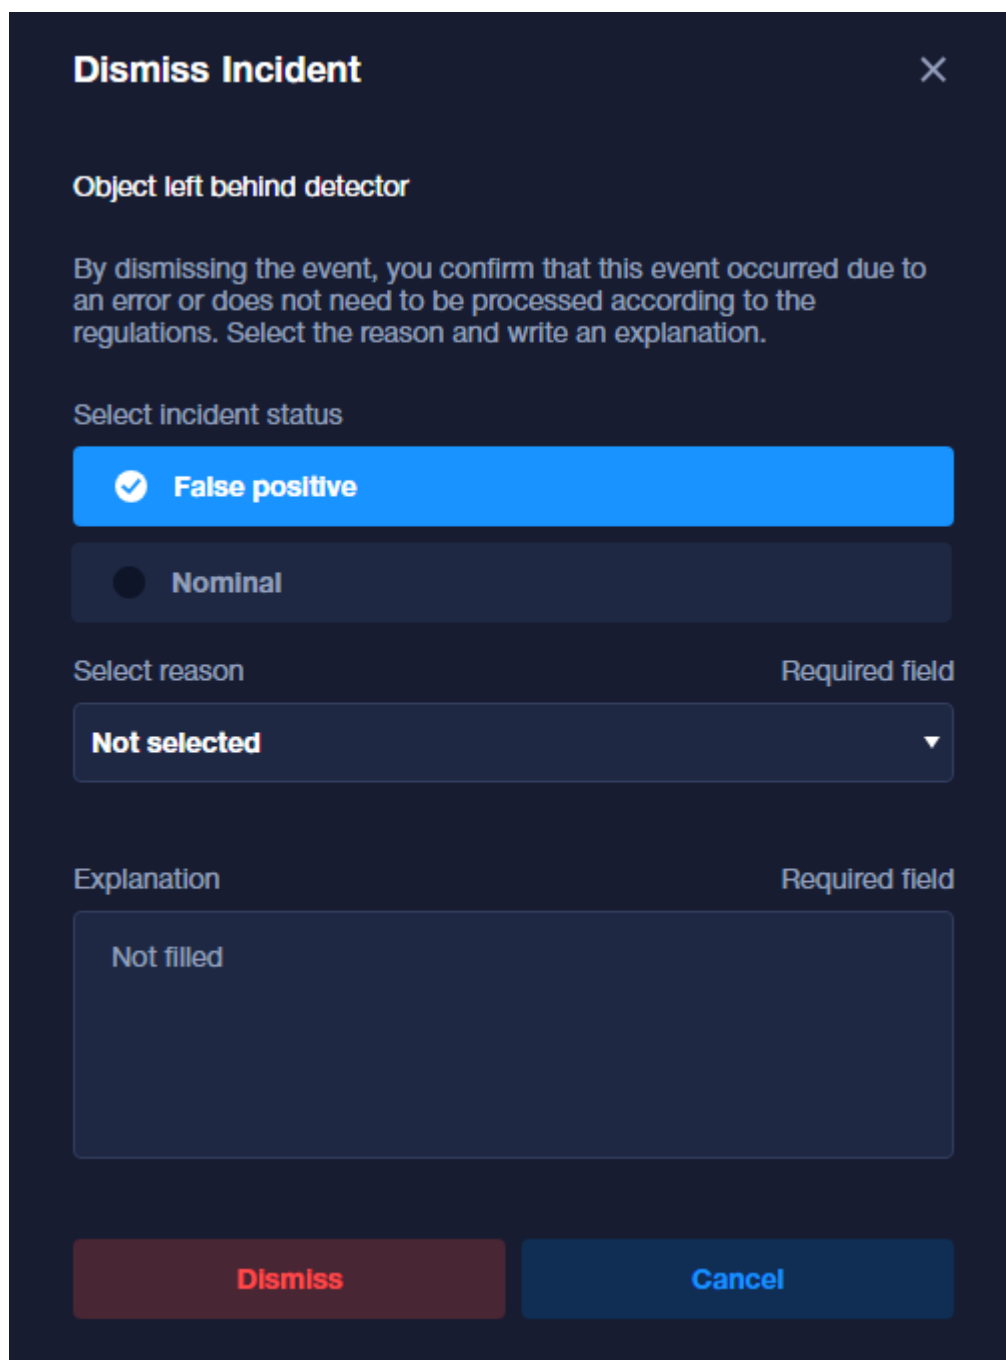

The image shows a 'Dismiss Incident' window with a dark blue background. At the top, the title 'Dismiss Incident' is in white, with a close button (X) to its right. Below the title, the text 'Object left behind detector' is displayed. A paragraph explains: 'By dismissing the event, you confirm that this event occurred due to an error or does not need to be processed according to the regulations. Select the reason and write an explanation.' The form contains three main sections: 1. 'Select incident status' with two radio buttons: 'False positive' (selected, highlighted in blue) and 'Nominal'. 2. 'Select reason' with a dropdown menu showing 'Not selected' and a 'Required field' label. 3. 'Explanation' with a large text area showing 'Not filled' and a 'Required field' label. At the bottom, there are two buttons: 'Dismiss' (red) and 'Cancel' (blue).

Figure 69. Incident dismissal window

After that, all selected incidents will have a specified status. Incidents with this status can be reopened if necessary (see [Reopening the incident](#)).

#### 8.8.4 Creating Reports

This section describes the following operations:

- [Creating report on specific incident](#).
- [Creating report on incident group](#).

### Creating report on specific incident

To create a report on specific incident, follow these steps:

1. Select the archived incident of interest from the list.
2. In the opened window (see Figure 70), click the **Download PDF** button.

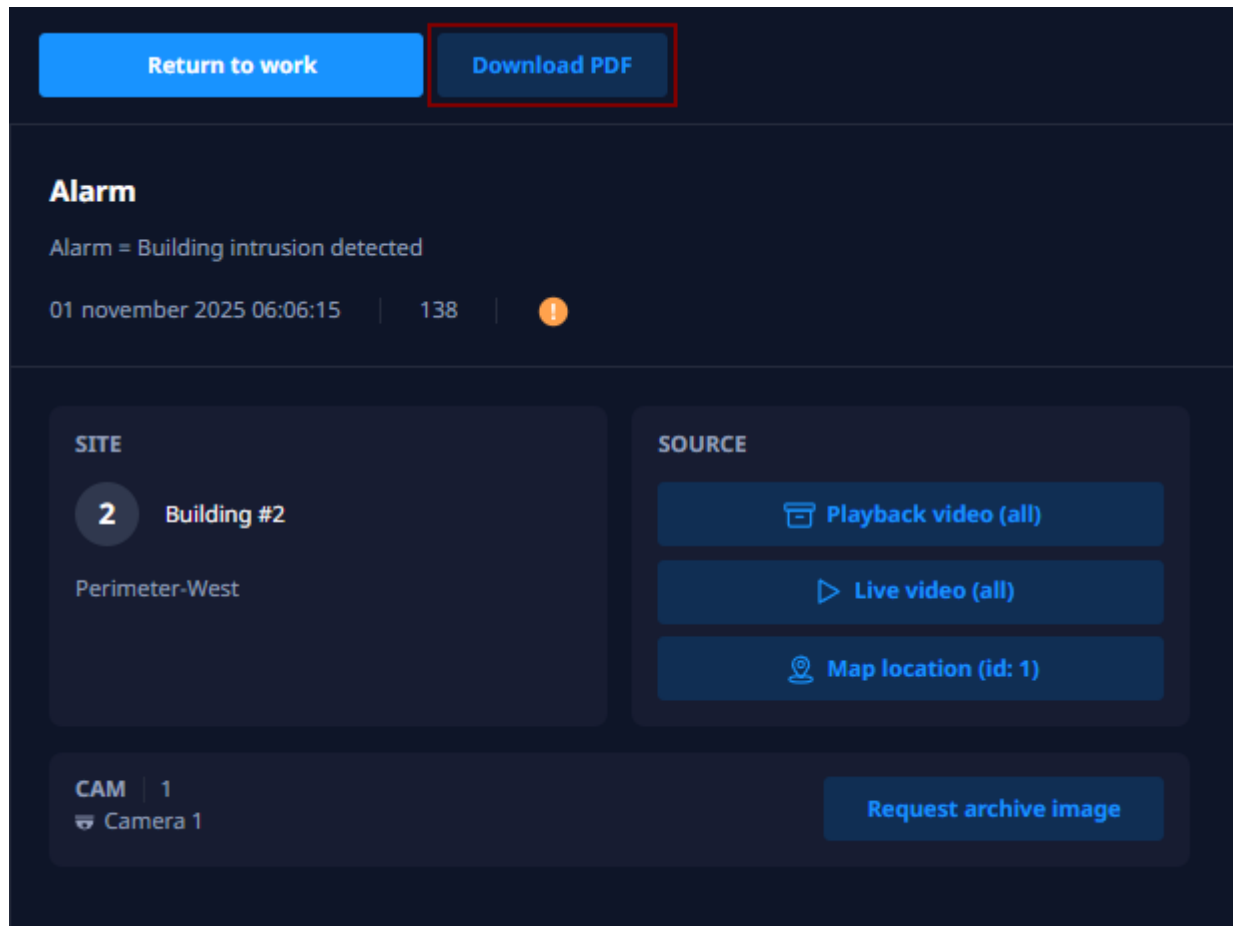


Figure 70. Creating report on specific incident

3. Specify the directory for saving the report in the opened window.

### Creating report on incident group

To create a report on an incident group, follow these steps:

1. Filter the list of archived incidents by criteria of interest (see [Searching for Incidents in the Archive](#)).
2. Select all incidents for the report.
3. Click the **Create report** button (see Figure 71).

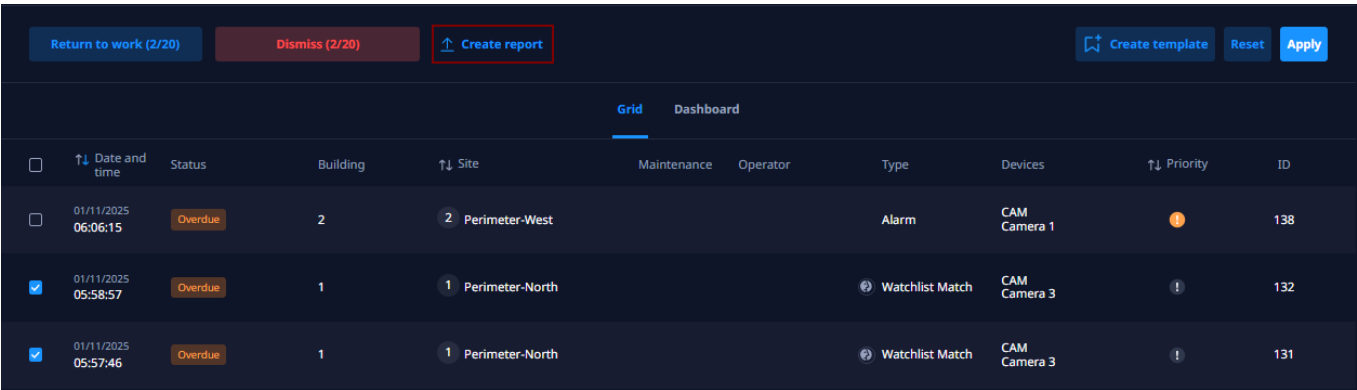


Figure 71. Creating report on incident group

4. In the window that opens, select the report format — PDF or CSV. In the **Report type** field, select Short or Full report depending on the required level of detail (see Figure 72).

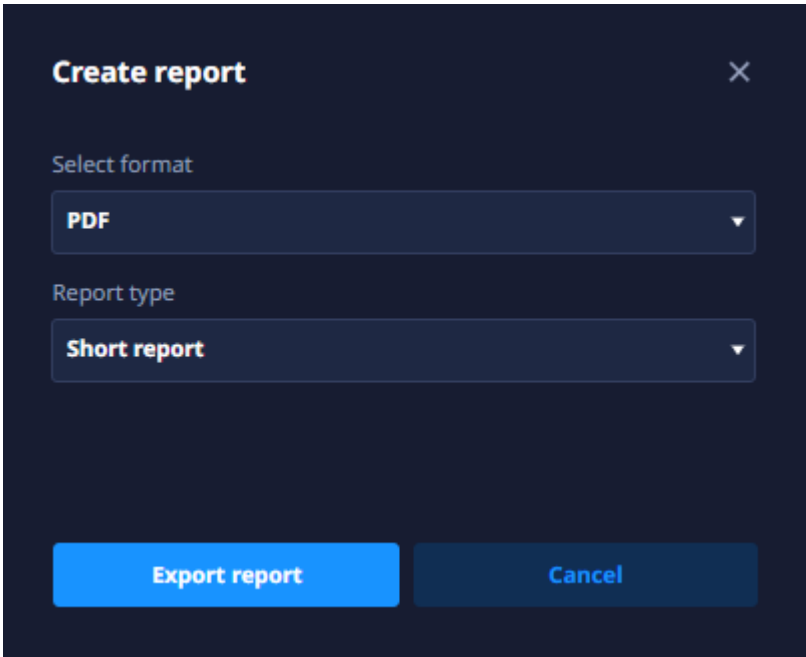


Figure 72. Creating report on incident group

5. Click the **Export report** button and specify the directory to save the report in the window that appears.

8.8.5 Viewing Incident Statistics

Statistics on incidents based on the parameters specified in the filter panel (see [Searching for Incidents in the Archive](#)) can be viewed using the **Dashboard** tab. The statistical data is presented in the following diagrams:

- **Total number of incidents.**
- **Number of incidents per Site.**
- **Number of incidents per Type.**
- **Number of Command Center incidents per Operator.**

**Total number of incidents**

The total number of incidents for each status is presented as a pie chart (see Figure 73).



Figure 73. Total number of incidents

Number of incidents per Site

The diagram shows the number of incidents for each status at each *Site* (see Figure 74).

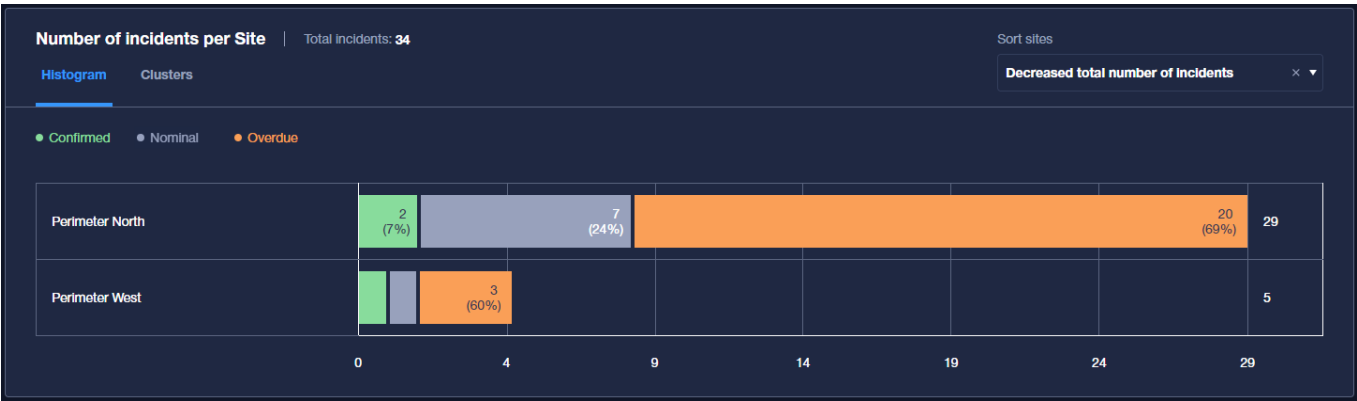


Figure 74. Number of incidents per Site

This and the diagrams below can be displayed as histograms or clusters. Use the **Histogram / Clusters** tabs to change the diagram type.

Number of incidents per Type

The diagram shows the number of incidents for each status by each possible incident type (see Figure 75).



Figure 75. Number of incidents per Type

### Number of Command Center incidents per Operator

The diagram shows the number of incidents for each status by each *Command Center* (see Figure 76). For each *Command Center*, the average response time of operators to incidents is displayed.

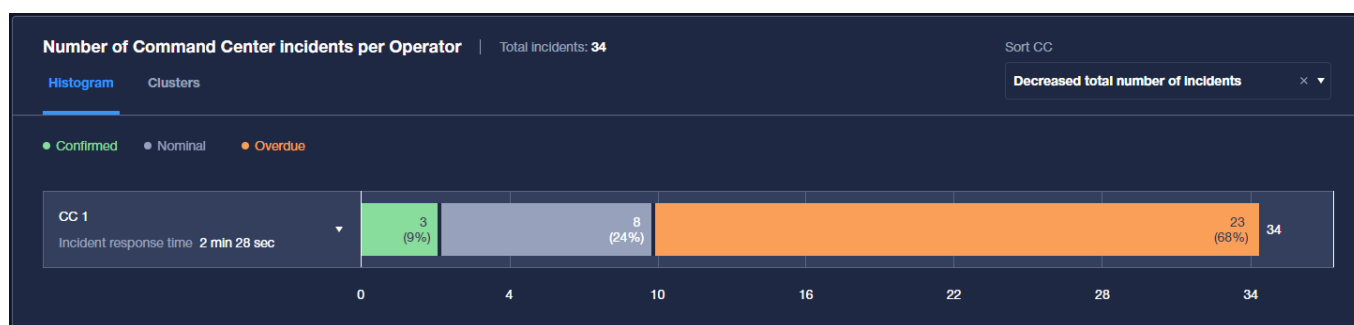


Figure 76. Number of Command Center incidents per Operator

## 8.9 Viewing History of Operations

Using the **Audit** section, the *Senior Dispatch Center operator* can view the history of the following events:

- Logging in and out of operators, break requests.
- Operator actions related to incident processing (see [Working with Incident Card](#)).
- Creating and editing scheduled maintenance (see [Scheduled Maintenance Management](#)).
- Enabling or disabling the events from *Site* sensors (see [Configuring the Receiving of Incidents](#)).
- Changes the alarm level of the *Sites* (see [Changing the Alarm Status of Site](#)).

**Warning!** The accessibility of the **Audit** section is determined by the SecurOS Dispatcher *Administrator*.

The appearance of the **Audit** section is shown in Figure 77.

| ↑↓ Date             | Time  | Event type             | Operator                                           | Event description                                                                                                    |
|---------------------|-------|------------------------|----------------------------------------------------|----------------------------------------------------------------------------------------------------------------------|
| 2025<br>01 november | 06:41 | Action on the incident | Senior Operator<br>Senior Dispatch Center operator | Incident name: Alarm<br>Site: Perimeter-West<br>Performed action: Changed status from "New" to "In work"             |
| 2025<br>01 november | 06:36 | Operator Login         | Senior Operator<br>Senior Dispatch Center operator |                                                                                                                      |
| 2025<br>01 november | 06:36 | Operator Logout        | Senior Operator<br>Senior Dispatch Center operator |                                                                                                                      |
| 2025<br>01 november | 06:12 | Action on the incident | Senior Operator<br>Senior Dispatch Center operator | Incident name: Alarm<br>Site: Perimeter-West<br>Performed action: Close incident                                     |
| 2025<br>01 november | 06:12 | Action on the incident | Senior Operator<br>Senior Dispatch Center operator | Incident name: Alarm<br>Site: Perimeter-West<br>Performed action: Changed status from "In work" to "Archived"        |
| 2025<br>01 november | 06:12 | Action on the incident | Senior Operator<br>Senior Dispatch Center operator | Incident name: Alarm<br>Site: Perimeter-West<br>Performed action: Perform actions in accordance with the regulations |

Figure 77. Audit section

To filter the event search results:

- **Date and time** — click on the drop-down list to specify the start of the time interval in the **Period from** field and its end in the **Period to** field.
- **Event type** — click on the drop-down list and select the required event types. The following event types are available for selection:
  - Shifts (operator login and logout, start and end of the break, break request and its approval).
  - Creating Scheduled Maintenance.
  - Editing Scheduled Maintenance.
  - Site device enable.
  - Site device disable.
  - Site alarm level change.
  - Incident Action.
- **Role** — select one or more operator roles.
- **Operator** — select one or more specific operators.
- **Site** — select one or more *Sites*.

Click the **Apply** button to apply the set filters. To clear all set filters, click the **Reset** button.

According to the filters set, the data is displayed as a table containing the following columns:

- **Date** — date of the event.
- **Time** — time of the event.
- **Event type** — type of the event (see above). For events with the Incident Action type, it is possible to view the incident card by clicking on the event record.

- **Operator** — name and role of the operator.
- **Event description** — detailed description of the event. For events with the Incident Action type, data such as incident name, previous / new incident status, operator action taken, etc. can be displayed.

To export the found entries, click the [↑ Create report](#) button. A window for configuring the report file parameters will appear on the right (see Figure 78).

The screenshot shows the SecurOS Dispatcher interface. The top navigation bar includes 'Incidents', 'Scheduled Maintenance', 'Site', 'Directories', and 'Incident Archive'. The main content area is titled 'Audit' and contains a table of events. The 'Create report' dialog is open on the right, allowing users to select a format (PDF) and a grouping (Not selected). The 'Export report' button is visible at the bottom of the dialog.

| ↑ Date           | Time  | Event type             | Operator                                           | Event description                                                                    |
|------------------|-------|------------------------|----------------------------------------------------|--------------------------------------------------------------------------------------|
| 2025 01 november | 06:41 | Action on the incident | Senior Operator<br>Senior Dispatch Center operator | Incident name: Alarm<br>Site: Perimeter-West<br>Performed action: Changed            |
| 2025 01 november | 06:36 | Operator Login         | Senior Operator<br>Senior Dispatch Center operator |                                                                                      |
| 2025 01 november | 06:36 | Operator Logout        | Senior Operator<br>Senior Dispatch Center operator |                                                                                      |
| 2025 01 november | 06:12 | Action on the incident | Senior Operator<br>Senior Dispatch Center operator | Incident name: Alarm<br>Site: Perimeter-West<br>Performed action: Close inc          |
| 2025 01 november | 06:12 | Action on the incident | Senior Operator<br>Senior Dispatch Center operator | Incident name: Alarm<br>Site: Perimeter-West<br>Performed action: Changed            |
| 2025 01 november | 06:12 | Action on the incident | Senior Operator<br>Senior Dispatch Center operator | Incident name: Alarm<br>Site: Perimeter-West<br>Performed action: Perform regulation |

Figure 78. Generating an operator actions audit report

Select the preferred file format — PDF or CSV:

- When selecting the PDF format, the **Grouping** field must be set to one of the following values:
  - Without — entries will be listed in descending order (from newest to oldest).
  - Operator grouping — entries will be distributed into tables corresponding to specific operators.
- When selecting the CSV format, records will be sorted in descending order (from newest to oldest). Grouping configuration is unavailable.

After configuring the parameters, click the **Export report** button. The report file will be generated according to the specified parameters and saved to the default system download directory.



## 9 User Role "Emergency Team Operator"

The following features are available to user with the *Emergency Team operator* role:

- **Processing Incidents by "Emergency Team Operator" User.**
- **Viewing Directories.**

The *Emergency Team operator* interface is shown in Figure 79.

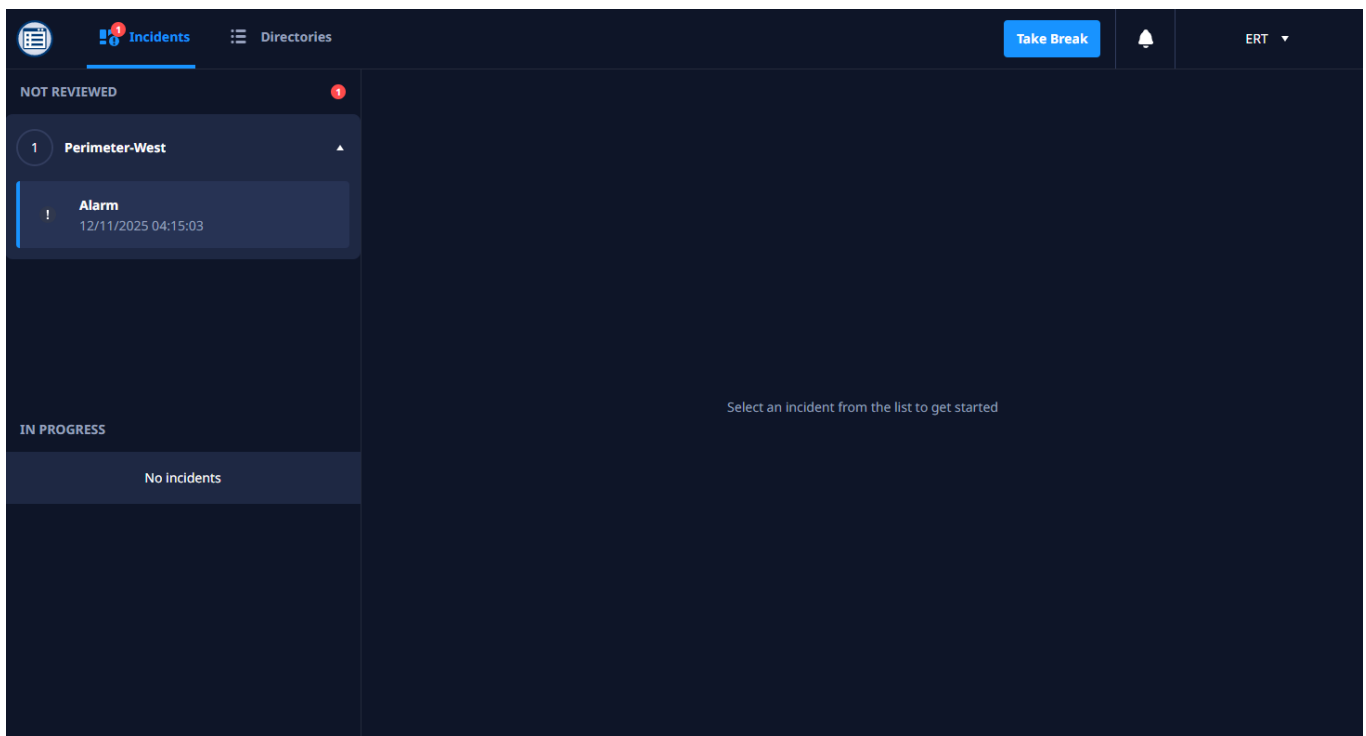


Figure 79. Emergency Team operator interface

### 9.1 Processing Incidents by "Emergency Team Operator" User

To view information about an incident, select it from the incident feed (see **Working with Incident Feed**). General information about the incident and its location that is displayed in the incident card is described in **Working with Incident Card** section.

The accompanying incident content can be accessed using the *WebConnect* module integrated into the application window. To view the location of the device that generated the incident, click the **Map** button in the **Sites** block (see Figure 80).

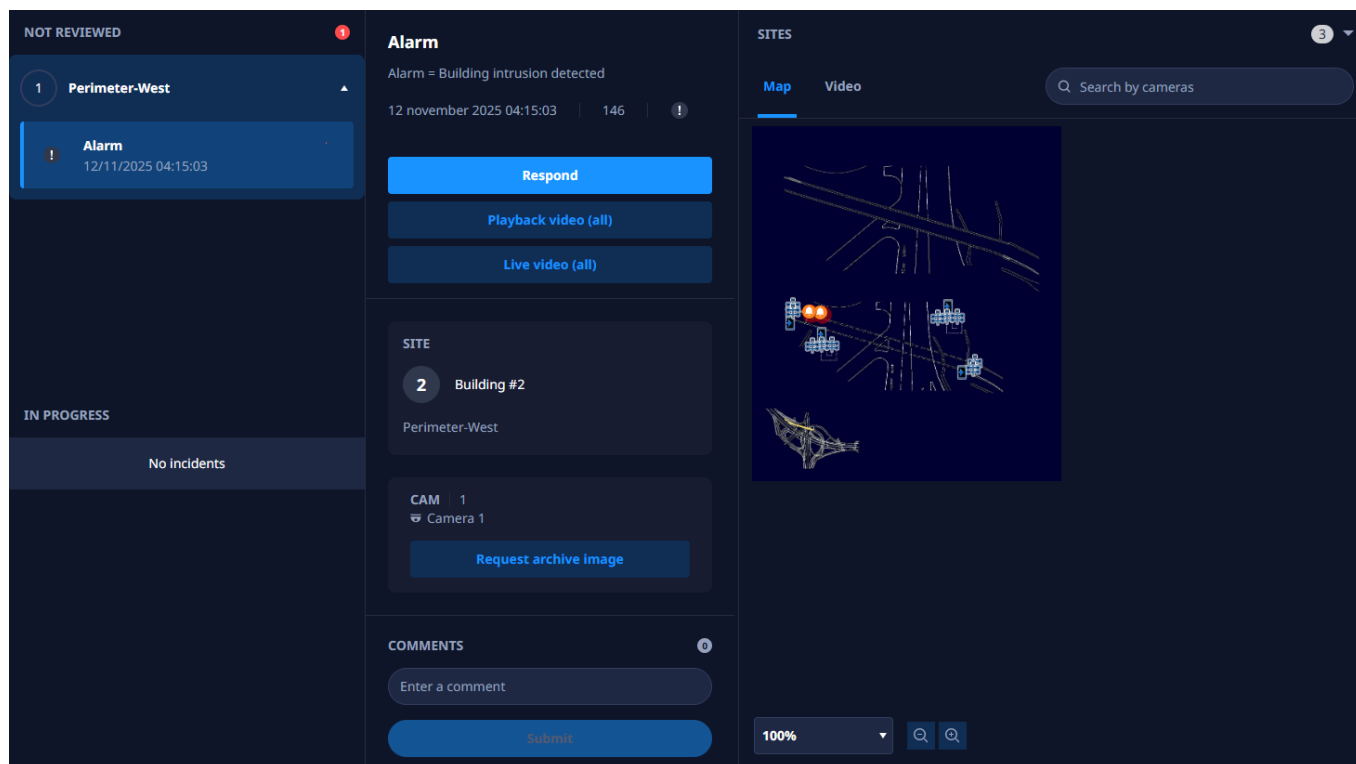


Figure 80. Incident card (map view)

To select the map level, use the button located to the right of the **Sites** block (see Figure 81).

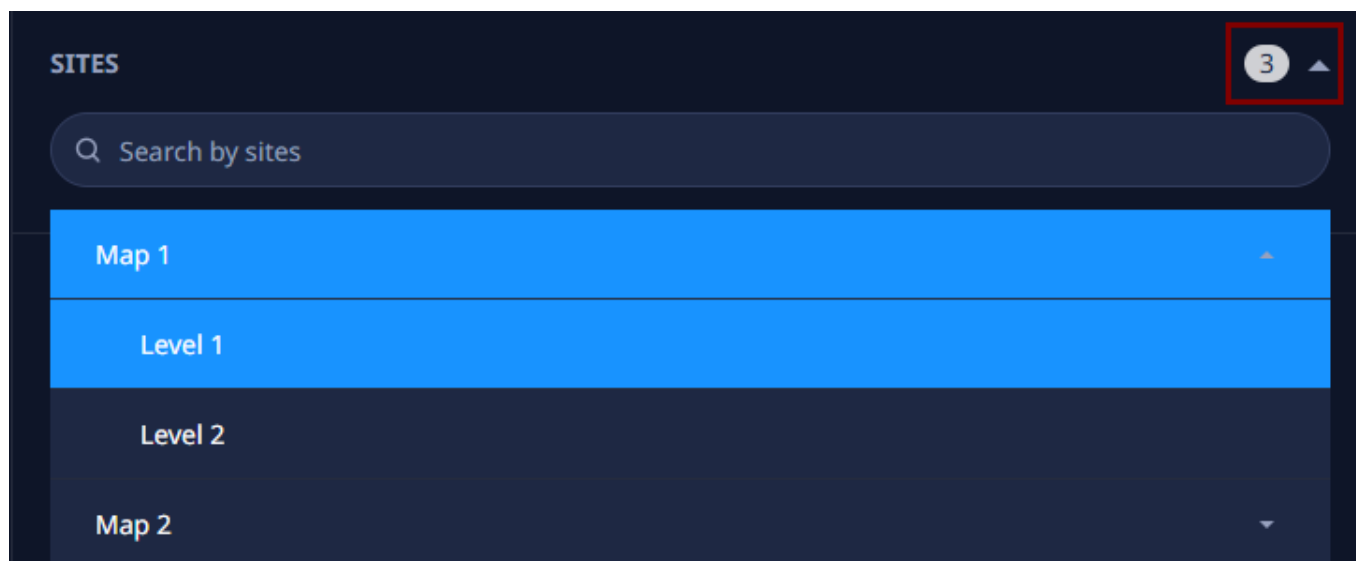


Figure 81. Selecting the map level

To view live video from the *Cameras* associated with the device, click the **Video** button in the **Site** section (see Figure 82). Use the buttons below the video playback area to switch between *Cameras*.

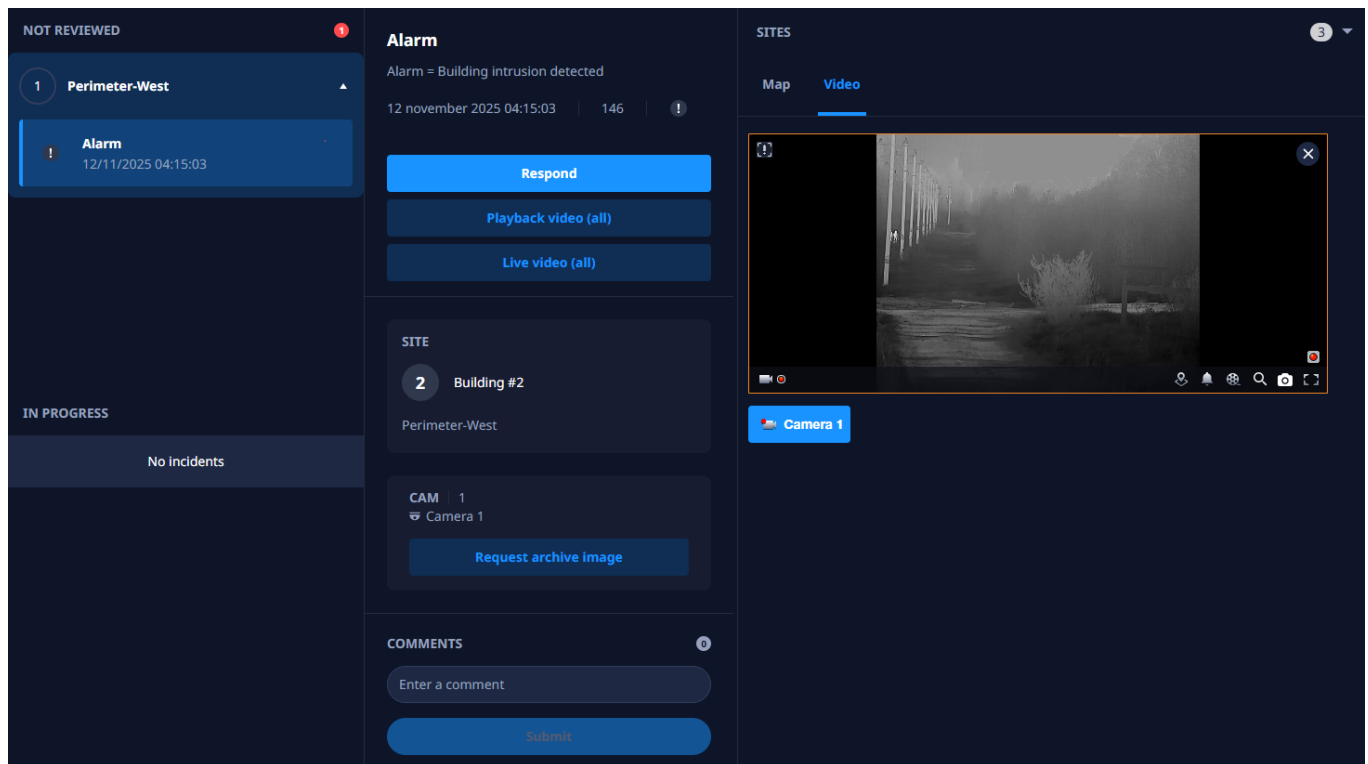


Figure 82. Incident card (view video)

To accept the incident for processing, click the **Respond** button.

If necessary, comments can be added to the incident before and after it is accepted. Comments on the incident will be visible to other operators who will further process it. To add a comment, type it in the text field in the **Comments** block and click **Submit**.

After taking appropriate action to control or eliminate the incident, the *Emergency Team operator* must send a report. To do this, click the **Report** button (see Figure 83).

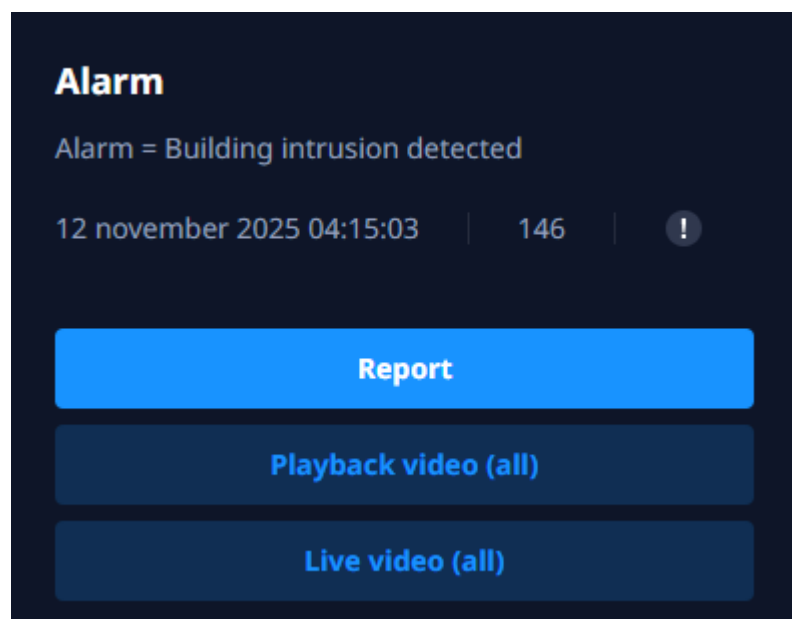


Figure 83. "Report" button

In the opened window (see Figure 84) it is necessary to confirm or deny the occurrence of the incident. To do this, select one of the options from the **What happened** drop-down list:

- **Real problem** — select if the incident is confirmed.
- **False alarm** — select if the incident is generated by mistake.

**Report** X

What happened Required field

False alarm ▼

Explanation Required field

The detector was triggered by an animal

Send report Cancel

Figure 84. Report of the ERT Operator

Add a written explanation in the corresponding field and click **Send report**. Once the report is sent, the incident will be forwarded to the operator for further processing.

## 10 Technical Support Information

This section contains requirements for the service information necessary when contacting Intelligent Security Systems Technical Support.

---

**Note.** Collected data have to be send to the Intelligent Security Systems Technical Support Team (see [Getting Technical Support](#)).

---

To ensure quick technical support, prepare the following technical information:

**Warning!** Data in items marked by "\*" are necessary to report.

1. (\*) User (customer) name to address to.
2. (\*) Organization name.
3. (\*) User (or organization) contacts: phone, e-mail.
4. Name of a personal Intelligent Security Systems manager (in Intelligent Security Systems authorized partner case). Otherwise, give the following data:
  - Company where the hardware and software components were purchased.
  - Actions to correct the problem suggested when contacting the partner from whom the product was purchased.
5. (\*) Problem description.
6. (\*) Description of the actions that cause the problem.
7. Description of the changes in system settings / configuration that caused the problem.
8. System and diagnostic information about the computer and SecurOS system configuration obtained from the **SystemInfo** utility (see [SecurOS Administration Guide](#) for details on using the utility).

If it is not possible to run the utility, provide the following information:

- (\*) Guardant keys identifiers and Dallas code;

---

**Note.** Equipment Dallas code can be viewed using the **Hardware Report Utility** (see [SecurOS Administration Guide](#) for details on using the utility).

---

- (\*) name and version of the installed Intelligent Security Systems company software;
  - total number of video servers and monitoring (operator) workstations in the system;
  - operating system (name and service pack version).
9. If possible, provide any other relevant information such as:
    - computer equipment configuration;
    - central processors load;
    - main and virtual memory used volumes;
    - network load;

- network and network neighborhood configuration.