


焊接总装与定位基准图

WELD ASSEMBLY / SHELL + SEAT + FIXTURE REFERENCE

HJ-DRW-007

EXPLODED / AXONOMETRIC SCHEMATIC

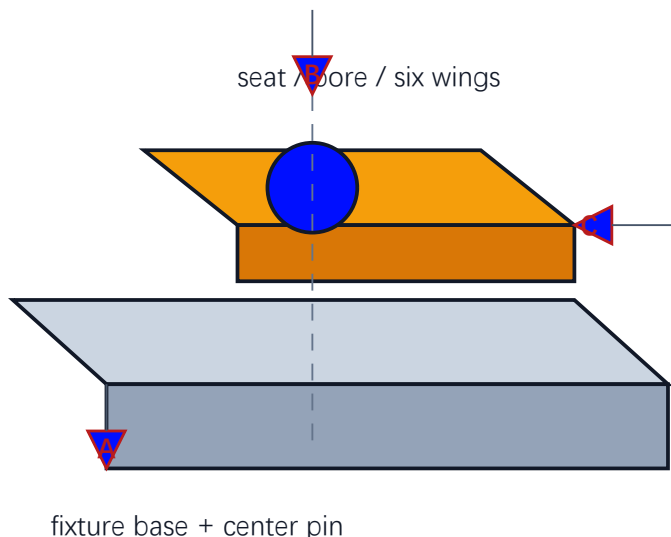

ASSEMBLY CONTROL

SHELL: $\varnothing 160 \times H200 \times t5$

SEAT: bore $\varnothing 40$; core $\varnothing 82$

WELDS: 6×18 ; sequence S3

A shell seating plane / B shell theoretical axis / C independent clocking

Controlled feature: $\varnothing 40$ bore axis

Inspection hand-off: visual $\rightarrow$ bore gauge/CMM $\rightarrow$ records

WPS qualification, material certificates and actual weld data remain open

Position tolerance target: $\varnothing 0.05$ | A | B

POSITION	$\varnothing 0.05$	A	B
----------	--------------------	---	---

MATERIAL: Q235B shell + QT450-10 seat + Ni filler UNS N02200 core | TOLERANCES: ± 0.10 mm (design assumption; verify before release)

STATUS: DESIGN-REVIEW

Functional assembly datums: A=seat/support plane; B=shell theoretical axis; C=independent clocking; design-review only.