

ASSEMBLY INSTRUCTIONS

Installation video can be found on the Amazon product page



VNVB-0001
VNVB-0002
VNVB-0003
VNVB-0004

NOTICE


SAFETY INFORMATION

- 1.The accessory bag contains some small accessories,which should be kept away from children.
- 2.Kids are not allowed to climb or play with the product for safety reasons.

IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY

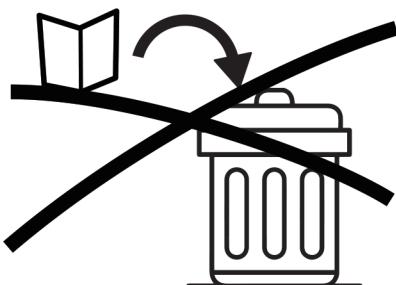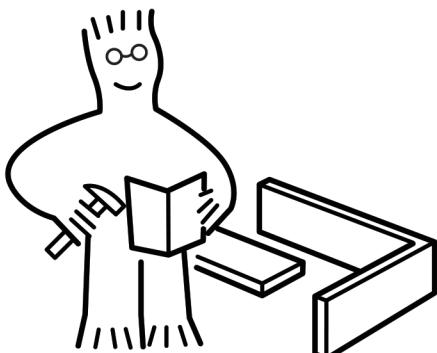


Assemble on a flat, clean and soft surface.

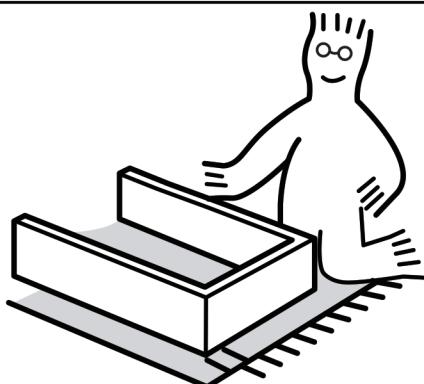


Professional installation is highly recommended.


Periodically Check That All Components Are Tightly Secured.

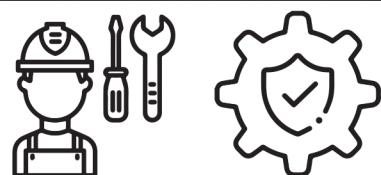


It is recommended that multiple people assemble this product.

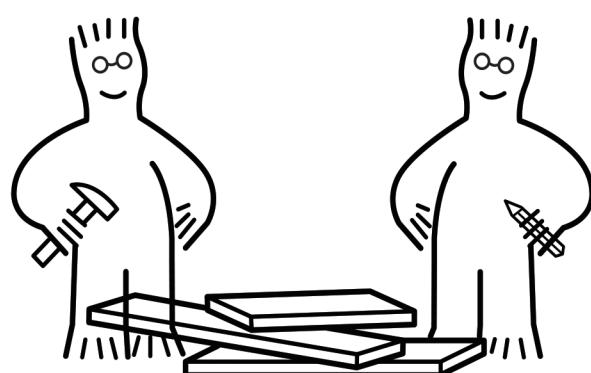

Serious or fatal crushing injuries can occur from furniture tip-over. Always secure this furniture to the wall using tip-over restraints.

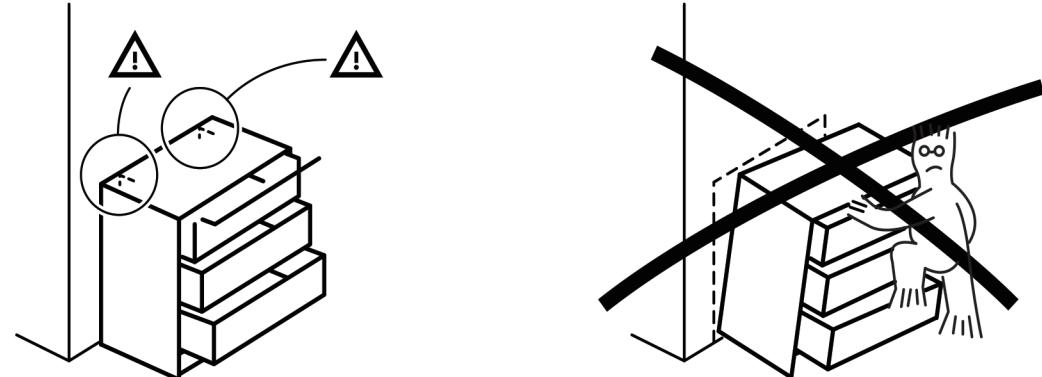


Please have the following auxiliary tools ready:

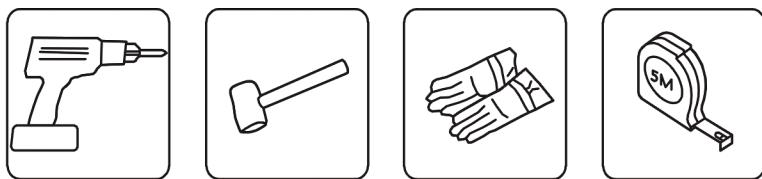


USING CAM LOCK AND QUICKFIT


Tighten QuickFit until the shoulder is flush with the panel. Do not overtighten or undertighten.

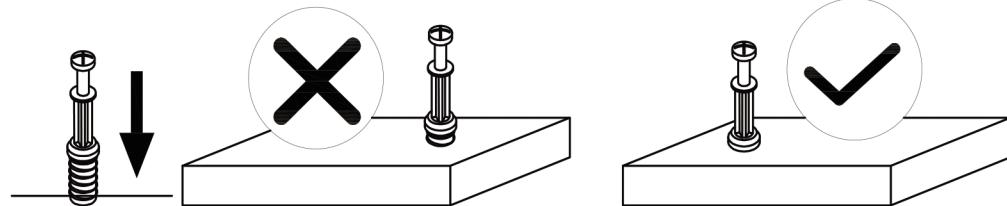

When fitting the cam lock, ensure the starting position is correct before inserting the connecting QuickFit.

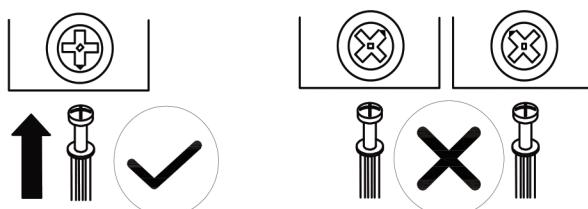

The QuickFit head should be in the center of the cam lock when the two panels are joined. The cam lock should be inserted before the QuickFit. Turn the cam lock clockwise to tighten.

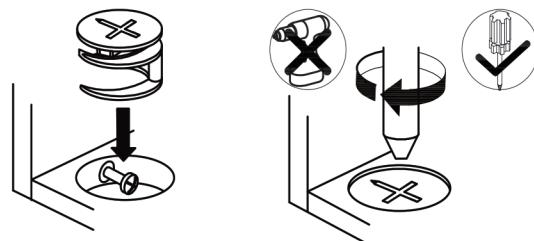


"IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY"

Notice:


1. Follow the installation instructions. Please confirm all accessories are preset before installation.
2. Do not fully tighten the screws during initial assembly. Fully tighten screws only once all pieces which are correctly assembled.
3. Please unbox the item from the side with an open-label and put carpet on the floor to avoid scratching it.




Recommended installers:2

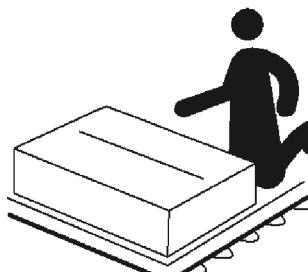

Put a carpet on the
floor before unpacking

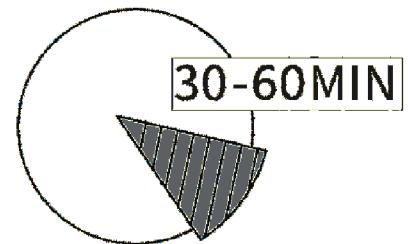

Estimate installation time:
30–60 minutes

Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
A	 φ15*10mm	×56	B	 M6*34mm	×56
C	 M5*38mm	×22	D	 3.5*12mm	×38
E	 6*30mm	×41	F	 Φ5/32"*12mm	×4

Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
G		×3 φ1/4" *28mm	H		×1 M4
I		×1	J		×2
K		×3	L	 14" CR DR CL DL	×3
M		×1	N		×3
O		×1	P		×1
Q		×2			


The hardware quantities listed above are required for proper assembly.
Some extra hardware may also have been included in the actual hardware bag.



Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
1		×1	2		×1
3		×1	4		×2
5		×3	6		×3
7		×2	8		×1
9		×1	10		×1
11		×1	12		×1


Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
13		×1	14		×1
15		×1	16		×1
17		×1	18		×1
19		×1	20		×2
21		×1	22		×1
23		×1	24		×1

Expllosion Diagram


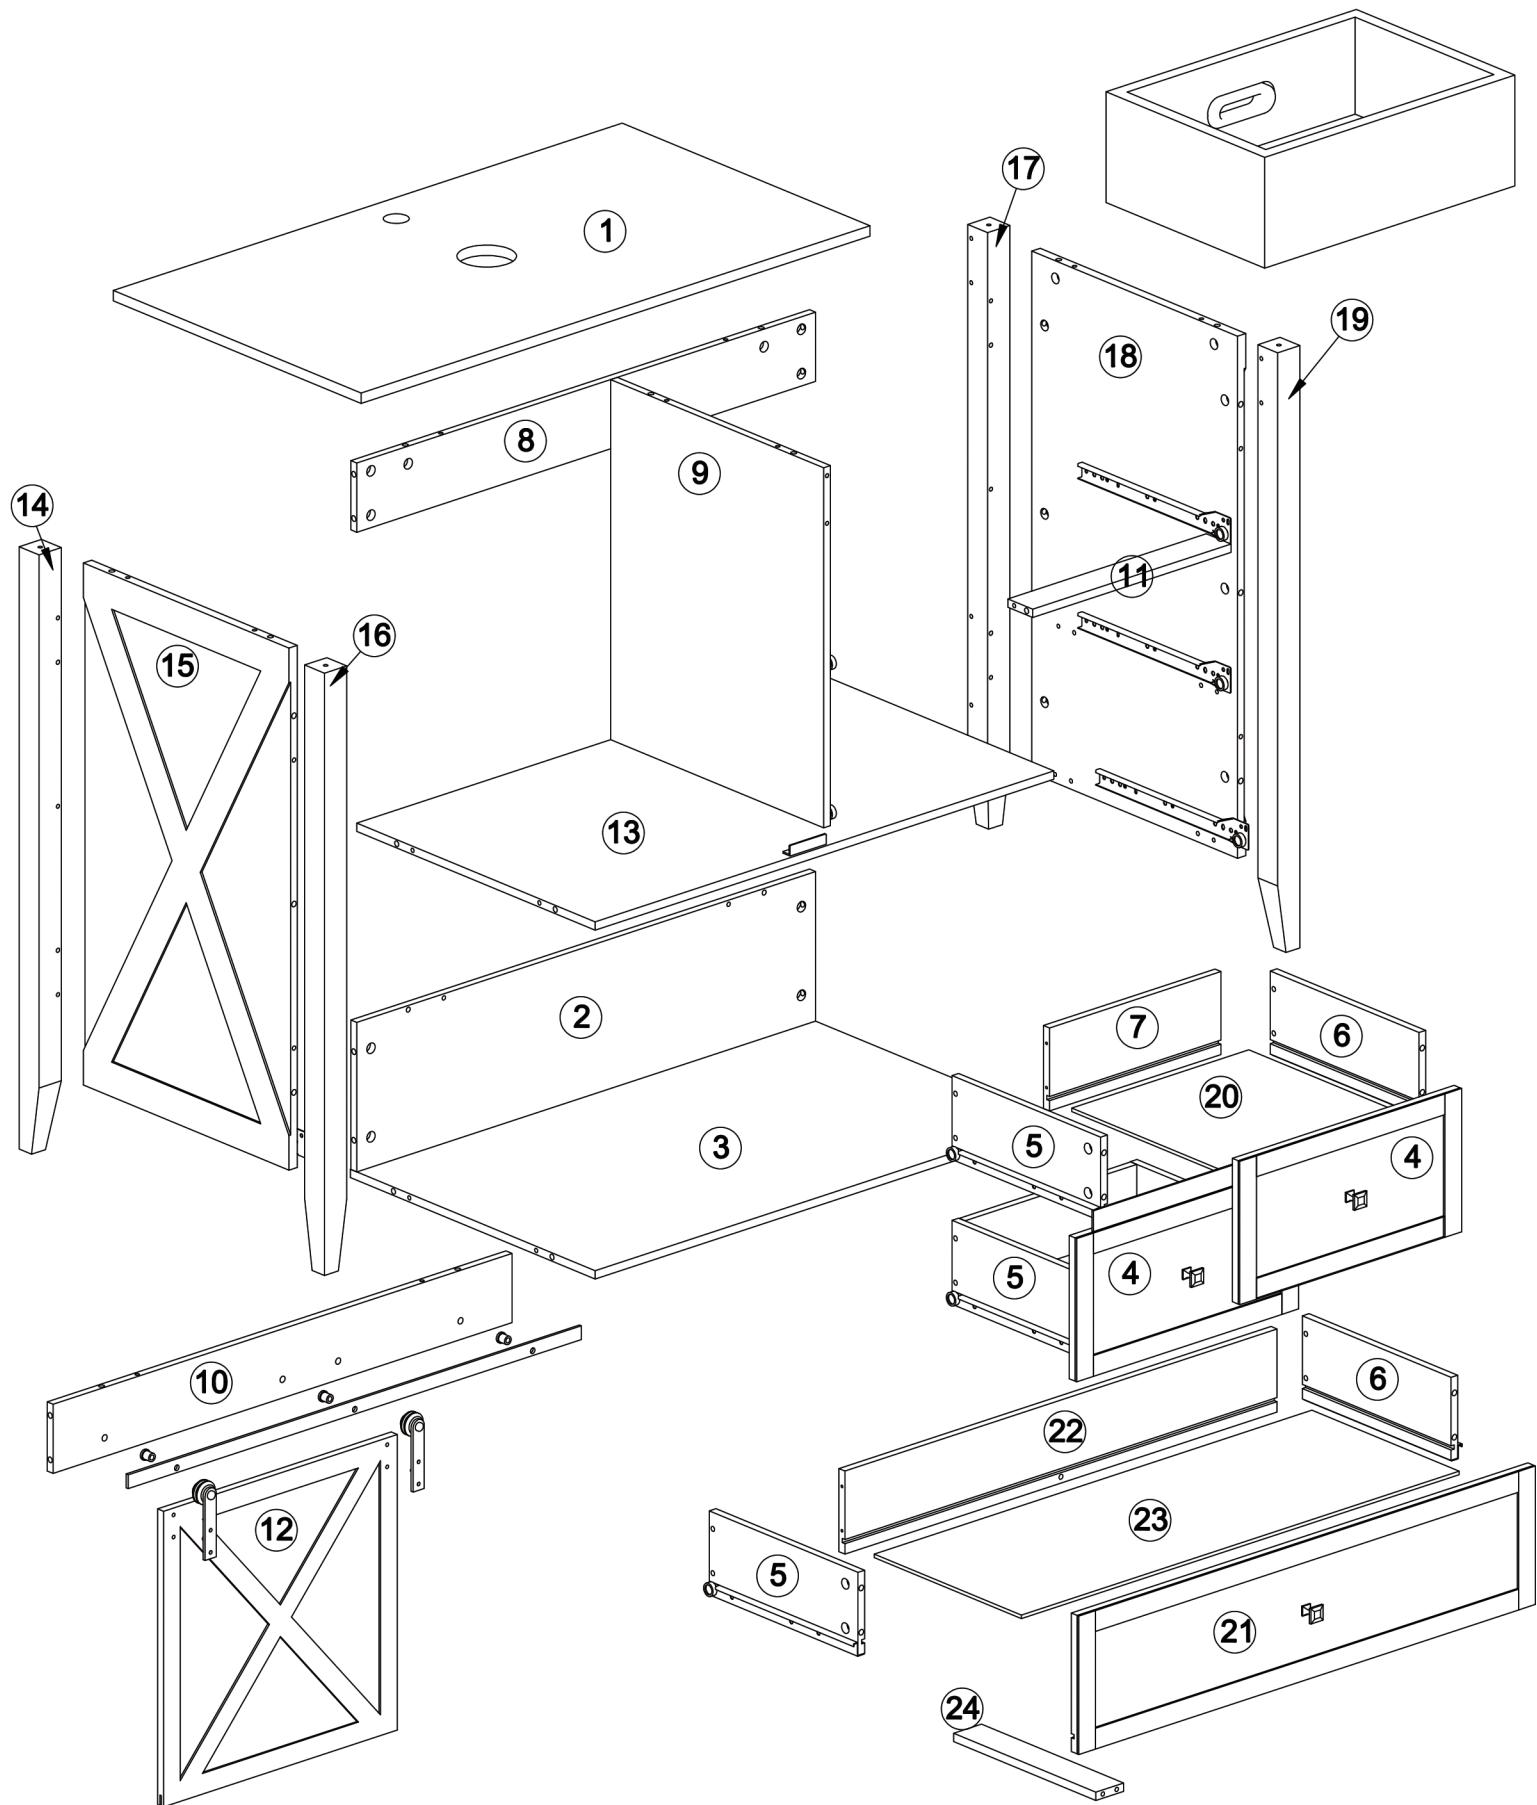


1


(B) 1 pc (C) 2 pcs (D) 6 pcs (H) (L) 2 pcs (CL) (8) 1 pc (9) 1 pc

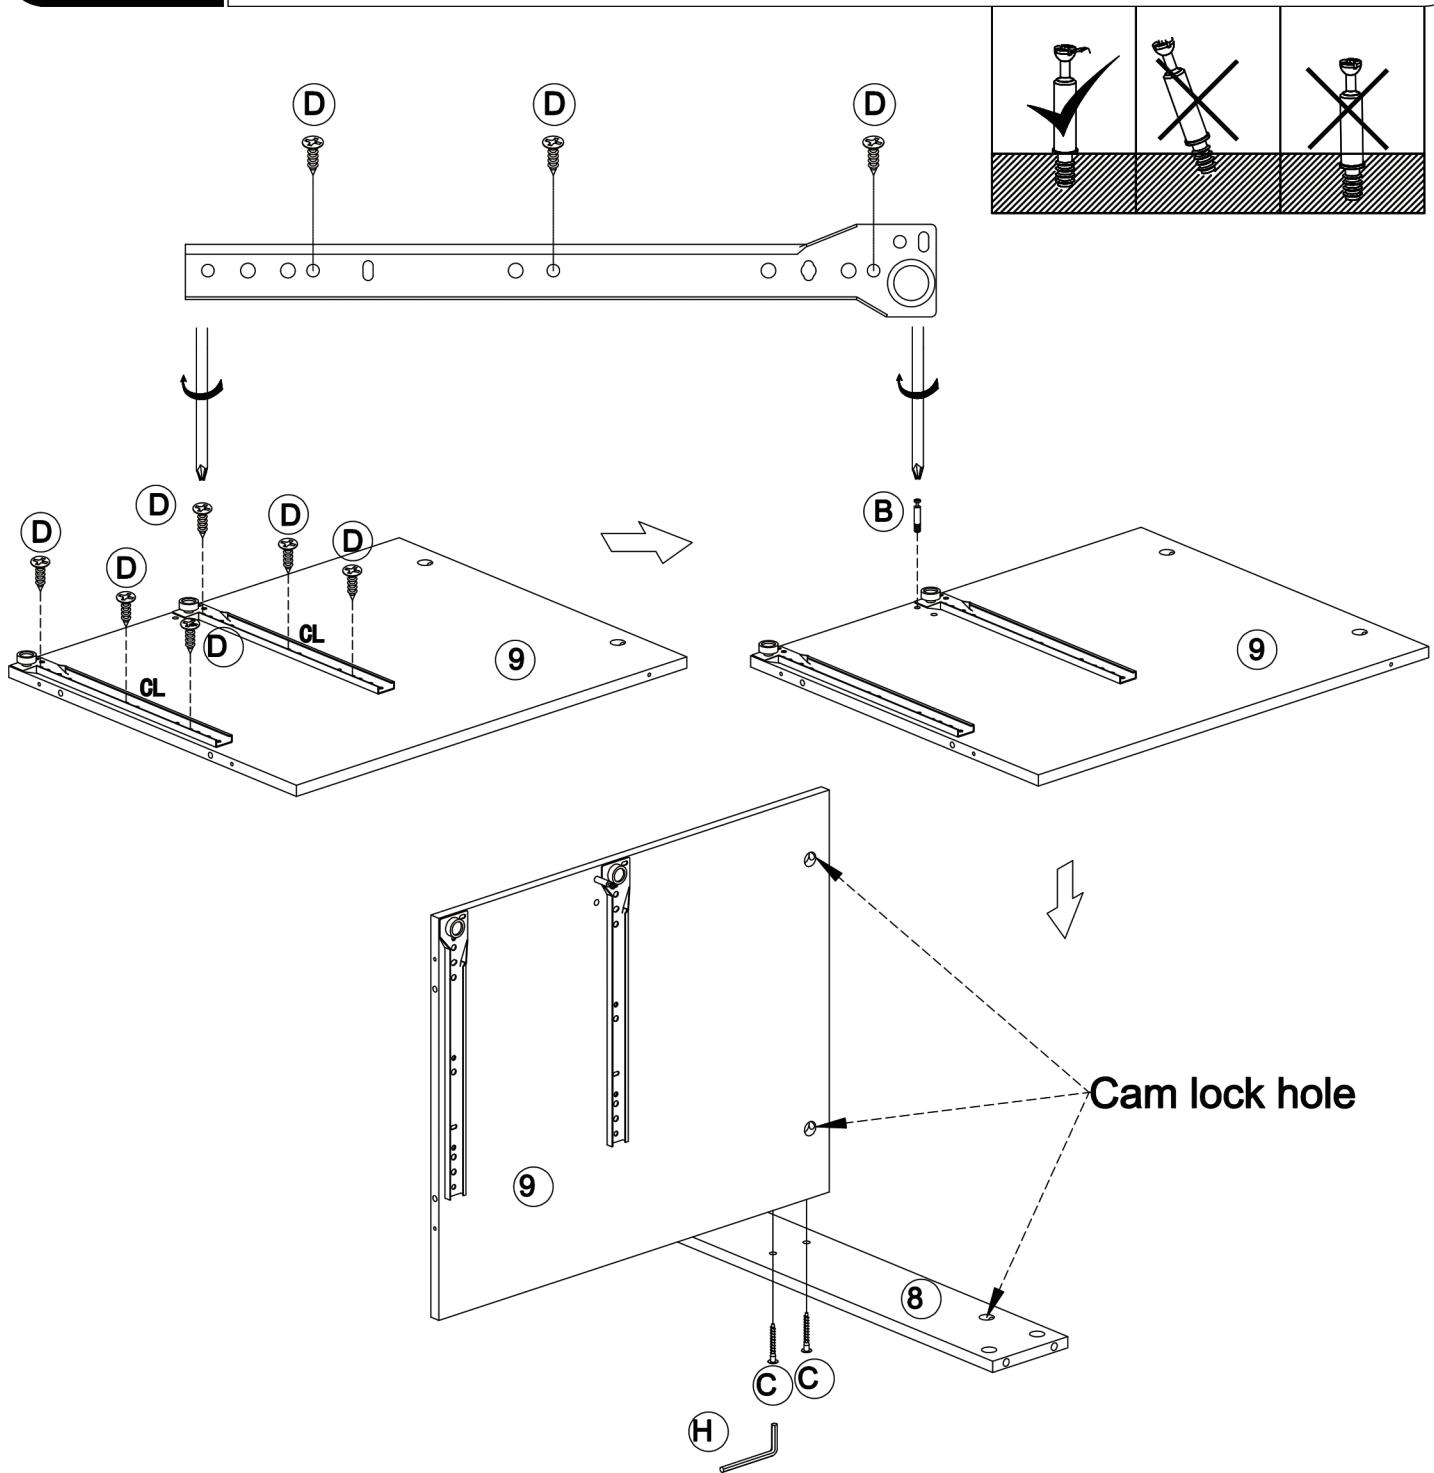

2

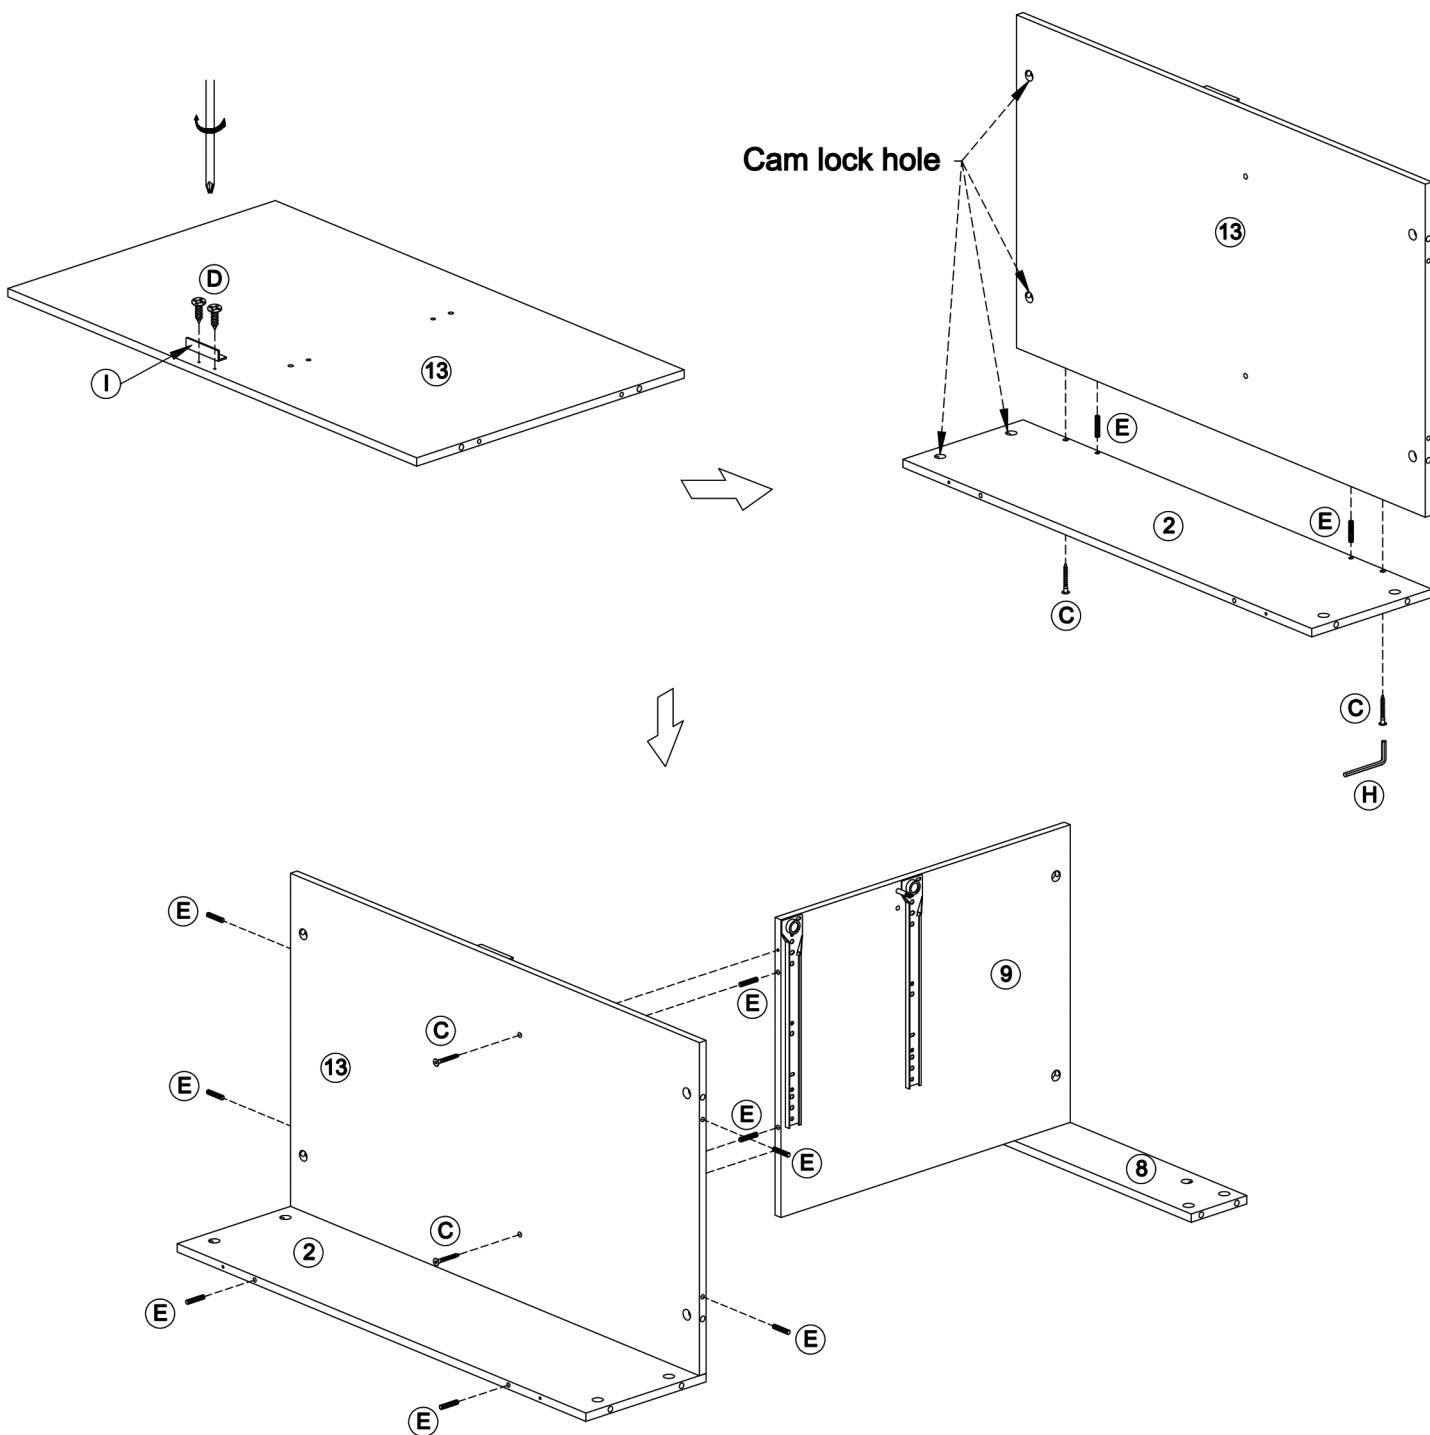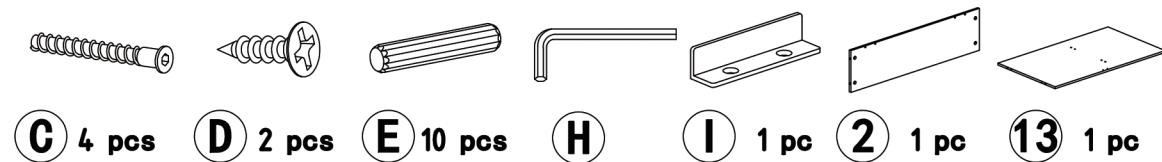

3



A 1 pc

C 3 pcs

E 6 pcs


H

3 1 pc


10 1 pc

11 1 pc

Cam Lock Placement Supplement



1




2



To tighten, turn the Cam Lock **CLOCKWISE** until the arrow or "△" sign point AWAY from the connected Panel.

***NOTE: DO NOT USE AN AUTOMATIC SCREWDRIVER TO TIGHTEN CAM LOCKS, DO NOT OVER-TIGHTEN.**


When inserting the Cam lock, make sure that the open End of the cam Lock faces the Cam Screw Entry.

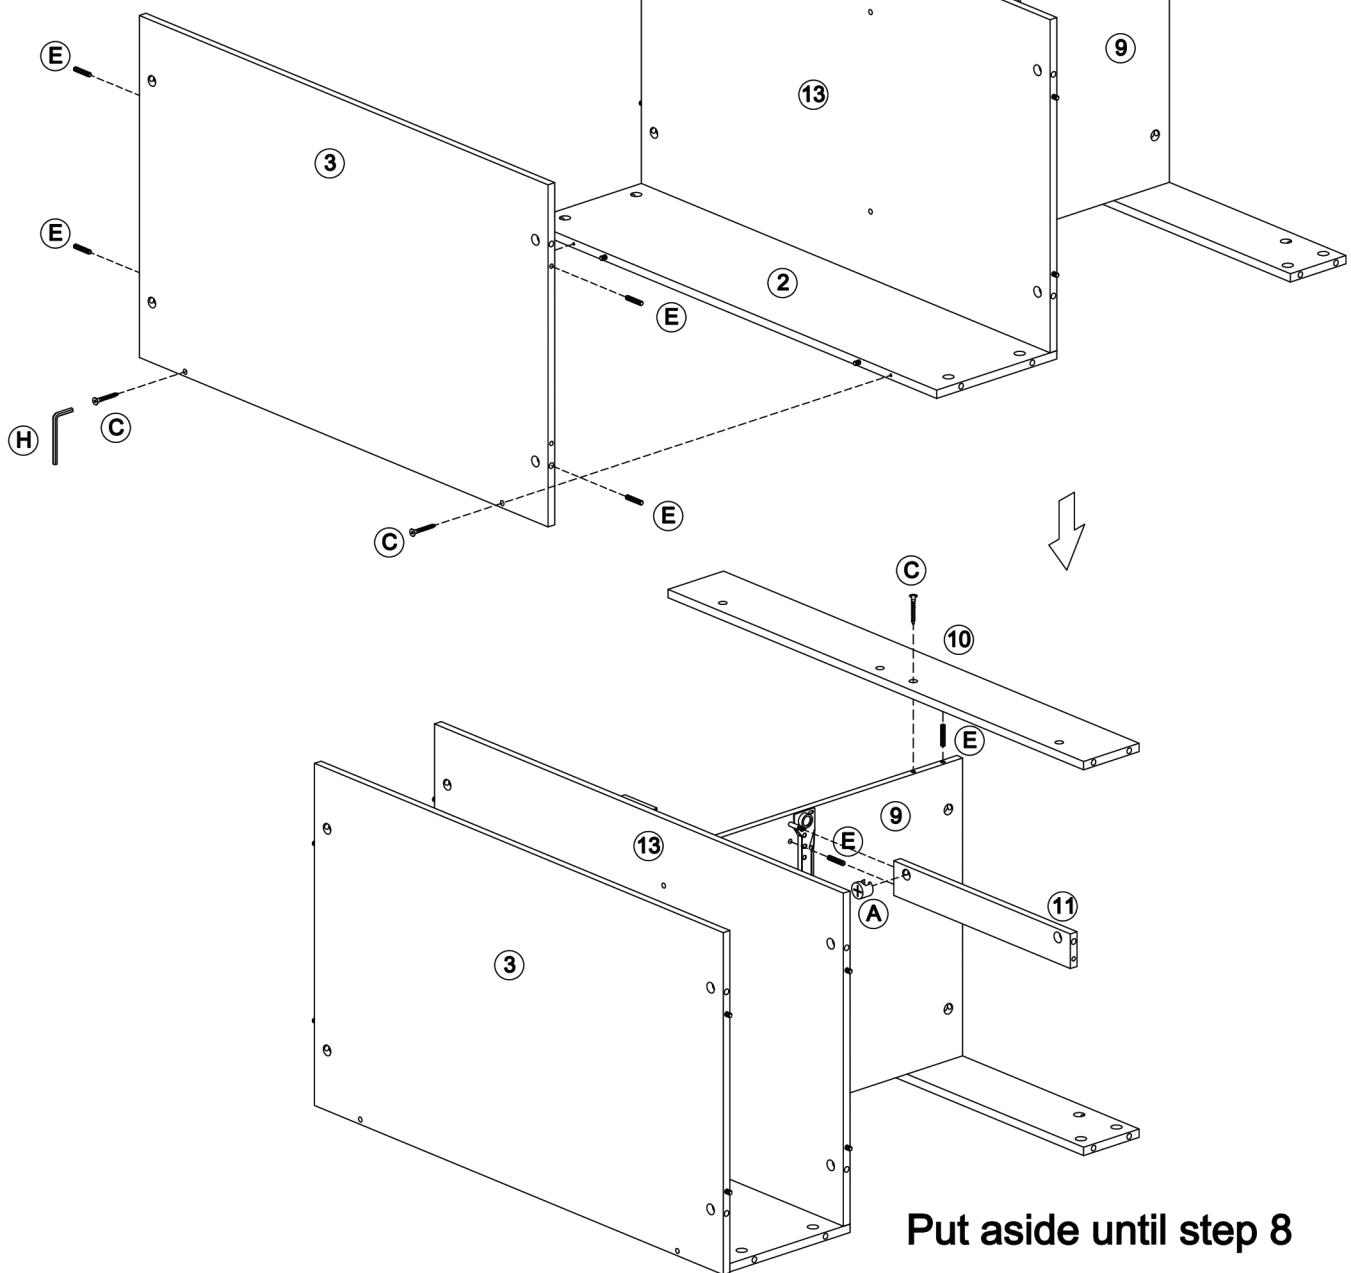

4

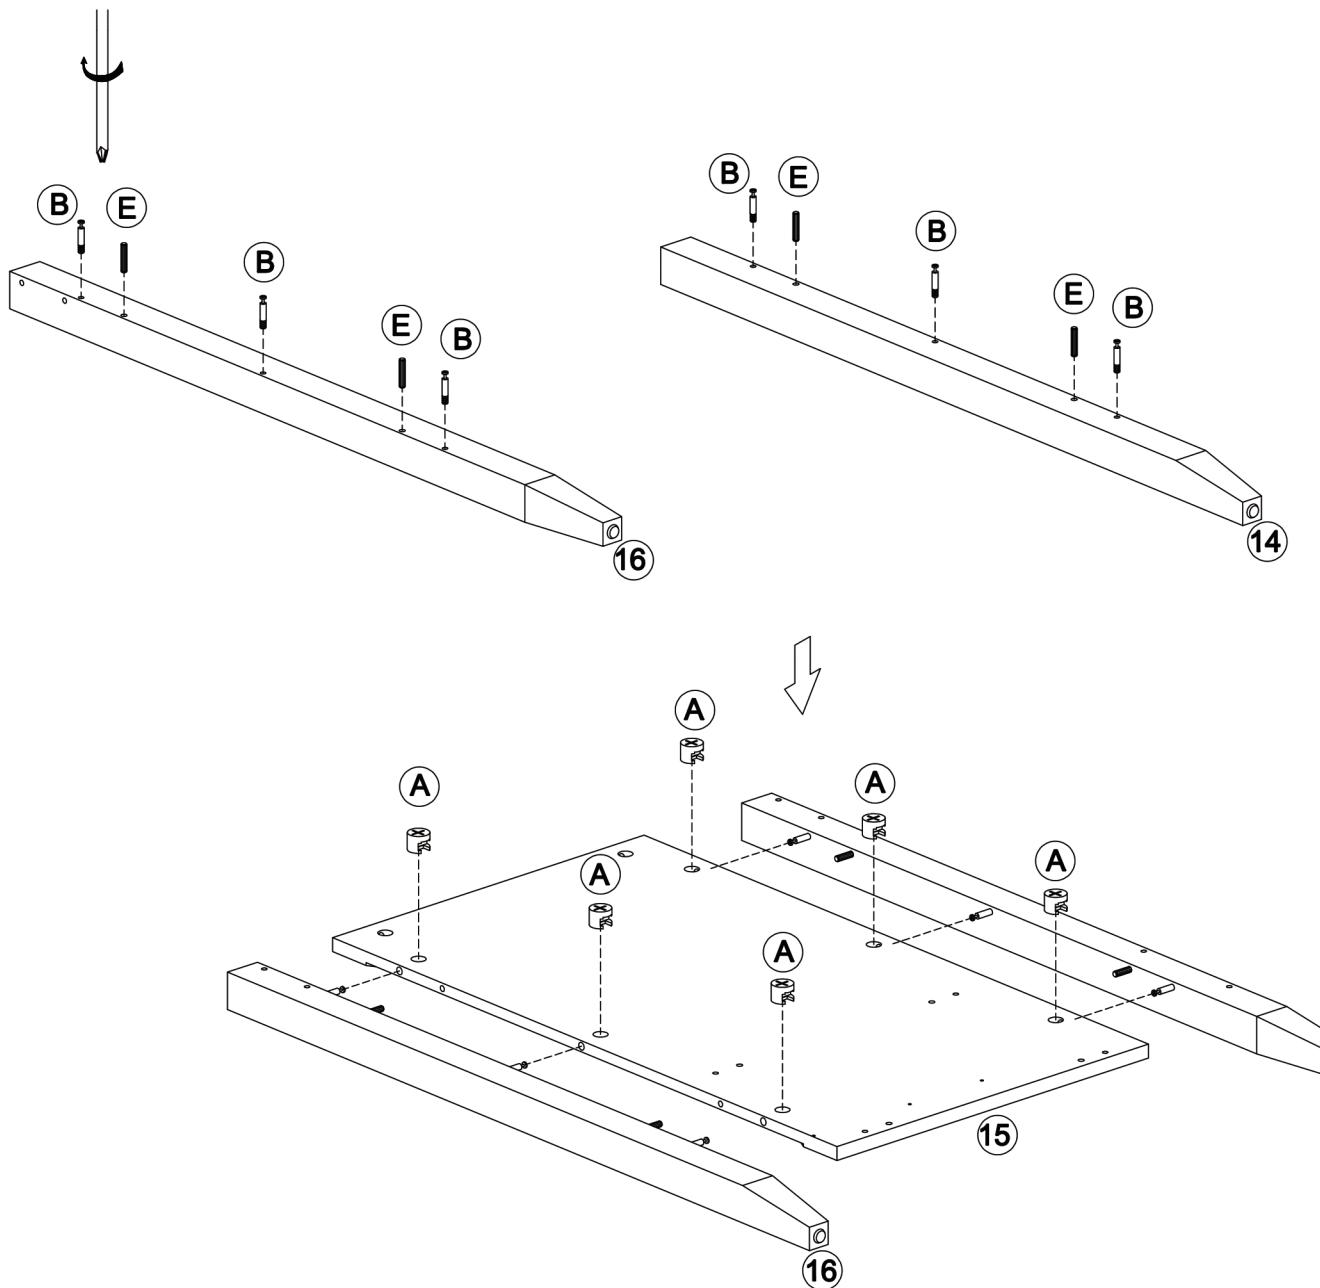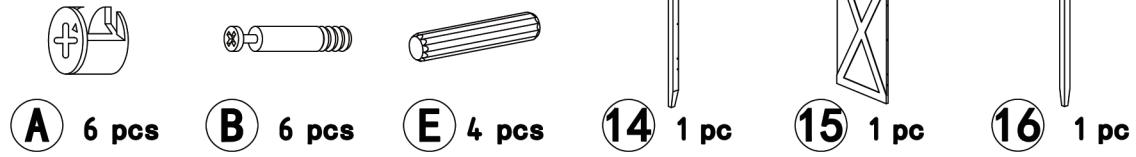


5





(B) 10 pcs

(D) 3 pcs

(L) 1 pc

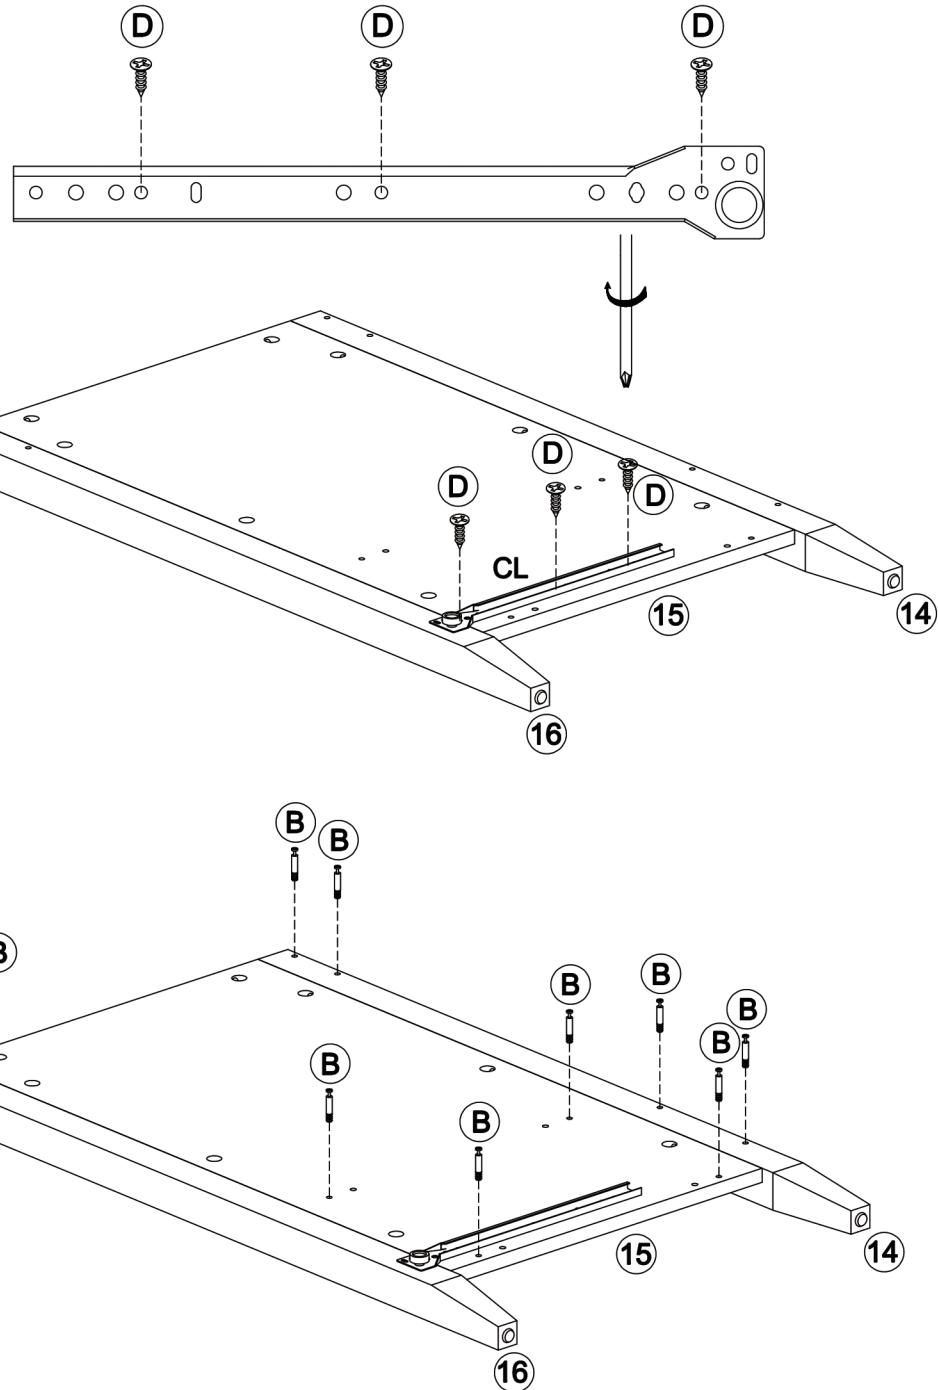

6

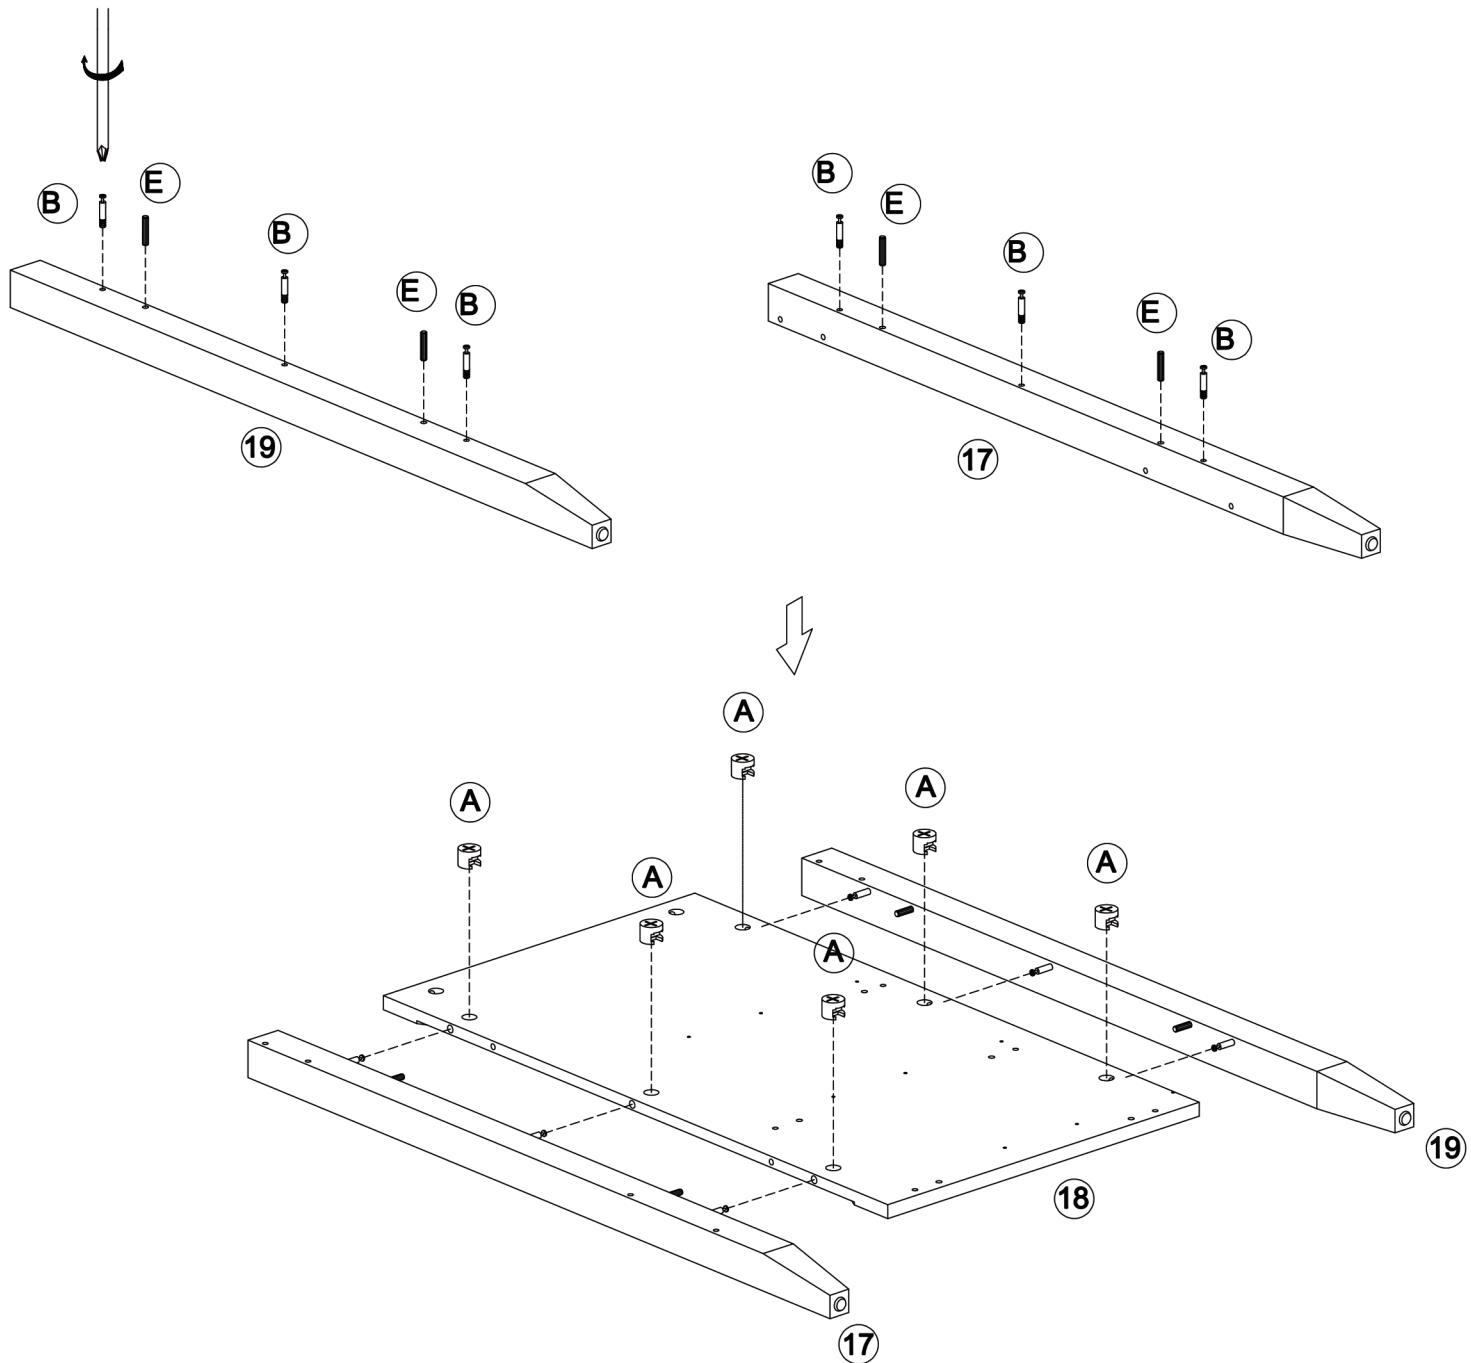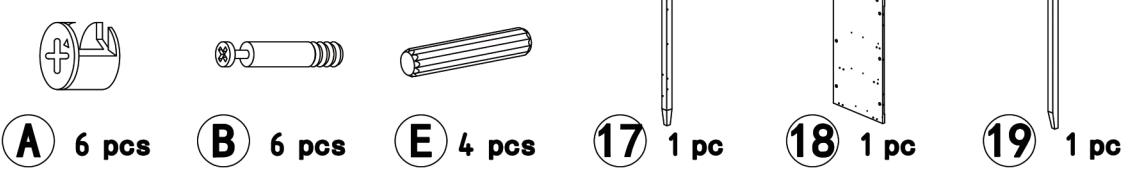



7



(B) 11 pcs

(D) 9 pcs

(L) 3 pcs

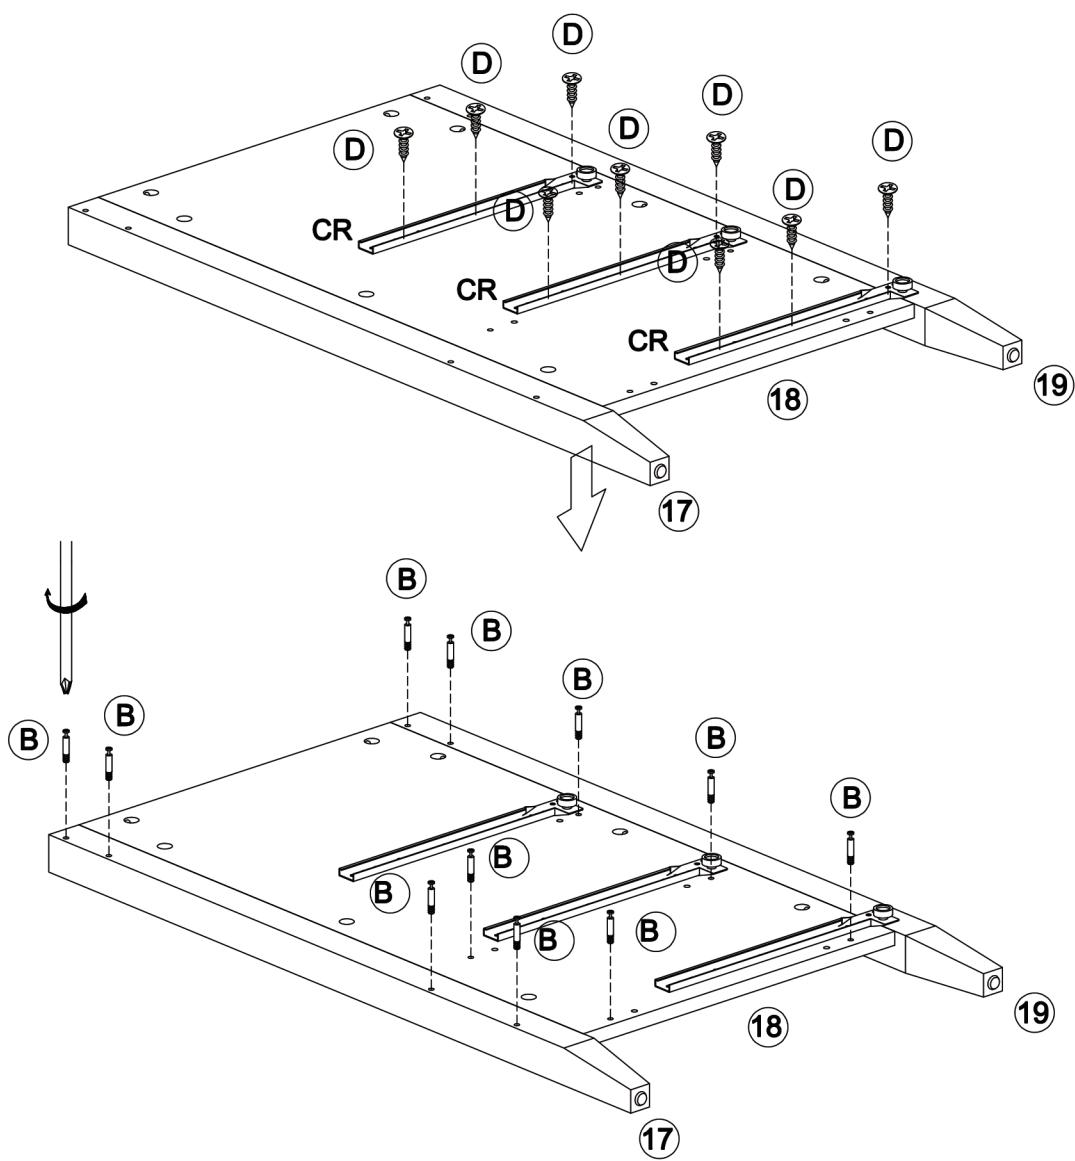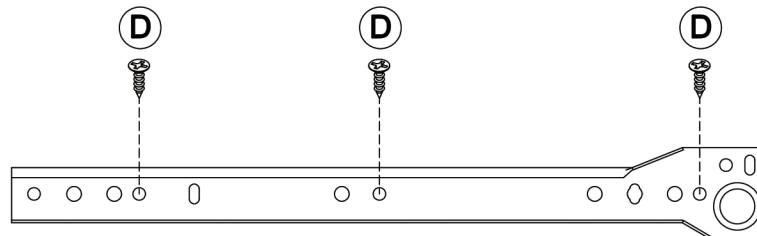


8



(A) 11 pcs





(E) 1 pcs

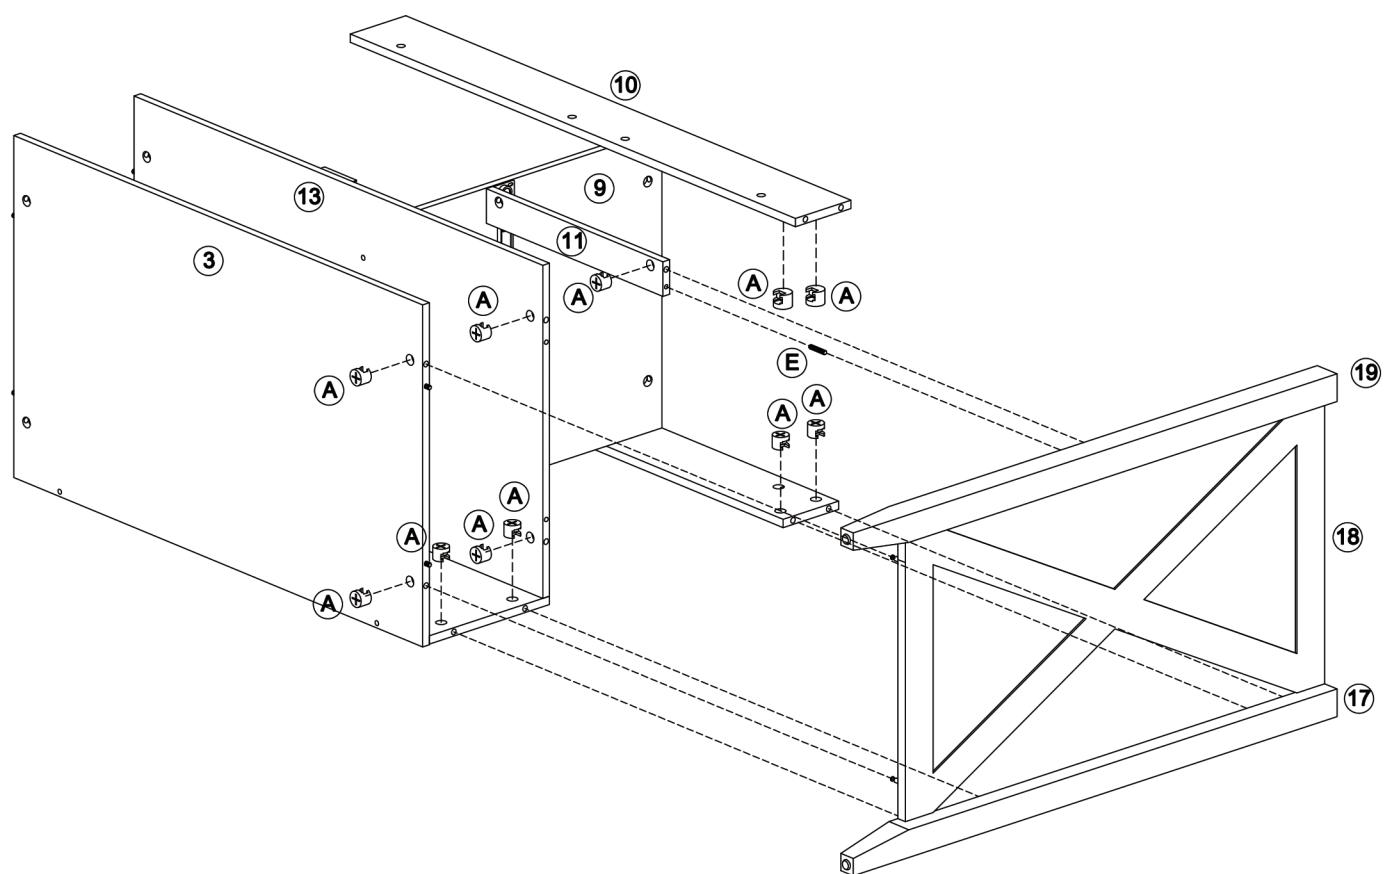

9




A 12 pcs

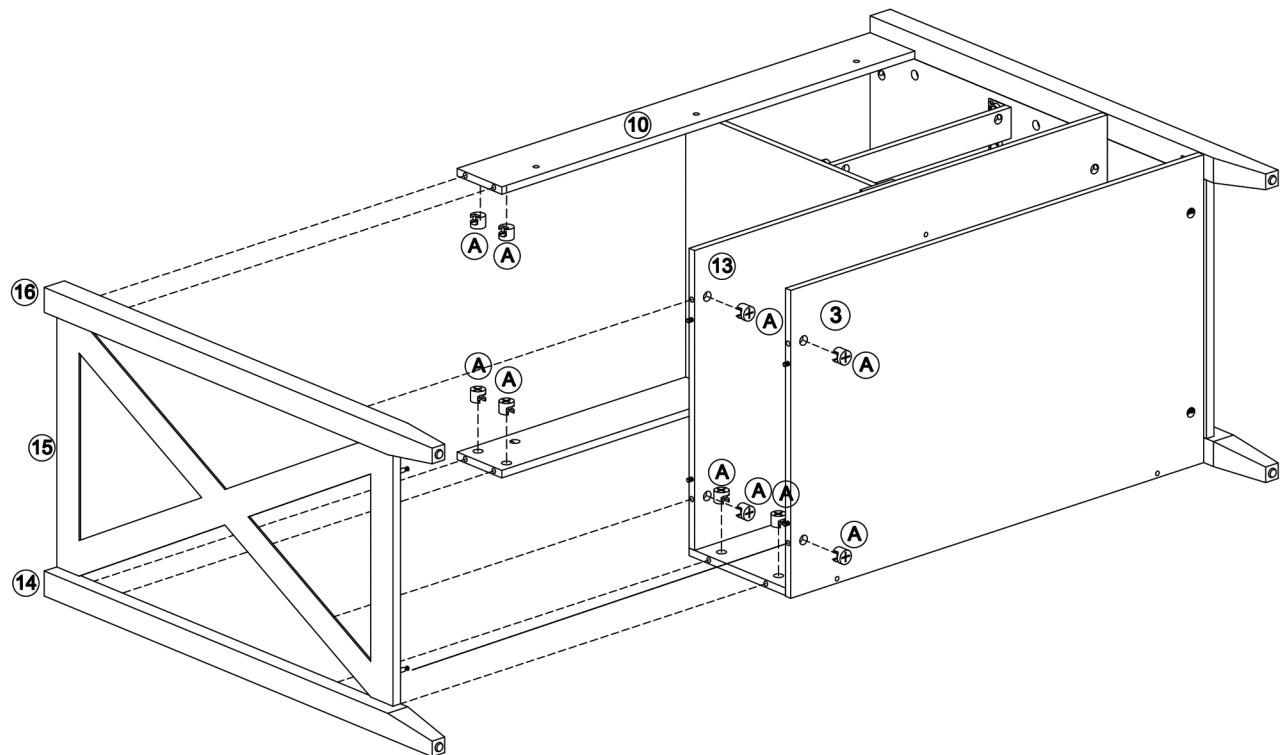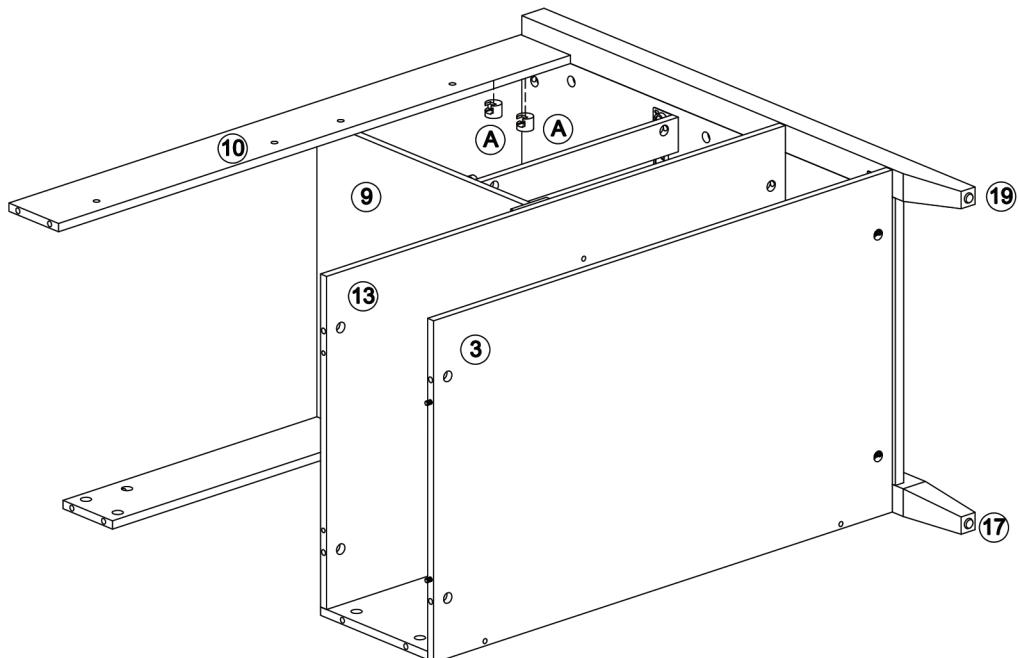

10



E 14 pcs

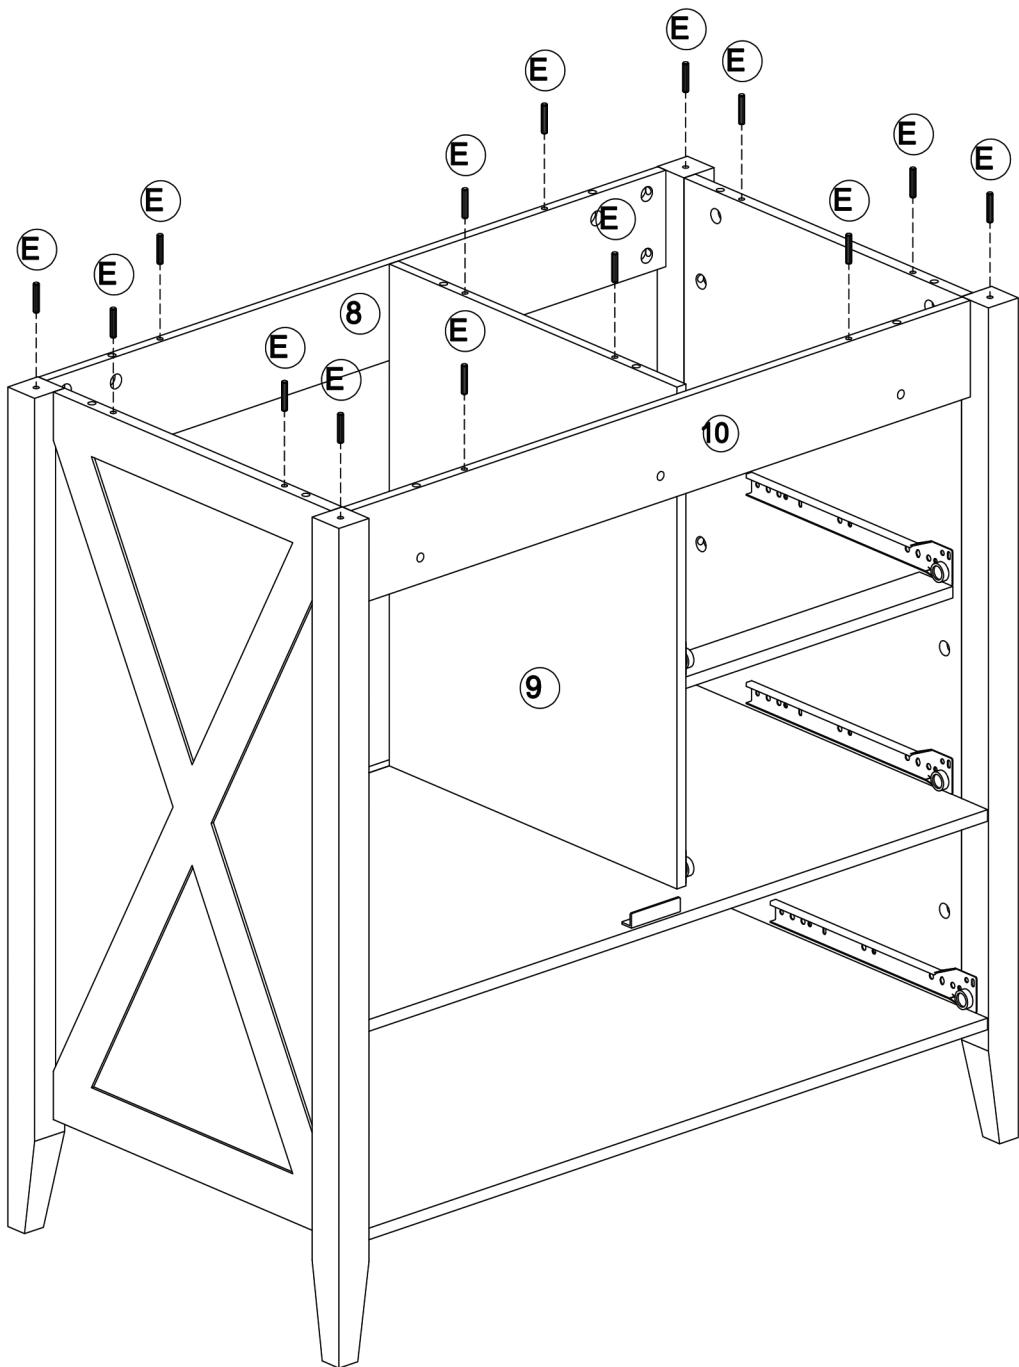


11




(A) 10 pcs





(B) 10 pcs



(1) 1 pc

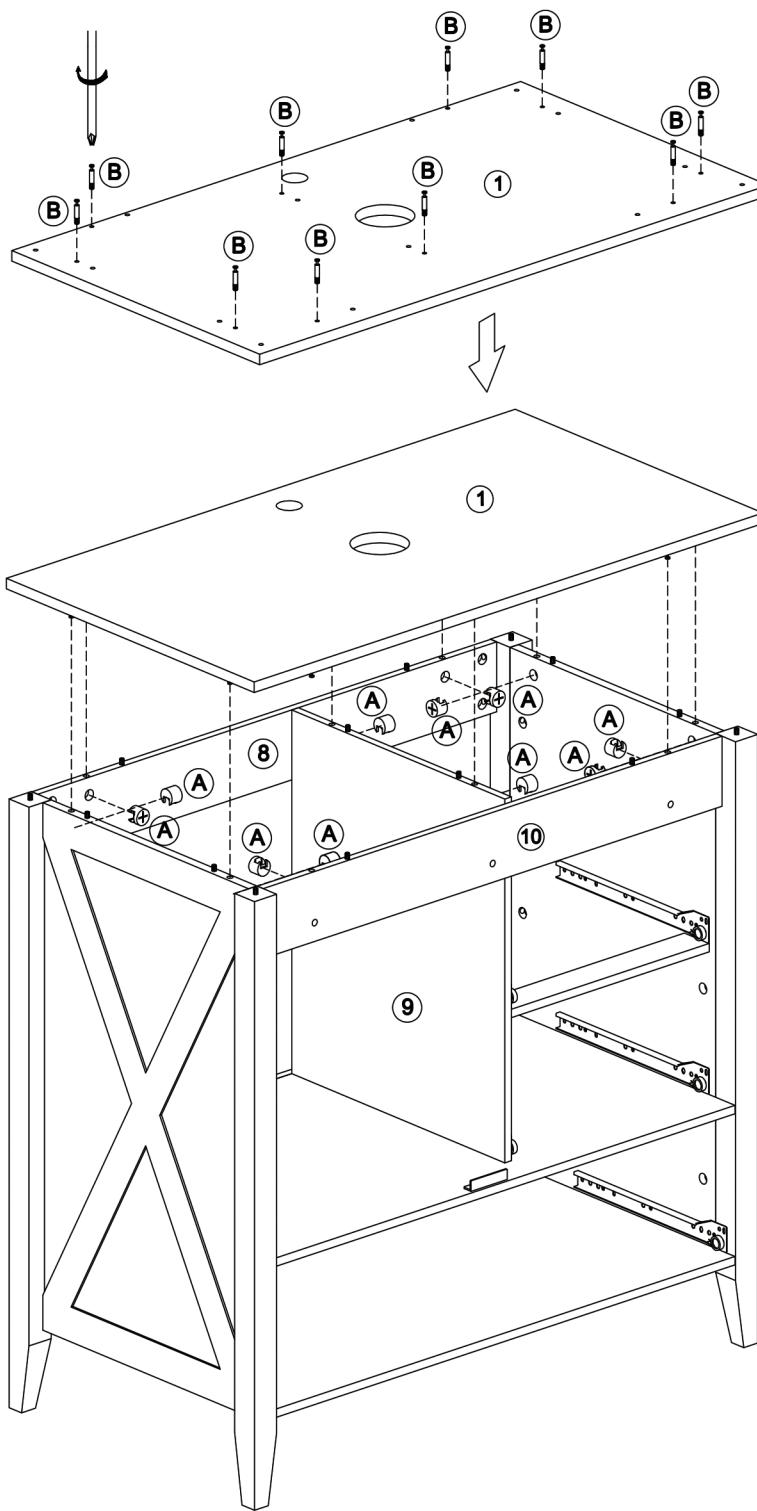

12

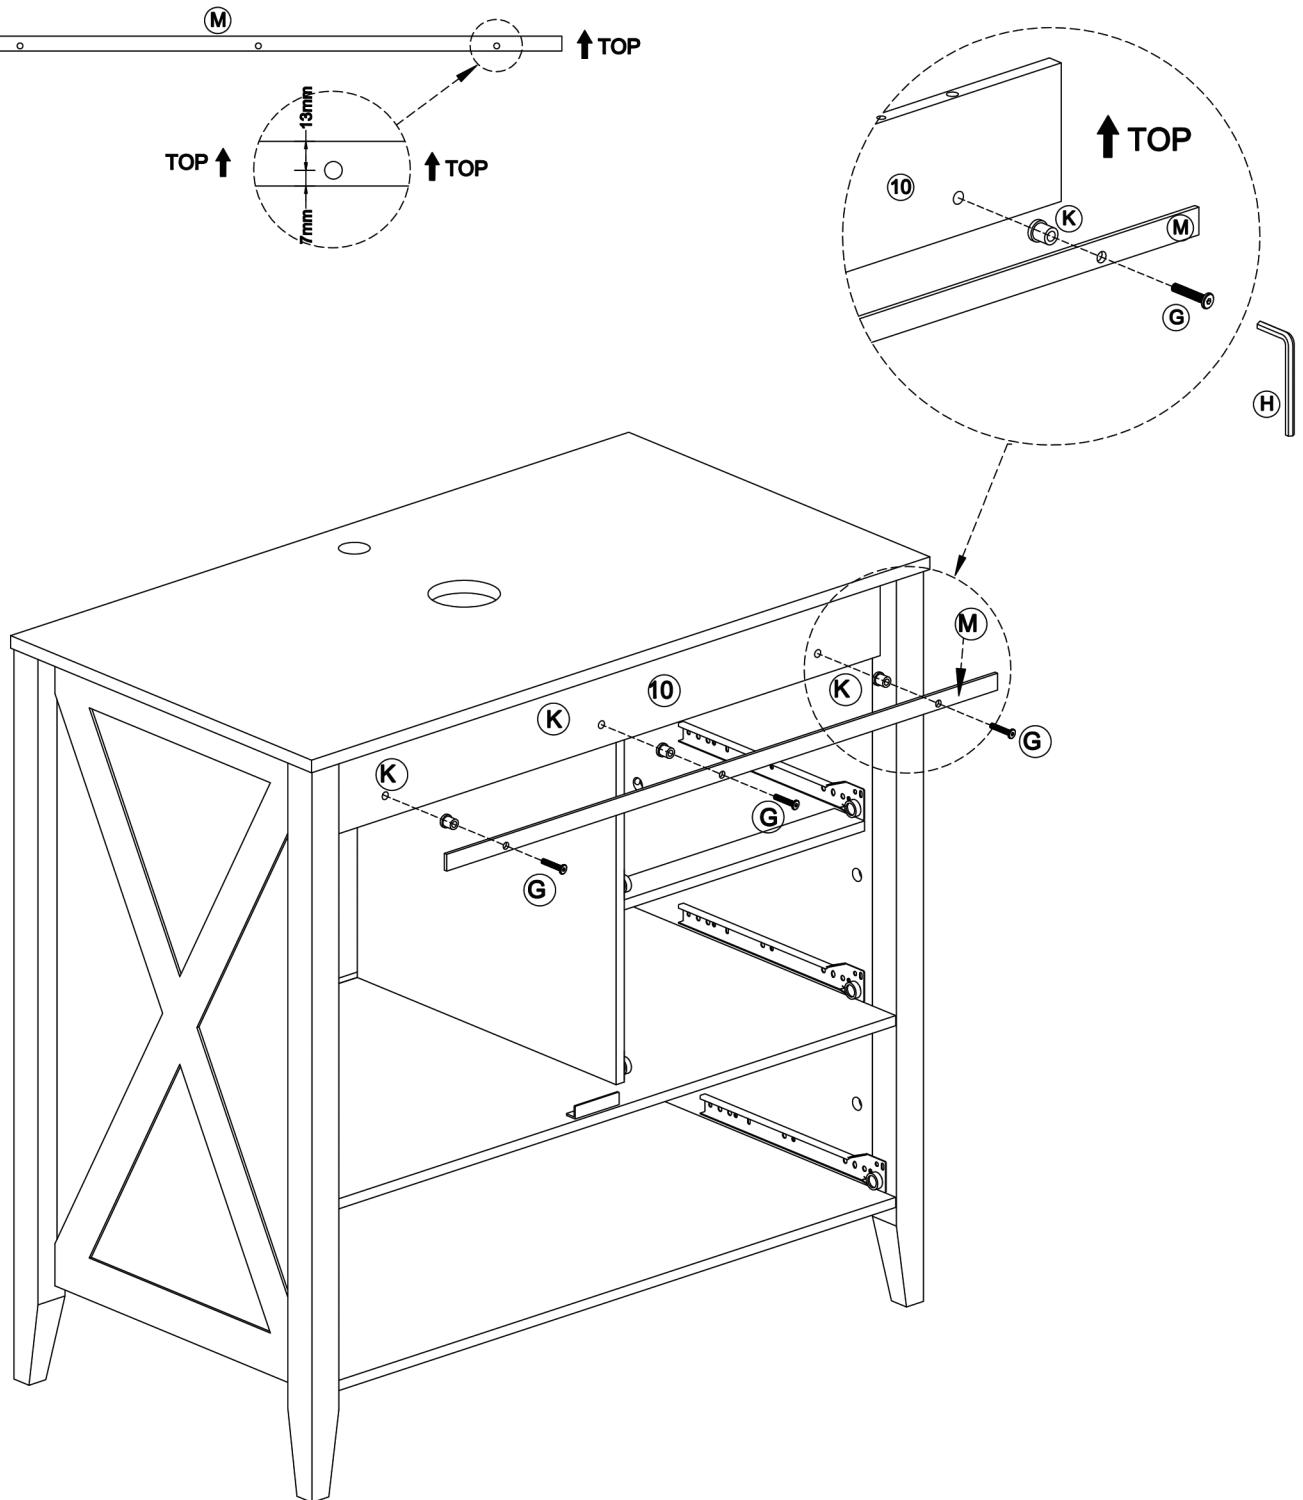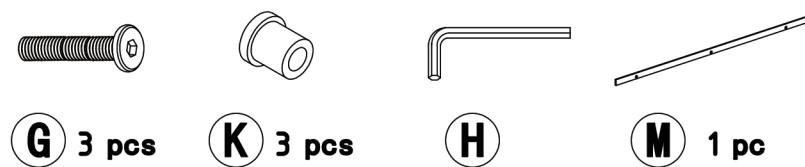

13




F 4 pcs







J 2 pcs






12 1 pc

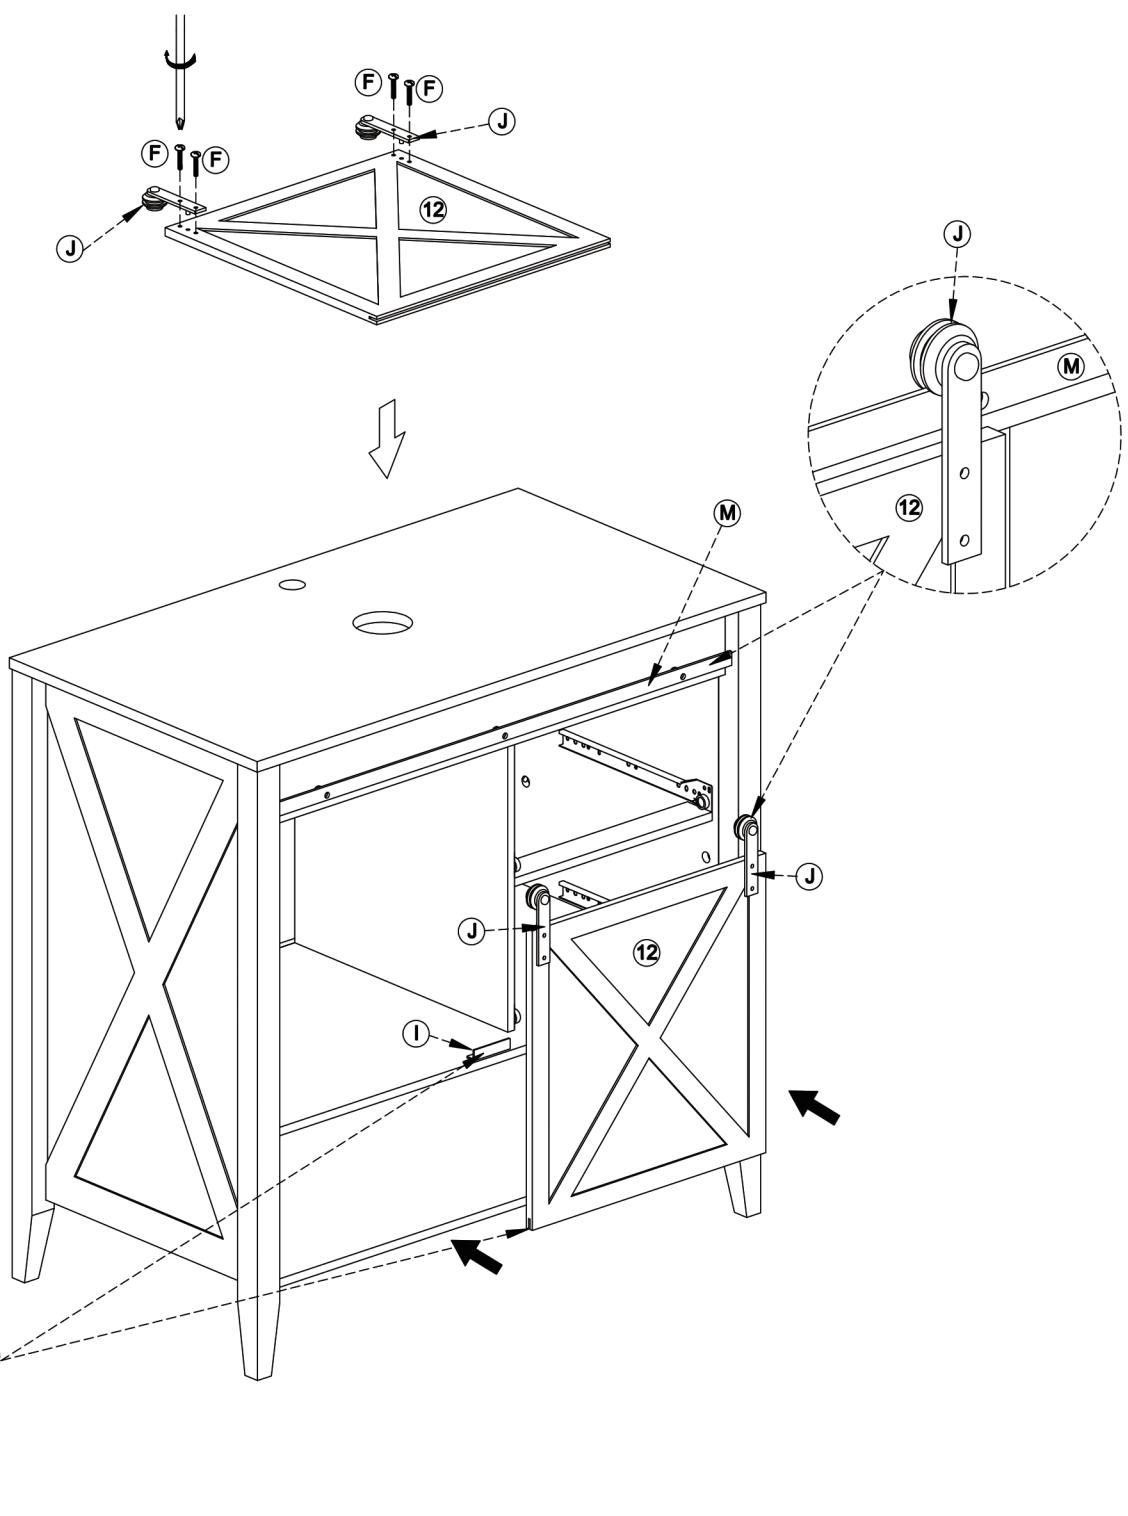



14

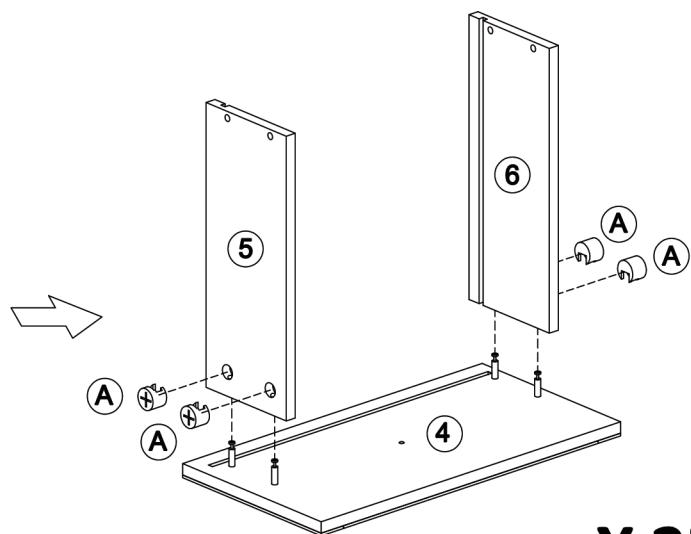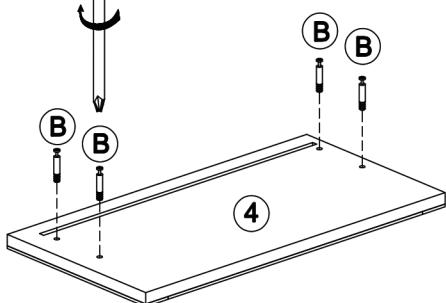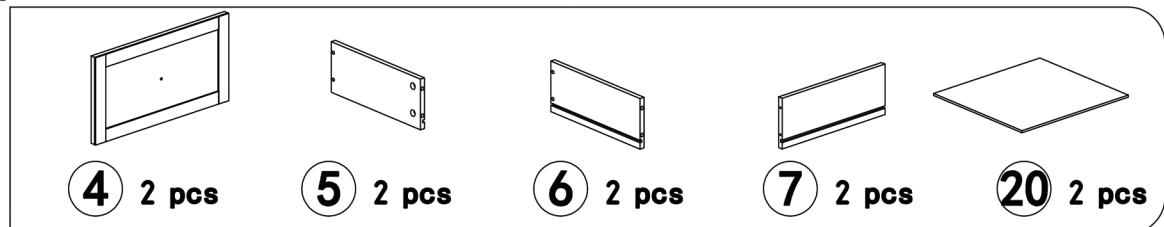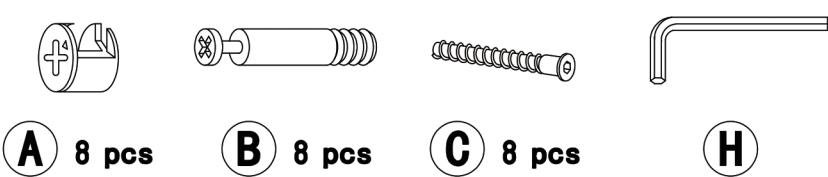




X 2PCS

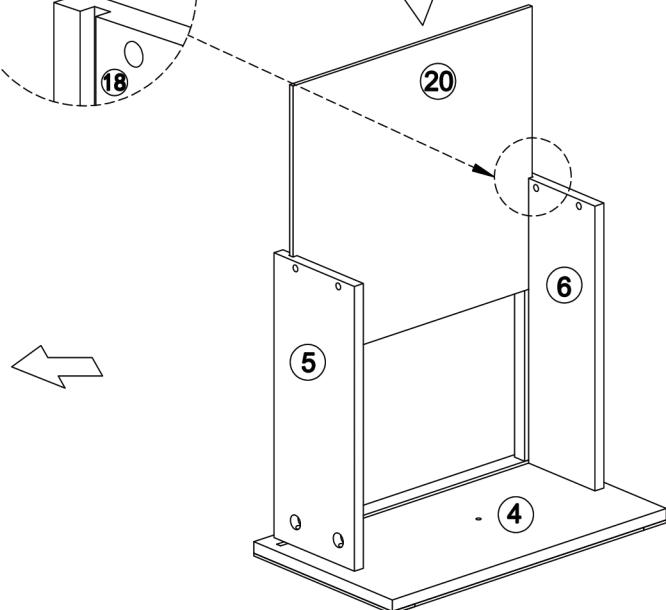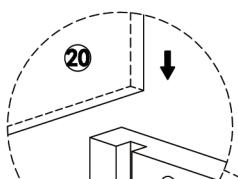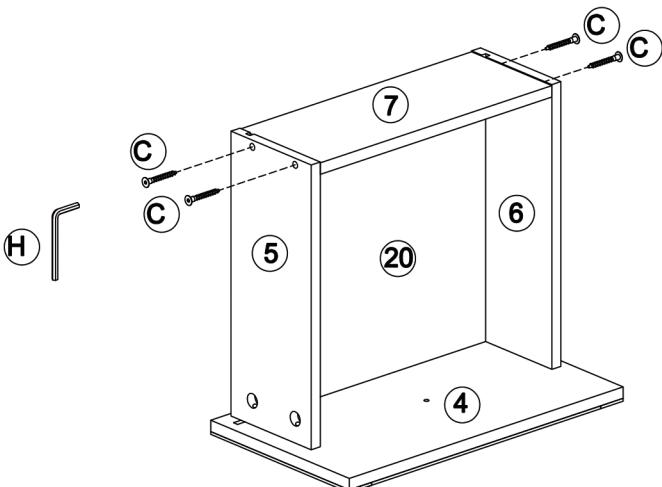




15

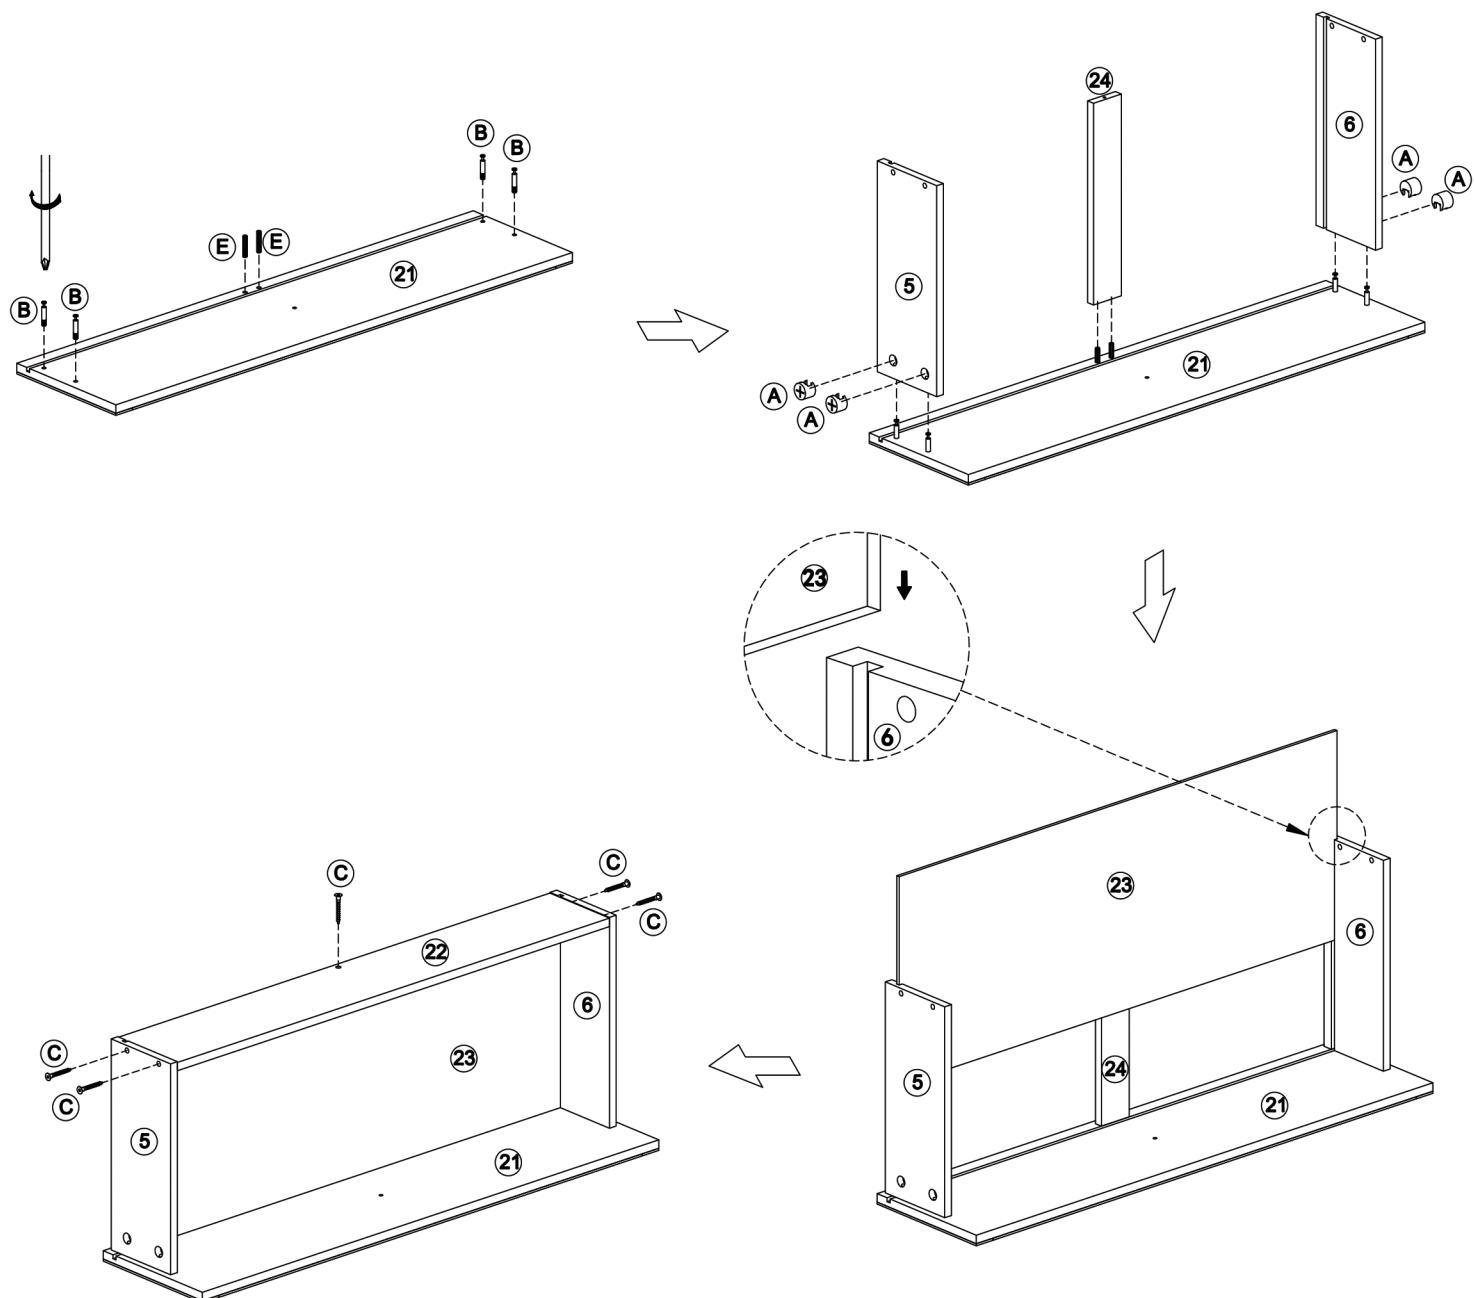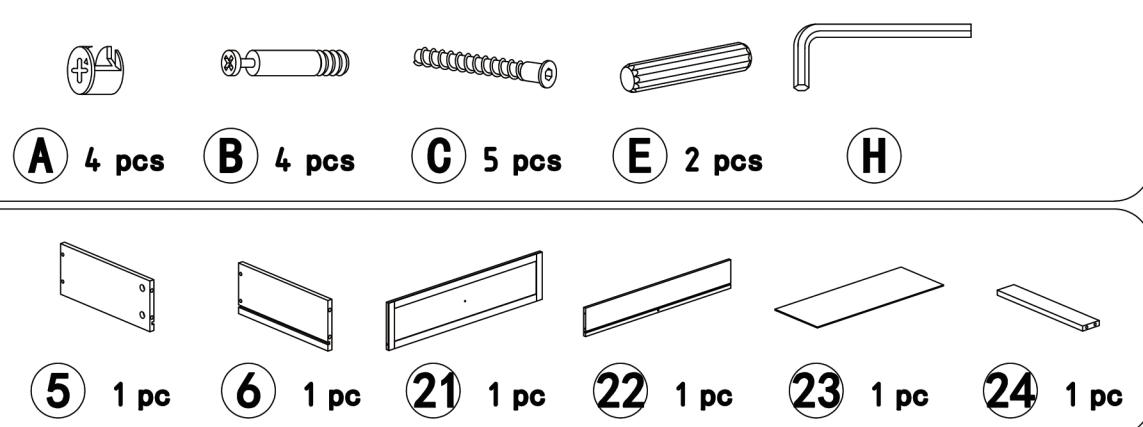


16

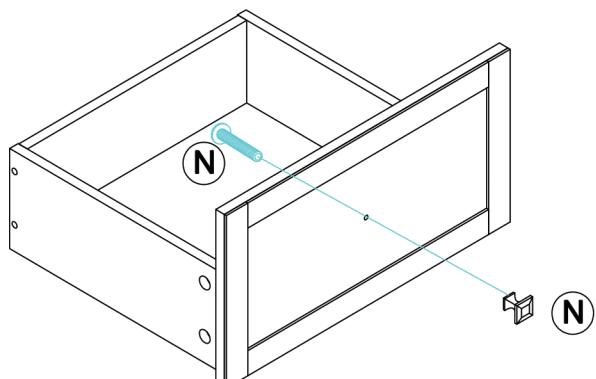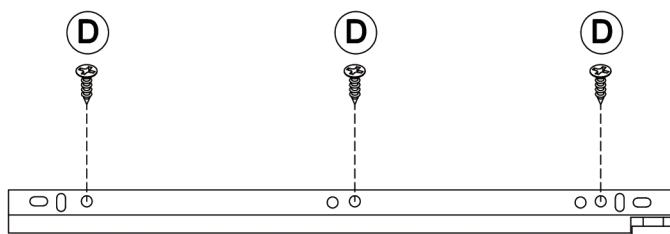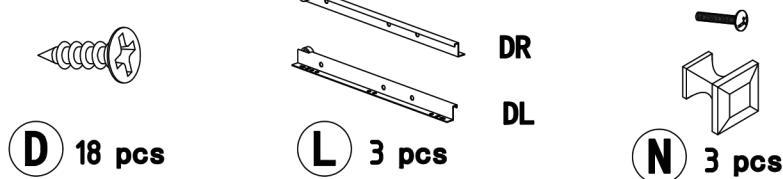


X 2PCS

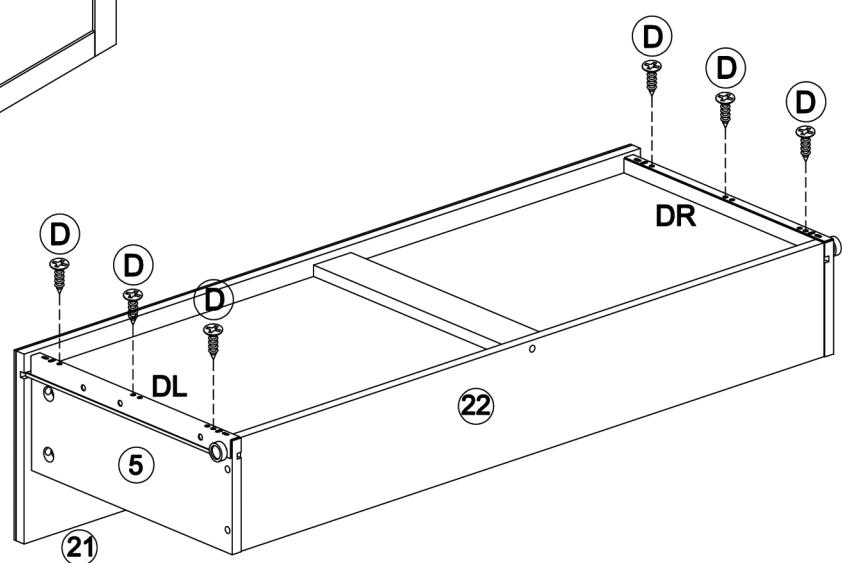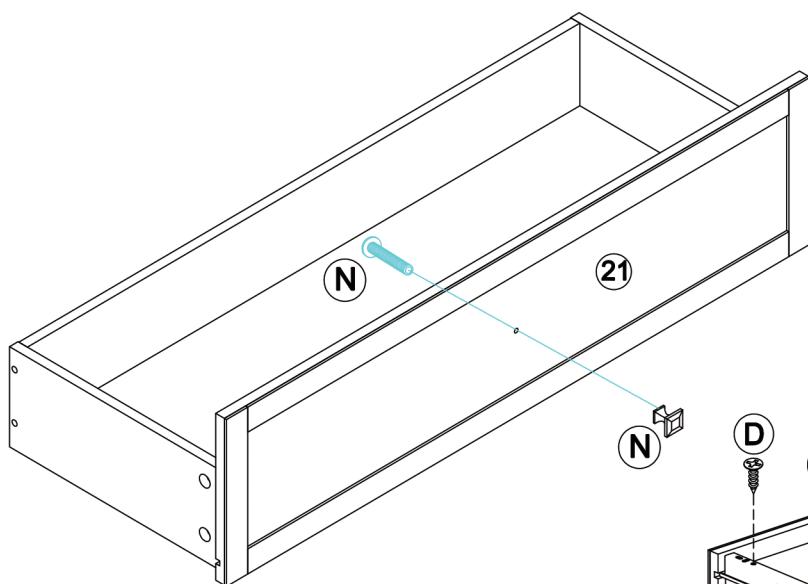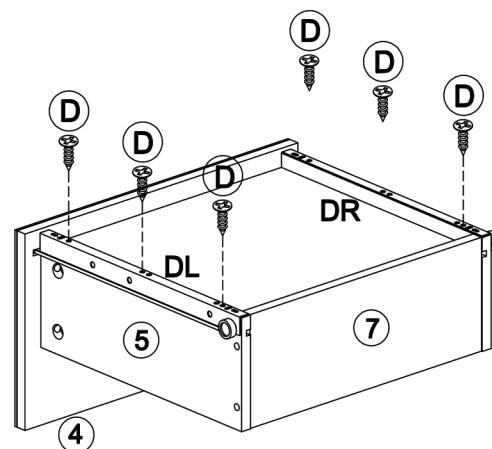


17

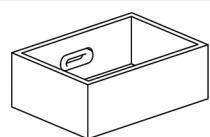


0 1 pc

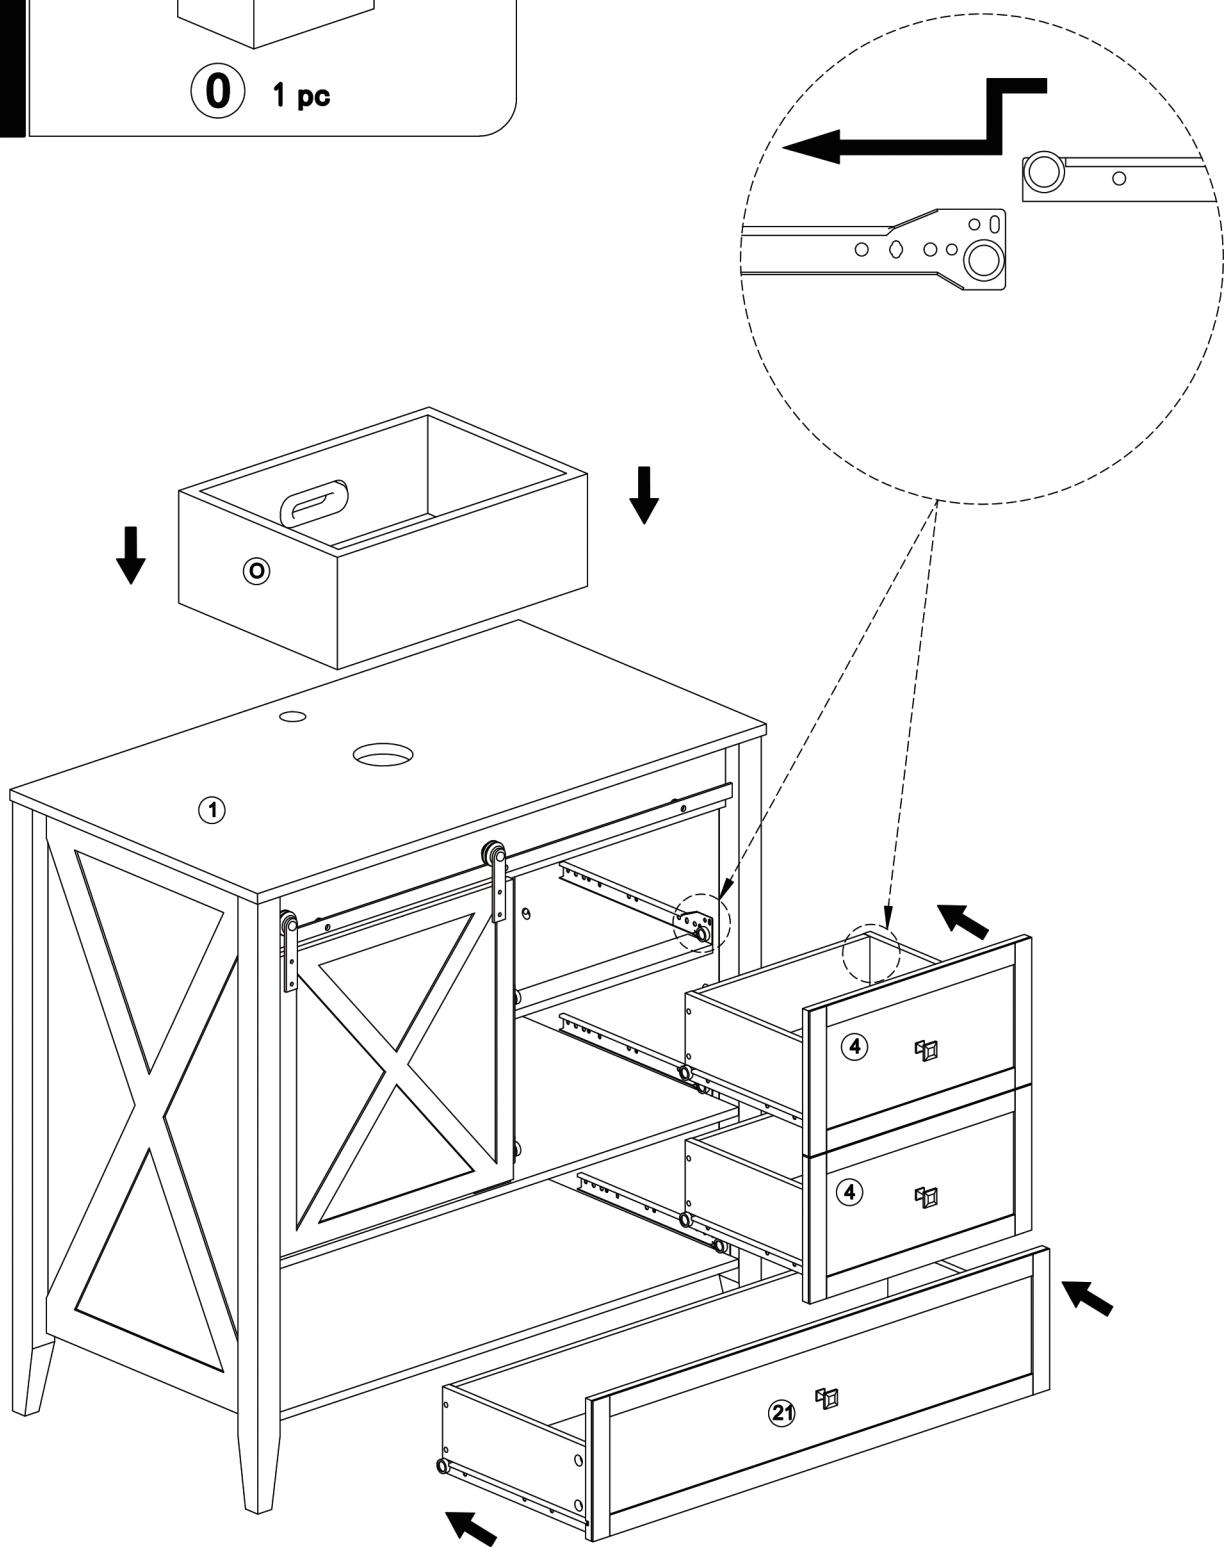


18

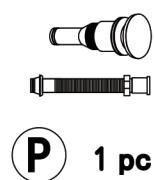


P 1 pc

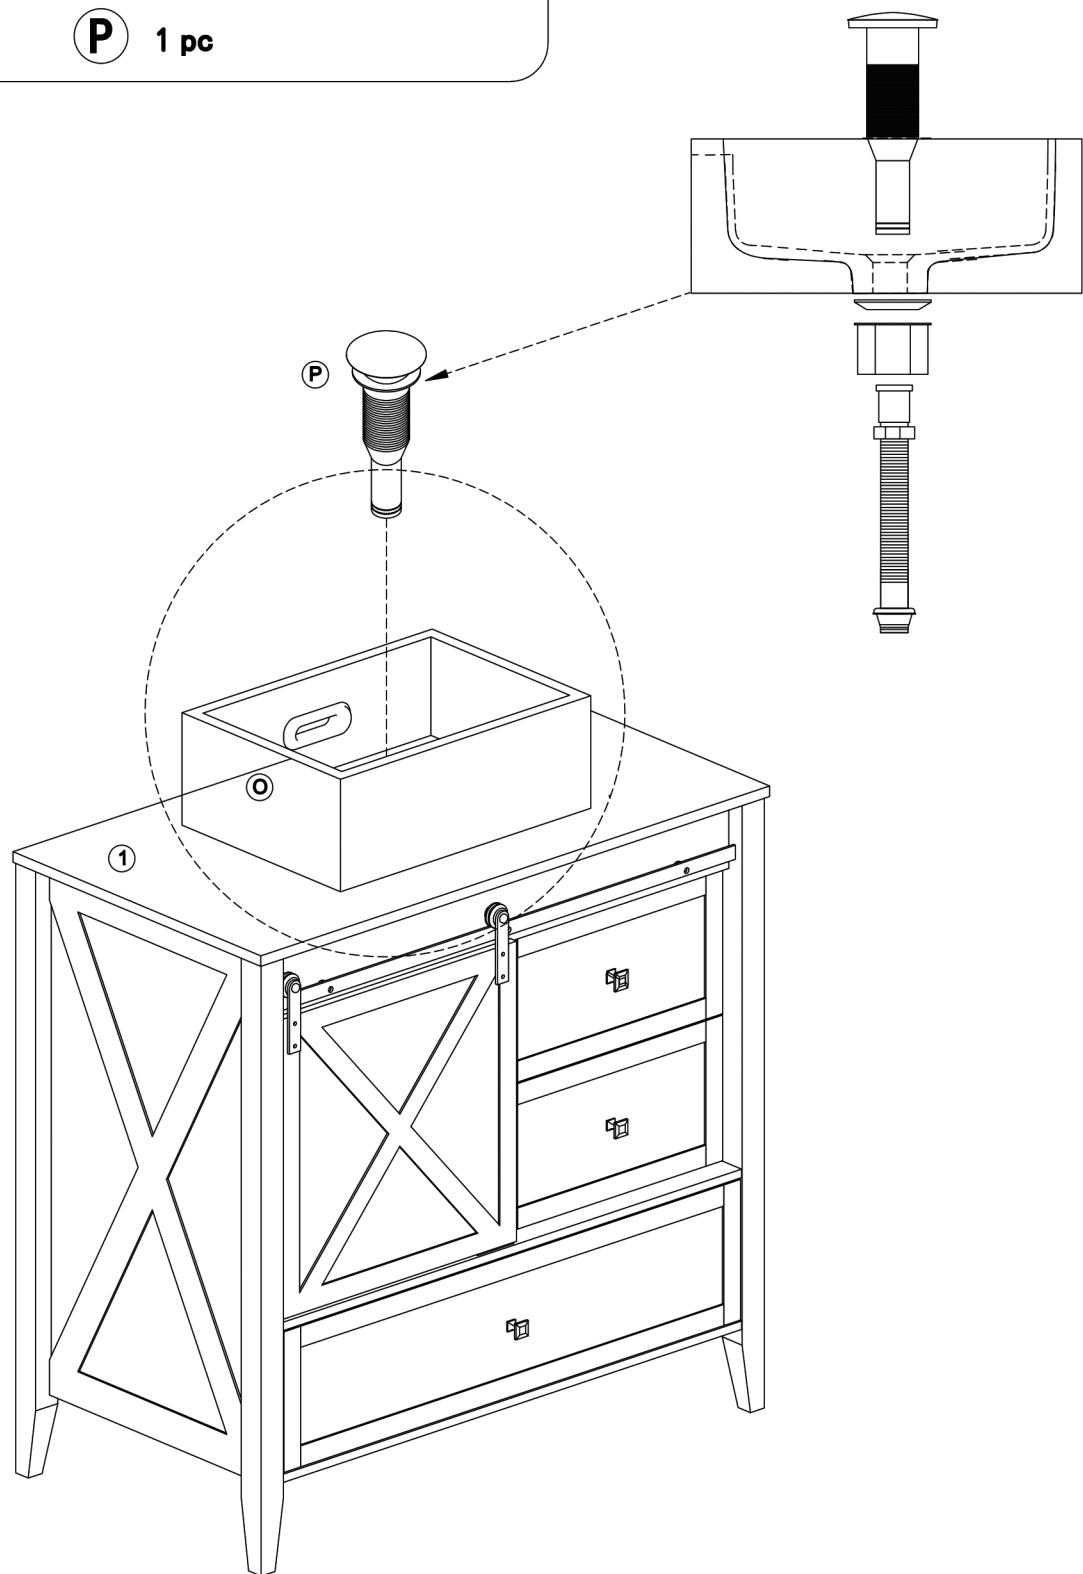

19

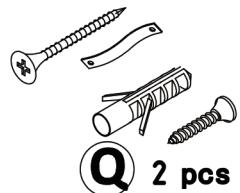

Attention: For safety and stability, we suggest you have to secure the anti-tip accessories to the wall to prevent tipping, injury, and property damage.

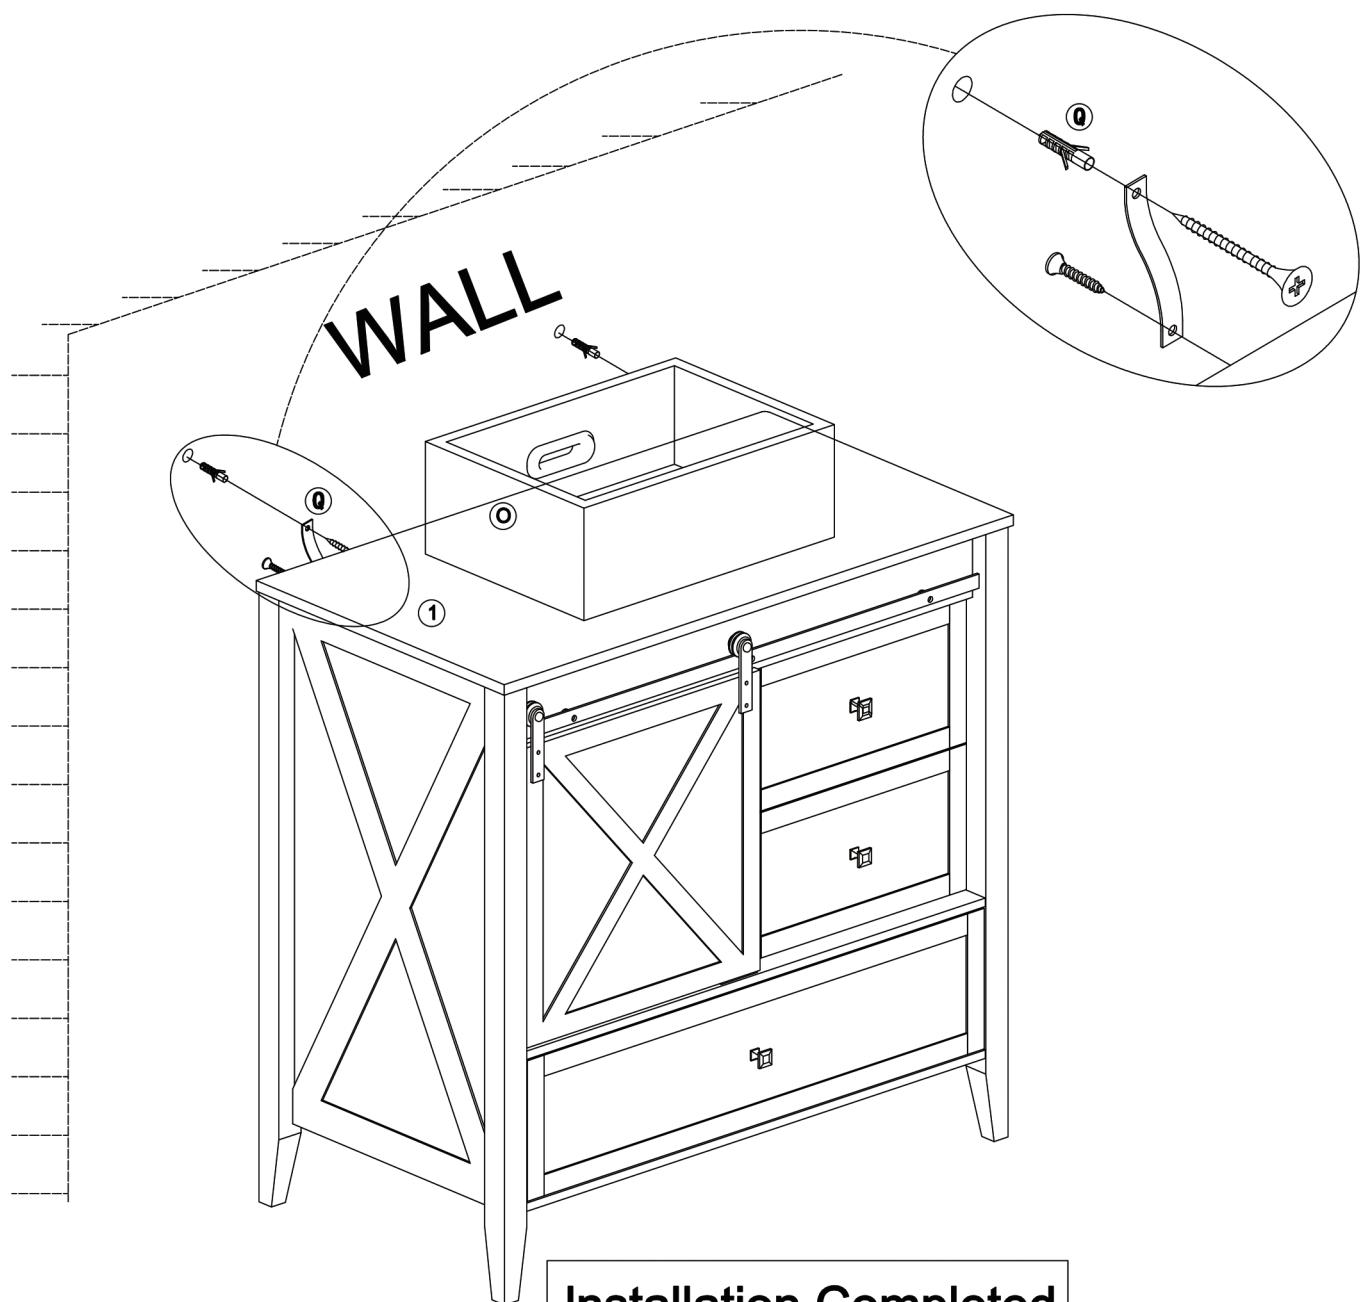

Installation Completed

