

ASSEMBLY INSTRUCTIONS

Installation video can be found on the Amazon
product page

VNBV-3000

VNBV-3001



VNBV-3002

NOTICE



SAFETY INFORMATION

- 1.The accessory bag contains some small accessories,which should be kept away from children.
- 2.Kids are not allowed to climb or play with the product for safety reasons.

IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY

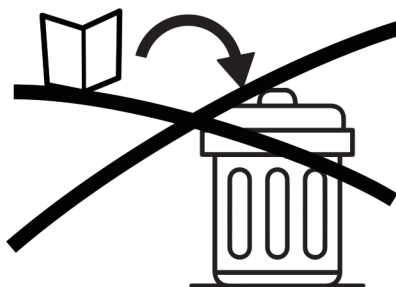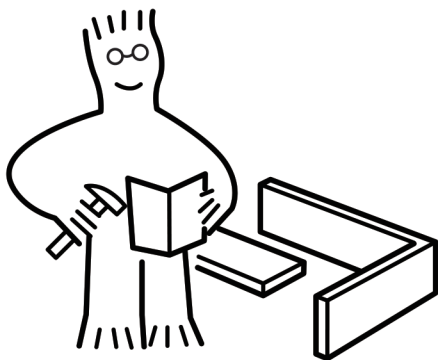

Assemble on a flat, clean and soft surface.

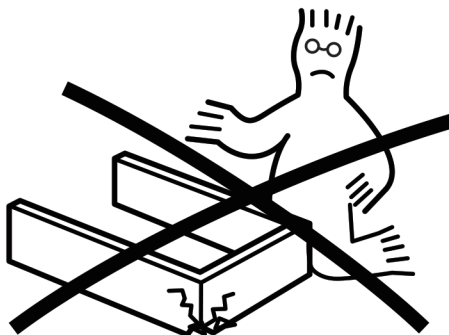
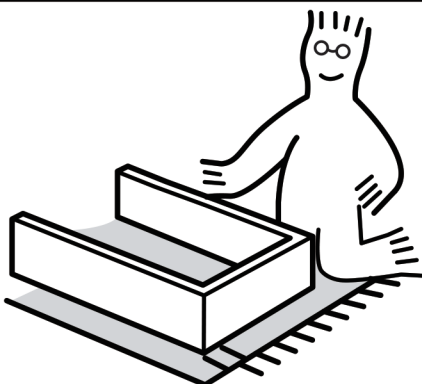


Professional installation is highly recommended.


Periodically Check That All Components Are Tightly Secured.




It is recommended that multiple people assemble this product.

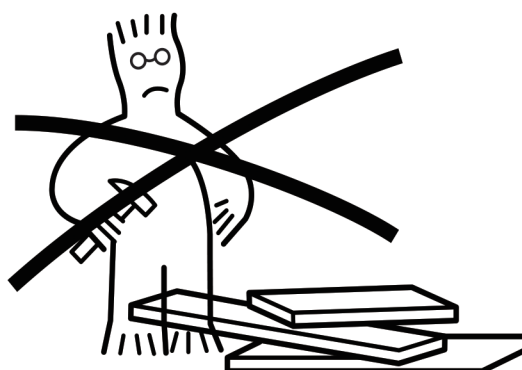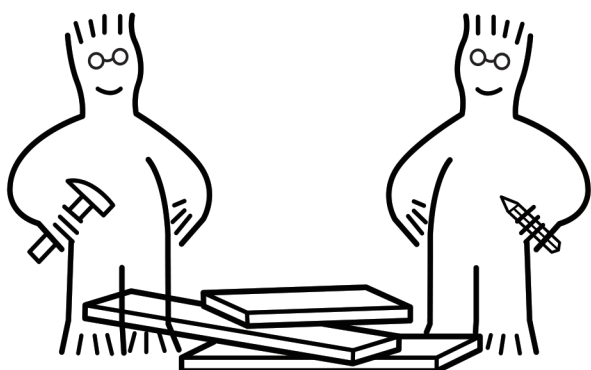

Serious or fatal crushing injuries can occur from furniture tip-over. Always secure this furniture to the wall using tip-over restraints.

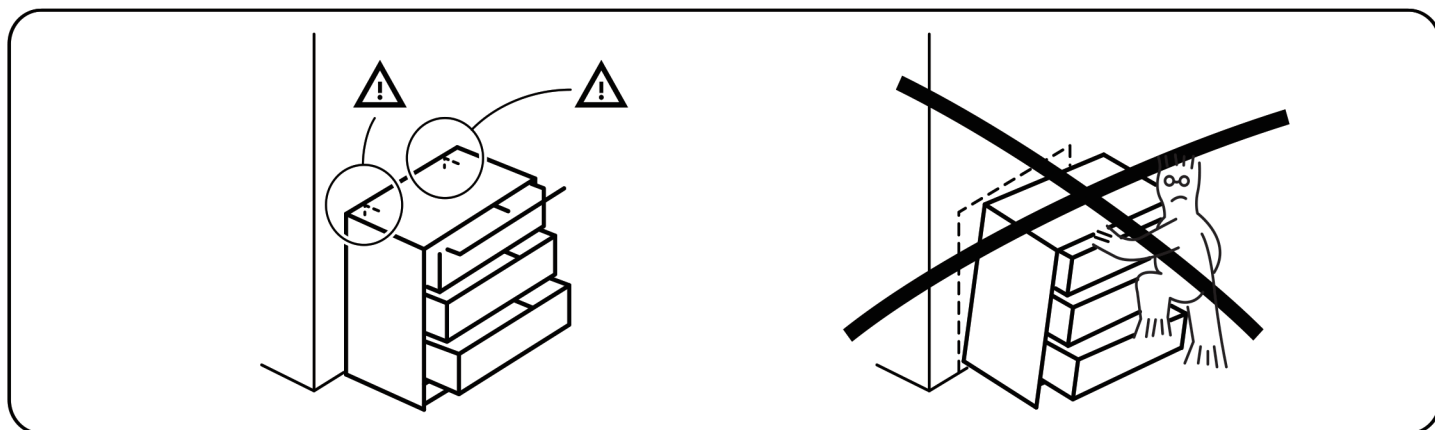


Please have the following auxiliary tools ready:

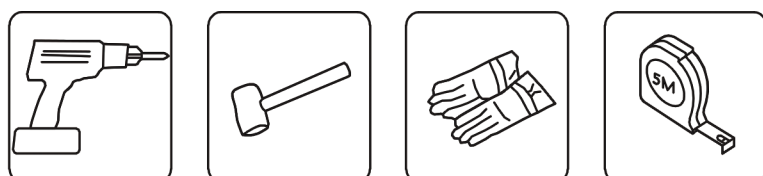


USING CAM LOCK AND QUICKFIT


Tighten QuickFit until the shoulder is flush with the panel. Do not overtighten or undertighten.

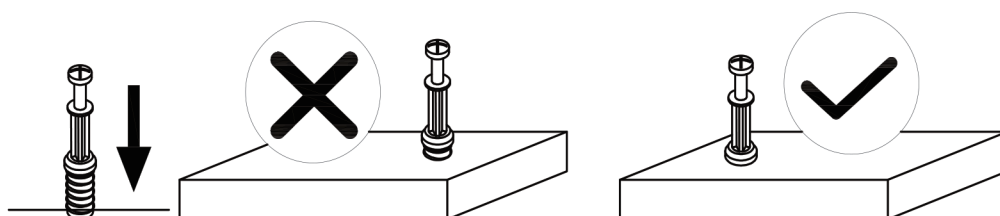

When fitting the cam lock, ensure the starting position is correct before inserting the connecting QuickFit.

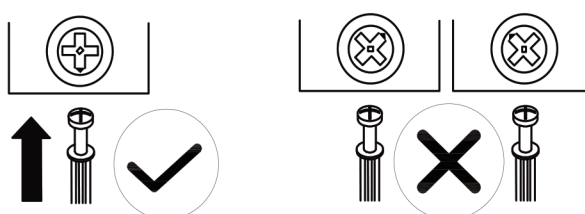




The QuickFit head should be in the center of the cam lock when the two panels are joined. The cam lock should be inserted before the QuickFit. Turn the cam lock clockwise to tighten.








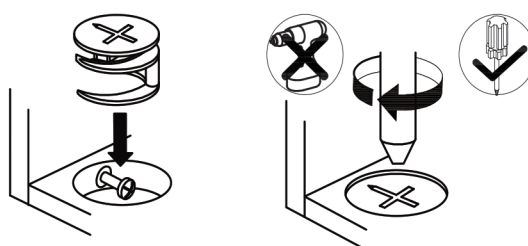










ASSEMBLY INSTRUCTIONS

Notice:


1. Please unbox the item from the side with an open label and put a carpet on the floor to avoid scratching it.
2. Follow the installation instructions carefully. Before installation, please ensure that all accessories are present. For large items, we advise you to install them with 2 or more people for faster and safer installation.
3. Do not fully tighten the screws during initial assembly. Fully tighten the screws only once all pieces are correctly assembled. Do not use power tools.
4. Do not stand, climb, or swing on the product.
5. If you encounter any problems during installation, please contact our customer service.

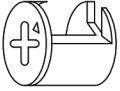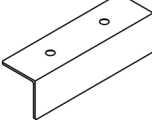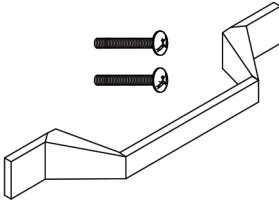Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
A	 ø1/4"*30mm	× 6	B	 M5*38mm	× 15
C	 ø15*10mm	× 15	D	 M6*34mm	× 15
E	 ø8*30mm	× 17	F	 M3.5*12mm	× 26
G	 × 1	× 1	H	 × 2	× 2

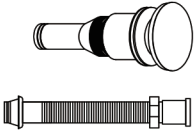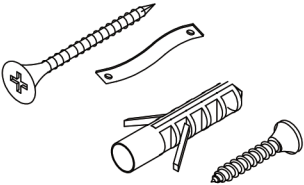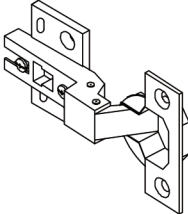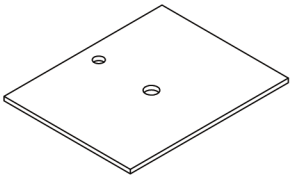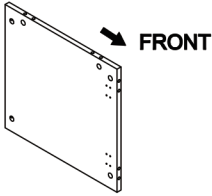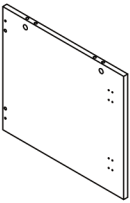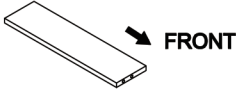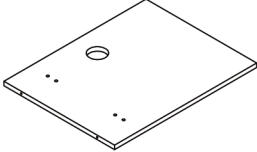Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
I		×1	J	 M4	×1
K		×2	L		×4
1		×1	2		×1
3		×1	4		×1
5		×1	6		×1

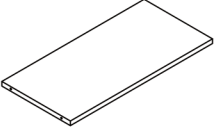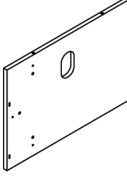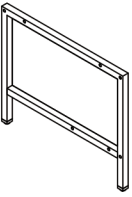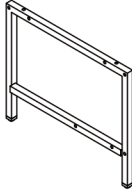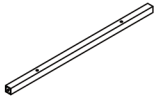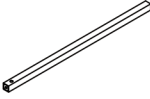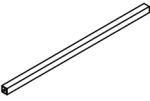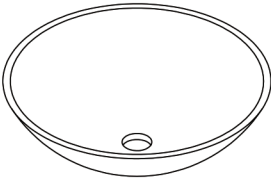Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
7		×1	8		×1
9		×1	10		×1
11		×2	12		×1
13		×2	14		×1
15		×1	16		×1


Explosion Diagram

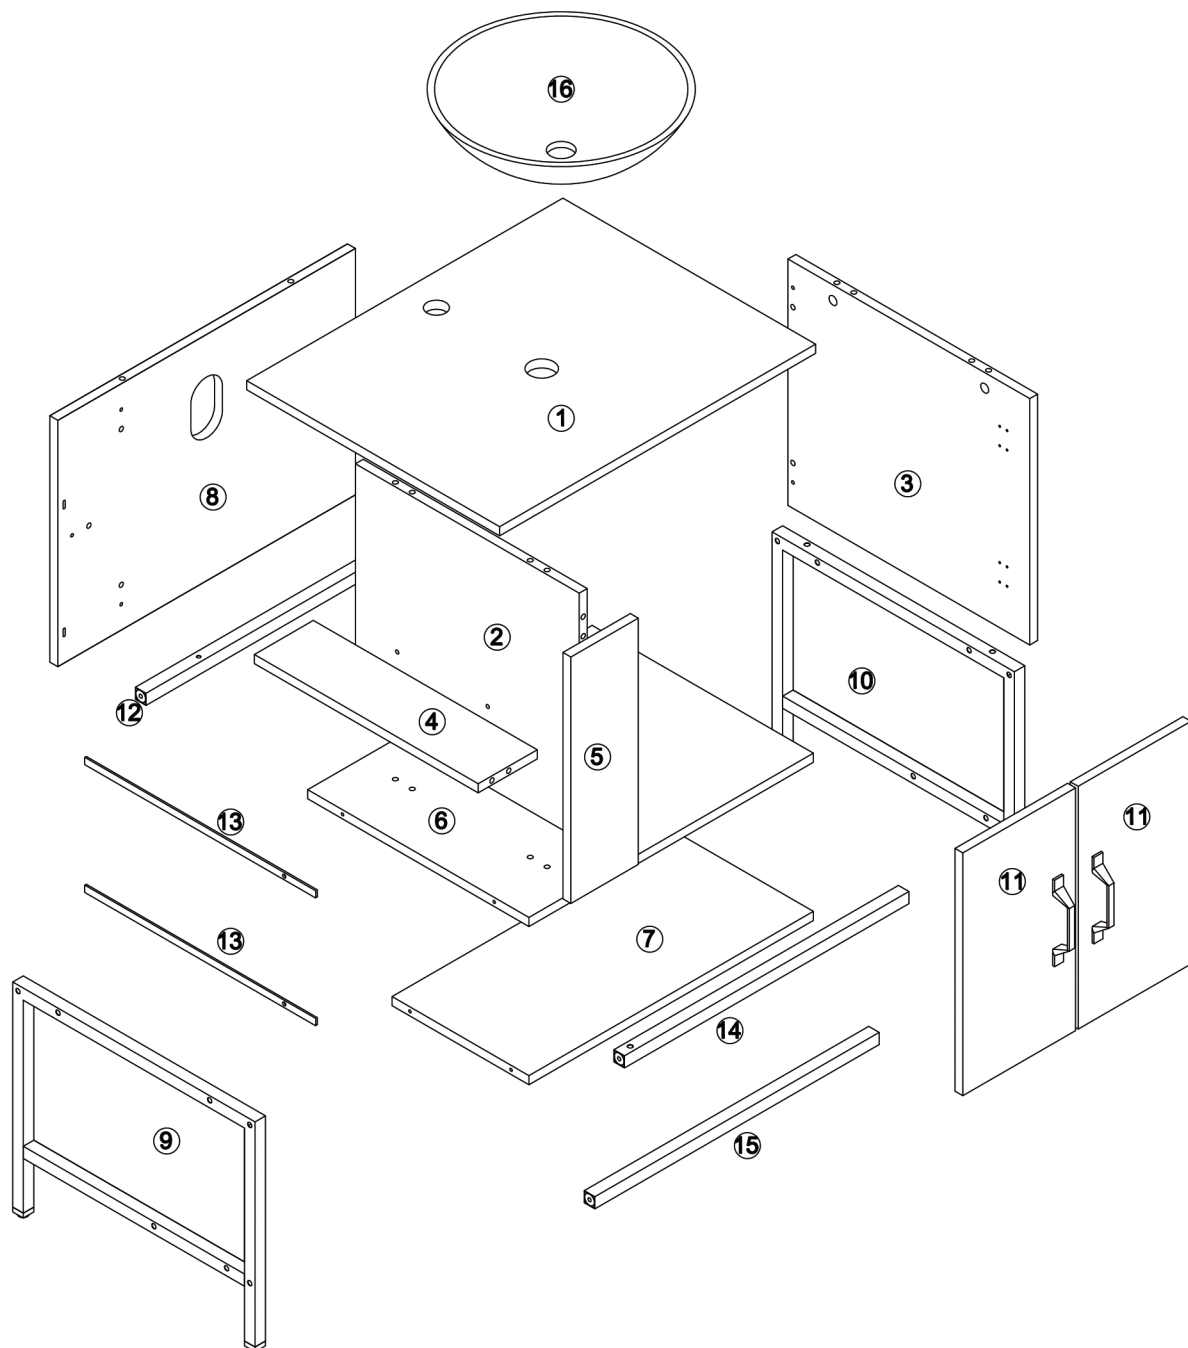


1



(D) 15 pcs




(1) 1 pc



(3) 1 pc








(5) 1 pc




(8) 1 pc

Screw driver not included.

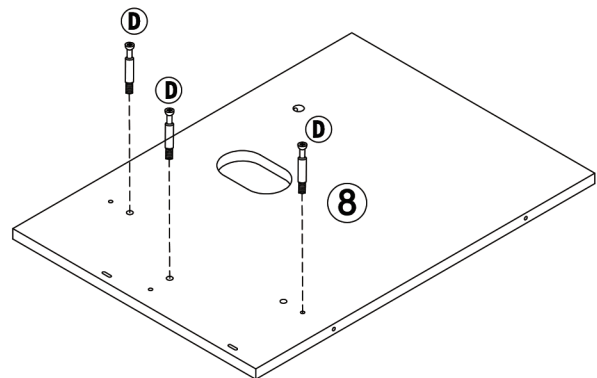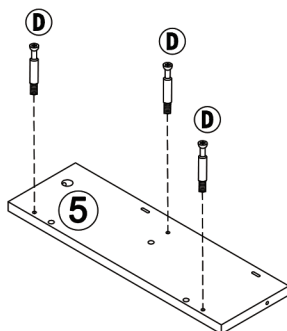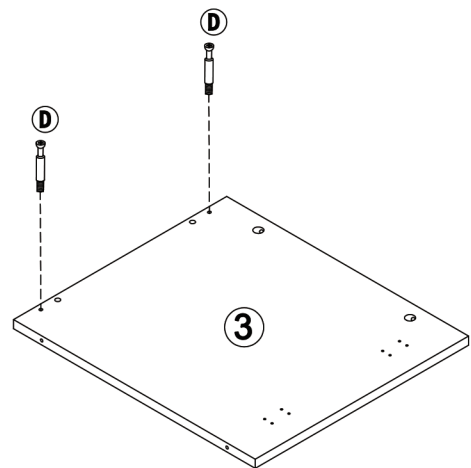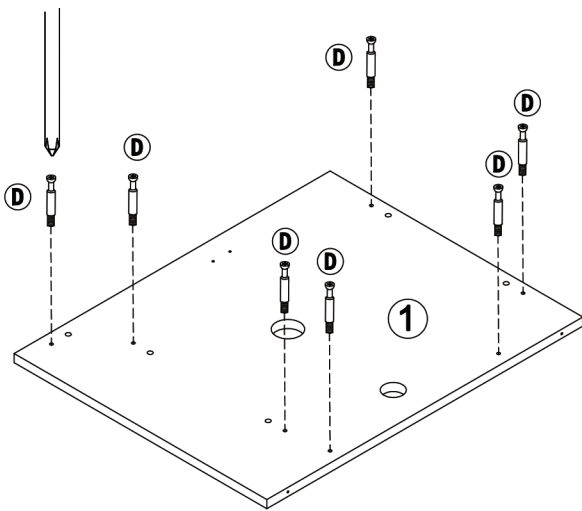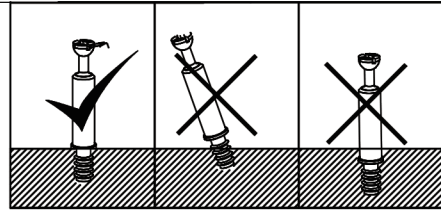


2




C

3 pcs



E

5 pcs




4

1 pc


Cam Lock Placement Supplement

1

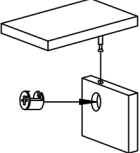


When inserting the Cam lock, make sure that the open End of the cam Lock faces the Cam Screw Entry.

2



To tighten, turn the Cam Lock CLOCKWISE until the arrow or "△" signs point AWAY from the connected Panel.

***NOTE: DO NOT USE AN AUTOMATIC SCREWDRIVER TO TIGHTEN CAM LOCKS, DO NOT OVER-TIGHTEN.**

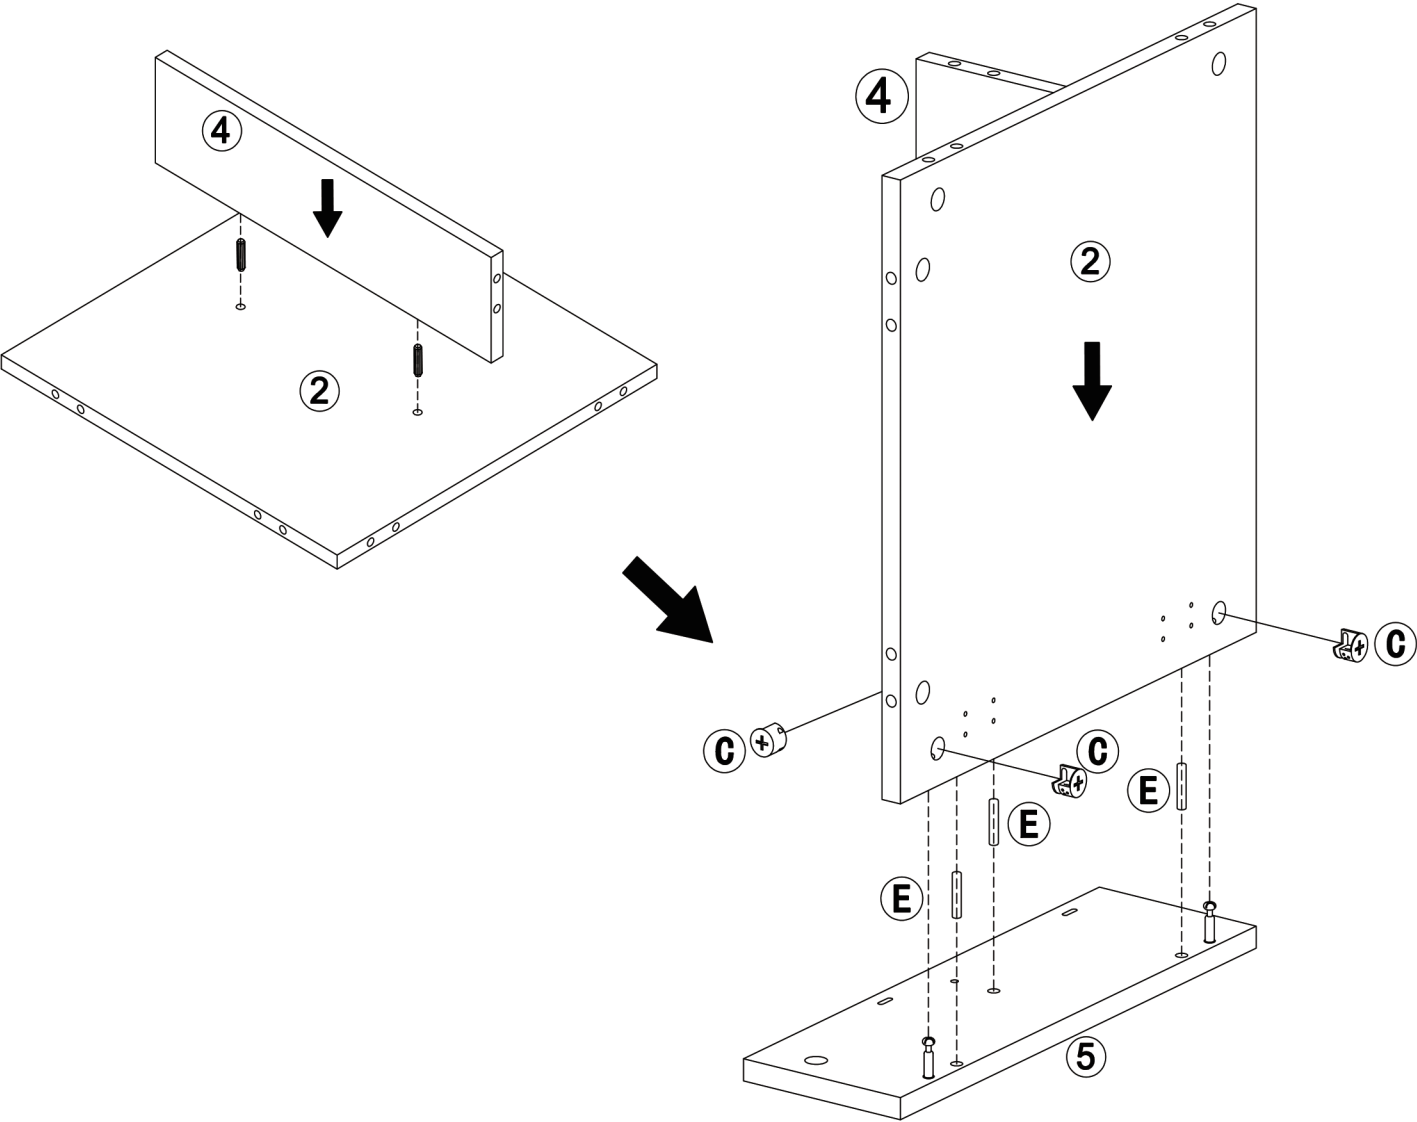

The diagram illustrates the assembly process in two main steps. In the first step, a rectangular panel (labeled 2) is shown with two screws (labeled E) being inserted into pre-drilled holes. A trim piece (labeled 4) is then placed over the top edge of the panel. In the second step, the panel (2) is shown being inserted into a larger frame (labeled 5). The trim piece (4) is then attached to the frame using screws (labeled C). The screws (C) are shown being inserted into the frame and tightened. The trim piece (4) is shown with a small arrow pointing away from the panel, indicating the correct orientation for tightening.

3




C 3 pcs



E 3 pcs



13 2 pcs

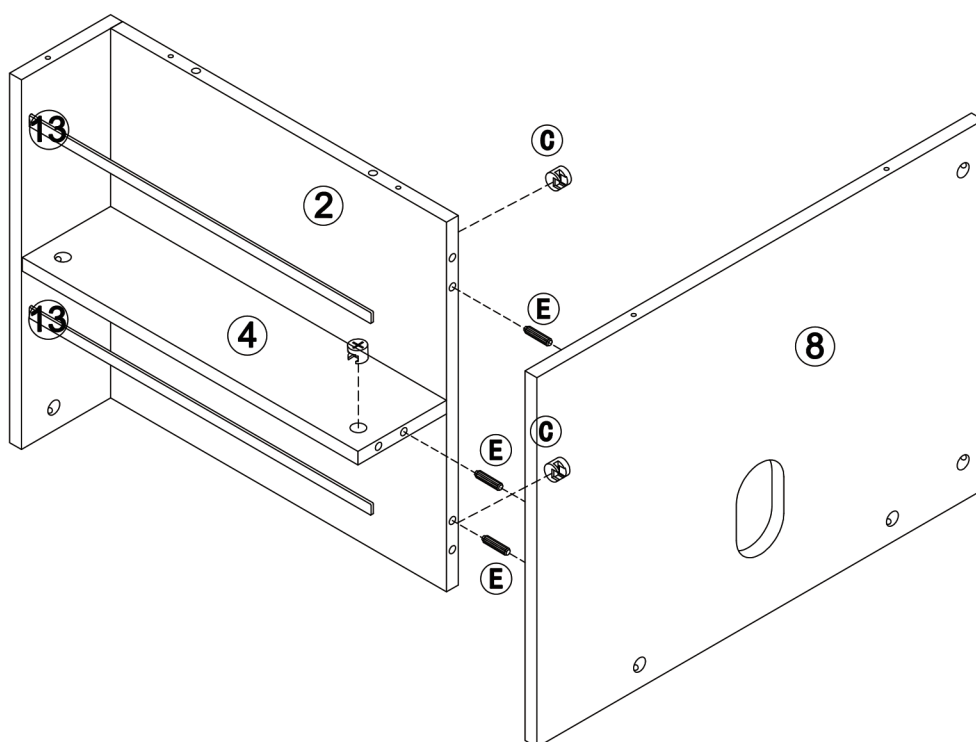


4



C 2 pcs




E 2 pcs

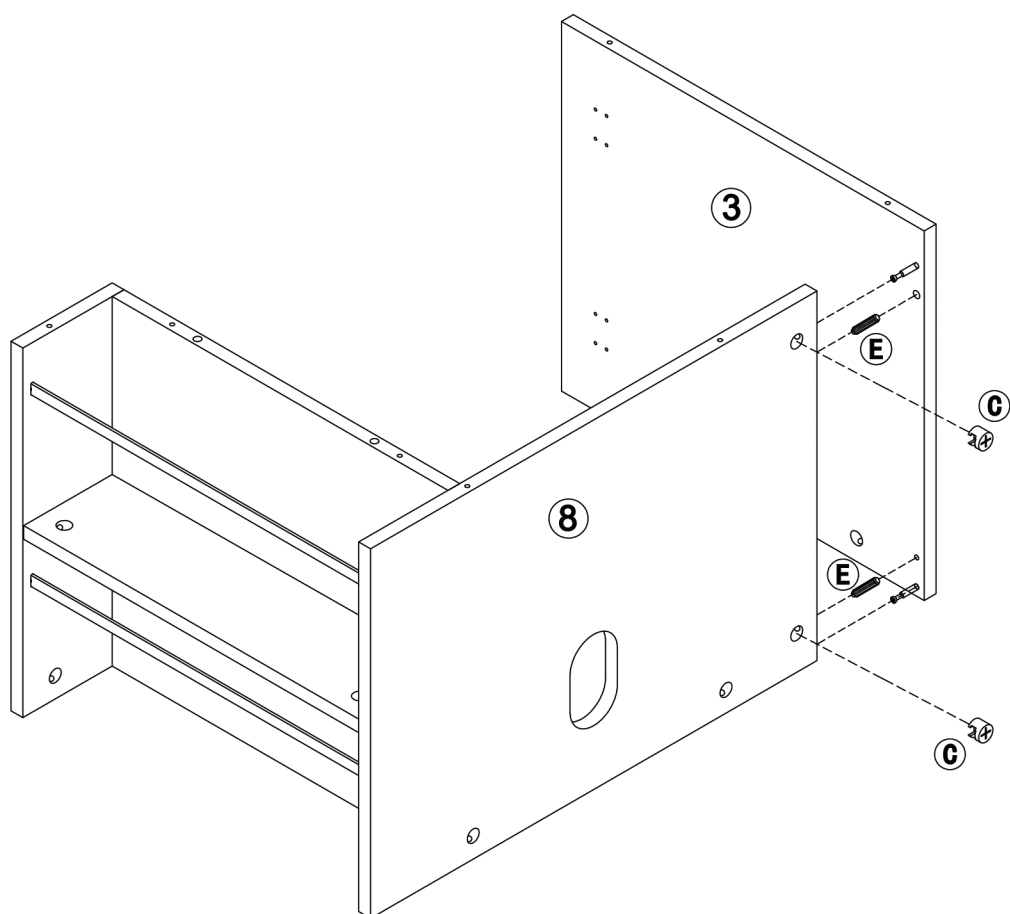

5


F 2 pcs


G 1 pc

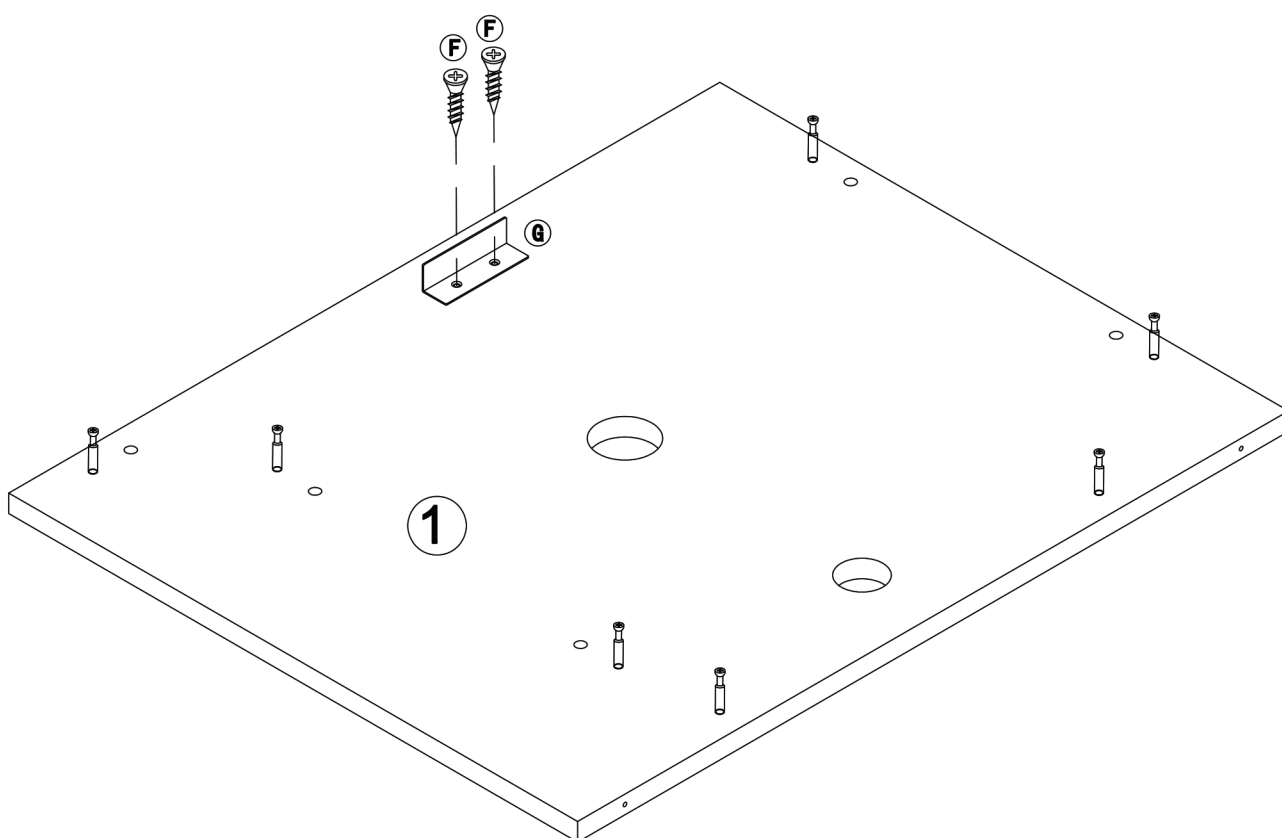


6



C 7 pcs




E 5 pcs

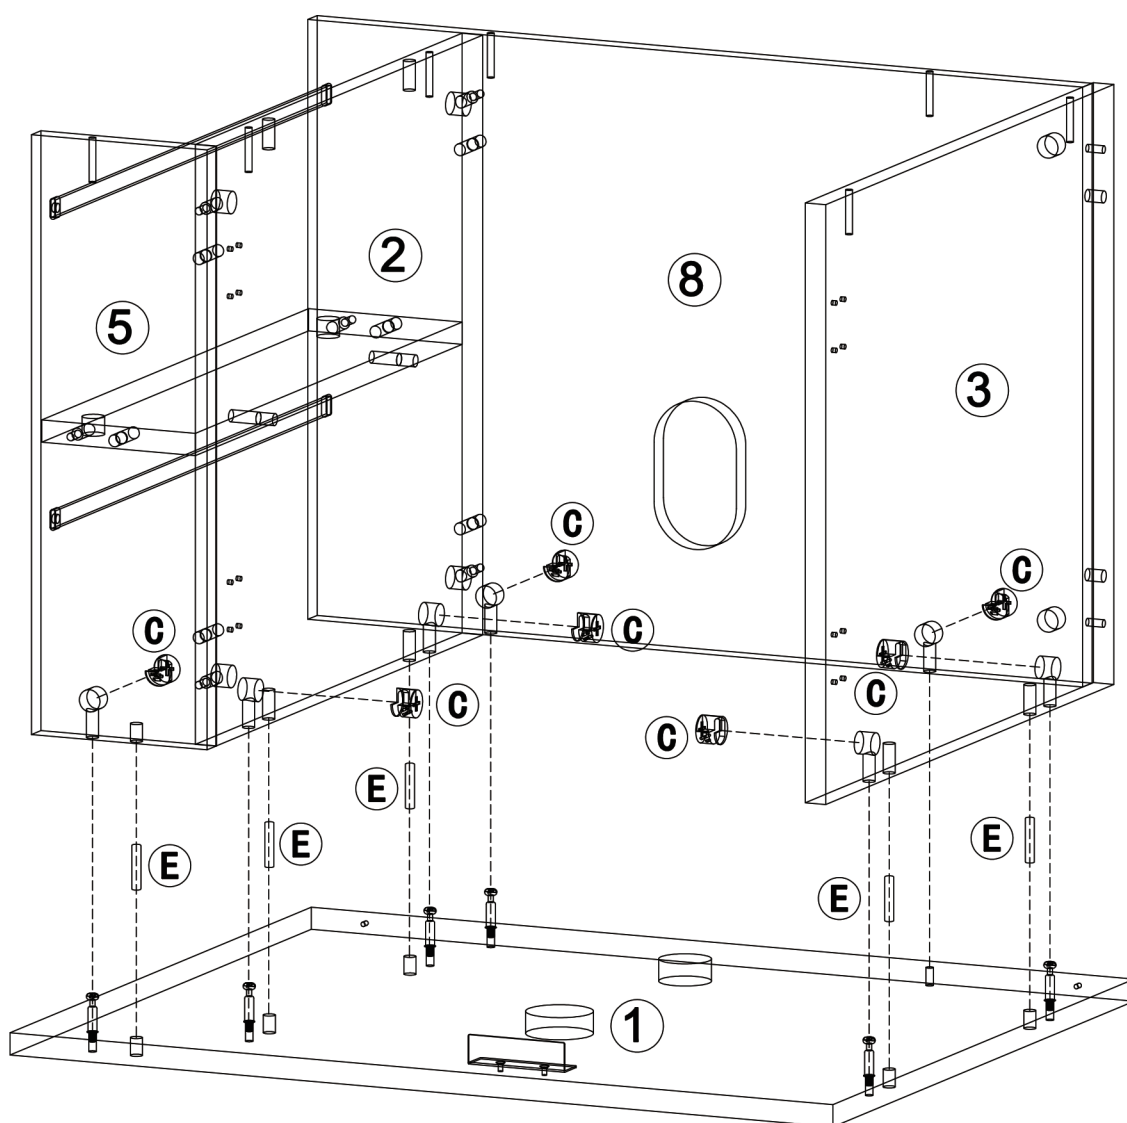


7




A 6 pcs




J




9 1 pc



10 1 pc




12 1 pc



14 1 pc



15 1 pc

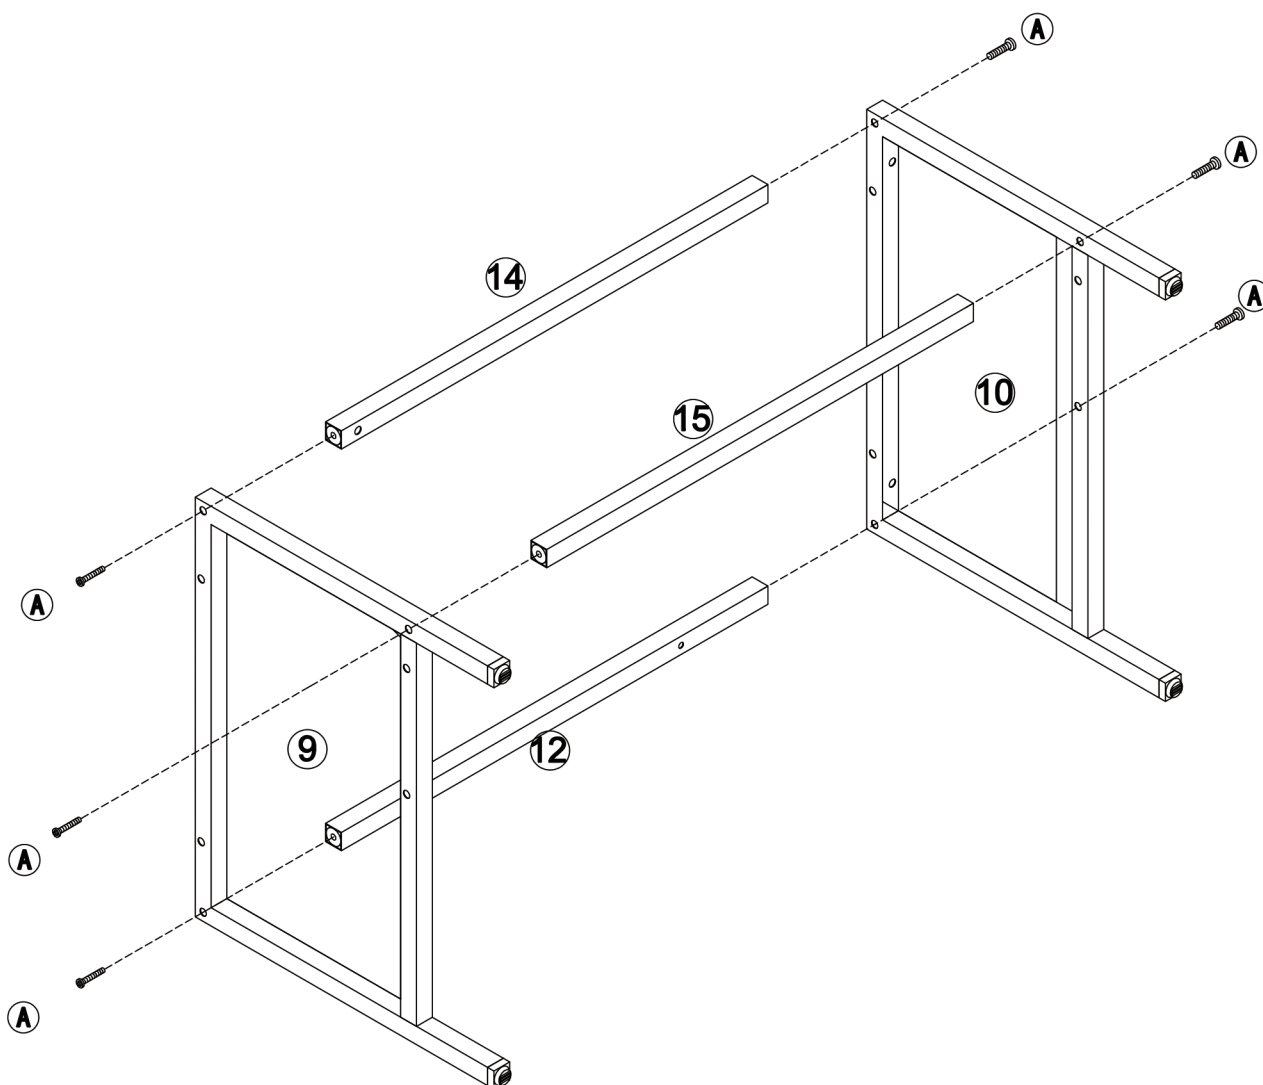


Do not fully tighten all screws until the end of step 10


8




B 4 pcs



J



6 1 pc

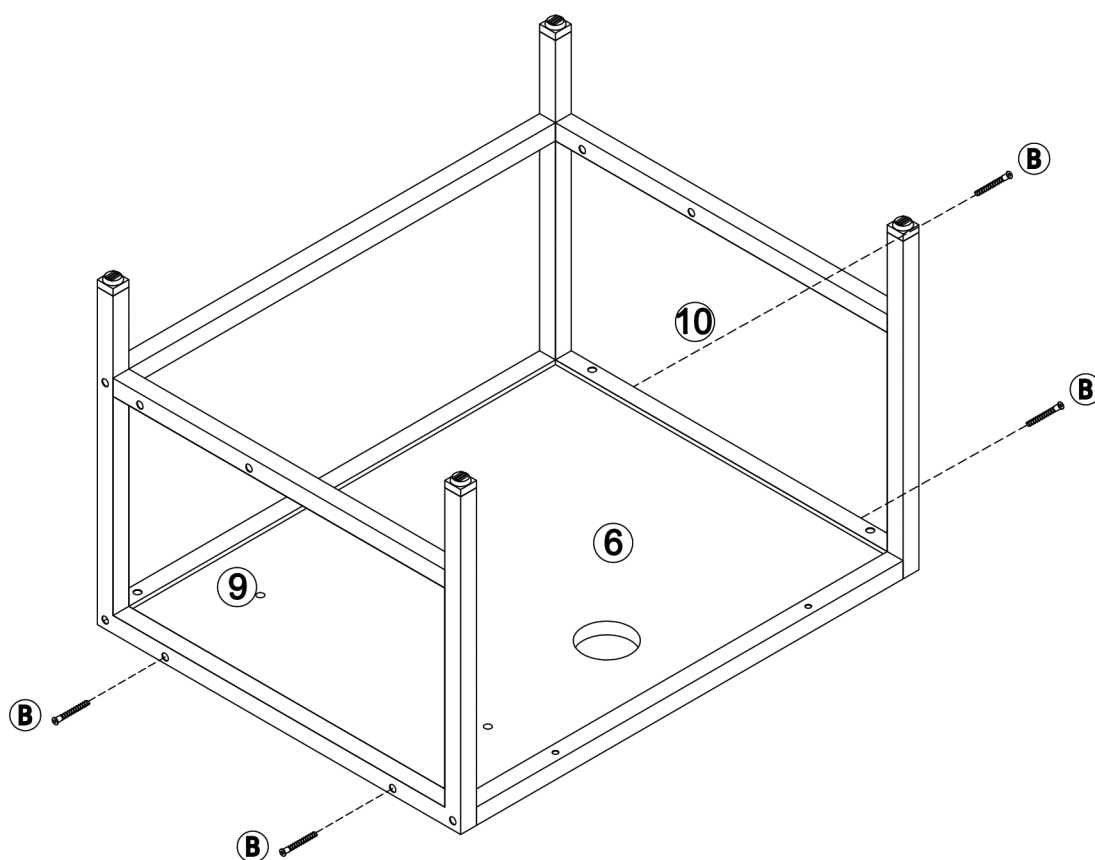

Do not fully tighten all screws until the end of step10


9




B 7 pcs



E 2 pcs



J

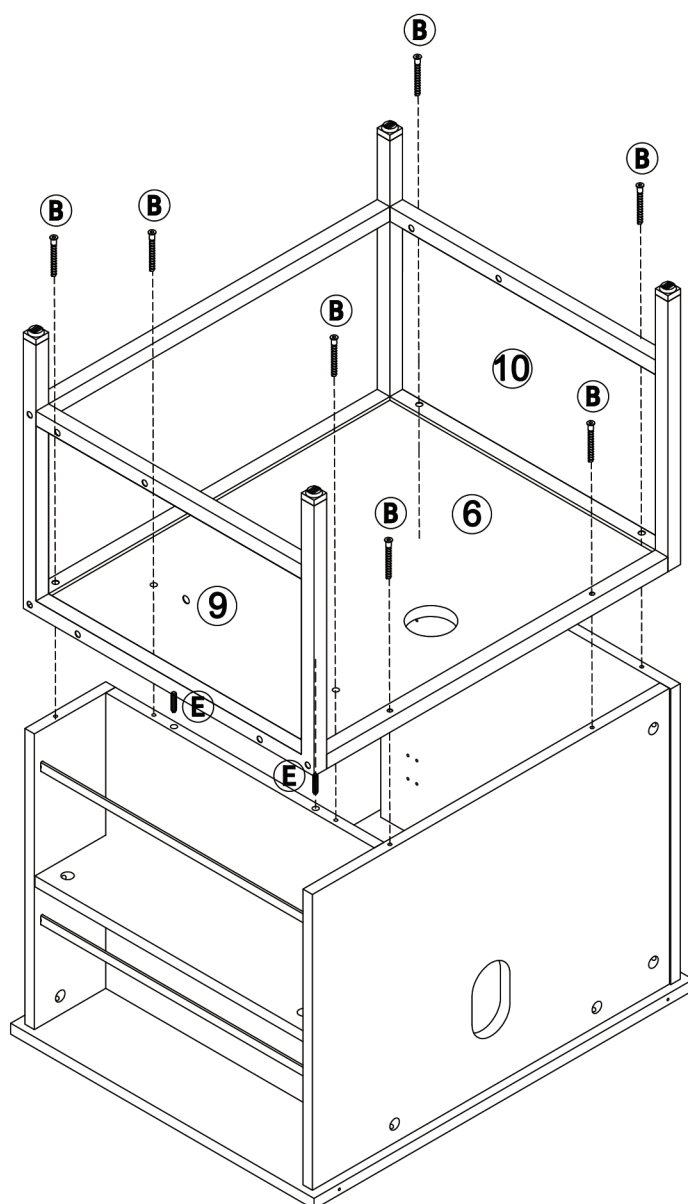


Do not fully tighten all screws until the end of step 10


10




B 4 pcs



J



7 1 pc

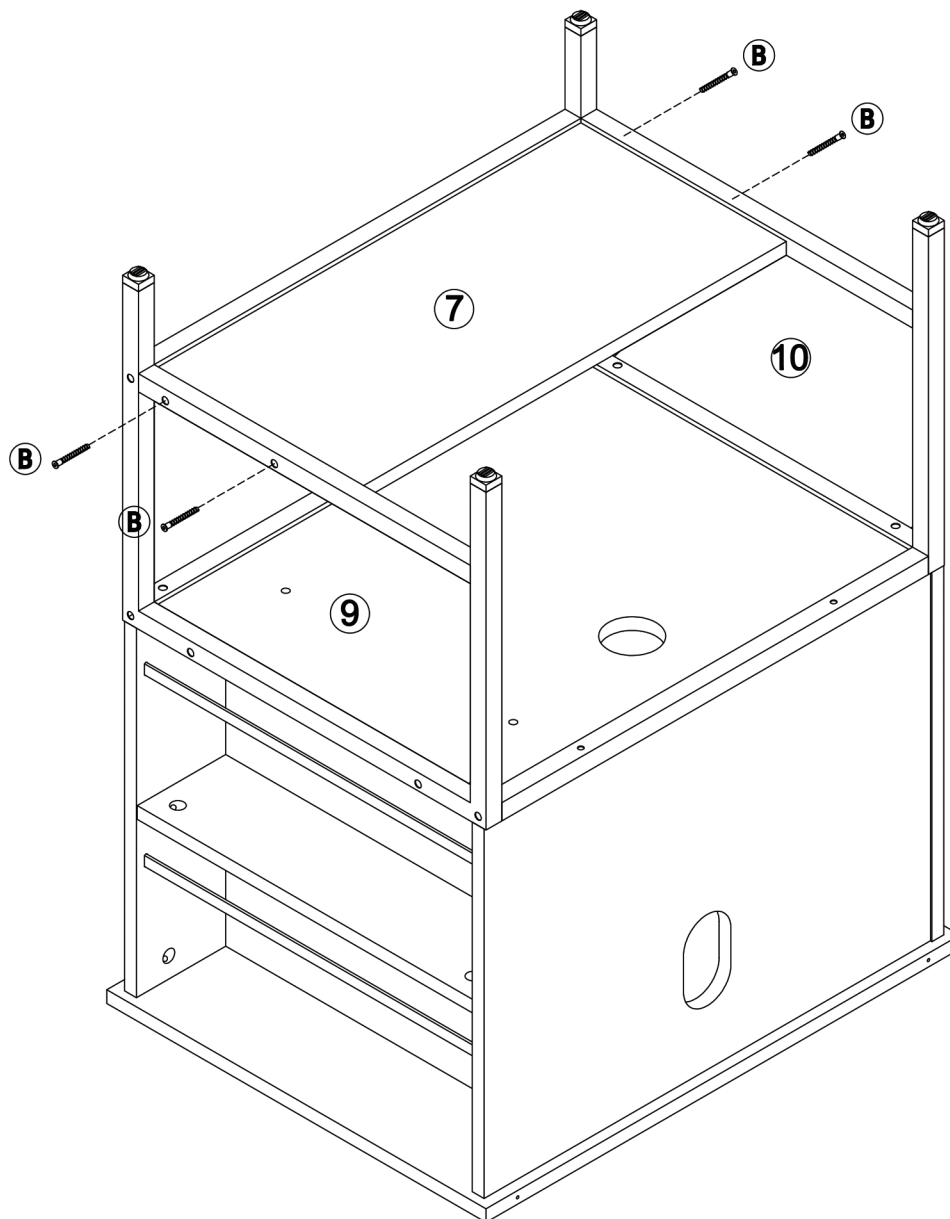


Fully tighten all screws using wrench # J at the end of this step


11



F 8 pcs




H 2 pcs



L 4 pcs



11 2 pcs

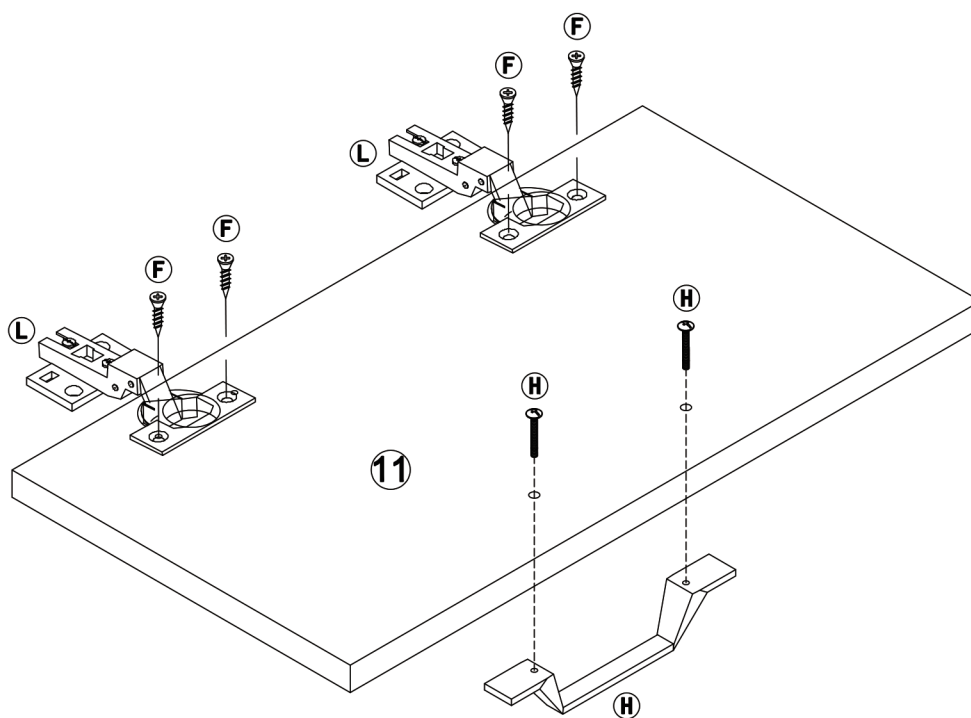


X 2PCS



12



F 16 pcs

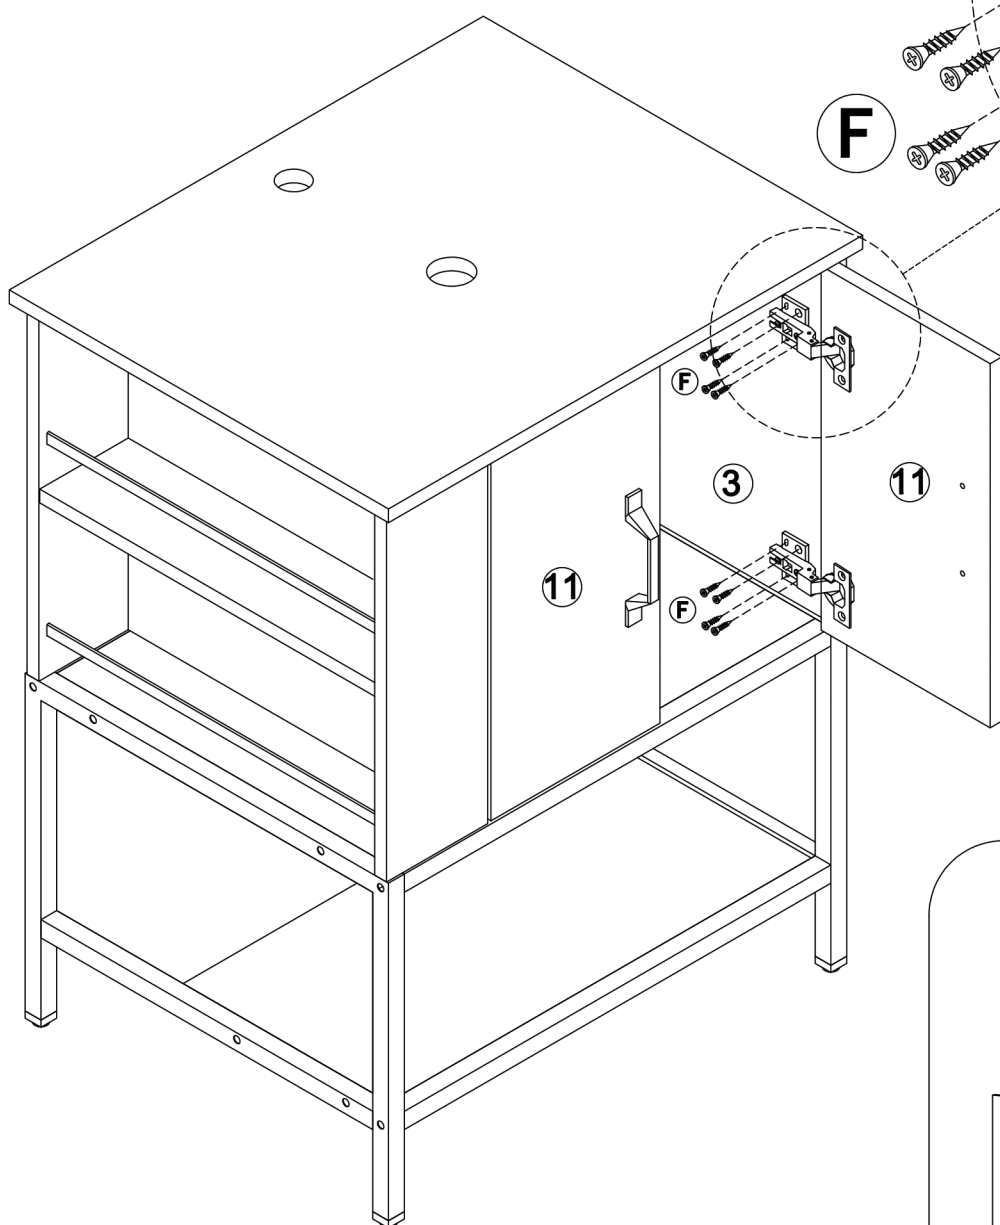



F

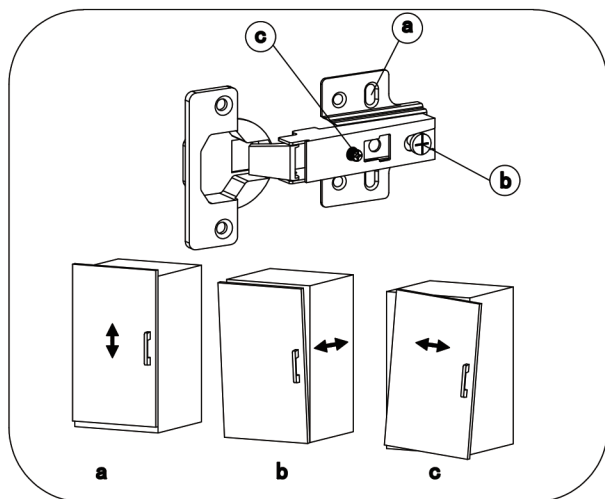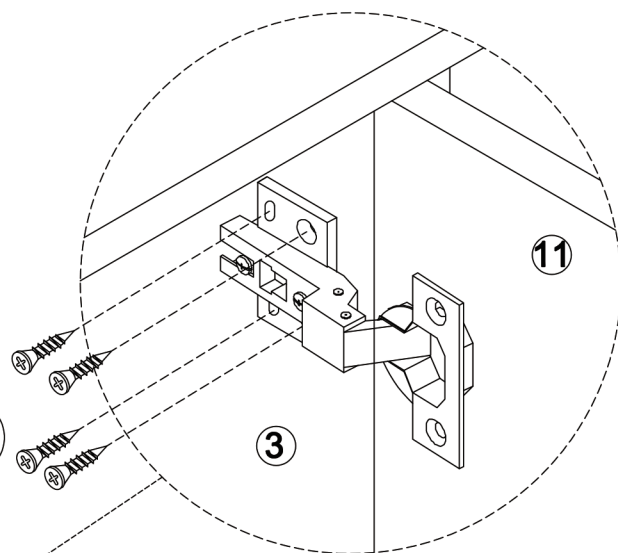


13

16 1 pc

I 1 pc

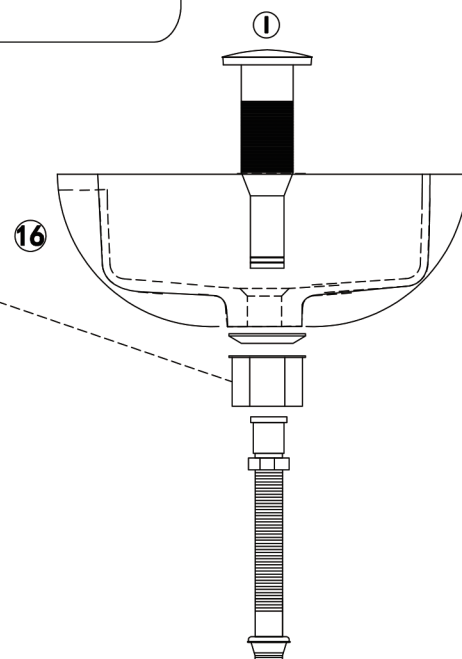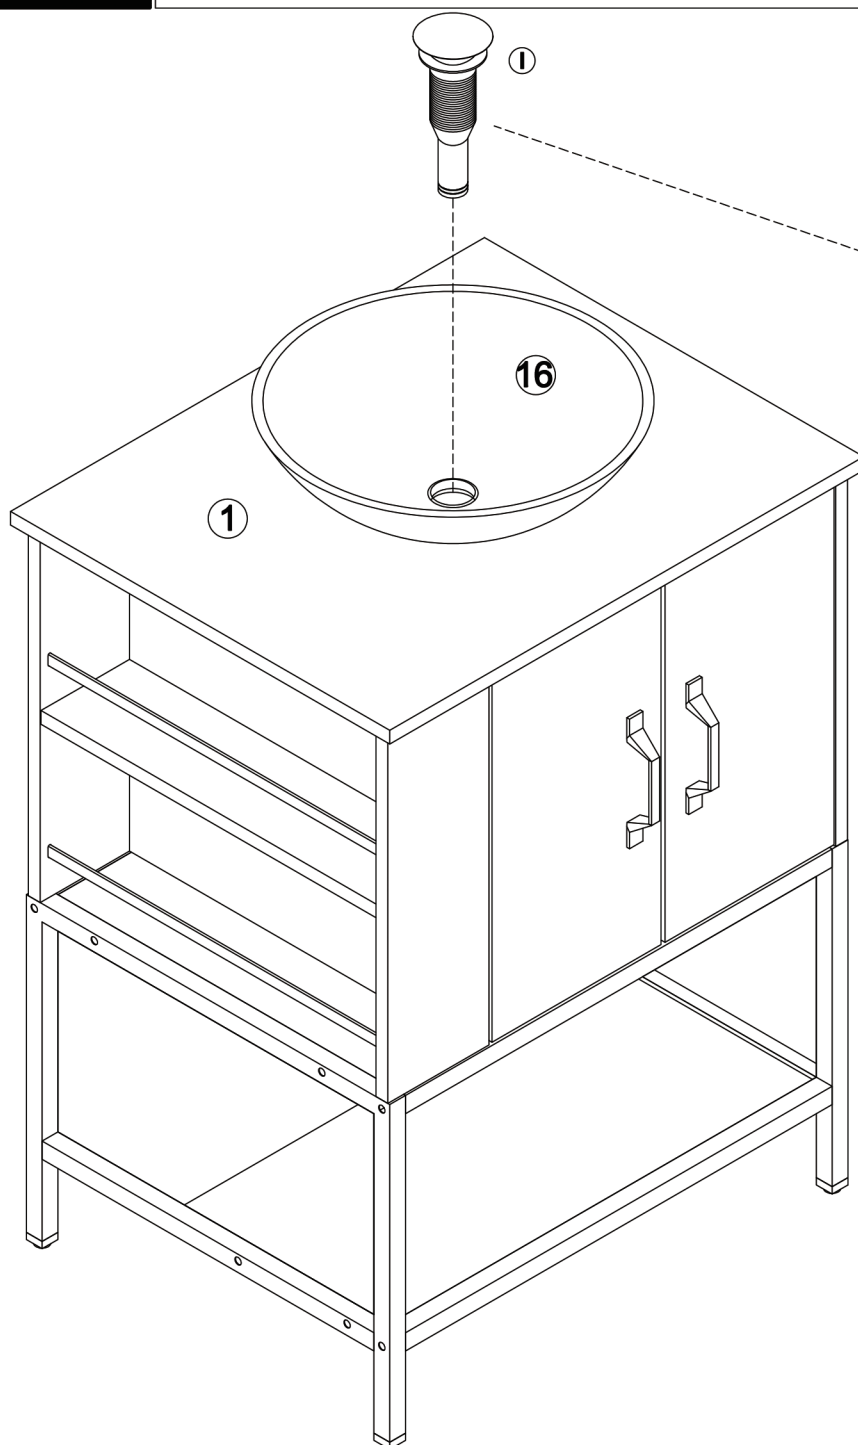


14



(K) 2 pcs

Attention: For safety and stability, we suggest you have to secure the anti-tip accessories to the wall to prevent tipping, injury, and property damage.

WALL

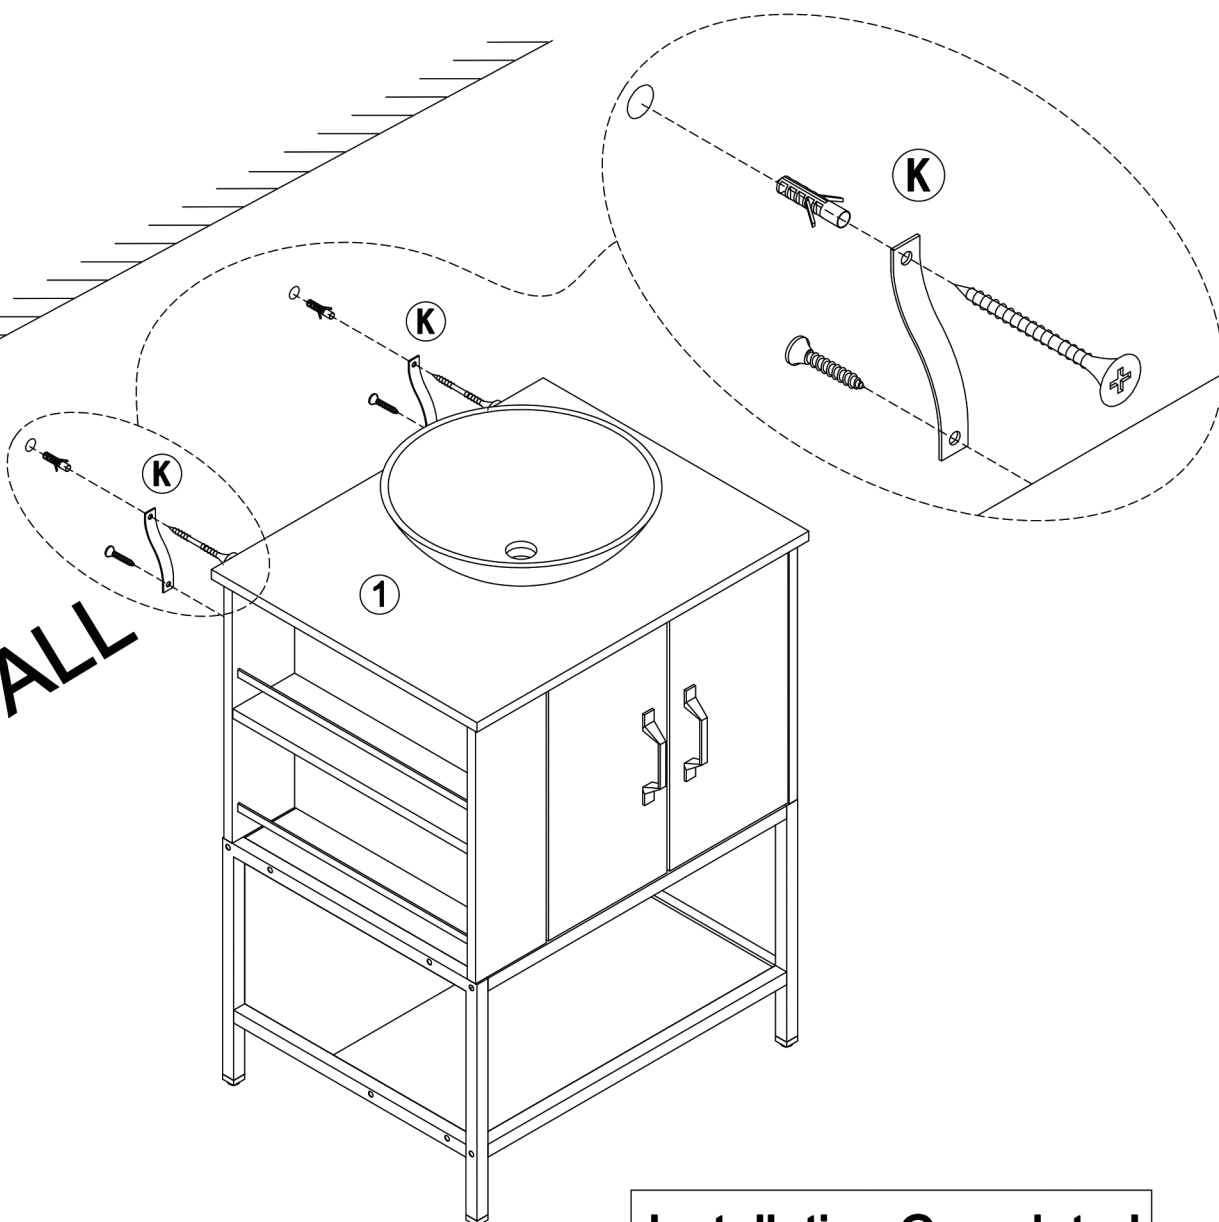

Installation Completed

