# Arrays, selectors and three-dimensional integration

A single RRAM cell must become part of an addressable network. This chapter follows the current through that network, then examines access devices, sensing and the physical layout.

All numerical examples are deliberately simplified circuit models, not measured device specifications.

Lin Cing
https://github.com/xinhi6716/resistive-memory-self-study

## A crosspoint is a cell, not an isolation switch

At the intersection of row $R_i$ and column $C_j$, a memory element connects the two lines. Applying a voltage to a selected row and sensing a column also establishes voltages across other intersections.

Those other cells can carry currents into the sense circuit, or form a path through floating lines. Which currents appear depends on the line-bias and sensing circuit; a cell's HRS/LRS ratio alone does not determine array performance.

Lin Cing
https://github.com/xinhi6716/resistive-memory-self-study

## Fixed $V/2$ bias: define every line


Drive the selected row to $V$, the selected column to 0 and every unselected row and column to $V/2$. Assume ideal voltage sources and wires.

| Cell position | Row potential | Column potential | Row − column |
|---|---|---|---|
| Selected intersection | $V$ | 0 | $V$ |
| Selected row only | $V$ | $V/2$ | $V/2$ |
| Selected column only | $V/2$ | 0 | $V/2$ |
| Neither selected | $V/2$ | $V/2$ | 0 |

For $V = 1.2$ V the half-selected cells see 0.6 V. This is one bias scheme; finite line resistance or voltage division within a 1S1R cell changes the device-level voltages.

Lin Cing
https://github.com/xinhi6716/resistive-memory-self-study

# Fixed-bias example: follow the sources

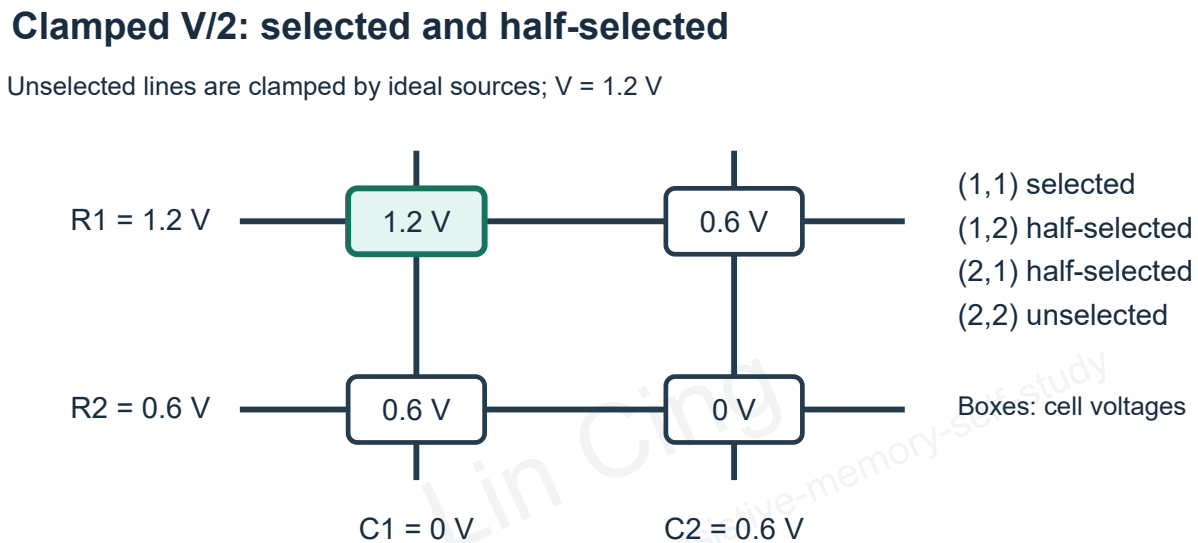


The unselected lines are **clamped**, not floating: their sources can supply or absorb current. The selected-column current can contain both the selected-cell current and current from a half-selected cell.

Lin Cing
https://github.com/xinhi6716/resistive-memory-self-study

## Half-select is a stress condition

An unselected cell experiences a fraction of the applied pulse. Whether it remains unchanged depends on its initial state, device voltage, polarity, pulse width and number of repetitions—not on voltage alone.


For an array, count the pulses imposed on each half-selected cell by its neighbors' writes. Compare its resulting distribution against the read criterion, including variability and cumulative disturb.

Lin Cing
https://github.com/xinhi6716/resistive-memory-self-study

# Floating lines create a different network

Take a $2 \times 2$ passive array: row $R_1 = 1$ V and column $C_1 = 0$ V; $R_2$ and $C_2$ float. The selected cell $R_1$–$C_1$ has conductance $0.1\ \mu$S; each other cell has $1\ \mu$S.

Assume linear, fixed-state conductances, ideal wires and no connection from a floating line to an external load. A path $R_1 \to C_2 \to R_2 \to C_1$ now runs in parallel with the selected cell.

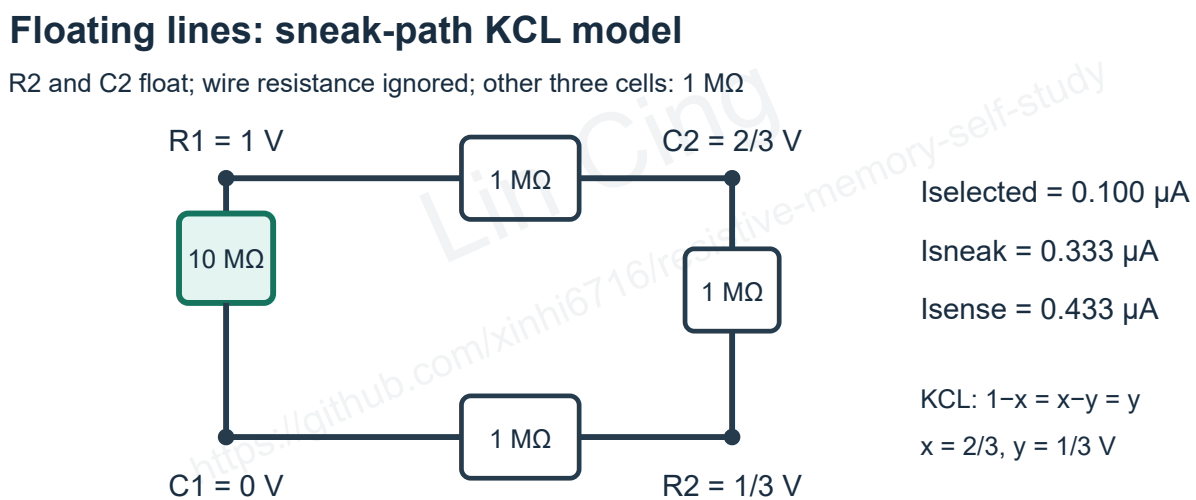


Lin Cing https://github.com/xinhi6716/resistive-memory-self-study

## Solve the floating network by KCL

Let the unknown potentials of $C_2$ and $R_2$ be $x$ and $y$ volts. With all three unselected conductances equal to $1\,\mu$S, Kirchhoff's current law gives

$$(x - 1) + (x - y) = 0, \qquad (y - x) + y = 0.$$

Thus $2x - y = 1$ and $2y = x$, so $x = 2/3$ V and $y = 1/3$ V. Each of the three series branches drops $1/3$ V.

Selected-cell current is $0.1\,\mu$A; the alternative path carries $1/3\,\mu$A. The sense node at $C_1$ receives $0.1 + 1/3 = 0.433\,\mu$A, approximately.

Lin Cing
https://github.com/xinhi6716/resistive-memory-self-study

## Compare the boundary conditions

In fixed $V/2$ bias the other lines are held by sources; in the floating example their voltages are **unknowns determined by KCL**. The three-resistor path calculation applies to that floating $2\times2$ topology, not automatically to a clamped array.

An HRS selected cell surrounded by LRS cells is an illustrative adverse pattern: the unwanted current can exceed the selected current. The actual worst pattern depends on the complete bias, device and sensing model.

Lin Cing
https://github.com/xinhi6716/resistive-memory-self-study


## Access structures change the available controls

| Structure | Access mechanism | Design consequence |
|---|---|---|
| 1R | Memory element alone | Isolation relies on its own I–V and bias scheme. |
| 1T1R | A gated transistor in series | Gate control can suppress leakage and limit current, at a footprint and voltage cost. |
| 1S1R | Two-terminal selector in series | Selector nonlinearity suppresses some low-bias currents without a gate. |
| 1D1R | Diode in series | Rectification favors one direction; compatibility with both programming polarities must be checked. |

A self-selective element incorporates access nonlinearity into its stack; it does not provide the separate gate of 1T1R.


Lin Cing
https://github.com/xinhi6716/resistive-memory-self-study

# Access structures: follow each control path

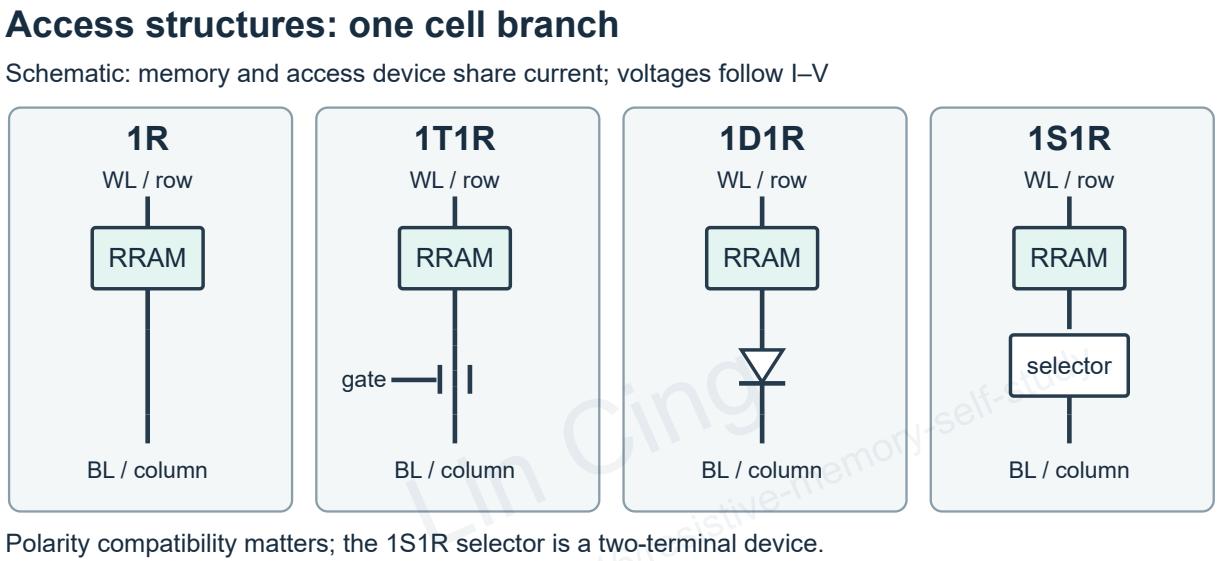


The transistor has a separate gate terminal. A two-terminal selector or diode is driven through the series path; the memory and its access element share the applied voltage.

# Three selector response families

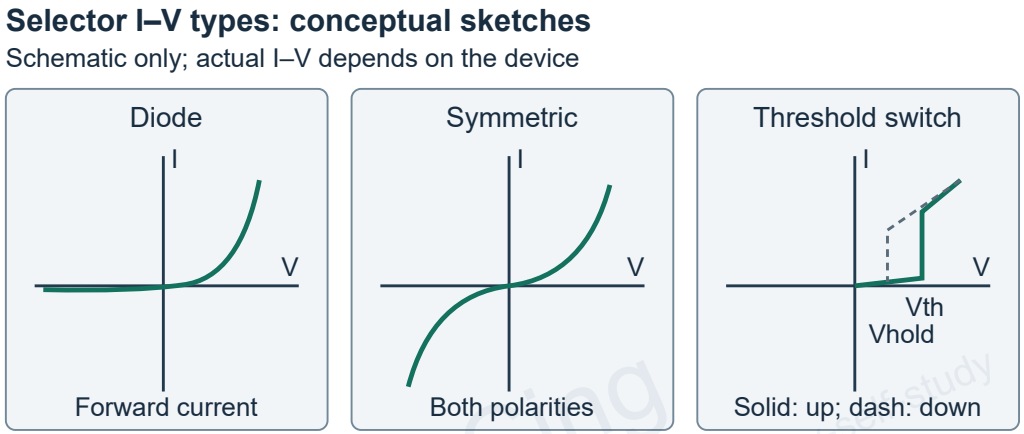


A **rectifier** conducts asymmetrically in the two polarities. A **varistor** gives a strongly nonlinear response; it may be engineered for conduction in both directions, but symmetry is not automatic. A **threshold switch** can enter a conducting state after a threshold and return when its holding condition is lost.

Each label describes a response family, not a guarantee of leakage, switching speed, retention or suitability for a given memory.

## Threshold and holding conditions

For a hypothetical volatile selector, an increasing voltage reaches a turn-on threshold $V_{th}$; after turn-on, the current and device voltage follow the selector's conducting branch. The selector returns to its off branch when current falls below a holding current $I_h$ in the stated model.

The conducting branch can have hysteresis, and real thresholds depend on polarity, pulse duration and history. A threshold selector is not an ideal permanent latch and must not be confused with the nonvolatile state stored in RRAM.

The source, wire and series memory constrain the trajectory: crossing an isolated-device threshold alone does not prove a stable operating point.

Lin Cing
https://github.com/xinhi6716/resistive-memory-self-study

## A series selector shares voltage with memory

The same current flows through both devices and their voltages satisfy $V_{app} = V_S + V_M$. For nonlinear devices, solve $I_S(V_S) = I_M(V_M)$ together with that sum, using the relevant state, polarity and branch.

For a **fixed-state linear illustration**, let $R_S = 2\ \text{k}\Omega$, $R_M = 4\ \text{k}\Omega$ and $V_{app} = 1.2\ \text{V}$. Then $I = 1.2/6\,\text{k}\Omega = 0.2\ \text{mA}$; $V_S = 0.4\ \text{V}$ and $V_M = 0.8\ \text{V}$. Neither element receives the full applied voltage.

For a threshold selector use its actual I–V branches and circuit load line; fixed-resistance division cannot predict the switching transient or the holding condition.

Lin Cing
https://github.com/xinhi6716/resistive-memory-self-study

## A nonlinear operating point: a piecewise model

Assume a positive-bias, non-hysteretic selector with $I = V_S/(100\,\mathrm{k\Omega})$ for $V_S < 0.8$ V, and $I = (V_S - 0.8\,\mathrm{V})/(1\,\mathrm{k\Omega}) + 8\,\mu$A for $V_S \geq 0.8$ V. A fixed $4\,\mathrm{k\Omega}$ memory is in series; $V_{app} = 1.2$ V.

Try the low-voltage branch: $I = 1.2\,\mathrm{V}/(104\,\mathrm{k\Omega}) = 11.54\,\mu$A and $V_S = 1.154$ V. That violates $V_S < 0.8$ V, so reject it.

On the high branch, $V_S = 0.8\,\mathrm{V} + (1\,\mathrm{k\Omega})(I - 8\,\mu\mathrm{A})$ and $1.2\,\mathrm{V} = V_S + (4\,\mathrm{k\Omega})I$. The intersection is $I = 81.6\,\mu$A, $V_S = 0.8736$ V and $V_M = 0.3264$ V, consistent with the branch. This is a teaching model, not a measured selector.

Lin Cing
https://github.com/xinhi6716/resistive-memory-self-study

## Check the read and write windows separately

At the intended read voltage, distinguish HRS and LRS while limiting leakage and avoiding read disturb. At both SET and RESET polarities, the combined stack must deliver the memory's required voltage, current and pulse duration.

Also check selector on-current, half-select leakage, endurance, temperature, speed and variability. A selector that blocks reverse current may be suitable for a particular unipolar scheme but conflict with bipolar operation; topology alone cannot establish compatibility.

Lin Cing
https://github.com/xinhi6716/resistive-memory-self-study

## What a nonlinearity ratio tells us

For a specified device state, polarity and measurement timing, define

$$NL = \frac{|I(V_{read})|}{|I(V_{read}/2)|}.$$

The denominator must be nonzero, and numerator and denominator must use the same current sign or magnitudes consistently. For $V_{read} = 1.2\,\mathrm{V}$, $NL = 10^3$ and $|I(1.2\,\mathrm{V})| = 10\,\mu$A, the model gives $|I(0.6\,\mathrm{V})| = 10$ nA.

This synthetic example compares only two points. It does not specify other voltages, switching dynamics, noise or complete-array read margin.

Lin Cing
https://github.com/xinhi6716/resistive-memory-self-study

## Read margin needs a sensing definition

Let $I_H$ and $I_L$ denote the sensed currents for a selected HRS and LRS, including all paths admitted by the chosen bias circuit. In a simple current-threshold reader, choose $T$ and call the state LRS if $I_{sense} > T$.

If the possible HRS currents lie in $[H_{min}, H_{max}]$ and LRS in $[L_{min}, L_{max}]$, a deterministic threshold separating both ranges exists only if $H_{max} < L_{min}$. The separation $L_{min} - H_{max}$ is a current-domain margin under this definition.

Changing the sense circuit or using a voltage-domain margin changes the calculation; noise and distributions must be included before claiming an error rate.

Lin Cing
https://github.com/xinhi6716/resistive-memory-self-study

## A small current-margin calculation

Use the previous floating 2×2 network, assume the three unselected cells remain linear at $1\ \mu$S, and switch only the selected conductance between $0.1$ and $1\ \mu$S. Both states see 1 V across the selected cell and have the same $1/3\ \mu$A alternative-path current.

Hence $I_H = 0.433\ \mu$A and $I_L = 1.333\ \mu$A. With threshold $T = 0.8\ \mu$A, the HRS and LRS separations from threshold are $0.367$ and $0.533\ \mu$A respectively. These nominal values assume an ideal current sense at 0 V, no noise and no state variation.

If unselected states or node voltages vary between reads, recalculate both ranges. The example does not establish how margin scales for a larger array.

Lin Cing
https://github.com/xinhi6716/resistive-memory-self-study

## Threshold window with an assumed background

For a separate example, hold the sense column at $0$ V and assume the sneak contribution is fixed at $0.3\,\mu$A regardless of the selected state. Let the selected HRS and LRS currents be $0.1$ and $1.0\,\mu$A, respectively. The sensed currents are then $I_H = 0.4\,\mu$A and $I_L = 1.3\,\mu$A.

With the rule “LRS if current is strictly greater than $T$,” both nominal states are classified correctly when $0.4 \le T < 1.3\,\mu$A. This definition gives a current window $I_L - I_H = 0.9\,\mu$A; other definitions may normalize the margin differently.

The $0.3\,\mu$A is an explicit simplifying assumption, not the $1/3\,\mu$A computed for the earlier floating network. In general solve the entire network separately for HRS and LRS.

Lin Cing
https://github.com/xinhi6716/resistive-memory-self-study

## Add variability and bounded sensing error

In a particular operating condition, suppose measured HRS currents lie in $[0.35, 0.55]$ $\mu$A and LRS currents in $[1.10, 1.40]$ $\mu$A. Let the sensing error have absolute value at most $0.05$ $\mu$A. The resulting observed ranges are $[0.30, 0.60]$ and $[1.05, 1.45]$ $\mu$A.

Using the same strict-greater-than threshold rule, every value in these bounds is classified correctly for $0.60 \leq T < 1.05$ $\mu$A. If the ranges overlap, no single threshold guarantees correct classification for all bounded cases.

This is a bounded-error example. Actual distributions, sample sizes, correlations and failure rates need separate evaluation.

Lin Cing
https://github.com/xinhi6716/resistive-memory-self-study


## Array size: where leakage accumulates

Larger arrays generally introduce more possible paths and longer wires, but the actual sensed leakage depends on topology, biases and nonlinear I–V characteristics. A sum of identical half-select currents is valid only if the assumed circuit really presents those same device voltages and currents.

To evaluate a proposed size, solve the network for representative data patterns and process corners, then include sense noise, timing, supply and reference uncertainty. A single two-point $NL$ cannot supply these missing conditions.

Lin Cing
https://github.com/xinhi6716/resistive-memory-self-study

# Horizontal layers and vertical pillars

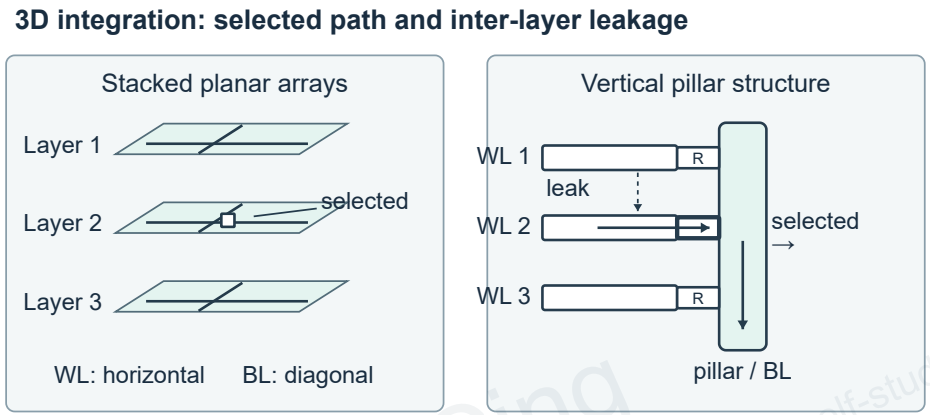


Leakage depends on structure and bias.

Horizontal stacking repeats lateral crossbar planes. In a vertical structure, memory cells occur where a pillar electrode meets separately addressable stacked word-line layers. The selected path and isolation depend on the particular layout and line bias.

Interlayer leakage, alignment, parasitic capacitance, contacts, heat and yield can offset the apparent density gain. Different 3D architectures cannot be ranked without a stated circuit and manufacturing comparison.

## Interpret an area calculation correctly

For an idealized planar crosspoint with pitch $2F$ in each direction, area per cell is $(2F)^2 = 4F^2$. If $F = 20$ nm, this is $1600\,\mathrm{nm}^2$.

With three perfect layers over the same projected footprint and one bit per cell, the ideal projected cell area per bit is $1600/3 \approx 533.3\,\mathrm{nm}^2$. This is an accounting estimate, not the area of a manufactured memory chip.

Peripheral decoders, sensing, routing, redundancy, layer isolation, spacing and yield must be included in a system comparison. Extra layers can change process cost and thermal constraints.

Lin Cing
https://github.com/xinhi6716/resistive-memory-self-study

## From a nanoscale pattern to addressable cells

**AAO:** anodize aluminium to form a porous template, then deposit or grow material through pores. A regular local pattern does not itself register each device to external circuitry.

**Nanosphere lithography:** assemble a sphere monolayer and use it as a mask for deposition or etching. Particle placement, defects, removal and registration limit usable arrays.

**Block-copolymer directed self-assembly (DSA):** form periodic domains guided by a prepattern, then selectively remove or convert domains and transfer the pattern. Guidance, defect inspection, etch selectivity and alignment to contacts are part of the process.

Lin Cing
https://github.com/xinhi6716/resistive-memory-self-study

## Pattern formation is not system integration

A useful fabrication chain is **pattern formation → pattern transfer → layer alignment → contacting and addressing → electrical and yield testing**. Nanoscale pitch is only the first constraint.

Check whether the switching layer remains continuous between cells: lateral conduction can create crosstalk. Compare pattern defects and placement error as well as feature size; a dense microscopic pattern is not automatically a functional high-yield memory array.

Lin Cing
https://github.com/xinhi6716/resistive-memory-self-study

## A reproducible array comparison

State the stack, access structure, array dimensions, line biases, reference polarity, wire and sense models, pulses and timing. Record whether the reported current includes unselected paths and whether the result comes from measurements, simulation or extrapolation.

Report temperature, sample count, cycle history, variation, failure criterion and relevant uncertainty. A particular experimental selector or 3D stack is evidence for that configuration, not a universal specification for all RRAM arrays.

Lin Cing
https://github.com/xinhi6716/resistive-memory-self-study

# References and attribution

Jennifer Rupp, Daniele Ielmini, Ilia Valov (eds.), Resistive Switching: Oxide Materials, Mechanisms, Devices and Operations, Springer, 2022. DOI: 10.1007/978-3-030-42424-4.

Original educational synthesis by Lin Cing, licensed under CC BY 4.0.

https://github.com/xinhi6716/resistive-memory-self-study

Lin Cing
https://github.com/xinhi6716/resistive-memory-self-study