
Talk Outline

Common ways of talking to chips

- 1. Minimum Viable Debug
- 2. JTAG
- 3. ARM ADIV5 + MEM-AP
- 4. RISC-V

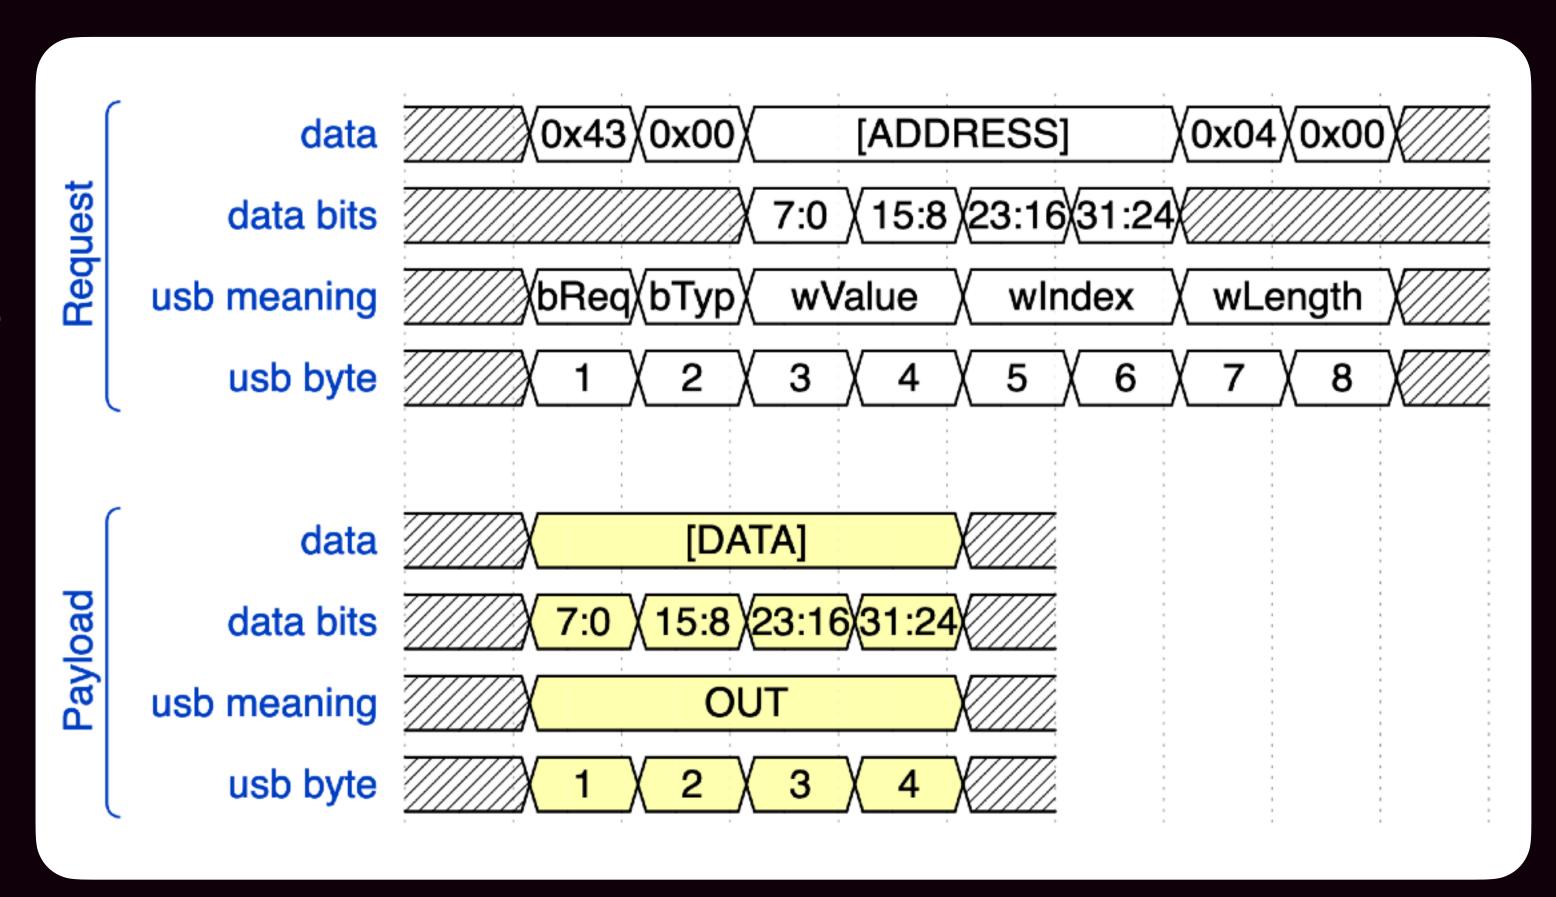

Not Covering Debug Hardware Lots of [in]expensive options

- Lauterbach
- Segger J-Link
- Black Magic Probe
- ST-Link
- ESP32 USJ
- CMSIS-DAP