Measuring a Flame Transfer Matrix

Table of Contents

1. Before we start
2. Introduction
3. Burner Transfer Matrix
a) Upstream Forcing
b) Downstream Forcing
c) Computing the transfer matrix
d) The L - Zeta model
4. Flame Transfer Matrix
a) The Rankine-Hugoniot relations
b) Effects of Temperature

1. Before we start

Before proceeding we will clear the workspace and run the dir command to ensure that we are in the correct workspace. You should be able to see a folder named tutorial_functions.

2. Introduction

In this tutorial we will learn how to obtain flame transfer matrices. A Flame Transfer Matrix (FTM) generalizes the concept of the Flame Transfer Function (FTF) by introducing more terms that show the coupling of the unsteady rate of heat release with all the acoustic variables. As with the FTFs, FTMs are widely used in low order models to study the response of the flame and its confinement to acoustic fluctuations.

In the FTF formulation (see FTF tutorial) we used to have:

$$\frac{\hat{Q}}{\bar{Q}} = \text{FTF}(\omega) \frac{\hat{u}_u}{\bar{u}}$$
 Eq. (1)

Then, through an energy balance upstream and downstream of the heat source we could relate \hat{Q} (and thus \hat{u}_u) to the properties downstream, for instance \hat{u}_d . In the FTM approach we usually operate with matrices that relate all the upstream acoustic fluctuations, with all the downstream acoustic fluctuations, for example:

$$\begin{bmatrix} \frac{\hat{p}_d}{\bar{\rho}_d \bar{c}_d} \\ \hat{u}_d^1 \end{bmatrix} = \begin{bmatrix} T_{11} & T_{12} \\ T_{21} & T_{22} \end{bmatrix} \begin{bmatrix} \frac{\hat{p}_u}{\bar{\rho}_u \bar{c}_u} \\ \hat{u}_u \end{bmatrix} \qquad \text{Eq. (2)}$$

Somewhere within this matrix a term such as that in Eq. (1) exists, but the advantage of this formulation is that besides the FTF we also capture all the information about the balance of momentum and energy fluxes. This means that this approach can also account for losses in the system.

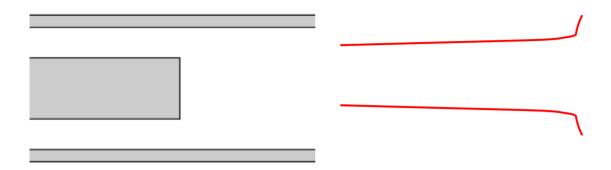


Fig. 1: In the FTM approach it is common to separate contributions from the burner geometry and the flame.

In the flame transfer matrix formulation, it is common to treat the contributions of the **burner geometry** and the contributions due to the **heat release** separately (Fig. 1). In this format we will have 2 transfer matrices:

- the burner transfer matrix B,
- and the flame transfer matrix F.

The transfer matrix for the full system is given by their multiplication:

$$\begin{bmatrix} T_{11} & T_{12} \\ T_{21} & T_{22} \end{bmatrix} = \begin{bmatrix} B_{11} & B_{12} \\ B_{21} & B_{22} \end{bmatrix} \begin{bmatrix} F_{11} & F_{12} \\ F_{21} & F_{22} \end{bmatrix} \quad \text{Eq. (3)}$$

In this tutorial we will compute these transfer matrices for our model combustor:




Fig. 2: Schematic of the combustor.

3. Burner Transfer Matrix

A burner transfer matrix is usually obtained in cold flow conditions. Therefore, to begin with, we will consider a combustor without a flame. In the absence of heat release, the matrix T in Eq. (3) is just the matrix B. Now, you might have noticed that in Fig. 2 the combustor is equipped with microphones upstream and downstream of the flame holder. These will be used to obtain via the MMM the quantities:

- \hat{p}_u and \hat{u}_u which are computed at $x = 0^-$ (just before the area expansion),
- \hat{p}_d and \hat{u}_d , which are computed at $x = 0^+$ (just after the area expansion).

According to Eq. (2) there will be 4 unknowns, i.e., the elements B_{ij} . By forcing the combustor upstream (as shown in Fig. 2) we will be able to obtain the values of $\hat{p}_u, \hat{u}_u, \hat{p}_d$ and \hat{u}_d . Plugging these into to Eq. (2), translates to a system of 2 equations with 4 unknowns. Therefore, to obtain the other 2 equations, in this tutorial we will force the combustor downstream of the flame holder.

NB. In a real experiment downstream forcing may not be possible, so instead one can change the exit boundary condition and consider this impedance in the computation of the transfer matrix.

a) Upstream Forcing


We begin by setting up the simulation. For the configuration shown in Fig. 2 we will assume that inlet of the configuration is **choked** (in experiments this type of boundary condition is useful to decouple the acoustics upstream of the combustor, i.e., fuel/oxidizer lines), and we will specify the velocity of the flow \bar{u}_1 and its temperature \bar{T}_1 . We will also assume that the outlet of the configuration is open to the atmosphere and specify the outlet pressure \bar{p}_2 . Since it is a cold flow experiment, we will use $\bar{Q} = 0$. Notice that we are using the subscripts 1 and 2 to denote the mean flow conditions before and after the area expansion at x = 0 respectively:

Next, we define the forcing and measurement conditions. Here we will force at a single frequency f = 100Hz, in later parts of the tutorial we will repeat this at different frequencies.

```
% Define Forcing Conditions:
Forcing.Speaker = 'ON';
Forcing.Speaker_Downstream = 'OFF';
Forcing.Voltage = 0.5; % (V)
Forcing.Frequency = 100; % (Hz)
% Sampling frequency:
Measurement.Fs = 5000; % (Hz)
% Length of the measurements:
Measurement.Time = 2; % (s)
% Photomultiplier:
Measurement.PMT = 'OFF';
% Differential Microphones:
x_mic = [-0.2, -0.4, -1, 0.1, 0.3, 0.6]; \% (m)
Measurement.Mic = 'ON';
Measurement.Mic_Pos = x_mic;
% Hot wire anemometry:
x_hw = 0.2; \% (m)
Measurement.HWA = 'OFF';
Measurement.HWA_Pos = x_hw;
```

Now, let's look at the configuration

```
fn_plot_config(Forcing, Measurement)
```



Now run the simulation:

```
% Run the simulation
[Mean,Geom,Signals,Sim] = Run_Simulation(u1,T1,p2,Qbar,Forcing,Measurement);
```

```
Progress: 0%, 5%, 10%, 15%, 20%, 25%, 30%, 35%, 40%, 45%, 50%, 55%, 60%, 65%, 70%, 75%, 80%, 85%, 90%, 95%, Finished
```

In the meantime, take a look at the animation:

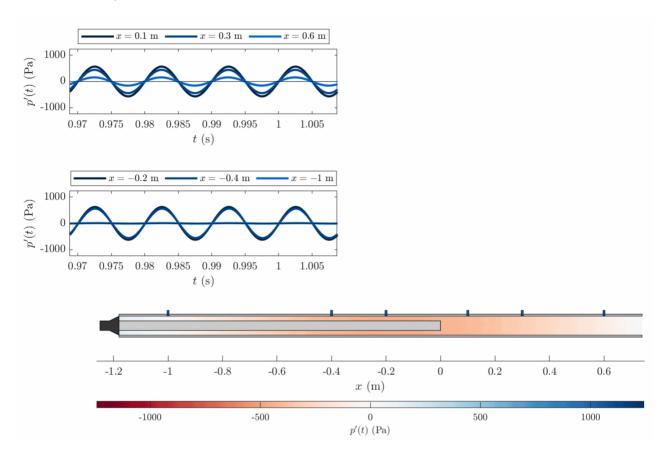


Fig. 3: Upstream forcing, cold flow.


Optional:

If you want to visualize the flame and the acoustic field in the combustor, uncomment and run the following commands. You may want to change the starting and end points, but try to keep the time difference around $\Delta t = 0.02$ s, or else terminate the animation using the ctrl+c command.

```
% t_start = 1;
% t_end = t_start + 0.01;
% Num_of_time_steps_in_plot = 400;
% stepsize = 2;
% fn_view_simulation(Sim,stepsize,t_start,t_end,Num_of_time_steps_in_plot)
```

Let's take a quick glance at the signals:

```
% Plot signals
zoom_in_time_steps = 100;
fn_plot_Signals(Signals, Measurement, zoom_in_time_steps)
```

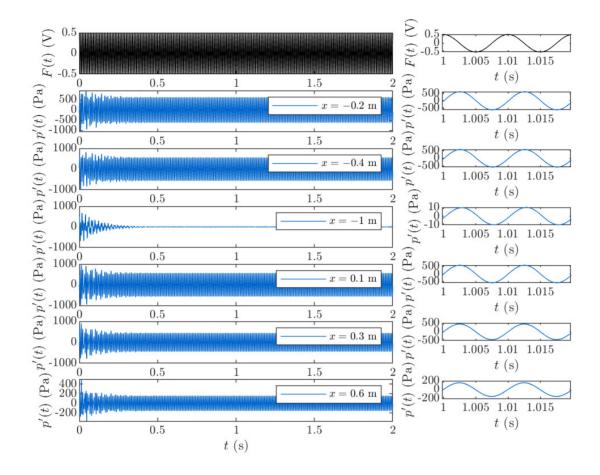

• Did you notice that one of the microphones is very close to a pressure antinode? You can see that the magnitude of the microphone at x = -1m is much smaller compared to the rest of the microphones.

Now using the same codes developed in the MMM tutorial, we will reconstruct the acoustic field in each side of the flame holder and then propagate the signals towards x = 0.

To achieve that, we first need to adapt our structures so that they can be passed to the functions:

```
% Adapting structures:
S_up = Signals;
S_dn = Signals;
M_up = Measurement;
M_dn = Measurement;
% Keep only relevant Microphones:
S_up.P_mic = S_up.P_mic(1:3,:);
S_dn.P_mic = S_dn.P_mic(4:6,:);
M_up.Mic_Pos = M_up.Mic_Pos(1:3);
M_dn.Mic_Pos = M_dn.Mic_Pos(4:6);
```


Now we perform the MMM:

```
% Multi-Microphone-Method:
[Fu,Gu,~] = fn_MMM(Mean,S_up,M_up);
[Fd,Gd,omega] = fn_MMM(Mean,S_dn,M_dn);
% Signal Reconstruction:
xu = 0;  % Position just before the flame holder
```

```
xd = 1e-5;  % Position just after the flame holder
[ph_u_uf,uh_u_uf] = fn_acoustic_field(Mean,Fu,Gu,omega,xu);
[ph_d_uf,uh_d_uf] = fn_acoustic_field(Mean,Fd,Gd,omega,xd);
```

Let's plot the acoustic field for

```
fig = figure;
fn_plot_acoustic_field(Geom, Mean, Fu, Gu, Fd, Gd, omega, 'k')
```

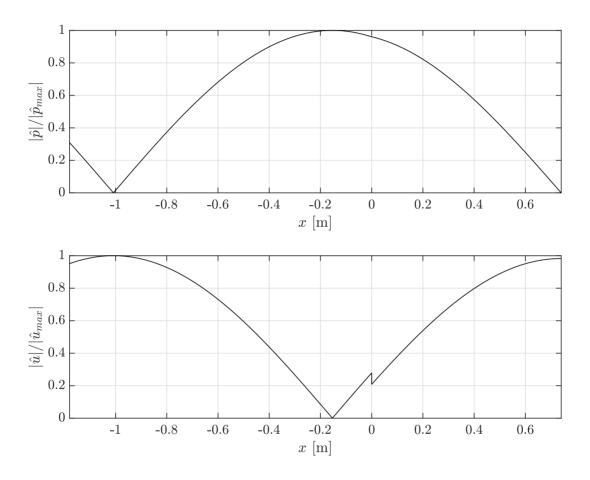

Can you spot:

- 1. The discontinuity in the velocity fluctuations?
- 2. The pressure node next to one of our microphones?


b) Downstream Forcing

We will repeat the same process but now with downstream forcing. So, we will begin by setting that up:

```
Forcing.Speaker = 'OFF';
Forcing.Speaker_Downstream = 'ON';
```

Let's preview the configuration:

figure fn_plot_config(Forcing, Measurement)



Now run the simulation:

Progress: 0%, 5%, 10%, 15%, 20%, 25%, 30%, 35%, 40%, 45%, 50%, 55%, 60%, 65% 70%, 75%, 80%, 85%, 90%, 95%, Finished

In the meantime take a look at the animation:

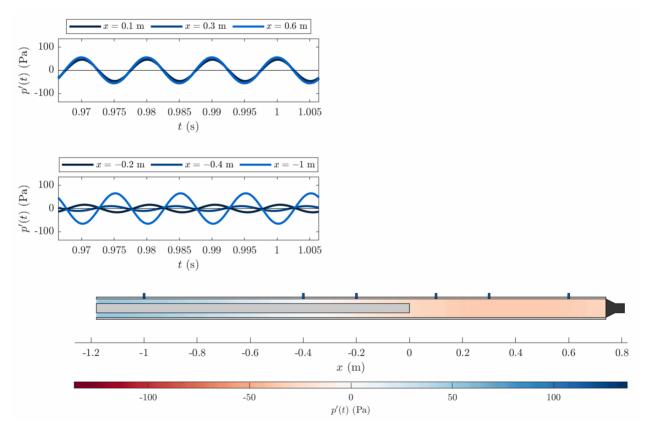


Fig. 4: Downstream forcing, cold flow.


Optional:

If you want to visualize the flame and the acoustic field in the combustor, uncomment and run the following commands. You may want to change the starting and end points, but try to keep the time difference around $\Delta t = 0.02$ s, or else terminate the animation using the ctrl+c command.

```
% t_start = 1;
% t_end = t_start + 0.01;
% Num_of_time_steps_in_plot = 400;
% stepsize = 2;
% fn_view_simulation(Sim,stepsize,t_start,t_end,Num_of_time_steps_in_plot)
```

In a similar fashion as before we will first take a quick glance at the signals:

```
% Plot signals
zoom_in_time_steps = 100;
fn_plot_Signals(Signals, Measurement, zoom_in_time_steps)
```

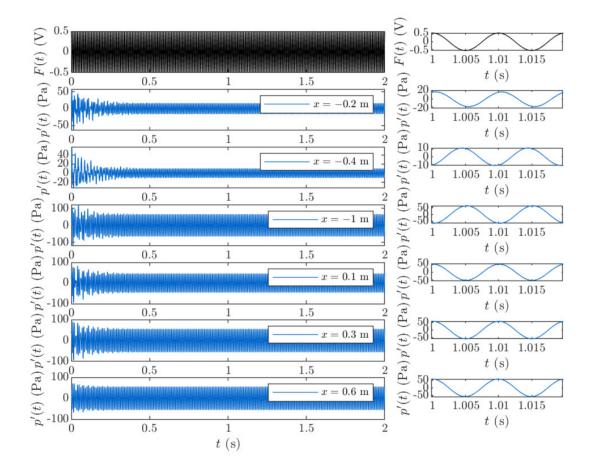

Even though all the signals are much weaker, this time none of the microphones is situated next to a pressure node. We can say that because they all oscillate at the same order of magnitude.


NB. The signals are much weaker despite using the same voltage. This is because of the way the code is set up. In practice every speaker might have a different transfer function so this might emulate that. The only thing to keep in mind is that you need a forcing level that is higher than the background noise, but not strong enough to induce nonlinearities in the acoustics. (Here we don't have background noise, so we can go as low as we need).

Now we proceed to perform the MMM and reconstruct the acoustic field:

```
% Adapting structures:
S_up = Signals;
S_dn = Signals;
M_up = Measurement;
```

Now we are going to plot the "new" acoustic field on top of the previous one. Since the amplitudes are normalized you will be able to see the differences between forcing upstream and downstream:

```
figure(fig)
fn_plot_acoustic_field(Geom, Mean, Fu, Gu, Fd, Gd, omega, 'r')
legend('Upstream', 'Downstream')
```

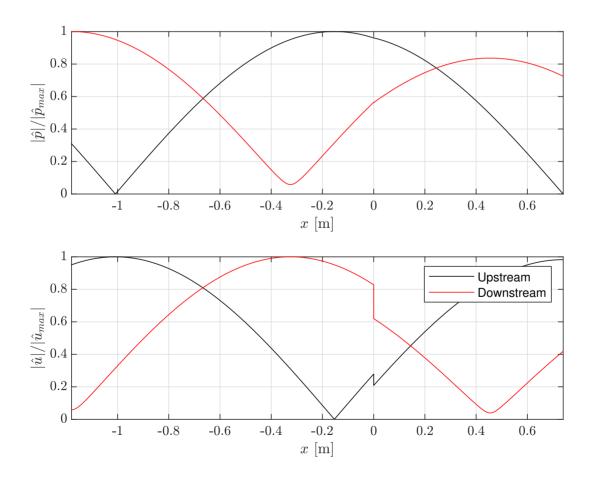

In black we have the results for upstream forcing, in red the results for downstream forcing. Recall that the boundary conditions of the combustor are choked at the inlet and open end at the outlet.

• A choked inlet sets the velocity fluctuations close to zero. From this figure we can see that, as expected this only occurs when we force downstream.

• An open end sets the fluctuations in pressure to zero. Again, we can see that this only happens when we force upstream.

When we force a configuration through the boundaries, we are essentially overriding the boundary condition.

c) Computing the transfer matrix

Now that we have all the elements, we can easily compute the burner transfer matrix. To achieve that we first rearrange Eq. (2) such that:

$$\begin{bmatrix} \frac{\hat{p}_{a}^{\text{uff}}}{\hat{\rho}_{d}\hat{c}_{d}} \\ \hat{u}_{d}^{\text{uff}} \\ \frac{\hat{p}_{a}^{\text{df}}}{\hat{\rho}_{d}\hat{c}_{d}} \\ \hat{u}_{d}^{\text{df}} \end{bmatrix} = \begin{bmatrix} \frac{\hat{p}_{u}^{\text{uf}}}{\hat{\rho}_{u}\hat{c}_{u}} & \hat{u}_{u}^{\text{uf}} & 0 & 0 \\ 0 & 0 & \frac{\hat{p}_{u}^{\text{uf}}}{\hat{\rho}_{u}\hat{c}_{u}} & \hat{u}_{u}^{\text{uf}} \\ \frac{\hat{p}_{u}^{\text{df}}}{\hat{\rho}_{u}\hat{c}_{u}} & \hat{u}_{u}^{\text{df}} & 0 & 0 \\ 0 & 0 & \frac{\hat{p}_{u}^{\text{df}}}{\hat{\rho}_{u}\hat{c}_{u}} & \hat{u}_{u}^{\text{df}} \end{bmatrix} \begin{bmatrix} B_{11} \\ B_{12} \\ B_{21} \\ B_{22} \end{bmatrix}$$
 Eq. (4)

Task:

• Using Eq. (4) finish the function fn BTM and compute the matrix B.

```
[B] = fn_BTM(Mean, ph_d_uf, uh_d_uf, ph_d_df, uh_d_df, ph_u_uf, uh_u_uf, ph_u_df, uh_u_df)
```

```
B = 2x2 complex
0.9999 + 0.0001i 0.0217 - 0.0001i
-0.0003 + 0.0001i 0.7487 - 0.0001i
```

If done accurately, you must get approximately the following values:

$$B \approx \left[\begin{array}{cc} 1 & 0.02 \\ 0 & 0.75 \end{array} \right]$$


This value of the transfer matrix is valid only for a frequency $\omega = 2\pi f$, with f = 100 Hz. Now repeat the process for other frequencies. Keep the number N small, we will plot the results of this loop over previously computed curves of this model.

```
N = 4; % Number of points
freqs = linspace(50,400,N);
[B11,B12,B21,B22] = fn_BTM_loop(u1,T1,p2,Qbar,Forcing,Measurement,freqs);
```

```
Starting parallel pool (parpool) using the 'local' profile ...
Connected to the parallel pool (number of workers: 4).
Progress: 0%, 5%, 10%, 15%, 20%, 25%, 30%, 35%, 40%, 45%, 50%, 55%, 60%,
70%, 75%, 80%, 85%, 90%, 95%,
Finished
Progress: 0%, 5%, 10%, 15%, 20%,
                                 25%,
                                       30%, 35%, 40%, 45%,
                                                             50%,
                                                                  55%,
                                                                        60%,
70%, 75%, 80%, 85%, 90%, 95%,
Progress: 0%, 5%, 10%, 15%, 20%,
                                  25%,
                                       30%,
                                            35%,
                                                  40%,
                                                       45%,
                                                             50%,
                                                                   55%,
70%, 75%, 80%, 85%, 90%, 95%,
Finished
Progress: 0%, 5%, 10%, 15%, 20%, 25%, 30%, 35%, 40%, 45%, 50%, 55%, 60%, 65%,
70%, 75%, 80%, 85%, 90%, 95%,
```

```
Finished
Progress: 0%, 5%, 10%, 15%,
                               20%,
                                      25%,
                                            30%,
                                                  35%,
                                                        40%,
                                                               45%,
                                                                     50%,
                                                                           55%,
                                                                                 60%,
                                                                                       65%,
70%, 75%, 80%, 85%,
                        90%,
                              95%,
Finished
Progress: 0%, 5%, 10%, 15%,
                                20%,
                                      25%,
                                            30%,
                                                  35%,
                                                         40%,
                                                               45%,
                                                                     50%,
                                                                           55%,
                                                                                 60%,
                                                                                        65%,
           80%, 85%, 90%,
70%, 75%,
                              95%,
Finished
Progress: 0%, 5%, 10%, 15%,
                                20%,
                                      25%,
                                            30%,
                                                  35%,
                                                         40%,
                                                               45%,
                                                                     50%,
                                                                           55%,
                                                                                 60%,
           80%, 85%,
                        90%,
                              95%,
70%, 75%,
Finished
Progress: 0%, 5%, 10%, 15%,
                                20%,
                                      25%,
                                            30%,
                                                  35%,
                                                        40%,
                                                               45%,
                                                                     50%,
                                                                           55%,
                                                                                 60%,
70%, 75%, 80%, 85%, 90%,
                              95%,
Finished
```

figure
fn_plot_BTM(freqs, B11, B12, B21, B22, 'BTM');

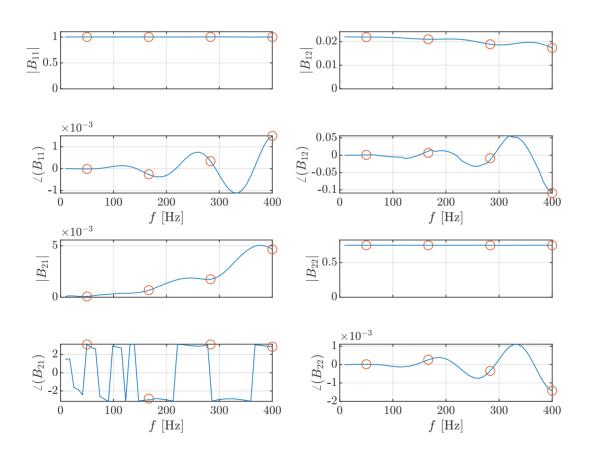

The burner transfer matrix reveals some important aspects of the combustor.

- The B_{11} element is very close to 1, which means that pressure is almost continuous across the area expansion, $\hat{p}_d \approx \hat{p}_u$.
- The B_{12} element is small, but not zero, indicating that there are some pressure losses in the system.
- The B_{21} element is almost zero everywhere.
- The B_{22} element is approximately 0.75 everywhere, this is related to the area expansion.

d) The L - Zeta model

Many configurations can be accurately modelled with the $L-\zeta$ model:

$$\begin{bmatrix} \frac{\hat{p}_d}{\bar{\rho}_d \bar{c}_d} \\ \hat{u}_d^2 \end{bmatrix} = \begin{bmatrix} \frac{\bar{\rho}_u \bar{c}_u}{\bar{\rho}_d \bar{c}_d} & \frac{\bar{\rho}_u \bar{c}_u}{\bar{\rho}_d \bar{c}_d} \begin{pmatrix} -i\omega \frac{L_{\text{eq}}}{\bar{c}_u} - \bar{M}_u \zeta \end{pmatrix} \\ 0 & \frac{A_u}{A_d} \end{bmatrix} \begin{bmatrix} \frac{\hat{p}_u}{\bar{\rho}_u \bar{c}_u} \\ \hat{u}_u^2 \end{bmatrix}$$
Eq. (5)

Here L_{eq} is the effective length of the area jump, \bar{M}_u is the Mach number, and ζ is a pressure loss coefficient. See reference [1] for a derivation, which uses the unsteady Bernoulli equation. Given the values obtained in the previous section we can see that our burner indeed follows the trends of this model. Usually computing L_{eq} and ζ from the geometry is not an easy task, and thus it is common to obtain them by fitting.

[1] Schuermans, BBH, Polifke, W, & Paschereit, CO. "Modeling Transfer Matrices of Premixed Flames and Comparison With Experimental Results." *Proceedings of the ASME 1999* Indianapolis, Indiana, USA. June 7–10, 1999. V002T02A024. ASME. https://doi.org/10.1115/99-GT-132

Task

• Finish the function fn_LZmodel and compute the elements B_{11} , L_{eq} , ζ , B_{22} according to Eq. (5).

[B11,B22,Leq,Zeta] = fn_LZmodel(Mean,Geom)

B11 = 0.9993

B22 = 0.7500


Leq = 2.6217e-05

Zeta = -0.3443

• How do the values B_{11} and B_{22} compare to those observed above?

Now let's compare the B_{21} with the one obtained via the $L-\zeta$ model:

fn_plot_LZmodel(Mean,Leq,Zeta)

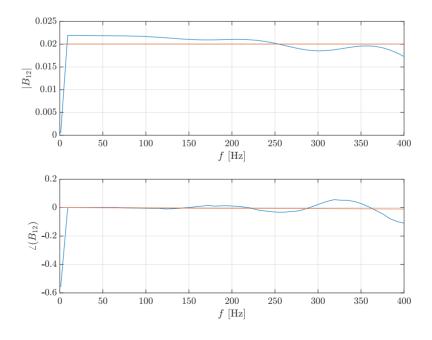

Depending on the fitting procedure the results may vary. I got a value of L_{eq} close to 0 which is indeed the case since we have an abrupt expansion. I also obtained a value of $\zeta = -0.34$, which gives an indication of the pressure lost in the system. We can compare this value with the rough approximation given by:

$$\zeta = 2 \left(\frac{\bar{p_u} - \bar{p_d}}{\bar{\rho_u}\bar{u_u}^2} \right)$$

```
p1 = Mean.p1;
p2 = Mean.p2;
u1 = Mean.u1;
rho1 = Mean.rho1;
Z_model = 2*(p1 - p2)/(rho1*u1^2)
```

 $Z_{model} = -0.3757$

The value is very close to the one obtained by the fitting procedure! We have now fully determined the burner transfer matrix and fitted it to the $L-\zeta$ model. The next step is to compute the Flame transfer matrix.

4. Flame Transfer Matrix

To compute the FTM we will turn on the heat release in the system to $\bar{Q} = 100$ kw and repeat the exact same process as before. The only difference is that this time since the flame is on, we will be computing the total transfer matrix T in Eq. (2). Given that we already know the matrix B computing the matrix F is simple:

$$B^{-1}T = F \qquad \text{Eq. (6)}$$

```
Qbar = 100000; %(W)
freqs = 100; % Hz
[T11,T12,T21,T22] = fn_BTM_loop(u1,T1,p2,Qbar,Forcing,Measurement,freqs);
Progress: 0%, 5%, 10%, 15%, 20%,
                                   25%,
                                        30%,
                                              35%,
                                                    40%,
                                                         45%, 50%, 55%,
                                                                          60%,
                                                                                65%,
70%, 75%, 80%, 85%, 90%, 95%,
Finished
Progress: 0%, 5%, 10%, 15%, 20%,
                                   25%, 30%, 35%, 40%, 45%, 50%, 55%, 60%,
70%, 75%, 80%, 85%, 90%,
                           95%,
 Finished
```

While its computed take a look at the animation of the rig being forced upstream and downstream:

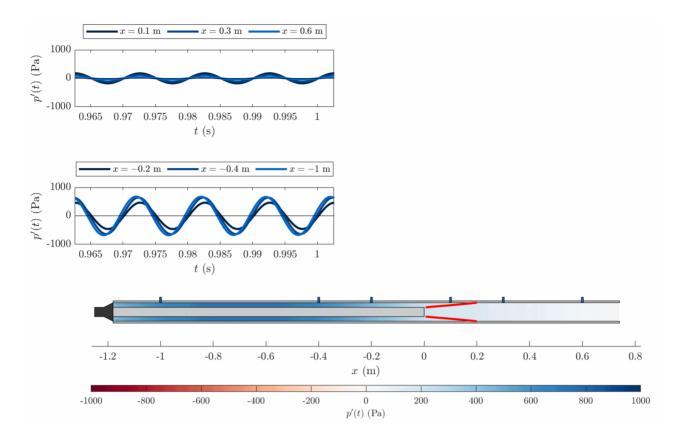


Fig. 5: Upstream forcing, hot flow.

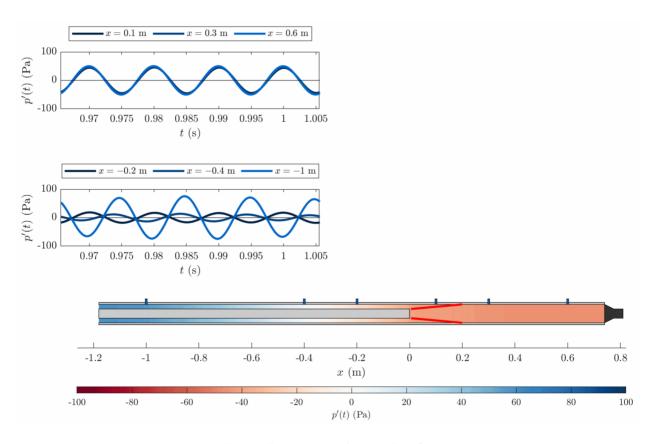


Fig. 6: Downstream forcing, hot flow.

.

Now let's compute the Flame Transfer Matrix :


```
T = [T11 T12; T21 T22];
% Flame transfer Matrix:
F = inv(B)*T
```

```
F = 2x2 complex
2.4564 + 0.0023i -0.3948 + 0.0485i
-0.3589 - 0.0248i 1.3474 - 0.4778i
```

• Can you see the difference in the values for the matrix?

By repeating the same process with different frequencies, we obtain the following FTM:

```
figure
[freqs,F22] = fn_plot_BTM(freqs, F(1,1), F(1,2), F(2,1), F(2,2), 'FTM_1');
```

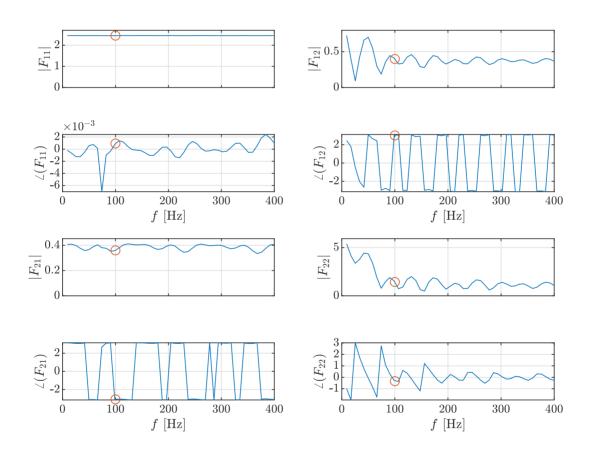

A few interesting patterns appear:

- The F_{11} element is constant with a value of 2.45.
- The F_{12} element has some modulations around a mean value of approximately 0.31. These modulations decay with increasing frequency.
- The F_{21} element has an approximately constant gain with a value of 0.4 and the phase appears to also be constant at a value of $\pm \pi$, which translates to a value of -0.4.
- The F_{22} element has a high gain at low frequencies and then it decays towards 1 at higher frequencies. The gain presents modulations as well.

a) The Rankine-Hugoniot relations

Flame models can be conveniently modelled with the Rankine Hugoniot relations [1], which are derived from conservation of mass, momentum, and energy fluxes across a heat source. Since our combustor operates with a low Mach number, we can neglect terms of higher orders in the Mach number, then the conditions for pressure and velocity become:

$$\hat{p}_d = \hat{p}_u - \left(\frac{\bar{T}_d}{\bar{T}_u} - 1\right) \bar{\rho}_u \bar{u}_u^2 \left(\frac{\hat{u}_u}{\bar{u}_u} + \frac{\hat{Q}}{\bar{Q}}\right)$$
 Eq. (7a)

$$\hat{u}_d = \hat{u}_u + \left(\frac{\bar{T}_d}{\bar{T}_u} - 1\right) \bar{u}_u \left(\frac{\hat{Q}}{\bar{Q}} - \frac{\hat{p}_u}{\bar{p}_u}\right)$$
 Eq. (7b)

[1] Schuermans, BBH, Polifke, W, & Paschereit, CO. "Modeling Transfer Matrices of Premixed Flames and Comparison With Experimental Results." *Proceedings of the ASME 1999* Indianapolis, Indiana, USA. June 7–10, 1999. V002T02A024. ASME. https://doi.org/10.1115/99-GT-132

Substituting the heat release \hat{Q}/\bar{Q} with the expression given in Eq. (1) and arranging it in matrix form we obtain:

$$\begin{bmatrix} \frac{\hat{p}_d}{\bar{\rho}_d \bar{c}_d} \\ \hat{u}_d \end{bmatrix} = \begin{bmatrix} \frac{\bar{\rho}_u \bar{c}_u}{\bar{\rho}_d \bar{c}_d} & \frac{\bar{\rho}_u \bar{u}_u}{\bar{\rho}_d \bar{c}_d} \left(1 - \frac{\bar{T}_d}{\bar{T}_u} \right) (1 + \text{FTF}) \\ \left(1 - \frac{\bar{T}_d}{\bar{T}_u} \right) \gamma \bar{M}_u & 1 + \left(\frac{\bar{T}_d}{\bar{T}_u} - 1 \right) \text{FTF} \end{bmatrix} \begin{bmatrix} \frac{\hat{p}_u}{\bar{\rho}_u \bar{c}_u} \\ \hat{u}_u \end{bmatrix} \quad \text{Eq. (8)}$$

The matrix given in Eq. (8) reveals some important aspects. So let's compute the mean values and compare.

Task

• Finish the function fn_FTM and compare the values obtained in the FTM vs those via the Rankine Hugoniot conditions.

```
Qbar = 100000; %(W)
Mean = fn_mean_flow(u1,T1,p2,Qbar,Geom);
[F11,F21,FTF] = fn_FTM(Mean,F22);
F11
```


F11 = 2.4408

```
F21
```

F21 = -0.3927

If done accurately F_{11} should be close to 2.45 and element F_{21} should be close to -0.4. These are the same values we discussed above. In the last step we will compare the FTF obtained via the FTM and the FTF of the analytic model of the flame.

```
figure
fn_plot_FTF(freqs,FTF,Mean,Geom)
```

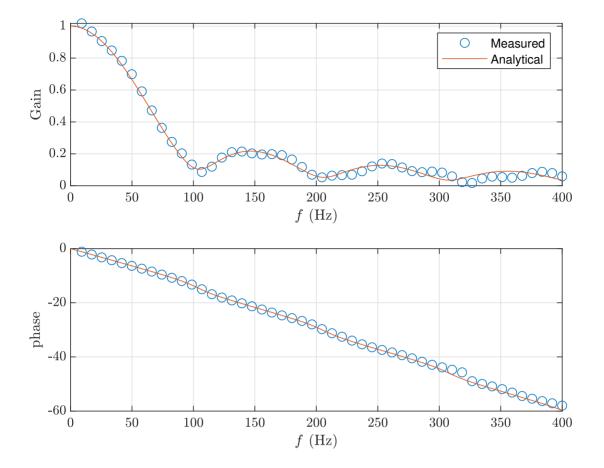

If done properly the two curves should lie on top of each other! (Except for the discrepancies observed at high frequencies due to spatial discretization of the flame.)

NB. It is worth asking if we can compute the FTF with the F_{12} element. In theory we can, however the Rankine-Hugoniot conditions are derived for a system with constant area. The way the model is built both the area expansion and heat source occur at the same position. Then, when we pre-multiply by the inverse of the burner transfer matrix as we did above, the area dependency is not completely removed from the F_{12} element. The area dependency was only removed from the other terms. If we consider the area expansion we obtain to leading order in the Mach number:

$$F_{12} = M_d \left(2 - \frac{A_u}{A_d} \frac{T_d}{T_u} \right) + \frac{A_u}{A_d} \left(2M_u \left(\frac{A_u}{A_d} - 1 \right) - M_d \right) \left(1 + \text{FTF} \left(\frac{T_d}{T_u} - 1 \right) \right)$$


If we consider that $A_u/A_d = 1$ we recover the original formulation.

b) Effects of Temperature

From Eq. (8) we observed that temperature can modify substantially our Flame Transfer Matrix. For this purpose, we will re-run the entire simulation but with a lower temperature. This can be achieved by lowering the equivalence ratios to leaner values. In our model this will be achieved by using $\bar{Q} = 50$ kW. This time we will skip the simulation and just plot the new data over the previous data set.

```
figure
[freqs,F22] = fn_plot_BTM([], [], [], [],'FTM_2');
fn_plot_BTM([], [], [], [],'FTM_1');
```

```
subplot(4,2,1)
legend('Q = 50 kW','Q = 100 kW')
```

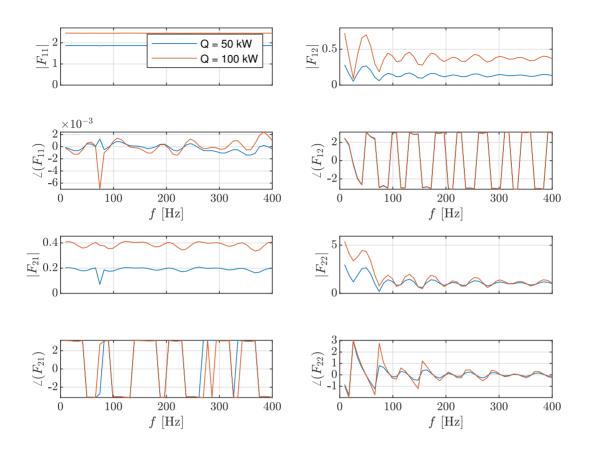

Now let's compare the values obtained with those from the Rankine Hugoniot conditions:

```
Qbar = 50000; % (W)
Mean = fn_mean_flow(u1,T1,p2,Qbar,Geom);
[F11,F21,FTF_50] = fn_FTM(Mean,F22);
F11
```


F11 = 1.8612

F21

F21 = -0.1979

- How do these values compare to those observed in the FTM?
- How about the FTF do you expect to see any changes?

```
figure
fn_plot_FTF(freqs,FTF_50,Mean,Geom)
subplot(2,1,1)
hold on
plot(freqs,abs(FTF),'x')
legend('Measured Q = 50 kW','Analytical 50 kW', 'Measured Q = 100 kW')
subplot(2,1,2)
hold on
```

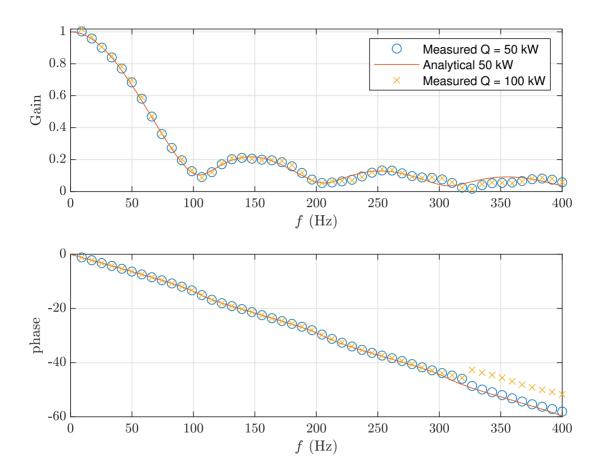

You should be able to see that the difference is barely noticeable**. The reason behind this is that the FTF for this "V" flame has a very weak dependence on the mean flow. Its FTF is given by:

$$\mathrm{FTF}\left(\Omega\right) = \frac{2}{i\Omega\left(a+b\right)} \, \left(a-b \, \exp\left(-i \, \Omega\right) + \frac{(b-a)}{i \, \Omega} \left(1 - \exp\left(i \, \Omega\right)\right)\right)$$

where

$$\Omega = \frac{\omega \left(b - a\right)}{S_u \sqrt{1 - \left(\frac{S_u}{\bar{u}}\right)^2}}$$

Here S_u is the laminar flame speed, a and b are the flame holder radius and the duct radius. Usually $S_u \ll \bar{u}$ (as in our case) so the denominator in the last equation is almost equal to S_u , therefore the mean flow dependency is very weak.

** The jump in phase at about 320 Hz, is because it was not unwrapped properly.