# Chapter 16 – FreeRTOS Table of Contents

Section 1: Synopsis	5
Multi tasking	5
Features	5
Design Philosophy	5
Section 2: RTOS Fundamentals	<del>6</del>
Multitasking	<i>6</i>
Multitasking Vs Concurrency	<i>6</i>
Scheduling	7
Context Switching	8
Real Time Applications	9
Real Time Scheduling	11
Section 3: RTOS Implementation	13
Detailed Description	13
C Development Tools	13
The RTOS Tick	13
GCC Signal Attribute	14
GCC Naked Attribute	16
FreeRTOS Tick Code	17
The AVR Context	18
Restoring the Context	20
Putting It All Together	21
RTOS Context Switch - Step 1	22
Prior to the RTOS tick interrupt	22
RTOS Context Switch - Step 2	22
The RTOS tick interrupt occurs	22
RTOS Context Switch - Step 3	23
The RTOS tick interrupt executes	23
RTOS Context Switch - Step 4	24
Incrementing the Tick Count	24
RTOS Context Switch - Step 5	25
The TaskB stack pointer is retrieved	25
RTOS Context Switch - Step 6	25
Restore the TaskB context	25
RTOS Context Switch - Step 7	26
The RTOS tick exits	
Tasks and Co-routines	27
Characteristics of a 'Task'	28
Characteristics of a 'Co-routine'	28
Tasks	29
Task States	29
Task Priorities	31

Implementing a Task	32
Task Creation Macros	32
The Idle Task	33
The Idle Task Hook	33
Demo Application Examples	
RTOS Kernel Utilities	
Queue Implementation	
Semaphore Implementation	
Tick Hook Function	
Trace Utility	
Source Organization	
Basic directory structure	
· · · · · · · · · · · · · · · · · · ·	
RTOS source code directory list [the Source directory]	
Demo application source code directory list [the Demo directory]	
Creating your own application	
The complete directory tree	
Naming Conventions	
Data Types	
Local Operator Interface [keypad and LCD]	
LED	
RS232 PDA Interface	52
TCP/IP Interface	52
Application components	52
More Info	53
RTOS Demo Introduction	53
Demo Project Files	56
blockQ.c	56
comtest.c	
crflash.c	
crhook.c	
death.c	
dynamic.c	
flash.c	
flop.c	
integer.c	
pollQ.c	
print.c	
semtest.c	
Embedded TCP/IP Examples	
API	
Upgrading FreeRTOS to V4.x.x	
Upgrading V4.0.5 to V4.1.0	
Upgrading V4.2.1 to V4.3.0	
Upgrading from V4.4.0 to V4.5.0	
API Usage	
General Information	65

Task API	65
Co-Routine API	65
Configuration	66
Customization	
'config' Parameters	67
configUSE_PREEMPTION	
configUSE_IDLE_HOOK	67
configUSE_TICK_HOOK	67
configCPU_CLOCK_HZ	67
configTICK_RATE_HZ	67
configMAX_PRIORITIES	67
configMINIMAL_STACK_SIZE	
configTOTAL_HEAP_SIZE	68
configMAX_TASK_NAME_LEN	68
configUSE_TRACE_FACILITY	68
configUSE_16_BIT_TICKS	68
configIDLE_SHOULD_YIELD	
configUSE_USE_MUTEXES	
configUSE_CO_ROUTINES	
configMAX_CO_ROUTINE_PRIORITIES	70
configKERNEL_INTERRUPT_PRIORITY	70
INCLUDE Parameters	
Memory Management	
Schemes included in the source code download	
Scheme 1 - heap_1.c	
Scheme 2 - heap_2.c	
Scheme 3 - heap_3.c	
Task Creation	
Detailed Description	
xTaskHandle	
xTaskCreate	
vTaskDelete	
Task Control.	
vTaskDelay	
vTaskDelayUntil	
uxTaskPriorityGet	
vTaskPrioritySet	
vTaskSuspend	
vTaskResume	
vTaskResumeFromISR	
Kernel Control	
Detailed Description	
taskYIELD	
taskENTER_CRITICAL	
taskEXIT_CRITICAL	
taskDISABLE INTERRUPTS	83

taskENABLE_INTERRUPTS	
vTaskStartScheduler	
vTaskEndScheduler	84
vTaskSuspendAll	85
xTaskResumeAll	86
Task Utilities	87
xTaskGetCurrentTaskHandle	87
xTaskGetTickCount	87
xTaskGetSchedulerState	88
uxTaskGetNumberOfTasks	88
vTaskList	88
vTaskStartTrace	88
ulTaskEndTrace	89
Queue Management	89
Detailed Description	89
uxQueueMessagesWaiting	89
vQueueDelete	89
xQueueCreate	90
xQueueSend	
xQueueSendToBack	
xQueueSendToFront	
xQueueReceive	96
xQueuePeek	
xQueueSendFromISR	
xQueueSendToBackFromISR	
xQueueSendToFrontFromISR	
xQueueReceiveFromISR	
Semaphores	106
SemaphoreCreateBinary	
xSemaphoreCreateMutex	107
xSemaphoreTake	108
xSemaphoreGive	
xSemaphoreGiveFromISR	111
Co-routine specific	112
xCoRoutineCreate	112
xCoRoutineHandle	. 114
xCoRoutineCreate	
xCoRoutineHandle	
crDELAY	
crQUEUE_SEND	
crQUEUE_RECEIVE	
crQUEUE_SEND_FROM_ISR	
crQUEUE_RECEIVE_FROM_ISR	
vCoRoutineSchedule	
License Details	
Options	125

License feature comparison	125
Commercial Licensing.	
Modified GPL (Open Source) Licensing	126
GPL Exception	128

### **Section 1: Synopsis**

### Multi tasking

See Section 1 of "How FreeRTOS.org works" for an introduction to multi tasking and RTOS concepts.

#### **Features**

The following standard features are provided.

- Choice of RTOS scheduling policy
  - 1. Pre-emptive:
    - Always runs the highest available task. Tasks of identical priority share CPU time (fully pre-emptive with round robin time slicing).
  - 2. Cooperative:
    - Context switches only occur if a task blocks, or explicitly calls taskYIELD().
- Co-routines (light weight tasks that utilise very little RAM).
- Message queues
- Semaphores [via macros]
- Trace visualisation ability (requires more RAM)
- Majority of source code common to all supported development tools
- Wide range of ports and examples

Additional features can quickly and easily be added.

### Design Philosophy

FreeRTOS is designed to be:

- Simple
- Portable
- Concise

Nearly all the code is written in C, with only a few assembler functions where completely unavoidable. This does not result in tightly optimized code, but does mean the code is readable, maintainable and easy to port. If performance were

an issue it could easily be improved at the cost of portability. This will not be necessary for most applications.

The RTOS kernel uses multiple priority lists. This provides maximum application design flexibility. Unlike bitmap kernels any number of tasks can share the same priority.

### **Section 2: RTOS Fundamentals**

### Multitasking

The **kernel** is the core component within an operating system. Operating systems such as Linux employ kernels that allow users access to the computer seemingly simultaneously. Multiple users can execute multiple programs apparently concurrently.


Each executing program is a **task** under control of the operating system. If an operating system can execute multiple tasks in this manner it is said to be **multitasking**.

The use of a multitasking operating system can simplify the design of what would otherwise be a complex software application:

- The multitasking and inter-task communications features of the operating system allow the complex application to be partitioned into a set of smaller and more manageable tasks.
- The partitioning can result in easier software testing, work breakdown within teams, and code reuse.
- Complex timing and sequencing details can be removed from the application code and become the responsibility of the operating system.

### Multitasking Vs Concurrency

A conventional processor can only execute a single task at a time - but by rapidly switching between tasks a multitasking operating system can make it **appear** as if each task is executing concurrently. This is depicted by the diagram below which shows the execution pattern of three tasks with respect to time. The task names are color coded and written down the left hand. Time moves from left to right, with the colored lines showing which task is executing at any particular time. The upper diagram demonstrates the perceived concurrent execution pattern, and the lower the actual multitasking execution pattern.

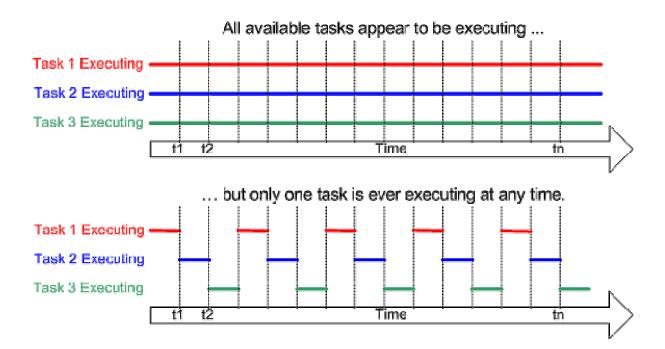


### Scheduling

The **scheduler** is the part of the kernel responsible for deciding which task should be executing at any particular time. The kernel can suspend and later resume a task many times during the task lifetime.

The **scheduling policy** is the algorithm used by the scheduler to decide which task to execute at any point in time. The policy of a (non real time) multi user system will most likely allow each task a "fair" proportion of processor time. The policy used in real time / embedded systems is described later.

In addition to being suspended involuntarily by the RTOS kernel a task can choose to suspend itself. It will do this if it either wants to delay (**sleep**) for a fixed period, or wait (**block**) for a resource to become available (eg a serial port) or an event to occur (eg a key press). A blocked or sleeping task is not able to execute, and will not be allocated any processing time.

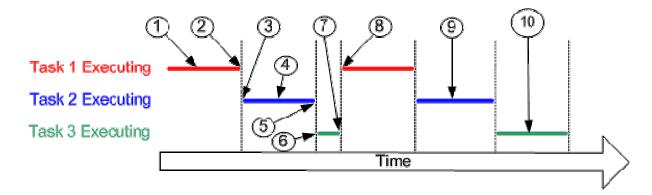


Referring to the numbers in the diagram above:

- At (1) task 1 is executing.
- At (2) the kernel suspends task 1 ...
- ... and at (3) resumes task 2.
- While task 2 is executing (4), it locks a processor peripheral for it's own exclusive access.
- At (5) the kernel suspends task 2 ...
- ... and at (6) resumes task 3.
- Task 3 tries to access the same processor peripheral, finding it locked task 3 cannot continue so suspends itself at (7).
- At (8) the kernel resumes task 1.
- Etc.
- The next time task 2 is executing (9) it finishes with the processor peripheral and unlocks it.
- The next time task 3 is executing (10) it finds it can now access the processor peripheral and this time executes until suspended by the kernel.

### Context Switching

As a task executes it utilizes the processor / microcontroller registers and accesses RAM and ROM just as any other program. These resources together (the processor registers, stack, etc.) comprise the task execution **context**.

A task is a sequential piece of code - it does not know when it is going to get suspended or resumed by the kernel and does not even know when this has happened. Consider the example of a task being suspended immediately before executing an instruction that sums the values contained within two processor registers.

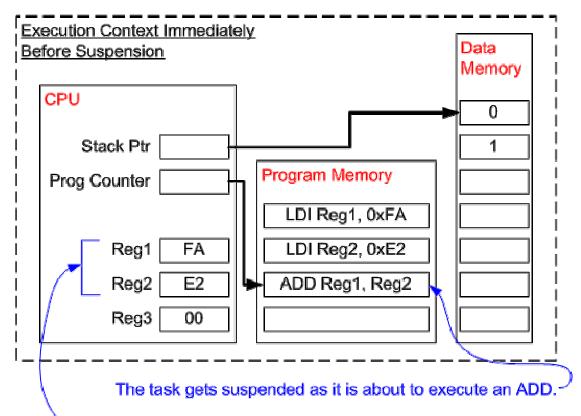

The previous instructions have already set the registers used by the ADD. When the task is resumed the ADD instruction will be the first instruction to execute. The task will not know if a different task modified Reg1 or Reg2 in the interim.

While the task is suspended other tasks will execute and may modify the processor register values. Upon resumption the task will not know that the processor registers have been altered - if it used the modified values the summation would result in an incorrect value.

To prevent this type of error it is essential that upon resumption a task has a context identical to that immediately prior to its suspension. The operating system kernel is responsible for ensuring this is the case - and does so by saving the context of a task as it is suspended. When the task is resumed its saved context is restored by the operating system kernel prior to its execution. The process of saving the context of a task being suspended and restoring the context of a task being resumed is called **context switching**.

### Real Time Applications

Real time operating systems (**RTOS**'s) achieve multitasking using these same principals - but their objectives are very different to those of non real time systems. The different objective is reflected in the scheduling policy. Real time / embedded systems are designed to provide a timely response to real world events. Events occurring in the real world can have deadlines before which the

real time / embedded system must respond and the RTOS scheduling policy must ensure these deadlines are met.

To achieve this objective the software engineer must first assign a priority to each task. The scheduling policy of the RTOS is then to simply ensure that the highest priority task that is able to execute is the task given processing time. This may require sharing processing time "fairly" between tasks of equal priority if they are ready to run simultaneously.

### Example:

The most basic example of this is a real time system that incorporates a keypad and LCD. A user must get visual feedback of each key press within a reasonable period - if the user cannot see that the key press has been accepted within this period the software product will at best be awkward to use. If the longest acceptable period was 100ms - any response between 0 and 100ms would be acceptable. This functionality could be implemented as an autonomous task with the following structure:

```
void vKeyHandlerTask( void *pvParameters )
{
    // Key handling is a continuous process and as such the task
    // is implemented using an infinite loop (as most real time
    // tasks are).
    for( ;; )
    {
        [Suspend waiting for a key press]
        [Process the key press]
    }
}
```

Now assume the real time system is also performing a control function that relies on a digitally filtered input. The input must be sampled, filtered and the control cycle executed every 2ms. For correct operation of the filter the temporal regularity of the sample must be accurate to 0.5ms. This functionality could be implemented as an autonomous task with the following structure:

```
void vControlTask( void *pvParameters )
{
    for( ;; )
    {
        [Suspend waiting for 2ms since the start of the previous cycle]
        [Sample the input]
        [Filter the sampled input]
        [Perform control algorithm]
        [Output result]
    }
}
```


The software engineer must assign the control task the highest priority as:

- 1. The deadline for the control task is stricter than that of the key handling task.
- 2. The consequence of a missed deadline is greater for the control task than for the key handler task.

The next page demonstrates how these tasks would be scheduled by a real time operating system.

### Real Time Scheduling

The diagram below demonstrates how the tasks defined on the previous page would be scheduled by a real time operating system. The RTOS has itself created a task - the **idle** task - which will execute only when there are no other tasks able to do so. The RTOS idle task is always in a state where it is able to execute.

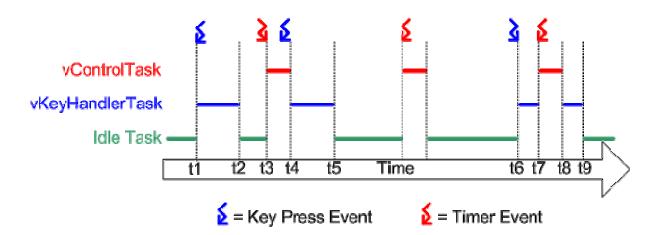

Referring to the diagram above:

- At the start neither of our two tasks are able to run vControlTask is waiting for the correct time to start a new control cycle and vKeyHandlerTask is waiting for a key to be pressed. Processor time is given to the RTOS idle task.
- At time t1, a key press occurs. vKeyHandlerTask is now able to execute it has a higher priority than the RTOS idle task so is given processor time.
- At time t2 vKeyHandlerTask has completed processing the key and updating the LCD. It cannot continue until another key has been pressed so suspends itself and the RTOS idle task is again resumed.
- At time t3 a timer event indicates that it is time to perform the next control
  cycle. vControlTask can now execute and as the highest priority task is
  scheduled processor time immediately.

- Between time t3 and t4, while vControlTask is still executing, a key press
  occurs. vKeyHandlerTask is now able to execute, but as it has a lower
  priority than vControlTask it is not scheduled any processor time.
- At t4 vControlTask completes processing the control cycle and cannot restart until the next timer event - it suspends itself. vKeyHandlerTask is now the task with the highest priority that is able to run so is scheduled processor time in order to process the previous key press.
- At t5 the key press has been processed, and vKeyHandlerTask suspends itself to wait for the next key event. Again neither of our tasks are able to execute and the RTOS idle task is scheduled processor time.
- Between t5 and t6 a timer event is processed, but no further key presses occur.
- The next key press occurs at time t6, but before vKeyHandlerTask has completed processing the key a timer event occurs. Now both tasks are able to execute. As vControlTask has the higher priority vKeyHandlerTask is suspended before it has completed processing the key, and vControlTask is scheduled processor time.
- At t8 vControlTask completes processing the control cycle and suspends itself to wait for the next. vKeyHandlerTask is again the highest priority task that is able to run so is scheduled processor time so the key press processing can be completed.

# **Section 3: RTOS Implementation**

### **Detailed Description**

This section describes the RTOS context switch source code from the bottom up. The FreeRTOS Atmel AVR microcontroller port is used as an example. The section ends with a detailed step by step look at one complete context switch.

# **C** Development Tools

A goal of FreeRTOS is that it is simple and easy to understand. To this end the majority of the RTOS source code is written in C, not assembler.


The example presented here uses the <u>WinAVR development tools</u>. WinAVR is a free Windows to AVR cross compiler based on GCC.

### The RTOS Tick

When sleeping, a task will specify a time after which it requires 'waking'. When blocking, a task can specify a maximum time it wishes to wait.

The FreeRTOS real time kernel measures time using a **tick** count variable. A timer interrupt (the RTOS **tick interrupt**) increments the tick count with strict temporal accuracy - allowing the real time kernel to measure time to a resolution of the chosen timer interrupt frequency.

Each time the tick count is incremented the real time kernel must check to see if it is now time to unblock or wake a task. It is possible that a task woken or unblocked during the tick ISR will have a priority higher than that of the interrupted task. If this is the case the tick ISR should return to the newly woken/unblocked task - effectively interrupting one task but returning to another. This is depicted below:

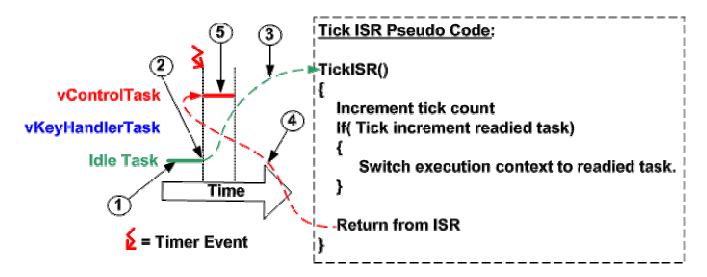

Referring to the numbers in the diagram above:

- At (1) the RTOS idle task is executing.
- At (2) the RTOS tick occurs, and control transfers to the tick ISR (3).
- The RTOS tick ISR makes vControlTask ready to run, and as vControlTask has a higher priority than the RTOS idle task, switches the context to that of vControlTask.
- As the execution context is now that of vControlTask, exiting the ISR (4) returns control to vControlTask, which starts executing (5).

A context switch occurring in this way is said to be **Preemptive**, as the interrupted task is preempted without suspending itself voluntarily.

The AVR port of FreeRTOS uses a compare match event on timer 1 to generate the RTOS tick. The following pages describe how the RTOS tick ISR is implemented using the WinAVR development tools

# **GCC Signal Attribute**

The <u>GCC development tools</u> allow interrupts to be written in C. A compare match event on the AVR timer 1 peripheral can be written using the following syntax.

```
void SIG_OUTPUT_COMPARE1A( void ) __attribute__ ( ( signal ) );
void SIG_OUTPUT_COMPARE1A( void )
{
    /* ISR C code for RTOS tick. */
    vPortYieldFromTick();
}
```

The '\_\_attribute\_\_ ( ( signal ) )' directive on the function prototype informs the

compiler that the function is an ISR and results in two important changes in the compiler output.

- The 'signal' attribute ensures that every processor register that gets modified during the ISR is restored to its original value when the ISR exits. This is required as the compiler cannot make any assumptions as to when the interrupt will execute, and therefore cannot optimize which processor registers require saving and which don't.
- 2. The 'signal' attribute also forces a 'return from interrupt' instruction (RETI) to be used in place of the 'return' instruction (RET) that would otherwise be used. The AVR microcontroller disables interrupts upon entering an ISR and the RETI instruction is required to re-enable them on exiting.

Code output by the compiler:

```
;void SIG_OUTPUT_COMPARE1A( void )
   ; CODE GENERATED BY THE COMPILER TO SAVE
   ; THE REGISTERS THAT GET ALTERED BY THE
   ; APPLICATION CODE DURING THE ISR.
   PUSH R1
   PUSH R0
   IN
         R0,0x3F
   PUSH R0
   CLR
          R1
   PUSH
         R18
   PUSH
         R19
   PUSH R20
   PUSH R21
   PUSH R22
   PUSH R23
   PUSH R24
   PUSH R25
   PUSH
          R26
   PUSH
          R27
   PUSH R30
   PUSH R31
   ; CODE GENERATED BY THE COMPILER FROM THE
   ; APPLICATION C CODE.
   ; vPortYieldFromTick();
   CALL 0x0000029B
                       ;Call subroutine
; }
   ; CODE GENERATED BY THE COMPILER TO
   ; RESTORE THE REGISTERS PREVIOUSLY
   ; SAVED.
   POP
         R31
   POP
         R30
   POP
         R27
   POP
         R26
   POP
          R25
   POP
          R24
   POP
          R23
   POP R22
POP R21
```

```
POP R20
POP R19
POP R18
POP R0
OUT 0x3F,R0
POP R0
POP R1
RETI:
```

### **GCC Naked Attribute**

The previous section showed how the 'signal' attribute can be used to write an ISR in C and how this results in part of the execution context being automatically saved (only the processor registers modified by the ISR get saved). Performing a context switch however requires the entire context to be saved.

The application code could explicitly save all the processor registers on entering the ISR, but doing so would result in some processor registers being saved twice - once by the compiler generated code and then again by the application code. This is undesirable and can be avoided by using the 'naked' attribute in addition to the 'signal' attribute.

```
void SIG_OUTPUT_COMPARE1A( void ) __attribute__ ( ( signal, naked ) );
void SIG_OUTPUT_COMPARE1A( void )
{
    /* ISR C code for RTOS tick. */
    vPortYieldFromTick();
}
```

The 'naked' attribute prevents the compiler generating any function entry or exit code. Now compiling the code results in much simpler output:

When the 'naked' attribute is used the compiler does not generate *any* function entry or exit code so this must now be added explicitly. The macros

portSAVE\_CONTEXT() and portRESTORE\_CONTEXT() respectively save and restore the entire execution context.:

```
void SIG_OUTPUT_COMPARE1A( void ) __attribute__ ( ( signal, naked ) );
void SIG_OUTPUT_COMPARE1A( void )
{
    /* Macro that explicitly saves the execution
    context. */
    portSAVE_CONTEXT();
    /* ISR C code for RTOS tick. */
    vPortYieldFromTick();
    /* Macro that explicitly restores the
    execution context. */
    portRESTORE_CONTEXT();
    /* The return from interrupt call must also
    be explicitly added. */
    asm volatile ( "reti" );
}
```

The 'naked' attribute gives the application code complete control over when and how the AVR context is saved. If the application code saves the entire context on entering the ISR there is no need to save it again before performing a context switch so none of the processor registers get saved twice.

### FreeRTOS Tick Code

The actual source code used by the FreeRTOS AVR port is slightly different to the examples shown on the previous pages. vPortYieldFromTick() is itself implemented as a 'naked' function, and the context is saved and restored within vPortYieldFromTick(). It is done this way due to the implementation of non-preemptive context switches (where a task blocks itself) - which are not described here.


The FreeRTOS implementation of the RTOS tick is therefore (see the comments in the source code snippets for further details):

```
is saved. */
portSAVE CONTEXT();
/* Increment the tick count and check to see
if the new tick value has caused a delay
period to expire. This function call can
cause a task to become ready to run. */
vTaskIncrementTick();
/* See if a context switch is required.
Switch to the context of a task made ready
to run by vTaskIncrementTick() if it has a
priority higher than the interrupted task. */
vTaskSwitchContext();
/* Restore the context. If a context switch
has occurred this will restore the context of
the task being resumed. */
portRESTORE_CONTEXT();
/* Return from this naked function. */
asm volatile ( "ret" );
.____*/
```

### The AVR Context

A context switch requires the entire execution context to be saved. On the AVR microcontroller the context consists of:

- 32 general purpose processor registers. The gcc development tools assume register R1 is set to zero.
- Status register. The value of the status register affects instruction execution, and must be be preserved across context switches.
- Program counter. Upon resumption, a task must continue execution from the instruction that was about to be executed immediately prior to its suspension.
- The two stack pointer registers.

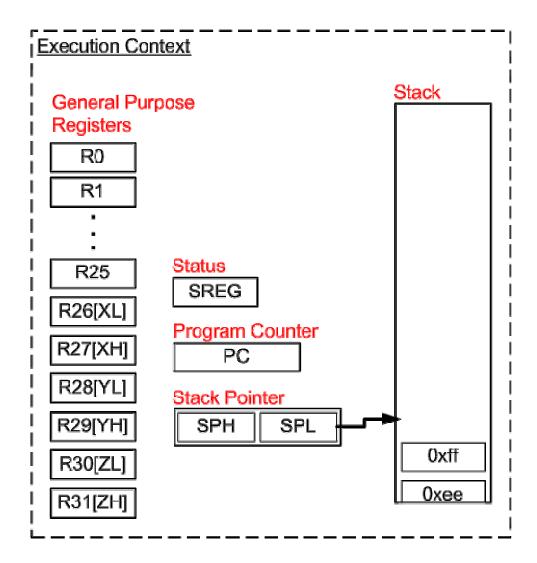

Each real time task has it's own stack memory area so the context can be saved by simply pushing processor registers onto the task stack. Saving the AVR context is one place where assembly code is unavoidable.

portSAVE\_CONTEXT() is implemented as a macro, the source code for which is given below:

```
#define portSAVE_CONTEXT()
asm volatile (
  "push r0
                                       \n\t" \ (1)
                                       \n\t" \ (2)
  "in r0, ___SREG___
                                       \n\t" \ (3)
  "cli
                                       \n\t" \ (4)
  "push r0
                                       \n\t" \ (5)
\n\t" \ (6)
\n\t" \ (7)
\n\t" \
  "push r1
  "clr r1
"push r2
"push r3
"push r4
                                       \n\t" \
                                       \n\t" \
  "push r5
```

### Referring to the source code above:

- Processor register R0 is saved first as it is used when the status register is saved, and must be saved with its original value.
- The status register is moved into R0 (2) so it can be saved onto the stack (4).
- Processor interrupts are disabled (3). If portSAVE\_CONTEXT() was only
  called from within an ISR there would be no need to explicitly disable
  interrupts as the AVR will have already done so. As the
  portSAVE\_CONTEXT() macro is also used outside of interrupt service
  routines (when a task suspends itself) interrupts must be explicitly cleared
  as early as possible.
- The code generated by the compiler from the ISR C source code assumes R1 is set to zero. The original value of R1 is saved (5) before R1 is cleared (6).
- Between (7) and (8) all remaining processor registers are saved in numerical order.
- The stack of the task being suspended now contains a copy of the tasks execution context. The kernel stores the tasks stack pointer so the context can be retrieved and restored when the task is resumed. The X processor register is loaded with the address to which the stack pointer is to be saved (8 and 9).
- The stack pointer is saved, first the low byte (10 and 11), then the high nibble (12 and 13).

# **Restoring the Context**

portRESTORE\_CONTEXT() is the reverse of portSAVE\_CONTEXT(). The context of the task being resumed was previously stored in the tasks stack. The real time kernel retrieves the stack pointer for the task then POP's the context back into the correct processor registers.

#### Referring to the code above:

- pxCurrentTCB holds the address from where the tasks stack pointer can be retrieved. This is loaded into the X register (1 and 2).
- The stack pointer for the task being resumed is loaded into the AVR stack pointer, first the low byte (3), then the high nibble (4).
- The processor registers are then popped from the stack in reverse numerical order, down to R1.
- The status register stored on the stack between registers R1 and R0, so is restored (6) before R0 (7).

# **Putting It All Together**

The final part of section 2 shows how these building blocks and source code modules are used to achieve an RTOS context switch on the AVR microcontroller. The example demonstrates in seven steps the process of switching from a lower priority task, called TaskA, to a higher priority task, called TaskB.


The source code is compatible with the WinAVR C development tools.

# RTOS Context Switch - Step 1

### Prior to the RTOS tick interrupt

This example starts with TaskA executing. TaskB has previously been suspended so its context has already been stored on the TaskB stack.

TaskA has the context demonstrated by the diagram below.

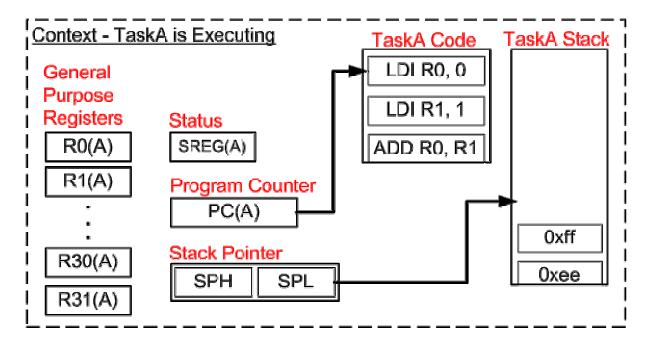


The (A) label within each register shows that the register contains the correct value for the context of task A.

# **RTOS Context Switch - Step 2**

### The RTOS tick interrupt occurs

The RTOS tick occurs just as TaskA is about to execute an LDI instruction. When the interrupt occurs the AVR microcontroller automatically places the current program counter (PC) onto the stack before jumping to the start of the RTOS tick ISR.

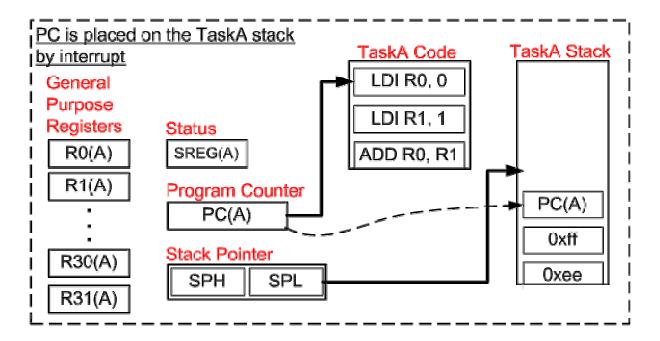

# **RTOS Context Switch - Step 3**


### The RTOS tick interrupt executes

The ISR source code is given below. The comments have been removed to ease reading, but can be viewed on a previous page.

SIG\_OUTPUT\_COMPARE1A() is a naked function, so the first instruction is a call to vPortYieldFromTick(). vPortYieldFromTick() is also a naked function so the AVR execution context is saved explicitly by a call to portSAVE\_CONTEXT().

portSAVE\_CONTEXT() pushes the entire AVR execution context onto the stack of TaskA, resulting in the stack illustrated below. The stack pointer for TaskA now points to the top of it's own context. portSAVE\_CONTEXT() completes by storing

a copy of the stack pointer. The real time kernel already has copy of the TaskB stack pointer - taken the last time TaskB was suspended.

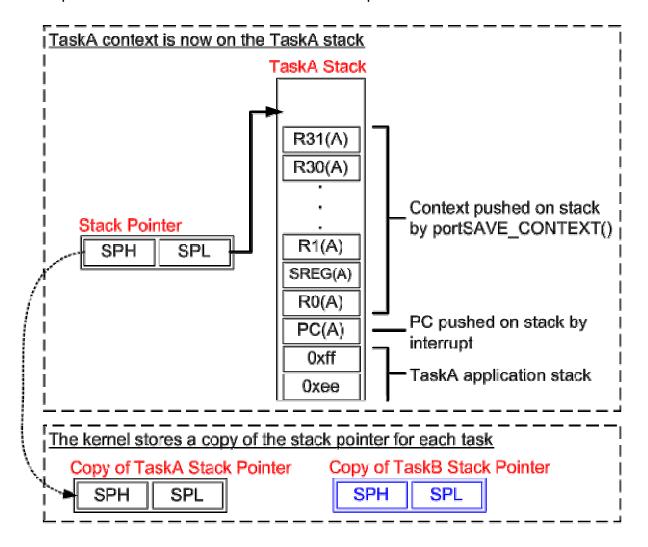

# **RTOS Context Switch - Step 4**


### Incrementing the Tick Count

vTaskIncrementTick() executes after the TaskA context has been saved. For the purposes of this example assume that incrementing the tick count has caused TaskB to become ready to run. TaskB has a higher priority than TaskA so vTaskSwitchContext() selects TaskB as the task to be given processing time when the ISR completes.

# **RTOS Context Switch - Step 5**

### The TaskB stack pointer is retrieved


The TaskB context must be restored. The first thing portRESTORE\_CONTEXT does is retrieve the TaskB stack pointer from the copy taken when TaskB was suspended. The TaskB stack pointer is loaded into the processor stack pointer, so now the AVR stack points to the top of the TaskB context.

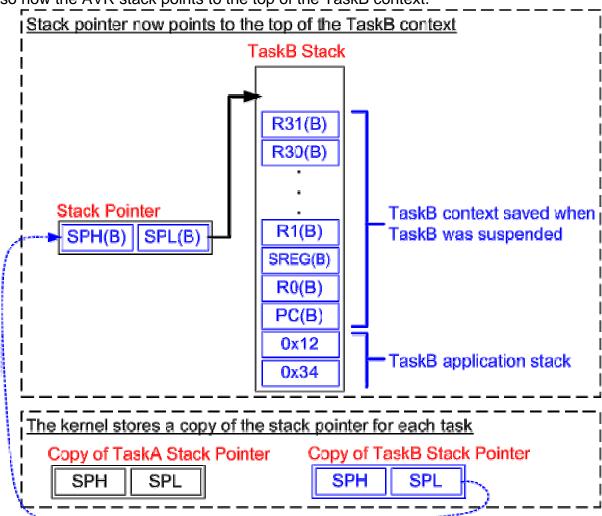

# **RTOS Context Switch - Step 6**

### Restore the TaskB context

portRESTORE\_CONTEXT() completes by restoring the TaskB context from its stack into the appropriate processor registers.

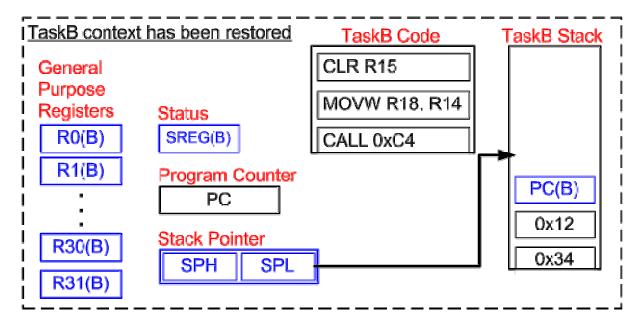


Only the program counter remains on the stack.

# **RTOS Context Switch - Step 7**

#### The RTOS tick exits

vPortYieldFromTick() returns to SIG\_OUTPUT\_COMPARE1A() where the final instruction is a return from interrupt (RETI). A RETI instruction assumes the next value on the stack is a return address placed onto the stack when the interrupt occurred.

When the RTOS tick interrupt started the AVR automatically placed the TaskA return address onto the stack - the address of the next instruction to execute in **TaskA**. The ISR altered the stack pointer so it now points to the **TaskB** stack. Therefore the return address POP'ed from the stack by the RETI instruction is actually the address of the instruction **TaskB** was going to execute immediately before it was suspended.

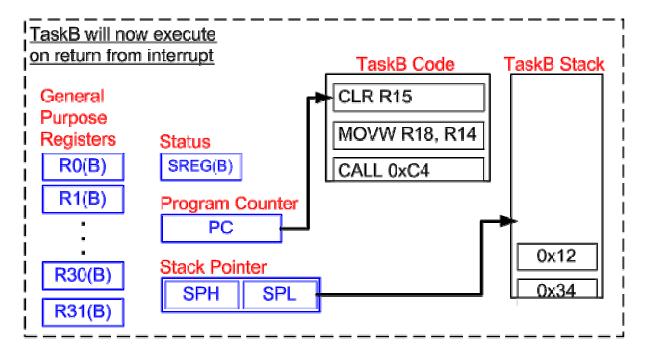

The RTOS tick interrupt interrupted **TaskA**, but is returning to **TaskB** - the context switch is complete!

If you would like more information, take a look at the <u>FreeRTOS ColdFire</u> <u>Implementation Report</u>. This was written by the Motorola ColdFire port authors, and details both the ColdFire source code and the development process undertaken in producing the port.

### **Tasks and Co-routines**

Co-routine functionality is new to FreeRTOS V4.0.0 and will continue to be developed through subsequent releases. FreeRTOS V4.0.0 is basically backward compatible with earlier releases so the use of co-routines within an application is completely optional.

The <u>Tasks</u> and <u>Co-Routine</u> documentation pages provide information to allow judgment as to when co-routine use may and may not be appropriate. Below is a brief summary. Note that an application can be designed using just tasks, just co-routines, or a mixture of both - however tasks and co-routines use different API functions and therefore a queue (or semaphore) cannot be used to pass data from a task to a co-routine or visa versa.

Page 27 of 128

### Characteristics of a 'Task'

FreeRTOS versions prior to V4.0.0 allow a real time application to be structured as a set of autonomous 'tasks' only. This is the traditional model used by an RTOS scheduler.

In brief: A real time application that uses an RTOS can be structured as a set of independent tasks. Each task executes within its own context with no coincidental dependency on other tasks within the system or the scheduler itself. Only one task within the application can be executing at any point in time and the real time scheduler is responsible for deciding which task this should be. The scheduler may therefore repeatedly start and stop each task (swap each task in and out) as the application executes. As a task has no knowledge of the scheduler activity it is the responsibility of the real time scheduler to ensure that the processor context (register values, stack contents, etc) when a task is swapped in is exactly that as when the same task was swapped out. To achieve this each task is provided with its own stack. When the task is swapped out the execution context is saved to the stack of that task so it can also be exactly restored when the same task is later swapped back in. See the <a href="How FreeRTOS">How FreeRTOS</a> Works section for more information.

### **Task Summary**



Simple.



No restrictions on use.



Supports full preemption.



Fully prioritised.



Each task maintains its own stack resulting in higher RAM usage.



Re-entrancy must be carefully considered if using preemption.

#### Characteristics of a 'Co-routine'

FreeRTOS version V4.0.0 onwards allows a real time application to *optionally* include co-routines as well as, or instead of, tasks. Co-routines are conceptually similar to tasks but have the following fundamental differences (elaborated further on the co-routine documentation page):

### 1. Stack usage

All the co-routines within an application share a single stack. This greatly reduces the amount of RAM required compared to a similar application written using tasks.

### 2. Scheduling and priorities

Co-routines use prioritised cooperative scheduling with respect to other co-routines, but can be included in an application that uses preemptive tasks.


### 3. Macro implementation


The co-routine implementation is provided through a set of macros.


#### 4. Restrictions on use

The reduction in RAM usage comes at the cost of some stringent restrictions in how co-routines can be structured.


### **Co-Routine Summary**

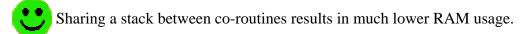

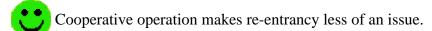


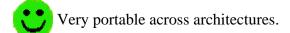

Fully prioritised relative to other co-routines, but can always be preempted by tasks if the two are mixed.

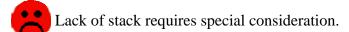

Restrictions on where API calls can be made.

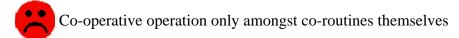

### Tasks

#### **Task States**

A task can exist in one of the following states:

### Running

When a task is actually executing it is said to be in the Running state. It is currently utilising the processor.

### Ready


Ready tasks are those that are able to execute (they are not blocked or suspended) but are not currently executing because a different task of equal or higher priority is already in the Running state.

#### Blocked

A task is said to be in the Blocked state if it is currently waiting for either a temporal or external event. For example, if a task calls vTaskDelay() it will block (be placed into the Blocked state) until the delay period has expired - a temporal event. Tasks can also block waiting for queue and semaphore events. Tasks in the Blocked state always have a 'timeout' period, after which the task will be unblocked. Blocked tasks are not available for scheduling.

### Suspended

Tasks in the Suspended state are also not available for scheduling. Tasks will only enter or exit the suspended state when explicitly commanded to do so through the vTaskSuspend() and xTaskResume() API calls respectively. A 'timeout' period cannot be specified.

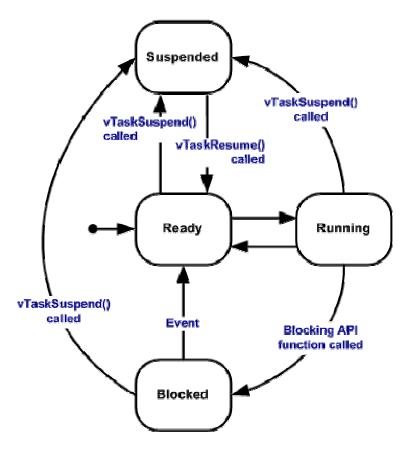

Valid task state transitions

#### **Task Priorities**

Each task is assigned a priority from 0 to (configMAX\_PRIORITIES - 1). configMAX\_PRIORITIES is defined within FreeRTOSConfig.h and can be set on an application by application basis. The higher the value given to configMAX\_PRIORITIES the more RAM the FreeRTOS kernel will consume.

Low priority numbers denote low priority tasks, with the default idle priority defined by tskIDLE\_PRIORITY as being zero.

The scheduler will ensure that a task in the ready or running state will always be given processor time in preference to tasks of a lower priority that are also in the ready state. In other words, the task given processing time will always be the highest priority task that is able to run.

### Implementing a Task

A task should have the following structure:

```
void vATaskFunction( void *pvParameters )
{
    for( ;; )
    {
        -- Task application code here. --
    }
}
```

The type pdTASK\_CODE is defined as a function that returns void and takes a void pointer as it's only parameter. All functions that implement a task should be of this type. The parameter can be used to pass information of any type into the task - this is demonstrated by several of the <u>standard demo application tasks</u>.

Task functions should never return so are typically implemented as a continuous loop. Again, see the RTOS demo application for numerous examples.

Tasks are created by calling xTaskCreate() and deleted by calling vTaskDelete().

#### **Task Creation Macros**

Task functions can *optionally* be defined using the portTASK\_FUNCTION and portTASK\_FUNCTION\_PROTO macros. These macro are provided to allow compiler specific syntax to be added to the function definition and prototype respectively. Their use is not required unless specifically stated in documentation for the port being used (currently only the PIC18 fedC port).

The prototype for the function shown above can be written as:

```
void vATaskFunction( void *pvParameters );
Or,
portTASK_FUNCTION_PROTO( vATaskFunction, pvParameters );
Likewise the function above could equally be written as:
    portTASK_FUNCTION( vATaskFunction, pvParameters )
    {
        for( ;; )
        {
            -- Task application code here. --
        }
    }
}
```

#### The Idle Task

The idle task is created automatically when the scheduler is started.

The idle task is responsible for freeing memory allocated by the RTOS to tasks that have since been deleted. It is therefore important in applications that make use of the vTaskDelete() function to ensure the idle task is not starved of processing time. The activity visualisation utility can be used to check the microcontroller time allocated to the idle task.

The idle task has no other active functions so can legitimately be starved of microcontroller time under all other conditions.

It is possible for application tasks to share the idle task priority. (tskIDLE\_PRIORITY).

#### The Idle Task Hook

An idle task hook is a function that is called during each cycle of the idle task. If you want application functionality to run at the idle priority then there are two options:

1. Implement the functionality in an idle task hook.

There must always be at least one task that is ready to run. It is therefore imperative that the hook function does not call any API functions that might cause the task to block (vTaskDelay() for example. It is permissible for co-routines to block within the hook function).

2. Create an idle priority task to implement the functionality.

This is a more flexible solution but has a higher RAM usage overhead.

See the <u>Embedded software application design</u> section for more information on using an idle hook.

To create an idle hook:

- 1. Set configUSE\_IDLE\_HOOK to 1 within FreeRTOSConfig.h.
- 2. Define a function that has the following prototype:

void vApplicationIdleHook( void );

A common use for an idle hook is to simply put the processor into a power saving mode.

#### 1. to flash an LED

The following code defines a very simple co-routine that does nothing but periodically flashes an LED.

```
void vFlashCoRoutine( xCoRoutineHandle xHandle, unsigned
portBASE_TYPE uxIndex )
{
    // Co-routines must start with a call to crSTART().
    crSTART( xHandle );

    for( ;; )
    {
        // Delay for a fixed period.
        crDELAY( xHandle, 10 );

        // Flash an LED.
        vParTestToggleLED( 0 );
    }

    // Co-routines must end with a call to crEND().
    crEND();
}
```

Thats it!

### 2. Scheduling the co-routine

Co-routines are scheduled by repeated calls to vCoRoutineSchedule(). The best place to do this is from within the idle task by writing an idle task hook. First ensure that configUSE\_IDLE\_HOOK is set to 1 within FreeRTOSConfig.h. Then write the idle task hook as:

```
void vApplicationIdleHook( void )
{
    vCoRoutineSchedule( void );
}
```

Alternatively, if the idle task is not performing any other function it would be more efficient to call vCoRoutineSchedule() from within a loop as:

```
void vApplicationIdleHook( void )
{
    for( ;; )
    {
       vCoRoutineSchedule( void );
    }
```

}

#### 3. Create the co-routine and start the scheduler

The co-routine can be created within main().

```
#include "task.h"
#include "croutine.h"

#define PRIORITY_0 0

void main( void )
{
    // In this case the index is not used and is passed
    // in as 0.
    xCoRoutineCreate( vFlashCoRoutine, PRIORITY_0, 0 );

    // NOTE: Tasks can also be created here!

    // Start the scheduler.
    vTaskStartScheduler();
}
```

### 4. Extending the example: Using the index parameter

Now assume that we want to create 8 such co-routines from the same function. Each co-routine will flash a different LED at a different rate. The index parameter can be used to distinguish between the co-routines from within the co-routine function itself.

This time we are going to create 8 co-routines and pass in a different index to each.

}

The co-routine function is also extended so each uses a different LED and flash rate.

```
const int iFlashRates[ NUM_COROUTINES ] = { 10, 20, 30, 40,
50, 60, 70, 80 };
    const int iLEDToFlash[ NUM_COROUTINES ] = { 0, 1, 2, 3, 4, 5,
6, 7 }
    void vFlashCoRoutine( xCoRoutineHandle xHandle, unsigned
portBASE_TYPE uxIndex )
    {
        // Co-routines must start with a call to crSTART().
        crSTART( xHandle );
        for( ;; )
            // Delay for a fixed period. uxIndex is used to
index into
            // the iFlashRates. As each co-routine was created
with
            // a different index value each will delay for a
different
            // period.
            crDELAY( xHandle, iFlashRate[ uxIndex ] );
            // Flash an LED. Again uxIndex is used as an array
index,
            // this time to locate the LED that should be
toggled.
            vParTestToggleLED( iLEDToFlash[ uxIndex ] );
        }
        // Co-routines must end with a call to crEND().
        crEND();
    }
```

### **Demo Application Examples**

Two files are included in the download that demonstrate using co-routines with queues:

#### 1. crflash.c

This is functionally equivalent to the standard demo file flash.c but uses co-routines instead of tasks. In addition, and just for demonstration purposes, instead of directly toggling an LED from within a co-routine (as

per the quick example above) the number of the LED that should be toggled is passed on a queue to a higher priority co-routine.

#### 2. crhook.c

Demonstrates passing data from a interrupt to a co-routine. A tick hook function is used as the data source.

The <u>PC</u> and <u>ARM Cortex-M3</u> demo applications are already pre-configured to use these sample co-routine files and can be used as a reference. All the other demo applications are configured to use tasks only, but can be easily converted to demonstrate co-routines by following the procedure below. This replaces the functionality implemented within flash.c with that implemented with crflash.c:

- 1. In FreeRTOSConfig.h set configUSE\_CO\_ROUTINES and configUSE IDLE HOOK to 1.
- 2. In the IDE project or project makefile (depending on the demo project being used):
  - i. Replace the reference to file FreeRTOS/Demo/Common/Minimal/flash.c With

FreeRTOS/Demo/Common/Minimal/crflash.c.

- ii. Add the file FreeRTOS/Source/croutine.c to the build.
- 3. In main.c:
  - i. Include the header file croutine.h which contains the co-routine macros and function prototypes.
  - ii. Replace the inclusion of flash.h with crflash.h.
  - iii. Remove the call to the function that creates the flash tasks vStartLEDFlashTasks() ....
  - iv. ... and replace it with the function that creates the flash co-routines vStartFlashCoRoutines( n ), where n is the number of co-routines that should be created. Each co-routine flashes a different LED at a different rate.
  - v. Add an idle hook function that schedules the co-routines as:

```
vi. void vApplicationIdleHook( void )
vii. {
viii. vCoRoutineSchedule( void );
ix. }
```

If main() already contains an idle hook then simply add a call to vCoRoutineSchedule() to the existing hook function.

4. Replacing the flash tasks with the flash co-routines means there are at least two less stacks that need allocating and less heap space can therefore be set aside for use by the scheduler. If your project has insufficient RAM to include croutine.c in the build then simply reduce the

definition of portTOTAL\_HEAP\_SPACE by ( 2 \* portMINIMAL\_STACK\_SIZE ) within FreeRTOSConfig.h.

# **RTOS Kernel Utilities**

## **Queue Implementation**

Items are placed in a queue by copy - not by reference. It is therefore preferable, when queuing large items, to only queue a pointer to the item.

RTOS demo application files blockq.c and pollq.c demonstrate queue usage.

The queue implementation used by the RTOS is also available for application code.

Tasks and co-routines can block on a queue to wait for either data to become available on the queue, or space to become available to write to the queue.

# Semaphore Implementation

Binary semaphore functionality is provided by a set of macros.

The macros use the queue implementation as this provides everything necessary with no extra code or testing overhead.

The macros can easily be extended to provide counting semaphores if required.

The RTOS demo application file semtest.c demonstrates semaphore usage. Also see the RTOS API documentation.

#### **Tick Hook Function**

A tick hook function is a function that executes during each RTOS tick interrupt. It can be used to optionally execute application code during each tick ISR.

To use a tick hook function configUSE\_TICK\_HOOK must be set to 1 within FreeRTOSConfig.h.

The prototype for the tick hook function is:

```
void vApplicationTickHook( void );
```

vApplicationTickHook() executes from within an ISR so must be short and never make a blocking API call.

See the <u>demo application file crhook.c</u> for an example of how to use a tick hook. It is also possible to include an idle task hook.

# **Trace Utility**

The trace visualization utility allows the RTOS activity to be examined.


It records the sequence in which tasks are given microcontroller processing time.

To use the utility the macro configUSE\_TRACE\_FACILITY must be defined as 1 within FreeRTOSConfig.h when the application is compiled. See the *configuration* section in the RTOS API documentation for more information.

The trace is started by calling vTaskStartTrace() and ended by calling ulTaskEndTrace(). It will end automatically if it's buffer becomes full.

The completed trace buffer can be stored to disk for offline examination. The DOS/Windows utility tracecon.exe converts the stored buffer to a tab delimited text file. This can then be opened and examined in a spread sheet application.

Below is a 10 millisecond example output collected from the AMD 186 demo application. The x axis shows the passing of time, and the y axis the number of the task that is running.

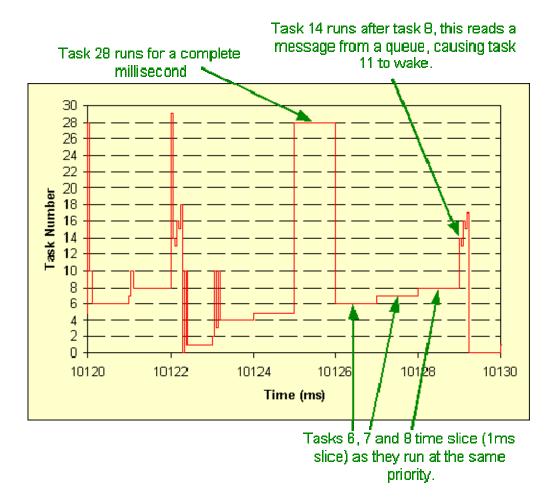

Each task is automatically allocated a number when it is created. The idle task is always number 0. vTaskList() can be used to obtain the number allocated to each task, along with some other useful information. The information returned by vTaskList() during the demo application is shown below, where:

- Name is the name given to the task when it was created. Note that the demo application creates more than one instance of some tasks.
- State shows the state of a task. This can be either 'B'locked, 'R'eady, 'S'uspended or 'D'eleted.
- Priority is the priority given to the task when it was created.
- Stack shows the high water mark of the task stack. This is the minimum amount of free stack that has been available during the lifetime of the task.
- Num is the number automatically allocated to the task.

Name ******	State	Priority ******	Stack	Num
Print	R	4	331	29
Math7	R	Ó	417	7
Math8	Ř	ŏ	407	8
QConsB2	R	ŏ	53	Ĭ4
QProdB5	R	ŏ	52	17
QConsB4	R	ŏ	53	16
SEM1	R	ŏ	50	77
SEM1	R	ŏ	50	16 27 28
IDLE	R	ŏ	64	Õ
Math1	R	ŭ	436	1
Math2	R	ŏ	436	ż
Math3	Ř	ŏ	417	7
Math4	Ř	ŏ	407	1 2 3 4
Math5	Ř	ŏ	436	5
Math6	Ř	Ō	436	ē
QProdNB	B	ž	52	Ĭ2
LFDX	R	ī	63	19
LEDX	В	ĺ	74	22
LEDX	В	ī	73	20
LEDx	В	1	63	25 21
LEDX	В	1	73	21
LEDx	В	1	63	24
COMTX	В	2	44	9
LEDX	В	1	63	26
LEDx	В	1	67	23
SUICIDE1	В	3	215 215 215 215	55 56
SUICIDE2	В	3	215	56
SUICIDE1	В	3	215	57
SUICIDE2	В	3	215	58
CREATOR	В	3	170	30
QProdB1	В	3	53	13
QConsB6	В	21111112113333330332	52	18
QProdB3	В	3	54	15
COMRX	В	3	51	10
QConsNB	В	2	57	11

In this example, it can be seen that tasks 6, 7, 8 and 14 are all running at priority 0. They therefore time slice between themselves and the other priority 0 tasks (including the idle task). Task 14 reads a message from a queue (see BlockQ.c in the demo application). This frees a space on the queue. Task 13 was blocked waiting for a space to be available, so now wakes, posts a message then blocks again.

**Note:** In it's current implementation, the time resolution of the trace is equal to the tick rate. Context switches can occur more frequently than the system tick (if a task blocks for example). When this occurs the trace will show that a context switch has occurred and will accurately shows the context switch sequencing.

However, the timing of context switches that occur between system ticks cannot accurately be recorded. The ports could easily be modified to provide a higher resolution time stamp by making use of a free running timer.

# **Source Organization**

## **Basic directory structure**

The FreeRTOS download includes source code for every processor port, and every demo application. Placing all the ports in a single download greatly simplifies distribution, but the number of files may seem daunting. The directory structure is however very simple, and the FreeRTOS real time kernel is contained *in just 3 files* (4 if co-routines are used).

From the top, the download is split into two sub directories:

The majority of the real time kernel code is contained in three files that are common to every processor architecture (four if co-routines are used). These files, tasks.c, queue.c and list.c, are in the source directory.

Each processor architecture requires a small amount of kernel code specific to that architecture. The processor specific code is contained in a directory called Portable, under the Source directory.

The download also contains a demo application for every processor architecture and compiler port. The majority of the demo application code is common to all ports and is contained in a directory called Common, under the Demo directory. The remaining sub directories under Demo contain build files for building the demo for that particular port.

The following subsections provide more details of the Demo and Source directories.

# RTOS source code directory list [the Source directory]

To use FreeRTOS you need to include the real time kernel source files in your makefile. It is not necessary to modify them or understand their implementation.

The real time kernel source code consists of three files that are common to all microcontroller ports (four if co-routines are used), and a single file that is specific to the port you are using. The common files can be found in the FreeRTOS/Source directory. The port specific files can be found in subdirectories contained in the FreeRTOS/Source/Portable directory.

### For example:

If using the MSP430 port with the GCC compiler:

The MSP430 specific file (port.c) can be found in the FreeRTOS/Source/Portable/GCC/MSP430F449 directory, and all the other sub directories in the FreeRTOS/Source/Portable directory relate to other microcontroller ports and can be ignored.

If using the PIC18 port with the MPLAB compiler:

The PIC18 specific file (port.c) can be found in the FreeRTOS/Source/Portable/MPLAB/PIC18 directory, and all the other sub directories in the FreeRTOS/Source/Portable directory relate to other microcontroller ports and can be ignored.

And so on for all the ports ...

FreeRTOS/Portable/MemMang contains the sample memory allocators as described in the memory management section.

# Demo application source code directory list [the Demo directory]

The Demo directory tree contains a demo application for each port. Most of the code for the demo application is common to every port. The code that is common to every port is located in the FreeRTOS/Demo/Common directory. See the <a href="demo application">demo application</a> section for more details. Port specific code, including the demo application project files, can be found in sub directories contained in the FreeRTOS/Demo directory.

# For example:

• If building the MSP430 GCC demo application:

The MSP430 demo application makefile can be found in the FreeRTOS/Demo/MSP430 directory. *All the other sub directories contained in the FreeRTOS/Demo directory (other than the Common directory) relate to demo application's targeted at other microcontrollers and can be ignored.* 

If building the PIC18 MPLAB demo application:

The PIC18 demo application project file can be found in the FreeRTOS/Demo/PIC18\_MPLAB directory. All the other sub directories contained in the FreeRTOS/Demo directory (other than the Common directory) relate to demo application's targeted at other microcontrollers and can be ignored.

And so on for all the ports ...

# Creating your own application

When writing your own application it is preferable to use the demo application makefile (or project file) as a starting point. You can leave all the files included from the Source directory included in the makefile, and replace the files included from the Demo directory with those for your own application. This will ensure both the RTOS source files included in the makefile and the compiler switches used in the makefile are both correct.

## The complete directory tree

The entire directory tree is shown below - including a brief description of each node:

```
FreeRTOS
- |
        Contains all directories associated with the demo
+-Demo
application, one sub directory per port.
+-Common
                         Demo application files common to all
ports
Minimal version of common demo
application files
                      Full version of common demo
application files
| | +-include Demo application header files
+-ARM7_AtmelSAM7S64_IAR Demo application source code for the
AT91SAM7S64 port using the IAR compiler
| +-ParTest
   +-serial
   +-ARM7 AT91SAM7X256 Eclipse Demo application source code for the
AT91SAM7X port using GCC and Eclipse
| +-Webserver
+-ARM7_LPC2106_GCC Demo application source code for the
LPC2106 port
| +-ParTest
   | +-serial
+-ARM7_LPC2129_Keil Demo application source code for the
LPC2109 port using the Keil compiler
| +-ParTest
      +-serial
+-ARM7_AT91FR40008_GCC Demo application source code for the
AT91 port using the GCC compiler
| +-serial
+-ARM7_STR75x_IAR Demo application source code for the
STR75x port using the IAR compiler
| +-ParTest
   | +-serial
  +-ARM7_STR71x_IAR Demo application source code for the
STR71x port using the IAR compiler
| +-ParTest
      +-serial
+-ARM9 STR91X IAR Demo application source code for the
STR912 port using the IAR compiler
| +-ParTest
   +-serial
  +-webserver
```

```
+-ARM7_LPC2138_Rowley Demo application project for the
LPC2138 ARM7 port using the CrossStudio tools
   +-ARM7 LPC2138 Eclipse
                          Demo application project for the
LPC2138 ARM7 port using GCC and Eclipse.
+-HCS12_CodeWarrior_small Demo application source code for the
HCS12 port small memory model
| +-ParTest
   | +-serial
+-HCS12_CodeWarrior_banked Demo application source code for the
HCS12 port banked memory model
| +-ParTest
      +-serial
+-H8S
                          Demo application source code for the
H8/S port
| +-ParTest
    | +-serial
                          Demo application source code for the
   +-MSP430
MSP430F449 port
| +-ParTest
| +-serial
+-AVR32_UC3
                 Demo application source code for the
AVR32 port using the GCC and IAR compiler
| +-AT32UC3A
                          Make file to build the standard AVR32
| +-GCC
demo using the GCC compiler
Make file to build the standard AVR32
demo using the IAR compiler
   +-AVR_ATMega323_WinAVR Demo application source code for the
AVR port using the GCC compiler
| +-ParTest
| +-serial
+-AVR_ATMega323_IAR Demo application source code for the
AVR port using the IAR compiler
| +-ParTest
   | +-serial
+-PIC32_MPLAB
                          Demo application source code for PIC32
(MIPS M4K) port using MPLAB and the C32 compiler
| +-ParTest
    | +-serial
+-PIC18_MPLAB
                          Demo application source code for PIC18
port using the MPLAB compiler
| +-ParTest
   | +-serial
+-PIC18_WIZC
                          Demo application source code for PIC18
port using the WizC compiler
```

```
| +-ParTest
   - |
       +-serial
+-PIC24_MPLAB
                            Demo application source code for PIC24
port using the MPLAB compiler
| +-ParTest
      +-serial
    +-dsPIC MPLAB
                            Demo application source code for dsPIC
port using the MPLAB compiler
| +-ParTest
   | +-serial
+-Cygnal
                            Demo application source code for Cygnal
(Silicon labs) 8051 port
| +-ParTest
      +-serial
    +-Flshlite
                            Demo application source for Flashlite
186 port
       +-FileIO
      +-serial
      +-ParTest
  +-Microblaze
                           Demo application source for Xilinx
Microblaze port
+-ParTest
+-CORTEX_STM32F103_IAR Demo application source for the
STM32F103 Cortex-M3 port using the IAR tools
   +-CORTEX_STM32F103_Primer_GCC Demo application source for the
STM32F103 Cortex-M3 port using the GCC and RIDE tools
   +-CORTEX_LM3S102_GCC Demo application source for the LM3S102
Cortex-M3 port using the GCC tools
+-CORTEX_LM3S102_Keil Demo application source for the LM3S102
Cortex-M3 port using the Keil/RVDS tools
+-CORTEX_LM3S102_Rowley Demo application source for the LM3S102
Cortex-M3 port using Rowley CrossWorks
+-CORTEX_LM3S316_IAR Demo application source for the LM3S314
Cortex-M3 port using IAR
   +-CORTEX_LM3S811_GCC Demo application source for the LM3S811
Cortex-M3 port using the GCC tools
+-CORTEX_LM3S811_IAR Demo application source for the LM3S811
Cortex-M3 port using IAR
+-CORTEX_LM3S811_KEIL Demo application source for the LM3S811
Cortex-M3 port using Keil
| |
```

```
+-CORTEX_LM3Sxxxx_IAR_Keil Demo application source for the
LM3S6965, LM3S2965, LM3S1962 and LM3S8962 Cortex-M3 port using IAR and
Keil
| |
+-CORTEX_LM3Sxxxx_Eclipse Demo application source for the
LM3S6965, LM3S2965, LM3S1962 and LM3S8962 Cortex-M3 port using Eclipse
with GCC
| |
   +-uIP_Demo_IAR_ARM7 Embedded WEB server demo using uIP and
the IAR development tools
+-lwIP_Demo_Rowley_ARM7 Embedded WEB server demo using lwIP and
the Rowley development tools
+-lwIP_AVR32_UC3 Embedded WEB and TFTP server demo using
lwIP and GCC on the AT32UC3A0512 AVR32
+-uIP_Demo_Rowley_ARM7 Embedded WEB server demo using uIP and
the Rowley development tools
  +-WizNET_DEMO_GCC_ARM7 Embedded WEB server demo application
using the WizNET coprocessor with I2C interface
   +-WizNET_DEMO_TERN_186 Embedded WEB server demo application
using the WizNET coprocessor with mapped interface
| |
    +-PC
                           Demo application source for PC port
       +-FileIO
       +-ParTest
       +-serial
+-Source Contains all directories associated with the
scheduler source code
                 3 core scheduler files common to all ports (4 is
using co-routines)
                           Scheduler header files
    +-include
                Scheduler port layer for all ports
    +-portable
                               Sample memory allocators can be
       +-MemMang
used for all ports
       +-GCC
                           Scheduler port layer for ports
using GCC compiler
       +-ATmega32
                                    Scheduler port files for AVR
using GCC compiler
      +-MSP430F449
                                    Scheduler port files for MSP430
using GCC compiler
      +-ARM7_LPC2000
                                   Scheduler port files for
LPC2106 using GCC compiler
     +-ARM7_AT91FR40008 Scheduler port files for AT91
using GCC compiler
  +-H8S2329
                                   Scheduler port files for H8/S
using GCC compiler
```

```
Scheduler port files for
                   | +-Microblaze
Microblaze using GCC compiler
| +-ARM_MC3
Cortex-M3 using GCC compiler
                                                                                          Scheduler port files for ARM
      +-AVR32_UC3
                                                                                            Scheduler port files for AVR32
AT32UC3A using GCC compiler
                                                                                Scheduler port layer for ports
                    +-RVDS
using RVDS/Keil compiler
| +-ATmega32
                                                                                          Scheduler port files for ARM
Cortex-M3 port
+-IAR Scheduler port layer for ports
using IAR compiler
| +-ATmega32 Scheduler port files for AVR
using IAR compiler
        +-AtmelSAM7S64 Scheduler port files for SAM7
using IAR compiler
                                                                                          Scheduler port files for STR71x
         +-STR71x
using IAR compiler
                                                                                          Scheduler port files for STR91x
           +-STR91x
using IAR compiler
| +-ARM_CM3
Cortex-M3 using IAR compiler
| +-LPC2000
                                                                                          Scheduler port files for
                                                                                          Scheduler port files for
Philips LPC2000 using IAR compiler
          +-AVR32_UC3
                                                                                          Scheduler port files for AVR32
AT32UC3A using the IAR compiler
                                                                  Scheduler port layer for ports
                    +-Keil
using Keil compiler
                 +-ARM7
                                                                                          Scheduler port files for ARM7
using Keil compiler
+-CodeWarrior
using CodeWarrior compiler
                                                                               Scheduler port layer for ports
                                                                                         Scheduler port files for HCS12
using CodeWarrior compiler
                    +-MPLAB
                                                                                Scheduler port layer for ports
using Microchip C18 compiler
               +-PIC18
                                                                                           Scheduler port files for PIC18
using Microchip C18 compiler
               +-PIC24_dsPIC
                                                                                          Scheduler port files for PIC24,
dsPIC
                         +-PIC32
                                                                                            Scheduler port files for PIC32
+-SDCC Scheduler port layer for ports using SDCC compiler
| +-Cygnal SOCI using SDCC SCHEDULER SOCIAL SOCIA
                                                                    Scheduler port files for Cygnal
8051 using SDCC compiler
```

```
+-oWatcom Scheduler port layer for ports using Open Watcom compiler
  +-Flsh186
                                  Scheduler port files for
Flashlite 186 port
   +-common
                                  Scheduler port files common to
all OW DOS based ports
    +-PC
                                  Scheduler port files for PC
port
T-Paradigm Scheduler port layer for ports using Paradigm compiler
 | +-Tern_EE
                        Scheduler port files for Tern
186 port
       +-small
                                 Small memory model port for
Tern 186
 +-large_untested Large memory model port for
Tern 186 - untested!
+-BCC
using Borland compiler
+-Flsh186
                             Scheduler port layer for ports
                                  Scheduler port files for
Flashlite 186 port
          +-common
                                  Scheduler port files common to
all BCC DOS based ports
          +-PC
                                  Scheduler port files for PC
port
```

# **Naming Conventions**

The RTOS kernel and demo application source code use the following conventions:

- Variables
  - Variables of type char are prefixed c
  - Variables of type short are prefixed s
  - Variables of type long are prefixed I
  - Variables of type float are prefixed f
  - Variables of type double are prefixed d
  - Enumerated variables are prefixed e
  - Other types (e.g. structs) are prefixed x
  - Pointers have an additional prefixed p, for example a pointer to a short will have prefix ps
  - Unsigned variables have an additional prefixed u, for example an unsigned short will have prefix us
- Functions
  - File private functions are prefixed with prv

- API functions are prefixed with their return type, as per the convention defined for variables
- Function names start with the file in which they are defined. For example vTaskDelete is defined in Task. c

# **Data Types**

Data types are not directly referenced within the RTOS kernel source code. Instead each port has it's own set of definitions. For example, the char type is #defined to portCHAR, the short data type is #defined to portSHORT, etc. The demo application source code also uses this notation - but this is not necessary and your application can use whatever notation you prefer.

In addition there are two other types that are defined for each port. These are:

### portTickType

This is a configurable as either an unsigned 16bit type or an unsigned 32bit type. See the <u>customisation</u> section of the API documentation for full information.

## portBASE\_TYPE

This is defined for each port to be the most efficient type for that particular architecture.

If portBASE\_TYPE is define to char then particular care must be taken to ensure signed chars are used for function return values that can be negative to indicate an error.

request every 10ms exactly, and the resultant command shall be transmitted within 5ms of this request. The control algorithm is reliant on accurate timing, it is therefore paramount that these timing requirements are met.

# Local Operator Interface [keypad and LCD]

The keypad and LCD can be used by the operator to select, view and modify system data. The operator interface shall function while the plant is being controlled.

To ensure no key presses are missed the keypad shall be scanned at least every 15ms. The LCD shall update within 50ms of a key being pressed.

#### LED

The LED shall be used to indicate the system status. A flashing green LED shall indicate that the system is running as expected. A flashing red LED shall indicate a fault condition.

The correct LED shall flash on and off once ever second. This flash rate shall be maintained to within 50ms.

#### **RS232 PDA Interface**

The PDA RS232 interface shall be capable of viewing and accessing the same data as the local operator interface, and the same timing constraints apply - discounting any data transmission times.

#### **TCP/IP Interface**

The embedded WEB server shall service HTTP requests within one second.

# Application components

The timing requirements of the hypothetical system can be split into three categories:

1. **Strict timing** - the plant control

The control function has a very strict timing requirement as it must execute every 10ms.

#### 2. Flexible timing - the LED

While the LED outputs have both maximum and minimum time constraints, there is a large timing band within which they can function.

#### 3. **Deadline only timing** - the human interfaces

This includes the keypad, LCD, RS232 and TCP/IP Ethernet communications.

The human interface functions have a different type of timing requirement as only a maximum limit is specified. For example, the keypad must be scanned at least every 10ms, but any rate up to 10ms is acceptable.

# **More Info**

The best way to learn about the real time kernel is to use the demo application and read the API documentation.

A demo application is provided for each microcontroller. If you don't have any hardware available then the PC port will execute under Windows, and the Keil ARM7 port will run entirely in the Keil simulator.

# **RTOS Demo Introduction**

The RTOS source code download includes a demonstration project for each port. The sample projects are preconfigured to execute on the single board computer or prototyping board used during the port development. Each should build directly as downloaded without any warnings or errors.

The demonstration projects are provided as:

- An aid to learning how to use FreeRTOS each source file demonstrates a component of the RTOS.
- A preconfigured starting point for new applications to ensure the
  correct development tool setup (compiler switches, debugger format, etc)
  it is recommended that new applications are created by modifying the
  existing demo projects.

The table below lists the files that make up the demo projects along with a brief indication of the RTOS features demonstrated. The <u>following page</u> describes each task and co-routine within the demo project in more detail.

Two implementations are provided for the majority files listed below. The files contained in the <code>Demo/Common/Minimal</code> directory are for more RAM challenged systems such as the AVR. These files do not contain console IO. The files contained in the <code>Demo/Common/Full</code> directory are predominantly for the x86 demo projects and contain console IO. Other than that the functionality of the two implementations are basically the same. See the <a href="Source Code Organization">Source Code Organization</a> section for more information on the demo project directory structure.

A few of points to note:

- Not all the Demo/Common files are used in every demonstration project. How
  many files are used depends on processor resources.
- The demo projects often use all the available RAM on the target processor. This means that you cannot add more tasks to the project

- without first removing some! This is especially true for the projects configured to run on the low end 8bit processors.
- In addition to the standard demo projects, two <u>embedded WEB server</u> <u>projects</u> are included in the download. These provide a more application orientated example.
- Each demo project also contains a file called main.c which contains the main() function. This function is responsible for creating all the demo application tasks and then starting the real time kernel.
- The standard demo project files are provided for the purpose of demonstrating the use of the real time kernel and are not intended to provide an optimized solution. This is particularly true of comtest.c.

File	Features Demonstrated		
main.c	<ul> <li>Starting/Stopping the kernel</li> <li>Using the trace visualisation utility</li> <li>Allocation of priorities</li> </ul>		
dynamic.c	<ul> <li>Passing parameters into a task</li> <li>Dynamically changing priorities</li> <li>Suspending tasks</li> <li>Suspending the scheduler</li> </ul>		
BlockQ.c	<ul> <li>Inter-task communications</li> <li>Blocking on queue reads</li> <li>Blocking on queue writes</li> <li>Passing parameters into a task</li> <li>Pre-emption</li> <li>Creating tasks</li> </ul>		
ComTest.c	<ul> <li>Serial communications</li> <li>Using queues from an ISR</li> <li>Using semaphores from an ISR</li> <li>Context switching from an ISR</li> <li>Creating tasks</li> </ul>		

CRFlash.c	<ul> <li>Creating co-routines</li> <li>Using the index of a co-routine</li> <li>Blocking on a queue from a co-routine</li> <li>Communication between co-routines</li> </ul>
CRHook.c	<ul> <li>Creating co-routines</li> <li>Passing data from an ISR to a co-routine</li> <li>Tick hook function</li> <li>Co-routines blocking on queues</li> </ul>
Death.c	<ul> <li>Dynamic creation of tasks (at run time)</li> <li>Deleting tasks</li> <li>Passing parameters to tasks</li> </ul>
Flash.c	<ul><li>Delaying</li><li>Passing parameters to tasks</li><li>Creating tasks</li></ul>
Flop.c	<ul><li>Floating point math</li><li>Time slicing</li><li>Creating tasks</li></ul>
Integer.c	<ul><li> Time slicing</li><li> Creating tasks</li></ul>
PollQ.c	<ul> <li>Inter-task communications</li> <li>Manually yielding processor time</li> <li>Polling a queue for space to write</li> </ul>

	<ul> <li>Polling a queue for space to read</li> <li>Pre-emption</li> <li>Creating tasks</li> </ul>
Print.c	Queue usage
Semtest.c	<ul><li>Binary semaphores</li><li>Mutual exclusion</li><li>Creating tasks</li></ul>

The demo application does not free all it's resources when it exits, although the kernel *does*. This has been done purely to minimize lines of code.

# **Demo Project Files**

This page describes the functionality of the files within the standard RTOS demo projects. The descriptions relate to the files in the <code>Demo/Common/Full</code> directory. Their equivalents in the <code>Demo/Common/Minimal</code> directory will have similar functionality but use less RAM and not contain any console IO.

#### blockQ.c

Creates six tasks that operate on three queues as follows:

The first two tasks send and receive an incrementing number to/from a queue. One task acts as a producer and the other as the consumer. The consumer is a higher priority than the producer and is set to block on queue reads. The queue only has space for one item - as soon as the producer posts a message on the queue the consumer will unblock, pre-empt the producer, and remove the item.

The second two tasks work the other way around. Again the queue used only has enough space for one item. This time the consumer has a lower priority than the producer. The producer will try to post on the queue blocking when the queue is full. When the consumer wakes it will remove the item from the queue, causing the producer to unblock, pre-empt the consumer, and immediately re-fill the queue.

The last two tasks use the same queue producer and consumer functions. This time the queue has enough space for lots of items and the tasks operate at the same priority. The producer will execute, placing items into the queue. The consumer will start executing when either the queue becomes full (causing the producer to block) or a context switch occurs (tasks of the same priority will time slice).

#### comtest.c

Creates two tasks that operate on an interrupt driven serial port. A loopback connector should be used so that everything that is transmitted is also received. The serial port does not use any flow control. On a standard 9way 'D' connector pins two and three should be connected together.

The first task repeatedly sends a string to a queue, character at a time. The serial port interrupt will empty the queue and transmit the characters. The task blocks for a pseudo random period before resending the string.

The second task blocks on a queue waiting for a character to be received. Characters received by the serial port interrupt routine are posted onto the queue - unblocking the task making it ready to execute. If this is then the highest priority task ready to run it will run immediately - with a context switch occurring at the end of the interrupt service routine. The task receiving characters is spawned with a higher priority than the task transmitting the characters.

With the loop back connector in place, one task will transmit a string and the other will immediately receive it. The receiving task knows the string it expects to receive so can detect an error.

This also creates a third task. This is used to test semaphore usage from an ISR and does nothing interesting.

#### crflash.c

This demo application file demonstrates the use of queues to pass data between co-routines and the use of the co-routine index parameter.

N 'fixed delay' co-routines are created that just block for a fixed period then post the number of an LED onto a queue. Each such co-routine uses its index parameter as an index into array in order to obtain the block period and LED that is flashed. A single 'flash' co-routine is also created that blocks on the same queue, waiting for the number of the next LED it should flash. Upon receiving a number it simply toggle the instructed LED then blocks on the queue once more.

In this manner each LED from LED 0 to LED N-1 is caused to flash at a different rate.

The 'fixed delay' co-routines are created with co-routine priority 0. The flash co-routine is created with co-routine priority 1. This means that the queue should never contain more than a single item. This is because posting to the queue will unblock the higher priority 'flash' co-routine which will only block again when the queue is empty. An error is indicated if an attempt to post data to the queue fails - indicating that the queue is already full.

#### crhook.c

This demo file demonstrates how to send data between an ISR and a co-routine. A tick hook function is used to periodically pass data between the RTOS tick and a set of 'hook' co-routines.

hookNUM\_HOOK\_CO\_ROUTINES co-routines are created. Each co-routine blocks to wait for a character to be received on a queue from the tick ISR, checks to ensure the character received was that expected, then sends the number back to the tick ISR on a different queue.

The tick ISR checks the numbers received back from the 'hook' co-routines matches the number previously sent.

If at any time a queue function returns unexpectedly, or an incorrect value is received either by the tick hook or a co-routine then an error is latched.

This demo relies on each 'hook' co-routine to execute between each hookTICK\_CALLS\_BEFORE\_POST tick interrupts. This and the heavy use of queues from within an interrupt may result in an error being detected on slower targets simply due to timing.

#### death.c

Create a single persistent task which periodically dynamically creates another four tasks. The original task is called the creator task, the four tasks it creates are called suicidal tasks.

Two of the created suicidal tasks kill one other suicidal task before killing themselves - leaving just the original task remaining.

The creator task must be spawned after all of the other demo application tasks as it keeps a check on the number of tasks under the scheduler control. The number of tasks it expects to see running should never be greater than the

number of tasks that were in existence when the creator task was spawned, plus one set of four suicidal tasks. If this number is exceeded an error is flagged.

#### dynamic.c

The first test creates three tasks - two counter tasks (one continuous count and one limited count) and one controller. A "count" variable is shared between all three tasks. The two counter tasks should never be in a "ready" state at the same time. The controller task runs at the same priority as the continuous count task, and at a lower priority than the limited count task.

One counter task loops indefinitely, incrementing the shared count variable on each iteration. To ensure it has exclusive access to the variable it raises it's priority above that of the controller task before each increment, lowering it again to it's original priority before starting the next iteration.

The other counter task increments the shared count variable on each iteration of it's loop until the count has reached a limit of 0xff - at which point it suspends itself. It will not start a new loop until the controller task has made it "ready" again by calling vTaskResume (). This second counter task operates at a higher priority than controller task so does not need to worry about mutual exclusion of the counter variable.

The controller task is in two sections. The first section controls and monitors the continuous count task. When this section is operational the limited count task is suspended. Likewise, the second section controls and monitors the limited count task. When this section is operational the continuous count task is suspended.

In the first section the controller task first takes a copy of the shared count variable. To ensure mutual exclusion on the count variable it suspends the continuous count task, resuming it again when the copy has been taken. The controller task then sleeps for a fixed period - during which the continuous count task will execute and increment the shared variable. When the controller task wakes it checks that the continuous count task has executed by comparing the copy of the shared variable with its current value. This time, to ensure mutual exclusion, the scheduler itself is suspended with a call to vTaskSuspendAll (). This is for demonstration purposes only and is not a recommended technique due to its inefficiency.

After a fixed number of iterations the controller task suspends the continuous count task, and moves on to its second section.

At the start of the second section the shared variable is cleared to zero. The limited count task is then woken from it's suspension by a call to vTaskResume (). As this counter task operates at a higher priority than the controller task the

controller task should not run again until the shared variable has been counted up to the limited value causing the counter task to suspend itself. The next line after vTaskResume () is therefore a check on the shared variable to ensure everything is as expected.

The second test consists of a couple of very simple tasks that post onto a queue while the scheduler is suspended. This test was added to test parts of the scheduler not exercised by the first test.

#### flash.c

Creates eight tasks, each of which flash an LED at a different rate. The first LED flashes every 125ms, the second every 250ms, the third every 375ms, etc.

The LED flash tasks provide instant visual feedback. They show that the scheduler is still operational.

The PC port uses the standard parallel port for outputs, the Flashlite 186 port uses IO port F.

## flop.c

Creates eight tasks, each of which loops continuously performing an (emulated) floating point calculation.

All the tasks run at the idle priority and never block or yield. This causes all eight tasks to time slice with the idle task. Running at the idle priority means that these tasks will get pre-empted any time another task is ready to run or a time slice occurs. More often than not the pre-emption will occur mid calculation, creating a good test of the schedulers context switch mechanism - a calculation producing an unexpected result could be a symptom of a corruption in the context of a task.

#### integer.c

This does the same as flop.c, but uses variables of type long instead of type double.

As with flop.c, the tasks created in this file are a good test of the scheduler context switch mechanism. The processor has to access 32bit variables in two or four chunks (depending on the processor). The low priority of these tasks means there is a high probability that a context switch will occur mid calculation. See the flop.c documentation for more information.

#### pollQ.c

This is a very simple queue test. See the BlockQ.c documentation for a more comprehensive version.

Creates two tasks that communicate over a single queue. One task acts as a producer, the other a consumer.

The producer loops for three iteration, posting an incrementing number onto the queue each cycle. It then delays for a fixed period before doing exactly the same again.

The consumer loops emptying the queue. Each item removed from the queue is checked to ensure it contains the expected value. When the queue is empty it blocks for a fixed period, then does the same again.

All queue access is performed without blocking. The consumer completely empties the queue each time it runs so the producer should never find the queue full.

An error is flagged if the consumer obtains an unexpected value or the producer find the queue is full.

#### print.c

Manages a queue of strings that are waiting to be displayed. This is used to ensure mutual exclusion of console output.

A task wishing to display a message will call vPrintDisplayMessage (), with a pointer to the string as the parameter. The pointer is posted onto the xPrintQueue queue.

The task spawned in main.c blocks on xPrintQueue. When a message becomes available it calls pcPrintGetNextMessage () to obtain a pointer to the next string, then uses the functions defined in the portable layer FileIO.c to display the message.

**NOTE:** Using console IO can disrupt real time performance - depending on the port. Standard C IO routines are not designed for real time applications. While standard IO is useful for demonstration and debugging an alternative method should be used if you actually require console IO as part of your application.

#### semtest.c

Creates two sets of two tasks. The tasks within a set share a variable, access to which is guarded by a semaphore.

Each task starts by attempting to obtain the semaphore. On obtaining a semaphore a task checks to ensure that the guarded variable has an expected value. It then clears the variable to zero before counting it back up to the expected value in increments of 1. After each increment the variable is checked to ensure it contains the value to which it was just set. When the starting value is again reached the task releases the semaphore giving the other task in the set a chance to do exactly the same thing. The starting value is high enough to ensure that a tick is likely to occur during the incrementing loop.

An error is flagged if at any time during the process a shared variable is found to have a value other than that expected. Such an occurrence would suggest an error in the mutual exclusion mechanism by which access to the variable is restricted.

The first set of two tasks poll their semaphore. The second set use blocking calls.

# **Embedded TCP/IP Examples**

There are currently eight embedded Ethernet TCP/IP example programs. Each demo creates an embedded WEB server within a fully preemptive multitasking project. Three of the examples include a live clickable demonstration.

1. Open source uIP TCP/IP stack on an LM3S6965 and LM3S8962 Cortex-M3:

Permits commands to be sent to the target from a WEB browser. Also permits the display of dynamically generated run time data. <u>A version for use with Eclipse is also available</u>

2. AVR32 AT32UC3A lwIP WEB and TFTP server:

This example uses lwIP to create both a simple WEB and TFTP server on the AVR32 flash microcontroller.

3. Open source uIP TCP/IP stack on an AT91SAM7X:

Includes a simple interrupt driven driver for the SAM7X integrated EMAC peripheral.

4. The open source uIP TCP/IP stack on an AT91SAM7X again - this time using Eclipse:

A simple mouse driver is provided along with the WEB server demo.

#### 5. Open source lwIP TCP/IP stack on an AT91SAM7X:

Includes a more comprehensive interrupt driven driver for the SAM7X integrated EMAC peripheral.

#### 6. Open source uIP TCP/IP stack on an LPC2368:

Demonstrates control over the target hardware IO from the served WEB pages.

### 7. <u>LPC2368 project again - this time using Eclipse</u>:

The LPC2368 embedded WEB server example created using completely open source development tools.

#### 8. Open source uIP TCP/IP stack on an LPC2124:

Includes a polled mode Crystal LAN CS8900 driver (thanks to Paul Curtis).

## 9. WizNET hardware TCP/IP stack - I<sup>2</sup>C interface:

This example uses a TCP/IP coprocessor to produce an embedded WEB server through the I<sup>2</sup>C port!

### 10. Open source uIP TCP/IP stack and lwIP TCP/IP stack on an STR912 (ARM9):

This demo includes options to use either the uIP or the lwIP stack, this time targeted at an ARM9 processor.

#### 11. WizNET hardware TCP/IP stack - memory mapped interface:

This example uses the same TCP/IP coprocessor, but with a memory mapped interface on a Tern E-Engine controller.

# API

# **Upgrading FreeRTOS to V4.x.x**

FreeRTOS V4.0.0 introduces co-routine functionality. As the use of co-routines is optional FreeRTOS V4.0.0 is essentially backward compatable with V3.x.x releases.

To upgrade a project created with FreeRTOS V3.x.x for use with V4.0.0 simply ensure the following definitions are added to the projects FreeRTOSConfig.h file:

- #define configUSE\_TICK\_HOOK 0
- #define configUSE\_CO\_ROUTINES 0
- #define configMAX\_CO\_ROUTINE\_PRIORITIES 1

See the <u>Customisation</u> pages for information on using these new definitions, and the <u>co-routine documentation pages</u> for information on using co-routines.

# **Upgrading V4.0.5 to V4.1.0**

- The definition errQUEUE\_EMPTY has been redefined to 0.
- Prior to V4.1.0, under certain documented circumstances, it was possible for xQueueSend() and xQueueReceive() to return without having completed and without their block time expiring. The block time effectively stated a maximum block time, and the return value of the function needed to be checked to determine the reason for returning. This is no longer the case as the functions will only return once the block time has expired or they are able to complete their operation. It is therefore no longer necessary to wrap calls within loops.

# Upgrading V4.2.1 to V4.3.0

V4.3.0 introduces the new configKERNEL\_INTERRUPT\_PRIORITY parameter to the Cortex-M3/IAR, dsPIC and PIC24 ports. This will be rolled out to other ports in time.

Users of any of the above mentioned ports must ensure they set interrupt priorities in accordance with the instruction provided on the <u>Customisation</u> page.

# Upgrading from V4.4.0 to V4.5.0

V4.5.0 introduces the xQueueSendToFront(), xQueueSendToBack() xQueuePeek() and mutex (as opposed to binary semaphore) functionality.

The xQueueSend() syntax is maintained to ensure backward compatibility, but new applications should use the new and equivalent xQueueSendToBack() in its place.

A new configuration item configUSE\_MUTEXES has been introduced. This must be set to 1 in order for the new mutex functionality to be available.

# **API Usage**

#### **General Information**

- Only those API functions specifically designated for use from within an ISR should be used from within an ISR.
- Tasks and co-routines use different API functions to access queues. A
  queue cannot be used to communicate between a task and a co-routine or
  visa versa.
- Intertask communication can be achieved using both the full featured API functions and the light weight API functions (those with "FromISR" in their name). Use of the light weight functions requires special consideration, as described under the heading "Performance tips and tricks using the light weight API".

#### Task API

A task may call any API function listed in the menu frame on the left **other than** those under the <u>co-routine specific</u> section.

#### **Co-Routine API**

In addition to the API functions listed under the <u>co-routine specific</u> section, a co-routine may use the following API calls.

- taskYIELD() will yield the task in which the co-routines are running.
- taskENTER CRITICAL().
- taskEXIT\_CRITICAL().
- vTaskStartScheduler() this is still used to start the scheduler even if the application only includes co-routines and no tasks.
- vTaskSuspendAll() can still be used to lock the scheduler.
- xTaskResumeAll()
- xTaskGetTickCount()
- uxTaskGetNumberOfTasks()

# Configuration

# **Customization**

A number of configurable parameters exist that allow the FreeRTOS kernel to be tailored to your particular application. These items are located in a file called FreeRTOSConfig.h. Each demo application included in the FreeRTOS source code download has its own FreeRTOSConfig.h file. Here is a typical example, followed by an explanation of each parameter:

```
#ifndef FREERTOS CONFIG H
#define FREERTOS_CONFIG_H
/* Here is a good place to include header files that are required
across
your application. */
#include "something.h"
#define configUSE PREEMPTION
#define configUSE IDLE HOOK
#define configUSE_TICK_HOOK
#define configCPU_CLOCK_HZ
                                        58982400
#define configTICK_RATE_HZ
                                         250
#define configMAX_PRIORITIES
                                         5
#define configMINIMAL STACK SIZE
                                        128
#define configTOTAL_HEAP_SIZE
#define configMAX_TASK_NAME_LEN
                                         10240
                                         16
#define configUSE_TRACE_FACILITY
#define configUSE_16_BIT_TICKS
                                          0
#define configIDLE_SHOULD_YIELD
                                          1
#define configUSE_MUTEXES
                                          0
#define INCLUDE_vTaskPrioritySet #define INCLUDE_uxTaskPriorityGet
#define INCLUDE vTaskDelete
#define INCLUDE vTaskCleanUpResources 0
#define INCLUDE_vTaskSuspend
                                          1
#define INCLUDE vResumeFromISR
#define INCLUDE_vTaskDelayUntil
#define INCLUDE_vTaskDelay
#define INCLUDE_xTaskGetSchedulerState
#define INCLUDE_xTaskGetCurrentTaskHandle 1
#define configUSE_CO_ROUTINES
#define configMAX CO ROUTINE PRIORITIES
                                          1
#define configKERNEL_INTERRUPT_PRIORITY
                                              [dependent of processor]
#endif /* FREERTOS CONFIG H */
```

# 'config' Parameters

## configUSE\_PREEMPTION

Set to 1 to use the preemptive kernel, or 0 to use the cooperative kernel.

# configUSE\_IDLE\_HOOK

Set to 1 if you wish to use an idle hook, or 0 to omit an idle hook.

## configUSE\_TICK\_HOOK

Set to 1 if you wish to use an tick hook, or 0 to omit an tick hook.

## configCPU\_CLOCK\_HZ

Enter the frequency in Hz at which the *internal* processor core will be executing. This value is required in order to correctly configure timer peripherals.

# configTICK\_RATE\_HZ

The frequency of the RTOS tick interrupt.

The tick interrupt is used to measure time. Therefore a higher tick frequency means time can be measured to a higher resolution. However, a high tick frequency also means that the kernel will use more CPU time so be less efficient. The RTOS demo applications all use a tick rate of 1000Hz. This is used to test the kernel and is higher than would normally be required.

More than one task can share the same priority. The kernel will share processor time between tasks of the same priority by switching between the tasks during each RTOS tick. A high tick rate frequency will therefore also have the effect of reducing the 'time slice' given to each task.

# configMAX\_PRIORITIES

The number of <u>priorities</u> available to the application tasks. Any number of tasks can share the same priority. Co-routines are prioritised separately - see configMAX\_CO\_ROUTINE\_PRIORITIES.

Each available priority consumes RAM within the kernel so this value should not be set any higher than actually required by your application.

# configMINIMAL\_STACK\_SIZE

The size of the stack used by the idle task. Generally this should not be reduced from the value set in the FreeRTOSConfig.h file provided with the demo application for the port you are using.

# configTOTAL\_HEAP\_SIZE

The total amount of RAM available to the kernel.

This value will only be used if your application makes use of one of the sample memory allocation schemes provided in the FreeRTOS source code download. See the memory configuration section for further details.

# configMAX\_TASK\_NAME\_LEN

The maximum permissible length of the descriptive name given to a task when the task is created. The length is specified in the number of characters *including* the NULL termination byte.

# configUSE\_TRACE\_FACILITY

Set to 1 if you wish the trace visualisation functionality to be available, or 0 if the trace functionality is not going to be used. If you use the trace functionality a trace buffer must also be provided.

# configUSE\_16\_BIT\_TICKS

Time is measured in 'ticks' - which is the number of times the tick interrupt has executed since the kernel was started. The tick count is held in a variable of type portTickType.

Defining configUSE\_16\_BIT\_TICKS as 1 causes portTickType to be defined (typedef'ed) as an unsigned 16bit type. Defining configUSE\_16\_BIT\_TICKS as 0 causes portTickType to be defined (typedef'ed) as an unsigned 32bit type.

Using a 16 bit type will greatly improve performance on 8 and 16 bit architectures, but limits the maximum specifiable time period to 65535 'ticks'. Therefore, assuming a tick frequency of 250Hz, the maximum time a task can delay or block when a 16bit counter is used is 262 seconds, compared to 17179869 seconds when using a 32bit counter.


## configIDLE\_SHOULD\_YIELD

This parameter controls the behaviour of tasks at the idle priority. It only has an effect if:

- 1. The preemptive scheduler is being used.
- 2. The users application creates tasks that run at the idle priority.

Tasks that share the same priority will time slice. Assuming none of the tasks get preempted, it might be assumed that each task of at a given priority will be allocated an equal amount of processing time - and if the shared priority is above the idle priority then this is indeed the case.

When tasks share the idle priority the behaviour can be slightly different. When configIDLE\_SHOULD\_YIELD is set to 1 the idle task will yield immediately should any other task at the idle priority be ready to run. This ensures the minimum amount of time is spent in the idle task when application tasks are available for scheduling. This behaviour can however have undesirable effects (depending on the needs of your application) as depicted below:

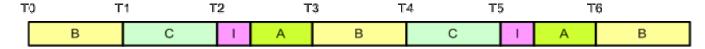

This diagram shows the execution pattern of four tasks at the idle priority. Tasks A, B and C are application tasks. Task I is the idle task. A context switch occurs with regular period at times T0, T1, ..., T6. When the idle task yields task A starts to execute - but the idle task has already taken up some of the current time slice. This results in task I and task A effectively sharing a time slice. The application tasks B and C therefore get more processing time than the application task A.

This situation can be avoided by:

- If appropriate, using an <u>idle hook</u> in place of separate tasks at the idle priority.
- Creating all application tasks at a priority greater than the idle priority.
- Setting configIDLE SHOULD YIELD to 0.

Setting configIDLE\_SHOULD\_YIELD prevents the idle task from yielding processing time until the end of its time slice. This ensure all tasks at the idle priority are allocated an equal amount of processing time - but at the cost of a greater proportion of the total processing time being allocated to the idle task.

## configUSE\_USE\_MUTEXES

Set to 1 to include mutex functionality in the build, or 0 to omit mutex functionality from the build. Readers should familiarise themselves with the differences between mutexes and binary semaphores in relation to the FreeRTOS.org functionality.

# configUSE\_CO\_ROUTINES

Set to 1 to include co-routine functionality in the build, or 0 to omit co-routine functionality from the build. To include co-routines croutine.c must be included in the project.

# configMAX\_CO\_ROUTINE\_PRIORITIES

The number of <u>priorities</u> available to the application co-routines. Any number of co-routines can share the same priority. Tasks are prioritised separately - see configMAX\_PRIORITIES.

# configKERNEL\_INTERRUPT\_PRIORITY

Currently only in Cortex-M3/IAR, PIC24 and dsPIC ports. Other ports will get upgraded shortly.

This sets the interrupt priority used by the kernel. The kernel should use a low interrupt priority, allowing higher priority interrupts to be unaffected by the kernel entering critical sections. Instead of critical sections globally disabling interrupts, they only disable interrupts that are below the kernel interrupt priority.

This permits very flexible interrupt handling:

At the kernel priority level interrupt handling 'tasks' can be written and
prioritised as per any other task in the system. These are tasks that are
woken by an interrupt. The interrupt service routine (ISR) itself should be
written to be as short as it possibly can be - it just grabs the data then
wakes the high priority handler task. The ISR then returns directly into the
woken handler task - so interrupt processing is contiguous in time just as if

- it were all done in the ISR itself. The benefit of this is that all interrupts remain enabled while the handler task executes.
- ISR's running above the kernel priority are never masked out by the kernel itself, so their responsiveness is not effected by the kernel functionality. However, such ISR's cannot use the FreeRTOS.org API functions.

To utilize this scheme your application design must adhere to the following rule:

Any interrupt that uses the FreeRTOS.org API must be set to the same priority as the kernel (as configured by the configKERNEL INTERRUPT PRIORITY macro).

#### **INCLUDE Parameters**

The macros starting 'INCLUDE' allow those components of the real time kernel not utilized by your application to be excluded from your build. This ensures the RTOS does not use any more ROM or RAM than necessary for your particular embedded application.

Each macro takes the form ...

```
INCLUDE FunctionName
```

... where FunctionName indicates the API function (or set of functions) that can optionally be excluded. To include the API function set the macro to 1, to exclude the function set the macro to 0. For example, to include the vTaskDelete() API function use:

```
#define INCLUDE_vTaskDelete
```

To exclude vTaskDelete() from your build use:

```
#define INCLUDE_vTaskDelete 0
```

# **Memory Management**

The RTOS kernel has to allocate RAM each time a task, queue or semaphore is created. The malloc() and free() functions can sometimes be used for this purpose, but ...

- 1. they are not always available on embedded systems,
- 2. take up valuable code space.
- 3. are not thread safe, and
- 4. are not deterministic (the amount of time taken to execute the function will differ from call to call)

... so more often than not an alternative scheme is required.

One embedded / real time system can have very different RAM and timing requirements to another - so a single RAM allocation algorithm will only ever be appropriate for a subset of applications.

To get around this problem the memory allocation API is included in the RTOS portable layer - where an application specific implementation appropriate for the real time system being developed can be provided. When the real time kernel requires RAM, instead of calling malloc() it makes a call to pvPortMalloc(). When RAM is being freed, instead of calling free() the real time kernel makes a call to vPortFree().

#### Schemes included in the source code download

Three sample RAM allocation schemes are included in the FreeRTOS source code download (V2.5.0 onwards). These are used by the various demo applications as appropriate. The following subsections describe the available schemes, when they should be used, and highlight the demo applications that demonstrate their use.

Each scheme is contained in a separate source file (heap\_1.c, heap\_2.c and heap\_3.c respectively) which can be located in the <code>Source/Portable/MemMang</code> directory. Other schemes can be added if required.

# Scheme 1 - heap\_1.c

This is the simplest scheme of all. It does *not* permit memory to be freed once it has been allocated, but despite this is suitable for a surprisingly large number of applications.

The algorithm simply subdivides a single array into smaller blocks as requests for RAM are made. The total size of the array is set by the definition configTOTAL\_HEAP\_SIZE - which is defined in FreeRTOSConfig.h.

#### This scheme:

- Can be used if your application never deletes a task or queue (no calls to vTaskDelete() or vQueueDelete() are ever made).
- Is always deterministic (always takes the same amount of time to return a block).
- Is used by the PIC, AVR and 8051 demo applications as these do not dynamically create or delete tasks after vTaskStartScheduler() has been called.

heap\_1.c is suitable for a lot of small real time systems provided that all tasks and queues are created before the kernel is started.

## Scheme 2 - heap\_2.c

This scheme uses a best fit algorithm and, unlike scheme 1, allows previously allocated blocks to be freed. It does *not* however combine adjacent free blocks into a single large block.

Again the total amount of available RAM is set by the definition configTOTAL\_HEAP\_SIZE - which is defined in FreeRTOSConfig.h.

#### This scheme:

- Can be used even when the application repeatedly calls
   vTaskCreate()/vTaskDelete() or vQueueCreate()/vQueueDelete() (causing
   multiple calls to pvPortMalloc() and vPortFree()).
- Should *not* be used if the memory being allocated and freed is of a random size this would only be the case if tasks being deleted each had a different stack depth, or queues being deleted were of different lengths.
- Could possible result in memory fragmentation problems should your application create blocks of queues and tasks in an unpredictable order. This would be unlikely for nearly all applications but should be kept in mind.
- Is not deterministic but is also not particularly inefficient.
- Is used by the ARM7, and Flashlite demo applications as these dynamically create and delete tasks.

heap\_2.c is suitable for most small real time systems that have to dynamically create tasks.

## Scheme 3 - heap\_3.c

This is just a wrapper for the standard malloc() and free() functions. It makes them thread safe.

#### This scheme:

- Requires the linker to setup a heap, and the compiler library to provide malloc() and free() implementations.
- Is not deterministic.
- Will probably considerably increase the kernel code size.
- Is used by the PC (x86 single board computer) demo application.

## Task Creation

## **Detailed Description**

#### **xTaskHandle**

task, h

Type by which tasks are referenced. For example, a call to xTaskCreate returns (via a pointer parameter) an xTaskHandle variable that can then be used as a parameter to vTaskDelete to delete the task.

## **xTaskCreate**

#### task. h

Create a new task and add it to the list of tasks that are ready to run.

#### **Parameters:**

pvTaskCode Pointer to the task entry function. Tasks must be implemented to

never return (i.e. continuous loop).

pcName A descriptive name for the task. This is mainly used to facilitate

debugging. Max length defined by configMAX\_TASK\_NAME\_LEN.

usStackDepth The size of the task stack specified as the number of variables the

stack can hold - not the number of bytes. For example, if the stack is 16 bits wide and usStackDepth is defined as 100, 200 bytes will be allocated for stack storage. The stack depth multiplied by the stack width must not exceed the maximum value that can be

contained in a variable of type size t.

pvParameters Pointer that will be used as the parameter for the task being

created.

uxPriority The priority at which the task should run.

pvCreatedTask Used to pass back a handle by which the created task can be

referenced.

#### Returns:

pdPASS if the task was successfully created and added to a ready list, otherwise an error code defined in the file projdefs. h

### Example usage:

```
// Task to be created.
void vTaskCode( void * pvParameters )
{
    for( ;; )
    {
        // Task code goes here.
    }
}
// Function that creates a task.
void vOtherFunction( void )
{
    unsigned char ucParameterToPass;
xTaskHandle xHandle;
    // Create the task, storing the handle.
    xTaskCreate( vTaskCode, "NAME", STACK_SIZE, &ucParameterToPass,tskIDLE_PRIORITY, &xHandle );
    // Use the handle to delete the task.
    vTaskDelete( xHandle );
}
```

## vTaskDelete

```
task. h
void vTaskDelete( xTaskHandle pxTask );
```

INCLUDE\_vTaskDelete must be defined as 1 for this function to be available. See the configuration section for more information.

Remove a task from the RTOS real time kernels management. The task being deleted will be removed from all ready, blocked, suspended and event lists.

NOTE: The idle task is responsible for freeing the kernel allocated memory from tasks that have been deleted. It is therefore important that the idle task is not starved of microcontroller processing time if your application makes any calls to vTaskDelete (). Memory allocated by the task code is not automatically freed, and should be freed before the task is deleted.

See the demo application file death. c for sample code that utilises vTaskDelete ().

#### Parameters:

*pxTask* The handle of the task to be deleted. Passing NULL will cause the calling task to be deleted.

```
void vOtherFunction( void )
{
    xTaskHandle xHandle;
        // Create the task, storing the handle.
        xTaskCreate( vTaskCode, "NAME", STACK_SIZE, NULL,
tskIDLE_PRIORITY, &xHandle );
        // Use the handle to delete the task.
        vTaskDelete( xHandle );
}
```

## **Task Control**

# vTaskDelay

```
task.h
void vTaskDelay( portTickType xTicksToDelay );
```

INCLUDE\_vTaskDelay must be defined as 1 for this function to be available. See the configuration section for more information.

Delay a task for a given number of ticks. The actual time that the task remains blocked depends on the tick rate. The constant portTICK\_RATE\_MS can be used to calculate real time from the tick rate - with the resolution of one tick period.

#### Parameters:

*xTicksToDelay* The amount of time, in tick periods, that the calling task should block.

```
// Perform an action every 10 ticks.
// NOTE:
// This is for demonstration only and would be better achieved
// using vTaskDelayUntil().
void vTaskFunction( void * pvParameters )
{
portTickType xDelay, xNextTime;
    // Calc the time at which we want to perform the action
    // next.
    xNextTime = xTaskGetTickCount () + ( portTickType ) 10;
    for( ;; )
    {
        xDelay = xNextTime - xTaskGetTickCount ();
        xNextTime += ( portTickType ) 10;
        // Guard against overflow
        if( xDelay <= ( portTickType ) 10 )
        {
            vTaskDelay( xDelay );
        }
}</pre>
```

```
// Perform action here.
}
```

# vTaskDelayUntil

#### task. h

```
void vTaskDelayUntil( portTickType *pxPreviousWakeTime, portTickType
xTimeIncrement );
```

INCLUDE\_vTaskDelayUntil must be defined as 1 for this function to be available. See the configuration section for more information.

Delay a task until a specified time. This function can be used by cyclical tasks to ensure a constant execution frequency.

This function differs from vTaskDelay() in one important aspect: vTaskDelay() specifies a time at which the task wishes to unblock *relative* to the time at which vTaskDelay() is called, whereas vTaskDelayUntil() specifies an *absolute* time at which the task wishes to unblock.

vTaskDelay() will cause a task to block for the specified number of ticks from the time vTaskDelay() is called. It is therefore difficult to use vTaskDelay() by itself to generate a fixed execution frequency as the time between a task unblocking following a call to vTaskDelay() and that task next calling vTaskDelay() may not be fixed [the task may take a different path though the code between calls, or may get interrupted or preempted a different number of times each time it executes].

Whereas vTaskDelay() specifies a wake time relative to the time at which the function is called, vTaskDelayUntil() specifies the absolute (exact) time at which it wishes to unblock.

It should be noted that vTaskDelayUntil() will return immediately (without blocking) if it is used to specify a wake time that is already in the past. Therefore a task using vTaskDelayUntil() to execute periodically will have to re-calculate its required wake time if the periodic execution is halted for any reason (for example, the task is temporarily placed into the Suspended state) causing the task to miss one or more periodic executions. This can be detected by checking the variable passed by reference as the pxPreviousWakeTime parameter against the current tick count. This is however not necessary under most usage scenarios.

The constant configTICK\_RATE\_MS can be used to calculate real time from the tick rate - with the resolution of one tick period.

#### Parameters:

pxPreviousWakeTime Pointer to a variable that holds the time at which the task

was last unblocked. The variable must be initialised with the current time prior to its first use (see the example below). Following this the variable is automatically

updated within vTaskDelayUntil().

*xTimeIncrement* The cycle time period. The task will be unblocked at time

> (\*pxPreviousWakeTime + xTimeIncrement). Calling vTaskDelayUntil with the same xTimeIncrement parameter value will cause the task to execute with a fixed interval

period.

### Example usage:

```
// Perform an action every 10 ticks.
void vTaskFunction( void * pvParameters )
portTickType xLastWakeTime;
const portTickType xFrequency = 10;
    // Initialise the xLastWakeTime variable with the current time.
    xLastWakeTime = xTaskGetTickCount();
    for( ;; )
        // Wait for the next cycle.
        vTaskDelayUntil( &xLastWakeTime, xFrequency );
        // Perform action here.
}
```

# uxTaskPriorityGet

#### task, h

```
unsigned portBASE_TYPE uxTaskPriorityGet( xTaskHandle pxTask );
```

INCLUDE\_vTaskPriorityGet must be defined as 1 for this function to be available. See the configuration section for more information.

Obtain the priority of any task.

### **Parameters:**

pxTask Handle of the task to be queried. Passing a NULL handle results in the priority of the calling task being returned.

#### Returns:

The priority of pxTask.

```
void vAFunction( void )
```

```
xTaskHandle xHandle;
    // Create a task, storing the handle.
    xTaskCreate( vTaskCode, "NAME", STACK_SIZE, NULL,
tskIDLE_PRIORITY, &xHandle );
    // ...
    // Use the handle to obtain the priority of the created task.
    // It was created with tskIDLE_PRIORITY, but may have changed
    // it itself.
    if( uxTaskPriorityGet( xHandle ) != tskIDLE_PRIORITY )
    {
        // The task has changed it's priority.
    }
    // ...
    // Is our priority higher than the created task?
    if( uxTaskPriorityGet( xHandle ) < uxTaskPriorityGet( NULL ) )
    {
        // Our priority (obtained using NULL handle) is higher.
    }
}</pre>
```

# vTaskPrioritySet

#### task. h

```
void vTaskPrioritySet( xTaskHandle pxTask, unsigned portBASE_TYPE
uxNewPriority );
```

INCLUDE\_vTaskPrioritySet must be defined as 1 for this function to be available. See the configuration section for more information.

Set the priority of any task.

A context switch will occur before the function returns if the priority being set is higher than the currently executing task.

#### **Parameters:**

pxTask Handle to the task for which the priority is being set. Passing a NULL handle results in the priority of the calling task being set.

uxNewPriority The priority to which the task will be set.

```
void vAFunction( void )
{
    xTaskHandle xHandle;
        // Create a task, storing the handle.
        xTaskCreate( vTaskCode, "NAME", STACK_SIZE, NULL,
tskIDLE_PRIORITY, &xHandle );
        // ...
        // Use the handle to raise the priority of the created task.
        vTaskPrioritySet( xHandle, tskIDLE_PRIORITY + 1 );
        // ...
        // Use a NULL handle to raise our priority to the same value.
```

```
vTaskPrioritySet( NULL, tskIDLE_PRIORITY + 1 );
}
```

# vTaskSuspend

#### task. h

```
void vTaskSuspend( xTaskHandle pxTaskToSuspend );
```

INCLUDE\_vTaskSuspend must be defined as 1 for this function to be available. See the configuration section for more information.

Suspend any task. When suspended a task will never get any microcontroller processing time, no matter what its priority.

Calls to vTaskSuspend are not accumulative - i.e. calling vTaskSuspend () twice on the same task still only requires one call to vTaskResume () to ready the suspended task.

#### **Parameters:**

pxTaskToSuspend Handle to the task being suspended. Passing a NULL handle will cause the calling task to be suspended.

### Example usage:

```
void vAFunction( void )
{
    xTaskHandle xHandle;
        // Create a task, storing the handle.
        xTaskCreate( vTaskCode, "NAME", STACK_SIZE, NULL,
tskIDLE_PRIORITY, &xHandle );
        // ...
        // Use the handle to suspend the created task.
        vTaskSuspend( xHandle );
        // ...
        // The created task will not run during this period, unless
        // another task calls vTaskResume( xHandle ).
        // ...
        // Suspend ourselves.
        vTaskSuspend( NULL );
        // We cannot get here unless another task calls vTaskResume
        // with our handle as the parameter.
}
```

## vTaskResume

#### task. h

```
void vTaskResume( xTaskHandle pxTaskToResume );
```

INCLUDE\_vTaskSuspend must be defined as 1 for this function to be available. See the configuration section for more information.

Resumes a suspended task.

A task that has been suspended by one of more calls to vTaskSuspend () will be made available for running again by a single call to vTaskResume ().

#### Parameters:

pxTaskToResume Handle to the task being readied.

## Example usage:

```
void vAFunction( void )
{
    xTaskHandle xHandle;
        // Create a task, storing the handle.
        xTaskCreate( vTaskCode, "NAME", STACK_SIZE, NULL,

tskIDLE_PRIORITY, &xHandle );
        // ...
        // Use the handle to suspend the created task.
        vTaskSuspend( xHandle );
        // ...
        // The created task will not run during this period, unless
        // another task calls vTaskResume( xHandle ).
        // ...
        // Resume the suspended task ourselves.
        vTaskResume( xHandle );
        // The created task will once again get microcontroller processing
        // time in accordance with it priority within the system.
}
```

## vTaskResumeFromISR

#### task. h

```
portBASE_TYPE vTaskResumeFromISR( xTaskHandle pxTaskToResume );
```

INCLUDE\_vTaskSuspend and INCLUDE\_xTaskResumeFromISR must be defined as 1 for this function to be available. See the configuration section for more information.

A function to resume a suspended task that can be called from within an ISR.

A task that has been suspended by one of more calls to vTaskSuspend() will be made available for running again by a single call to xTaskResumeFromISR().

vTaskResumeFromISR() should not be used to synchronise a task with an interrupt if there is a chance that the interrupt could arrive prior to the task being

suspended - as this can lead to interrupts being missed. Use of a semaphore as a synchronisation mechanism would avoid this eventuality.

#### Parameters:

pxTaskToResume Handle to the task being readied.

#### Returns:

pdTRUE if resuming the task should result in a context switch, otherwise pdFALSE. This is used by the ISR to determine if a context switch may be required following the ISR.

```
xTaskHandle xHandle;
void vAFunction( void )
     // Create a task, storing the handle.
    xTaskCreate( vTaskCode, "NAME", STACK_SIZE, NULL,
tskIDLE_PRIORITY, &xHandle );
    // ... Rest of code.
void vTaskCode( void *pvParameters )
     // The task being suspended and resumed.
    for( ;; )
         // ... Perform some function here.
         // The task suspends itself.
        vTaskSuspend( NULL );
         // The task is now suspended, so will not reach here until the
ISR resumes it.
 }
void vAnExampleISR( void )
portBASE_TYPE xYieldRequired;
     // Resume the suspended task.
    xYieldRequired = xTaskResumeFromISR( xHandle );
     if( xYieldRequired == pdTRUE )
         // We should switch context so the ISR returns to a different
task.
        // NOTE: How this is done depends on the port you are using.
Check
        // the documentation and examples for your port.
        portYIELD_FROM_ISR();
     }
```

}

## **Kernel Control**

## **Detailed Description**

#### taskYIELD

task. h

Macro for forcing a context switch.

### taskENTER\_CRITICAL

task. h

Macro to mark the start of a critical code region. Preemptive context switches cannot occur when in a critical region.

NOTE: This may alter the stack (depending on the portable implementation) so must be used with care!

### taskEXIT\_CRITICAL

task. h

Macro to mark the end of a critical code region. Preemptive context switches cannot occur when in a critical region.

NOTE: This may alter the stack (depending on the portable implementation) so must be used with care!

### taskDISABLE\_INTERRUPTS

task. h

Macro to disable all maskable interrupts.

### taskENABLE INTERRUPTS

task. h

Macro to enable microcontroller interrupts.

## vTaskStartScheduler

```
task. h
void vTaskStartScheduler( void );
```

Starts the real time kernel tick processing. After calling the kernel has control over which tasks are executed and when.

The idle task is created automatically when vTaskStartScheduler() is called.

If vTaskStartScheduler() is successful the function will not return until an executing task calls vTaskEndScheduler(). The function might fail and return immediately if there is insufficient RAM available for the idle task to be created.

See the demo application file main. c for an example of creating tasks and starting the kernel.

## Example usage:

```
void vAFunction( void )
{
    // Create at least one task before starting the kernel.
    xTaskCreate( vTaskCode, "NAME", STACK_SIZE, NULL,
tskIDLE_PRIORITY, NULL );
    // Start the real time kernel with preemption.
    vTaskStartScheduler();
    // Will not get here unless a task calls vTaskEndScheduler ()
}
```

## vTaskEndScheduler

```
task. h
void vTaskEndScheduler( void );
```

Stops the real time kernel tick. All created tasks will be automatically deleted and multitasking (either preemptive or cooperative) will stop. Execution then resumes from the point where vTaskStartScheduler() was called, as if vTaskStartScheduler() had just returned.

See the demo application file main. c in the demo/PC directory for an example that uses vTaskEndScheduler ().

vTaskEndScheduler () requires an exit function to be defined within the portable layer (see vPortEndScheduler () in port. c for the PC port). This performs hardware specific operations such as stopping the kernel tick.

vTaskEndScheduler () will cause all of the resources allocated by the kernel to be freed - but will not free resources allocated by application tasks.

### Example usage:

```
void vTaskCode( void * pvParameters )
    for( ;; )
         // Task code goes here.
        // At some point we want to end the real time kernel
processing
        // so call ...
        vTaskEndScheduler ();
 void vAFunction( void )
    // Create at least one task before starting the kernel.
    xTaskCreate( vTaskCode, "NAME", STACK SIZE, NULL,
tskidle PRIORITY, NULL );
    // Start the real time kernel with preemption.
    vTaskStartScheduler();
    // Will only get here when the vTaskCode () task has called
    // vTaskEndScheduler (). When we get here we are back to single
task
    // execution.
```

# vTaskSuspendAll

```
task. h
void vTaskSuspendAll( void );
```

Suspends all real time kernel activity while keeping interrupts (including the kernel tick) enabled.

After calling vTaskSuspendAll () the calling task will continue to execute without risk of being swapped out until a call to xTaskResumeAll () has been made.

```
void vTask1( void * pvParameters )
     for( ;; )
         // Task code goes here.
         // At some point the task wants to perform a long operation
during
         // which it does not want to get swapped out. It cannot use
         // taskENTER_CRITICAL ()/taskEXIT_CRITICAL () as the length of
the
         // operation may cause interrupts to be missed - including the
         // ticks.
         // Prevent the real time kernel swapping out the task.
         vTaskSuspendAll ();
         // Perform the operation here. There is no need to use
critical
        // sections as we have all the microcontroller processing
time.
         // During this time interrupts will still operate and the
kernel
         // tick count will be maintained.
         // The operation is complete. Restart the kernel.
         xTaskResumeAll ();
     }
 }
```

## **xTaskResumeAll**

```
task. h
portBASE TYPE xTaskResumeAll( void );
```

Resumes real time kernel activity following a call to vTaskSuspendAll (). After a call to xTaskSuspendAll () the kernel will take control of which task is executing at any time.

#### Returns:

If resuming the scheduler caused a context switch then pdTRUE is returned, otherwise pdFALSE is returned.

```
void vTask1( void * pvParameters )
{
    for(;;)
    {
        // Task code goes here.
        // ...
        // At some point the task wants to perform a long operation during
        // which it does not want to get swapped out. It cannot use
```

```
// taskENTER_CRITICAL ()/taskEXIT_CRITICAL () as the length of
the
         // operation may cause interrupts to be missed - including the
         // ticks.
         // Prevent the real time kernel swapping out the task.
        xTaskSuspendAll ();
         // Perform the operation here. There is no need to use
critical
        // sections as we have all the microcontroller processing
time.
        // During this time interrupts will still operate and the real
         // time kernel tick count will be maintained.
         // The operation is complete. Restart the kernel. We want to
force
         // a context switch - but there is no point if resuming the
scheduler
         // caused a context switch already.
         if( !xTaskResumeAll () )
             taskYIELD ();
```

## **Task Utilities**

### **xTaskGetCurrentTaskHandle**

#### task.h

xTaskHandle xTaskGetCurrentTaskHandle( void );

INCLUDE\_xTaskGetCurrentTaskHandle must be set to 1 for this function to be available.

#### **Returns:**

The handle of the currently running (calling) task.

#### xTaskGetTickCount

#### tack h

volatile portTickType xTaskGetTickCount( void );

INCLUDE\_xTaskGetSchedulerState must be set to 1 for this function to be available.

#### Returns:

The count of ticks since vTaskStartScheduler was called.

#### xTaskGetSchedulerState

#### task.h

portBASE\_TYPE xTaskGetSchedulerState( void );

#### Returns:

One of the following constants (defined within task.h): taskSCHEDULER\_NOT\_STARTED, taskSCHEDULER\_RUNNING, taskSCHEDULER\_SUSPENDED.

#### uxTaskGetNumberOfTasks

#### task.h

unsigned portBASE\_TYPE uxTaskGetNumberOfTasks( void );

#### Returns:

The number of tasks that the real time kernel is currently managing. This includes all ready, blocked and suspended tasks. A task that has been deleted but not yet freed by the idle task will also be included in the count.

#### vTaskList

#### task.h

void vTaskList( portCHAR \*pcWriteBuffer );

configUSE\_TRACE\_FACILITY, INCLUDE\_vTaskDelete and INCLUDE\_vTaskSuspend must all be defined as 1 for this function to be available. See the configuration section for more information.

NOTE: This function will disable interrupts for its duration. It is not intended for normal application runtime use but as a debug aid.

Lists all the current tasks, along with their current state and stack usage high water mark.

Tasks are reported as blocked ('B'), ready ('R'), deleted ('D') or suspended ('S').

#### Parameters:

pcWriteBuffer A buffer into which the above mentioned details will be written, in ascii form. This buffer is assumed to be large enough to contain the generated report. Approximately 40 bytes per task should be sufficient.

#### vTaskStartTrace

#### task.h

void vTaskStartTrace( portCHAR \* pcBuffer, unsigned portLONG
ulBufferSize );

Starts a real time kernel activity trace. The trace logs the identity of which task is running when.

The trace file is stored in binary format. A separate DOS utility called convtrce.exe is used to convert this into a tab delimited text file which can be viewed and plotted in a spread sheet.

#### Parameters:

pcBuffer The buffer into which the trace will be written.

ulBufferSize The size of pcBuffer in bytes. The trace will continue until either the

buffer in full, or ulTaskEndTrace() is called.

#### ulTaskEndTrace

#### task.h

unsigned portLONG ulTaskEndTrace( void );

Stops a kernel activity trace. See vTaskStartTrace().

#### Returns:

The number of bytes that have been written into the trace buffer.

# **Queue Management**

## **Detailed Description**

## uxQueueMessagesWaiting

#### queue.h

```
unsigned portBASE_TYPE uxQueueMessagesWaiting( xQueueHandle xQueue );
```

Return the number of messages stored in a queue.

#### Parameters:

*xQueue* A handle to the queue being queried.

#### Returns:

The number of messages available in the queue.

#### vQueueDelete

#### queue.h

void vQueueDelete( xQueueHandle xQueue );

Delete a queue - freeing all the memory allocated for storing of items placed on the queue.

#### Parameters:

*xQueue* A handle to the queue to be deleted.

## **xQueueCreate**

#### queue. h

Creates a new queue instance. This allocates the storage required by the new queue and returns a handle for the queue.

#### Parameters:

uxQueueLength The maximum number of items that the queue can contain.
 uxItemSize The number of bytes each item in the queue will require. Items are queued by copy, not by reference, so this is the number of bytes that will be copied for each posted item. Each item on the

queue must be the same size.

#### Returns:

If the queue is successfully create then a handle to the newly created queue is returned. If the queue cannot be created then 0 is returned. Example usage:

```
struct AMessage
{
    portCHAR ucMessageID;
    portCHAR ucData[ 20 ];
};

void vATask( void *pvParameters )
{
    xQueueHandle xQueue1, xQueue2;
        // Create a queue capable of containing 10 unsigned long values.
        xQueue1 = xQueueCreate( 10, sizeof( unsigned portLONG ) );
    if( xQueue1 == 0 )
        {
            // Queue was not created and must not be used.
        }
        // Create a queue capable of containing 10 pointers to AMessage
structures.
        // These should be passed by pointer as they contain a lot of data.
        xQueue2 = xQueueCreate( 10, sizeof( struct AMessage * ) );
        if( xQueue2 == 0 )
        {
            // XQueue2 == 0 }
        }
}
```

```
// Queue was not created and must not be used.
// ... Rest of task code.
```

## **xQueueSend**

### queue.h

```
portBASE_TYPE xQueueSend(
                           xQueueHandle xQueue,
                           const void * pvItemToQueue,
                           portTickType xTicksToWait
                        );
```

This is a macro that calls xQueueGenericSend(). It is included for backward compatibility with versions of FreeRTOS.org that did not include the xQueueSendToFront() and xQueueSendToBack() macros. It is equivalent to xQueueSendToBack().

Post an item on a queue. The item is queued by copy, not by reference. This function must not be called from an interrupt service routine. See xQueueSendFromISR() for an alternative which may be used in an ISR.

This function is part of the fully featured intertask communications API. See Design concepts and performance optimisation for advanced options and other information.

#### Parameters:

*xOueue* 

The handle to the queue on which the item is to be posted.

pvItemToOueue A pointer to the item that is to be placed on the queue. The size of the items the queue will hold was defined when the queue was created, so this many bytes will be copied from pvItemToQueue

into the queue storage area.

*xTicksToWait* 

The maximum amount of time the task should block waiting for space to become available on the queue, should it already be full. The call will return immediately if this is set to 0. The time is defined in tick periods so the constant portTICK RATE MS should be used to convert to real time if this is required.

If INCLUDE\_vTaskSuspend is set to '1' then specifying the block time as portMAX\_DELAY will cause the task to block indefinitely (without a timeout).

#### Returns:

pdTRUE if the item was successfully posted, otherwise errQUEUE FULL.

## Example usage:

```
struct AMessage
   portCHAR ucMessageID;
   portCHAR ucData[ 20 ];
 } xMessage;
 unsigned portLONG ulVar = 10UL;
 void vATask( void *pvParameters )
xQueueHandle xQueue1, xQueue2;
 struct AMessage *pxMessage;
    // Create a queue capable of containing 10 unsigned long values.
   xQueue1 = xQueueCreate( 10, sizeof( unsigned portLONG ) );
    // Create a queue capable of containing 10 pointers to AMessage
structures.
    // These should be passed by pointer as they contain a lot of data.
   xQueue2 = xQueueCreate( 10, sizeof( struct AMessage * ) );
    if(xQueue1 != 0)
        // Send an unsigned long. Wait for 10 ticks for space to
become
        // available if necessary.
        if( xQueueSend( xQueue1, ( void * ) &ulVar, ( portTickType ) 10
) != pdPASS )
            // Failed to post the message, even after 10 ticks.
    if( xQueue2 != 0 )
        // Send a pointer to a struct AMessage object. Don't block if
the
        // queue is already full.
        pxMessage = & xMessage;
       xQueueSend( xQueue2, ( void * ) &pxMessage, ( portTickType ) 0
);
       // ... Rest of task code.
 }
```

## **xQueueSendToBack**

Only available from FreeRTOS.org V4.5.0 onwards.

queue.h

);

This is a macro that calls xQueueGenericSend(). It is equivalent to xQueueSend().

Post an item to the back of a queue. The item is queued by copy, not by reference. This function must not be called from an interrupt service routine. See xQueueSendToBackFromISR () for an alternative which may be used in an ISR.

This function is part of the fully featured intertask communications API. See Design concepts and performance optimisation for advanced options and other information.

#### Parameters:

*xQueue* 

The handle to the queue on which the item is to be posted.

pvItemToQueue A pointer to the item that is to be placed on the queue. The size of the items the queue will hold was defined when the queue was created, so this many bytes will be copied from pvItemToQueue into the queue storage area.

*xTicksToWait* 

The maximum amount of time the task should block waiting for space to become available on the queue, should it already be full. The call will return immediately if this is set to 0. The time is defined in tick periods so the constant portTICK\_RATE\_MS should be used to convert to real time if this is required.

If <u>INCLUDE\_vTaskSuspend</u> is set to '1' then specifying the block time as portMAX DELAY will cause the task to block indefinitely (without a timeout).

#### Returns:

pdTRUE if the item was successfully posted, otherwise errQUEUE\_FULL. Example usage:

```
struct AMessage
   portCHAR ucMessageID;
   portCHAR ucData[ 20 ];
 } xMessage;
unsigned portLONG ulVar = 10UL;
void vATask( void *pvParameters )
xQueueHandle xQueue1, xQueue2;
struct AMessage *pxMessage;
   // Create a queue capable of containing 10 unsigned long values.
   xQueue1 = xQueueCreate( 10, sizeof( unsigned portLONG ) );
   // Create a queue capable of containing 10 pointers to AMessage
structures.
   // These should be passed by pointer as they contain a lot of data.
   xQueue2 = xQueueCreate( 10, sizeof( struct AMessage * ) );
   // ...
```

```
if( xQueue1 != 0 )
        // Send an unsigned long. Wait for 10 ticks for space to
become
        // available if necessary.
        if( xQueueSendToBack( xQueue1, ( void * ) &ulVar, (
portTickType ) 10 ) != pdPASS )
            // Failed to post the message, even after 10 ticks.
    if(xQueue2 != 0)
        // Send a pointer to a struct AMessage object. Don't block if
the
        // queue is already full.
       pxMessage = & xMessage;
       xQueueSendToBack( xQueue2, ( void * ) &pxMessage, (
portTickType ) 0 );
       // ... Rest of task code.
 }
```

## **xQueueSendToFront**

Only available from FreeRTOS.org V4.5.0 onwards.

queue.h

This is a macro that calls xQueueGenericSend().

Post an item to the front of a queue. The item is queued by copy, not by reference. This function must not be called from an interrupt service routine. See xQueueSendToFrontFromISR () for an alternative which may be used in an ISR.

This function is part of the fully featured intertask communications API. See <u>Design concepts and performance optimisation</u> for advanced options and other information.

#### Parameters:

*xQueue* The handle to the queue on which the item is to be posted.

pvItemToQueue A pointer to the item that is to be placed on the queue. The size of the items the queue will hold was defined when the queue was created, so this many bytes will be copied from pvItemToQueue into the queue storage area.

*xTicksToWait* 

The maximum amount of time the task should block waiting for space to become available on the queue, should it already be full. The call will return immediately if this is set to 0. The time is defined in tick periods so the constant portTICK\_RATE\_MS should be used to convert to real time if this is required.

If <u>INCLUDE\_vTaskSuspend</u> is set to '1' then specifying the block time as portMAX\_DELAY will cause the task to block indefinitely (without a timeout).

#### Returns:

pdTRUE if the item was successfully posted, otherwise errQUEUE\_FULL. Example usage:

```
struct AMessage
   portCHAR ucMessageID;
   portCHAR ucData[ 20 ];
 } xMessage;
 unsigned portLONG ulVar = 10UL;
 void vATask( void *pvParameters )
xQueueHandle xQueue1, xQueue2;
 struct AMessage *pxMessage;
    // Create a queue capable of containing 10 unsigned long values.
   xQueue1 = xQueueCreate( 10, sizeof( unsigned portLONG ) );
    // Create a queue capable of containing 10 pointers to AMessage
structures.
    // These should be passed by pointer as they contain a lot of data.
   xQueue2 = xQueueCreate( 10, sizeof( struct AMessage * ) );
    if( xQueue1 != 0 )
        // Send an unsigned long. Wait for 10 ticks for space to
become
        // available if necessary.
        if( xQueueSendToFront( xQueue1, ( void * ) &ulVar, (
portTickType ) 10 ) != pdPASS )
            // Failed to post the message, even after 10 ticks.
    if( xQueue2 != 0 )
        // Send a pointer to a struct AMessage object. Don't block if
the
        // queue is already full.
        pxMessage = & xMessage;
        xQueueSendToFront( xQueue2, ( void * ) &pxMessage, (
portTickType ) 0 );
```

```
}
    // ... Rest of task code.
}
```

## **xQueueReceive**

### queue. h

This is a macro that calls the xQueueGenericReceive() function.

Receive an item from a queue. The item is received by copy so a buffer of adequate size must be provided. The number of bytes copied into the buffer was defined when the queue was created.

This function must not be used in an interrupt service routine. See xQueueReceiveFromISR for an alternative that can.

This function is part of the fully featured intertask communications API. See <u>Design concepts and performance optimisation</u> for advanced options and other information.

#### Parameters:

pvBuffer Pointer to the buffer into which the received item will be copied.

xTicksToWait The maximum amount of time the task should block waiting for an item to receive should the queue be empty at the time of the call. The time is defined in tick periods so the constant portTICK\_RATE\_MS should be used to convert to real time if this is required.

If <u>INCLUDE\_vTaskSuspend</u> is set to '1' then specifying the block time as portMAX\_DELAY will cause the task to block indefinitely (without a timeout).

#### Returns:

pdTRUE if an item was successfully received from the queue, otherwise pdFALSE.

```
struct AMessage {
```

```
portCHAR ucMessageID;
   portCHAR ucData[ 20 ];
 } xMessage;
xQueueHandle xQueue;
 // Task to create a queue and post a value.
 void vATask( void *pvParameters )
 struct AMessage *pxMessage;
    // Create a queue capable of containing 10 pointers to AMessage
structures.
    // These should be passed by pointer as they contain a lot of data.
   xQueue = xQueueCreate( 10, sizeof( struct AMessage * ) );
    if(xQueue == 0)
        // Failed to create the queue.
    // ...
    // Send a pointer to a struct AMessage object. Don't block if the
    // queue is already full.
   pxMessage = & xMessage;
   xQueueSend( xQueue, ( void * ) &pxMessage, ( portTickType ) 0 );
       // ... Rest of task code.
 // Task to receive from the queue.
void vADifferentTask( void *pvParameters )
 struct AMessage *pxRxedMessage;
    if( xQueue != 0 )
        // Receive a message on the created queue. Block for 10 ticks
if a
        // message is not immediately available.
        if( xQueueReceive( xQueue, &( pxRxedMessage ), ( portTickType )
10 ) )
            // pcRxedMessage now points to the struct AMessage variable
posted
            // by vATask.
       // ... Rest of task code.
```

## **xQueuePeek**

Only available from FreeRTOS.org V4.5.0 onwards.

#### queue.h

```
portTickType xTicksToWait
);
```

This is a macro that calls the xQueueGenericReceive() function.

Receive an item from a queue without removing the item from the queue. The item is received by copy so a buffer of adequate size must be provided. The number of bytes copied into the buffer was defined when the queue was created.

Successfully received items remain on the queue so will be returned again by the next call, or a call to xQueueReceive().

This macro must not be used in an interrupt service routine.

#### Parameters:

*xQueue*The handle to the queue from which the item is to be received.

Pointer to the buffer into which the received item will be copied.

This must be at least large enough to hold the size of the queue item defined when the queue was created.

xTicksToWait The maximum amount of time the task should block waiting for an item to receive should the queue be empty at the time of the call. The time is defined in tick periods so the constant portTICK\_RATE\_MS should be used to convert to real time if this is required.

If <u>INCLUDE\_vTaskSuspend</u> is set to '1' then specifying the block time as portMAX\_DELAY will cause the task to block indefinitely (without a timeout).

#### Returns:

pdTRUE if an item was successfully received (peeked) from the queue, otherwise pdFALSE.

```
struct AMessage
{
    portCHAR ucMessageID;
    portCHAR ucData[ 20 ];
} xMessage;

xQueueHandle xQueue;

// Task to create a queue and post a value.
void vATask( void *pvParameters )
{
    struct AMessage *pxMessage;

    // Create a queue capable of containing 10 pointers to AMessage
structures.
    // These should be passed by pointer as they contain a lot of data.
    xQueue = xQueueCreate( 10, sizeof( struct AMessage * ) );
```

```
if(xQueue == 0)
        // Failed to create the queue.
    // ...
    // Send a pointer to a struct AMessage object. Don't block if the
    // queue is already full.
   pxMessage = & xMessage;
   xQueueSend( xQueue, ( void * ) &pxMessage, ( portTickType ) 0 );
    // ... Rest of task code.
 // Task to peek the data from the queue.
 void vADifferentTask( void *pvParameters )
 struct AMessage *pxRxedMessage;
    if( xQueue != 0 )
        // Peek a message on the created queue. Block for 10 ticks if
а
        // message is not immediately available.
        if( xQueuePeek( xQueue, &( pxRxedMessage ), ( portTickType ) 10
) )
            // pcRxedMessage now points to the struct AMessage variable
posted
            // by vATask, but the item still remains on the queue.
    // ... Rest of task code.
```

## **xQueueSendFromISR**

#### queue.h

This is a macro that calls xQueueGenericSendFromISR(). It is included for backward compatibility with versions of FreeRTOS.org that did not include the xQueueSendToBackFromISR() and xQueueSendToFrontFromISR() macros.

Post an item on a queue. It is safe to use this function from within an interrupt service routine.

Items are queued by copy not reference so it is preferable to only queue small items, especially when called from an ISR. In most cases it would be preferable to store a pointer to the item being queued.

#### **Parameters:**

*xQueue* The handle to the queue on which the item is to be

posted.

pvItemToQueue A pointer to the item that is to be placed on the queue.

The size of the items the queue will hold was defined when the queue was created, so this many bytes will be copied from pvItemToQueue into the queue storage area.

xTaskPreviouslyWoken This is included so an ISR can post onto the same queue

multiple times from a single interrupt. The first call should always pass in pdFALSE. Subsequent calls should pass in the value returned from the previous call. See the file serial .c in the PC port for a good example of this

mechanism.

#### Returns:

pdTRUE if a task was woken by posting onto the queue. This is used by the ISR to determine if a context switch may be required following the ISR. Example usage for buffered IO (where the ISR can obtain more than one value per call):

```
void vBufferISR( void )
portCHAR cIn;
portBASE TYPE xTaskWokenByPost;
    // We have not woken a task at the start of the ISR.
   xTaskWokenByPost = pdFALSE;
    // Loop until the buffer is empty.
   do
        // Obtain a byte from the buffer.
       cIn = portINPUT_BYTE( RX_REGISTER_ADDRESS );
        // Post the byte. The first time round the loop
xTaskWokenByPost
        // will be pdFALSE. If the queue send causes a task to wake we
do
        // not want the task to run until we have finished the ISR, so
        // xQueueSendFromISR does not cause a context switch. Also we
        // don't want subsequent posts to wake any other tasks, so we
store
        // the return value back into xTaskWokenByPost so
xQueueSendFromISR
       // knows not to wake any task the next iteration of the loop.
       xTaskWokenByPost = xQueueSendFromISR( xRxQueue, &cIn,
xTaskWokenByPost );
    } while( portINPUT_BYTE( BUFFER_COUNT ) );
```

## **xQueueSendToBackFromISR**

Only available from FreeRTOS.org V4.5.0 onwards.

queue.h

This is a macro that calls xQueueGenericSendFromISR().

Post an item to the back of a queue. It is safe to use this function from within an interrupt service routine.

Items are queued by copy not reference so it is preferable to only queue small items, especially when called from an ISR. In most cases it would be preferable to store a pointer to the item being queued.

#### Parameters:

*xQueue* The handle to the queue on which the item is to be

posted.

pvItemToQueue A pointer to the item that is to be placed on the queue.

The size of the items the queue will hold was defined when the queue was created, so this many bytes will be copied from pvItemToQueue into the queue storage area.

xTaskPreviouslyWoken This is included so an ISR can post onto the same queue

multiple times from a single interrupt. The first call should always pass in pdFALSE. Subsequent calls should pass in the value returned from the previous call. See the file serial .c in the PC port for a good example of this

mechanism.

#### Returns:

pdTRUE if a task was woken by posting onto the queue. This is used by the ISR to determine if a context switch may be required following the ISR. Example usage for buffered IO (where the ISR can obtain more than one value per call):

```
void vBufferISR( void )
portCHAR cIn;
portBASE TYPE xTaskWokenByPost;
    // We have not woken a task at the start of the ISR.
   xTaskWokenByPost = pdFALSE;
    // Loop until the buffer is empty.
   do
        // Obtain a byte from the buffer.
       cIn = portINPUT BYTE( RX REGISTER ADDRESS );
       // Post the byte. The first time round the loop
xTaskWokenByPost
        // will be pdFALSE. If the queue send causes a task to wake we
do
        // not want the task to run until we have finished the ISR, so
        // xQueueSendToBackFromISR does not cause a context switch.
       // don't want subsequent posts to wake any other tasks, so we
store
        // the return value back into xTaskWokenByPost so
xQueueSendToBackFromISR
       // knows not to wake any task the next iteration of the loop.
       xTaskWokenByPost = xQueueSendToBackFromISR( xRxQueue, &cIn,
xTaskWokenByPost );
    } while( portINPUT_BYTE( BUFFER_COUNT ) );
    // Now the buffer is empty we can switch context if necessary.
    if( xTaskWokenByPost )
        // We should switch context so the ISR returns to a different
task.
       // NOTE: How this is done depends on the port you are using.
Check
        // the documentation and examples for your port.
       portYIELD_FROM_ISR();
```

## **xQueueSendToFrontFromISR**

Only available from FreeRTOS.org V4.5.0 onwards.

queue.h

This is a macro that calls xQueueGenericSendFromISR().

Post an item to the front of a queue. It is safe to use this function from within an interrupt service routine.

Items are queued by copy not reference so it is preferable to only queue small items, especially when called from an ISR. In most cases it would be preferable to store a pointer to the item being queued.

#### **Parameters:**

*xQueue* The handle to the queue on which the item is to be

posted.

pvItemToQueue A pointer to the item that is to be placed on the queue.

The size of the items the queue will hold was defined when the queue was created, so this many bytes will be copied from pvItemToQueue into the queue storage area.

xTaskPreviouslyWoken This is included so an ISR can post onto the same queue

multiple times from a single interrupt. The first call should always pass in pdFALSE. Subsequent calls should pass in the value returned from the previous call. See the file serial .c in the PC port for a good example of this

mechanism.

#### Returns:

pdTRUE if a task was woken by posting onto the queue. This is used by the ISR to determine if a context switch may be required following the ISR. Example usage for buffered IO (where the ISR can obtain more than one value per call):

```
void vBufferISR( void )
{
portCHAR cIn;
portBASE_TYPE xTaskWokenByPost;
   // We have not woken a task at the start of the ISR.
   xTaskWokenByPost = pdFALSE;
   // Loop until the buffer is empty.
   do
   {
       // Obtain a byte from the buffer.
       cIn = portINPUT_BYTE( RX_REGISTER_ADDRESS );
```

```
// Post the byte. The first time round the loop
xTaskWokenByPost
        // will be pdFALSE. If the queue send causes a task to wake we
do
        // not want the task to run until we have finished the ISR, so
        // xQueueSendToFrontFromISR does not cause a context switch.
Also we
        // don't want subsequent posts to wake any other tasks, so we
store
        // the return value back into xTaskWokenByPost so
xOueueSendToFrontFromISR
        // knows not to wake any task the next iteration of the loop.
        xTaskWokenByPost = xQueueSendToFrontFromISR( xRxQueue, &cIn,
xTaskWokenByPost );
    } while( portINPUT_BYTE( BUFFER_COUNT ) );
    // Now the buffer is empty we can switch context if necessary.
    if( xTaskWokenByPost )
        // We should switch context so the ISR returns to a different
task.
        // NOTE: How this is done depends on the port you are using.
Check
        // the documentation and examples for your port.
        portYIELD_FROM_ISR();
    }
 }
```

## **xQueueReceiveFromISR**

```
queue. h
```

Receive an item from a queue. It is safe to use this function from within an interrupt service routine.

#### Parameters:

pxQueue The handle to the queue from which the item is to be received.

pvBuffer Pointer to the buffer into which the received item will be copied.

pxTaskWoken A task may be blocked waiting for space to become available on the queue. If xQueueReceiveFromISR causes such a task to unblock \*pxTaskWoken will get set to pdTRUE, otherwise \*pxTaskWoken will remain unchanged.

#### Returns:

# pdTRUE if an item was successfully received from the queue, otherwise pdFALSE.

```
xOueueHandle xOueue;
 // Function to create a queue and post some values.
 void vAFunction( void *pvParameters )
portCHAR cValueToPost;
 const portTickType xBlockTime = ( portTickType )0xff;
    // Create a queue capable of containing 10 characters.
   xQueue = xQueueCreate( 10, sizeof( portCHAR ) );
    if(xQueue == 0)
        // Failed to create the queue.
    // ...
    // Post some characters that will be used within an ISR. If the
    // is full then this task will block for xBlockTime ticks.
    cValueToPost = 'a';
   xQueueSend( xQueue, ( void * ) &cValueToPost, xBlockTime );
   cValueToPost = 'b';
   xQueueSend( xQueue, ( void * ) &cValueToPost, xBlockTime );
    // ... keep posting characters ... this task may block when the
queue
    // becomes full.
    cValueToPost = 'c';
   xQueueSend( xQueue, ( void * ) &cValueToPost, xBlockTime );
 // ISR that outputs all the characters received on the queue.
 void vISR_Routine( void )
portBASE_TYPE xTaskWokenByReceive = pdFALSE;
portCHAR cRxedChar;
   while( xQueueReceiveFromISR( xQueue, ( void * ) &cRxedChar,
&xTaskWokenByReceive) )
    {
        // A character was received. Output the character now.
        vOutputCharacter( cRxedChar );
        // If removing the character from the queue woke the task that
was
        // posting onto the queue xTaskWokenByReceive will have been
set to
        // pdTRUE. No matter how many times this loop iterates only
one
        // task will be woken.
    if( xTaskWokenByPost != pdFALSE )
        // We should switch context so the ISR returns to a different
task.
        // NOTE: How this is done depends on the port you are using.
Check
        // the documentation and examples for your port.
        taskYIELD ();
    }
```

}

# **Semaphores**

# **SemaphoreCreateBinary**

## semphr. h

vSemaphoreCreateBinary( xSemaphoreHandle xSemaphore )

Macro that creates a semaphore by using the existing queue mechanism. The queue length is 1 as this is a binary semaphore. The data size is 0 as we don't want to actually store any data - we just want to know if the queue is empty or full.

Binary semaphores and <u>mutexes</u> are very similar but have some subtle differences: Mutexes include a priority inheritance mechanism, binary semaphores do not. This makes binary semaphores the better choice for implementing synchronisation (between tasks or between tasks and an interrupt), and mutexes the better choice for implementing simple mutual exclusion.

A binary semaphore need not be given back once obtained, so task synchronisation can be implemented by one task/interrupt continuously 'giving' the semaphore while another continuously 'takes' the semaphore. This is demonstrated by the sample code on the <a href="mailto:xSemaphoreGiveFromISR()">xSemaphoreGiveFromISR()</a> documentation page.

The priority of a task that 'takes' a mutex can potentially be raised if another task of higher priority attempts to obtain the same mutex. The task that owns the mutex 'inherits' the priority of the task attempting to 'take' the same mutex. This means the mutex must always be 'given' back - otherwise the higher priority task will never be able to obtain the mutex, and the lower priority task will never 'disinherit' the priority. An example of a mutex being used to implement mutual exclusion is provided on the xSemaphoreTake() documentation page.

Both mutex and binary semaphores are assigned to variables of type xSemaphoreHandle and can be used in any API function that takes a parameter of this type.

#### Parameters:

*xSemaphore* Handle to the created semaphore. Should be of type xSemaphoreHandle.

#### Example usage:

xSemaphoreHandle xSemaphore;

```
void vATask( void * pvParameters )
{
    // Semaphore cannot be used before a call to vSemaphoreCreateBinary
().
    // This is a macro so pass the variable in directly.
    vSemaphoreCreateBinary( xSemaphore );
    if( xSemaphore != NULL )
    {
        // The semaphore was created successfully.
        // The semaphore can now be used.
    }
}
```

# **xSemaphoreCreateMutex**

Only available from FreeRTOS.org V4.5.0 onwards.

```
semphr. h
xSemaphoreHandle xQueueCreateMutex( void )
```

Macro that creates a mutex semaphore by using the existing queue mechanism.

Mutexes and <u>binary semaphores</u> are very similar but have some subtle differences: Mutexes include a priority inheritance mechanism, binary semaphores do not. This makes binary semaphores the better choice for implementing synchronisation (between tasks or between tasks and an interrupt), and mutexes the better choice for implementing simple mutual exclusion.

The priority of a task that 'takes' a mutex can potentially be raised if another task of higher priority attempts to obtain the same mutex. The task that owns the mutex 'inherits' the priority of the task attempting to 'take' the same mutex. This means the mutex must always be 'given' back - otherwise the higher priority task will never be able to obtain the mutex, and the lower priority task will never 'disinherit' the priority. An example of a mutex being used to implement mutual exclusion is provided on the xSemaphoreTake() documentation page.

A binary semaphore need not be given back once obtained, so task synchronisation can be implemented by one task/interrupt continuously 'giving' the semaphore while another continuously 'takes' the semaphore. This is demonstrated by the sample code on the <a href="mailto:xSemaphoreGiveFromISR()">xSemaphoreGiveFromISR()</a> documentation page.

Both mutex and binary semaphores are assigned to variables of type xSemaphoreHandle and can be used in any API function that takes a parameter of this type.

#### **Parameters:**

*xSemaphore* Handle to the created semaphore. Should be of type xSemaphoreHandle.

### Example usage:

```
xSemaphoreHandle xSemaphore;
void vATask( void * pvParameters )
{
    // Mutex semaphores cannot be used before a call to
    // vSemaphoreCreateMutex(). The created mutex is returned.
    xSemaphore = vSemaphoreCreateBinary();
    if( xSemaphore != NULL )
    {
        // The semaphore was created successfully.
        // The semaphore can now be used.
    }
}
```

# **xSemaphoreTake**

### semphr. h

Macro to obtain a semaphore. The semaphore must of been created using vSemaphoreCreateBinary ().

This macro must not be called from an ISR. xQueueReceiveFromISR() can be used to take a semaphore from within an interrupt if required, although this would not be a normal operation. Semaphores use queues as their underlying mechanism, so functions are to some extent interoperable. This function is part of the fully featured intertask communications API. See <a href="Design concepts and performance optimisation">Design concepts and performance optimisation</a> for advanced options and other information.

#### Parameters:

*xSemaphore* A handle to the semaphore being obtained. This is the handle returned by vSemaphoreCreateBinary ();

*xBlockTime* The time in ticks to wait for the semaphore to become available. The macro portTICK\_RATE\_MS can be used to convert this to a real time. A block time of zero can be used to poll the semaphore.

If <u>INCLUDE\_vTaskSuspend</u> is set to '1' then specifying the block time as portMAX\_DELAY will cause the task to block indefinitely (without a timeout).

#### Returns:

pdTRUE if the semaphore was obtained. pdFALSE if xBlockTime expired without the semaphore becoming available.

## Example usage:

```
xSemaphoreHandle xSemaphore = NULL;
 // A task that creates a semaphore.
void vATask( void * pvParameters )
    // Create the semaphore to guard a shared resource. As we are
using
    // the semaphore for mutual exclusion we create a mutex semaphore
    // rather than a binary semaphore.
   xSemaphore = xSemaphoreCreateMutex();
 // A task that uses the semaphore.
 void vAnotherTask( void * pvParameters )
    // ... Do other things.
    if( xSemaphore != NULL )
        // See if we can obtain the semaphore. If the semaphore is not
available
        // wait 10 ticks to see if it becomes free.
        if( xSemaphoreTake( xSemaphore, ( portTickType ) 10 ) == pdTRUE
)
            // We were able to obtain the semaphore and can now access
the
            // shared resource.
            // We have finished accessing the shared resource. Release
the
            // semaphore.
            xSemaphoreGive(xSemaphore);
        }
        else
            // We could not obtain the semaphore and can therefore not
access
            // the shared resource safely.
        }
 }
```

# **xSemaphoreGive**

```
semphr. h
```

```
xSemaphoreGive(xSemaphoreHandlexSemaphore)
```

*Macro* to release a semaphore. The semaphore must of been created using vSemaphoreCreateBinary (), and obtained using sSemaphoreTake ().

This must not be used from an ISR. See xSemaphoreGiveFromISR() for an alternative which can be used from an ISR.

This function is part of the fully featured intertask communications API. See <u>Design concepts and performance optimisation</u> for advanced options and other information.

#### Parameters:

*xSemaphore* A handle to the semaphore being released. This is the handle returned by vSemaphoreCreateBinary ();

#### Returns:

pdTRUE if the semaphore was released. pdFALSE if an error occurred. Semaphores are implemented using queues. An error can occur if there is no space on the queue to post a message - indicating that the semaphore was not first obtained correctly.

```
xSemaphoreHandle xSemaphore = NULL;
void vATask( void * pvParameters )
    // Create the semaphore to guard a shared resource. As we are
using
    // the semaphore for mutual exclusion we create a mutex semaphore
    // rather than a binary semaphore.
   xSemaphore = xSemaphoreCreateMutex();
    if( xSemaphore != NULL )
        if( xSemaphoreGive( xSemaphore ) != pdTRUE )
            // We would expect this call to fail because we cannot give
            // a semaphore without first "taking" it!
        }
        // Obtain the semaphore - don't block if the semaphore is not
        // immediately available.
        if( xSemaphoreTake( xSemaphore, ( portTickType ) 0 ) )
            // We now have the semaphore and can access the shared
resource.
            // ...
            // We have finished accessing the shared resource so can
free the
```

```
// semaphore.
            if( xSemaphoreGive( xSemaphore ) != pdTRUE )
                // We would not expect this call to fail because we
must have
                // obtained the semaphore to get here.
        }
```

# **xSemaphoreGiveFromISR**

#### semphr. h

```
xSemaphoreGiveFromISR(
                         xSemaphoreHandle xSemaphore,
                         portBASE TYPE xTaskPreviouslyWoken
```

Macro to release a semaphore. The semaphore must of been created using vSemaphoreCreateBinary(), and obtained using xSemaphoreTake().

This macro can be used from an ISR.

#### **Parameters:**

*xSemaphore* 

A handle to the semaphore being released. This is the handle returned by vSemaphoreCreateBinary ();

xTaskPreviouslyWoken This is included so an ISR can make multiple calls to xSemaphoreGiveFromISR() from a single interrupt. The first call should always pass in pdFALSE. Subsequent calls should pass in the value returned from the previous call. See the file serial .c in the PC port for a good example of using xSemaphoreGiveFromISR().

#### Returns:

pdTRUE if a task was woken by releasing the semaphore. This is used by the ISR to determine if a context switch may be required following the ISR. Example usage:

```
#define LONG TIME Oxffff
 #define TICKS TO WAIT 10
xSemaphoreHandle xSemaphore = NULL;
 // Repetitive task.
void vATask( void * pvParameters )
    // We are using the semaphore for synchronisation to we create a
binary
    // semaphore rather than a mutex. We must make sure that the
interrupt
   // does not attempt to use the semaphore before it is created!
```

```
xSemaphoreCreateBinary( xSemaphore );
    for( ;; )
        // We want this task to run every 10 ticks or a timer. The
        // was created before this task was started
        // Block waiting for the semaphore to become available.
        if( xSemaphoreTake( xSemaphore, LONG_TIME ) == pdTRUE )
            // It is time to execute.
            // We have finished our task. Return to the top of the
loop where
            // we will block on the semaphore until it is time to
execute
           // again.
 // Timer ISR
void vTimerISR( void * pvParameters )
 static unsigned portCHAR ucLocalTickCount = 0;
 static portBASE_TYPE xTaskWoken = pdFALSE;
   // A timer tick has occurred.
    // ... Do other time functions.
    // Is it time for vATask () to run?
   ucLocalTickCount++;
    if( ucLocalTickCount >= TICKS_TO_WAIT )
        // Unblock the task by releasing the semaphore.
       xTaskWoken = xSemaphoreGiveFromISR( xSemaphore, xTaskWoken );
        // Reset the count so we release the semaphore again in 10
ticks time.
       ucLocalTickCount = 0;
   // If xTaskWoken was set to true you may want to yield (force a
switch)
   // here.
```

# Co-routine specific xCoRoutineCreate

```
croutine.h
```

```
unsigned portBASE_TYPE uxIndex
);
```

Create a new co-routine and add it to the list of co-routines that are ready to run.

#### Parameters:

pxCoRoutineCode Pointer to the co-routine function. Co-routine functions require

special syntax - see the co-routine section of the WEB

documentation for more information.

uxPriority The priority with respect to other co-routines at which the co-

routine will run..

*uxIndex* Used to distinguish between different co-routines that execute

the same function. See the example below and the co-routine section of the WEB documentation for further information.

#### Returns:

pdPASS if the co-routine was successfully created and added to a ready list, otherwise an error code defined with ProjDefs.h.

```
// Co-routine to be created.
void vFlashCoRoutine( xCoRoutineHandle xHandle, unsigned portBASE TYPE
uxIndex )
 // Variables in co-routines must be declared static if they must
maintain value across a blocking call.
 // This may not be necessary for const variables.
 static const char cLedToFlash[ 2 ] = { 5, 6 };
 static const portTickType xTimeToDelay[ 2 ] = { 200, 400 };
     // Must start every co-routine with a call to crSTART();
     crSTART( xHandle );
     for( ;; )
         // This co-routine just delays for a fixed period, then
toggles
         // an LED. Two co-routines are created using this function,
SO
         // the uxIndex parameter is used to tell the co-routine which
         // LED to flash and how long to delay. This assumes xQueue
         // already been created.
         vParTestToggleLED( cLedToFlash[ uxIndex ] );
         crDELAY( xHandle, uxFlashRates[ uxIndex ] );
     // Must end every co-routine with a call to crEND();
     crEND();
 }
```

```
// Function that creates two co-routines.
void vOtherFunction( void )
{
  unsigned char ucParameterToPass;
  xTaskHandle xHandle;

    // Create two co-routines at priority 0. The first is given index
0
    // so (from the code above) toggles LED 5 every 200 ticks. The
second
    // is given index 1 so toggles LED 6 every 400 ticks.
    for( uxIndex = 0; uxIndex < 2; uxIndex++ )
    {
        xCoRoutineCreate( vFlashCoRoutine, 0, uxIndex );
    }
}</pre>
```

#### **xCoRoutineHandle**

Type by which co-routines are referenced. The co-routine handle is automatically passed into each co-routine function.

# **xCoRoutineCreate**

#### croutine.h

Create a new co-routine and add it to the list of co-routines that are ready to run.

#### **Parameters:**

pxCoRoutineCode Pointer to the co-routine function. Co-routine functions require

special syntax - see the co-routine section of the WEB

documentation for more information.

*uxPriority* The priority with respect to other co-routines at which the co-

routine will run..

*uxIndex* Used to distinguish between different co-routines that execute

the same function. See the example below and the co-routine section of the WEB documentation for further information.

#### **Returns:**

pdPASS if the co-routine was successfully created and added to a ready list, otherwise an error code defined with ProjDefs.h.

```
// Co-routine to be created.
 void vFlashCoRoutine( xCoRoutineHandle xHandle, unsigned portBASE_TYPE
uxIndex )
 // Variables in co-routines must be declared static if they must
maintain value across a blocking call.
 // This may not be necessary for const variables.
 static const char cLedToFlash[ 2 ] = { 5, 6 };
 static const portTickType xTimeToDelay[ 2 ] = { 200, 400 };
     // Must start every co-routine with a call to crSTART();
     crSTART( xHandle );
     for( ;; )
         // This co-routine just delays for a fixed period, then
toggles
         // an LED. Two co-routines are created using this function,
so
         // the uxIndex parameter is used to tell the co-routine which
         // LED to flash and how long to delay. This assumes xQueue
has
         // already been created.
         vParTestToggleLED( cLedToFlash[ uxIndex ] );
         crDELAY( xHandle, uxFlashRates[ uxIndex ] );
     }
     // Must end every co-routine with a call to crEND();
     crEND();
 // Function that creates two co-routines.
 void vOtherFunction( void )
 unsigned char ucParameterToPass;
 xTaskHandle xHandle;
     // Create two co-routines at priority 0. The first is given index
     // so (from the code above) toggles LED 5 every 200 ticks. The
second
     // is given index 1 so toggles LED 6 every 400 ticks.
     for( uxIndex = 0; uxIndex < 2; uxIndex++ )</pre>
         xCoRoutineCreate( vFlashCoRoutine, 0, uxIndex );
 }
```

#### **xCoRoutineHandle**

Type by which co-routines are referenced. The co-routine handle is automatically passed into each co-routine function.

## **crDELAY**

#### croutine.h

```
void crDELAY( xCoRoutineHandle xHandle, portTickType xTicksToDelay )
```

crDELAY is a macro. The data types in the prototype above are shown for reference only.

Delay a co-routine for a fixed period of time.

crDELAY can only be called from the co-routine function itself - not from within a function called by the co-routine function. This is because co-routines do not maintain their own stack.

#### Parameters:

*xHandle* 

The handle of the co-routine to delay. This is the xHandle

parameter of the co-routine function.

xTickToDelay The number of ticks that the co-routine should delay for. The actual amount of time this equates to is defined by

> configTICK\_RATE\_HZ (set in FreeRTOSConfig.h). The constant portTICK RATE MS can be used to convert ticks to milliseconds.

```
// Co-routine to be created.
void vACoRoutine( xCoRoutineHandle xHandle, unsigned portBASE TYPE
uxIndex )
 // Variables in co-routines must be declared static if they must
maintain value across a blocking call.
 // This may not be necessary for const variables.
 // We are to delay for 200ms.
static const xTickType xDelayTime = 200 / portTICK_RATE_MS;
     // Must start every co-routine with a call to crSTART();
    crSTART( xHandle );
    for( ;; )
        // Delay for 200ms.
       crDELAY( xHandle, xDelayTime );
        // Do something here.
```

```
// Must end every co-routine with a call to crEND();
crEND();
}
```

# crQUEUE\_SEND

#### croutine.h

crQUEUE\_SEND is a macro. The data types are shown in the prototype above for reference only.

The macro's crQUEUE\_SEND() and crQUEUE\_RECEIVE() are the co-routine equivalent to the xQueueSend() and xQueueReceive() functions used by tasks.

crQUEUE\_SEND and crQUEUE\_RECEIVE can only be used from a co-routine whereas xQueueSend() and xQueueReceive() can only be used from tasks.

Note that co-routines can only send data to other co-routines. A co-routine cannot use a queue to send data to a task or visa versa.

crQUEUE\_SEND can only be called from the co-routine function itself - not from within a function called by the co-routine function. This is because co-routines do not maintain their own stack.

See the co-routine section of the WEB documentation for information on passing data between tasks and co-routines and between ISR's and co-routines.

#### Parameters:

xHandle The handle of the calling co-routine. This is the xHandle

parameter of the co-routine function.

pxQueue The handle of the queue on which the data will be posted. The

handle is obtained as the return value when the queue is created

using the xQueueCreate() API function.

pvItemToQueue A pointer to the data being posted onto the queue. The number of

bytes of each queued item is specified when the queue is created. This number of bytes is copied from pvItemToQueue into the

queue itself.

*xTickToDelay* The number of ticks that the co-routine should block to wait for

space to become available on the queue, should space not be available immediately. The actual amount of time this equates to is defined by configTICK\_RATE\_HZ (set in

FreeRTOSConfig.h). The constant portTICK\_RATE\_MS can be used to convert ticks to milliseconds (see example below).

pxResult

The variable pointed to by pxResult will be set to pdPASS if data was successfully posted onto the queue, otherwise it will be set to an error defined within ProjDefs.h.

#### Example usage:

```
// Co-routine function that blocks for a fixed period then posts a
number onto
 // a queue.
 static void prvCoRoutineFlashTask( xCoRoutineHandle xHandle, unsigned
portBASE_TYPE uxIndex )
 // Variables in co-routines must be declared static if they must
maintain value across a blocking call.
 static portBASE_TYPE xNumberToPost = 0;
 static portBASE_TYPE xResult;
    // Co-routines must begin with a call to crSTART().
    crSTART( xHandle );
    for( ;; )
        // This assumes the queue has already been created.
        crQUEUE_SEND( xHandle, xCoRoutineQueue, &xNumberToPost,
NO DELAY, &xResult );
        if( xResult != pdPASS )
            // The message was not posted!
        }
        // Increment the number to be posted onto the queue.
        xNumberToPost++;
        // Delay for 100 ticks.
        crDELAY( xHandle, 100 );
    }
    // Co-routines must end with a call to crEND().
    crEND();
 }
```

# crQUEUE\_RECEIVE

#### croutine.h

```
void *pvBuffer,
portTickType xTicksToWait,
portBASE_TYPE *pxResult
```

crQUEUE\_RECEIVE is a macro. The data types are shown in the prototype above for reference only.

The macro's crQUEUE\_SEND() and crQUEUE\_RECEIVE() are the co-routine equivalent to the xQueueSend() and xQueueReceive() functions used by tasks.

crQUEUE\_SEND and crQUEUE\_RECEIVE can only be used from a co-routine whereas xQueueSend() and xQueueReceive() can only be used from tasks.

Note that co-routines can only send data to other co-routines. A co-routine cannot use a queue to send data to a task or visa versa.

crQUEUE\_RECEIVE can only be called from the co-routine function itself - not from within a function called by the co-routine function. This is because co-routines do not maintain their own stack.

See the co-routine section of the WEB documentation for information on passing data between tasks and co-routines and between ISR's and co-routines.

#### Parameters:

xHandle The handle of the calling co-routine. This is the xHandle parameter

of the co-routine function.

pxQueue The handle of the queue from which the data will be received. The

handle is obtained as the return value when the queue is created

using the xQueueCreate() API function.

pvBuffer The buffer into which the received item is to be copied. The

number of bytes of each queued item is specified when the queue

is created. This number of bytes is copied into pvBuffer.

xTickToDelay The number of ticks that the co-routine should block to wait for

data to become available from the queue, should data not be available immediately. The actual amount of time this equates to is defined by configTICK\_RATE\_HZ (set in FreeRTOSConfig.h). The constant portTICK\_RATE\_MS can be used to convert ticks to

milliseconds (see the crQUEUE\_SEND example).

pxResult The variable pointed to by pxResult will be set to pdPASS if data

was successfully retrieved from the queue, otherwise it will be set

to an error code as defined within ProjDefs.h.

#### Example usage:

```
// A co-routine receives the number of an LED to flash from a queue.
It
// blocks on the queue until the number is received.
```

static void prvCoRoutineFlashWorkTask( xCoRoutineHandle xHandle, unsigned portBASE\_TYPE uxIndex )

```
{
// Variables in co-routines must be declared static if they must
maintain value across a blocking call.
static portBASE_TYPE xResult;
static unsigned portBASE_TYPE uxLEDToFlash;

// All co-routines must start with a call to crSTART().
crSTART( xHandle );

for( ;; )
{
    // Wait for data to become available on the queue.
    crQUEUE_RECEIVE( xHandle, xCoRoutineQueue, &uxLEDToFlash,
portMAX_DELAY, &xResult );

    if( xResult == pdPASS )
    {
        // We received the LED to flash - flash it!
            vParTestToggleLED( uxLEDToFlash );
        }
    }
    crEND();
}
```

# crQUEUE\_SEND\_FROM\_ISR

#### croutine.h

crQUEUE\_SEND\_FROM\_ISR() is a macro. The data types are shown in the prototype above for reference only.

The macro's crQUEUE\_SEND\_FROM\_ISR() and crQUEUE\_RECEIVE\_FROM\_ISR() are the co-routine equivalent to the xQueueSendFromISR() and xQueueReceiveFromISR() functions used by tasks.

crQUEUE\_SEND\_FROM\_ISR() and crQUEUE\_RECEIVE\_FROM\_ISR() can only be used to pass data between a co-routine and ISR, whereas xQueueSendFromISR() and xQueueReceiveFromISR() can only be used to pass data between a task and and ISR.

crQUEUE SEND FROM ISR can only be called from an ISR to send data to a queue that is being used from within a co-routine.

See the co-routine section of the WEB documentation for information on passing data between tasks and co-routines and between ISR's and co-routines.

#### Parameters:

The handle to the queue on which the item is to be *xQueue* 

posted.

A pointer to the item that is to be placed on the *pvItemToQueue* 

> queue. The size of the items the queue will hold was defined when the queue was created, so this many bytes will be copied from pvItemToQueue

into the queue storage area.

xCoRoutinePreviouslyWoken This is included so an ISR can post onto the same

queue multiple times from a single interrupt. The first call should always pass in pdFALSE.

Subsequent calls should pass in the value returned

from the previous call.

#### Returns:

pdTRUE if a co-routine was woken by posting onto the queue. This is used by the ISR to determine if a context switch may be required following the ISR.

```
// A co-routine that blocks on a queue waiting for characters to be
received.
 static void vReceivingCoRoutine( xCoRoutineHandle xHandle, unsigned
portBASE TYPE uxIndex )
portCHAR cRxedChar;
portBASE TYPE xResult;
     // All co-routines must start with a call to crSTART().
     crSTART( xHandle );
    for( ;; )
         // Wait for data to become available on the queue.
assumes the
         // queue xCommsRxQueue has already been created!
         crQUEUE RECEIVE( xHandle, xCommsRxQueue, &uxLEDToFlash,
portMAX DELAY, &xResult );
         // Was a character received?
         if( xResult == pdPASS )
             // Process the character here.
     // All co-routines must end with a call to crEND().
```

```
crEND();
 }
 // An ISR that uses a queue to send characters received on a serial
port to
 // a co-routine.
void vUART_ISR( void )
portCHAR cRxedChar;
portBASE_TYPE xCRWokenByPost = pdFALSE;
     // We loop around reading characters until there are none left in
the UART.
    while( UART_RX_REG_NOT_EMPTY() )
         // Obtain the character from the UART.
         cRxedChar = UART RX REG;
         // Post the character onto a queue. xCRWokenByPost will be
pdFALSE
         // the first time around the loop. If the post causes a co-
routine
         // to be woken (unblocked) then xCRWokenByPost will be set to
pdTRUE.
         // In this manner we can ensure that if more than one co-
routine is
         // blocked on the queue only one is woken by this ISR no
matter how
         // many characters are posted to the queue.
         xCRWokenByPost = crQUEUE_SEND_FROM_ISR( xCommsRxQueue,
&cRxedChar, xCRWokenByPost );
```

# crQUEUE\_RECEIVE\_FROM\_ISR

#### croutine.h

The macro's crQUEUE\_SEND\_FROM\_ISR() and crQUEUE\_RECEIVE\_FROM\_ISR() are the co-routine equivalent to the xQueueSendFromISR() and xQueueReceiveFromISR() functions used by tasks.

crQUEUE\_SEND\_FROM\_ISR() and crQUEUE\_RECEIVE\_FROM\_ISR() can only be used to pass data between a co-routine and and ISR, whereas xQueueSendFromISR() and xQueueReceiveFromISR() can only be used to pass data between a task and and ISR.

crQUEUE RECEIVE FROM ISR can only be called from an ISR to receive data from a queue that is being used from within a co-routine (a co-routine posted to the queue).

See the co-routine section of the WEB documentation for information on passing data between tasks and co-routines and between ISR's and co-routines.

#### **Parameters:**

*xQueue pvBuffer*  The handle to the queue on which the item is to be posted. A pointer to a buffer into which the received item will be placed. The size of the items the queue will hold was defined when the queue was created, so this many bytes will be copied from the queue into pvBuffer.

pxCoRoutineWoken A co-routine may be blocked waiting for space to become available on the queue. If crQUEUE RECEIVE FROM ISR causes such a co-routine to unblock \*pxCoRoutineWoken will get set to pdTRUE, otherwise \*pxCoRoutineWoken will remain unchanged

#### **Returns:**

pdTRUE an item was successfully received from the gueue, otherwise pdFALSE.

```
// A co-routine that posts a character to a queue then blocks for a
// period. The character is incremented each time.
static void vSendingCoRoutine( xCoRoutineHandle xHandle, unsigned
portBASE TYPE uxIndex )
 // cChar holds its value while this co-routine is blocked and must
therefore
 // be declared static.
 static portCHAR cCharToTx = 'a';
portBASE_TYPE xResult;
     // All co-routines must start with a call to crSTART().
     crSTART( xHandle );
    for( ;; )
         // Send the next character to the queue.
         crQUEUE_SEND( xHandle, xCoRoutineQueue, &cCharToTx, NO_DELAY,
&xResult );
         if( xResult == pdPASS )
             // The character was successfully posted to the queue.
         else
         {
             // Could not post the character to the queue.
```

```
// Enable the UART Tx interrupt to cause an interrupt in this
         // hypothetical UART. The interrupt will obtain the character
         // from the queue and send it.
         ENABLE RX INTERRUPT();
         // Increment to the next character then block for a fixed
period.
         // cCharToTx will maintain its value across the delay as it is
         // declared static.
         cCharToTx++;
         if( cCharToTx > 'x' )
             cCharToTx = 'a';
         crDELAY( 100 );
     // All co-routines must end with a call to crEND().
     crEND();
 }
 // An ISR that uses a queue to receive characters to send on a UART.
 void vUART_ISR( void )
 portCHAR cCharToTx;
 portBASE TYPE xCRWokenByPost = pdFALSE;
     while( UART_TX_REG_EMPTY() )
         // Are there any characters in the queue waiting to be sent?
         // xCRWokenByPost will automatically be set to pdTRUE if a co-
routine
         // is woken by the post - ensuring that only a single co-
routine is
         // woken no matter how many times we go around this loop.
         if ( crQUEUE RECEIVE FROM ISR( pxQueue, &cCharToTx,
&xCRWokenByPost ) )
             SEND_CHARACTER( cCharToTx );
 }
```

## **vCoRoutineSchedule**

#### croutine.h

```
void vCoRoutineSchedule( void );
```

Run a co-routine.

vCoRoutineSchedule() executes the highest priority co-routine that is able to run. The co-routine will execute until it either blocks, yields or is preempted by a task. Co-routines execute cooperatively so one co-routine cannot be preempted by another, but can be preempted by a task.

If an application comprises of both tasks and co-routines then vCoRoutineSchedule should be called from the idle task (in an idle task hook).

## Example usage:

```
void vApplicationIdleHook( void )
{
    vCoRoutineSchedule( void );
}
```

Alternatively, if the idle task is not performing any other function it would be more efficient to call vCoRoutineSchedule() from within a loop as:

```
void vApplicationIdleHook( void )
{
    for( ;; )
    {
       vCoRoutineSchedule( void );
    }
}
```

## **License Details**

## **Options**

FreeRTOS is licensed under a modified GPL and can be used in commercial applications under this license. An alternative commercial license option is also available in cases that:

- You cannot fulfil the requirements stated in the "Modified GPL license" column of the table below.
- You wish to receive direct technical support.
- You wish to have assistance with your development.

## License feature comparison

	FreeRTOS Modified GPL license	OpenRTOS Commercial license
Is it free?	Yes	No
Can I use it in a commercial application?	Yes	Yes

Is it royalty free?	Yes	Yes
Do I have to open source my application code?	No	No
Do I have to open source my changes to the kernel?	Yes	No
Do I have to document that my product uses FreeRTOS.org?	Yes a WEB link to the FreeRTOS.org site is sufficient	No
Do I have to offer to provide the FreeRTOS.org code to users of my application?	Yes	No
Can I receive support on a commercial basis?	No	Yes

## **Commercial Licensing**



OpenRTOS<sup>TM</sup> is a commercially licensed version of FreeRTOS.org. The OpenRTOS license does not contain any references to the GPL.



SAFERTOS<sup>TM</sup> is a derivative version of FreeRTOS.org that has been analyzed, documented and tested to meet the stringent requirements of the IEC 61508 safety standard. Complete safety lifecycle documentation artifacts have been created and independently audited to verify IEC 61508 SIL 3 conformance.

The <u>SafeRTOS FAQ</u> provides information on the differences between FreeRTOS.org, OpenRTOS and SafeRTOS.

## Modified GPL (Open Source) Licensing



The FreeRTOS source code is licensed by the GNU General Public License (GPL) with an exception. The full text of the GPL is available <a href="here">here</a>. The text of the exception is available at the bottom of this file.

The exceptions permits the source code of applications that use FreeRTOS solev through the API published on this WEB

site to remain closed source, thus permitting the use of FreeRTOS in commercial applications without necessitating that the whole application be open sourced. The exception should only be used if you wish to combine FreeRTOS with a proprietary product and you comply with the terms stated in the exception itself.

The FreeRTOS download also includes demo application source code, some of which is provided by third parties AND IS LICENSED SEPARATELY FROM FREERTOS.

For the avoidance of any doubt refer to the comment included at the top of each source and header file for license and copyright information.

This is a list of files for which Richard Barry is not the copyright owner and are NOT COVERED BY THE GPL.

- 1. Various header files and linker scripts provided by silicon manufacturers and tool vendors that define processor specific memory addresses and utility macros and functions. Permission has been granted by the various copyright holders for these files to be included in the FreeRTOS download. Users must ensure license conditions are adhered to for any use other than compilation of the FreeRTOS demo application.
- 2. The uIP TCP/IP stack the copyright of which is held by Adam Dunkels. Users must ensure the open source license conditions stated at the top of each uIP source file is understood and adhered to.
- The IwIP TCP/IP stack the copyright of which is held by the Swedish Institute of Computer Science. Users must ensure the open source license conditions stated at the top of each IwIP source file is understood and adhered to.
- 4. All files contained within the FreeRTOS\Demo\CORTEX\_LM3S102\_GCC\hw\_include and FreeRTOS\Demo\CORTEX\_LM3S316\_IAR\hw\_include directories. The copyright of these files is owned by Luminary Micro. Permission has been granted by Luminary Micro for these files to be included in the FreeRTOS download. Users must ensure the license conditions stated in the EULA.txt file located in the same directories is understood and adhered at all times for all files in those directories.
- The files contained within FreeRTOS\Demo\WizNET\_DEMO\_TERN\_186\tern\_code, which are slightly modified versions of code provided by and copyright to Tern Inc.

Errors and omissions should be reported to Richard Barry, contact details for whom can be obtained from the <u>Contact</u> page.

## **GPL Exception**

If you opt to use this exception you are encouraged to make a donation to the FreeRTOS project. The link in the frame on the left can be used for this purpose. Any such donation is entirely voluntary and does not result in any enhanced support or any warranty rights.

#### **EXCEPTION TEXT:**

#### Clause 1

Linking FreeRTOS statically or dynamically with other modules is making a combined work based on FreeRTOS. Thus, the terms and conditions of the GNU General Public License cover the whole combination.

As a special exception, the copyright holder of FreeRTOS gives you permission to link FreeRTOS with independent modules that communicate with FreeRTOS solely through the FreeRTOS API interface, regardless of the license terms of these independent modules, and to copy and distribute the resulting combined work under terms of your choice, provided that

- 1. Every copy of the combined work is accompanied by a written statement that details to the recipient the version of FreeRTOS used and an offer by yourself to provide the FreeRTOS source code should the recipient request it.
- 2. The combined work is not itself an RTOS, scheduler, kernel or related product.
- 3. The combined work is not itself a library intended for linking into other software applications.

Any FreeRTOS source code, whether modified or in it's original release form, or whether in whole or in part, can only be distributed by you under the terms of the GNU General Public License plus this exception. An independent module is a module which is not derived from or based on FreeRTOS.

Note that people who make modified versions of FreeRTOS are not obligated to grant this special exception for their modified versions; it is their choice whether to do so. The GNU General Public License gives permission to release a modified version without this exception; this exception also makes it possible to release a modified version which carries forward this exception.

#### Clause 2

FreeRTOS.org may not be used for any competitive or comparative purpose, including the publication of any form of run time or compile time metric, without the express permission of Richard Barry (this is the norm within the industry and is intended to ensure information accuracy).