



Dummy Symbol, Only for Assembly	U42	2.54mm 1x6 socket
Dummy Symbol, Only for Assembly	U43	2.54mm 1x8 socket
Dummy Symbol, Only for Assembly	U44	2.54mm 1x8 socket
Dummy Symbol, Only for Assembly	U45	2.54mm 1x10 socket
Dummy Symbol, Only for Assembly	U46	2.54mm 2x6 socket

Dummy symbols to generate positions and BOM entries for assembly

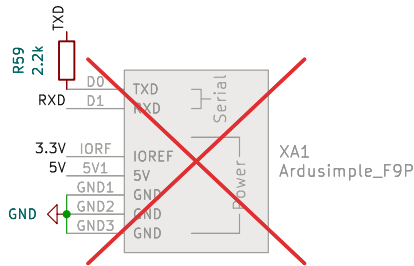

Generate 3.3V for the IOREF pin.
This only powers the level shifters, so LDO is fine here.
This is only needed because we can split the PCB and the data connector only carries 5V. If you build a more integrated PCB use the 3.3V from the core instead.

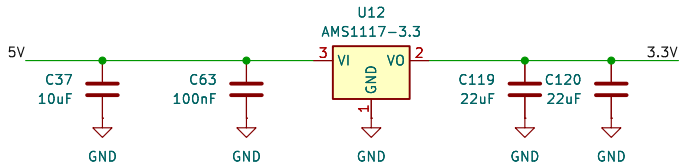

Sheet: /
File: hw-module-gps.kicad_sch

Title:

Size: A3

Date:

Rev:

KiCad E.D.A. 9.0.7

Id: 1/1