
How to Install USB driver


The new Window security requires Digitally signed certificate along with driver. This process explains how to install the certificate and the driver. This is only have to be done once.

Install Code Signed Certificate

- 1. Copy SMBus-USB-Win10 folder to local drive. The network security prohibits .inf files on network drive.
- 2. Right Click mouse on .pfx file

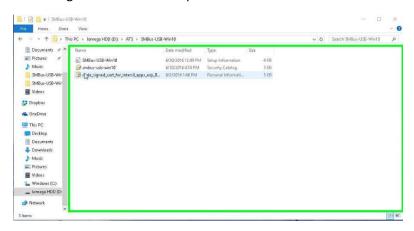


3. Install the certificate.

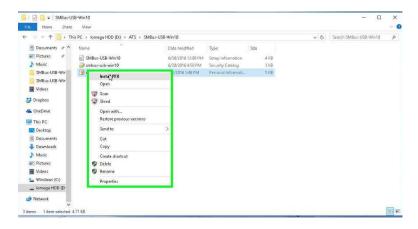


4. Import certificate to local machine






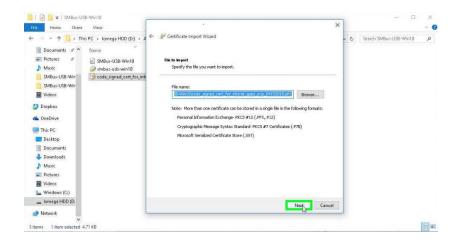


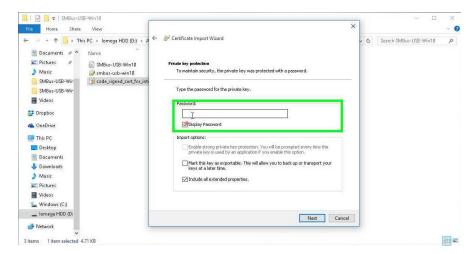


5. Enter Password "Intersil\$0602"

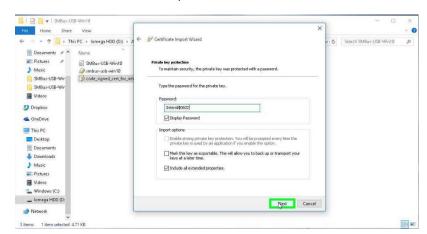


6. Select default location as below

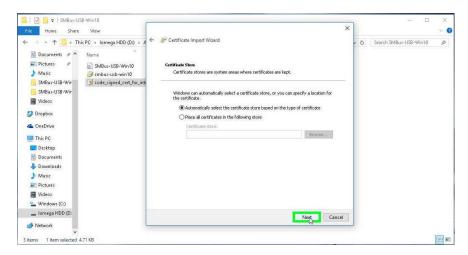


7. Complete the installation

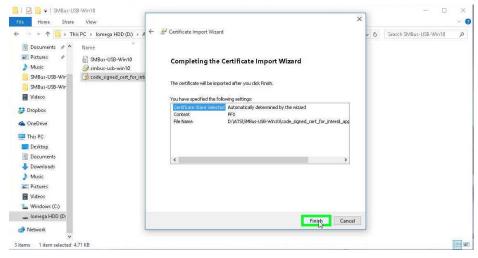

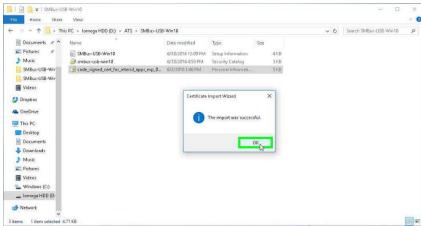


Install driver

1. Go to .inf file and write click

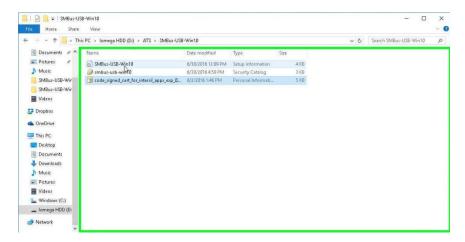

2. Choose Install

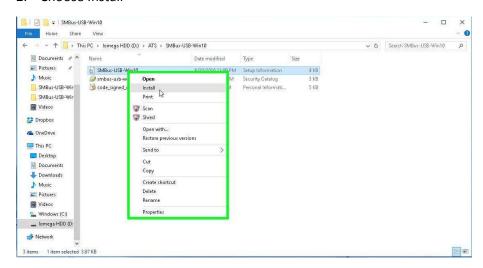

3. If this Window appears for Window 8 then please check "Always Trust.." message below and press Install.



4. The installation is complete

