
Ford EEC-IV Pinout conversion to MegaSquirt

www.ExtraEFI.co.uk

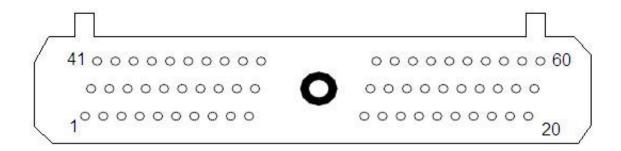

www.ExtraEFI.co.uk				
Ford EEC-IV	using the 12 pir	ned EDIS module)_	
	T=			
Ford EEC-IV ECU Pin	Ford Wire Colour		MS db37	ExtraEFI Loom
7	Brown/Green	Coolant Sensor	21	Purple
60, 40, 20, 16	Brown	Ground	8 to 20	4mm Black
21	Brown/Yellow	Idle Valve	30	Brown
22	Brown	Fuel Pump Relay	37	Black
25	Brown/Yellow	Air Temp Sensor	20	Grey/Blue
26	Brown/Black	TPS +5V	26	Grey
*28 or 56 (Pin 1 of EDIS Module)	Blue/Yellow	EDIS PIP	24	Red in screened cable
36 (Pin 3 of EDIS Module)	Blue/Red	EDIS SAW	36	Yellow
37 + 57	Black	12V Ignition	28	1mm Red
47	Brown/Green	TPS Sig	22	Blue
**58	Brown	Injector 1 + 2	32, 33	0.75mm White
**59	Brown	Injector 3 + 4	34, 35	0.75mm Green
46, 49	Brown	Sensor Grounds	18 19	Green/Yellow
***29		Lambda Signal	23	Pink
NOTES:				
Wiring colours may be different	on some setups!!			
**58 = Inj 1,3,5 on 6cy	1			
**59 = Inj 2,4,6 on 6cy				
*56 or 28 can be the PIP on som	e setups, check yo	our wiring first!!		
*** Some systems have a lambd				

Very Important, this has not been tested and is there for information ONLY, no warranty expressed or implied, use totally at your own risk! Please check all your wires are the same as this diagram!!

www.ExtraEFI.co.uk