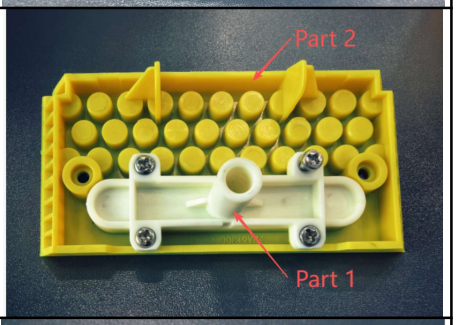
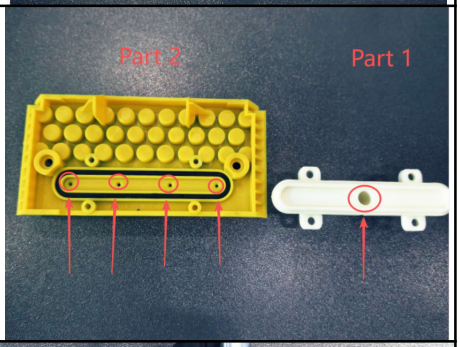
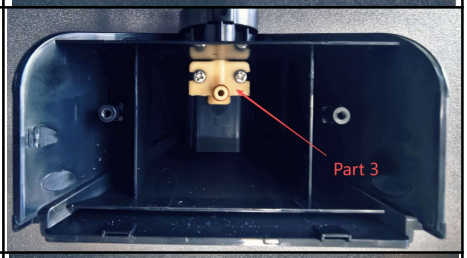
Water Outlet Blockage Treatment		
1	Use a screwdriver to remove these 2 screws.	
2	Remove the screw on Part 1.	
3	Check the hole in Part 1 for any foreign objects and clear them.	
4	Check the 4 holes in Part 2 for any foreign objects and clear them.	
5	Remove the screw on Part 3 and take out Part 3.	
6	Check the hole in Part 3 for any foreign objects and clear them.	
7	After clearing, reassemble and install in reverse order.	