Ve 216: Introduction to Signals and Systems

Yong Long

The University of Michigan- Shanghai Jiao Tong University Joint Institute Shanghai Jiao Tong University

June 19, 2023

Based on Lecture Notes by Prof. Jeffrey A. Fessler



Outline

- 1 7. Sampling
 - Introduction
 - FT of impulse-train sampled signals (7.1)
 - Sampling Theorem
 - Aliasing (7.3)
 - Reconstruction via interpolation (7.2)
 - Realistic non-impulse sampling (7.1.2)
 - Discrete-time Fourier transform (DTFT) (5.1)
 - Summary

Outline

1 7. Sampling

- Introduction
- FT of impulse-train sampled signals (7.1)
- Sampling Theorem
- Aliasing (7.3)
- Reconstruction via interpolation (7.2)
- Realistic non-impulse sampling (7.1.2)
- Discrete-time Fourier transform (DTFT) (5.1)
- Summary

Applications of the FT

- In chapter 4 we covered all of the fundamental mathematical properties of the FT which are used in EE.
- These properties are not just "interesting math;" they are the theoretical foundation of how just about everything involving signals work, from AM radios to digital TVs to PC sound cards etc.
- Now (at last!) we can begin to use the FT tools to understand the basic principles behind some of these applications.

Applications of the FT

- In chapter 4 we covered all of the fundamental mathematical properties of the FT which are used in EE.
- These properties are not just "interesting math;" they are the theoretical foundation of how just about everything involving signals work, from AM radios to digital TVs to PC sound cards etc.
- Now (at last!) we can begin to use the FT tools to understand the basic principles behind some of these applications.

Applications of the FT

- In chapter 4 we covered all of the fundamental mathematical properties of the FT which are used in EE.
- These properties are not just "interesting math;" they are the theoretical foundation of how just about everything involving signals work, from AM radios to digital TVs to PC sound cards etc.
- Now (at last!) we can begin to use the FT tools to understand the basic principles behind some of these applications.

Overview

- Filtering (used universally) convolution property
- Sampling (A/D converters in sound cards)
 FT of sampled signals
- Modulation (AM radio, digital comm (modems)) modulation property
- ..

Sampling theorem

skip: 7.4, 7.5

- In fact, whereas the preceding mathematics is circa 1800 due to Fourier.
- The Nyquist-Shannon sampling theorem was a

Sampling theorem

skip: 7.4, 7.5

- In fact, whereas the preceding mathematics is circa 1800 due to Fourier.
- The Nyquist-Shannon sampling theorem was a breakthrough in the 20th century, discovered by Nyquist and Shannon (a UM alumnus who is the father of information theory!).

They proved that a signal can be perfectly reconstructed from sampling if the signal's highest frequency is half (or less) of the sampling rate.

Sampling theorem

skip: 7.4, 7.5

- In fact, whereas the preceding mathematics is circa 1800 due to Fourier.
- The Nyquist-Shannon sampling theorem was a breakthrough in the 20th century, discovered by Nyquist and Shannon (a UM alumnus who is the father of information theory!).

They proved that a signal can be perfectly reconstructed from sampling if the signal's highest frequency is half (or less) of the sampling rate.

Compressive sensing

The **compressive sensing theorem** (also known as compressed sensing, compressive sampling, or sparse sampling) was proposed around 2004 by Candes, Tao and Donoho.

They proved that given knowledge about a signal's sparsity (*Picture*), the signal may be reconstructed with even fewer samples than the Nyquist-Shannon theorem requires.

Compressive sensing

The **compressive sensing theorem** (also known as compressed sensing, compressive sampling, or sparse sampling) was proposed around 2004 by Candes, Tao and Donoho.

They proved that given knowledge about a signal's sparsity (*Picture*), the signal may be reconstructed with even fewer samples than the Nyquist-Shannon theorem requires.

Sparsity

 $cos(\omega_0 t)$ is sparse in the frequency domain.

$$\cos(\omega_0 t) \stackrel{\mathcal{F}}{\longleftrightarrow} \pi \delta(\omega - \omega_0) + \pi \delta(\omega + \omega_0)$$

$$F(\omega)$$

$$\pi$$

$$-\omega_0$$

$$\omega_0$$

"single-pixel camera"

TED 2013- The Single Pixel Camera

https://www.youtube.com/watch?v=y-jIzuHBJTo

- The new digital image/video camera directly acquires random projections of a scene without first collecting the pixels/voxels.
- The camera architecture employs a digital micromirror array to optically calculate linear projections of the scene onto pseudorandom binary patterns.
- Its key hallmark is its ability to obtain an image or video with a single detection element (the "single pixel") while measuring the scene fewer times than the number of pixels/voxels.

Review of utility of unit impulse functions (1)

The simplification provided by the Dirac delta function has helped us in analyzing LTI systems like filters. It will also help us analyze sampling, even though again it is an idealization of real sampling circuits.

Property

• Sifting property holds when x(t) is continuous at t_0 :

$$\int_{-\infty}^{\infty} x(t)\delta(t-t_0) dt = x(t_0).$$

• **sampling property** holds when x(t) is continuous at t_0 :

$$x(t)\delta(t-t_0) = x(t_0)\delta(t-t_0)$$

Review of utility of unit impulse functions (1)

The simplification provided by the Dirac delta function has helped us in analyzing LTI systems like filters. It will also help us analyze sampling, even though again it is an idealization of real sampling circuits.

Property

• Sifting property holds when x(t) is continuous at t_0 :

$$\int_{-\infty}^{\infty} x(t)\delta(t-t_0) dt = x(t_0).$$

• sampling property holds when *x*(*t*) is continuous at *t*₀:

$$x(t)\delta(t-t_0) = x(t_0)\delta(t-t_0).$$

Review of utility of unit impulse functions (2)

Property

- unit area property $\int_{-\infty}^{\infty} \delta(t-t_0) dt = 1$ for any t_0
- **2** scaling property $\delta(at + b) = \frac{1}{|a|}\delta(t + b/a)$ for $a \neq 0$.
- 3 symmetry property $\delta(t) = \delta(-t)$
- **4** support property $\delta(t t_0) = 0$ for $t \neq t_0$
- **5** relationships with unit step function: $\delta(t) = \frac{\mathrm{d}}{\mathrm{d}t}u(t)$, $u(t) = \int_{-\infty}^{t} \delta(\tau) \, \mathrm{d}\tau$

Review of utility of unit impulse functions (3)

Property

- 1 $x(t) * \delta(t) = x(t)$
- 2 $x(t) * \delta(t t_0) = x(t t_0)$ delay property!
- 3 $\delta(t-t_0) * \delta(t-t_1) = \delta(t-t_0-t_1)$
- 4 $\delta(t) \rightarrow \boxed{LTI} \rightarrow h(t)$
- 5 If y(t) = x(t) * h(t), then $x(t t_0) * h(t t_1) = y(t t_0 t_1)$.

Overview of DSP

$$x(t) o \boxed{\mathsf{A/D}} o \boxed{x[n] o \boxed{\mathsf{DSP}} o y[n]} o \boxed{\mathsf{D/A}} o y(t)$$

The above configuration is frequently used, but not the only option.

- Often the output of the DSP is "information" rather than a signal, such as in a speech recognition system, or a radal target tracking system.
- Often (discrete-time) signals are generated digitally (like in MATLAB assignments), and then the sound or image command converts the digital representation into a continuous-time signal (audio or video) using the computers peripherals (sound card or video monitor).

Overview of DSP

$$x(t) o \boxed{\mathsf{A/D}} o \boxed{x[n] o \boxed{\mathsf{DSP}} o y[n]} o \boxed{\mathsf{D/A}} o y(t)$$

The above configuration is frequently used, but not the only option.

- Often the output of the DSP is "information" rather than a signal, such as in a speech recognition system, or a radar target tracking system.
- Often (discrete-time) signals are generated digitally (like in MATLAB assignments), and then the sound or image command converts the digital representation into a continuous-time signal (audio or video) using the computers peripherals (sound card or video monitor).

Overview of DSP

$$x(t) o \boxed{\mathsf{A/D}} o \boxed{x[n] o \boxed{\mathsf{DSP}} o y[n]} o \boxed{\mathsf{D/A}} o y(t)$$

The above configuration is frequently used, but not the only option.

- Often the output of the DSP is "information" rather than a signal, such as in a speech recognition system, or a radar target tracking system.
- Often (discrete-time) signals are generated digitally (like in MATLAB assignments), and then the sound or image command converts the digital representation into a continuous-time signal (audio or video) using the computers peripherals (sound card or video monitor).

Why DSP?

Question

Why DSP?

Why DSP?

Question

Why DSP?

- DSP is everywhere due in large part to the dramatic development of digital technology over the past few decades. It hardly needs a motivating introduction these days: modems, cell phones, computer sound cards, digital video.
- It is inexpensive, lightweight, programmable and easily reproducible.

Sampling Analog Signals

- A computer cannot store every value of a continuous-time signal x(t).
- At most a computer can store a finite array of values, such as the values of the signal x(t) at a finite collection of time instants.
- A sampler converts a CT signal into a discrete-time signal.

Sampling Analog Signals

- A computer cannot store every value of a continuous-time signal x(t).
- At most a computer can store a finite array of values, such as the values of the signal x(t) at a finite collection of time instants.
- A sampler converts a CT signal into a discrete-time signal.

Sampling Analog Signals

- A computer cannot store every value of a continuous-time signal x(t).
- At most a computer can store a finite array of values, such as the values of the signal x(t) at a finite collection of time instants.
- A sampler converts a CT signal into a discrete-time signal.

Periodic sampling

Definition

Ideal periodic sampling or uniform sampling is defined by

$$x[n] = x(nT_s), \ n = 0, \pm 1, \pm 2, \dots$$

- T_s is the sampling period or sampling interval.
- $\omega_s/2\pi = 1/T_s$ is called the **sampling rate** or the **sampling frequency**, e.g. 44.1kHz for audio CD

Note that x[n] is not a CT signal!

Periodic sampling

Definition


Ideal periodic sampling or uniform sampling is defined by


$$x[n] = x(nT_s), n = 0, \pm 1, \pm 2, ...$$

- T_s is the sampling period or sampling interval.
- $\omega_s/2\pi = 1/T_s$ is called the **sampling rate** or the **sampling frequency**, e.g. 44.1kHz for audio CD

Note that x[n] is not a CT signal!

CT signal and sampled values

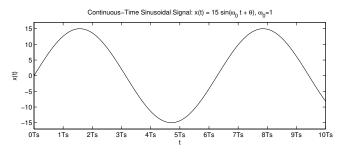

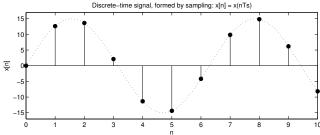

Outline

- 1 7. Sampling
 - Introduction
 - FT of impulse-train sampled signals (7.1)
 - Sampling Theorem
 - Aliasing (7.3)
 - Reconstruction via interpolation (7.2)
 - Realistic non-impulse sampling (7.1.2)
 - Discrete-time Fourier transform (DTFT) (5.1)
 - Summary

Impulse functions

Since we are dealing with CT signals in this class, it is convenient to create a CT signal from the samples, rather than just using x[n].

Question

How to represent sampling in the time domain?

We will do this with impulse functions.

Impulse functions

Since we are dealing with CT signals in this class, it is convenient to create a CT signal from the samples, rather than just using x[n].

Question

How to represent sampling in the time domain?

We will do this with impulse functions.

Impulse functions

Since we are dealing with CT signals in this class, it is convenient to create a CT signal from the samples, rather than just using x[n].

Question

How to represent sampling in the time domain?


We will do this with impulse functions.

Ideal sampling function

Definition

The impulse train is sometimes called the **Dirac comb** signal or **ideal sampling function**:

$$p(t) \stackrel{\triangle}{=} \sum_{n=-\infty}^{\infty} \delta(t - nT_s)$$

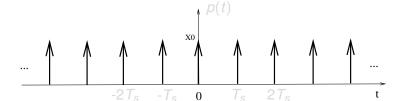


Ideal sampling function

Definition

The impulse train is sometimes called the **Dirac comb** signal or **ideal sampling function**:

$$p(t) \stackrel{\triangle}{=} \sum_{n=-\infty}^{\infty} \delta(t - nT_s)$$

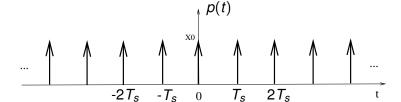


Impulse-train sampling

Suppose we have a CT signal x(t) and we imagine multiplying it by p(t), to form a new "sampled" signal

$$x_s(t) = x(t)p(t) = x(t)\sum_{n=-\infty}^{\infty} \delta(t - nT_s) = \sum_{n=-\infty}^{\infty} x(nT_s)\delta(t - nT_s).$$

Note that $x_s(t)$ depends only on the original values of x(t) at times nT_s . (This is why we call the above property the **sampling property** of the impulse function.)

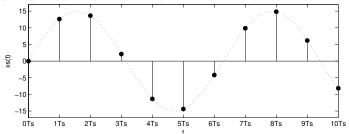


Impulse-train sampling

Suppose we have a CT signal x(t) and we imagine multiplying it by p(t), to form a new "sampled" signal

$$x_s(t) = x(t)p(t) = x(t)\sum_{n=-\infty}^{\infty} \delta(t - nT_s) = \sum_{n=-\infty}^{\infty} x(nT_s)\delta(t - nT_s).$$

Note that $x_s(t)$ depends only on the original values of x(t) at times nT_s . (This is why we call the above property the sampling property of the impulse function.)

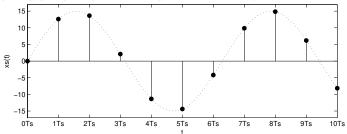


Impulse-train sampling

Suppose we have a CT signal x(t) and we imagine multiplying it by p(t), to form a new "sampled" signal

$$x_s(t) = x(t)p(t) = x(t)\sum_{n=-\infty}^{\infty} \delta(t - nT_s) = \sum_{n=-\infty}^{\infty} x(nT_s)\delta(t - nT_s).$$

Note that $x_s(t)$ depends only on the original values of x(t) at times nT_s . (This is why we call the above property the sampling property of the impulse function.)

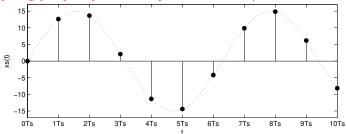

Practical sampling

Note: real systems (*e.g.* A/D converters) do not actually use impulse functions to sample a signal. This is a convenient mathematical idealization of a sampling circuit.

$$x(t) o$$
 switch: $\operatorname{rect}(t/\Delta - 1/2)$ \to amplifier $1/\Delta$ $\to x_s(t)$

Practical impulse function

$$\delta(t) = \lim_{\Delta \to 0} \delta_{\Delta}(t) = \lim_{\Delta \to 0} \frac{1}{\Delta} \operatorname{rect}\left(\frac{t}{\Delta} - \frac{1}{2}\right)$$

$$\delta_{\Delta}(t)$$

$$1/\Delta t$$


Practical sampling

Note: real systems (*e.g.* A/D converters) do not actually use impulse functions to sample a signal. This is a convenient mathematical idealization of a sampling circuit.

$$x(t) o$$
 switch: $\operatorname{rect}(t/\Delta - 1/2)$ \to amplifier $1/\Delta$ $\to x_s(t)$

Practical impulse function

$$\delta(t) = \lim_{\Delta \to 0} \delta_{\Delta}(t) = \lim_{\Delta \to 0} \frac{1}{\Delta} \operatorname{rect} \left(\frac{t}{\Delta} - \frac{1}{2} \right)$$

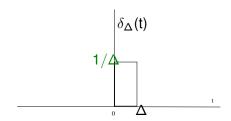

Question

But how does the spectrum of the sampled signal $x_s(t)$ relate to the spectrum of the original signal x(t)? In other words, what happens in the frequency domain when we sample a CT signal?

This is extremely important for understanding how digital filtering works!

Question

But how does the spectrum of the sampled signal $x_s(t)$ relate to the spectrum of the original signal x(t)? In other words, what happens in the frequency domain when we sample a CT signal?

This is extremely important for understanding how digital filtering works!

FT of impulse train

Recall FT of periodic signals (Chap. 3, p. 125)

$$p(t) \stackrel{\mathcal{F}}{\longleftrightarrow} P(\omega) = \sum_{k=-\infty}^{\infty} \frac{2\pi}{T_s} \delta(\omega - k\omega_s)$$

By time-domain multiplication property:

$$X_{s}(\omega) = \frac{1}{2\pi}X(\omega) * P(\omega) = \frac{1}{2\pi}X(\omega) * \sum_{k=-\infty}^{\infty} \frac{2\pi}{T_{s}}\delta(\omega - k\omega_{s})$$
$$= \frac{1}{T_{s}}\sum_{k=-\infty}^{\infty}X(\omega - k\omega_{s})$$

which is a sum of shifted replicates of the spectrum. (*Picture*)(MIT, Lecture 16-2)

Sampling in the time domain causes replication in the frequency domain.

Question

What is the dual of this statement?

Sampling in the time domain causes replication in the frequency domain.

Question

What is the dual of this statement?

Sampling in the time domain causes replication in the frequency domain.

Question

What is the dual of this statement?

Signals whose spectra are "sampled", i.e. line spectra, are periodic in the time domain.

Example

Consider the signal $x(t) = \operatorname{sinc}^2(t)$. What happens when we sample it?

We have seen earlier that

$$X(t) = \operatorname{sinc}^2(t) \overset{\mathcal{F}}{\longleftrightarrow} X(\omega) = \frac{1}{2\pi} \operatorname{rect}\left(\frac{\omega}{2\pi}\right) * \operatorname{rect}\left(\frac{\omega}{2\pi}\right) = \operatorname{tri}\left(\frac{\omega}{2\pi}\right)$$

(Picture)(MIT, Lecture 16.2)

Definition

A **bandlimited signal** is one whose spectrum is nonzero only over finite interval.

In this case $-\omega_{\rm max}$ to $\omega_{\rm max}$, where $\omega_{\rm max}=2\pi$

Example

Consider the signal $x(t) = sinc^2(t)$. What happens when we sample it?

We have seen earlier that

$$X(t) = \mathrm{sinc}^2(t) \stackrel{\mathcal{F}}{\longleftrightarrow} X(\omega) = \frac{1}{2\pi} \operatorname{rect}\left(\frac{\omega}{2\pi}\right) * \operatorname{rect}\left(\frac{\omega}{2\pi}\right) = \operatorname{tri}\left(\frac{\omega}{2\pi}\right)$$

(Picture)(MIT, Lecture 16.2)

Definition

A bandlimited signal is one whose spectrum is nonzero only over finite interval.

In this case $-\omega_{\rm max}$ to $\omega_{\rm max}$, where $\omega_{\rm max}=2\pi$.

Example

Consider the signal $x(t) = sinc^2(t)$. What happens when we sample it?

We have seen earlier that

$$X(t) = \mathrm{sinc}^2(t) \stackrel{\mathcal{F}}{\longleftrightarrow} X(\omega) = \frac{1}{2\pi} \operatorname{rect}\left(\frac{\omega}{2\pi}\right) * \operatorname{rect}\left(\frac{\omega}{2\pi}\right) = \operatorname{tri}\left(\frac{\omega}{2\pi}\right)$$

(Picture)(MIT, Lecture 16.2)

Definition

A bandlimited signal is one whose spectrum is nonzero only over finite interval.

In this case $-\omega_{\rm max}$ to $\omega_{\rm max}$, where $\omega_{\rm max}=2\pi$.

Example

Consider the signal $x(t) = sinc^2(t)$. What happens when we sample it?

We have seen earlier that

$$\mathbf{X}(t) = \mathrm{sinc}^2(t) \stackrel{\mathcal{F}}{\longleftrightarrow} \mathbf{X}(\omega) = \frac{1}{2\pi} \operatorname{rect}\left(\frac{\omega}{2\pi}\right) * \operatorname{rect}\left(\frac{\omega}{2\pi}\right) = \operatorname{tri}\left(\frac{\omega}{2\pi}\right)$$

(Picture)(MIT, Lecture 16.2)

Definition

A **bandlimited signal** is one whose spectrum is nonzero only over finite interval.

In this case $-\omega_{\rm max}$ to $\omega_{\rm max}$, where $\omega_{\rm max}=2\pi$.

If we sample x(t) at a sampling frequency ω_s ,

$$x_s(t) = x(t)p(t) = \operatorname{sinc}^2(nT_s)\sum_{r=-\infty}^{\infty} \delta(t - nT_s),$$

then from above

$$X_s(\omega) = \frac{1}{T_s} \sum_{k=-\infty}^{\infty} X(\omega - k\omega_s) = \frac{1}{T_s} \sum_{k=-\infty}^{\infty} \operatorname{tri}\left(\frac{\omega - k\omega_s}{2\pi}\right).$$

If we sample x(t) at a sampling frequency ω_s ,

$$x_s(t) = x(t)p(t) = \operatorname{sinc}^2(nT_s) \sum_{n=-\infty}^{\infty} \delta(t - nT_s),$$

then from above

$$X_s(\omega) = \frac{1}{T_s} \sum_{k=-\infty}^{\infty} X(\omega - k\omega_s) = \boxed{\frac{1}{T_s} \sum_{k=-\infty}^{\infty} \operatorname{tri}\left(\frac{\omega - k\omega_s}{2\pi}\right)}.$$

(Picture) (MIT, Lecture 16.2) with no overlap

Question

when is this picture correct?

Question

What happens if sampling rate is too low?

(Picture) (MIT, Lecture 16.2) with no overlap

Question

when is this picture correct?

Question

What happens if sampling rate is too low?

(Picture) (MIT, Lecture 16.2) with no overlap

Question

when is this picture correct?

When $\omega_s - \omega_{\text{max}} > \omega_{\text{max}}$, i.e. $\omega_s > 2\omega_{\text{max}}$.

Question

What happens if sampling rate is too low?

(Picture) (MIT, Lecture 16.2) with no overlap

Question

when is this picture correct?

When $\omega_s - \omega_{\text{max}} > \omega_{\text{max}}$, i.e. $\omega_s > 2\omega_{\text{max}}$.

Question

What happens if sampling rate is too low?

Overlap of the spectral replicates, call **aliasing** occurs. (**Picture**)(MIT, Lecture 16.3) with overlap

Outline

- 1 7. Sampling
 - Introduction
 - FT of impulse-train sampled signals (7.1)
 - Sampling Theorem
 - Aliasing (7.3)
 - Reconstruction via interpolation (7.2)
 - Realistic non-impulse sampling (7.1.2)
 - Discrete-time Fourier transform (DTFT) (5.1)
 - Summary

Recover x(t)

Question

How can we choose sampling frequency ω_s so that we can recover x(t) from its samples $x(nT_s)$?

7. Sampling Sampling Theorem

Sampling theorem

Theorem

Sampling theorem

Let x(t) is a band-limited signal with $X(\omega) = 0$ for $|\omega| > \omega_{\max}$. Then x(t) is uniquely determined by its samples $x[n] = x(nT_s)$, $n = 0, \pm 1, \pm 2, \ldots$ if

$$\omega_{s} > 2\omega_{\max}$$

where

$$\omega_{\mathcal{S}} = \frac{2\pi}{T_{\mathcal{S}}}$$

Given these samples, we can reconstruct x(t) by generating a periodic impulse train in which successive impulses have amplitudes that are successive sample values. This impulse train is then processed through an ideal lowpass filter with gain T_s and cutoff frequency greater than ω_{\max} and less than $\omega_s - \omega_{\max}$. The resulting output signal will exactly equal to x(t).

Sufficient condition

- The sampling theorem is a sufficient condition, not a necessary condition, for recovering x(t) from its uniformly spaced samples.
- If we have some additional prior information about the signal, then it may be possible (but usually difficult) to recover x(t).

Sufficient condition

- The sampling theorem is a sufficient condition, not a necessary condition, for recovering x(t) from its uniformly spaced samples.
- If we have some additional prior information about the signal, then it may be possible (but usually difficult) to recover x(t).

Recovering x(t) from $x_s(t)$ (1)

If x(t) is bandlimited and sampled at or above the Nyquist rate of $2\omega_{\max}$, then there is no overlap of the spectral replicated and (theoretically) we can recover x(t) from $x_s(t)$ by an ideal lowpass filter.

Specifically, from the examples we see that

$$X_s(\omega) = \frac{1}{T_s} \sum_{k=-\infty}^{\infty} X(\omega - k\omega_s)$$

$$X(\omega) = T_{s} \operatorname{rect}\left(\frac{\omega}{2\omega_{s}}\right) X_{s}(\omega) = H(\omega) X_{s}(\omega)$$

Recovering x(t) from $x_s(t)$ (1)

If x(t) is bandlimited and sampled at or above the **Nyquist rate** of $2\omega_{\text{max}}$, then there is no overlap of the spectral replicated and (theoretically) we can recover x(t) from $x_s(t)$ by an ideal lowpass filter.

Specifically, from the examples we see that

$$X_s(\omega) = \frac{1}{T_s} \sum_{k=-\infty}^{\infty} X(\omega - k\omega_s)$$

$$X(\omega) = T_{s} \operatorname{rect}\left(\frac{\omega}{2\omega_{c}}\right) X_{s}(\omega) = H(\omega) X_{s}(\omega)$$

Recovering x(t) from $x_s(t)$ (1)

If x(t) is bandlimited and sampled at or above the **Nyquist rate** of $2\omega_{\max}$, then there is no overlap of the spectral replicated and (theoretically) we can recover x(t) from $x_s(t)$ by an ideal lowpass filter.

Specifically, from the examples we see that

$$X_s(\omega) = \frac{1}{T_s} \sum_{k=-\infty}^{\infty} X(\omega - k\omega_s)$$

$$X(\omega) = T_{s} \operatorname{rect}\left(\frac{\omega}{2\omega_{c}}\right) X_{s}(\omega) = H(\omega) X_{s}(\omega)$$

Recovering x(t) from $x_s(t)$ (2)

so to recover x(t) from $x_s(t)$, we need a filter with frequency response

$$H(\omega) = T_s \operatorname{rect}\left(\frac{\omega}{2\omega_c}\right)$$
, where $\omega_{\max} < \omega_c < \omega_s - \omega_{\max}$.

Usually
$$\omega_c = \omega_s/2 = \omega_{\text{max}}$$
. *(Picture)*(MIT, Lecture 16.4)

Recovering x(t) from $x_s(t)$ (3)

$$x(t) \rightarrow \bigotimes_{\uparrow} \rightarrow x_{s}(t) \rightarrow H(\omega) \rightarrow x(t)$$
 $p(t)$

$$h(t) = \frac{\omega_c T_s}{\pi} \operatorname{sinc}\left(\frac{\omega_c}{\pi}t\right)$$

Recovering x(t) from $x_s(t)$ (3)

$$x(t) \to \bigotimes_{\uparrow} \to x_s(t) \to H(\omega) \to x(t)$$
 $p(t)$

By the convolution property of the FT, the impulse response of that filter is

$$h(t) = \frac{\omega_c T_s}{\pi} \operatorname{sinc}\left(\frac{\omega_c}{\pi}t\right).$$

This is a noncausal filter, so in practice it must be approximated by a non-ideal filter.

Recovering x(t) from $x_s(t)$ (3)

$$x(t) \to \bigotimes_{\uparrow} \to x_{s}(t) \to \boxed{H(\omega)} \to x(t)$$

$$p(t)$$

By the convolution property of the FT, the impulse response of that filter is

$$h(t) = \frac{\omega_c T_s}{\pi} \operatorname{sinc}\left(\frac{\omega_c}{\pi}t\right).$$

This is a noncausal filter, so in practice it must be approximated by a non-ideal filter.

Example

Why do CD's sample at 44.1kHz?

Example

Why do CD's sample at 44.1kHz?

- The human ear can only hear up to 20kHz, so even though a given musical instrument could in fact produce signal components above 20kHz, those components are irrelevant (to humans).
- So we can safely remove them by lowpass filtering.
- That filtering produces a (nearly) bandlimited signal, so the required sampling rate is 2 ⋅ 20kHz = 40kHz.

Example

But why 44.1kHz rather than 40kHz then?

Example (2)

Example

But why 44.1kHz rather than 40kHz then?

So that there is room for a transition band in the lowpass filters (both anti-alias filter and reconstruction filter).

Outline

1 7. Sampling

- Introduction
- FT of impulse-train sampled signals (7.1)
- Sampling Theorem
- Aliasing (7.3)
- Reconstruction via interpolation (7.2)
- Realistic non-impulse sampling (7.1.2)
- Discrete-time Fourier transform (DTFT) (5.1)
- Summary

Aliasing

Definition

The phenomenon, wherein an erroneous signal is recovered from sampled data because the sampling frequency was too low, is called **aliasing**.

Example

Illustration of aliasing when sampling sinusoids. Suppose

$$X(t) = \cos(4\pi t) \stackrel{\mathcal{F}}{\longleftrightarrow} \pi[\delta(\omega - 4\pi) + \delta(\omega + 4\pi)]$$

is sampled at $\omega_s = 6\pi$. What signal will come out of lowpass filter $\text{rect}(\frac{\omega}{6\pi})$?

Aliasing

Definition

The phenomenon, wherein an erroneous signal is recovered from sampled data because the sampling frequency was too low, is called **aliasing**.

Example

Illustration of aliasing when sampling sinusoids. Suppose

$$x(t) = \cos(4\pi t) \stackrel{\mathcal{F}}{\longleftrightarrow} \pi[\delta(\omega - 4\pi) + \delta(\omega + 4\pi)]$$

is sampled at $\omega_s = 6\pi$. What signal will come out of lowpass filter $\text{rect}(\frac{\omega}{6\pi})$?

Illustration of aliasing (1)

Question

What is ω_{max} ? Is this under-sampling?

Illustration of aliasing (1)

Question


What is ω_{max} ? Is this under-sampling?

$$\omega_{\mathrm{max}} = 4\pi$$

$$\omega_s = 6\pi < 2\omega_{\max} = 8\pi$$

So this is under-sampling and there is aliasing.


Illustration of aliasing (2)

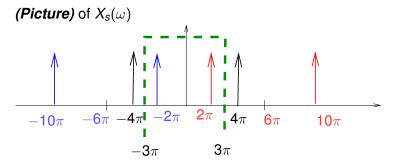

Question

What signal will come out of lowpass filter rect $(\frac{\omega}{6\pi})$?


Illustration of aliasing (2)

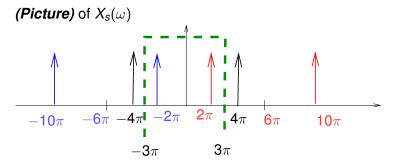

Question

What signal will come out of lowpass filter rect $(\frac{\omega}{6\pi})$?

Illustration of aliasing (2)

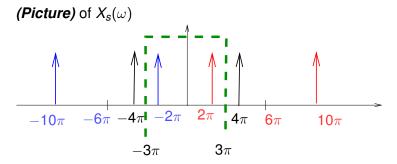

Question

What signal will come out of lowpass filter rect $(\frac{\omega}{6\pi})$?

$$\tilde{x}(t) = \cos(2\pi t)$$

So input frequency was 4π , but output was only 2π . Yong Long, UM-SJTU JI

$$X_{s}(\omega) = \sum_{k=-\infty}^{\infty} \frac{1}{T_{s}} X(\omega - k\omega_{s})$$

$$= \frac{\omega_{s}}{2\pi} \sum_{k=-\infty}^{\infty} \pi [\delta(\omega - 4\pi - k\omega_{s}) + \delta(\omega + 4\pi - k\omega_{s})]$$

$$= 3 \sum_{k=-\infty}^{\infty} \pi [\delta(\omega - 4\pi + 6\pi - (k+1)6\pi) + \delta(\omega + 4\pi - 6\pi - (k-1)6\pi)]$$

$$= 3 \sum_{k_{1}=-\infty}^{\infty} \pi \delta(\omega - k_{1}6\pi + 2\pi) + \sum_{k_{2}=-\infty}^{\infty} \pi \delta(\omega - k_{2}6\pi - 2\pi)]$$

$$= 3 \sum_{k_{1}=-\infty}^{\infty} \pi [\delta(\omega - k6\pi + 2\pi) + \delta(\omega - k6\pi - 2\pi)]$$

$$X_{s}(\omega) = \sum_{k=-\infty}^{\infty} \frac{1}{T_{s}} X(\omega - k\omega_{s})$$

$$= \frac{\omega_{s}}{2\pi} \sum_{k=-\infty}^{\infty} \pi [\delta(\omega - 4\pi - k\omega_{s}) + \delta(\omega + 4\pi - k\omega_{s})]$$

$$= 3 \sum_{k=-\infty}^{\infty} \pi [\delta(\omega - 4\pi + 6\pi - (k+1)6\pi) + \delta(\omega + 4\pi - 6\pi - (k-1)6\pi)]$$

$$= 3 \sum_{k_{1}=-\infty}^{\infty} \pi \delta(\omega - k_{1}6\pi + 2\pi) + \sum_{k_{2}=-\infty}^{\infty} \pi \delta(\omega - k_{2}6\pi - 2\pi)]$$

$$= 3 \sum_{k_{1}=-\infty}^{\infty} \pi [\delta(\omega - k6\pi + 2\pi) + \delta(\omega - k6\pi - 2\pi)]$$

$$X_{s}(\omega) = \sum_{k=-\infty}^{\infty} \frac{1}{T_{s}} X(\omega - k\omega_{s})$$

$$= \frac{\omega_{s}}{2\pi} \sum_{k=-\infty}^{\infty} \pi [\delta(\omega - 4\pi - k\omega_{s}) + \delta(\omega + 4\pi - k\omega_{s})]$$

$$= 3 \sum_{k=-\infty}^{\infty} \pi [\delta(\omega - 4\pi + 6\pi - (k+1)6\pi) + \delta(\omega + 4\pi - 6\pi - (k-1)6\pi)]$$

$$= 3 \sum_{k_{1}=-\infty}^{\infty} \pi \delta(\omega - k_{1}6\pi + 2\pi) + \sum_{k_{2}=-\infty}^{\infty} \pi \delta(\omega - k_{2}6\pi - 2\pi)]$$

$$= 3 \sum_{k_{1}=-\infty}^{\infty} \pi [\delta(\omega - k6\pi + 2\pi) + \delta(\omega - k6\pi - 2\pi)]$$

$$X_{s}(\omega) = \sum_{k=-\infty}^{\infty} \frac{1}{T_{s}} X(\omega - k\omega_{s})$$

$$= \frac{\omega_{s}}{2\pi} \sum_{k=-\infty}^{\infty} \pi [\delta(\omega - 4\pi - k\omega_{s}) + \delta(\omega + 4\pi - k\omega_{s})]$$

$$= 3 \sum_{k=-\infty}^{\infty} \pi [\delta(\omega - 4\pi + 6\pi - (k+1)6\pi) + \delta(\omega + 4\pi - 6\pi - (k-1)6\pi)]$$

$$= 3 \sum_{k_{1}=-\infty}^{\infty} \pi \delta(\omega - k_{1}6\pi + 2\pi) + \sum_{k_{2}=-\infty}^{\infty} \pi \delta(\omega - k_{2}6\pi - 2\pi)]$$

$$= 3 \sum_{k_{1}=-\infty}^{\infty} \pi [\delta(\omega - k6\pi + 2\pi) + \delta(\omega - k6\pi - 2\pi)]$$

$$X_{s}(\omega) = \sum_{k=-\infty}^{\infty} \frac{1}{T_{s}} X(\omega - k\omega_{s})$$

$$= \frac{\omega_{s}}{2\pi} \sum_{k=-\infty}^{\infty} \pi [\delta(\omega - 4\pi - k\omega_{s}) + \delta(\omega + 4\pi - k\omega_{s})]$$

$$= 3 \sum_{k=-\infty}^{\infty} \pi [\delta(\omega - 4\pi + 6\pi - (k+1)6\pi) + \delta(\omega + 4\pi - 6\pi - (k-1)6\pi)]$$

$$= 3 \sum_{k_{1}=-\infty}^{\infty} \pi \delta(\omega - k_{1}6\pi + 2\pi) + \sum_{k_{2}=-\infty}^{\infty} \pi \delta(\omega - k_{2}6\pi - 2\pi)]$$

$$= 3 \sum_{k_{1}=-\infty}^{\infty} \pi [\delta(\omega - k6\pi + 2\pi) + \delta(\omega - k6\pi - 2\pi)]$$

Illustration of aliasing (4)

Question

Input signal was $x(t) = \cos(4\pi t)$ with a frequency of 4π , but output signal was $\tilde{x}(t) = \cos(2\pi t)$ with a frequency of only 2π . Does this violate "cosine in cosine out" property we have repeated all semester?

Sinusoidal signals through (real) LTI systems:

$$x(t) = \cos(\omega t + \phi) \rightarrow \boxed{\mathsf{LTI}\ h(t)} \rightarrow y(t) = |H(j\omega)|\cos(\omega t + \phi + \angle H(j\omega))$$

Illustration of aliasing (4)

Question

Input signal was $x(t) = \cos(4\pi t)$ with a frequency of 4π , but output signal was $\tilde{x}(t) = \cos(2\pi t)$ with a frequency of only 2π . Does this violate "cosine in cosine out" property we have repeated all semester?

Sinusoidal signals through (real) LTI systems:

$$x(t) = \cos(\omega t + \phi) \rightarrow \boxed{\mathsf{LTI}\ h(t)} \rightarrow y(t) = |H(j\omega)|\cos(\omega t + \phi + \angle H(j\omega))$$

Illustration of aliasing (4)

No, since system is not LTI. The overall system of recovering x(t) from $x_s(t)$ is:

$$x(t) o \bigotimes_{\uparrow} o x_{s}(t) o H(\omega) o \tilde{x}(t)$$
 $p(t)$

Question

Is it not linear or not time-invariant?

Illustration of aliasing (4)

No, since system is not LTI. The overall system of recovering x(t) from $x_s(t)$ is:

$$x(t) o \bigotimes_{\uparrow} o x_s(t) o H(\omega) o \tilde{x}(t)$$
 $p(t)$

Question

Is it not linear or not time-invariant?

Illustration of aliasing (4)

No, since system is not LTI. The overall system of recovering x(t) from $x_s(t)$ is:

$$x(t) o \bigotimes_{\uparrow} o x_{s}(t) o H(\omega) \to \tilde{x}(t)$$
 $p(t)$

Question

Is it not linear or not time-invariant?

We know the lowpass filter sub-system is LTI. Not TI due to multiplying by p(t).

Aliasing (1)

Aliasing demonstrated by under sampling of a sinusoid signal (**Vedio** *MIT*, *Lecture 16*, *9:50-19:50min*)

It is important to understand that

- In sampling and reconstruction with an ideal lowpass filter, the reconstructed output will not be equal to the original input in the presence of aliasing, but samples of the reconstructed output will always match the samples of the original signal.
- Aliasing is not necessarily undesirable.

Aliasing (1)

Aliasing demonstrated by under sampling of a sinusoid signal (**Vedio** *MIT*, *Lecture 16*, *9:50-19:50min*) It is important to understand that

- In sampling and reconstruction with an ideal lowpass filter, the reconstructed output will not be equal to the original input in the presence of aliasing, but samples of the reconstructed output will always match the samples of the original signal.
- Aliasing is not necessarily undesirable.

Aliasing (2)

- The human eye is an imperfect optical system. The pupil acts as a lowpass filter, So the optical image that is impinges on the retina is approximately a bandlimited signal.
- Dr. Harold Edgerton at MIT's Strobe Laboratory.
 Stroboscopy heavily exploits the concept of aliasing. (Vedic MIT, Lecture 16, 25:22-45:30m)
- By using sampling with light pulses, motion too fast for the eye to tract can be aliased down to much lower frequencies. In this case, the strobe light represents the sampler, and the lowpass filtering is accomplished visually.

Aliasing (2)

- The human eye is an imperfect optical system. The pupil acts as a lowpass filter, So the optical image that is impinges on the retina is approximately a bandlimited signal.
- Dr. Harold Edgerton at MIT's Strobe Laboratory.
 Stroboscopy heavily exploits the concept of aliasing. (Vedio MIT, Lecture 16, 25:22-45:30m)
- By using sampling with light pulses, motion too fast for the eye to tract can be aliased down to much lower frequencies.
 In this case, the strobe light represents the sampler, and the lowpass filtering is accomplished visually.

Outline

- 1 7. Sampling
 - Introduction
 - FT of impulse-train sampled signals (7.1)
 - Sampling Theorem
 - Aliasing (7.3)
 - Reconstruction via interpolation (7.2)
 - Realistic non-impulse sampling (7.1.2)
 - Discrete-time Fourier transform (DTFT) (5.1)
 - Summary

Frequency domain recovery

We have seen using the frequency domain that we can recover x(t) from the impulse sampled version $x_s(t)$ by using an ideal lowpass filter:

$$X_r(\omega) = H(\omega)X_s(\omega)$$
 $H(\omega) = T_s \operatorname{rect}\left(\frac{\omega}{2\omega_c}\right), \ \omega_{\max} < \omega_c < \omega_s - \omega_{\max}$

Ouestion

What does this look like in the time domain?

Frequency domain recovery

We have seen using the frequency domain that we can recover x(t) from the impulse sampled version $x_s(t)$ by using an ideal lowpass filter:

$$X_r(\omega) = H(\omega)X_s(\omega)$$
 $H(\omega) = T_s \operatorname{rect}\left(\frac{\omega}{2\omega_c}\right), \ \omega_{\max} < \omega_c < \omega_s - \omega_{\max}$

Question

What does this look like in the time domain?

$$x_{r}(t) = h(t) * x_{s}(t)$$

$$= h(t) * \left[\sum_{n=-\infty}^{\infty} x(nT_{s}) \delta(t - nT_{s}) \right]$$

$$= \sum_{n=-\infty}^{\infty} x(nT_{s}) h(t - nT_{s})$$

$$= \left[\sum_{n=-\infty}^{\infty} x(nT_{s}) \frac{\omega_{c}T_{s}}{\pi} \operatorname{sinc} \left(\frac{\omega_{c}(t - nT_{s})}{\pi} \right) \right]$$

$$= T_{s} \operatorname{rect} \left(\frac{\omega}{2^{t+1}} \right) \stackrel{\mathcal{F}}{\longleftrightarrow} h(t) = \frac{\omega_{c}T_{s}}{\pi} \operatorname{sinc} \left(\frac{\omega_{c}t}{\pi} \right)$$

$$x_{r}(t) = h(t) * x_{s}(t)$$

$$= h(t) * \left[\sum_{n=-\infty}^{\infty} x(nT_{s}) \delta(t - nT_{s}) \right]$$

$$= \sum_{n=-\infty}^{\infty} x(nT_{s}) h(t - nT_{s})$$

$$= \sum_{n=-\infty}^{\infty} x(nT_{s}) \frac{\omega_{c} T_{s}}{\pi} \operatorname{sinc} \left(\frac{\omega_{c}(t - nT_{s})}{\pi} \right)$$

$$= T_{s} \operatorname{rect} \left(\frac{\omega}{2} \right) \stackrel{\mathcal{F}}{\longleftrightarrow} h(t) = \frac{\omega_{c} T_{s}}{\pi} \operatorname{sinc} \left(\frac{\omega_{c} t}{2} \right)$$

$$x_{r}(t) = h(t) * x_{s}(t)$$

$$= h(t) * \left[\sum_{n=-\infty}^{\infty} x(nT_{s}) \delta(t - nT_{s}) \right]$$

$$= \sum_{n=-\infty}^{\infty} x(nT_{s}) h(t - nT_{s})$$

$$= \left[\sum_{n=-\infty}^{\infty} x(nT_{s}) \frac{\omega_{c} T_{s}}{\pi} \operatorname{sinc} \left(\frac{\omega_{c}(t - nT_{s})}{\pi} \right) \right]$$

$$= T_{s} \operatorname{rect} \left(\frac{\omega}{2} \right) \iff h(t) = \frac{\omega_{c} T_{s}}{\pi} \operatorname{sinc} \left(\frac{\omega_{c} t}{2} \right)$$

$$x_{r}(t) = h(t) * x_{s}(t)$$

$$= h(t) * \left[\sum_{n=-\infty}^{\infty} x(nT_{s}) \delta(t - nT_{s}) \right]$$

$$= \sum_{n=-\infty}^{\infty} x(nT_{s}) h(t - nT_{s})$$

$$= \left[\sum_{n=-\infty}^{\infty} x(nT_{s}) \frac{\omega_{c}T_{s}}{\pi} \operatorname{sinc}\left(\frac{\omega_{c}(t - nT_{s})}{\pi}\right) \right]$$

$$H(\omega) = T_{s} \operatorname{rect}\left(\frac{\omega}{2\omega_{s}}\right) \stackrel{\mathcal{F}}{\longleftrightarrow} h(t) = \frac{\omega_{c}T_{s}}{\pi} \operatorname{sinc}\left(\frac{\omega_{c}t}{\pi}\right)$$

Sinc interpolation

$$x_r(t) = \sum_{n=-\infty}^{\infty} x(nT_s) \frac{\omega_c T_s}{\pi} \operatorname{sinc}\left(\frac{\omega_c (t - nT_s)}{\pi}\right)$$

Usually one uses (approximately)

$$\omega_c = \frac{\omega_s}{2}, \quad \omega_s = \frac{2\pi}{T_s}$$

in which case

$$x_r(t) = \sum_{n=-\infty}^{\infty} x(nT_s) \operatorname{sinc}\left(\frac{t - nT_s}{T_s}\right)$$

This is known as **sinc interpolation**, since the formula converts from the samples $x(nT_s)$ to the continuous-time signal $x_r(t)$.

Yong Long, UM-SJTU JI

Sinc interpolation

$$x_r(t) = \sum_{n=-\infty}^{\infty} x(nT_s) \frac{\omega_c T_s}{\pi} \operatorname{sinc}\left(\frac{\omega_c (t - nT_s)}{\pi}\right)$$

Usually one uses (approximately)

$$\omega_{c}=rac{\omega_{s}}{2},\quad \omega_{s}=rac{2\pi}{T_{s}}$$

in which case

$$x_r(t) = \sum_{n=-\infty}^{\infty} x(nT_s) \operatorname{sinc}\left(\frac{t - nT_s}{T_s}\right)$$

This is known as **sinc interpolation**, since the formula converts from the samples $x(nT_s)$ to the continuous-time signal $x_r(t)$.

Yong Long, UM-SJTU JI

Sinc interpolation

$$x_r(t) = \sum_{n=-\infty}^{\infty} x(nT_s) \frac{\omega_c T_s}{\pi} \operatorname{sinc}\left(\frac{\omega_c (t - nT_s)}{\pi}\right)$$

Usually one uses (approximately)


$$\omega_{c}=rac{\omega_{s}}{2},\quad \omega_{s}=rac{2\pi}{T_{s}}$$

in which case

$$x_r(t) = \sum_{n=-\infty}^{\infty} x(nT_s) \operatorname{sinc}\left(\frac{t - nT_s}{T_s}\right)$$

This is known as **sinc interpolation**, since the formula converts from the samples $x(nT_s)$ to the continuous-time signal $x_r(t)$.

Sinc interpolation: example (1)

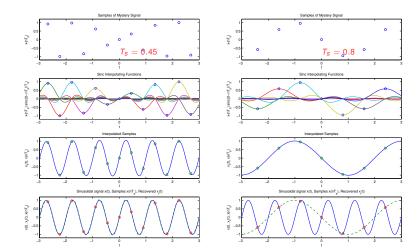

Sinc interpolation: example (2)

Example

Here are samples of two different signals, and their reconstructions using sinc interpolation.

- Can you guess the signal from just looking at the samples?
- 2 Why is there imperfect agreement between the original signal and the sinc-interpolated reconstruction?

Sinc interpolation: example (2)

Example

Here are samples of two different signals, and their reconstructions using sinc interpolation.


- 1 Can you guess the signal from just looking at the samples?
- 2 Why is there imperfect agreement between the original signal and the sinc-interpolated reconstruction?
- 1 No.
- 2 $T_0 = 1 \Longrightarrow T_s \le T_0/2 = 0.5$ for exact recovery.

- In practice, the sinc interpolation formula is inconvenient because the sinc function has infinite duration.
- To save computation when using a computer for interpolation, one often simply uses **linear interpolation** (first-order hold), which essentially means "connect the dots" in the graph of (nT_s, x(nT_s)) pairs.
- This is exactly what programs like MATLAB do when making plots of "continuous" functions like sin(t) from a discrete array of t values.

- In practice, the sinc interpolation formula is inconvenient because the sinc function has infinite duration.
- To save computation when using a computer for interpolation, one often simply uses linear interpolation (first-order hold), which essentially means "connect the dots" in the graph of (nT_s, x(nT_s)) pairs.
- This is exactly what programs like MATLAB do when making plots of "continuous" functions like sin(t) from a discrete array of t values.

- In practice, the sinc interpolation formula is inconvenient because the sinc function has infinite duration.
- To save computation when using a computer for interpolation, one often simply uses linear interpolation (first-order hold), which essentially means "connect the dots" in the graph of (nT_s, x(nT_s)) pairs.
- This is exactly what programs like MATLAB do when making plots of "continuous" functions like sin(t) from a discrete array of t values.

One way to write linear interpolation mathematically is as follows

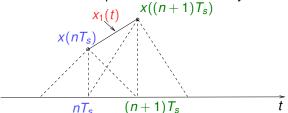

For $nT_s \le t < (n+1)T_s$, the value $x_1(t)$ along the straight line is given from the equation


$$x_1(t) = x(nT_s) + \frac{x((n+1)T_s) - x(nT_s)}{(n+1)T_s - nT_s}(t - nT_s)$$

(Point-slope form of line equations $x(t) - x(t_1) = m(t - t_1)$)

$$= (1 - \frac{t - nT_s}{T_s})x(nT_s) + \frac{t - nT_s}{T_s}x((n+1)T_s)$$

The MATLAB function interp1 does this operation.)

One way to write linear interpolation mathematically is as follows

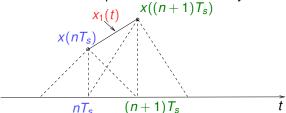

For $nT_s \le t < (n+1)T_s$, the value $x_1(t)$ along the straight line is given from the equation


$$x_1(t) = x(nT_s) + \frac{x((n+1)T_s) - x(nT_s)}{(n+1)T_s - nT_s}(t - nT_s)$$

(Point-slope form of line equations $x(t) - x(t_1) = m(t - t_1)$)

$$= (1 - \frac{t - nT_s}{T_s})x(nT_s) + \frac{t - nT_s}{T_s}x((n+1)T_s)$$

(The MATLAB function interp1 does this operation.) Yong Long, UM-SJTU JI

One way to write linear interpolation mathematically is as follows

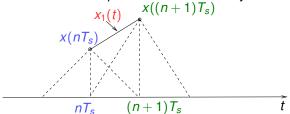

For $nT_s \le t < (n+1)T_s$, the value $x_1(t)$ along the straight line is given from the equation

$$x_1(t) = x(nT_s) + \frac{x((n+1)T_s) - x(nT_s)}{(n+1)T_s - nT_s}(t - nT_s)$$

(Point-slope form of line equations $x(t) - x(t_1) = m(t - t_1)$)

$$= \boxed{(1 - \frac{t - nT_s}{T_s})x(nT_s) + \frac{t - nT_s}{T_s}x((n+1)T_s)}$$

(The MATLAB function interp1 does this operation.)

More conveniently, we can express the linear interpolation process using convolution with a triangle function (Video MIT, Lecture 17, 22:00min)

$$x_{1}(t) = \sum_{n=-\infty}^{\infty} x(nT_{s}) \operatorname{tri}\left(\frac{t - nT_{s}}{T_{s}}\right)$$

$$= \operatorname{tri}\left(\frac{t}{T_{s}}\right) * \sum_{n=-\infty}^{\infty} x(nT_{s}) \delta(t - nT_{s})$$

$$= \operatorname{tri}\left(\frac{t}{T_{s}}\right) * X_{s}(t)$$

$$h_1(t) = \operatorname{tri}(t/T_s) \stackrel{\mathcal{F}}{\longleftrightarrow} H_1(\omega) = T_s \operatorname{sinc}^2\left(\frac{T_s\omega}{2\pi}\right) = T_s \operatorname{sinc}^2\left(\frac{\omega}{\omega_s}\right).$$

More conveniently, we can express the linear interpolation process using convolution with a triangle function (<u>Video MIT</u>, Lecture 17, 22:00min)

$$x_{1}(t) = \sum_{n=-\infty}^{\infty} x(nT_{s}) \operatorname{tri}\left(\frac{t - nT_{s}}{T_{s}}\right)$$

$$= \operatorname{tri}\left(\frac{t}{T_{s}}\right) * \sum_{n=-\infty}^{\infty} x(nT_{s}) \delta(t - nT_{s})$$

$$= \operatorname{tri}\left(\frac{t}{T_{s}}\right) * X_{s}(t)$$

$$h_1(t) = \operatorname{tri}(t/T_s) \stackrel{\mathcal{F}}{\longleftrightarrow} H_1(\omega) = T_s \operatorname{sinc}^2\left(\frac{T_s\omega}{2\pi}\right) = T_s \operatorname{sinc}^2\left(\frac{\omega}{\omega_s}\right).$$

More conveniently, we can express the linear interpolation process using convolution with a triangle function (Video MIT, Lecture 17, 22:00min)

$$x_{1}(t) = \sum_{n=-\infty}^{\infty} x(nT_{s}) \operatorname{tri}\left(\frac{t-nT_{s}}{T_{s}}\right)$$

$$= \operatorname{tri}\left(\frac{t}{T_{s}}\right) * \sum_{n=-\infty}^{\infty} x(nT_{s}) \delta(t-nT_{s})$$

$$= \operatorname{tri}\left(\frac{t}{T_{s}}\right) * \chi_{s}(t)$$

$$h_1(t) = \operatorname{tri}(t/T_s) \stackrel{\mathcal{F}}{\longleftrightarrow} H_1(\omega) = T_s \operatorname{sinc}^2\left(\frac{T_s\omega}{2\pi}\right) = T_s \operatorname{sinc}^2\left(\frac{\omega}{\omega_s}\right).$$

More conveniently, we can express the linear interpolation process using convolution with a triangle function (Video MIT, Lecture 17, 22:00min)

$$x_{1}(t) = \sum_{n=-\infty}^{\infty} x(nT_{s}) \operatorname{tri}\left(\frac{t-nT_{s}}{T_{s}}\right)$$

$$= \operatorname{tri}\left(\frac{t}{T_{s}}\right) * \sum_{n=-\infty}^{\infty} x(nT_{s}) \delta(t-nT_{s})$$

$$= \operatorname{tri}\left(\frac{t}{T_{s}}\right) * X_{s}(t)$$

$$h_1(t) = \operatorname{tri}(t/T_s) \stackrel{\mathcal{F}}{\longleftrightarrow} H_1(\omega) = T_s \operatorname{sinc}^2\left(\frac{T_s\omega}{2\pi}\right) = T_s \operatorname{sinc}^2\left(\frac{\omega}{\omega_s}\right).$$

More conveniently, we can express the linear interpolation process using convolution with a triangle function (Video MIT, Lecture 17, 22:00min)

$$x_{1}(t) = \sum_{n=-\infty}^{\infty} x(nT_{s}) \operatorname{tri}\left(\frac{t-nT_{s}}{T_{s}}\right)$$


$$= \operatorname{tri}\left(\frac{t}{T_{s}}\right) * \sum_{n=-\infty}^{\infty} x(nT_{s}) \delta(t-nT_{s})$$

$$= \operatorname{tri}\left(\frac{t}{T_{s}}\right) * X_{s}(t)$$

$$h_1(t) = \operatorname{tri}(t/T_s) \stackrel{\mathcal{F}}{\longleftrightarrow} H_1(\omega) = T_s \operatorname{sinc}^2\left(\frac{T_s\omega}{2\pi}\right) = T_s \operatorname{sinc}^2\left(\frac{\omega}{\omega_s}\right).$$

$$H_1(\omega) = T_s \operatorname{sinc}^2\left(\frac{\omega}{\omega_s}\right)$$

 $H_1(\omega)$ with first zero at $\pm \omega_s$ vs ideal $H(\omega)$ with cutoff at $\pm \omega_s/2$.

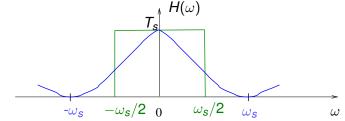

Thus in the frequency domain we have

$$X_{1}(\omega) = T_{s}\operatorname{sinc}^{2}\left(\frac{\omega}{\omega_{s}}\right)X_{s}(\omega)$$

$$= T_{s}\operatorname{sinc}^{2}\left(\frac{\omega}{\omega_{s}}\right)\left[\frac{1}{T_{s}}\sum_{k=-\infty}^{\infty}X(\omega-k\omega_{s})\right]$$

$$= \sum_{k=-\infty}^{\infty}\operatorname{sinc}^{2}\left(\frac{\omega}{\omega_{s}}\right)X(\omega-k\omega_{s})$$

Thus in the frequency domain we have

$$X_{1}(\omega) = T_{s} \operatorname{sinc}^{2}\left(\frac{\omega}{\omega_{s}}\right) X_{s}(\omega)$$

$$= T_{s} \operatorname{sinc}^{2}\left(\frac{\omega}{\omega_{s}}\right) \left[\frac{1}{T_{s}} \sum_{k=-\infty}^{\infty} X(\omega - k\omega_{s})\right]$$

$$= \sum_{k=-\infty}^{\infty} \operatorname{sinc}^{2}\left(\frac{\omega}{\omega_{s}}\right) X(\omega - k\omega_{s})$$

Thus in the frequency domain we have

$$X_{1}(\omega) = T_{s} \operatorname{sinc}^{2}\left(\frac{\omega}{\omega_{s}}\right) X_{s}(\omega)$$

$$= T_{s} \operatorname{sinc}^{2}\left(\frac{\omega}{\omega_{s}}\right) \left[\frac{1}{T_{s}} \sum_{k=-\infty}^{\infty} X(\omega - k\omega_{s})\right]$$

$$= \left[\sum_{k=-\infty}^{\infty} \operatorname{sinc}^{2}\left(\frac{\omega}{\omega_{s}}\right) X(\omega - k\omega_{s})\right]$$

Zero-order hold interpolation

The zero-order hold (nearest neighbor interpolation) system samples x(t) at a given instant and holds that value until the next instant at which a sample is taken (MIT, Lecture 17.2).

$$x(t) \rightarrow \bigotimes_{\uparrow} \rightarrow x_s(t) \rightarrow \boxed{\frac{h_2(t)}{h_2(t)}} \rightarrow x_2(t)$$
 $p(t)$

The impulse response of the zero-order hold filter is (MIT, Lecture 17.4) (Video, MIT, Lecture 17, 18:30min):

$$h_2(t) = \operatorname{rect}\left(\frac{t}{T_s} - \frac{1}{2}\right)$$

$$h_2(t) \stackrel{\mathcal{F}}{\longleftrightarrow} H_2(\omega) = T_s \operatorname{sinc}\left(\frac{\omega T_s}{2\pi}\right) e^{-j\omega T_s/2} = \boxed{T_s \operatorname{sinc}\left(\frac{\omega}{\omega_s}\right) e^{-j\omega T_s/2}}$$

Zero-order hold interpolation

The zero-order hold (nearest neighbor interpolation) system samples x(t) at a given instant and holds that value until the next instant at which a sample is taken (MIT, Lecture 17.2).

$$x(t) \rightarrow \bigotimes_{\uparrow} \rightarrow x_s(t) \rightarrow \boxed{\frac{h_2(t)}{p(t)}} \rightarrow x_2(t)$$
 $p(t)$

The impulse response of the zero-order hold filter is (MIT, Lecture 17.4) (Video, MIT, Lecture 17, 18:30min):

$$h_2(t) = \operatorname{rect}\left(\frac{t}{T_s} - \frac{1}{2}\right)$$

$$h_2(t) \stackrel{\mathcal{F}}{\longleftrightarrow} H_2(\omega) = T_s \operatorname{sinc}\left(\frac{\omega T_s}{2\pi}\right) e^{-j\omega T_s/2} = T_s \operatorname{sinc}\left(\frac{\omega}{\omega_s}\right) e^{-j\omega T_s/2}$$

Zero-order hold interpolation

The zero-order hold (nearest neighbor interpolation) system samples x(t) at a given instant and holds that value until the next instant at which a sample is taken (MIT, Lecture 17.2).

$$x(t) \rightarrow \bigotimes_{\uparrow} \rightarrow x_s(t) \rightarrow \boxed{\frac{h_2(t)}{p(t)}} \rightarrow x_2(t)$$
 $p(t)$

The impulse response of the zero-order hold filter is (MIT, Lecture 17.4) (Video, MIT, Lecture 17, 18:30min):

$$h_2(t) = \operatorname{rect}\left(\frac{t}{T_s} - \frac{1}{2}\right)$$

$$h_2(t) \stackrel{\mathcal{F}}{\longleftrightarrow} H_2(\omega) = T_s \operatorname{sinc}\left(\frac{\omega T_s}{2\pi}\right) e^{-j\omega T_s/2} = \boxed{T_s \operatorname{sinc}\left(\frac{\omega}{\omega_s}\right) e^{-j\omega T_s/2}}$$

Zero-order hold interpolation: example (1)

Example

How to recover x(t) from $x_2(t)$?

$$x(t) o \bigotimes_{\uparrow} o x_s(t) o \boxed{h_2(t)} o x_2(t) o \boxed{?} o x(t).$$
 $p(t)$

Zero-order hold interpolation: example (1)

Example

How to recover x(t) from $x_2(t)$?

$$x(t) o \bigotimes_{\uparrow} o x_s(t) o \boxed{h_2(t)} o x_2(t) o \boxed{?} o x(t).$$
 $p(t)$

Need inverse filter.

$$H_{2,i}(\omega) = \frac{H(\omega)}{H_2(\omega)} = H(\omega) \frac{e^{j\omega T_s/2}}{T_s \operatorname{sinc}\left(\frac{\omega}{\omega_s}\right)} = \operatorname{rect}\left(\frac{\omega}{\omega_s}\right) \frac{e^{j\omega T_s/2}}{\operatorname{sinc}\left(\frac{\omega}{\omega_s}\right)}$$

(textbook, Figure 7.8, p. 522)

Interpolations

1 Sinc interpolation (Ideal interpolation filter)

$$h(t) = \frac{\omega_c T_s}{\pi} \operatorname{sinc}\left(\frac{\omega_c t}{\pi}\right) \stackrel{\mathcal{F}}{\longleftrightarrow} H(\omega) = T_s \operatorname{rect}\left(\frac{\omega}{2\omega_c}\right)$$

2 Linear interpolation (first-order hold filter)

$$h_1(t) = \operatorname{tri}(t/T_s) \stackrel{\mathcal{F}}{\longleftrightarrow} H_1(\omega) = T_s \operatorname{sinc}^2\left(\frac{\omega}{\omega_s}\right)$$

Nearest neighbor interpolation (zero-order hold filter)

$$h_2(t) = \operatorname{rect}\left(\frac{t}{T_s} - \frac{1}{2}\right) \stackrel{\mathcal{F}}{\longleftrightarrow} H_2(\omega) = T_s \operatorname{sinc}\left(\frac{\omega}{\omega_s}\right) e^{-j\omega T_s/2}$$

 $H(\omega)$ (*Picture*)MIT, Lecture 17.5 Image sampling and reconstruction example (Video: MIT Lecture 17, 28:30m)


Outline

- 1 7. Sampling
 - Introduction
 - FT of impulse-train sampled signals (7.1)
 - Sampling Theorem
 - Aliasing (7.3)
 - Reconstruction via interpolation (7.2)
 - Realistic non-impulse sampling (7.1.2)
 - Discrete-time Fourier transform (DTFT) (5.1)
 - Summary

Realistic non-impulse sampling (1)

- Real A/D converters do not use ideal impulse functions, since a finite time-interval of the signal must be measured for each sample so some nonzero current can flow.
- We can model sampling more realistically by considering, for

$$p(t) = \sum_{n = -\infty}^{\infty} \operatorname{rect}\left(\frac{t - nT_s}{\tau}\right)$$

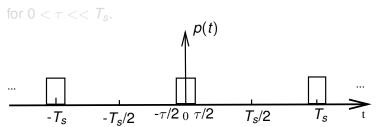


Realistic non-impulse sampling (1)

- Real A/D converters do not use ideal impulse functions, since a finite time-interval of the signal must be measured for each sample so some nonzero current can flow.
- We can model sampling more realistically by considering, for example, rectangular pulse trains with a small duty cycle.

$$p(t) = \sum_{n = -\infty}^{\infty} \operatorname{rect}\left(\frac{t - nT_{s}}{\tau}\right)$$

for $0 < \tau << T_s$.

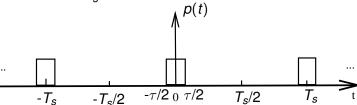

Realistic non-impulse sampling (2)

Let p(t) denote such a pulse train, or for that matter, any periodic signal, with period T_s , the sampling frequency. By Fourier series, we know that

$$p(t) = \sum_{k=-\infty}^{\infty} c_k e^{jk\omega_s t}, \quad c_k = \frac{1}{T_s} \int_{-T_s/2}^{-T_s/2} p(t) e^{-jk\omega_s t} dt.$$

Question

Suppose we "sample" a signal x(t) by multiplying by p(t) to form $x_s(t) = x(t)p(t)$. What is the spectrum of $x_s(t)$?

Realistic non-impulse sampling (2)

Let p(t) denote such a pulse train, or for that matter, any periodic signal, with period T_s , the sampling frequency. By Fourier series, we know that

$$p(t) = \sum_{k=-\infty}^{\infty} c_k e^{jk\omega_s t}, \quad c_k = \frac{1}{T_s} \int_{-T_s/2}^{-T_s/2} p(t) e^{-jk\omega_s t} dt.$$

Questior

Suppose we "sample" a signal x(t) by multiplying by p(t) to form $x_s(t) = x(t)p(t)$. What is the spectrum of $x_s(t)$?

Realistic non-impulse sampling (2)

Let p(t) denote such a pulse train, or for that matter, any periodic signal, with period T_s , the sampling frequency. By Fourier series, we know that

$$p(t) = \sum_{k=-\infty}^{\infty} c_k e^{jk\omega_s t}, \quad c_k = \frac{1}{T_s} \int_{-T_s/2}^{-T_s/2} p(t) e^{-jk\omega_s t} dt.$$

Question

Suppose we "sample" a signal x(t) by multiplying by p(t) to form $x_s(t) = x(t)p(t)$. What is the spectrum of $x_s(t)$?

Realistic non-impulse sampling (3)

$$x_s(t) = x(t)p(t) = x(t) \left[\sum_{k=-\infty}^{\infty} c_k e^{jk\omega_s t} \right] = \sum_{k=-\infty}^{\infty} c_k \left[x(t)e^{jk\omega_s t} \right]$$

so by the frequency-shift property of the FT:

$$X_s(\omega) = \sum_{k=-\infty}^{\infty} c_k X(\omega - k\omega_s).$$

Realistic non-impulse sampling (3)

$$x_s(t) = x(t)p(t) = x(t) \left[\sum_{k=-\infty}^{\infty} c_k e^{jk\omega_s t} \right] = \sum_{k=-\infty}^{\infty} c_k \left[x(t)e^{jk\omega_s t} \right]$$

so by the frequency-shift property of the FT:

$$X_s(\omega) = \sum_{k=-\infty}^{\infty} c_k X(\omega - k\omega_s).$$

Realistic non-impulse sampling: example (1)

Example

if p(t) is the impulse train,

$$p(t) = \sum_{n=-\infty}^{\infty} \delta(t - nT_s)$$

then

$$c_k = 1/T_s$$
, (derived previously as FS example)

so

$$X_{s}(\omega) = \sum_{k=-\infty}^{\infty} c_{k} X(\omega - k\omega_{s}) = \sum_{k=-\infty}^{\infty} \frac{1}{T_{s}} X(\omega - k\omega_{s})$$

which is identical to our earlier formula!

Realistic non-impulse sampling: example (2)

Example

 $X(\omega)$ has a triangular spectrum

$$X(\omega) = \operatorname{tri}\left(\frac{\omega}{\omega_1}\right).$$

p(t) is a rectangular pulse train with period T_s and width τ per cycle, and amplitude $1/\tau$. Find the spectrum of the sampled signal

$$x_s(t) = x(t)p(t).$$

Realistic non-impulse sampling: example (3)

From the FS table

$$c_k = \frac{1}{T_s} \operatorname{sinc}\left(\frac{k\tau\omega_s}{2\pi}\right)$$

so

$$X_{s}(\omega) = \sum_{k=-\infty}^{\infty} \frac{1}{T_{s}} \operatorname{sinc}\left(\frac{\tau k \omega_{s}}{2\pi}\right) X(\omega - k \omega_{s})$$
$$= \left[\sum_{k=-\infty}^{\infty} \frac{1}{T_{s}} \operatorname{sinc}\left(\frac{\tau k \omega_{s}}{2\pi}\right) \operatorname{tri}\left(\frac{\omega - k \omega_{s}}{\omega_{1}}\right)\right]$$

with each replicate scaled down by corresponding ck.

Outline

- 1 7. Sampling
 - Introduction
 - FT of impulse-train sampled signals (7.1)
 - Sampling Theorem
 - Aliasing (7.3)
 - Reconstruction via interpolation (7.2)
 - Realistic non-impulse sampling (7.1.2)
 - Discrete-time Fourier transform (DTFT) (5.1)
 - Summary

Computing the FT (1)

Question

How does a spectrum analyzer work?

- We have seen that a band-limited signal can be reconstructed from its samples (provided sampling rate is high enough).
- If we can find the original signal from its samples, then we should also be able to find the FT of the signal from its samples.
- We find the original signal from its sample by sinc interpolation:

$$x(t) = \sum_{n=-\infty}^{\infty} x(nT_s) \operatorname{sinc}\left(\frac{t - nT_s}{T_s}\right)$$

Computing the FT (1)

Question

How does a spectrum analyzer work?

- We have seen that a band-limited signal can be reconstructed from its samples (provided sampling rate is high enough).
- If we can find the original signal from its samples, then we
- We find the original signal from its sample by sinc

$$x(t) = \sum_{n=-\infty}^{\infty} x(nT_s) \operatorname{sinc}\left(\frac{t - nT_s}{T_s}\right)$$

Computing the FT (1)

Question

How does a spectrum analyzer work?

- We have seen that a band-limited signal can be reconstructed from its samples (provided sampling rate is high enough).
- If we can find the original signal from its samples, then we should also be able to find the FT of the signal from its samples.
- We find the original signal from its sample by since

$$x(t) = \sum_{n=-\infty}^{\infty} x(nT_s) \operatorname{sinc}\left(\frac{t - nT_s}{T_s}\right)$$

Computing the FT (1)

Question

How does a spectrum analyzer work?

- We have seen that a band-limited signal can be reconstructed from its samples (provided sampling rate is high enough).
- If we can find the original signal from its samples, then we should also be able to find the FT of the signal from its samples.
- We find the original signal from its sample by sinc interpolation:

$$x(t) = \sum_{n=-\infty}^{\infty} x(nT_s) \operatorname{sinc}\left(\frac{t - nT_s}{T_s}\right)$$

Computing the FT (2)

$$\operatorname{sinc}\left(rac{t}{T_{\mathcal{S}}}
ight) \stackrel{\mathcal{F}}{\longleftrightarrow} T_{\mathcal{S}}\operatorname{rect}\left(rac{T_{\mathcal{S}}\omega}{2\pi}
ight)$$

by the time-shift property of the FT:

$$\operatorname{sinc}\left(\frac{t-\mathsf{nT_s}}{T_s}\right) \overset{\mathcal{F}}{\longleftrightarrow} e^{-j\omega\mathsf{nT_s}} T_s \operatorname{rect}\left(\frac{T_s\omega}{2\pi}\right)$$

Thus by linearity of the FT:

$$\sum_{n=-\infty}^{\infty} x(nT_s) \operatorname{sinc}\left(\frac{t-nT_s}{T_s}\right) \quad \stackrel{\mathcal{F}}{\longleftrightarrow} \quad \left[\sum_{n=-\infty}^{\infty} x(nT_s) e^{-j\omega nT_s} T_s \operatorname{rect}\left(\frac{T_s\omega}{2\pi}\right)\right]$$

DTFT

Definition

The **discrete-time Fourier transform** (**DTFT**) of the sequence $x[n] = x(nT_s), n = 0, \pm 1, \pm 2, ...$ is defined as follows:

$$X(\Omega) = \sum_{n=-\infty}^{\infty} x[n]e^{-j\Omega n}$$
, (analysis equation).

The inverse DTFT is

$$x[n] = \frac{1}{2\pi} \int_{2\pi} X(\Omega) e^{i\Omega n} d\Omega$$
, (synthesis equation).

DTFT and FT

$$X(\Omega) = \sum_{n=-\infty}^{\infty} x[n]e^{-j\Omega n}$$

$$X(\omega) = \sum_{n=-\infty}^{\infty} x(nT_s)e^{-j\omega nT_s}T_s \operatorname{rect}\left(\frac{T_s\omega}{2\pi}\right)$$

Then the FT of the continuous-time signal x(t) is related to the DTFT of the discrete-time signal x[n] as follows:

$$X(\omega) = \begin{cases} T_s |X(\Omega)|_{\Omega = \omega T_s}, & |\omega| < \omega_s/2 \\ 0, & \text{otherwise.} \end{cases}$$

DTFT and FT

$$X(\Omega) = \sum_{n=-\infty}^{\infty} x[n]e^{-j\Omega n}$$

$$X(\omega) = \sum_{n=-\infty}^{\infty} x(nT_s)e^{-j\omega nT_s}T_s \operatorname{rect}\left(\frac{T_s\omega}{2\pi}\right)$$

Then the FT of the continuous-time signal x(t) is related to the DTFT of the discrete-time signal x[n] as follows:

$$X(\omega) = \begin{cases} T_s X(\Omega)|_{\Omega = \omega T_s}, & |\omega| < \omega_s/2 \\ 0, & \text{otherwise.} \end{cases}$$

Periodic DTFT

Question

Show the fact that the DTFT is periodic with period 2π .

Proof

$$X(\Omega + 2\pi) = \sum_{n = -\infty}^{\infty} x[n]e^{-j(\Omega + 2\pi)n}$$

$$= \sum_{n = -\infty}^{\infty} x[n]e^{-j\Omega n}e^{j2\pi n}$$

$$= \sum_{n = -\infty}^{\infty} x[n]e^{-j\Omega n} = X(\Omega).$$

This fact is closely related to the fact that $X_s(\omega)$ is periodic.

Proof

$$X(\Omega + 2\pi) = \sum_{n = -\infty}^{\infty} x[n]e^{-j(\Omega + 2\pi)n}$$

$$= \sum_{n = -\infty}^{\infty} x[n]e^{-j\Omega n}e^{j2\pi n}$$

$$= \sum_{n = -\infty}^{\infty} x[n]e^{-j\Omega n} = X(\Omega).$$

This fact is closely related to the fact that $X_s(\omega)$ is periodic.

DTFT and FT pairs

DTFT pair:

$$X(\Omega) = \sum_{n=-\infty}^{\infty} x[n]e^{-j\Omega n}, \quad x[n] = \frac{1}{2\pi} \int_{2\pi} X(\Omega)e^{j\Omega n} d\Omega$$

FT pair

$$X(\omega) = \int_{-\infty}^{\infty} x(t)e^{-j\omega t} dt, \quad x(t) = \frac{1}{2\pi} \int_{-\infty}^{\infty} X(\omega)e^{j\omega t} d\omega$$

$$x[n] = x(nT_s), \quad \Omega = \omega T_s$$

Question

- A continuous-time signal x(t) is first filtered with an anti-alias filter so that it is bandlimited to $\omega_{\max} = \omega_s/2$, where ω_s is the sampling frequency of the A/D chip in the spectrum analyzer.
- Then the signal is sampled at the rate ω_s , and the discrete-time sequence $x[n] = x(nT_s)$ is stored in digital memory for n = 0, ..., N-1, for some finite number of samples N.
- Then the DTFT formula for $X(\Omega)$ above is computed digitally, with the following modifications.

Question

- A continuous-time signal x(t) is first filtered with an anti-alias filter so that it is bandlimited to $\omega_{max} = \omega_s/2$, where ω_s is the sampling frequency of the A/D chip in the spectrum analyzer.
- Then the signal is sampled at the rate ω_s , and the
- Then the DTFT formula for $X(\Omega)$ above is computed digitally,

Question

- A continuous-time signal x(t) is first filtered with an anti-alias filter so that it is bandlimited to $\omega_{\max} = \omega_s/2$, where ω_s is the sampling frequency of the A/D chip in the spectrum analyzer.
- Then the signal is sampled at the rate ω_s , and the discrete-time sequence $x[n] = x(nT_s)$ is stored in digital memory for $n = 0, \dots, N-1$, for some finite number of samples N.
- Then the DTFT formula for $X(\Omega)$ above is computed digitally, with the following modifications.

Question

- A continuous-time signal x(t) is first filtered with an anti-alias filter so that it is bandlimited to $\omega_{\rm max} = \omega_{\rm S}/2$, where $\omega_{\rm S}$ is the sampling frequency of the A/D chip in the spectrum analyzer.
- Then the signal is sampled at the rate ω_s , and the discrete-time sequence $x[n] = x(nT_s)$ is stored in digital memory for $n = 0, \dots, N - 1$, for some finite number of samples N.
- Then the DTFT formula for $X(\Omega)$ above is computed digitally, with the following modifications.

DTFT modifications

DTFT:
$$X(\Omega) = \sum_{n=-\infty}^{\infty} x[n]e^{-j\Omega n}$$

- The infinite sum is replaced by a sum from 0 to N-1, since only a finite number of signal samples can be stored.
- 2 The DTFT $X(\Omega)$ is never computed for all values of Ω , since a computer can only store a finite set of values. Since $X(\Omega)$ is periodic with period 2π , typically only the values

$$\Omega = k \frac{2\pi}{N}, \quad k = 0, \dots, N - 1$$

are computed

DTFT modifications

DTFT:
$$X(\Omega) = \sum_{n=-\infty}^{\infty} x[n]e^{-j\Omega n}$$

- The infinite sum is replaced by a sum from 0 to N-1, since only a finite number of signal samples can be stored.
- 2 The DTFT $X(\Omega)$ is never computed for all values of Ω , since a computer can only store a finite set of values. Since $X(\Omega)$ is periodic with period 2π , typically only the values

$$\Omega = k \frac{2\pi}{N}, \quad k = 0, \dots, N-1$$

are computed.

DFT

For this choice we write

$$c[k] = X(\Omega)|_{\Omega=k2\pi/N} = \sum_{n=0}^{N-1} x[n]e^{-j2\pi kn/N},$$

which is known as the **discrete Fourier transform** or **DFT**, since both time and frequency are discrete indices.

FFT

$$X[k] = \sum_{n=0}^{N-1} x[n]e^{-j2\pi kn/N}, \quad k = 0, ..., N-1$$
$$x[n] = \frac{1}{N} \sum_{k=0}^{N-1} X_k e^{j2\pi kn/N}, \quad n = 0, ..., N-1$$

- In software, the DFT is evaluated using the fast Fourier
- The FFT and DFT are the same mathematically; the FFT is

FFT

DFT pair:

$$X[k] = \sum_{n=0}^{N-1} x[n]e^{-j2\pi kn/N}, \quad k = 0, \dots, N-1$$
$$x[n] = \frac{1}{N} \sum_{k=0}^{N-1} X_k e^{j2\pi kn/N}, \quad n = 0, \dots, N-1$$

- In software, the DFT is evaluated using the **fast Fourier transform** or **FFT**, which is the **fft** routine in MATLAB.
- The FFT and DFT are the same mathematically; the FFT is just a fast algorithm for computing the DFT coefficients.

FFT

DFT pair:

$$X[k] = \sum_{n=0}^{N-1} x[n] e^{-j2\pi kn/N}, \quad k = 0, \dots, N-1$$
$$x[n] = \frac{1}{N} \sum_{k=0}^{N-1} X_k e^{j2\pi kn/N}, \quad n = 0, \dots, N-1$$

- In software, the DFT is evaluated using the **fast Fourier transform** or **FFT**, which is the **fft** routine in MATLAB.
- The FFT and DFT are the same mathematically; the FFT is just a fast algorithm for computing the DFT coefficients.

7. Sampling Summary

Outline

1 7. Sampling

- Introduction
- FT of impulse-train sampled signals (7.1)
- Sampling Theorem
- Aliasing (7.3)
- Reconstruction via interpolation (7.2)
- Realistic non-impulse sampling (7.1.2)
- Discrete-time Fourier transform (DTFT) (5.1)
- Summary

7. Sampling Summary

Summary

- DSP, A/D conversion
- impulse train sampling, sampling theorem
- Nyquist sampling rate
- lowpass reconstruction
- sinc interpolation
- linear interpolation (first order hold)
- nearest neighbor interpolation (zero order hold)
- non-impulse sampling
- FT vs DTFT vs DFT vs FFT