# **Alarm Clock**

June 28th, 2016



This is a graded exercise. For further information regarding the evaluation criteria read the document gradedExercises.pdf carefully. The submission deadline is 2016-07-10 23:59 (CEST). The interviews will be held on Tuesday after submission, on 2016-07-12.

Your solution has to be committed to your team folder in the SVN repository by the specified time. We expect the following directories/files to be present in you root directory at https://svn.ti5.tu-harburg.de/courses/ses/2016/teamX/ where X is your team's number.

- ses (contains your current ses library source/header files, including updated scheduler)
- task\_7\_3 (containing source/header files for task 7.3 (alarmClock))
- task\_7\_5 (containing the source/header files for task 7.5 (bootloader))
- fsm. <ext> (a file containing a state chart of your alarm clock's state machine (see Task 7.2))
- readme.txt (a file containing <Name1> <Matr. number 1>, <Name2> <Matr. number 2>

Ignoring this directory structure will lead to point deductions. Make sure that all header and source files necessary to build and link your solution are present (you do NOT need to check in the libraries!).



Keep the structure of those directories flat, i.e., do not use subdirectories there!

#### Task 7.1 : Creating a Clock

In this exercise you have to implement a simplistic alarm clock.

The first task is to create a 24-hour Clock with a precision of 1 millisecond. For this task you have to extend your scheduler (ses\_scheduler.c, ses\_scheduler.h). Since the scheduler already uses a timer callback with a precision of 1 millisecond you can extend its ISR. Define a private 32-bit variable for storing the current time and increment it every millisecond.



For orientation, calculate the time until the timer overflows. However, you do not have to handle this event.

For reading or writing this value you have to add these two functions:

```
typedef uint32_t systemTime_t;
systemTime_t scheduler_getTime();
void scheduler_setTime(systemTime_t time);
```

For easier handling in your alarm clock, you should write some wrapper functions calculating the time in a more human-friendly way, using the structure time\_t:

```
struct time_t {
    uint8_t hour;
    uint8_t minute;
    uint8_t second;
    uint16_t milli;
};
```

Summer Term 2016

Prof. Dr. V. Turau | Institute of Telematics (E-17)

#### Task 7.2: Finite-State Machine Model

The main task of this exercise sheet is the implementation of a simple but functional alarm clock. Before implementing the code, draw a **UML statechart** matching the description in the following paragraph. This drawing is part of the graded exercise and has to be present as digital file in your submission directory (.png, .pdf, .jpeg; you may also take a photo of a hand-drawn image as long as we can clearly read everything).

The following paragraph gives a description of the alarm clock in natural language:

When the microcontroller is powered up, the actual time is not known. The user has to set the time manually using the buttons. At this stage, the display shows an uninitialized clock using the format HH:MM. The second display line may show a request for the user to set time. First, the hour has to be set by repeatedly pressing the *Rotary Button*. After pressing the *Joystick Button*, the minutes have to be set via the *Rotary Button*. Pressing the *Joystick Button* again updates the system time and starts the clock. In this normal operation mode the time is shown in the format HH:MM:SS. In this state, the user can press the *Rotary Button* to enable the alarm or to disable the alarm. If the *Joystick Button* is pressed, the alarm time can be set. In this mode line 1 shows the alarm time instead of the current system time using the format HH:MM. If the alarm is enabled and the actual time matches the alarm time, the red LED shall toggle with 4 Hz. The alarm shall stop, if any button is pressed or 5 seconds have passed. The alarm must only be triggered if the clock is in its normal operating mode, i.e., not if the alarm time is being modified.

Additionally the LEDs are used for the following functionality:

- The green LED blinks synchronously with the counter of the seconds.
- The yellow LED is on, when the alarm is enabled.
- The red LED is flashing with 4 Hz during alarm.



The next chapter provides some instructions on how the more detailed aspects of the state machine shall be handled. You may want to read it first.

#### Task 7.3: Implementing the Alarm Clock

Implement the described alarm clock using the state machine designed in Task 7.3! Implement the FSM as a wholly **event-based** (not synchronous) one!

The Finite State Machine shall be implemented with pointers to functions. A state is represented by a pointer to an event handler (i.e., a function), which takes a pointer to the FSM itself and the event that occurred.

Summer Term 2016

Prof. Dr. V. Turau | Institute of Telematics (E-17)

```
/** typedef for state event handler functions */
typedef fsmReturnStatus (*State)(Fsm *, const Event*);
```

The return value is used by the FSM "core" to decide about entry and exit actions, but more on that later. We define the struct Fsm with additional attributes besides (state). The member isAlarmEnabled can be used to store the actual alarm state (on/off) and timeSet to store the alarm-time or setup-time

before normal clock operation.

The Event struct contains possible events that may trigger state changes. Using signal, the type of the event can be determined by the event handler (e.g., *Joystick Button* pressed).

```
typedef struct event_s {
   uint8_t signal; //< identifies the type of event
} Event;</pre>
```

It is a probably a good idea to list the possible events within an enum.

For this exercise, we use the functions presented in the lecture, but extend fsm\_dispatch to provide entry and exit actions as well, because these are useful for the alarm clock. Here, you can also see how the return status of the event handler is used to dispatch entry and exit actions.

```
/* dispatches events to state machine, called in application*/
inline static void fsm_dispatch(Fsm* fsm, const Event* event) {
    static Event entryEvent = {.signal = ENTRY};
    static Event exitEvent = {.signal = EXIT};
    State s = fsm->state;
    fsmReturnStatus r = fsm->state(fsm, event);
    if (r==RET_TRANSITION) {
                                      //< call exit action of last state
        s(fsm, &exitEvent);
        fsm->state(fsm, &entryEvent); //< call entry action of new state</pre>
    }
}
/* sets and calls initial state of state machine */
inline static void fsm_init(Fsm* fsm, State init) {
    //... other initialization
    Event entryEvent = {.signal = ENTRY};
    fsm->state = init;
    fsm->state(fsm, &entryEvent);
}
```

These functions can be used to control the state machine, e.g., to dispatch an event when a button was pressed. The following code snippet illustrates the intended usage:

```
#define TRANSITION(newState) (fsm->state = newState, RET_TRANSITION)

static void joystickPressedDispatch(void * param) {
    Event e = {.signal = JOYSTICK_PRESSED};
    fsm_dispatch(&theFsm, &e);
}
```

**Summer Term 2016** 

Prof. Dr. V. Turau | Institute of Telematics (E-17)

```
fsmReturnStatus running(Fsm * fsm, const Event* event) {
    switch(event->signal) {
        //... handling of other events
        case JOYSTICK_PRESSED:
            return TRANSITION(setHourAlarm);
        default:
            return RET_IGNORED;
    }
}
```

The shown TRANSITION macro can be used exclusively to change states to make sure that state changes are always the last operations within an event handler.



Be aware that operations regarding the state machine need a "run-to-completion" semantic, i.e., must not be interrupted by another operation on the FSM. One way to accomplish this, is to run the FSM completely within task context. Another would be to use atomic blocks, however, considering that the alarm clock involves several LCD-related operations, this approach should be discarded.

With the given information, it should be possible to implement the alarm clock in a very concise and elegant way. Below you will find some additional information (and, of course, the challenge task).

The shown code snippets can easily be extended to a more generic event processor, which could be used to implement arbitrary state machines. It is inspired heavily by the material presented in "Practical UML Statecharts - Event-Driven Programming for Embedded Systems" by Miro Samek. If you are interested, you can find much more information there! Note also that usually such an event processor would use an event-queue to hold incoming events. With our recommendation to execute the FSM in task context, we instead use the scheduler to queue the events for our alarm clock which is probably not the most clean, but – within the scope of the exercise – a very practical and functional solution.

#### Task 7.4 : Rotary Encoder

To improve the usability of setting the time, the rotary encoder shall be used instead of the push button. The rotary encoder has two inputs A (connected to PORTB 5) and B (PORTG 2), which can be *high* or *low* (open/closed switch to GND=C). The encoding is given in the figure below, also showing the mechanical detent positions. Implement the functionality to detect a left or right turn of the incremental rotary encoder within a new library module ses\_rotary. Use callbacks to increment or decrement the current hour or minute. Consider the given interface.

```
typedef void (*pTypeRotaryCallback());
void rotary_init();
void rotary_setClockwiseCallback(pTypeRotaryCallback);
void rotary_setCounterClockwiseCallback(pTypeRotaryCallback);
```




To get better understanding of the rotary button, plot the samples of both inputs on the LCD. You may use the given function below, which plots the current samples once the rotary is turned until the display is full. You need the updated LCD library from StudIP! Do not forget to initialize the inputs!



The rotary requires careful debouncing. Use a sampling approach similar to the button debouncing. Yet, occasionally skipping dents at fast turning is acceptable.

**Summer Term 2016** 

### Prof. Dr. V. Turau | Institute of Telematics (E-17)

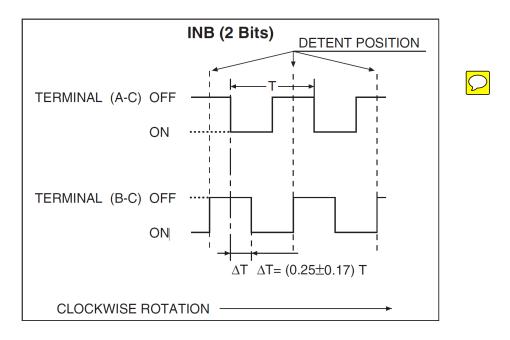

```
/*
  * Callback-procedure to plot the samples of the rotary pins on the LCD after first change
  */
void check_rotary() {
    static uint8_t p = 0;
    static bool sampling = false;

    bool a = PIN_REGISTER(A_ROTARY_PORT) & (1 << A_ROTARY_PIN);
    bool b = PIN_REGISTER(B_ROTARY_PORT) & (1 << B_ROTARY_PIN);

    if (a != b)
        sampling = true;

    if (sampling && p < 122) {
        lcd_setPixel((a) ? 0 : 1, p, true );
        lcd_setPixel((b) ? 4 : 5, p, true );
        p++;
    }
}</pre>
```

#### Task 7.5 : UART Bootloader (Challenge)

Until now, you have been using the Olimex programmer to flash the microcontroller. In this task you have to use the UART interface and a bootloader program to do the same. Once the bootloader is flashed into the microcontroller, it can be used to load new user code into the microcontroller via UART with a PC running avrdude. To be able to activate the bootloader only on demand, the joystick button shall be used (keep the joystick button pressed during reset to enter bootloader mode).

To communicate with avrdude, you have to implement the protocols for given in the AVR109:Self Programming application note (also available on StudIP). The bootloader must implement the AVRProg commands with ID = (T, A, g, B, e, b, t, P, L, E, S, s, V, a) given in the application

**Summer Term 2016** 

Prof. Dr. V. Turau | Institute of Telematics (E-17)

note. All remaining commands and invalid commands return a question mark. Use 'Release' mode in Eclipse for building the project. Set the following fuse bits (AVRDude->Fuses):

- Boot Reset vector Enabled
- Boot Flash size=4096 words



Use the UART library provided with the Exercise 4 (initialise UART with baudrate of 57600). A joystick button press at startup shall be displayed by the red LED. The bootloader program is placed inside the boot section of the flash memory by **Settings-> AVR C Linker -> General -> Other Arguments** to -Wl,-section-start=.text=0x1E000.

To flash a new project to the microcontroller with the new bootloader, change the programmer settings to Atmel Butterfly Development Board, serial port of the FTDI cable, and baudrate of 57600. Reset the microcontroller and press the joystick button to start flashing.



Make sure that interrupts are disabled in the bootloader.



<avr/boot.h>,<avr/pgmspace.h> contains the required functions for the bootloader.