
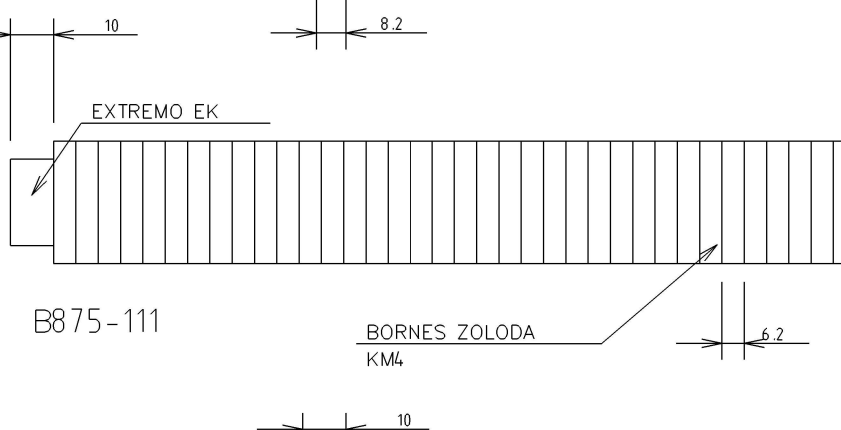
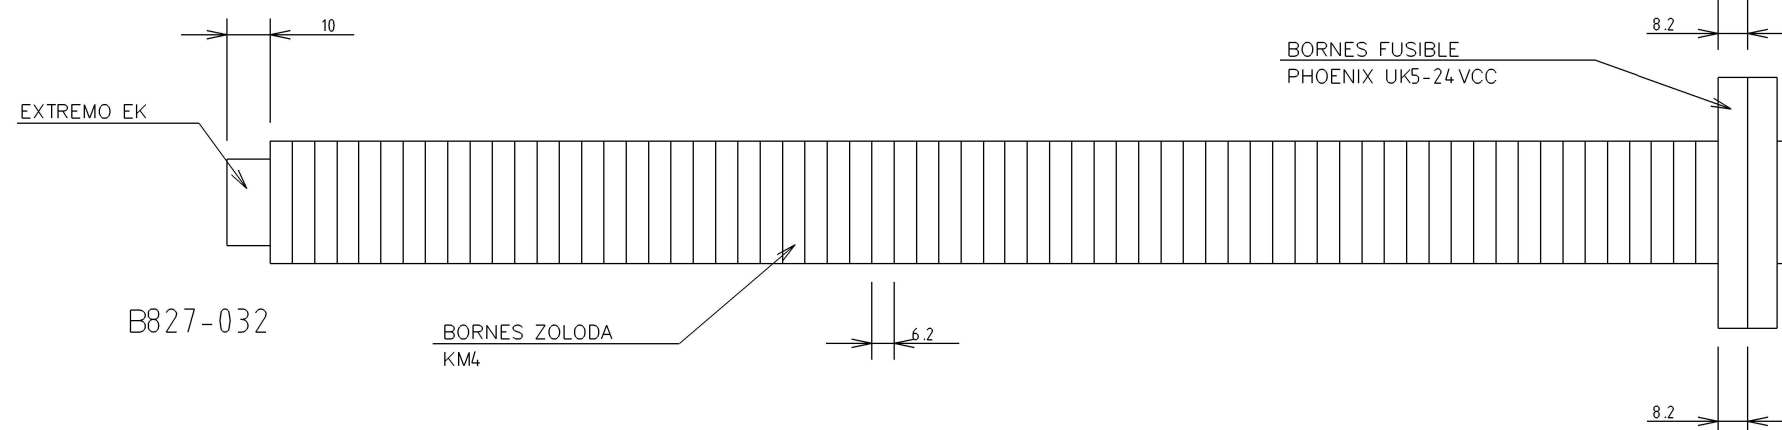
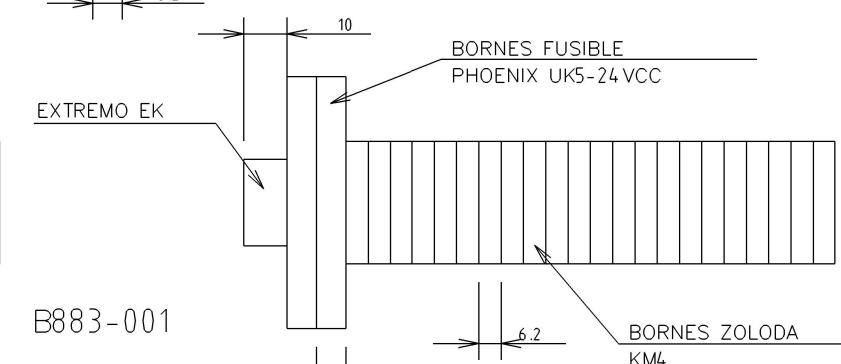
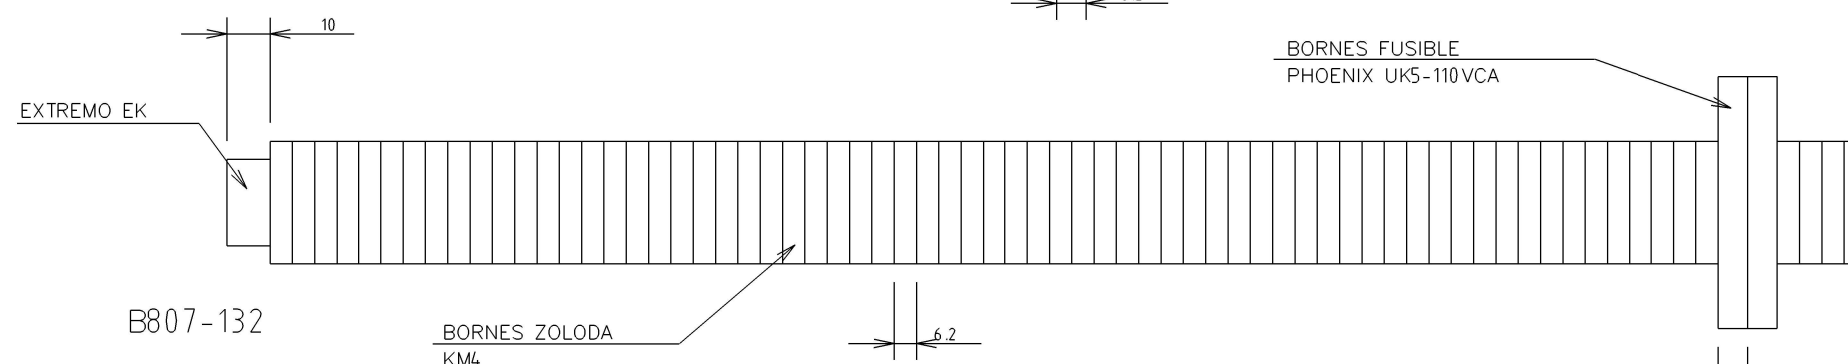
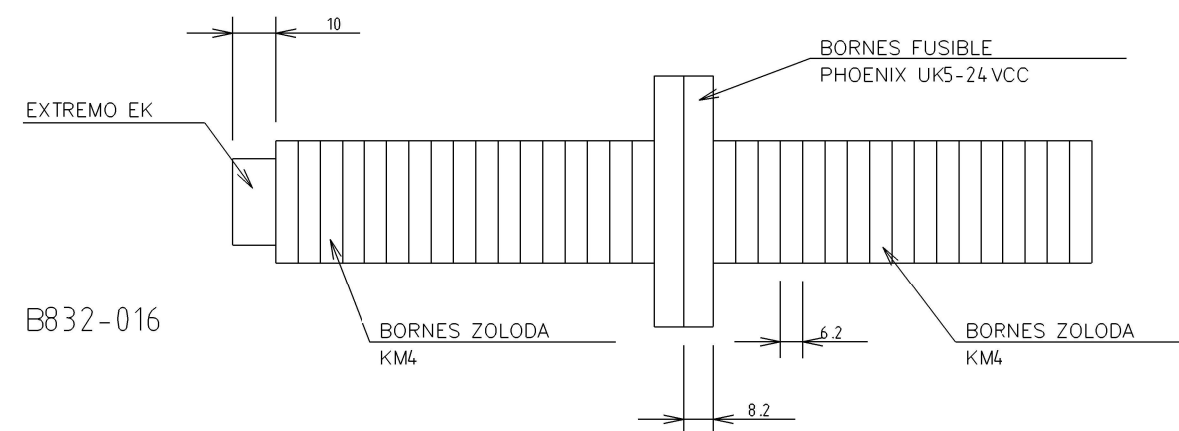


NOTAS:


1- ENTRE EL EXTREMO EK Y EL PRIMER BORNE ,INSTALAR EL SOPORTE VAH,PORTADOR DE LA PLACA DE ACRILICO DE IDENTIFICACION DE CADA BLOQUE DE BORNES.

2244-E-CT-550001

PAG.:09

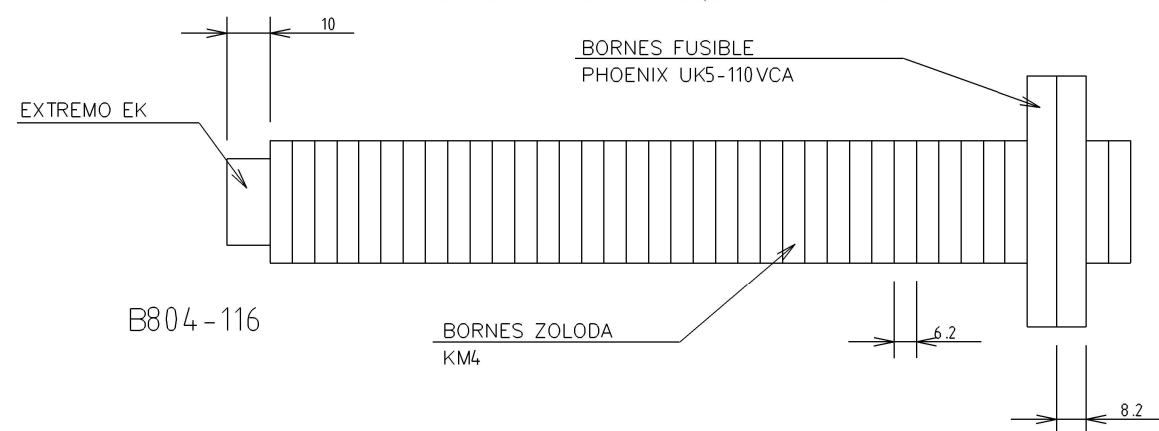

MODULO	CANTIDAD Y TIPO DE BORNES	
B804-116	36	BORNES ZOLODA KM4 + 2 BORNES PHOENIX UK5-110VCA
B807-132	69	BORNES ZOLODA KM4 + 2 BORNES PHOENIX UK5-110VCA
B827-032	67	BORNES ZOLODA KM4 + 2 BORNES PHOENIX UK5-24VCC
B832-016	34	BORNES ZOLODA KM4 + 2 BORNES PHOENIX UK5-24VCC
B872-200	14	BORNES ZOLODA KM4
B875-111	36	BORNES ZOLODA KM4
B883-001	22	BORNES ZOLODA KM4 + 2 BORNES PHOENIX UK5-24VCC

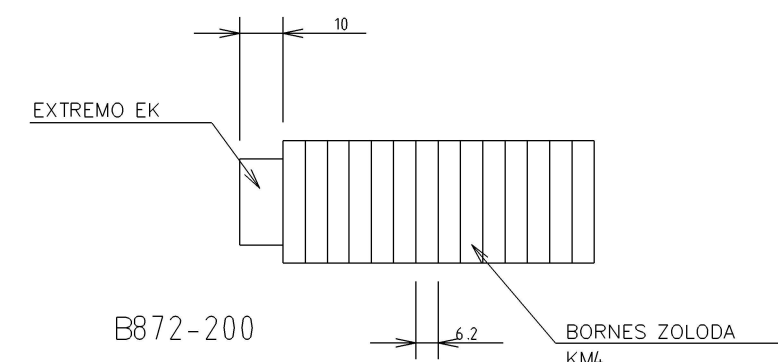

CONFORMACION DE CADA BLOQUE DE BORNES