CONTENTS

S.NO.	TITLE	PAGE NO.
1.	Syllabus for NEC-352 Lab.	3
2.	Study and Evaluation Scheme	4
3.	List of Experiments	5
4.	Index	6
5.	Experiment No. 1	7
6.	Experiment No. 2.	13
7.	Experiment No. 3	18
8.	Experiment No. 4.	23
9.	Experiment No. 5	28
10.	Experiment No. 6.	33
11.	Experiment No. 7	39

SYLLABUS

NEC-352 ELECTRONIC WORKSHOP & PCB LAB

Objective: To create interest in Hardware Technology.

- 1. Study of CRO, DMM & Function Generator
- 2. Identification of Active & Passive Components
- 3. Winding shop: Step down transformer winding of less than 5VA.
- 4. Soldering shop: Fabrication of DC regulated power supply
- 5. PCB Lab: (a) Artwork & printing of a simple PCB. (b) Etching & drilling of PCB.
- 6. Wiring & fitting shop: Fitting of power supply along with a meter in cabinet.
- 7. Testing of regulated power supply fabricated.

STUDY AND EVALUATION SCHEME

SESSIONAL EVALUATION:-

CLASS TEST : 10 MARKS

TEACHER'S ASSESMENT: 10 MARKS

EXTERNAL EXAM : 30 MARKS

TOTAL : 50 MARKS

LIST OF EXPERIMENTS

- 1. Study of CRO, DMM & Function Generator
- 2. Identification of Active & Passive Components
- 3. Winding shop: Step down transformer winding of less than 5VA.
- 4. Soldering shop: Fabrication of DC regulated power supply
- 5. PCB Lab: (a) Artwork & printing of a simple PCB. (b) Etching & drilling of PCB.
- 6. Wiring & fitting shop: Fitting of power supply along with a meter in cabinet.
- 7. Testing of regulated power supply fabricated.

INDEX

S.NO.	NAME OF EXPERIMENT	SIGNATURE OF FACULTY/ DATE OF EVALUATION	GRADE

6 | DEPARTMENT OF ELECTRONICS & COMMUNICATION ENGINEERING, DRONACHARYA GROUP OF INSTITUTIONS, GR. NOIDA.

EXPERIMENT NO. 01 & 02

1. AIM: To Study of lab equipments and components: CRO, Multimeter, Function Generator, Power supply- Active, and Passive Components & Bread Board.

2. APPARATUS REQUIRED:

S.No.	Apparatus / Software Used	Specification	Quantity
1.	CRO		1
2.	Function Generator		1
3.	Multimeter		1
4.	Resistance & Capacitance		1
5.	Power supply & Bread Board		1

3. THEORY:

CRO (Cathode Ray Oscilloscope)


The oscilloscope is one of the most important electronic instruments available for making circuit measurements. It displays a curve plot of time-varying voltage on the oscilloscope screen. The oscilloscope provided with Multisim Electronics Workbench is a dual trace oscilloscope that looks and acts like a real oscilloscope. A dual trace oscilloscope allows the user to display and compare two time-varying voltages at one time.

The controls on the oscilloscope are as follows:

- 1. The TIME BASE control adjusts the time scale on the horizontal axis in time per division when Y/T is selected. When B/A is selected, the horizontal axis no longer represents time. The horizontal axis now represents the voltage on the channel A input and vertical axis represents the voltage on channel B input. When A/B is selected, the horizontal axis represents the voltage on the channel B input and the vertical axis represents the voltage on the channel A input. The X_POS control determines the horizontal position where the curve plot begins.
- 2. The CHANNEL A control adjusts the volts per division on the vertical axis for the channel A curve plot. The Y-POS control determines the vertical position of the channel A curve plot

relative to the horizontal axis. Selecting AC places a capacitance between the channel A vertical input and the circuit testing point. Selecting "0" connects channel A vertical input to ground.

- 3. The CHANNEL B control adjusts the volts per division of the vertical axis for the channel B curve plot. The Y-POS determines the vertical position of the channel B curve plot relative to the horizontal axis. Selecting AC places a capacitance between the channel B vertical input and the circuit test point. Selecting "0" connects the channel B vertical input to ground.
- 4. The trigger settings control the conditions under which a curve plot is triggered (begins to display). Triggering can be internal (based on one of the input signals) or external (based on a signal applied to the oscilloscope external trigger input). With internal triggering AUTO, A, or B. If A is selected, the curve plot will be triggered by channel A input signal. If |B is selected, the curve plot will be triggered by channel B input signal. If you expect a flat input waveshape or you want the curve plot displayed as soon as possible, select AUTO. The display can be set to start on positive or negative slope of the input by selecting the appropriate EDGE selection. The trigger LEVEL control determines the voltage level of the input signal waveform, in divisions on the vertical axis, before the waveform will begin to display.

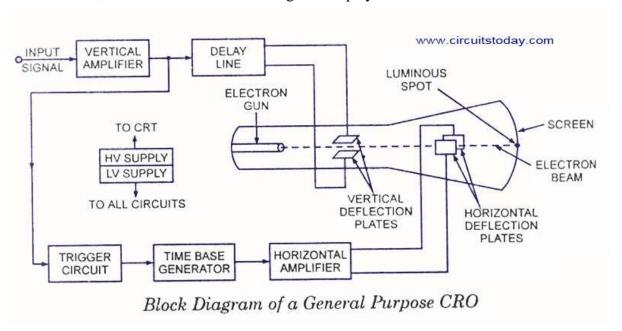

Function Generator

The function generator is a voltage source that supplies different time-varying voltage functions. The Multisim Electronics Workbench can supply sine wave, square wave, and

8 | DEPARTMENT OF ELECTRONICS & COMMUNICATION ENGINEERING, DRONACHARYA GROUP OF INSTITUTIONS, GR. NOIDA.

triangular wave voltage functions. The wave shape, frequency, amplitude, duty cycle, and dc offset can be easily changed. It has three voltage output terminals. Connect the COM terminal to ground symbol. The +ve terminal provides output voltage that is positive with respect to the COM terminal and the –ve terminal proves an output voltage that is negative with respect to the COM terminal.

The controls on the function generator are as follows:

- 1. You can select a wave shape by clicking the appropriate wave shape on the top of the function generator.
- 2. The frequency control allows you adjust the frequency of the output voltage up to 999 MHz. Click up or down arrow to adjust the frequency, or click the frequency box and type the desired frequency.
- 3. The AMPLITUDE control allows you to adjust the amplitude of the output voltage measured from the reference level (common) to **peak** level. The peak to peak value is twice the amplitude setting.
- 4. The OFFSET control adjusts the dc level of the voltage curve generated by the function generator. An offset of 0 positions the curve plot along the x-axis with an equal positive and negative voltage setting. A positive offset raises the curve plot above the x-axis and a negative offset lowers the curve plot below the x-axis.



Multimeter

A multimeter or a multitester, also known as a VOM (Volt-Ohm meter), is an electronic measuring instrument that combines several measurement functions in one unit. A typical multimeter may include features such as the ability to measure voltage, current and resistance. Multimeters may use analog or digital circuits—analog multimeters (AMM) and digital multimeters (often abbreviated DMM or DVOM.) Analog instruments are usually based on a 9 | DEPARTMENT OF ELECTRONICS & COMMUNICATION ENGINEERING, DRONACHARYA GROUP OF INSTITUTIONS, GR. NOIDA.

microammeter whose pointer moves over a scale calibrated for all the different measurements that can be made; digital instruments usually display digits, but may display a bar of a length proportional to the quantity being measured. A multimeter can be a hand-held device useful for basic fault finding and field service work or a bench instrument which can measure to a very high degree of accuracy. They can be used to troubleshoot electrical problems in a wide array of industrial and household devices such as electronic equipment, motor controls, domestic appliances, power supplies, and wiring systems.



Power Supply

A **power supply** is a device that supplies electric power to one or more electric loads. The term is most commonly applied to devices that convert one form of electrical energy to another, though it may also refer to devices that convert another form of energy (mechanical, chemical, solar) to electrical energy. A regulated power supply is one that controls the output voltage or current to a specific value; the controlled value is held nearly constant despite variations in either load current or the voltage supplied by the power supply's energy source.

Every power supply must obtain the energy it supplies to its load, as well as any energy it consumes while performing that task, from an energy source

Active Elements & Passive Elements


"The elements within a circuit will either control the flow of electric energy or respond to it. Those elements which control the flow of electric energy are known as active elements and those which dissipate or store the electric energy are passive elements."

"The three linear passive elements are the Resistor, the Capacitor and the Inductor. Examples of non-linear passive devices would be diodes, switches and spark gaps. Examples of active devices are Transistors, Triacs, Varistors, Vacuum Tubes, relays, solenoids and piezo electric devices."



Bread Board

A breadboard (protoboard) is a construction base for prototyping of electronics. The term is commonly used to refer to solderless breadboard (plugboard). Because the solderless breadboard does not require soldering, it is reusable. This makes it easy to use for creating temporary prototypes and experimenting with circuit design.

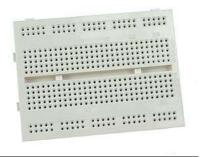

4. RESULTS AND DISCUSSION:

Study of lab equipments- CRO, Multimeter, Function Generator, Power supply- Active, and Passive Components & Bread Board has been studied successfully.

5. PRE EXPERIMENT Q.B:

Q1. What is CRO?

Ans. The oscilloscope is one of the most important electronic instruments available for making circuit measurements. It displays a curve plot of time-varying voltage on the oscilloscope screen.

Q2. What do you mean by active element and passive element?

Ans. "The elements within a circuit will either control the flow of electric energy or respond to it. Those elements which control the flow of electric energy are known as active elements and those which dissipate or store the electric energy are passive elements."

6. POST EXPERIMENT Q.B:

Q1. What is multimeter?

Ans. A **multimeter** also known as a **VOM** (Volt-Ohm meter), is an electronic measuring instrument that combines several measurement functions in one unit. A typical multimeter may include features such as the ability to measure voltage, current and resistance.

Q2. What is function generator?

Ans. The function generator is a voltage source that supplies different time-varying voltage functions. The Multisim Electronics Workbench can supply sine wave, square wave, and triangular wave voltage functions. The wave shape, frequency, amplitude, duty cycle, and dc offset can be easily changed. It has three voltage output terminals.

EXPERIMENT NO. 03

AIM:- Preparation of layout and artwork layout planning.

LAYOUT PLANNING:-

- **1.** Depending on the accuracy required artwork should be produced at a ratio of 1:1 or 4:1.
- **2.** Use of grid system in layout and artwork design is a commonly accepted practice. Use of grid gives more convenience in placement of components and conductors.
- **3.** Selection of Board type-single sided.
- **4.** MATERIAS AND AIDS:
 - (a) Simple approach and sketching of components.
 - (b) Layout sketching with puppets.
- **5.** To prepare each and every PCB layout as viewed from component side.
- **6.** Unless and unstill absolutely cleared circuit diagram is available. Startingly the designing of layout is not possible.
- **7.** Complete the layout work and start with interconnection.
- **8.** Develop the layout in direction of single flow.
- **9.** Among the components the longer one is placed first then the space in between is filled with smaller one.
- **10.** Design and interconnection can be done by pencil line.

GENERAL ARTWORK RULE:-

- **1.** In PCB artwork higher conductor density is an established practice.
- **2.** To run the conductors on one side in given direction.
- **3.** Where conductors have to be placed in other direction preference should be given to 48 direction or 30/60 direction.
- **4.** It is a good rule, to begin and end the conductors in solder pad.
- **5.** Where one or several conductors have to pass between pads or other conducting carrier, spacing has to be equally distributed.

COMPONENTS POLARITY IDENTIFICATION:-

It is very essential when artwork is completed, a through check is carried out to prepare and to prove its exact correspondence with circuit diagram.

DOCUMENTATION:-

- **1.** Circuit diagram.
- **2.** Legend.

13 | DEPARTMENT OF ELECTRONICS & COMMUNICATION ENGINEERING, DRONACHARYA GROUP OF INSTITUTIONS, GR. NOIDA.

- 3. Artwork
- 4. Drill Problem.
- **5.** Soldier masks.
- **6.** Green masks.
- 7. Component layout.
- 8. Component list.

POST-QUESTIONS:-

- What are the printers used for Artwork?
- What is the ratio required for Artwork design?

OBIECT:- Preparation of Negative from the film.

APPARATUS REQUIRED:-

- **1.** A developer (Sodium Carbonate).
- **2.** B developer (Butyl cell solution).
- 3. Fixer.
- 4. Motor.
- **5.** Photo-cure machine.

PROCESS:-

Draw the circuit on transparency i.e. Artwork with error proof.

EXPOSURE TIME:-

Expose the lith film together with the transparent sheet for 5sec.

DEVELOPMENT:-

Use a development tray which is large enough to enable film handling with care. Put sufficient developer in the tray so that the film can get completely covered with it. Now all the handling of the film should be done by touching only the corners.

To start a development Procedure Slide the exposed film sheet with emulsion down through the solution only. Start immediately to lift the tray rotationally each side by about 2cm.

STOPBATH:-

After development is over the film is gripped on one edge and lifted the developing tray for 3 sec. which enable the excess developer to draw .Now immediately thereafter the film is immersed into the stop bath always with emulsion side. Upward to mechanical damages on the softened emulsion. The stop bath stops effectively the development action.

FIXING BATH:

The emulsion is properly fix after in the fixing solution for twice the time, it takes for the milky appearance to clear completely.

FILM WASHING:-

After all underdeveloped silver halides have been removed the emulsion is steel saturated with the chemicals of the fixing bathe and some desolved silver compound. If they are not removed by washing so they will slowly decompose and attack the image, causing stain and faided film.

The effectiveness of washing can be greatly improved if the film sheet after fixing, gets a brief water rinse under the tap to remove the excess fixing solution which otherwise would contaminated the washing tank.

DRYING:-

After washing, a dip in a wetting agent is the valuable aid for the drying process. For good results, drying could take place slowly at room temperature.

RESULT:-

Negative is prepared according to the PCB circuit.

PRECAUTIONS:-

- Circuit on the transparency should be drawn neat and clean.
- Process should be done in the absence of sodium (yellow).

POST-OUESTIONS:-

- What are the steps involved in the process of making up of negative from the film?
- What are the dimensions of Proto-Contact PCB (Artwork film maker)?

OBJECT:- Principle of a simple PCB.

APPARATUS REQUIRED:-

- **1.** Photo-resist slip coating machine.
- **2.** U.V exposer unit.
- **3.** Photo developer dye machine.
- **4.** Photo curing machine (oven).

THEORY:-

The manual artwork PCB design is the method used by most manufacturing of PCB with this method extremely accurate, high density PCB can be constructed. This artwork is then Photographed to produce a negative which can be used with sensitized printed circuit. Exposing of the negative by contact with coated circuit board is done first and then developing and other process are required for a PCB.

PROCESS:-

- **1.** <u>Clean the laminate</u>:-Before the metal surface is coating with crescent photoresist. Clean surface thoroughly so as to make a completely free of physical and chemical continuation.
- **2.** <u>Coating the laminate</u>:-Crescent Photo-resist can apply precisely and economically be using a dipping process, done by a photo-resist to coats.
- **3.** <u>Thinner:</u>-The thinner is used to dilute the photo-resist as it tends to get the thick during non-use. The use of thinner will depend upon the method of coating.
- **4. Prefacing:**-After coating the laminate allow it to dry naturally for 5 min. this helps to evaporate the solvents completely.
- **5.** Exposer:-The coated laminate is normally exposed in contact with photographic. Negative and Positive crescent photo-resist is sensitive to U.V radiation and therefore U.V tube based U.V exposer can be used for exposer.

- **6.** <u>Development</u>:-The exposed plate should be placed into the solvents based developer. This will remove unexposed area of the photo-resist and will produce colourless resist image which has plastic like appearance.
- **7.** <u>Washing</u>:-Immediately after developer is over, wash it on running water of natural pH. After washing and drying, dying is carried out to improve the visibility of image.
- **8.** <u>Drying the Image</u>:-Immense the dried that plate in the dye developer bath. The surface of the board is coloured with the dye developer. The board is put under the running water of neutral pH, in order to wash off the dye stain from unexposed area, which result into a clean dyed image of photo-resist and the dry.
- **9.** <u>Post curing</u>:-The post-baked surface will be stronger than the unbaked one. This process can be done on PCB curing machine.

RESULT:-

After this process, circuit resist has left on required part of PCB and now coated or unprotected metal may be etched in etching solution to prepare PCB.

PRECAUTIONS:-

- Worktable, apparatus, tanks, traces should be completely free from dust and dirt.
- Use of thinner should be done carefully.

POST-OUESTIONS:-

- What are the main apparatus used in the principle of PCB?
- What is the role of thinner in PCB?

OBJECT:- Etching and Drilling of PCB.

APPARATUS REQUIRED:-

- Etching machine
- Ferric chloride
- Drilling Machine

THEORY:-

This is an important and critical step in chemical processing of direct etched boards. Although basically this operation of chemical removal of unwanted copper portion ferric chloride is widely used for copper and copper alloys. He removed the unwanted copper from laminate by photo etching machine. In this machine laminate put in tank filled with chemical ferric chloride which is agitated by a pump and a heater. The heater helps the chemical become to warm and help it to etch PCB faster.

Fresh chemical is available to the surface area that dissolved the metal from surface is rinsed away simultaneously. Sensor is provided for maintaining temperature.

DRILLING:-

After etching, drilling of PCB is done for making holes on the conductor pattern for inserting the component leads to the solder of PCB.

RESULTS:-

PCB is fabricated according to the required circuit board.

PRECAUTIONS:-

- Clean and etch the board after completion of etching.
- Drilling should be done carefully.

POST-QUESTIONS:-

- What is the work of drilling Machine?
- What is the role of sensor?

OBJECT: - Preparation and mounting components.

<u>Components lead Preparation</u>: Bending of axial components leads is done in a manner to generate an optimum detection of the component. All the PCB by a minimum of stress is introduced on the solder joint. In no case, there should be damage to the component or it leads to cost while bending of leads any stress on components where they directly come out from the component body has to be avoided.

<u>Component Mounting</u>: Components are basically mounted only on one side of the board. Component orientation can be vertical or horizontal but uniform reading direction should be maintained. The uniformity in orientation of odorized components is determined during the PCB.

PROCEDURE:-

- Attach the electronic components in configuration of bridge rectifier.
- Check the primary and secondary side of transformer and connect secondary of transformer as input of bridge rectifier.

RESULT:-

All required components are properly mounted on PCB.

POST-OUESTIONS:-

- What should not be recommended in mounting the PCB Components?
- What is the role of transformer in mounting the PCB components?