



SB-10058908-2786

July 15, 2015

SERVICE MEMORANDUM

NO: SM1505

MEMO TO: All Blue Bird Dealers and Customers

SUBJECT: Air Intake System Maintenance Reminder

MODEL YEAR: 2016

**MODELS AFFECTED: ALL BLUE BIRD BUSES WITH CUMMINS
ENGINES and VISION MODELS with FORD PROPANE ENGINES**

Maintenance and inspection of the air intake tract is critical not only for proper performance, but also for engine life and warranty compliance. Any leak along the various tubing and clamped joints of the intake tract, is an opportunity for the engine to ingest abrasive dirt or contamination into the turbo, valves and combustion chambers.

Never run the engine with the air cleaner or its filter element removed.

Recommend that only original replacement parts to be used to avoid possible poor fit and consequent air leakage.

Visually inspect the intake tract whenever working in the engine compartment and follow the scheduled maintenance guidelines in this publication as a minimum.

Page 3 is a list of maintenance procedures which should be performed on a regular basis to properly maintain your Blue Bird bus. Pages 4-9 are reference drawings for clarification of clamp torques and locations. *NOTE: Your system may vary from the drawing depending on year, model, engine and option selection.*

Service Intervals-These are recommended minimum service intervals which assume normal operating conditions. More frequent service intervals should be considered if the vehicle is operated in extreme conditions such as high humidity and/or dusty environments. Time intervals are shown in terms of months or mileage. The correct interval will be whichever is the first to occur.

BLUE BIRD BODY COMPANY

P.O. Box 937 – 402 Blue Bird Blvd – Fort Valley, Georgia – (478) 825-2021



BLUE BIRD

Some components should be regularly inspected, but do not lend themselves to universal intervals, because their normal service life is highly dependent upon local conditions. For these components, any estimated interval would result in over servicing in some locales and underservicing in others. Such intervals are left to the judgment of the local technician, and the service interval indicated is *As Required*. It is important to understand that this designation should not be taken as an optional inspection. Every item in the following tables should be considered mandatory, and an *As Required* interval should be viewed as emphasizing the importance of the local service operation first determining, and then strictly adhering to, an appropriate interval. Regardless of the interval determined appropriate, the operation must not be overlooked. More frequent service intervals should be considered if the vehicle is operated in extreme conditions such as high humidity and/or dusty environments.



Blue Bird Air Intake System Maintenance

Every Day

- Inspect Intake Air Restriction indicator. Replace filter element if indicator is red.
- Inspect Intake Tract Duct and Elbow visually for proper fit and sealing, cuts, abrasions, signs of dirt contamination.

Every 3 months or 5,000 miles

- Inspect Air Cleaner Filter Element for proper seating and secure lid. Replace if soiled, wet, torn or otherwise damaged. Ensure proper installation and seal. Clean any debris from filter housing.
- Inspect Intake Tract Tubing, Charge Air Tubing and all fasteners for signs of contaminate infiltration, loose clamps, wear spots and holes in piping.
- Inspect Air Compressor Inlet Lines for tightness, wear or other damage.
- Inspect Intake Tract Support Bracket (*if applicable*) – Repair damaged parts immediately.
- Inspect and tighten all hose clamps and connections per air intake instructions for each application shown below.

Every 12 months with Cummins

- Replace air filter element with OEM replacement air filter every 12 months or whenever the Air Restriction indicator reaches 25 inches of water (shows red).
- Test Air Restriction indicator with a calibrated vacuum gauge and pump.


Every 12 months or 30,000 miles with Ford Propane

- Replace air filter element with OEM replacement air filter every 12 months or 30,000 miles or whenever the Air Restriction indicator reaches 25 inches of water (shows red).
- Test Air Restriction indicator with a calibrated vacuum gauge and pump.

The drawings below are for a reference only. Your system may vary depending on year, model, engine and option selection.




VISION AIR INTAKE with Cummins Engine

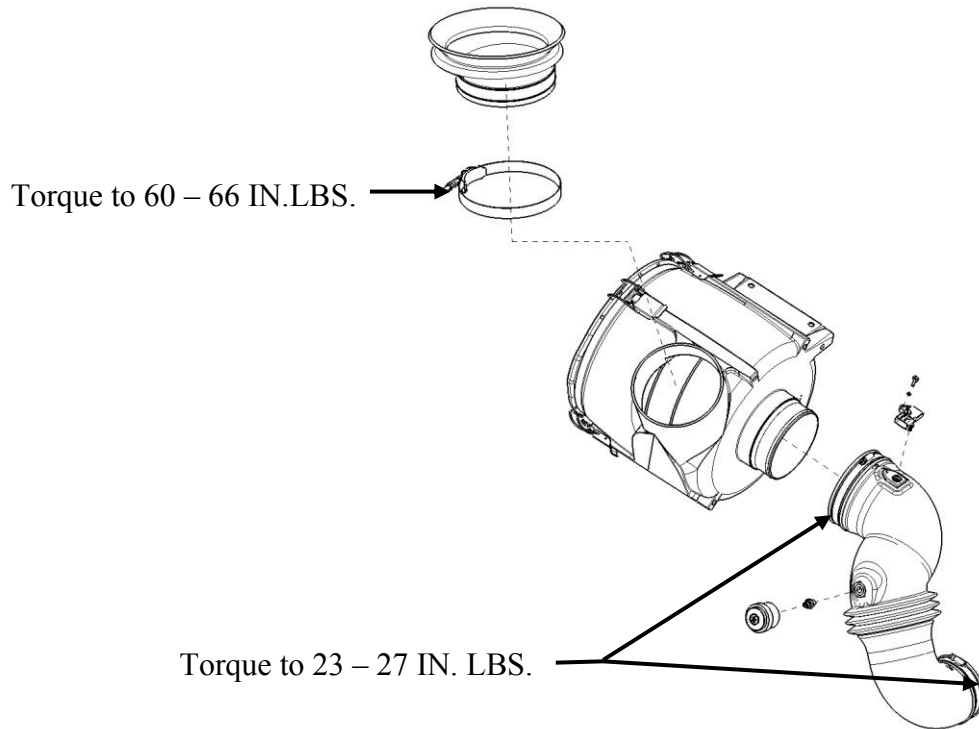

VISION CHARGE AIR SYSTEM with Cummins Engine


Torque all charge air cooler clamps to 60 – 66 IN. LBS. except Clamps “A”

Torque clamps “A” to 45-55 IN. LBS.

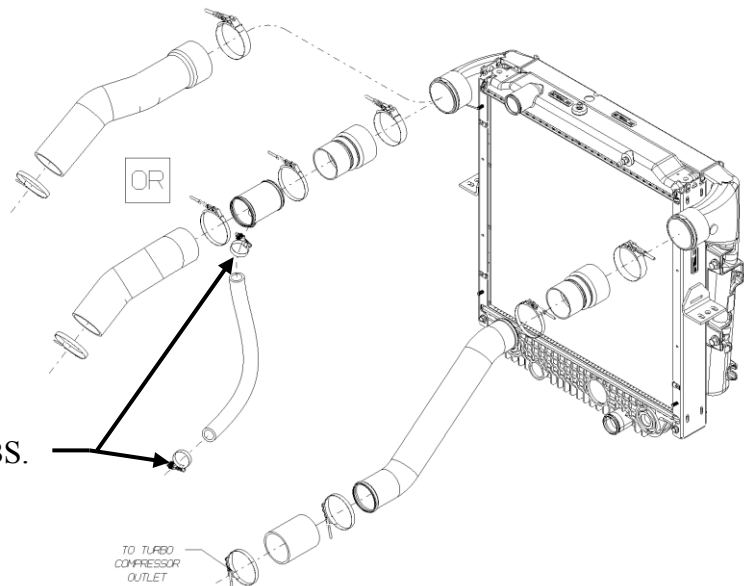




VISION AIR INTAKE with Ford Engine

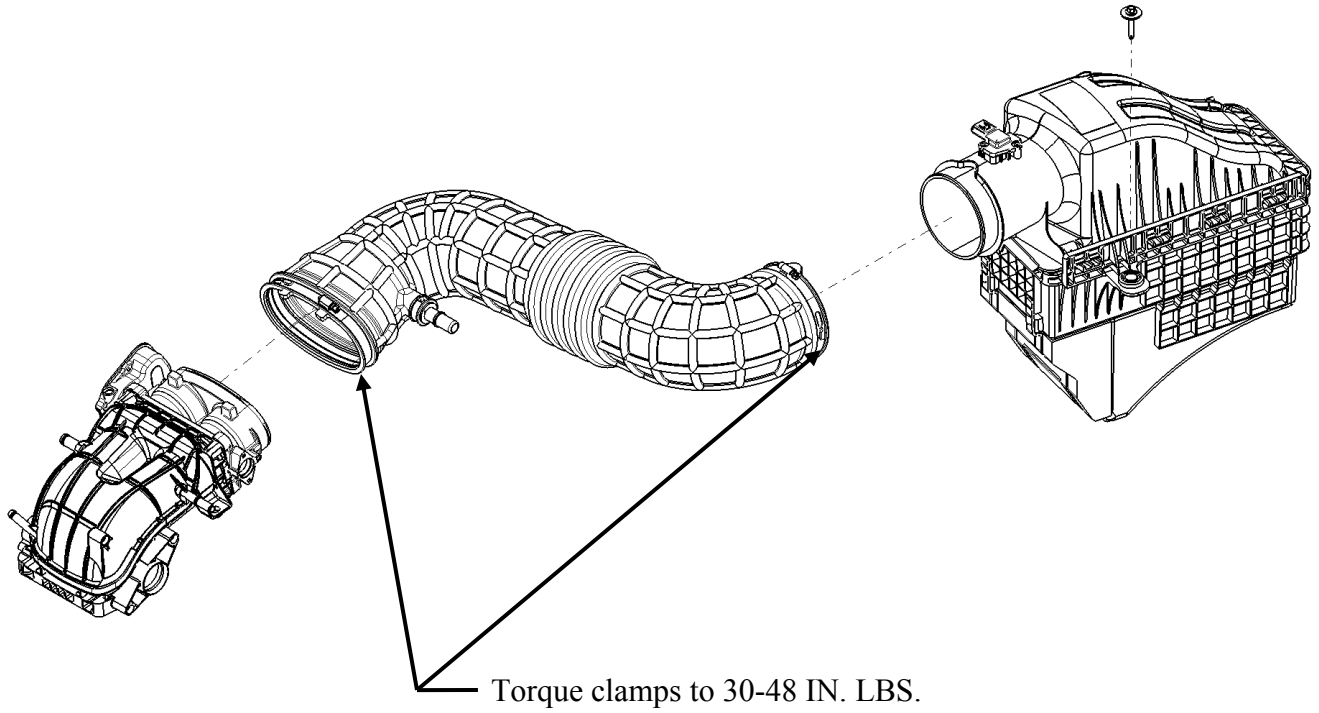




TX4 and ALL AMERICAN with Cummins ISB13 AIR INTAKE

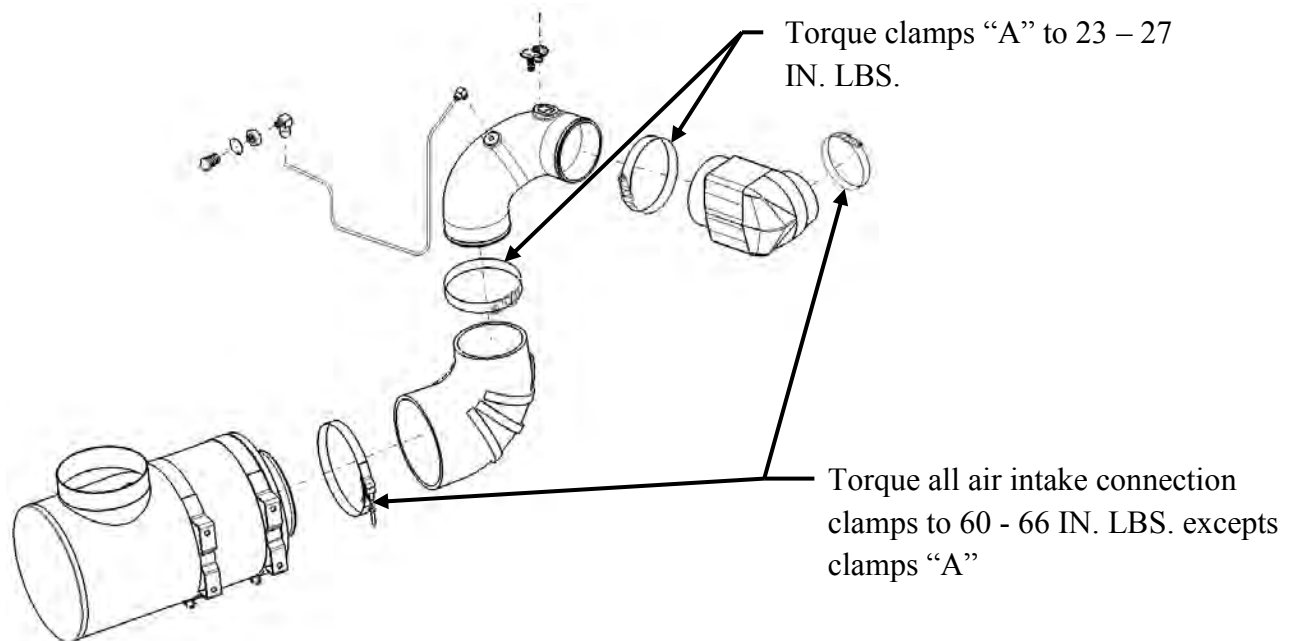


TX4 and ALL AMERICAN with Cummins ISB13 CHARGE AIR SYSTEM

Torque all charge air cooler clamps to 60 - 66 IN. LBS. except clamps "A"

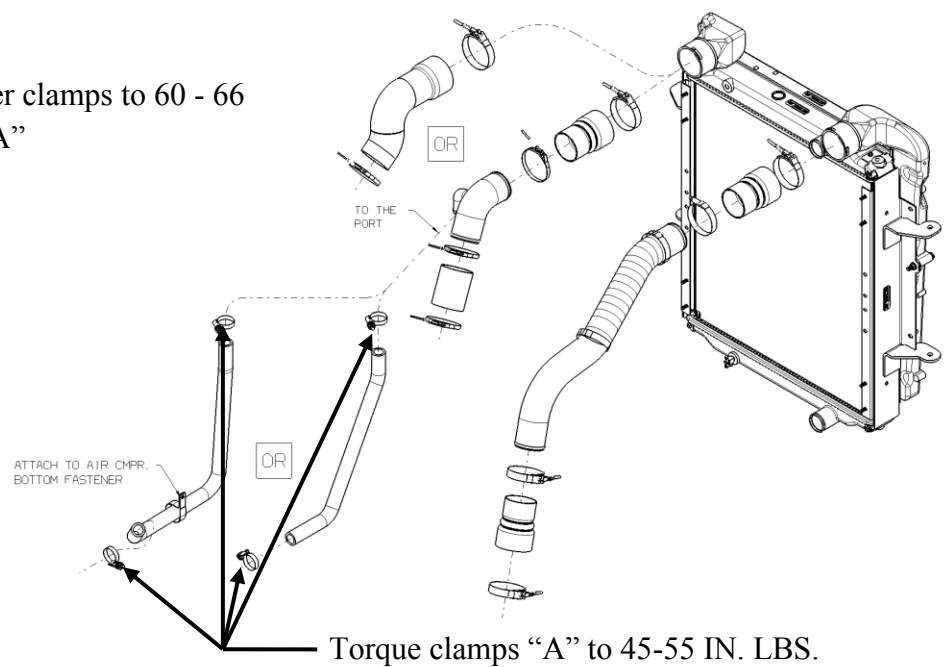




TX4 and ALL AMERICAN with Cummins ISB13 AIR INTAKE

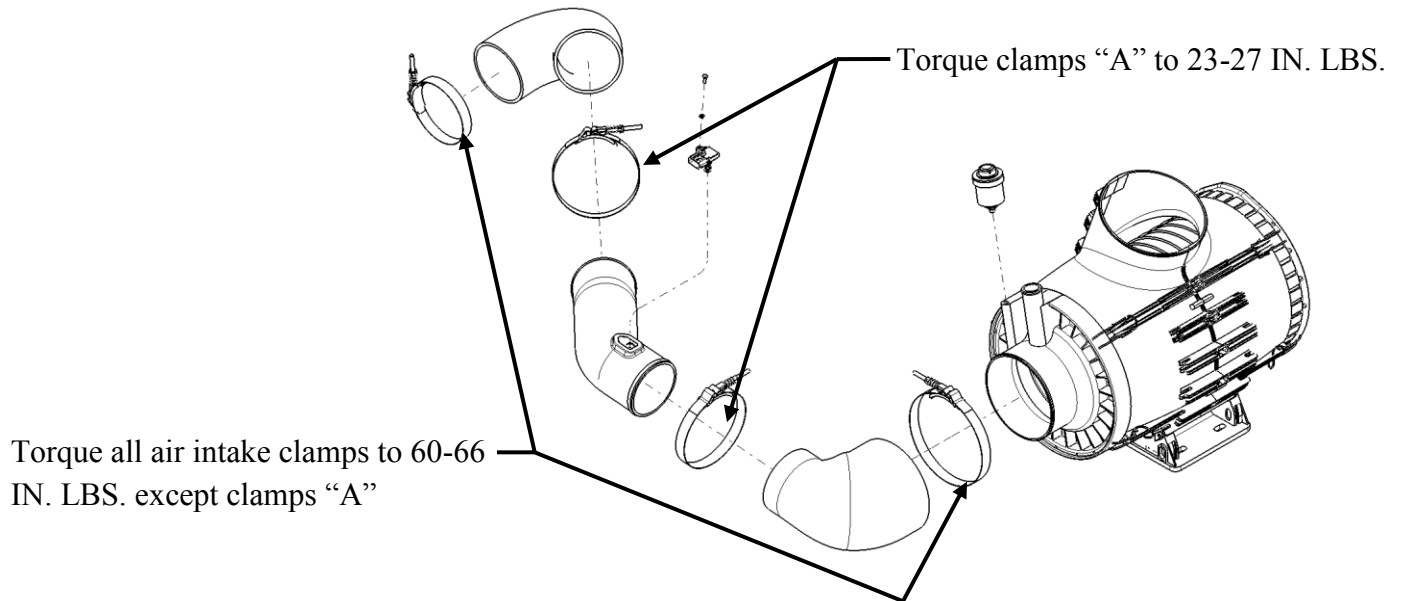


TX4 and ALL AMERICAN with Cummins ISB13 CHARGE AIR SYSTEM

Torque all charge air cooler clamps to 60 - 66 IN. LBS. except clamps "A"

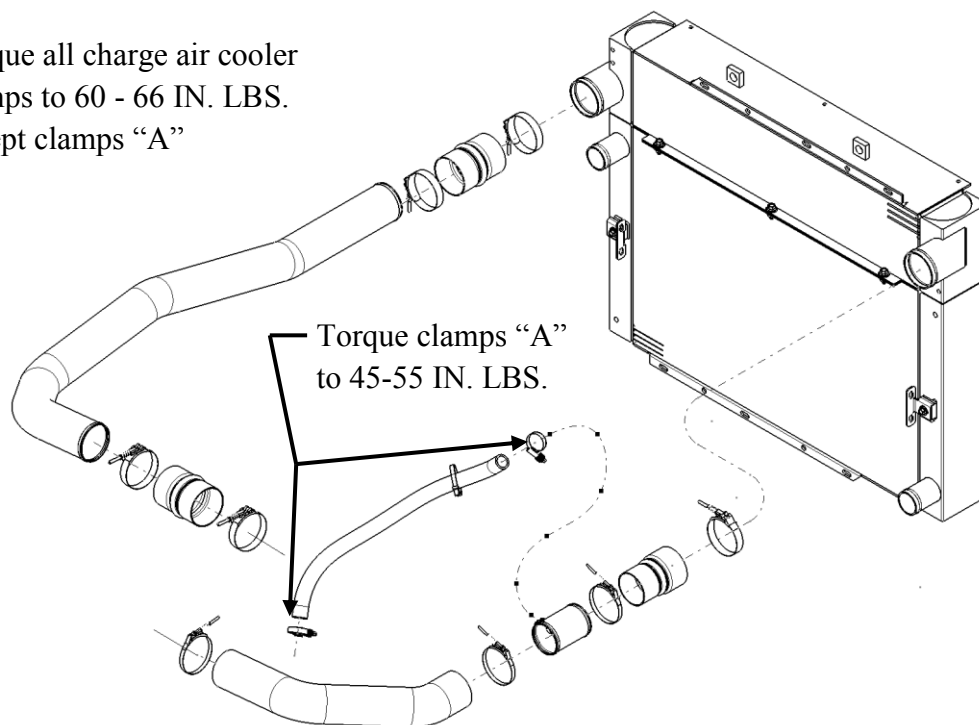




TX4 and ALL AMERICAN with Cummins ISL13 AIR INTAKE

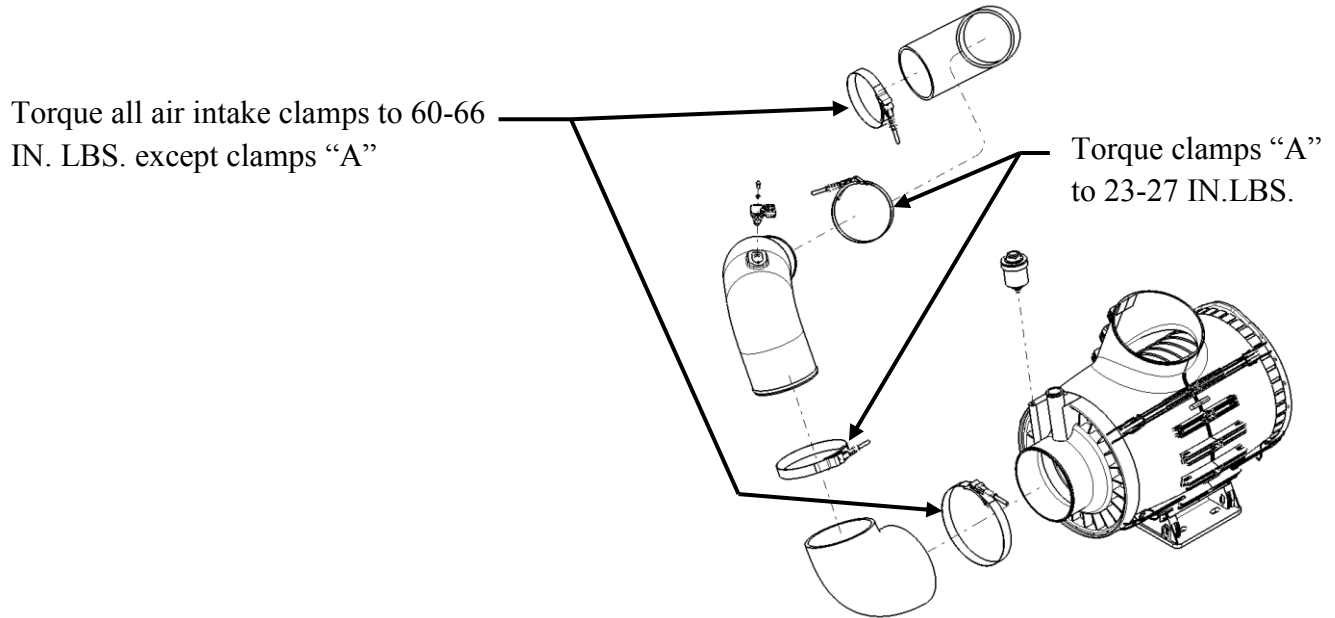

TX4 and ALL AMERICAN with Cummins ISL13 CHARGE AIR SYSTEM

Torque all charge air cooler clamps to 60 - 66 IN. LBS. except clamps "A"


Torque clamps "A" to 45-55 IN. LBS

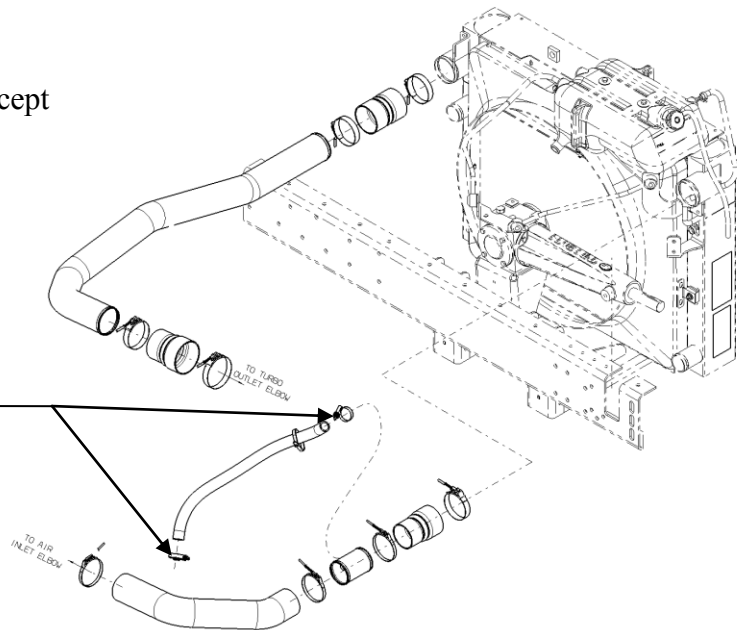




TX4 and ALL AMERICAN with Cummins ISL-G AIR INTAKE

Torque all air intake clamps to 60-66 IN.LBS.

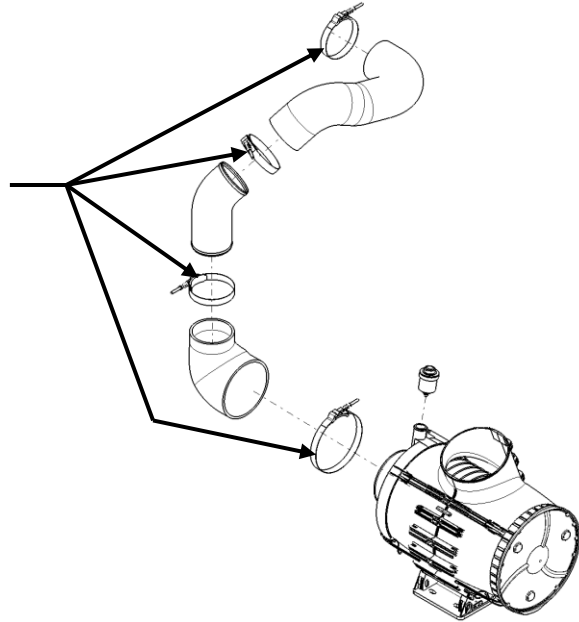

TX4 and ALL AMERICAN with Cummins ISL-G CHARGE AIR SYSTEM

Torque all charge air cooler clamps to 60 - 66 IN. LBS. except clamps "A"

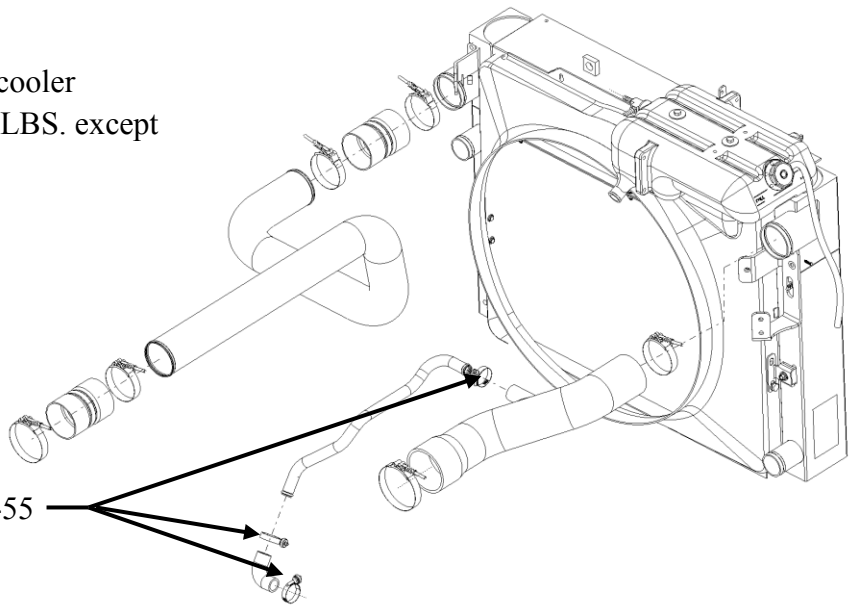

Torque clamps "A" to 45-55 IN. LBS.