
tCam-Mini corner bracket: assembly and installation (bracket_corner.stl)


1

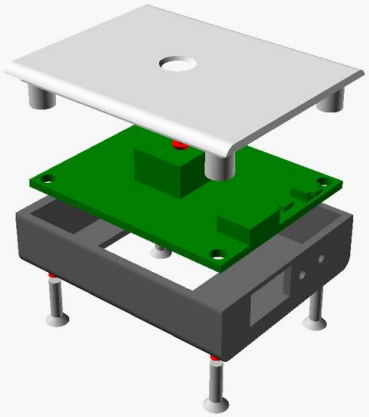

Close up the case

Board in the base: USB-C in the end opening, ESP32 can into the floor cut-out. Lid on (Lepton in its recess), 4 x M2.5x10 countersunk screws from the back.


2

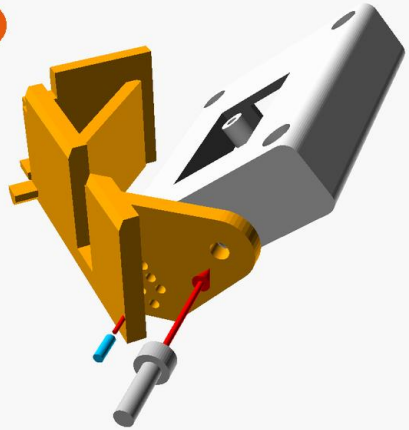

Set the angle (bracket OUT of the riser)

Push the 5 mm filament pin through the arm hole for your angle into case hole A (40/50/60/70) or B (45/55/65). Then the M3x10 pivot screw through the arm into the lid block, snug only.


3

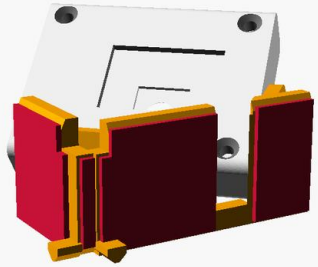

Apply VHB tape (red)

Clean the riser's fin ends, the band under the LED channel and the corner post with IPA. Tape the back of both legs, the corner piece and the small pad by the arm. Don't tape the lips.

4

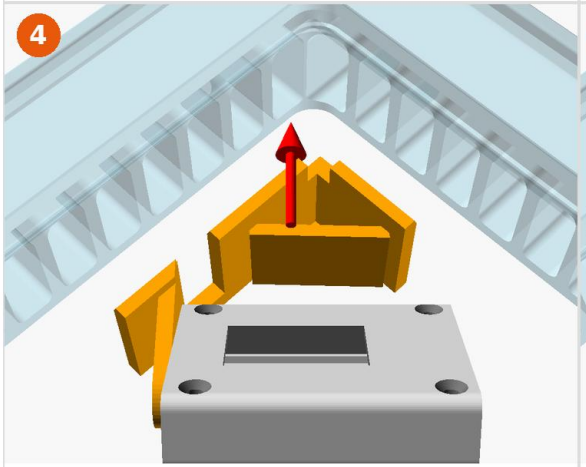

Lift the glass, push in diagonally

Hold the bracket square to the corner and slide it straight in along the diagonal (arrow). Both lips drop into the vent slots on either side of the corner post at the same time.


5



Press and wait

Press both legs and the pad hard for 30 s. Let it sit ~1 h before the camera hangs on it (full strength after 24 h). Route the right-angle USB-C cable out through a vent slot.

6

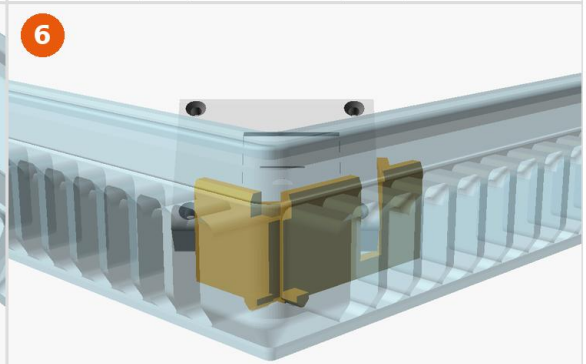

Check from outside

Seen through the riser: the two lips sit on the slot floors beside the post and carry the weight; the tape only stops it tipping. Nothing touches the LED strip. Put the glass back.

Hardware

Fasteners

1 x M3x10 screw: pivot, self-taps into the lid
4 x M2.5x10 countersunk screws: close the case
5 mm of 1.75 mm filament: angle-lock pin

Tape (recommended: 3M VHB 5952)

3M VHB 5952, 1.1 mm, 25 mm (1 in) wide roll:
soft foam grips layer lines; fits as exported
~70 mm per install, trimmed to ~23.5 mm high
Alt: VHB 4941 (1.1 mm); 4910 / Gorilla clear (1.0 mm, set tape_t = 1.0). Clean with isopropyl alcohol.

Cable and printed parts

Right-angle USB-C cable (only ~20 mm to the wall)
case_base.stl, case_lid.stl, bracket_corner.stl
PETG or ASA, 0.2 mm layers, 4 walls, no supports