Hot water timer: how to use it

Sangamo PSS2 · Version 2026-10-14.05 · @Andy

> **NOTE:** This is an unofficial quick guide to the Sangamo PSS2 timer in this property, put together from the manufacturer's manual and a demonstration video, with help from an AI tool.
>
> If the timer does not behave as described, **stop immediately and contact the landlord**. Do not try/push other buttons, open the timer or remove any screws.

Contents

1. Getting started
2. What times is it set to?
3. Check the daily program (same every day, weekday/weekend or each day separately)
4. To change the program on/off times
5. The water is cold and you need it now
6. The heater is on a scheduled time but you want to switch it off just this once
7. Going away
8. Changing the clocks for spring (forward) or winter (back)
9. Something's not working

Getting started



The timer **controls when the water heats**, so setting it to suit your schedule and requirements is the priority function of this guide. Using the timer also helps you to **manage your electricity usage**.

The tank needs **around two hours to heat fully from cold**, so set each time to start about two hours before you usually need hot water, for example set timer for 6am for morning showers required around 8am.

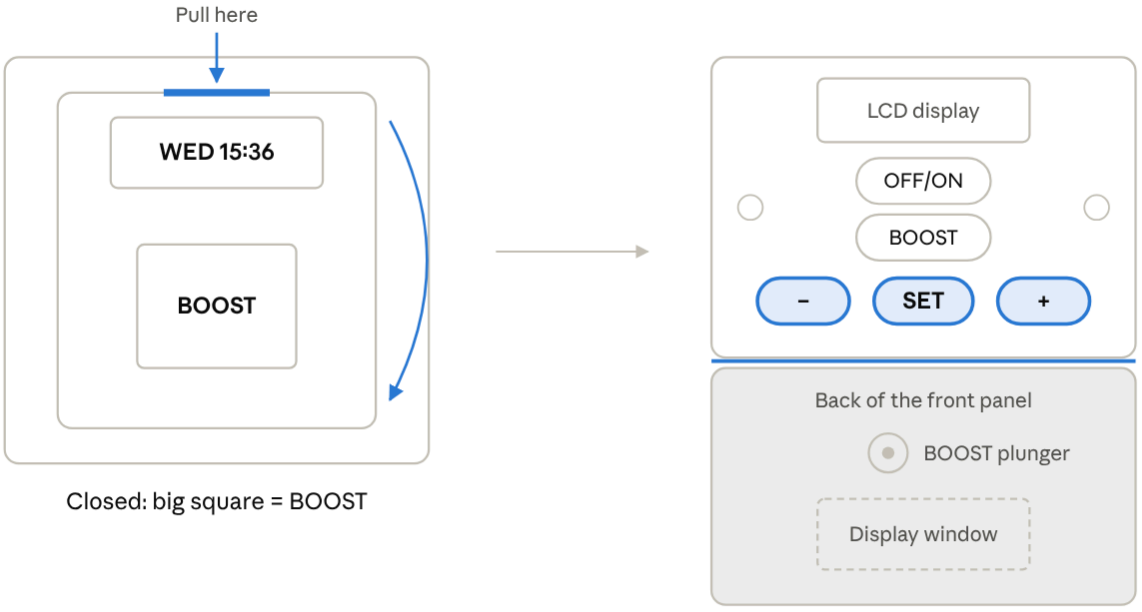
Once heated, the tank stays hot for several hours, so there is no need to leave the heater on all day. **Heat the water two hours before you first need it**, and switch off for longer periods when it is not needed (e.g. when at work).

If you need extra hot water outside the set times, press the large square button on the front, which is **BOOST**. **It is not instant**: the tank still needs time to heat.

To view or set the timer, use the small buttons behind the front panel.

To open the panel, hook a fingernail under its top edge and pull it towards you and down. It hinges at the bottom and hangs open, and the display stays on the unit. Do not touch the two screws either side of the buttons, and do not lever at the bottom of the outer white plate, because that is where the electrician's wiring is.

Pull the front panel down from its top edge to reach the buttons



Closed: big square = BOOST

Open: SET, – and + set the times

Leave the two screws alone

Timer closed and with the front panel open

With the panel open, you will see two buttons in the middle and a row of three below them.

Button	What it does
OFF/ON	Pauses the timer while you are away

Button	What it does
BOOST	Extra hot water now (same as the large front button)
− (minus)	Lowers the flashing number
SET	Moves to the next setting; press and hold to save and exit
+ (plus)	Raises the flashing number

Use the 24-hour clock to set times, e.g. 15.00 for 3pm and 17.00 for 5pm. Holding − or + changes the number quickly.

What times is it set to?

You can look through the saved times without changing anything, as long as you only press SET and never touch − or +.

1. Open the front panel.
2. Press SET (short presses) until the display shows **01** and **ON** beside a time. On the way it passes through the clock settings; SET alone leaves them unchanged.
3. Write down the time shown. That is when the heater first comes on.
4. Keep pressing SET. The display moves to **01 OFF** (first off time), then **02 ON**, **02 OFF**, and so on. Each time takes two presses, one for the hours and one for the minutes.
5. When a period shows **--:00**, nothing more is set and you have seen the whole schedule.
6. Press and hold SET until the normal clock display returns.

If you are not sure whether weekdays and weekends have separate times, the next section shows how to tell.

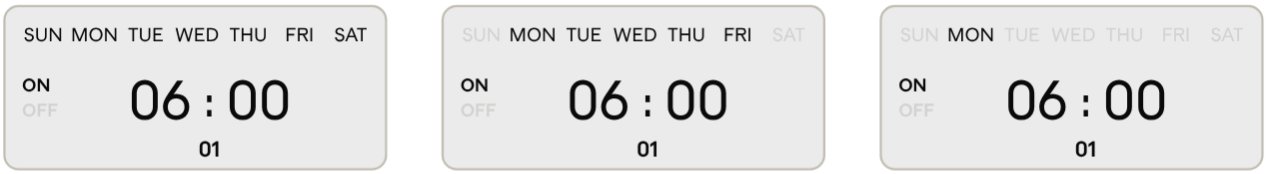
Check the daily program (same every day, weekday/weekend or each day separately)

The timer runs on one of three programs, which the electrician chose when it was installed. You can check which one without changing anything.

1. Open the front panel.
2. Press SET (short presses) until the display shows **01** and **ON**.
3. Look at which day names are lit along the top, and compare them with the pictures below.

4. Press and hold SET to go back to the normal display. As long as you have not pressed – or +, nothing has changed.

At 01 ON, the lit day names show the program



Program 1: same every day
All seven day names lit

Program 2: weekdays, weekend
MON to FRI lit, weekend later

Program 3: each day
One day lit, such as MON

Which day names are lit for each program

Only the landlord can change the program as it requires resetting and setting up the timer again. If you have different requirements such as separate times at weekends, inform the landlord which program it is currently on and what you would prefer.

To change the program on/off times










As stated earlier, the water takes **about two hours** to heat from cold, and once heated stays hot for several hours.

You can set **up to 10 heating periods a day**, so you do not need one continuous 'on' time. A few shorter periods, each starting about two hours before you usually need hot water (for example before morning showers and before the evening), will give you hot water when you want it while **keeping your electricity usage down**.


This example sets hot water from 6am to 8:30am and from 15.00 to 17.00 (3pm to 5pm), every day. Whatever is flashing is what – and + will change, and SET moves you on to the next thing.

Set 06:00-08:30 and 15:00-17:00, one number at a time

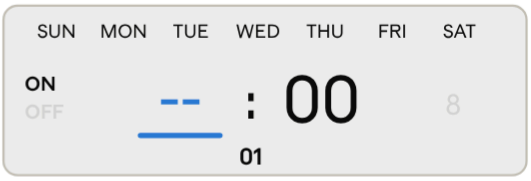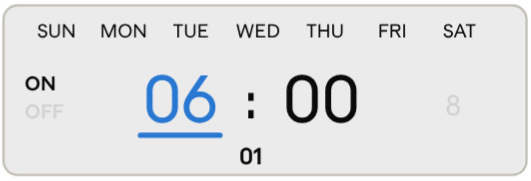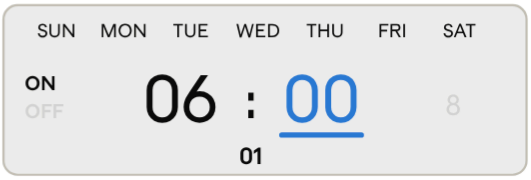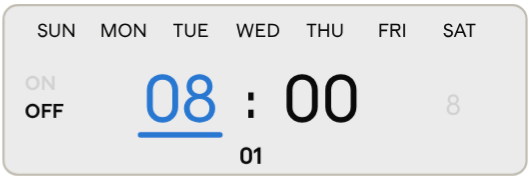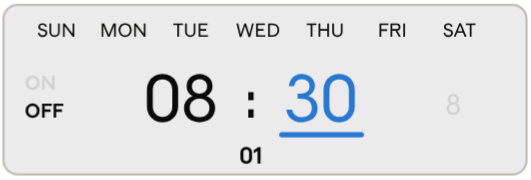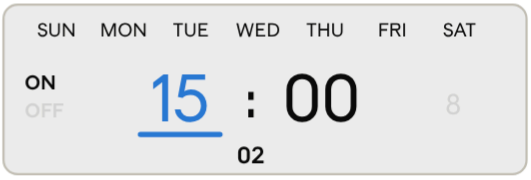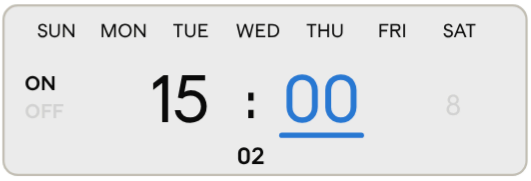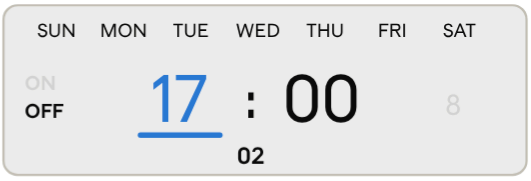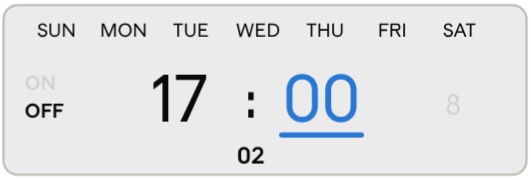Highlighted, underlined digits are the ones flashing

What to do	What the display should show
1. Open the panel. Press SET (short presses) until the display shows 01 and ON. The hours flash (an old time may show instead of --).	
2. Hours: press − or + until they show 06, then press SET.	
3. The minutes flash. Press − or + until 00, then press SET.	
4. The display moves to 01 OFF. Hours: press − or + until 08, then press SET.	
5. Minutes: press − or + until 30, then press SET.	
6. The display moves to 02 ON. Hours: 15, then press SET.	
7. Minutes: 00, then press SET.	
8. The display moves to 02 OFF. Hours: 17, then press SET.	
9. Minutes: 00, then press SET.	

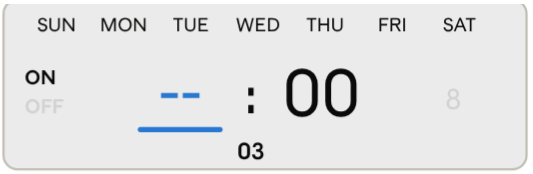10. The display moves to 03 ON and should show --:00. If it shows a time, press − on the hours until -- appears.



11. Press and hold SET until the normal clock returns. Your new times are saved.



Setting the times step by step, with the display at each step

Times must go in order through the day, so period 1 has to be earlier than period 2. If the display shows an error, press SET and enter that period again; the other periods are kept.

If weekdays and weekends have separate times (see the previous section), do not hold SET after step 10. Keep pressing SET until Saturday and Sunday light up, enter the same times again for the weekend, and then hold SET to save.

The water is cold and you need it now

BOOST will start heating the water immediately, but it **may not be hot straight away**. The tank takes **about two hours** to heat fully from cold, and you will get some warm water sooner.

Press the large square button on the front to BOOST. You do not need to open the panel, and the button still works when the keypad is locked.

Press BOOST	Display shows	Heater runs for
Once	0:30	30 minutes
Twice	1:00	1 hour
Three times	2:00	2 hours
Four times	0:00	Boost cancelled

Ideally, **set the timer so the water is already hot whenever you usually need it**, rather than waiting on a Boost. When the Boost ends, the timer goes back to its normal times by itself, so the schedule is not affected. If you find yourself boosting often, adjust the timer to heat according to your schedule.

The heater is on a scheduled time but you want to switch it off just this once

If the heater is already on during a scheduled time and you want it off, press BOOST once. It stays off until the next scheduled on time.

Going away

Open the front panel and press OFF/ON once. The display shows **OFF**, and the heater will not come on at its scheduled times. Your saved times are kept.

When you get back, press OFF/ON again and the normal display returns. If you need hot water while the timer is paused, BOOST still works.

Changing the clocks for spring (forward) or winter (back)

The timer does not change for summer and winter time by itself, but **you do not need to set your times again**. One button moves the clock, and your on and off times move with it, so 6am still means 6am.

1. On the **last Sunday in March** (clocks go forward) or the **last Sunday in October** (clocks go back), make sure the normal clock is showing.
2. Press and **hold** BOOST until the clock moves by one hour.
3. Check the clock is now right. If it moved the wrong way, press and hold BOOST again.

A short press of BOOST starts a boost instead, and the display shows 0:30. If that happens, press BOOST three more times until it shows 0:00, then try again, holding it for longer.

If the clock is wrong by some other amount, open the panel, then press and hold SET from the normal display. Use − or + to correct whatever is flashing (day, then hours, then minutes), pressing SET after each, then press and hold SET to save.

Something's not working

What you see	What to do
L appears when you press a button	The keypad is locked. Press and hold − and + together for 5 seconds until **L** shows briefly, then try again.
OFF on the display	The timer is paused for a holiday. Press OFF/ON once.

What you see	What to do
An error while entering times	A time is out of order. Press SET and enter that period again, making sure each period is later than the one before.
No hot water at a set time	Check the clock and day are right, and that **OFF** is not showing. Then press BOOST twice so the display shows 1:00. If the water is still cold when the boost has finished, tell your landlord, as the heater may need looking at.
SET never reaches **01 ON**	Stop and tell your landlord. They can put it right.