

HARD FOLDING TONNEAU COVER

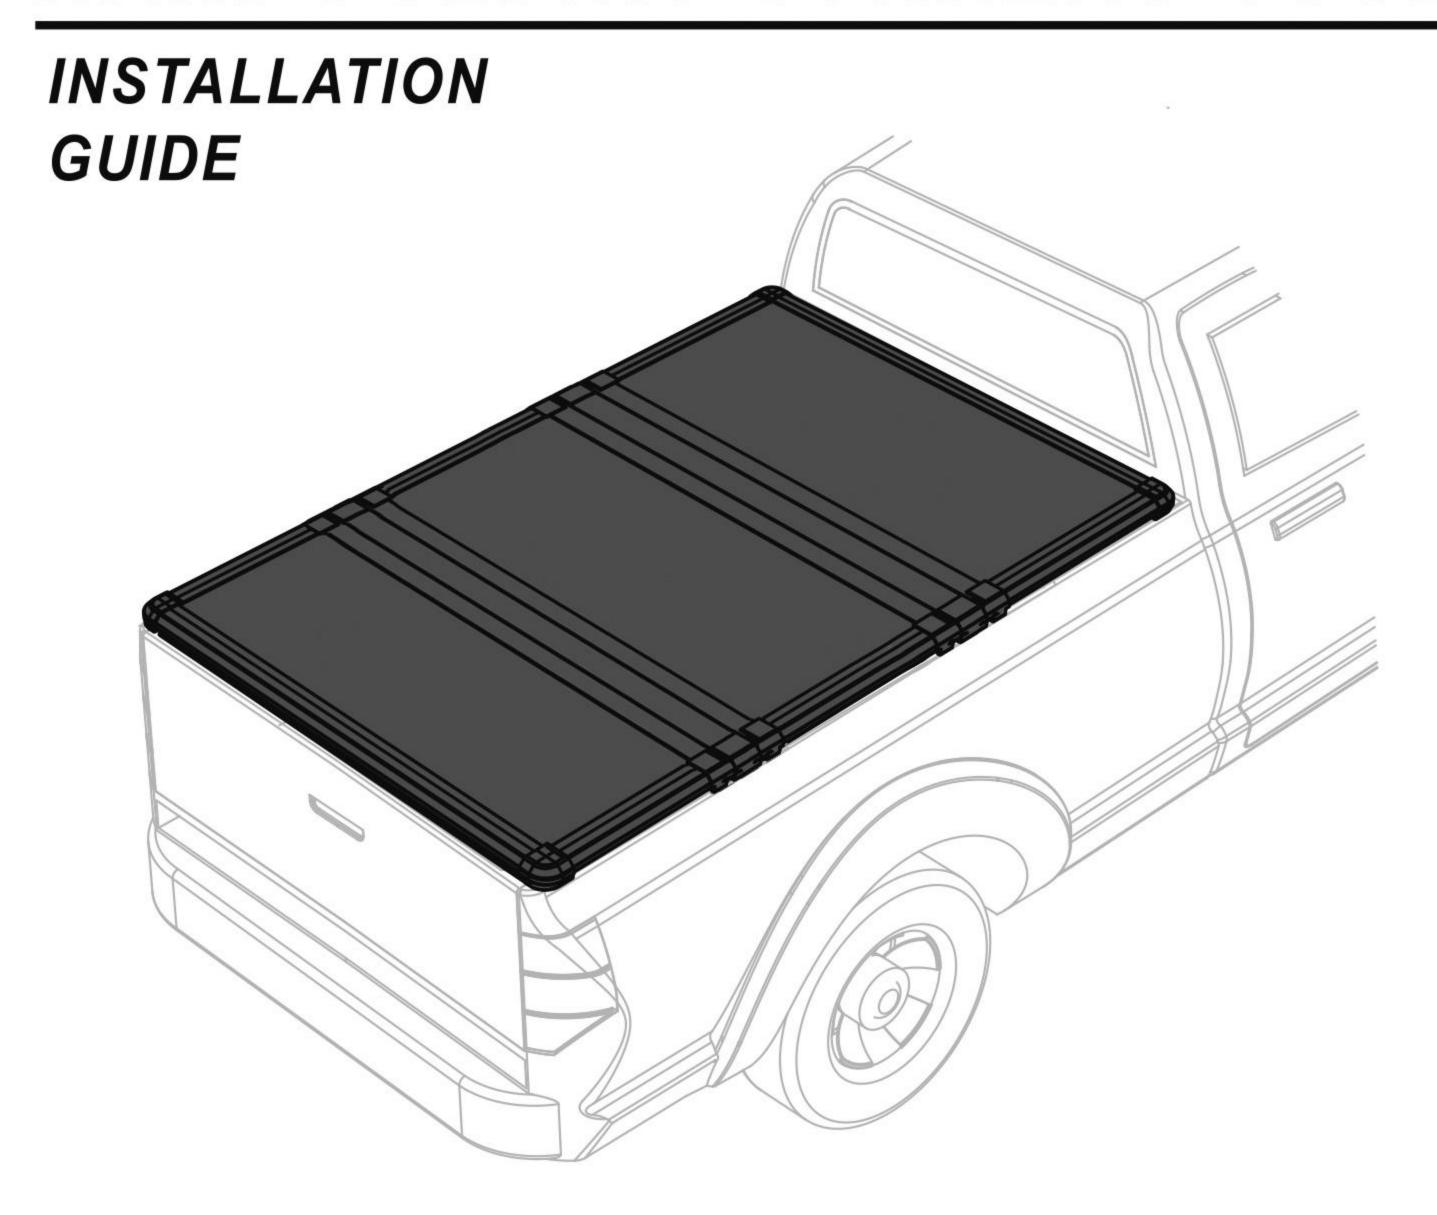

PARTS LIST

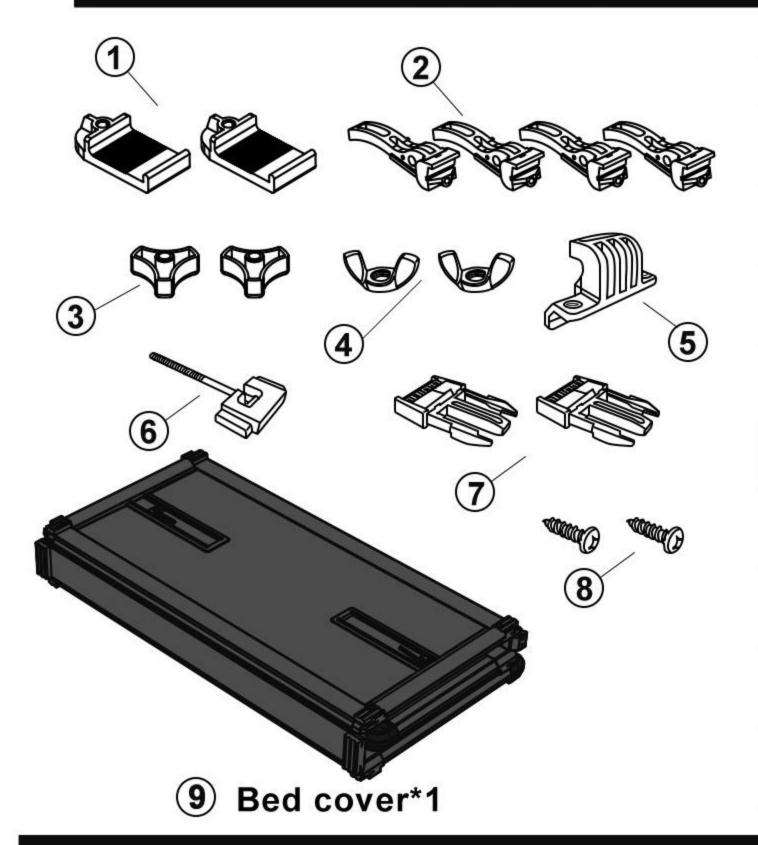


ITEM	DESCRIPTION	QTY.
1	Front clamps	2
2	Rear clamps	4
3	Triangle screw	2
4	Fastening nut	2


ADDITIONAL REPLACEMENT PARTS					
5		Buckle Base	1		
6		T-bar	1		
7		Buckle	2		
8		Bolts	2		

Clean truck bed thoroughly before installation.

 Stick the supplied front seal strip on the front bed rail by aligning with the outer edge.

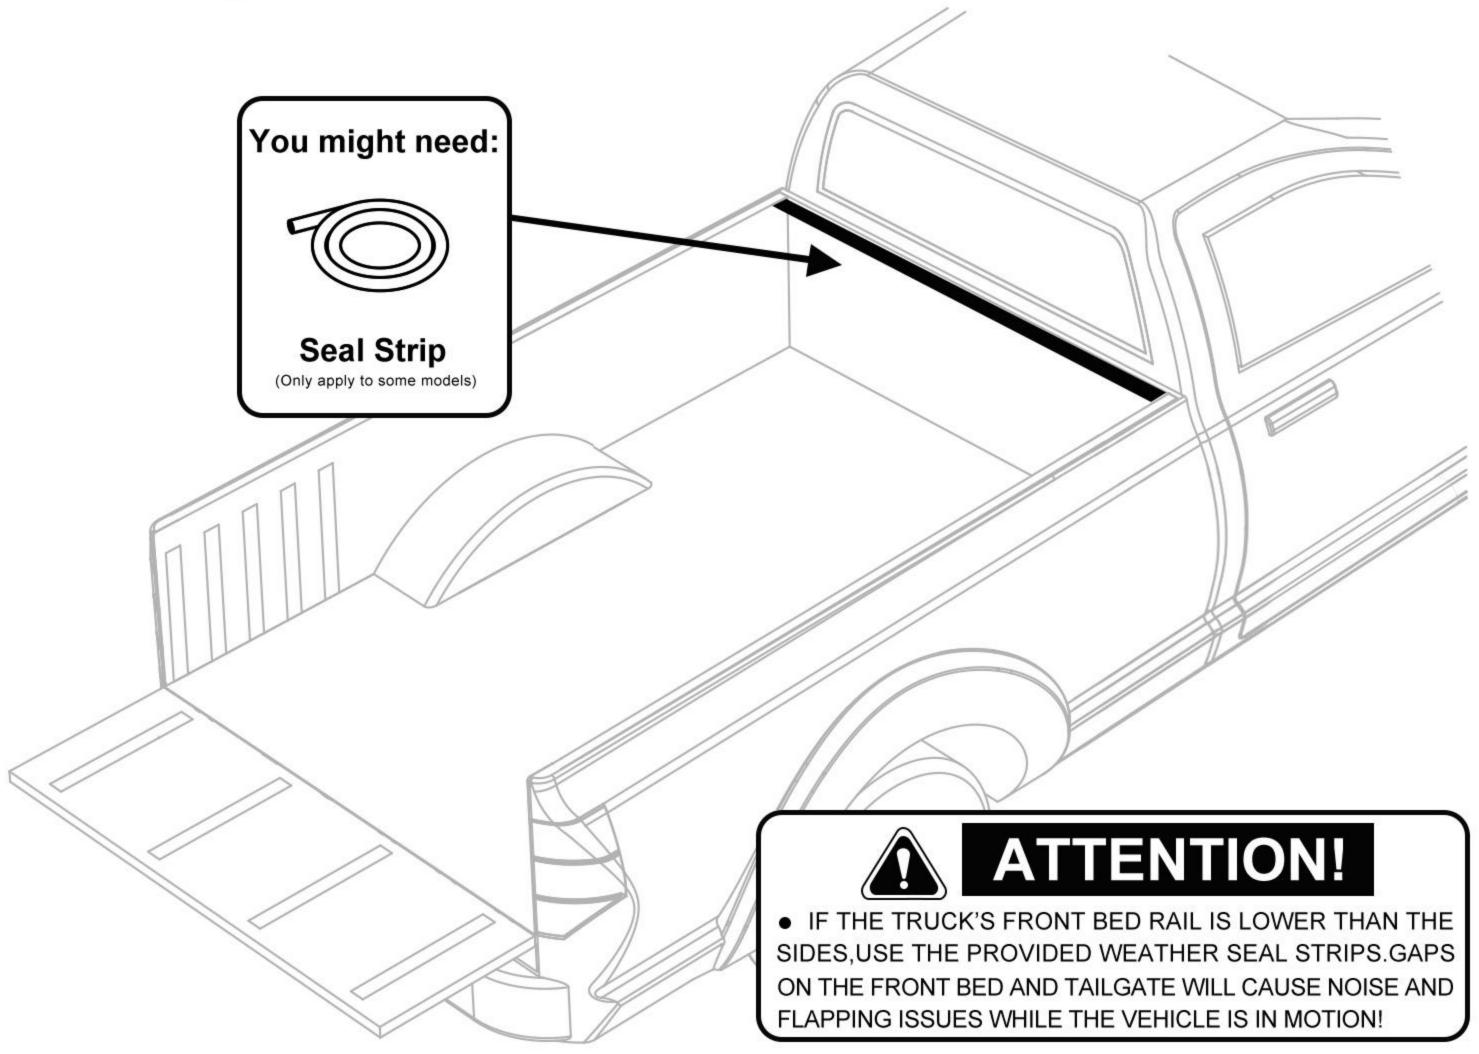


Place the assembled cover on the bulkhead against the cab.

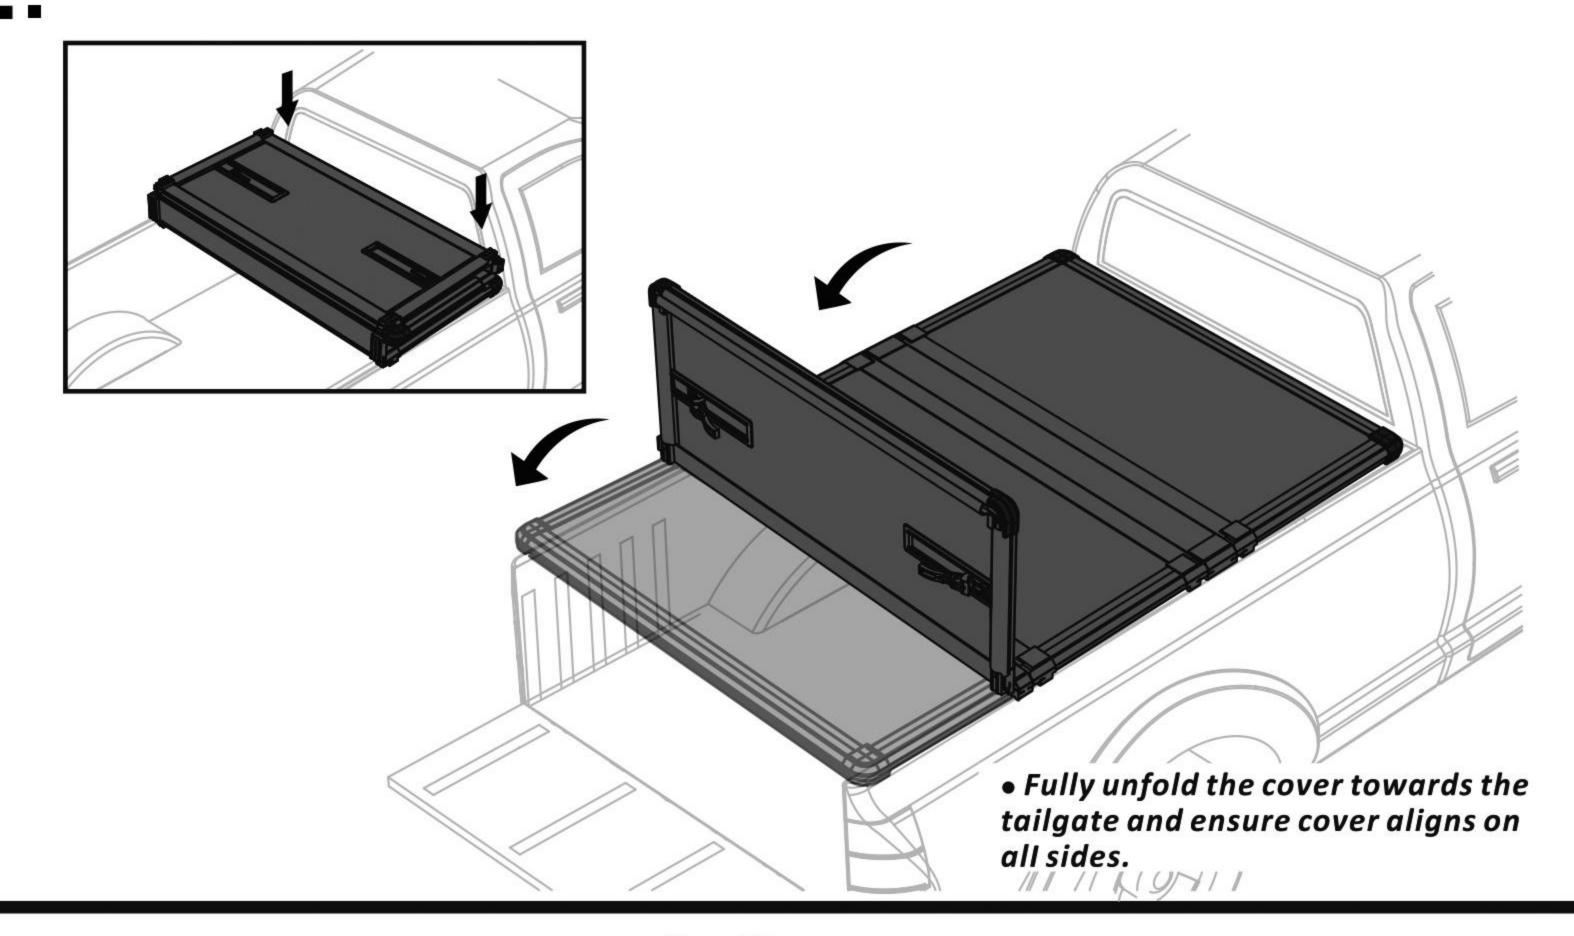


• Clean truck bed thoroughly before installation.


 Stick the supplied front seal strip on the front bed rail by aligning with the outer edge.

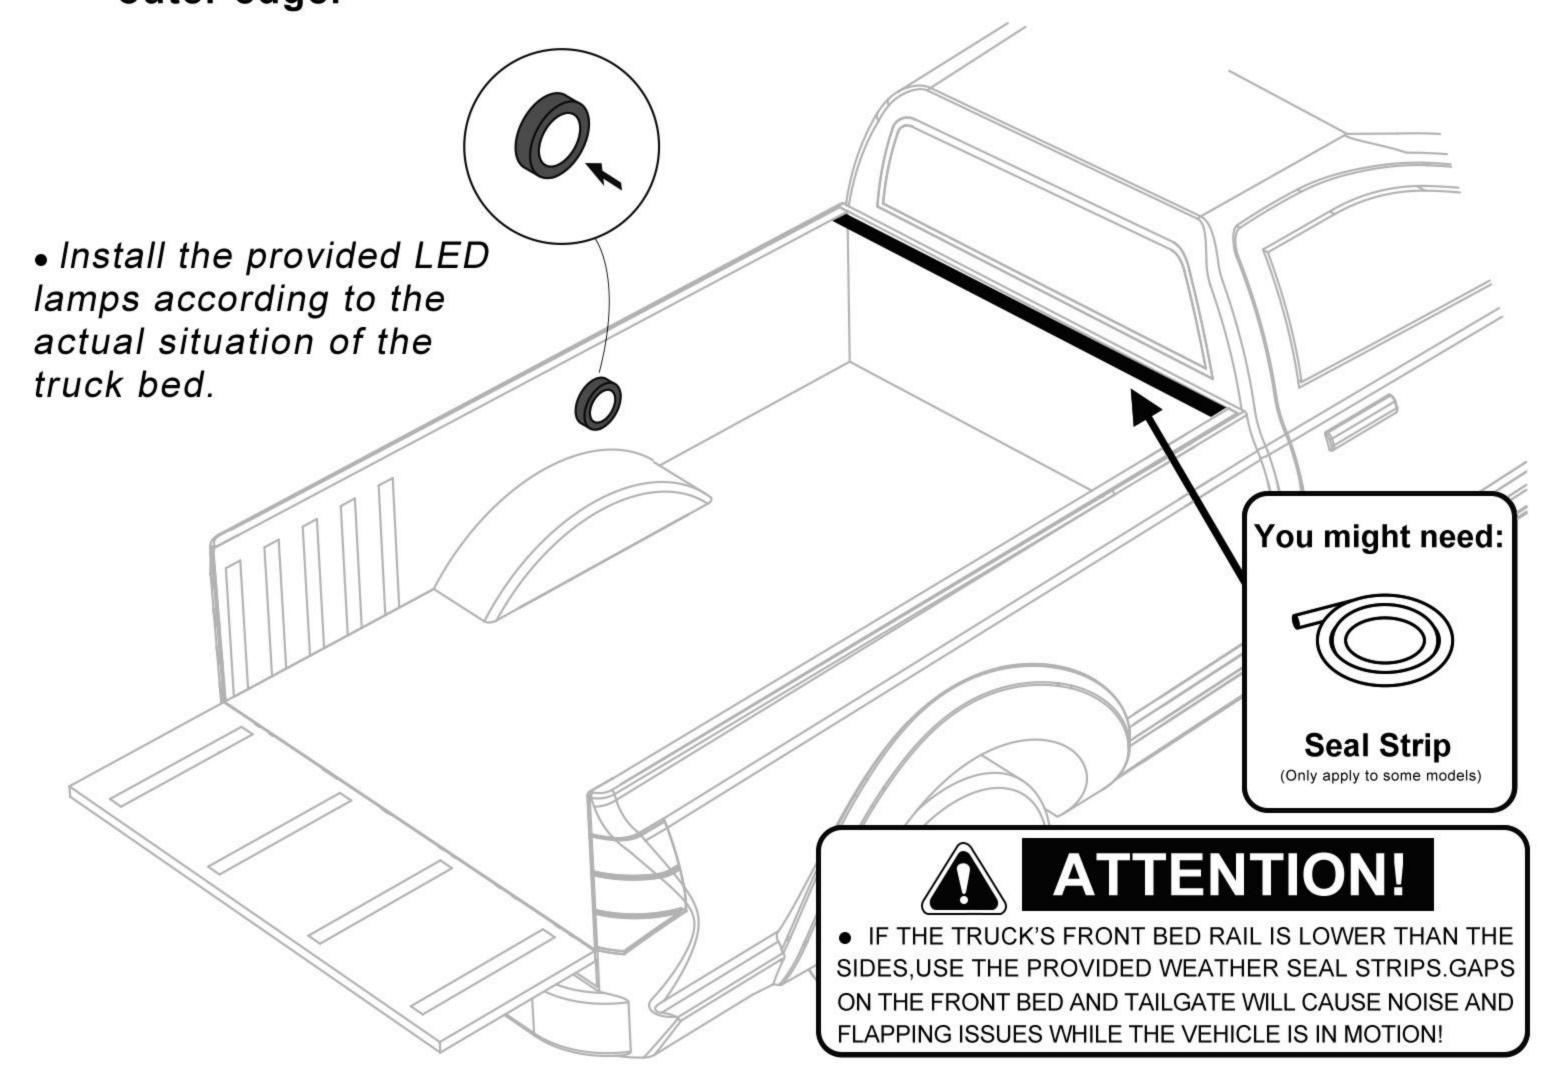

Place the assembled cover on the bulkhead against the cab.

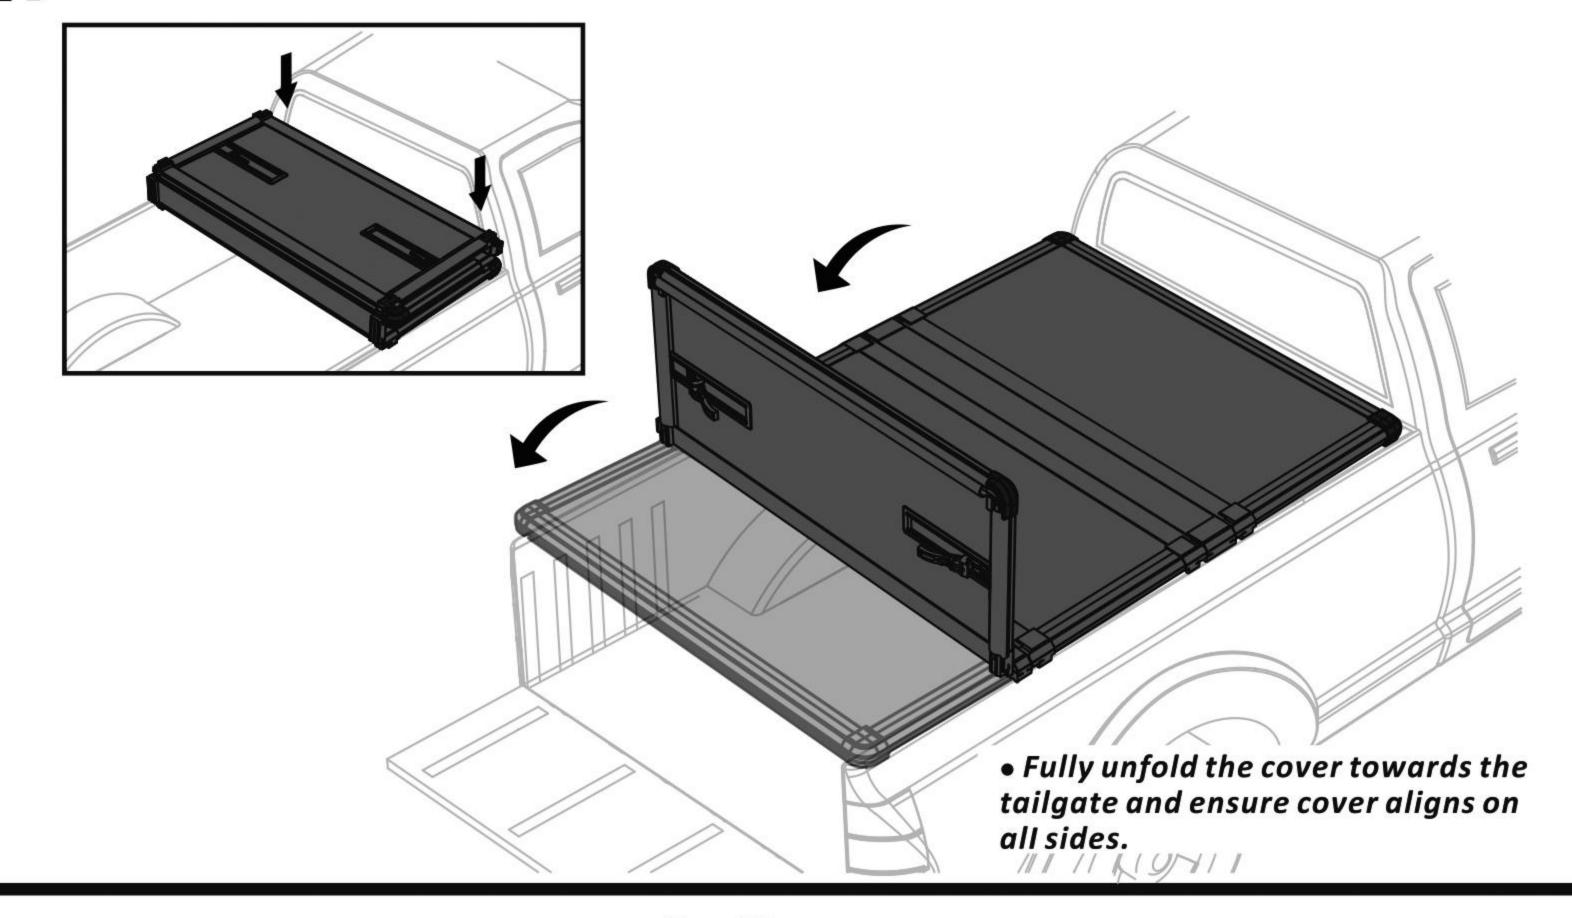


Slide the front clamp to the best position, clamp the interface under the metal bed rail point, and then use the Triangle screw to rotate into the metal rod to fix the entire clamp

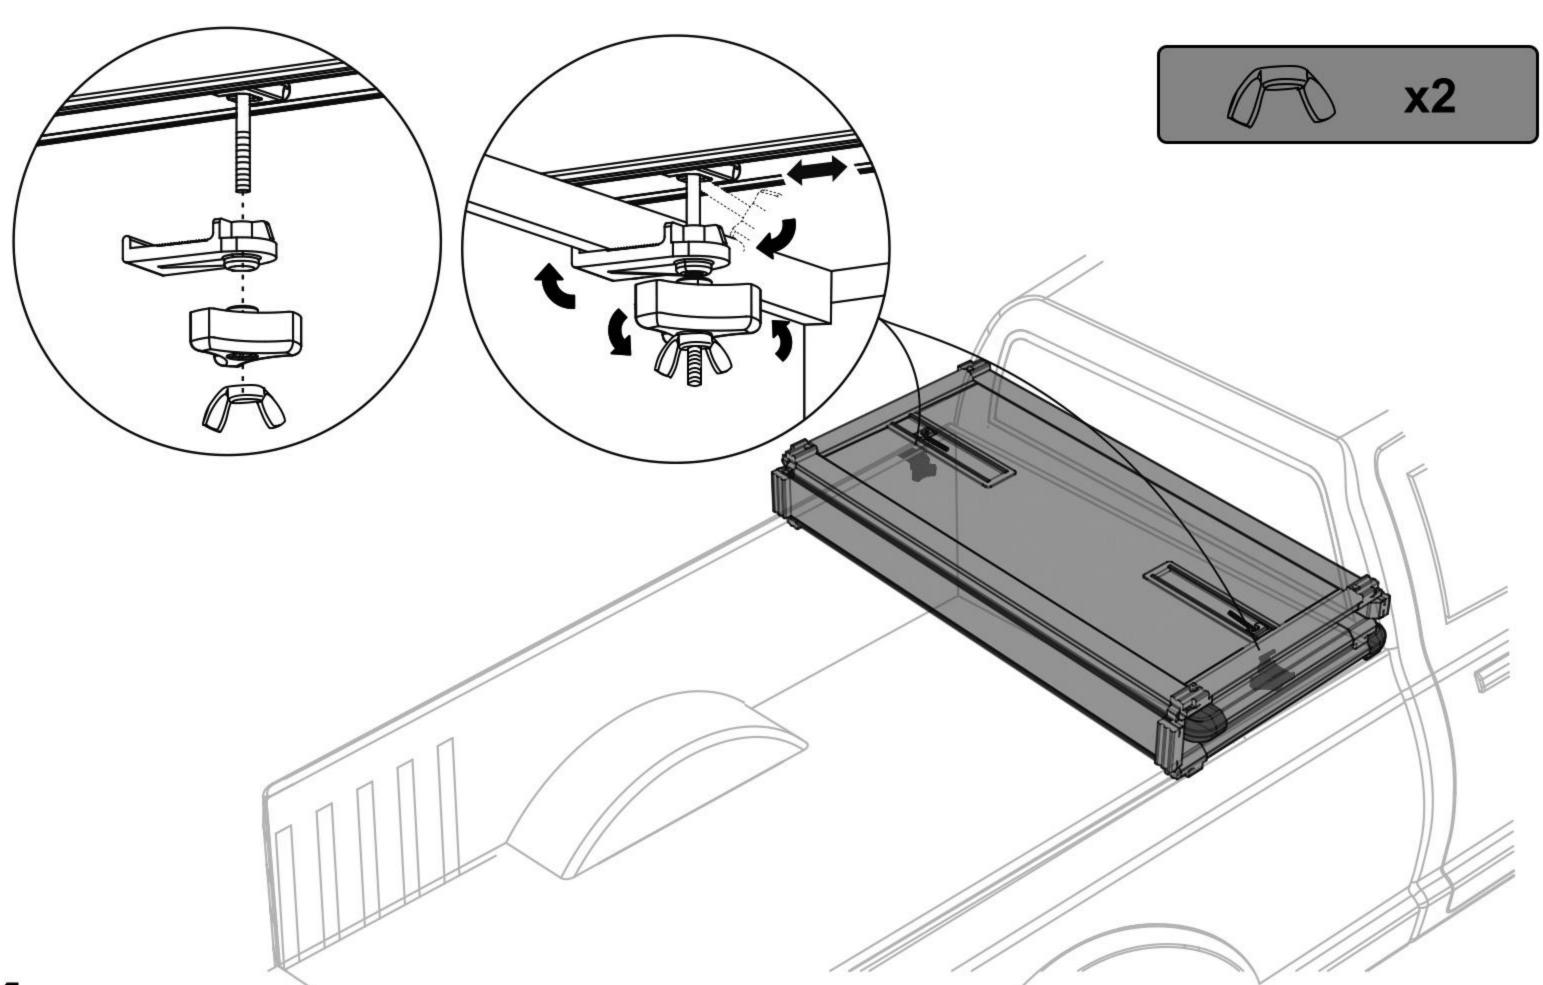


4. Connect the provided Rear clamps to the T-bar on the cover as shown in the figure


• Fix the rear clamp on the third cover as shown in the second cover.

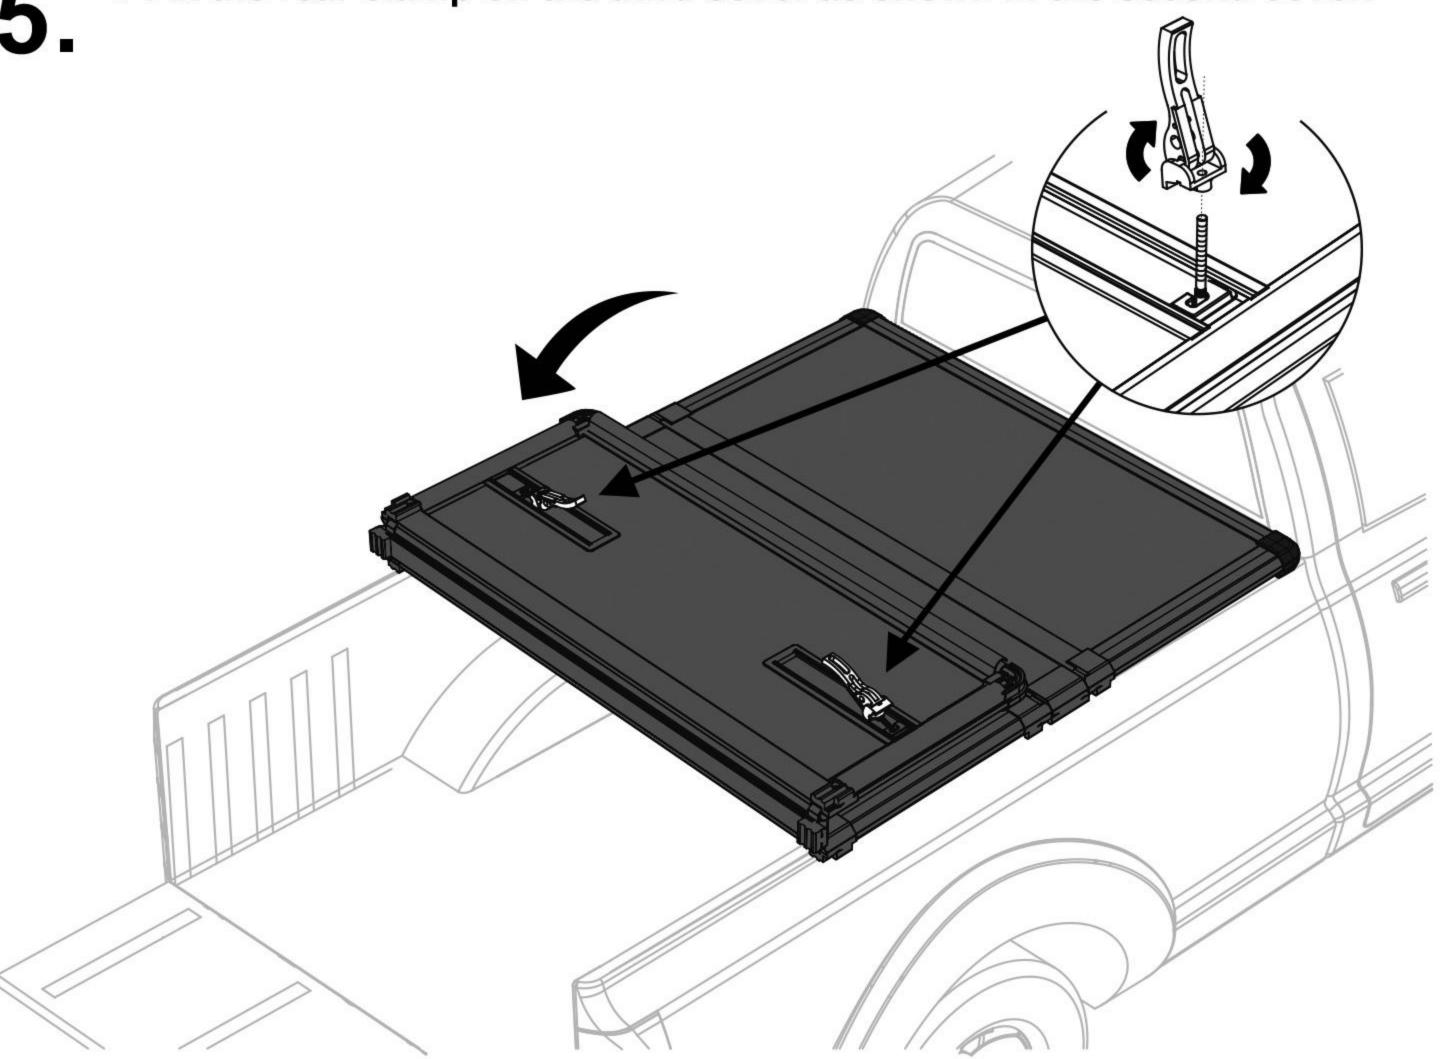

• Adjust the connection position of the rear clamp and T-bar according to the actual situation, open the cover and place it on the lathe, and push the rear clamp vertically to fix it to the rails on both sides of the lathe.

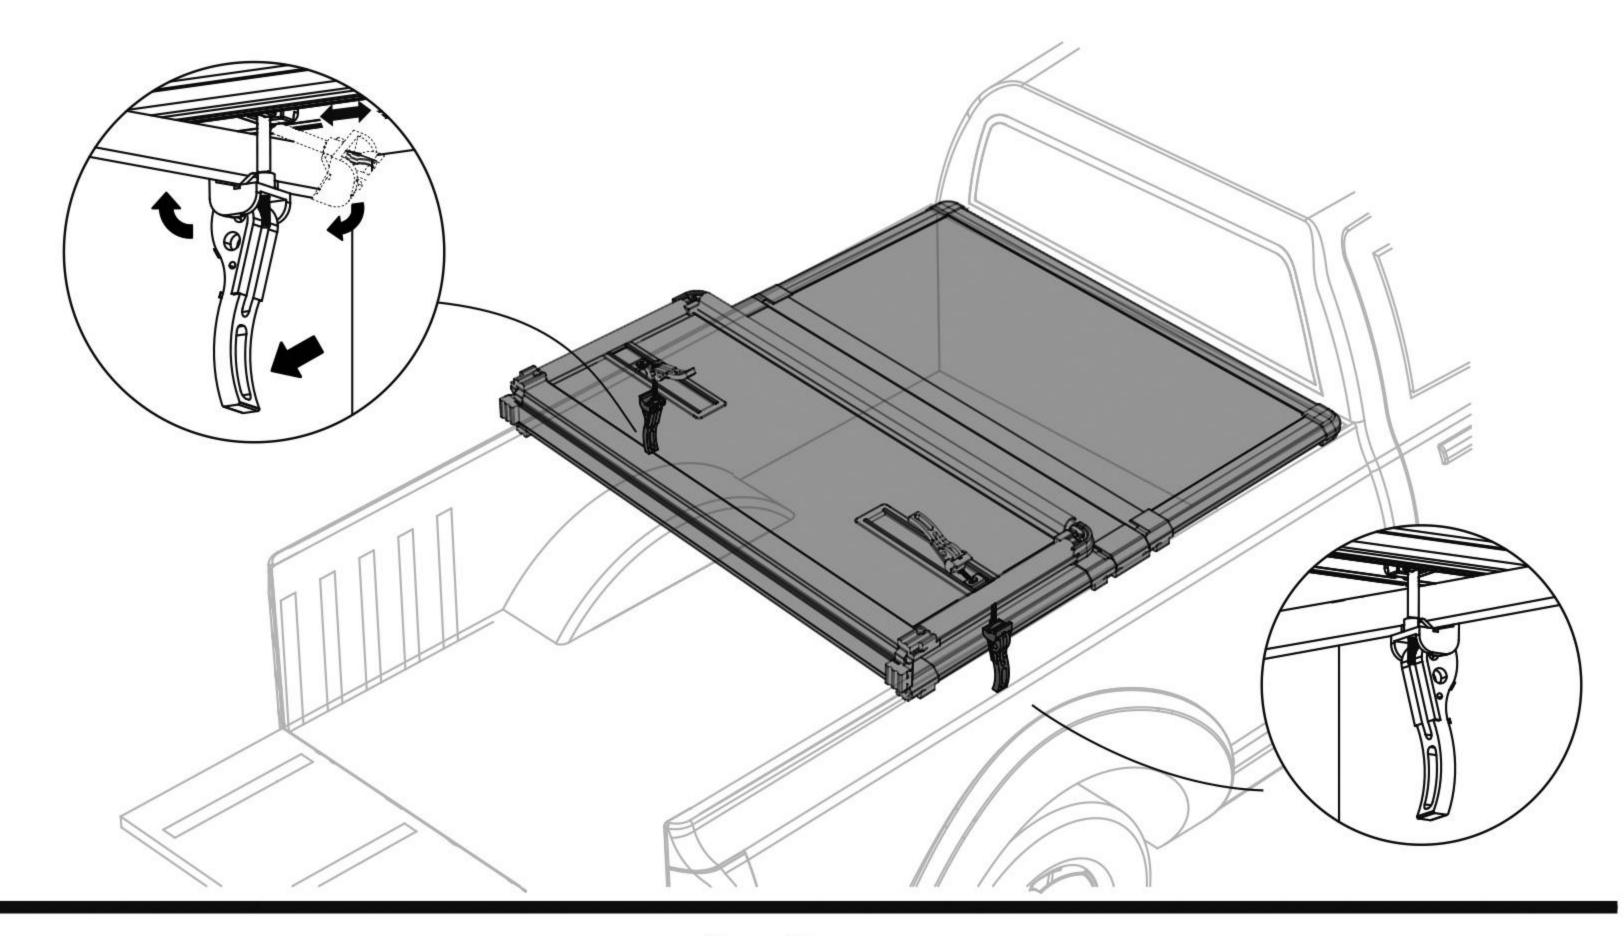


 All clamps must be firmly in contact with the lip of the metal bed rail to ensure a firm cover

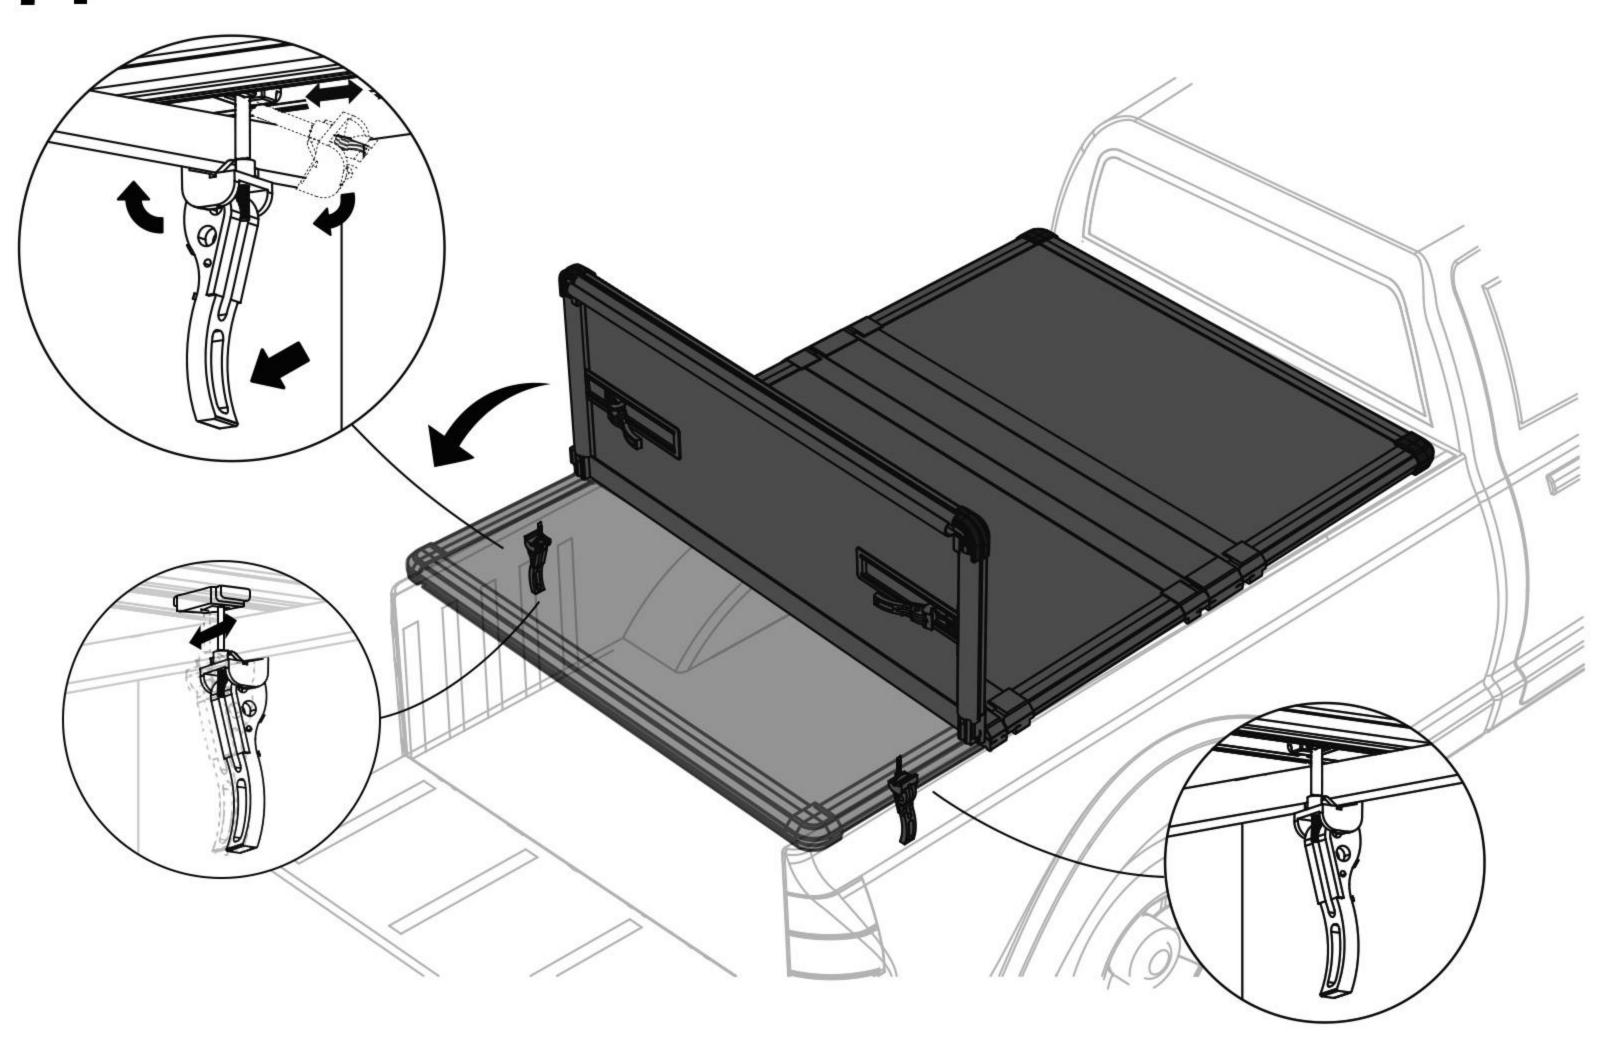

Q FINISH THE INSTALLATION

 After rear clamps have been latched securely,close/lock tailgate and cover cannot be opened from the outside




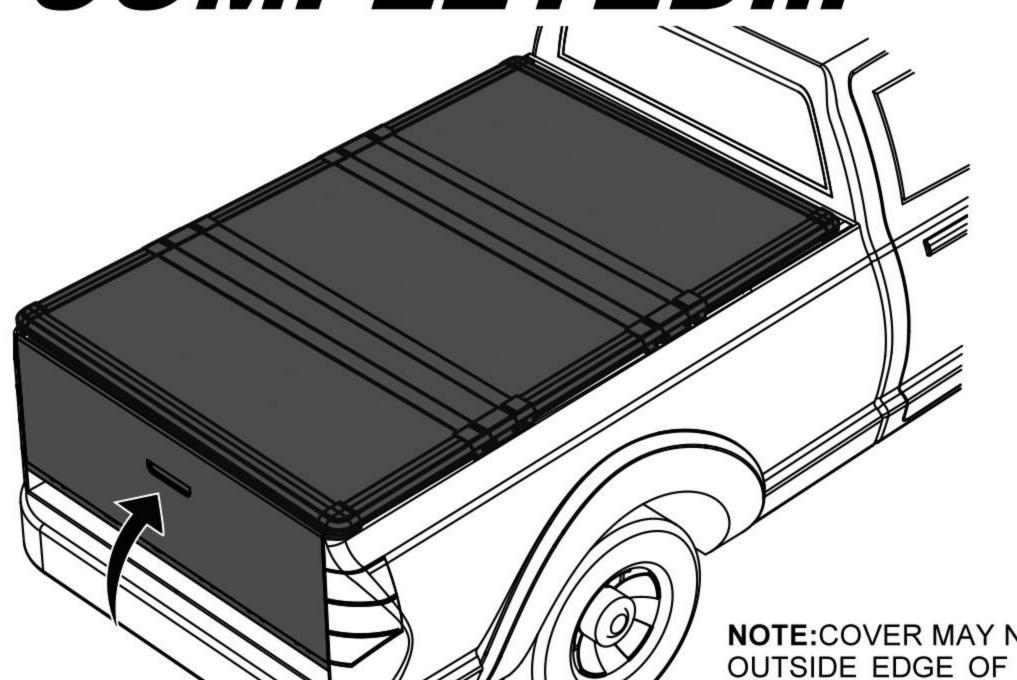

All clamps must be firmly in contact with the lip of the metal bed rail to ensure a firm cover. Finally, close the tailgate to complete the installation.

NOTE:COVER MAY NOT COMPLETELY COVER TO THE OUTSIDE EDGE OF THE BED RAILS DUE TO SLIGHT DIFFERENCE IN TRUCK BED SHAPE FOR DIFFERENT YEAR MODELS

When it is necessary to completely foldthe cover, place the rear clamps correctly clamping rubber block, and then fold it.

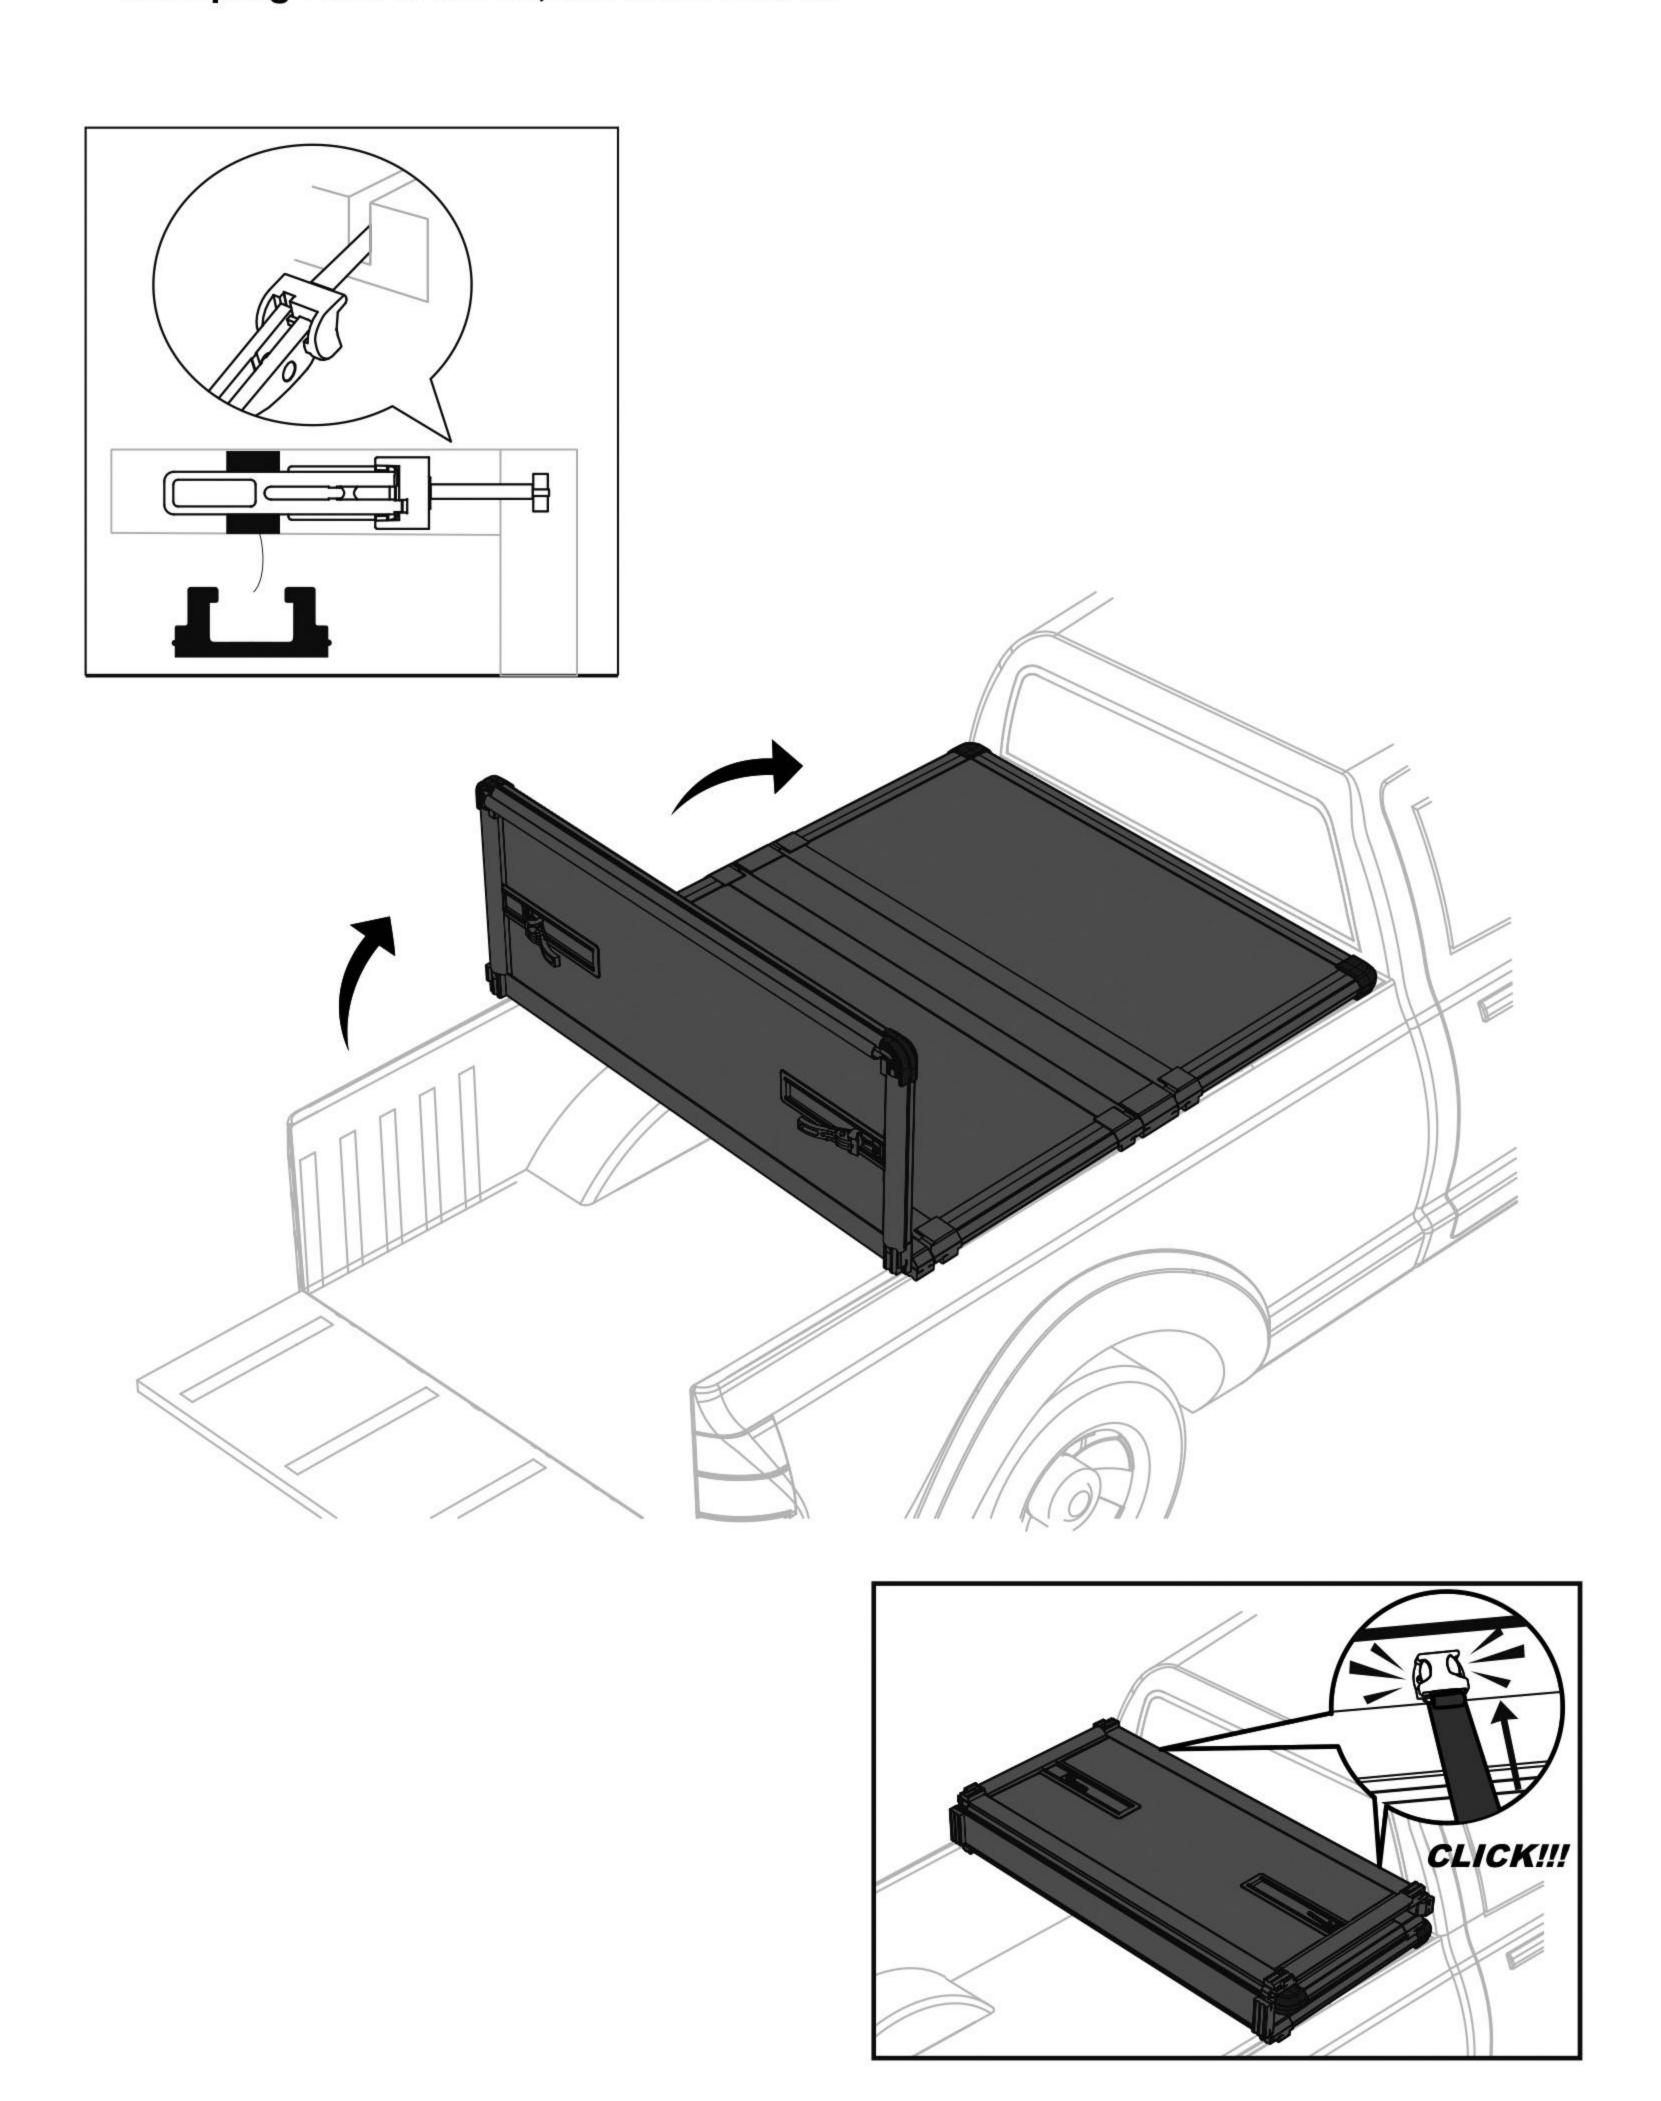



SPECIAL INSTRUCTIONS FOR ALTERNATIVE BRACKETS

SUPPLEMENT TO INSTALLATION INSTRUCTIONS (Only for models with utility track)


Use for NISSAN FRONTIER

You will need:

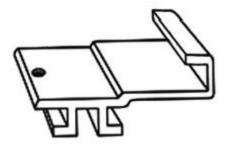


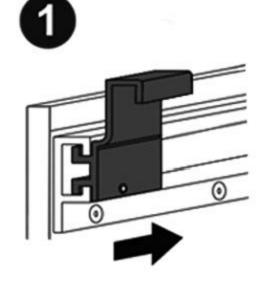

 Slide aluminum blocks into track

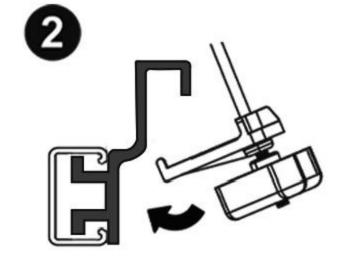

 Attach Front Clamps on to aluminum block

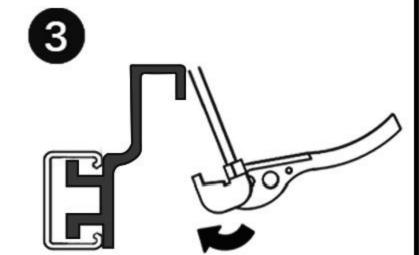


 Attach Rear Clamps on to aluminum block


Use for TOYOTA

You will need:




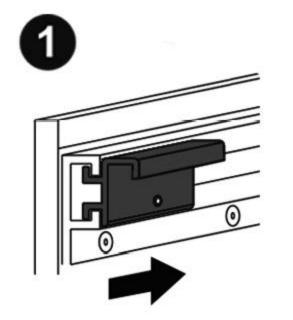

 Slide aluminum blocks into track

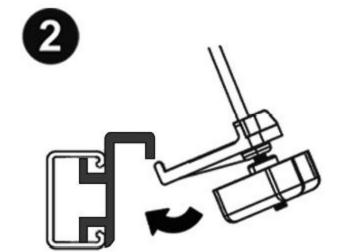

 Attach Front Clamps on to aluminum block

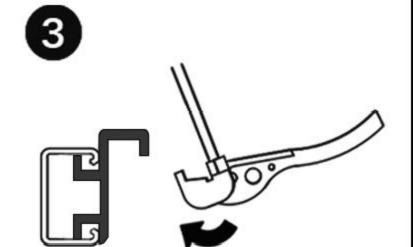


 Attach Rear Clamps on to aluminum block


Use for JEEP GLADIATOR

You will need:




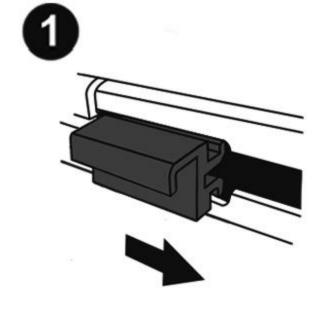

 Slide aluminum blocks into track

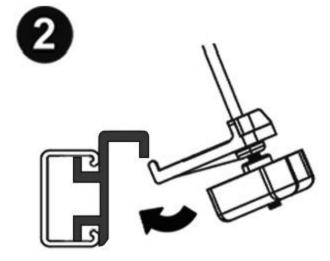

 Attach Front Clamps on to aluminum block

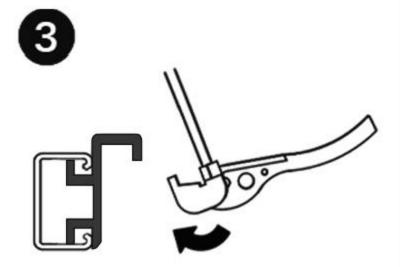

 Attach Rear Clamps on to aluminum block Products may be damaged during the transportation process. If any damage occurs, please contact us immediately or replace the damaged parts with our additional accessories.

