Programming Guide

Hanwha Vision Open Platform v1.0.0 2025-01-02

Copyright

© 2024 Hanwha Vision Co., Ltd. All rights reserved.

Restriction

Do not copy, distribute, or reproduce any part of this document without written approval from Hanwha Vision Co., Ltd.

Disclaimer

Hanwha Vision Co., Ltd. has made every effort to ensure the completeness and accuracy of this document, but makes no guarantee as to the information contained herein. All responsibility for proper and safe use of the information in this document lies with users. Hanwha Vision Co., Ltd. may revise or update this document without prior notice.

Contact Information

Hanwha Vision Co., Ltd. Hanwha Vision 6, Pangyo-ro 319beon-gil, Bundang-gu, Seongnam-si, Gyeonggi-do, 13488, KOREA

www.hanwhavision.com

Hanwha Vision America 500 Frank W. Burr Blvd. Suite 43 Teaneck, NJ 07666

hanwhavisionamerica.com

Hanwha Vision Europe Heriot House, Heriot Road, Chertsey, Surrey, KT16 9DT, United Kingdom hanwhavision.eu



Table of Contents

1. Introduction to Hanwha Vision Open Platform	4
1.1. Overview.	4
1.2. Key Features of Hanwha Vision Open Platform	4
1.3. What's New in Hanwha Vision Open Platform SDK	5
1.3.1. New Features in v5.00	5
1.3.2. New Features in v4.02	5
1.3.3. New Features in v4.01	5
1.3.4. New Features in v4.00	6
1.3.5. New Features in v3.60	6
1.3.6. New Features in v3.52	6
1.3.7. New Features in v3.51	6
1.3.8. New Features in v3.50.	7
1.3.9. New Features in v3.00	7
1.4. Prerequisites	7
1.4.1. Open Platform Resources of WN5 Series.	8
1.4.2. Open Platform Resources of S3L Series.	8
1.4.3. Open Platform Resources of CV2x Series	8
1.4.4. Open Platform Resources of CV22S66 Series	8
1.4.5. Open Platform Resources of WN7 Series.	8
1.4.6. Open Platform Resources of MT8137 Series	9
2. Developing an Application	9
2.1. Prerequisites	9
2.2. Installing the Open Platform SDK	9
2.2.1. Running Docker Images (Linux, Mac)	9
2.3. CLI Guide	10
2.3.1. opensdk_new_project	10
2.3.2. opensdk_install	11
2.3.3. opensdk_check_platform	11
2.3.4. opensdk_packager	11
2.4. Folder and File Structure	12
2.5. Creating an Application Using CLI	14
3. Debugging	17
3.1. Usage of Remote Debug Viewer	17
4. Managing an Application in Web Viewer	18
4.1. Upgrading Camera Software	18
4.2. Installing an Application to the IP Camera	18

	4.3. Executing an Application	20
	4.4. Checking Application Health	20
	4.5. Application Settings	21
	4.6. Application Manager	21
	4.7. Stopping an Application	22
	4.8. Uninstalling an Application	22
5.	Sample Application	22
6.	Technical Support.	23

1. Introduction to Hanwha Vision Open Platform

1.1. Overview

The Hanwha Vision Open Platform uses a standardized API to enable you to add additional functions to an IP camera without changing the existing software.

This platform allows you to download and install third-party applications on an IP camera to integrate an IP camera with other systems and use it for various purposes. For example, the end user can install a platform for an access control system, and the IP camera can be easily integrated with the access control system. Alternately, the end user can install an application that provides video analysis functions like people counting, which enables the use of an IP camera to control a system.

Hanwha Vision Learning Center

Hanwha Vision Learning Center provides the necessary basic knowledge for developing an application using the open platform SDK v5.x.

In the Hanwha Vision Open Platform v5.x Development Course, you will be able to:

- · Gain basic knowledge of developing applications with Hanwha Vision's Open Platform
- Understand materials provided by Hanwha Vision for developers
- · Set up the development environment
- Develop and test an application using sample programs

To join the course, visit the website at:

https://learn.hanwhavision.com/learn/course/157/hanwha-vision-open-platform-v5x-development

1.2. Key Features of Hanwha Vision Open Platform

The Hanwha Vision Open Platform SDK provides five key functions: real-time media streaming, video control, video analytics, recording, and video setup. In addition to these features, the SDK APIs provide several events and network functions. Refer to the SDK API document.

- · Real-time media streaming
 - Open Platform SDK supports various media formats: raw video (yuv format), encoded video (MJPEG, H.264, H.265 format), and encoded audio (G.711 format).
 - e.g., an application provides video analytics functions by using your unique analysis algorithm.
- Video control
 - By using video profile APIs, you can make an application that can change and control video.
 You can change the video source to NTSC or PAL format and add or delete a video profile

according to their your own purposes.

e.g., an application connects to VMS (Video Management System) and controls the video stream provided to end users.

Video analytics

- Open Platform provides basic video analysis that is used by IP cameras: motion detection, face detection, appear/disappear, tampering event, intelligent video, enter/exit, and alarm event.
 - e.g., an application triggers an alarm when an event has occurred.

Recording

- With the SDK APIs, you can store video streams on SD cards and NAS storage. End users can store the video streams on an SD card without an extra storage system and back them up easily.
 - e.g., an application stores a video stream on an SD card when motion is detected.
- Video setup
 - You can set the video according to your preference. SDK APIs provide functions to set or get privacy mask for videos.
 - e.g., you can store the video stream with a private mask on a SD card or in storage.

1.3. What's New in Hanwha Vision Open Platform SDK

1.3.1. New Features in **v**5.00

- Added a MT8137 toolchain
 - · Added a toolchain to build a Q dual light camera

1.3.2. New Features in v4.02

- · Command to run Docker
 - Modified the command to run Docker
 - Inserted a command for conveniently installing Debian
- Removed unsupported models
 - Removed models related to OP
- Created and registered new documents related to troubleshooting

1.3.3. New Features in v4.01

- Support docker
 - Added a Docker image file to provide a development environment.
- · Add a CLI command

- Added CLI (Command line interface) to simplify project creation and setup and to disable Eclipse plugins.
- No more support for Eclipse plugins
 - Replaced Eclipse plugins with CLI.

1.3.4. New Features in v4.00

- Application signature
 - Added the application signature feature to prevent security risks, such as application tampering.
- · SD card-dedicated use
 - Added an API that enables you to dedicate the usage of their SD cards to open platform applications only.
- Raw image pointer direct access (for WN7 or later)
 - Added a feature that enables you to directly access the raw image pointer so that you can use raw images with up to 4K resolution.

1.3.5. New Features in v3.60

- Combined compilation environment
 - Combined a 32-bit-based platform with a 64-bit-based platform to allow operation in the same environment.

1.3.6. New Features in v3.52

- · Dynamic event
 - The application can send events for regular templates.
 - Refer to the SDKAPI document
- · NAND flash space
 - Application can use NAND flash space.
 - Refer to the SDKAPI document
- Bug fixes
 - Fixed web functions
 - Fixed Eclipse plugin bugs (Install to Camera: port, file size)
- · Internal modification
 - Synchronized with X series camera firmware

1.3.7. New Features in v3.51

- · Internal modification
 - Synchronized with X series camera firmware

1.3.8. New Features in v3.50

- SUNAPI API
 - Added an API for using SUNAPI in the application
- RS-485 event
 - Added an event to transfer RS-485 data by using the terminal
- · Proxy API
 - Added an API for setting proxy configuration
- Log event
 - Added output events to write the event log on camera
- CPU/Memory limit
 - Modified CPU/Memory usage limit
 - An event occurs when the system total usage is over 80% (Max 3 times).
- · Fixed defective issues
 - Included improved performance caused by VOC and defective issues
- · Upgraded Debian
 - Added sample applications on Debian (/opt/opensdk/opensdk-3.50/SampleApplication)
- · Upgraded to the latest version of libraries

1.3.9. New Features in v3.00

- · Raw audio
 - Open Platform SDK supports raw audio
 - e.g., an application provides audio analytics functions using your unique analysis algorithm.
- Application filename
 - The application filename can be changed after compiling
 - OriginalAppName_v{version}.cap
 - e.g., ServerPushMJPEG.cap → ServerPushMJPEG_v170414.cap
- JAVA 8
 - Updated the development environment
- Eclipse Neon2
 - Updated the development environment

1.4. Prerequisites

1.4.1. Open Platform Resources of WN5 Series

X series 2 mega (XNB-6000 and so on), 5 mega (XNB-8000 and so on)

	System TOTAL	Open Platform Usability Range
CPU	3040 DMIPS	Up to 80% of the system
RAM	352 MB	Up to 80% of the system
Flash	256 MB	20 MB

1.4.2. Open Platform Resources of S3L Series

Q series 2 mega (QNO-6082R and so on), 5 mega (QNO-8080R and so on)

	System TOTAL	Open Platform Usability Range
CPU	2040 DMIPS	Up to 80% of the system
RAM	225 MB	Up to 80% of the system
Flash	256 MB	8 MB

1.4.3. Open Platform Resources of CV2x Series

P series AI camera (PNO-A9081R and so on)

	System TOTAL	Open Platform Usability Range
CPU	9273.6 DMIPS	Up to 80% of the system
RAM	4 GB	Up to 80% of the system
Flash	512 MB	150 MB

1.4.4. Open Platform Resources of CV22S66 Series

LPR camera (TNO-7180R and so on)

	System TOTAL	Open Platform Usability Range
CPU	9273.6 DMIPS	Up to 80% of the system
RAM	2 GB	Up to 80% of the system
Flash	512 MByte	183 Mbyte

1.4.5. Open Platform Resources of WN7 Series

X series 4K camera (XNV-9082R and so on)

	System TOTAL	Open Platform Usability Range
CPU	3420 DMIPS	Up to 80% of the system
RAM	4 GB	Up to 80% of the system

	System TOTAL	Open Platform Usability Range
Flash	512 MB	50 MB

Most SDK Hanwha Vision cameras support Hanwha Vision Open Platform.

Refer to the Hanwha_opensdk_camera.pdf file on our STEP site to check the SOC information, the supported SDK version, and the firmware version by camera models.

https://step.hanwhavision.com

1.4.6. Open Platform Resources of MT8137 Series

Q dual light series (QNE-C9013RL and so on)

	System TOTAL	Open Platform Usability Range
CPU	3420 DMIPS	Up to 90% of the system
RAM	2 GB	Up to 90% of the system
Flash	1 G B	50 MB

Most SDK Hanwha Vision cameras support Hanwha Vision Open Platform.

Refer to the Hanwha_opensdk_camera.pdf file on our STEP site to check the SOC information, the supported SDK version, and the firmware version by camera models.

2. Developing an Application

2.1. Prerequisites

To develop a Hanwha Vision Open Platform application, prepare the following:

- Operating system: Linux or Windows
- Docker
- · Code development editor

Note

Hanwha Vision Open Platform version 4.01 or higher supports application development using Docker. For information on versions earlier than version 4.01, visit our STEP site at https://step.hanwhavision.com.

2.2. Installing the Open Platform SDK

2.2.1. Running Docker Images (Linux, Mac)

Note

To run Docker images, install Docker first. For installing Docker, visit the site at https://docs.docker.com.

1. Access the Linux server with the sudo privilege (administrator privilege).

```
<user_id>@ubuntu# sudo su
```

2. Unzip the Opensdk_Docker_Image_5.00_R#_byJenkins.tar.gz. in the workspace. And load the compressed file as a Docker image.

```
root@ubuntu:/home/<user_id># sudo tar zxvf
Opensdk_Docker_Image_5.00_R#_byJenkins.tar.gz
root@ubuntu:/home/<user_id># docker load -i wop_<version>.tar
```

3. Check the loaded image.

```
root@ubuntu:/home/<user_id># docker images
```

4. Run the image as a container to access the Hanwha Vision Open Platform5.00 environment. If the shared folder locates "/mnt", run the command below:

```
root@ubuntu:/home/<user_id># docker run --rm -it --volume="$PWD:/mnt"
wop:5.00 /bin/bash

If you use Window Terminal, run the command below:
C:Opensdk_Docker_Image_5.00_R15_byJenkins> docker run --rm -it
--volume="$(pwd):/mnt" wop:5.00 /bin/bash
```

5. Exit the container.

```
root@ubuntu:/home/<user_id># exit
```

2.3. CLI Guide

2.3.1. opensdk_new_project

Create a new template code.

```
opensdk_new_project -n $\{app_name} -v $\{app_version} -s $\{sdk_version}
```

```
-p $\{platform}
```

Example:

```
~# opensdk_new_project -n WOP -v 1.0 -s 5.00 -p WN7
```

If you want to add multiple platforms, add as many -p options as you want.

Example:

```
~# opensdk_new_project -n WOP -v 1.0 -s 5.00 -p WN7 -p CV2X
```

2.3.2. opensdk_install

Install the application on the camera.

```
opensdk_install -a $\{app_name} -i $\{camera_ip} -u $\{camera_id} -w
$\{camera_password}
```

Example:

```
~# opensdk_install -a WOP -i 192.168.1.1 -u admin -w password123!
```

2.3.3. opensdk_check_platform

Check the camera's platform.

```
opensdk_check_platform -m $\{camera_model_name}
```

Example:

```
~# opensdk_check_platform -m XNV-9082R
```

2.3.4. opensdk_packager

Compress and encrypt the application files.

```
opensdk_packager
```

Example:

~# make clean; make; opensdk_packager

2.4. Folder and File Structure

The folder and file structures of the application are as follows:

—Includes
bin
html
├──css
—fonts
├──images
├──styles
—index.xml
—inc
—res
└─images
—src
└──[App_name].cpp
—IpCameraManifest.xml
├──Application Overview
│

L—Application Configuration
└──Application Settings
├─Input Events
L—Permission
Makefile
—libs
└──App_name.cap

Includes

Contains the paths to header files and toolchains required to build a project.

bin

Contains bin files generated when building a project.

html

Contains images, css, fonts, styles, and index.html files to configure the web pages.

inc

Contains header files.

res

Contains image files used in applications.

src

[App_name].cpp – defines application operations, receives data and events, and sends responses accordingly.

IpCameraManifest.xml

- Application overview
 - Application details: Overall information of the application (application name, application location, version, vendor, description, target SDK, min SDK required, and max SDK)
 - Supported platforms: SOC information of cameras to be installed in the application (you can make changes)

- Application configuration: Key and Value information (you can make changes)
- Application settings
 - Input events: Determines whether to receive information such as encoded video, raw video, raw audio, and VA events.
 - Permission: Determines whether to allow PTZ, Device, and SD card access.

libs

Contains library files.

Makefile

Builds codes to create binary files.

App_name.cap

The executable file to be installed on the camera created via the **opensdk_packager** command.

2.5. Creating an Application Using CLI

The following is an example of creating an application named "Hanwha", building it, and installing it on an XNV-9082R camera.

Note

Check the Hanwha Vision Open Platform version supported by the camera and use the SDK of the applicable version. The **CGI** command to check the Hanwha Vision Open Platform version is as follows:

http://<camera IP>/stw-cgi/system.cgi?msubmenu=deviceinfo&action=view

1. Run the **CGI** command to check the Hanwha Vision Open Platform version supported by the XNV-9082R camera model.

http://192.168.1.100/stw-cgi/system.cgi?msubmenu=deviceinfo&action=view

2. You will receive the following response saying: "You should use Hanwha Vision Open Platform SDK 5.00 for application development."

```
Model=TNM-C4940TDR
...
OpenSDKVersion=5.00_230629
```

- 3. From the Linux editor, check the platform of the TNM-C4940TDRcamera model in the document (Hanwha_opensdk_camera_XXXXXXXX.pdf)
- 4. Create a template code to develop the version 1.0 application named "Hanwha" under the SDK version 5.00. The Hanwha application will be used on the camera developed under the WN7 platform.

```
# opensdk_new_project -n hanwha -v 1.0 -s 5.00 -p WN7
```

- 5. Go to the folder that contains the application.
- 6. Build, encrypt, and package the # cd Hanwha application.

```
Hanwha# make clean;make;opensdk_packager
```

7. Folders and their structures are as follows: For a detailed description of each folder and file, refer to "2.4 Folder and File Structure".





Caution

For a platform that requires a certificate, if it is not located under "/opt/opensdk/signature," the application won't be installed on the camera correctly.

Issuing a certificate

- Download a test key and a test certificate (valid for 3 months) from our STEP site during the application development phase.
- After registering an application you've developed on our STEP site, request a signature key and a certificate for it.
- Request a signature key and certificate on our STEP site. You will receive them via email.
- Save the signature key and certificate received from Hanwha Vision under the following directory on your development PC:
 "/opt/opensdk/signature"
- /opt/opensuk/signature
- Execute opensdk_packager, and then an electronically signed package file will be created.
- When installing an open platform application on a camera, the camera software checks the signature and certificate of the application and only installs applications free of forgery.
- 8. Install the Hanwha application on the camera with the IP address of 192.168.1.100, provided that

the camera access ID and password are admin and test123456 respectively. For how to install an application from the camera web viewer, refer to "4.2 Installing an Application to the IP Camera".

hanwha# opensdk_install -a hanwha -i 192.168.1.100 -u admin -w test123456

3. Debugging

A Remote Debug viewer is a command-line application used to view logs from a third-party application. Execute this application, included in the SDK package, from the Linux command prompt.

RemoteDebugViewer is located in /opt/opensdk/opensdk-<version>/common/bin.

Or, you can find it easily by running the command below:

which RemoteDebugViewer

3.1. Usage of Remote Debug Viewer

Use the following API in a third-party application to get logs from the Remote Debug viewer:

```
void debug_message(const char *fmt, ...);
```

Input arguments for the Remote Debug viewer:

- -i IP address of IP camera
- -p HTTP port number on IP camera
- -u User name of IP camera
- -w Password of IP camera
- -d Viewer port number
- -a Application name

Example:


```
# ./RemoteDebugViewer -i 192.168.1.100 -p 80 -u admin -w 4321 -d 8080 -a ServerPushMJPEG
```

4. Managing an Application in Web Viewer

4.1. Upgrading Camera Software

To properly manage the application on the camera, use the latest firmware.


- 1. Download the latest firmware file from Hanwha Vision.
- 2. Log in to the IP camera.
- 3. Go to [Setup] > [System] > [Upgrade/Restart].

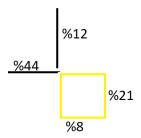

4. Click the [...] button and select the firmware file. Click [Upgrade].




5. The camera will shut down while upgrading, and then it will reboot.

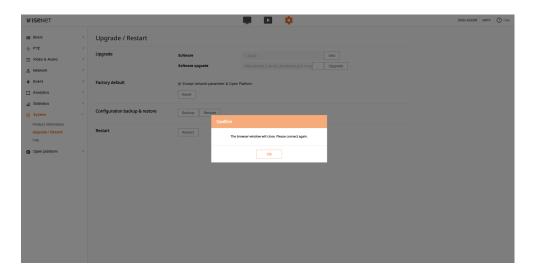

4.2. Installing an Application to the IP Camera

- 1. Get a .cap file of the application to install.
- 2. Log in to the camera.


Go to [Setup] > [Open platform]. You can check the current open platform version that the camera supports. (For example, you can see the version, 5.00_220216, on the image below.)

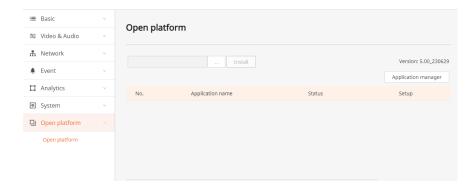


3. Click the [...] button on the top and locate the installation package (.cap file).



- 4. Click [Install]. Then the application will be uploaded, and a window will pop up asking if you want to grant permission to the application.
- 5. Click [OK] to grant permissions and install the application. The application will be installed, and a message box will be shown.

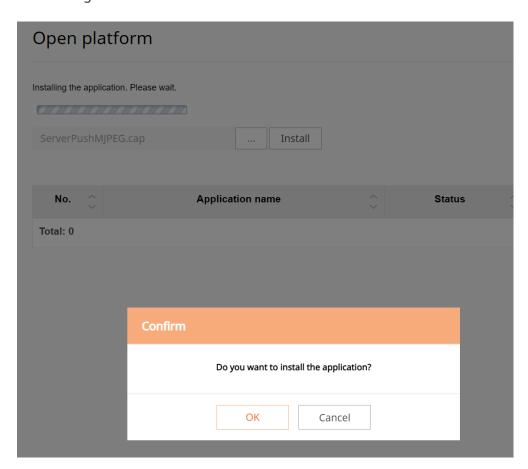


- 6. If the cap file is not appropriate, it will not be installed, and an error message will appear.
- 7. It will appear in the list of installed applications. The status will be changed to "Installed".

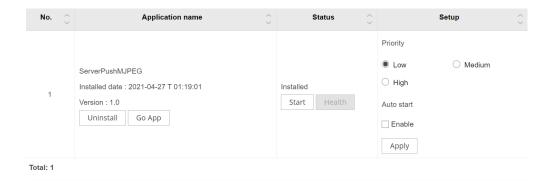


4.3. Executing an Application

Follow the steps below:

1. Under [Status] click [Start]. The application will start, and the status will be changed to "Running".

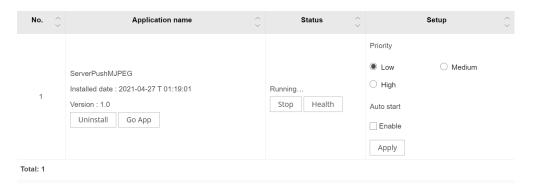

2. To view the running application, click [Go App].

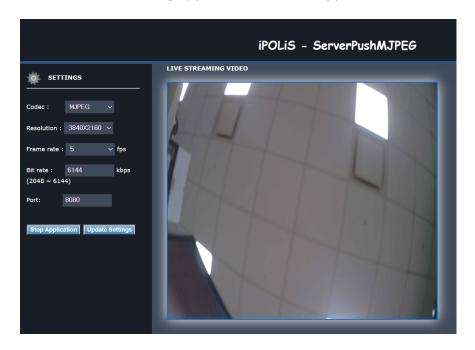


4.4. Checking Application Health

Check the health of any running application.

1. Under [Status] click [Health]].


2. A window pops up, showing the CPU usage, memory usage, thread count, and duration of the application. Click [OK] to close the window.

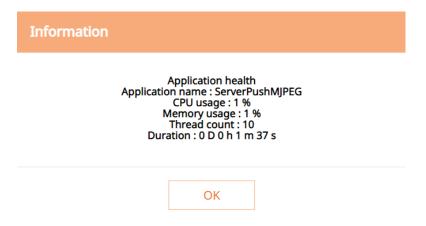

4.5. Application Settings

Set the priority of an application and set the auto-start option.


- 1. In [Priority], you can set the priority among running applications. If the resource usage of the whole camera (including the main task of the camera and applications) becomes too high, the application set as "low priority" will close first.
- 2. In [Auto start] select [Enable] to execute the application automatically when the camera is powered on and the main task is executed.
- 3. Click [Apply] to apply the changes. A success message window pops up.

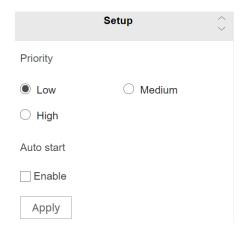

4.6. Application Manager

Like the [Health] function, the camera gives information on all running applications when you click [Application manager].

- 1. Click [Application manager].
- 2. A window pops up, showing CPU usage, memory usage, thread count, and duration of all running applications.
- 3. To close the application, click [Kill App].

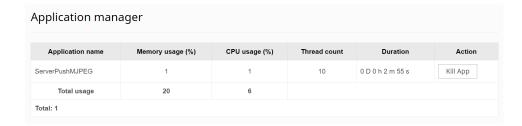


4.7. Stopping an Application

To stop a running application, click [Stop]. Then the status will thereafter be changed to "Stopped".

4.8. Uninstalling an Application

- 1. To uninstall an application, click [Uninstall].
- 2. Click [OK] to confirm the uninstallation.
- 3. The application will be removed from the list of installed applications.

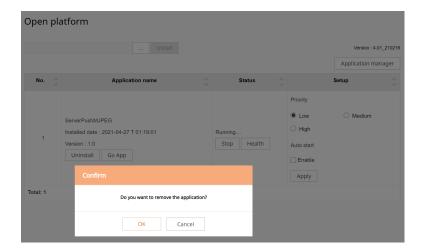


5. Sample Application

Various sample application files are available from the Hanwha Vision Open PlatformSDK.

You may find sample application files under the following path:

opt/opensdk/opensdk-\$\{SDK_VERSION}/SampleApplication

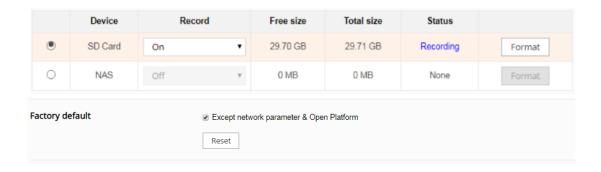

6. Technical Support

The company operates a membership program for partners who use Hanwha products. Visit our STEP site at:

https://step.hanwhavision.com

For those who signed up as an application or technology partner at the initial subscription on out STEP site, the following services are available for the Open Platform SDK.

- · Download the SDK versions.
- SDK version and platform information supported by camera models.
- AppTest.key and AppTest.crt are available to be downloaded for the application signing test.
- Personal keys and certificates are issued in order to install the developed apps on cameras.

If you have any inquiries about the development of the Hanwha Vision Open Platformapplication, visit our STEP site and select [Help Desk] > [Q&A].