
# Part 0xE

# CHAPTER 3

Architecture and Organization

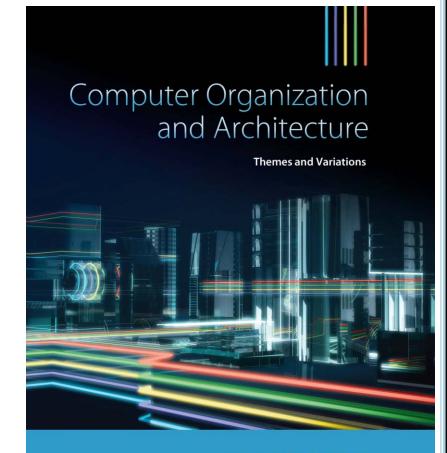

Alan Clements

1

These slides are being provided with permission from the copyright for in-class (CS2208B) use only. The slides must not be reproduced or provided to anyone outside of the class.

All download copies of the slides and/or lecture recordings are for personal use only. Students must destroy these copies within 30 days after receipt of final course evaluations.



Music: "Corporate Success" by Scott Holmes, used under <u>Attribution-NonCommercial License</u>


#### Subroutine Call and Return

- □ A *subroutine* (a.k.a. *function*, *procedure*, and *subprogram*) is a *set of instructions* that *may be repeatedly called* by a program to serve a given function.
- □ A *subroutine* gives the simplest form of program abstraction.
- ☐ There are two main characteristics in any subroutine.
  - 1. A subroutine can be called from anywhere in the program.
  - 2. Once the subroutine is completed, it should return to the instruction directly after the subroutine calling location.

#### Subroutine Call and Return

- $\square$  A hypocritical instruction  $BSR\ Proc\_A\ calls$  subroutine  $Proc\_A$ .
  - o The processor saves the address of the next instruction to be executed in a safe place, and
  - o loads the program counter with the address of the first instruction in the subroutine.
- $\square$  At the end of the subroutine a return from subroutine instruction, RTS,

o causes the processor to return to the point immediately following the

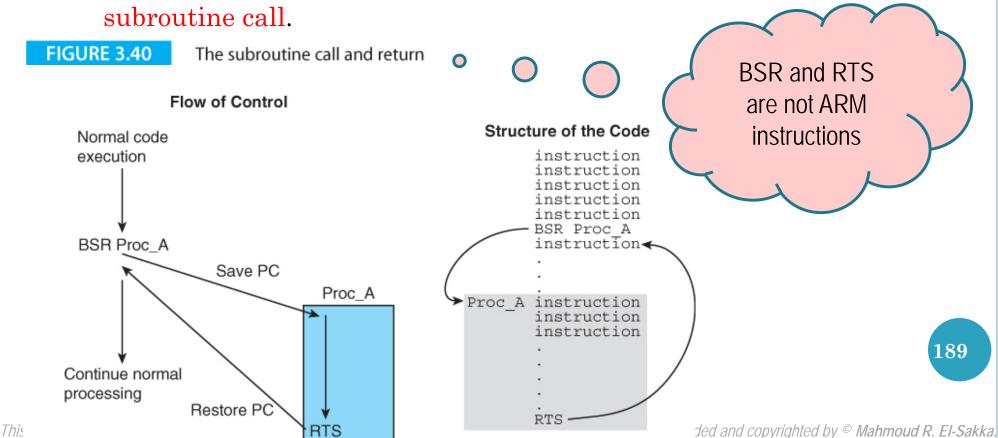

# **ARM Support for Subroutines**

- □ RISC processors (including ARM) do not provide a fully automatic subroutine call/return mechanism like CISC processors.
- □ ARM's branch with link instruction, BL,

branch with link instruction.

o automatically saves the return address in register r14.


This is the main difference between B and BL

☐ The branch instruction (Figure 3.41) has a 24-bit **signed** program counter relative offset (word address offset). ○○○

You may want to review slides 89 to 91 to remember how to encode and decode this 24-bit offset.

#### **FIGURE 3.41**

Encoding ARM's branch and branch-with-link instructions

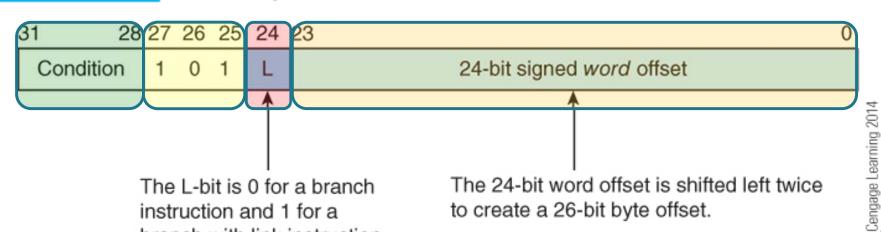

190

මු g I R. El-Sakka.

# **ARM Support for Subroutines**

- □ The *branch with link* instruction behaves like the branch instruction but the processor also copies the return address (i.e., the address of the next instruction to be executed following a return) into the link register **r14**.
- ☐ If you execute:

```
BL Sub_A ;branch to "Sub_A"; save return address in r14
```

ARM will take care of (reverse) the effect of the pipelining

- ☐ At the end of the subroutine you return by
  - o *copying the return address* in r14 to the program counter by executing:

```
MOV pc, lr
```

or

MOV **r15**, r14

Should it be LT

or LE?

# **ARM Support for Subroutines**

□ Suppose that you want to evaluate the following expression several times in a program.

```
if x > 0 then x = 16*x + 1 else x = 32*x
```

 $\square$  Assuming that **x** is loaded into **r0**, we can write:

```
Func1CMP r0,#0 ;test for x > 0

MOVGT r0,r0, LSL #4 ;if x > 0 x = 16*x

ADDGT r0,r0,#1 ;if x > 0 then x = 16*x + 1

MOVLT r0,r0, LSL #5 ;ELSE if x < 0 THEN x = 32*x

MOV pc,lr ;return by restoring saved PC
```

□ Consider the following invocation of the above subroutine.

Later on ...

```
LDR r0,[r5] ;get Q

BL Func1 ;Second call


;Q = (if Q > 0 then 16*Q + 1 else 32*Q)

STR r0,[r5] ; save Q
```

0x0000004C:

0x00000054: 00 00 00 00 00 00 00 00

### **ARM Support for Subroutines**

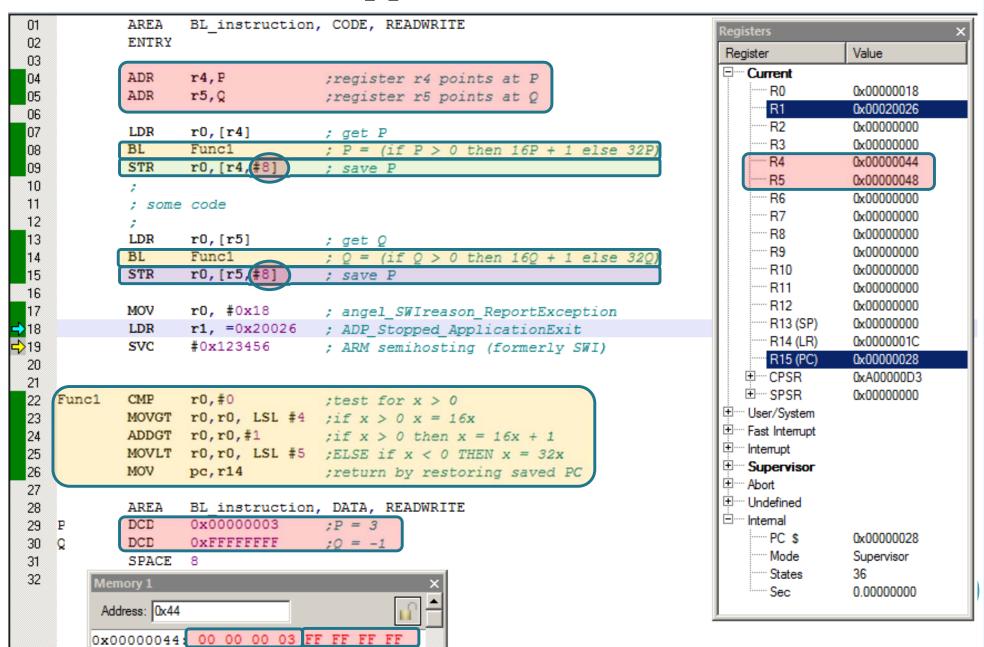

#### **Conditional Subroutine Calls**

- ☐ BL instruction can be conditionally executed.
- ☐ For example

```
CMP r9, r4 ; if r9 < r4
```

BLLT ABC ; then call subroutine ABC

- **BLLT** means
  - o Branch
  - o with Link
  - o execute on condition Less Than

#### Subroutine Call and Return

- ☐ An important application of the stack is to save the address to return to after executing the subroutine.

  This is another method to
  - implement a subroutine A subroutine call can be implemented by • call, other than using R14.
    - o Pushing the return address onto the stack
    - o Branching to the target address.
  - Typically, this operation is implemented in **CISC** processors.
  - Once the execution of the subroutine code is completed, a *return from subroutine* instruction is executed
    - o Popping the return address from the stake
    - o Copy the return address to the PC

196



#### Subroutine Call and Return

Grows up

□ Example

This is B. It is NOT BL

...
...
STR r15,[r13,#-4]!
B Target

The proper return addres

The address pushed onto the stake.

;assume that the stack grows towards
;low addresses and the SP points at
;the top item on the stack.

;pre-decrement the stack pointer AND; push the return address on the stack; jump to the target address (B not BL); to return here

Due to the pipeline effect, the PC value will not be the address of the current instruction. Instead, it will be current address +12. Yes, it is +12, not +8, as it is STR instruction

□ Because ARM does not support a stack-based subroutine return mechanism, you would have to write:

LDR **r12**,[r13],#+4

SUB **r15**,r12,#4

;get saved PC and post-increment
;stack pointer

fix PC and load into r15 to return


The 4 is subtracted to make the popped address pointing to the proper return address.


Why did not we copy the stack content directory to r15?

crements and used with permission. New content added and copyrighted by © Mahmoud R. El-Sakka.

#### **Nested subroutines**

FIGURE 3.48 An example of nested subroutines

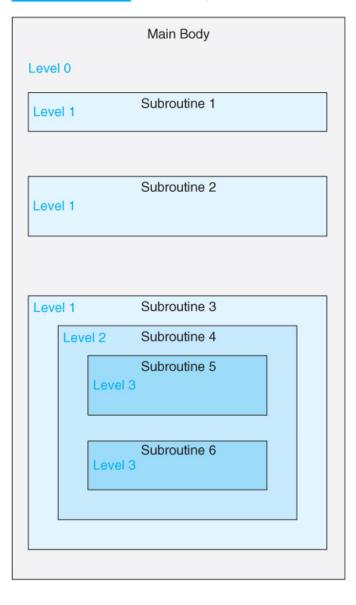

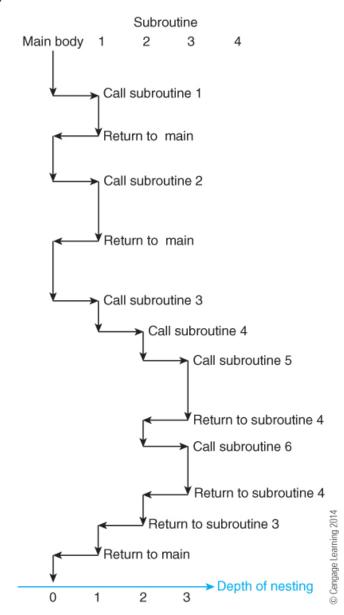


**197** 


Occupied memory

# Example of nested subroutine

Grows up

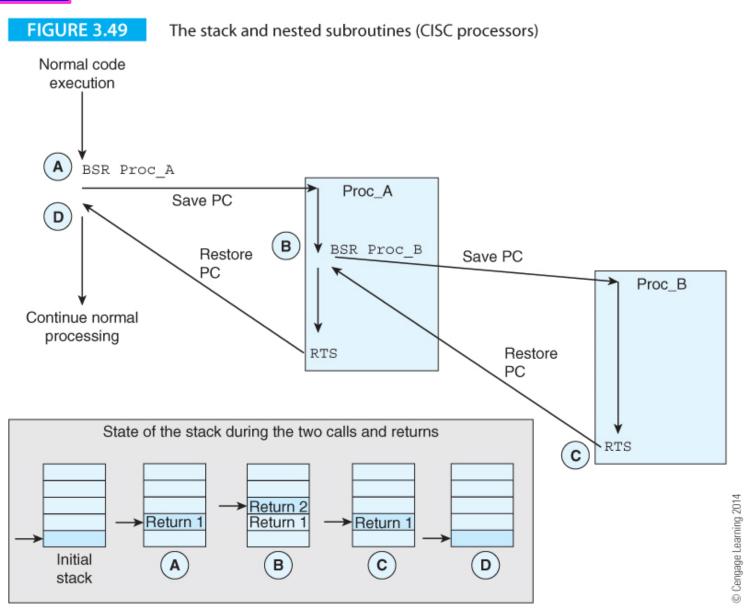

198

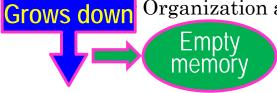

- □ A *leaf routine* doesn't call another routine; it's at the end of the tree.
- ☐ If you call a *leaf routine* with BL,

ADR sp, STACK

- o the return address is saved in link register **r14**.
- ☐ A return to the calling point is made with a MOV pc, lr.
- ☐ If the routine is *not a leaf routine*, you *cannot* call another routine *without* first saving the link register.

```
BL Fun_1 ; call a simple leaf routine
BL Fun_2 ; call a routine that calls a nested routine
Loop B Loop
```

```
Fun_1 NOP ; this is a leaf routine MOV pc,lr ; return by copying the LR value into PC
```


```
Fun_2 NOP
    STR lr,[sp],#4    ;save link register


BL Fun_1    ;call Fun_1 - overwrites the old LR
    LDR pc,[sp,#-4]! ;return by copying the LR value (from ;the stack) into PC
```


STACK SPACE 0x10 What kind of stack is used here?


199

- □ Subroutine Fun\_1 is a leaf subroutine that does not call any other subroutine and, therefore, we don't have to worry about saving the link register, r14, and we can return by executing MOV pc,lr.
- □ Subroutine Fun\_2 contains a call to another subroutine (i.e., nested subroutine) and we have to save the link register in order to return from Fun\_2.
- $\Box$  The simplest way of *saving* the link register is to *push* it onto the stack.
- ☐ To return from Fun\_2, we *restore the pushed* r14 into the program counter.

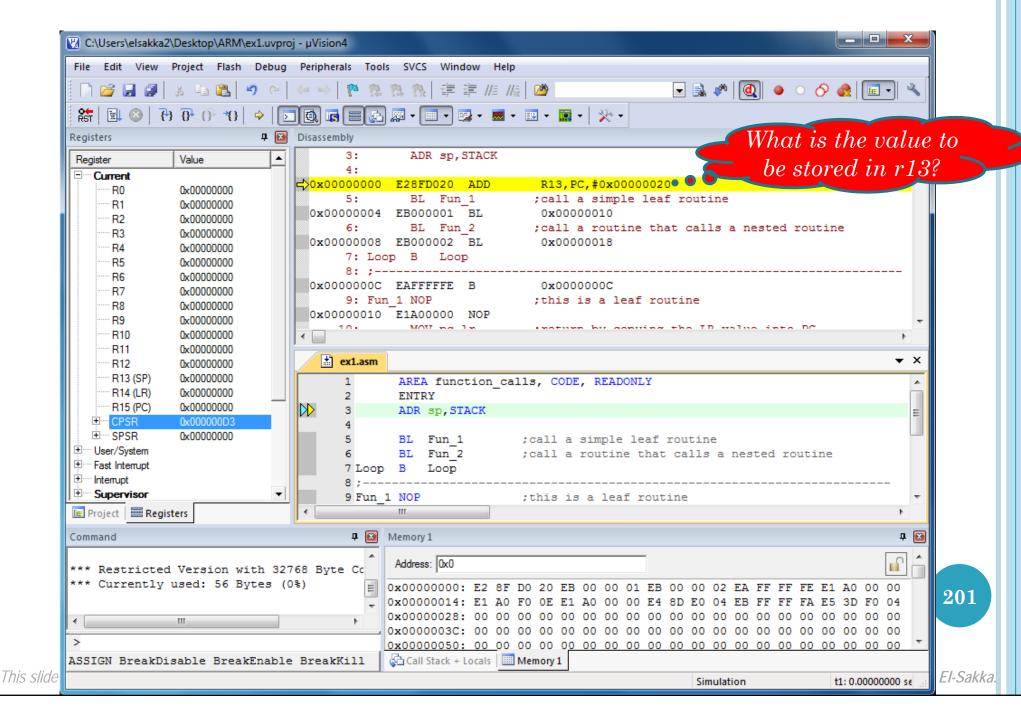

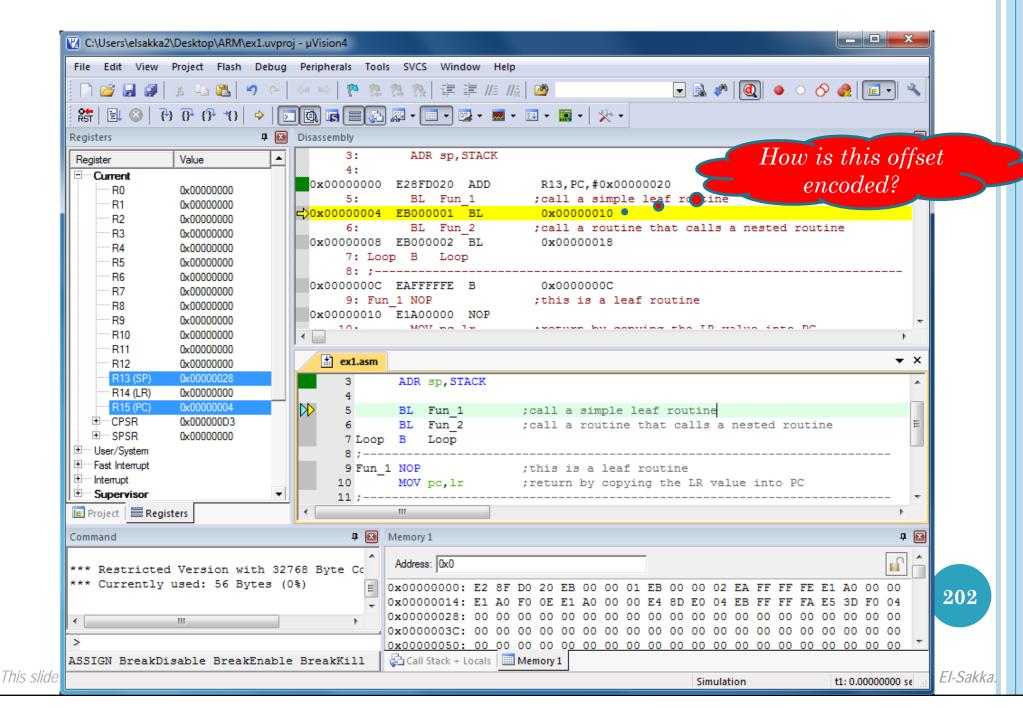


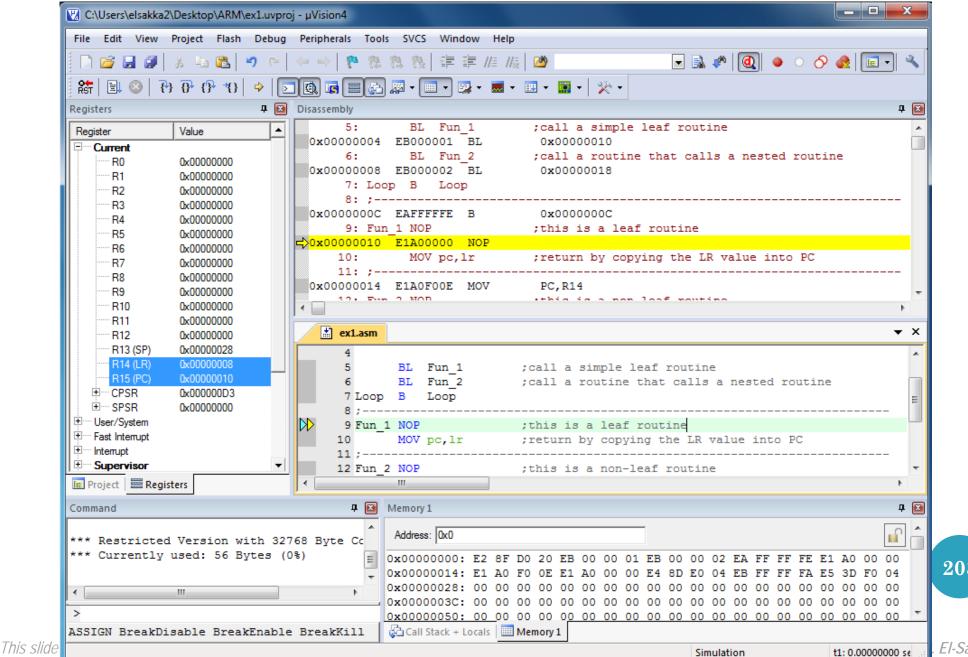


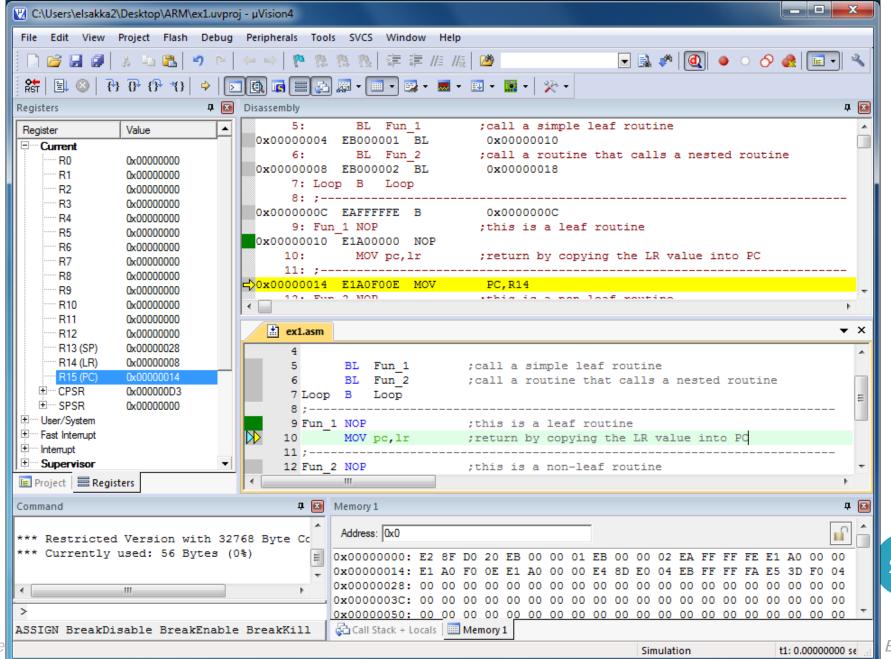

204

El-Sakka.

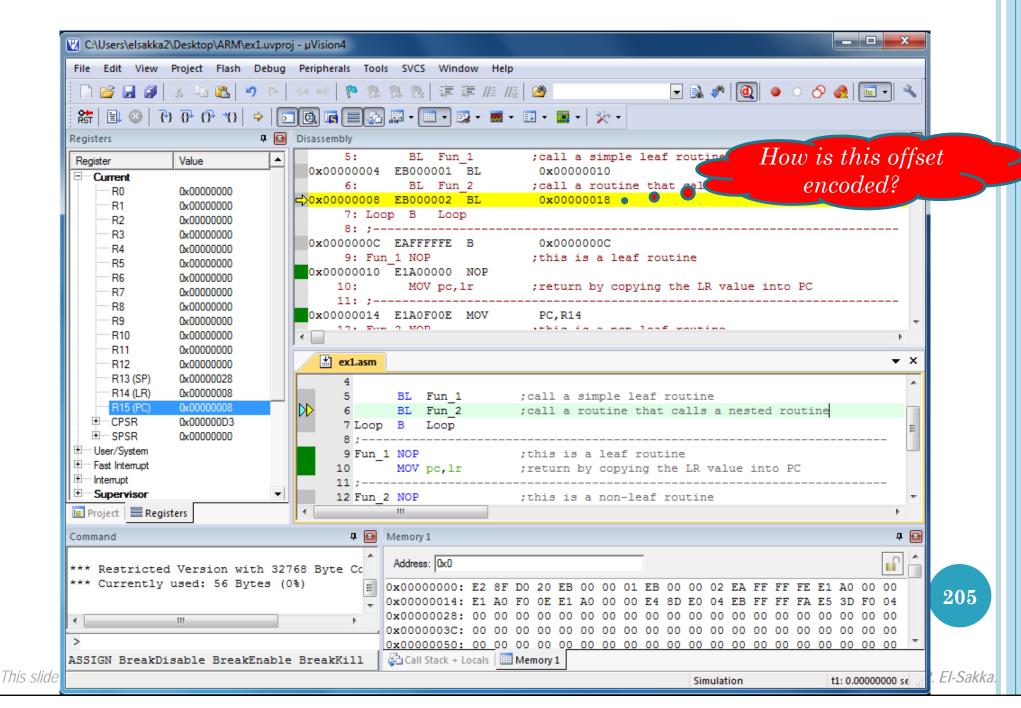


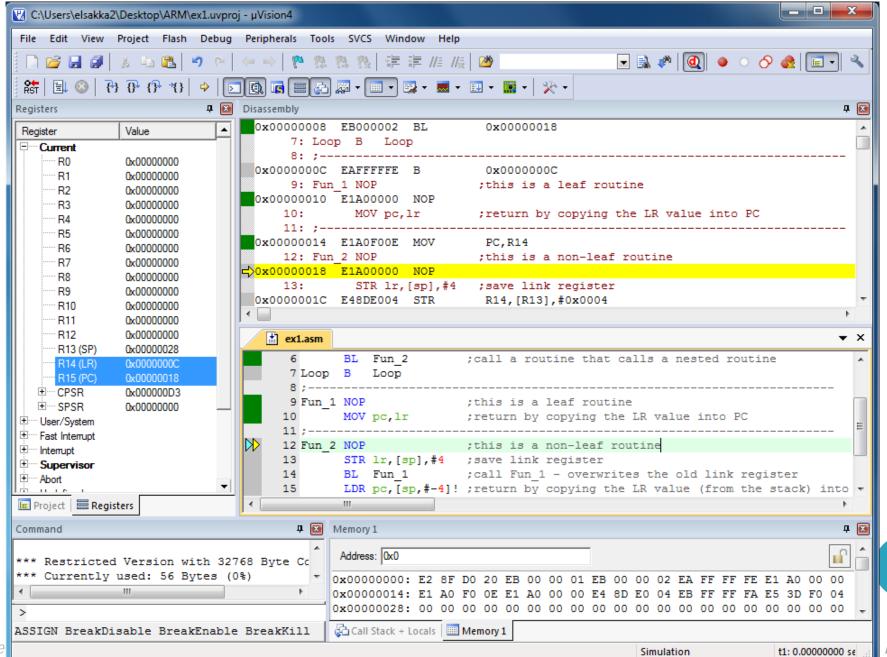



206


El-Sakka.




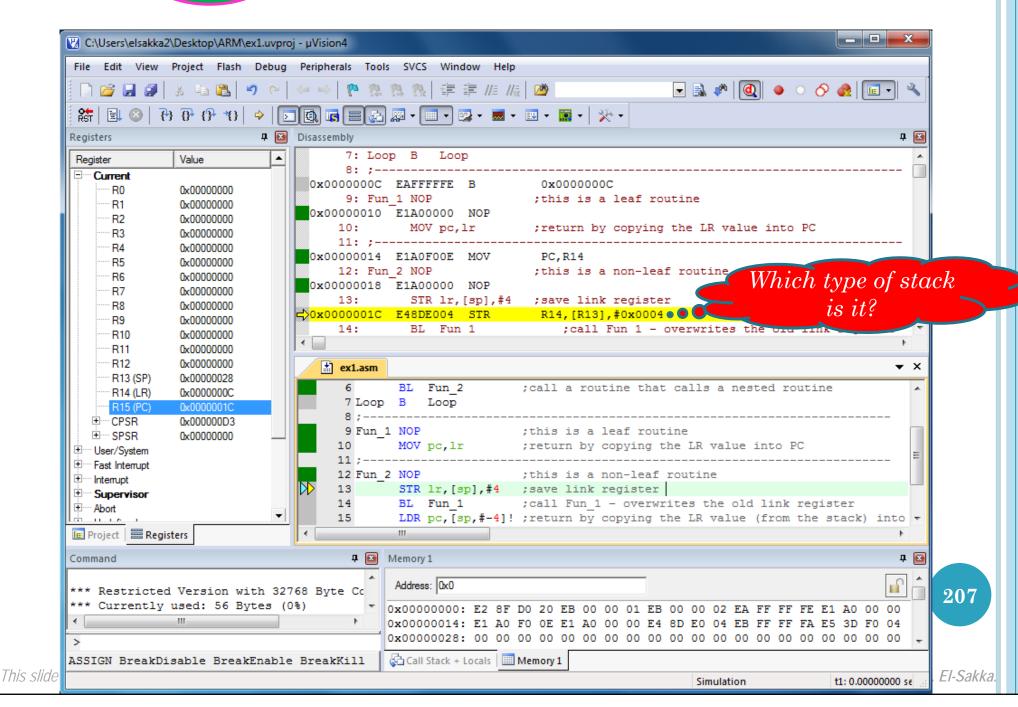

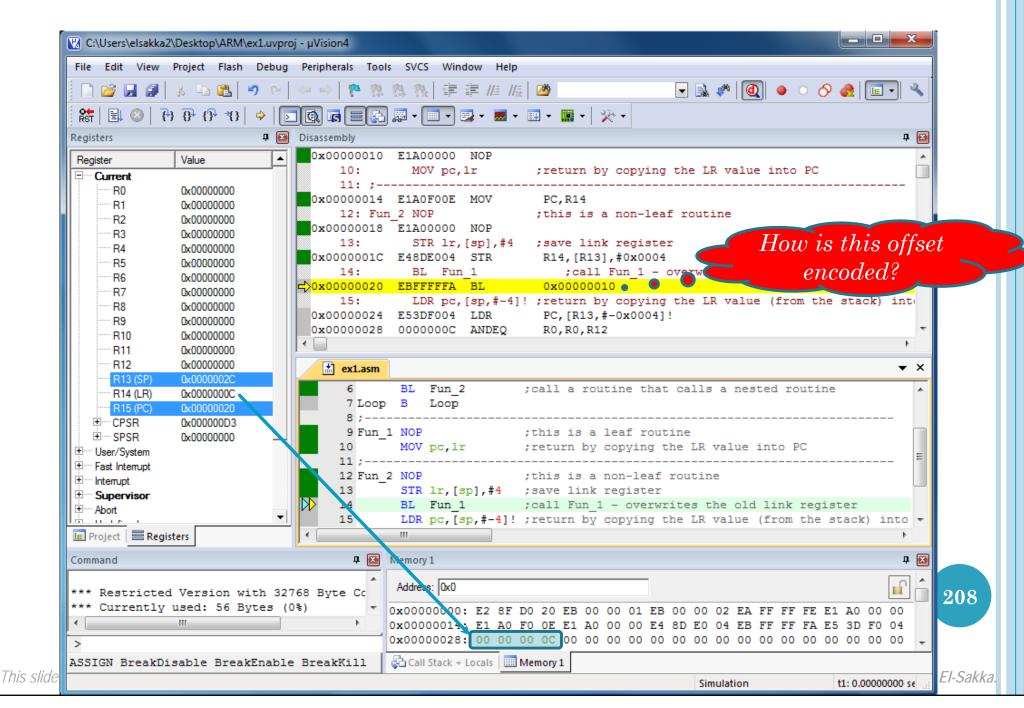

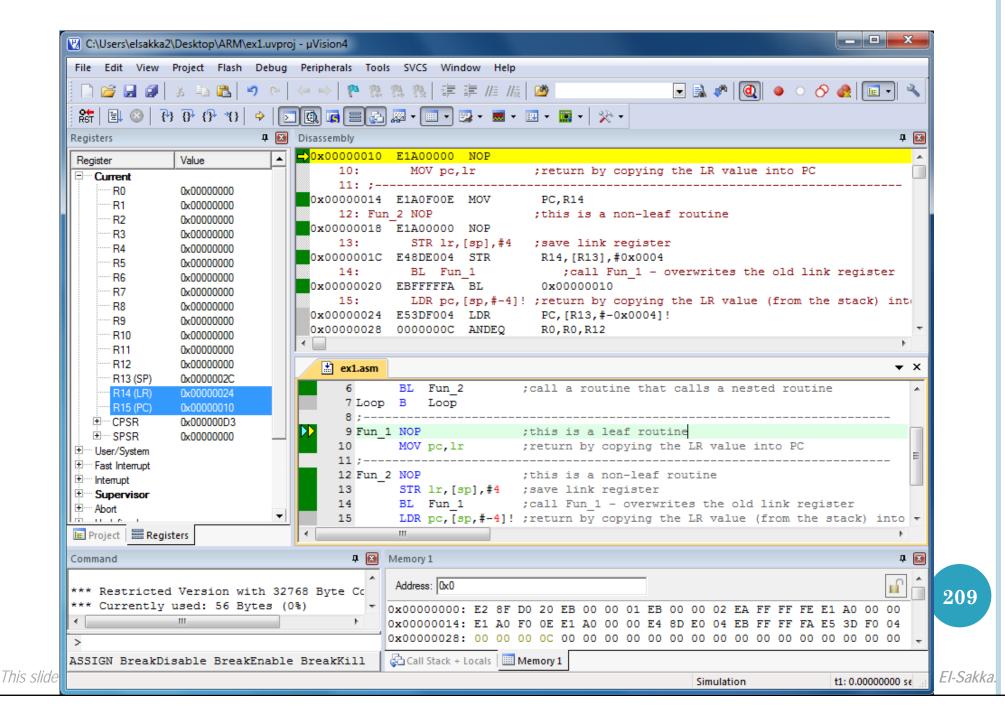


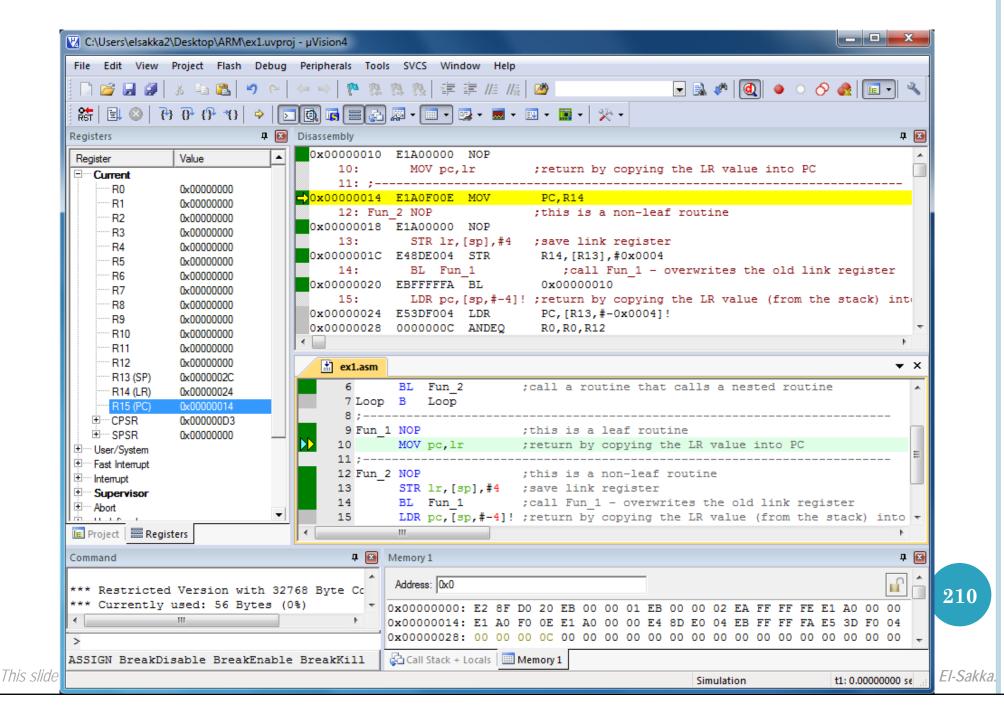


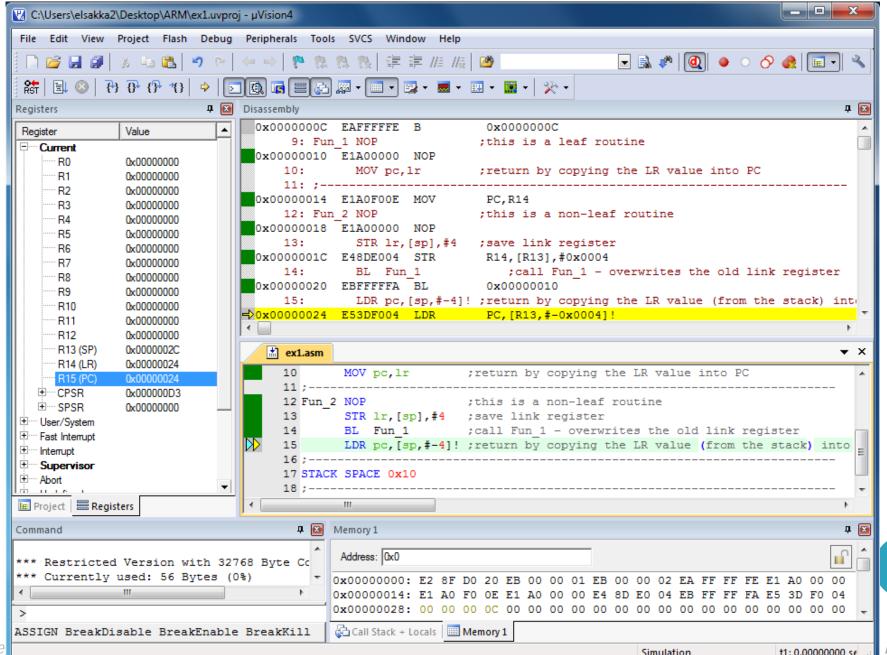

211

El-Sakka.

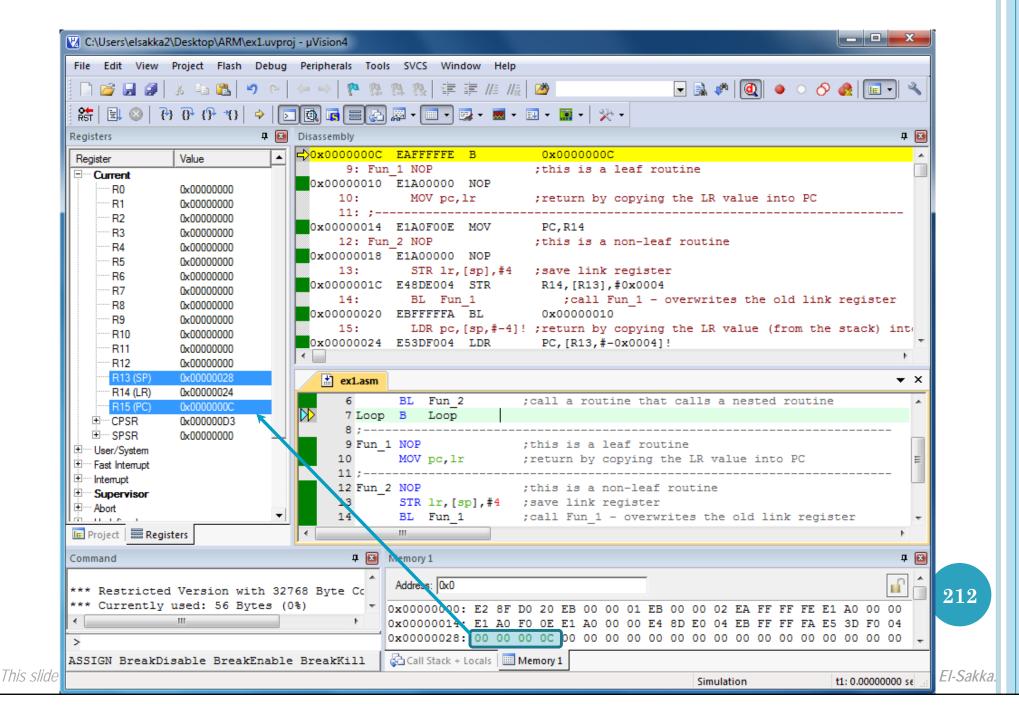

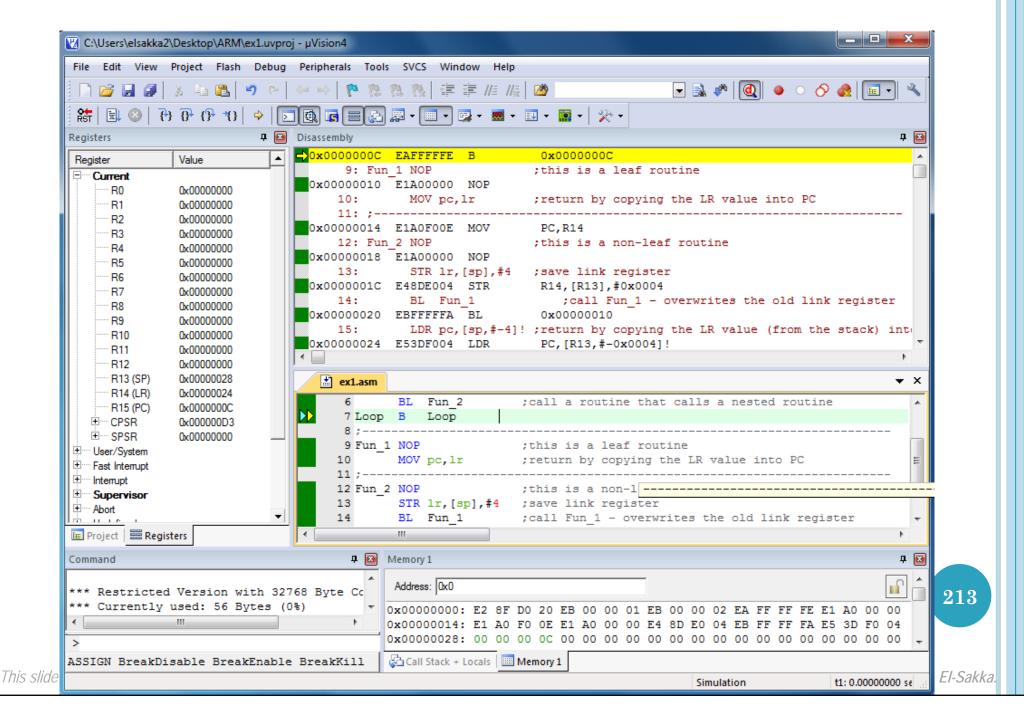

#### **Subroutines and Block Move Instructions**

- ☐ All subroutines commonly use the same set of registers to save values, and this might cause problems.
  - o Assume that a program used R1 to store a temporary value.
  - o Later, this program called a function.
  - The function also used R1 to store a different value.
  - o After returning from the function, the program will not have access to the original R1 value that was there before calling the function.
- ☐ To solve this issue, the followings need to be done:
  - o At the beginning of the function, the values of all registers that will be used in the function must be pushed onto a stack.
  - o Just before returning from the function, all pushed values must be popped and loaded to the same registers.

#### **Subroutines and Block Move Instructions**

- ☐ The ARM's block move instructions can be used to
  - save register values on entering a subroutine and
  - restore registers before returning from a subroutine.
- ☐ Consider the following ARM code:

#### **Subroutines and Block Move Instructions**

☐ If you are using a block move to restore registers from the stack, you can also include the program counter.

We can write:

```
test STMFD r13!, {r0-r4,r10,r14} ;save working registers ;and return address in r14 :

LDMFD r13!, {r0-r4,r10,r15} ;restore working registers ;and put r14 in the PC
```

- □ At the beginning of the subroutine we push the *link register r14* containing the return address onto the stack, and then at the end we pull the saved registers, including the value of the return address which is placed in the *PC*, to effect the return.
  - By doing so, we reduced the size of this code by one instruction