

Qspice - General Reference Guide by KSKelvin

KSKelvin Kelvin Leung

Created on 8-4-2023
Last update on 1-3-2025

QSPICE

- QSPICE
 - Author : Mike Engelhardt
 - Download : <https://www.qorvo.com/design-hub/design-tools/interactive/qspice>
- Topic Included in this guideline
 - Shortcut Key
 - Hierarchical and Sub-circuit
 - Waveform Viewer
 - Symbol Viewer
 - Simulation Technique



Part 1

Shortcut Key

Schematic Editor Keyboard Shortcuts

HELP > Schematic Capture > Schematic Editor > Keyboard Shortcuts

Key	Command
Spacebar	Zoom to fit
B ¹	Behavioral source
C ¹	Capacitor
D ¹	Diode
E ¹	E-source
F	F-source
G ²	Ground, G-source
H	H-source
I	Current Source
J ¹	JFET
L ¹	Inductor
M ¹	MOSFET
Q ¹	Bipolar Transistor
R ¹	Resistor
S ¹	Voltage Controlled Switch
T ³	Place Text
V ¹	Voltage Source
W	Start a wire
Y	Piezoelectric Crystal
Z ¹	MESFET

Ctrl-A	Draw an arc(graphical annotation)
Ctrl-B	Draw a box(graphical annotation)
Ctrl-C	Copy selected object(s) to clipboard
Ctrl-F	Find
Ctrl-G	Toggle display of grid dots
Ctrl-L	Draw a line(graphical annotation)
Ctrl-M	Mirror selected object(s)
Ctrl-R	Rotate selected object(s)
Alt-Ctrl-R	Rotate in 45° increments
Ctrl-V	Paste
Ctrl-X	Cut
Ctrl-Y	Redo
Ctrl-Z	Undo
Ctrl-3	Draw a triangle(graphical annotation)
;	Toggle a text graphic's comment status
F2	Toggle visibility of the Symbol and IP Browser pane.
F3	Toggle visibility of the Symbol Properties pane.
F4	Toggle visibility of the output console.
F5	Run the simulation.

[1] Repeated depressions of the key cycles through different versions of the symbol.

[2] Repeated depressions of 'G' cycles through different versions of the ground symbol and then G-source symbols.

[3] The period key, '.', is accepted as a synonym for 'T'.

Symbol Editor and Waveform Viewer Keyboard Shortcuts

HELP > Waveform Viewer > Keyboard Shortcuts / HELP > Schematic Capture > Symbol Editor > Keyboard Shortcuts

Waveform Viewer Keyboard Shortcuts

Key	Command
Delete	Delete attached cursor if pointing to a readout or delete selected plot labels
F	Zoom to fit(all panes)
F4	Toggle visibility of the console display
F5	Rerun the simulation
←	Reload Plot configuration file
←	Move attached cursor left
→	Move attached cursor right
↑	Move attached cursor to next step
↓	Move attached cursor to previous step
Ctrl-A	Add a trace
Ctrl-C	Copy
Ctrl-D	Delete a plotting pane
Ctrl-F	Find
Ctrl-G	Turn Grid On/Off
Ctrl-V	Paste
Ctrl-P	Print
Ctrl-W	Add a plotting pane
Ctrl-X	Cut
Ctrl-Y	Redo
Ctrl-Z	Undo

Symbol Editor Keyboard Shortcuts

Key	Command
Ctrl-A	Draw an arc defined by three points
Shift-Ctrl-A	Draw an arc defined by four points
Ctrl-B	Draw a box(or a box for an image)
Ctrl-C	Copy selection(s) to clipboard
E	Draw an Ellipse
Ctrl-F	Find
Ctrl-L	Draw a line
Ctrl-M	Mirror selected objects
P	Place a pin
Ctrl-R	Rotate selected objects
T	Place a text attribute
Ctrl-V	Paste
Ctrl-X	Cut
Ctrl-Y	Redo
Ctrl-Z	Undo
Ctrl-3	Draw a triangle
F3	Toggle visibility of the Properties pane.

** Hold down ALT key (after simulation is ran and with an active waveform viewer)

Click on a node for voltage or device for current – Can prevent accidentally move wire or device

Click on a node and drag to another node – Can measure differentiate voltage, i.e. V(N001,N002)

** Hold down SHIFT key to probe current – invert the sign of a current quantity

Waveform Viewer Functions and Keywords (.func , .meas)

HELP > Waveform Viewer > Waveform Expressions

The following functions, constants, and keywords are recognized in expressions of waveform data.

Waveform Viewer Functions and Keywords

Syntax	Description
ABS(x)	Absolute value of x
ACOS(x)	Inverse cosine of x
ACOSH(x)	Inverse hyperbolic cosine of x
ARCCOS(x)	Inverse cosine of x
ARCCOSH(x)	Inverse hyperbolic cosine of x
ARCSIN(x)	Inverse sine of x
ARCSINH(x)	Inverse hyperbolic sine of x
ARCTAN(x)	Inverse tangent of x
ARCTANH(x)	Inverse hyperbolic tangent of x
ASIN(x)	Inverse sine of x
ASINH(x)	Inverse hyperbolic sine of x
ATAN(x)	Inverse tangent of x
ATAN2(x,y) ¹	Four quadrant inverse tangent of x
ATANH(x)	Inverse hyperbolic tangent of x
BUF(x)	$x > .5 ? 1 : 0$
CBRT(x)	Cube root of x
CEIL(x)	x rounded up to nearest integer
COS(x)	$\cos x$
COSH(x)	Hyperbolic cosine of x
COT(x)	Cotangent of x
D(x)	Derivative of x
DD(x)	Second derivative of x
D ² (x)	Second derivative of x
E	2.7182818284590452354
ERF(x)	Error function of x
ERFC(x)	Complementary error function of x
EXP(x)	e^x
EXP10(x)	10^x
FABS(x)	Absolute value of x
FLOOR(x)	x rounded down to nearest integer

- ← simulation variable (reserve word)
- ← important constant (reserve word)

FREQ	Frequency
FREQUENCY	Frequency
GAMMA(x)	Gamma function of x
HYPOT(x,y)	$\sqrt{x^2 + y^2}$
IF(x,y,z)	$(x > .5) ? y : z$
ILOGB(x)	Unbiased exponent of x
IM(x)	Imaginary part of x
IMAG(x)	Imaginary part of x
INT(x)	x rounded to nearest integer
INV(x)	$x > .5 ? 0 : 1$
INVSQRT(x)	$1/\sqrt{x}$
ISNAN(x)	One if x is not a number, otherwise zero
J	$\sqrt{-1}$
J0(x)	Zero order Bessel function of the first kind at x
J1(x)	First order Bessel function of the first kind at x
JN(x,n)	N th order Bessel function of the first kind at x
K	1.380649e-23 J/K
LGAMMA(x)	Log-gamma function of x
LIMIT(x,y,z)	Mutually intermediate value of x,y, and z
LN(x)	Natural logarithm of x
LOG(x)	Natural logarithm of x
LOG10(x)	Logarithm of x in base 10
LOG1P(x)	Natural logarithm of (x + 1)
LOG2(x)	Logarithm of x in base 2
LOGB(x)	LOG2(ABS(x))
MAG(x)	Absolute value of x
MAX(x,y)	Maximum of x and y
MAXMAG(x,y)	x or y with maximum magnitude
NAN	A value guaranteed to be not a number
MIN(x,y)	Minimum of x and y
MINMAG(x,y)	x or y with minimum magnitude

PH(x)	$\angle x$	Phase of x
PHASE(x)	$\angle x$	Phase of x
PI	3.14159265358979323846	
POW(x,y)	x^y	x raised to the y power
PWR(x,y)	$ x ^y$	x raised to the nearest integer value of y
PWRS(x,y)	$x >= 0 ? x^y : -x^y$	Absolute value of x raised to the y power
Q	1.602176487e-19 Coulomb	
RE(x)	re(x)	Real part of x
REAL(x)	Real part of x	Real part of x
RINT(x)	x rounded to the nearest integer	x rounded to the nearest integer
ROUND(x)	x rounded to the nearest integer	x rounded to the nearest integer
SGN(x)	Sign of x	Sign of x
SIGN(x)	Sign of x	Sign of x
SIN(x)	Sine of x	Sine of x
SINH(x)	Hyperbolic sine of x	Hyperbolic sine of x
SQRT(x)	\sqrt{x}	Square root of x
TABLE(x,x1,y1,...)	Interpolate the table given as x1,y1, x2,y2,... at point x	
TAN(x)	$\tan x$	Tangent of x
TANH(x)	Hyperbolic tangent of x	
TAUGRP(x)	Group delay of x	
TBL(x,x1,y1,...)	Interpolate the table given as x1,y1, x2,y2,... at point x	
TEMP	Circuit temperature	
TG(x)	Group delay of x	
TIME	Time	Time
TRUNC(x)	Integer part of s	
URAMP(x)	$x > 0 ? x : 0$	
USTEP(x)	$x > 0 ? 1 : 0$	
Y0(x)	Zero order Bessel function of the second kind at x	
Y1(x)	First order Bessel function of the second kind at x	
YN(x)	N th order Bessel function of the second kind at x	

^{1]} For complex data, the syntax is ATAN2(z). The meaning is ATAN2(IMAG(z),REAL(z)).

Function and Operators for Behavioral V and I Sources

HELP > Simulator > Device Reference > B. Behavioral Sources

Functions

Name	Description
abs(x)	Absolute value of x
acos(x)	arc cosine of x
arccos(x)	Synonym for acos()
acosh(x)	arc hyperbolic cosine of x
asin(x)	arc sine of x
arcsin(x)	Synonym for asin()
asinh(x)	Arc hyperbolic sine
atan(x)	Arc tangent of x
arctan(x)	Synonym for atan()
atan2(y,x)	Four quadrant arc tangent of y/x
atanh(x)	Arc hyperbolic tangent
buf(x)	1 if $x > .5$, else 0
ceil(x)	Integer equal or greater than x
cos(x)	Cosine of x
cosh(x)	Hyperbolic cosine of x
ddt(x)	Time derivative x
delay(x,y)	x delayed by y
delay(x,y,z) ¹	x delayed by y, but store no more than z history
dlim(x,y,z)	x bounded by y which it asymptotically starts to approach at y+z as a first inverse order Laurent series
exp(x)	e^x e to the x
floor(x)	Integer equal to or less than x
hypot(x,y)	$\sqrt{x^2 + y^2}$ sqrt($x^2 + y^2$)
idt(x,y,z)	Time integral of x with initial condition of y reset when $z > .5$
$\int x \, dtimes + y$	

if(x,y,z)	If $x > .5$, then y else z
int(x)	Convert x to integer
inv(x)	0. if $x > .5$, else 1.
limit(x,y,z)	Intermediate value of x, y, and z
ln(x)	Natural logarithm of x
log(x)	Alternate syntax for ln()
log10(x)	Base 10 logarithm
max(x,y)	The greater of x or y
min(x,y)	The smaller of x or y
pow(x,y)	x^y
pwr(x,y)	$ x ^y$
pwrs(x,y)	$abs(x)^y$ $sgn(x)*abs(x)^y$
random(x)	Random number from 0. to 1. depending on the integer value of x. Interpolation between random numbers is linear for non-integer x.
sin(x)	Sin x
sinh(x)	Hyperbolic sine of x
sqr(x)	\sqrt{x}
table(x,a,b,c,d,...)	Interpolate x from the look-up table given as a set of pairs of constant values.
tan(x)	Tangent of x.
tanh(x)	Hyperbolic tangent of x
ulim(x,y,z)	x bounded by y which it asymptotically starts to approach at y-z as a first inverse order Laurent series

Operators grouped in reverse order of precedence of evaluation

Operand	Description
&	Boolean AND
	Boolean OR
>	True if expression on the left is greater than the expression on the right.
<	True if expression on the left is less than the expression on the right.
>=	True if expression on the left is greater than or equal the expression on the right.
<=	True if expression on the left is less than or equal the expression on the right.
+	Addition
-	Subtraction
*	Multiplication
/	Division
**	** / ^ Raise left hand side to power of right hand side. Same as '^'.
!	Boolean not the following expression.

Available Function in B source not listed

- Trunc(x) ; floor(x) ; int(x) : rounded down integer
- Rint(x) ; round(x) : rounded to nearest integer
- Ceil(x) : rounded up integer
- Ustep(x) : $x > 0 ? 1 : 0$
- Uramp(x) : $x > 0 ? x : 0$


Ctrl-Shift-V : Paste Netlist as Graphical Symbols on Schematic

ALT-Mousewheel – Delimited numbers

Netlist (Ctrl-C to Copy)

```
* C:\QspiceKSKelvin\01.t  
V1 N01 0 1  
R1 N01 N02 1K  
R2 N02 0 1K  
C1 N02 0 1μ  
.end
```

Paste with Ctrl-Shift-V

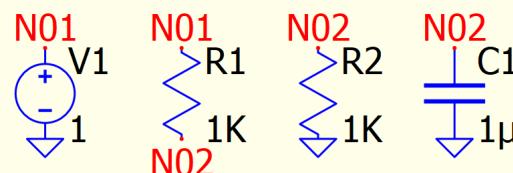


Revision History

01/13/2024 You can now paste fragments of a netlist copied to the clipboard as graphical symbols on a schematic by typing shift-control-V.

Paste with Ctrl-V

```
V1 N01 0 1  
R1 N01 N02 1K  
R2 N02 0 1K  
C1 N02 0 1μ
```


- ALT-Mousewheel
 - Delimited numbers in schematic or netlist
 - Highlight number by selecting its (double click in schematic), key pressing ALT and rotate mousewheel

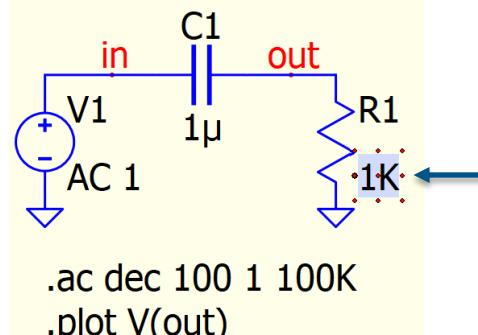

```
.ac dec 100 1 100K  
.plot V(out)
```

Hide Symbol Pins

- Hide Symbol Pins
 - If you directly type a net name into the Net field, the corresponding pin in the symbol will be set to invisible and connected to that net name
 - This allows users to simplify the outlook of the schematic

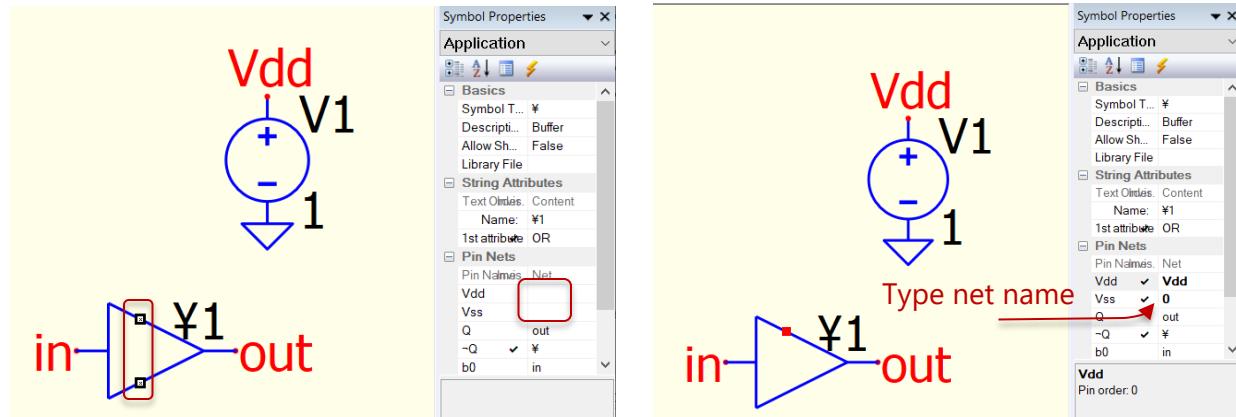


Quick Way to Create a Symbol (example from .model) Symbol (.qsym) to share for other projects

Step 1 : Assume you have a .model statement, which can copy and paste into Qspice and create a symbol in schematic, for example
.model 2N3904 NPN(IS=1E-14 VAF=100 Bf=300 IKF=0.4 XTB=1.5 BR=4 CJC=4E-12 CJE=8E-12 RB=20 RC=0.1 RE=0.1 TR=250E-9 TF=350E-12 ITF=1 VTF=2 XTF=3 Vceo=40 Icrating=200m mfg=Philips)


Step 2

- Copy entire .model text statement (or .subckt)
- In Schematic window
Ctrl-V to paste, Select Yes in Autogenerate Symbol

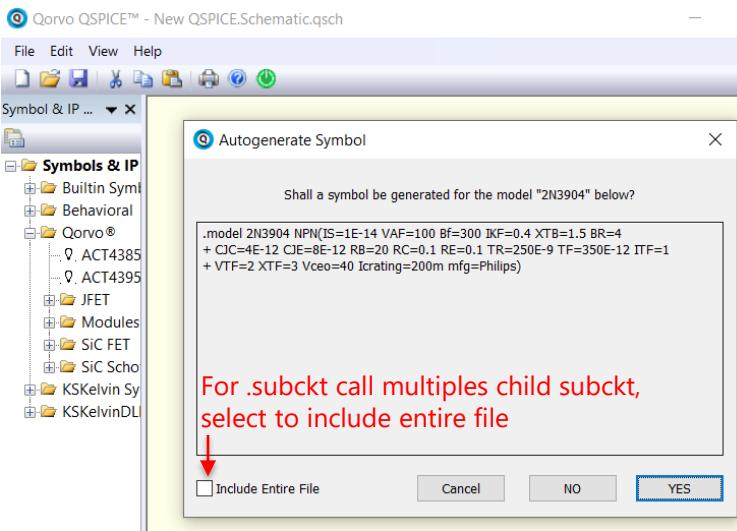


Step 3

- A symbol is created
- Select this symbol, Copy-C to copy
- In menu, File -> New Symbol

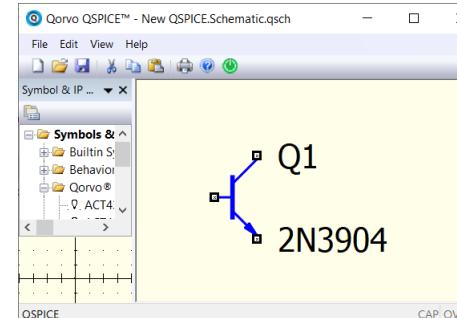

Step 4

- In Symbol window, Ctrl-V to paste
- In menu, File > Save
Save into a .qsym (symbol file)

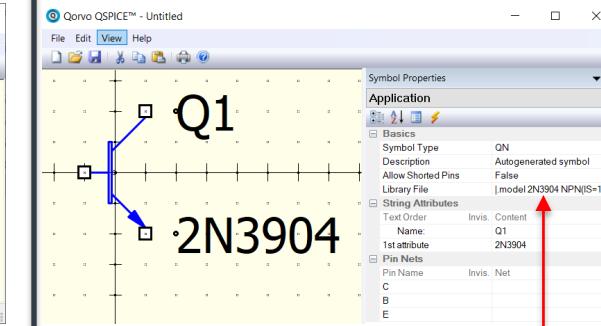


With this method, Qspice can embed .model or .subckt into symbol file, therefore, only share symbol file have all necessary detail to run simulation

Drag a Symbol into Schematic (Two Methods)


Method 1 : Drag from File Explorer

- [1] Open the symbol folder using File Explorer
- [2] Drag the symbol files (.qsym) into the schematic

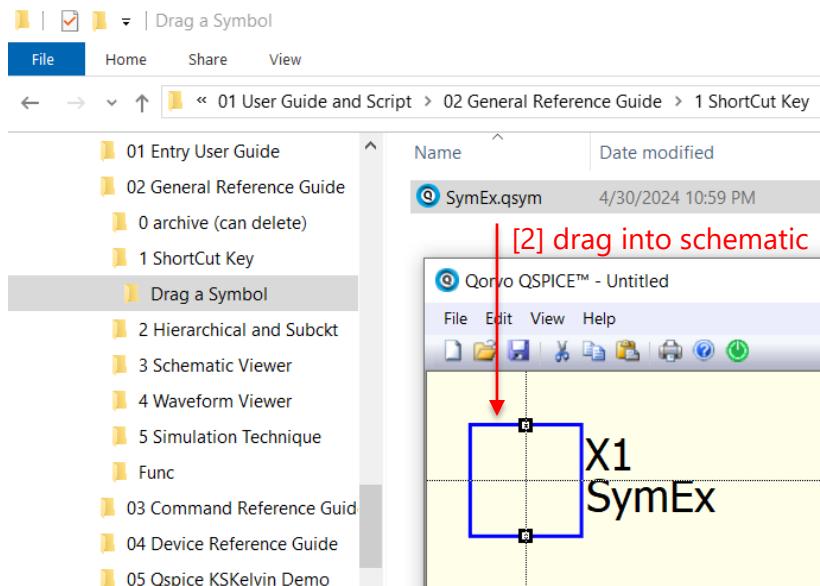

Method 2 : Drag from Symbol & IP Browser

- [1] Go to View > Symbol & IP Browser [or use the shortcut F2].
- [2] Select the folder containing the symbol files (.qsym).
- [3] If a folder with .qsym files is selected, a new tree path will be displayed.
- [4] Drag the symbol from the Symbol & IP Browser into the schematic.

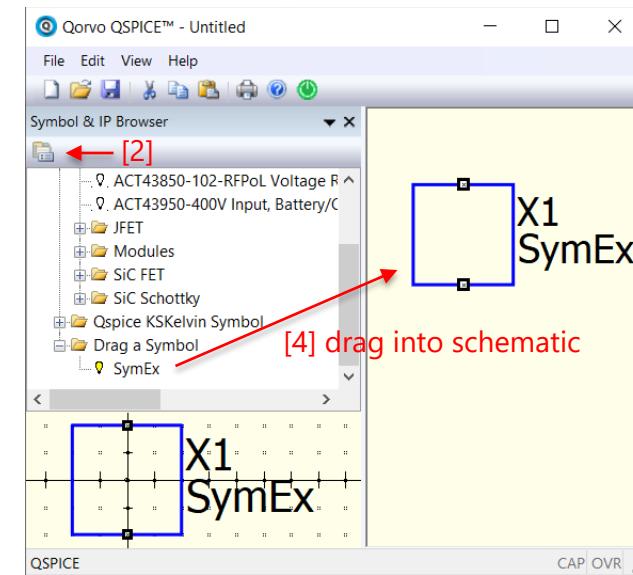





Part 2

Hierarchical and Sub-circuit

Hierarchical and Sub-circuit : Comparison

Qspice : parent - hierarchical and subckt.qsch | +RdividerH.qsch

- Hierarchical and Sub-circuit
 - They are similar and both support by .qsym symbol, but two different concepts
 - Hierarchical
 - Call a child schematic (.qsch) for simulation
 - Circuit in child schematic (.qsch)
 - Waveform viewer can probe simulation result in daughter schematic
 - Sub-circuit (.subckt)
 - Call a sub-circuit (.subckt) for simulation
 - Circuit in .subckt model
 - Waveform viewer cannot probe simulation result in subckt
 - Result is calculated and stored, just not able to directly probe it.
 - In Qspice, .subckt syntax can embed into .qsym in library file properties (i.e. can share a single .qsym file for simulation)

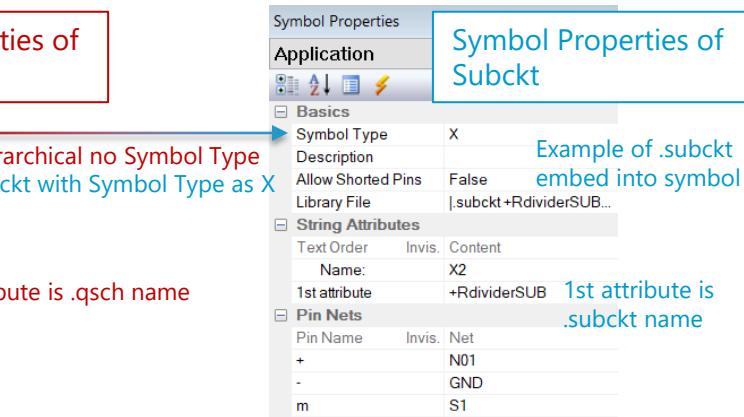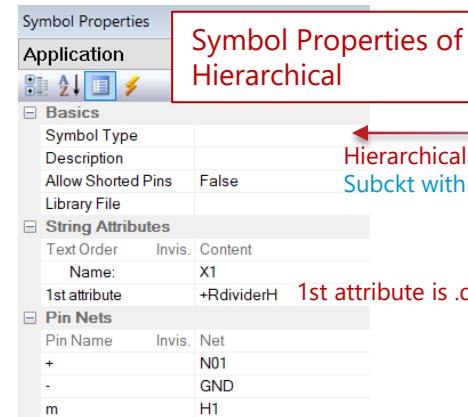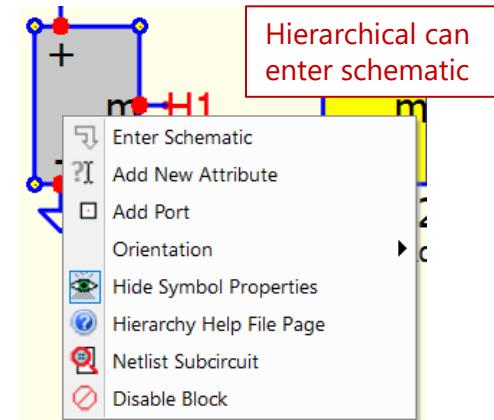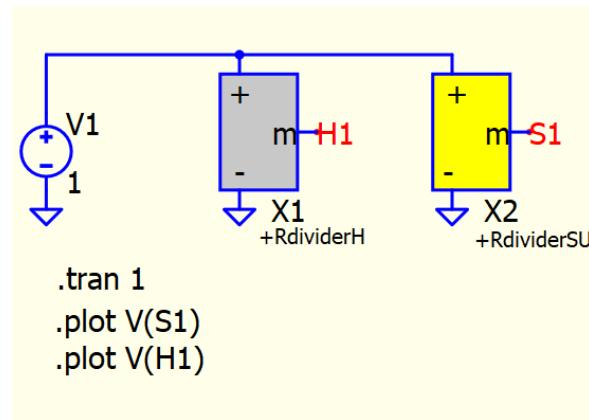


Hierarchical and Sub-circuit : Comparison


Qspice : parent - hierarchical and subckt (dual hierarchical/subckt).qsch

- Hierarchical and Sub-circuit
 - In netlist, both Hierarchical and Sub-circuit call .subckt syntax
 - Hierarchical
 - Child schematic is a .subckt in Parent netlist
 - Symbol calls this child schematic name
 - Sub-circuit (.subckt)
 - Each symbol calls an individual .subckt by naming its by add prefix as Xnnn•<subckt name>

Hierarchical Block

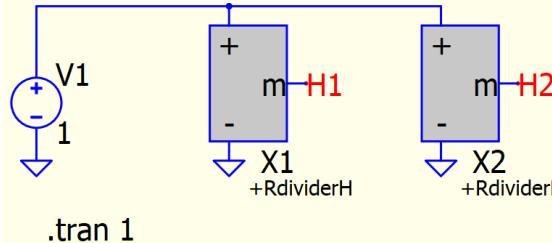

Sub-Circuit (.subckt)

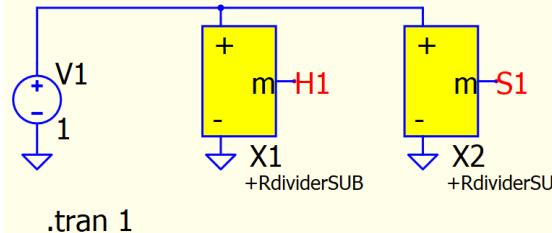

```
* C:\QspiceKSKelvin\01 User Guide and Script\02
V1 N01 0 1
X1 N01 0 H1 +RdividerH
X2 N01 0 H2 +RdividerH

.subckt +RdividerH + - m
R1 + m 1K
R2 m - 1K
.ends +RdividerH
    } .subckt for X1 and X2
    <child schematic name>



.tran 1
.end
```

```
* C:\QspiceKSKelvin\01 User Guide and Script\02
V1 N01 0 1
.subckt X1•+RdividerSUB + - m
R1 + m 1K
R2 m - 1K
.ends +Rdivider
X1 N01 0 H1 X1•+RdividerSUB
.subckt X2•+RdividerSUB + - m
R1 + m 1K
R2 m - 1K
.ends +Rdivider
X2 N01 0 S1 X2•+RdividerSUB
.tran 1
.end
    } .subckt for X1
    <subckt name>
    } .subckt for X2
    <subckt name>
```

Hierarchical and Sub-circuit : Parameter Passing

Qspice : parent-PassParamHierarchical.qsch | +VdividerH1.qsch


- Parameter Passing
 - Hierarchical and Sub-circuit works in same way
 - As default, .subckt or child schematic load its .param
 - In parent schematic, if string attribute in symbol contains parameters, they will override .param within .subckt or child schematic

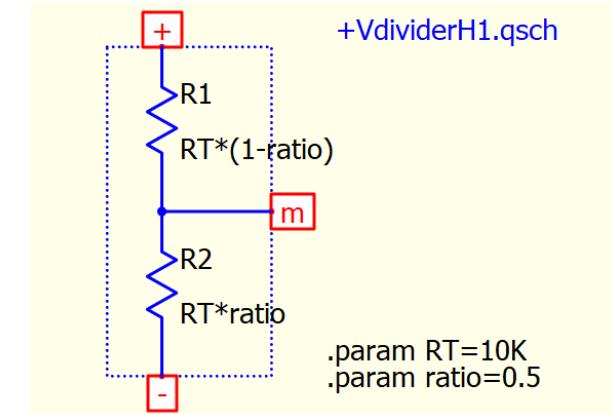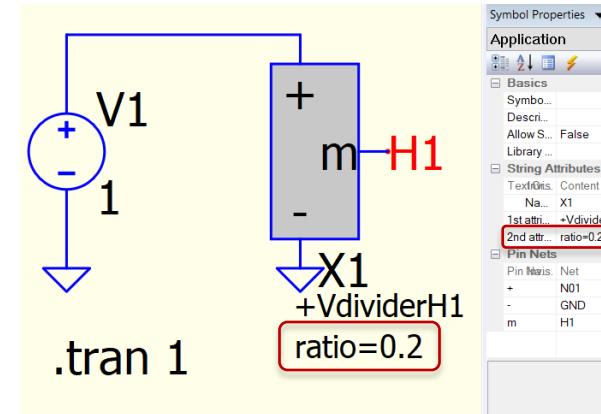

Parameter Passing with Global .param from parent

Qspice : parent-PassGlobalParam.qsch | +VdividerH1.qsch | +VdividerH2.qsch


- .param from Parent
 - Global .param passing from parent into a child schematic depends whether this child schematic has the parameter defined
 - If no such parameter is defined in child schematic, global .param override
 - If parameter is defined in child, global .param is ignored. Only string attribute in symbol has ability to override child schematic defined parameter

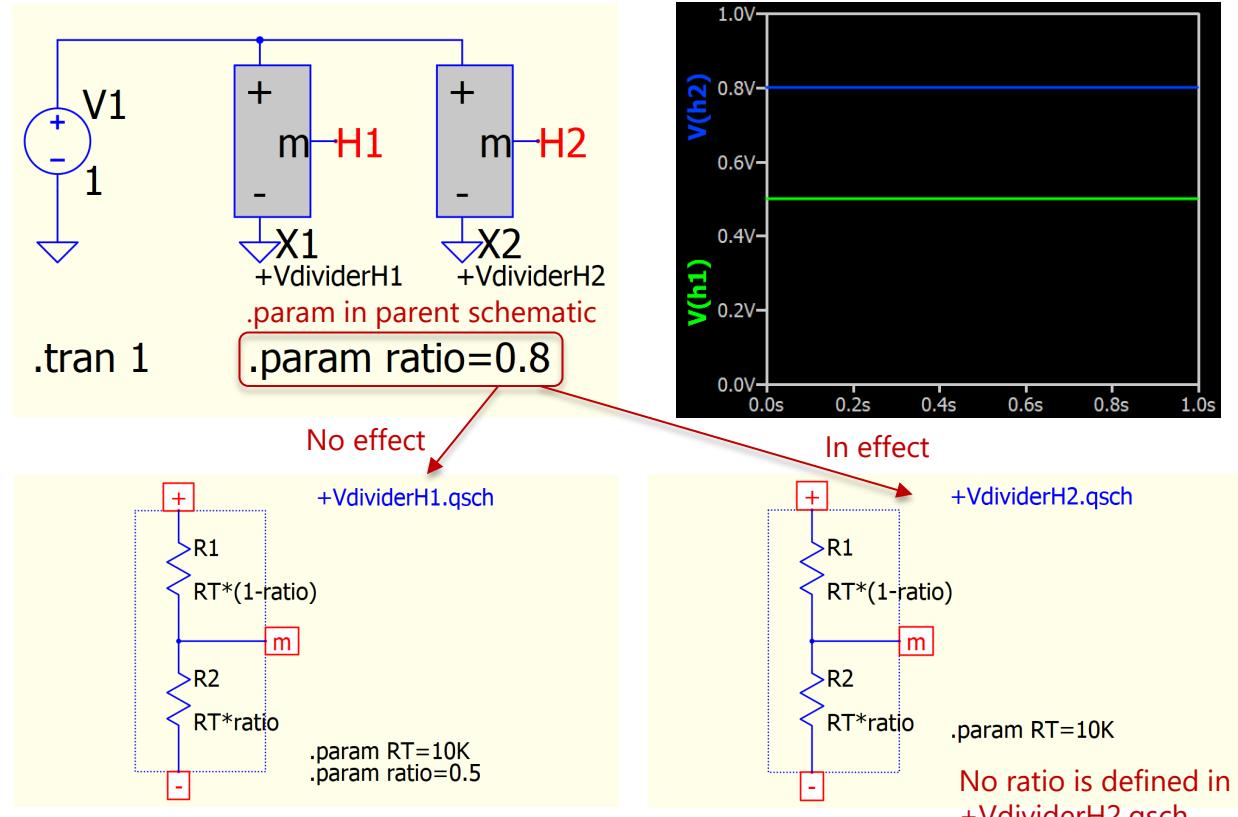

Three Way to Define Default Parameters in .subckt

Qspice : parent-PassParamSubckt.qsch | +VdividerS.txt

- Three Way to Define Default Parameters in .subckt

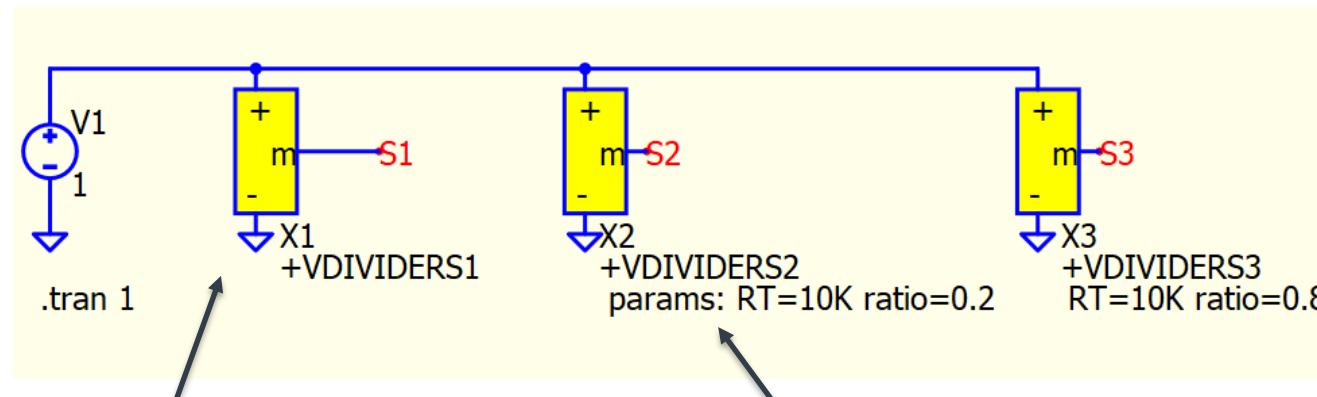

```
.subckt +VdividerS1 + - m
R1 + m RT*(1-ratio)
R2 m - RT*ratio
.param RT=10K
.param ratio=0.5
.ends +VdividerS1
```

```
.subckt +VdividerS2 + - m params: RT=10K ratio=0.5
R1 + m RT*(1-ratio)
R2 m - RT*ratio
.ends +VdividerS2
```

```
.subckt +VdividerS3 + - m RT=10K ratio=0.5
R1 + m RT*(1-ratio)
R2 m - RT*ratio
.ends +VdividerS3
```

For this version, if removes .param lines, param can be added in symbol in string attribute

Right Click on symbol > Add New Attribute

Three Type of Sub-Circuit (.subckt) Symbol (.qsym)


Qspice : parent - 3 type subckt symbol.qsch

Embedded SUBCKT

[Easy to share, just one .qsym]

Symbol Properties

Application		
Basics		
Symbol Type	X	
Description		
Allow Shorted Pins	False	
Library File	.subckt +RdividerH1 + - m\nR...	
String Attributes		
Text Order	Invis.	Content
Name:	X1	
1st attribute	+RDIVIDERH1	

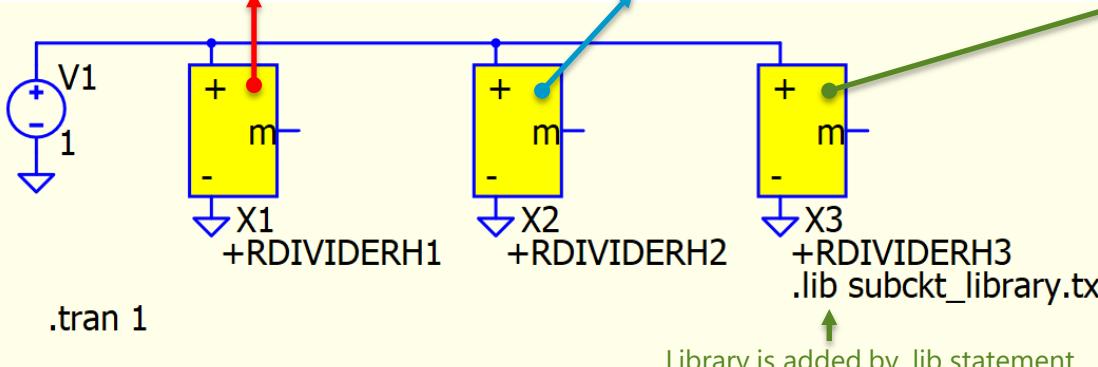


Link to Library

[Recommend for complex .subckt]

Symbol Properties

Application		
Basics		
Symbol Type	X	
Description		
Allow Shorted Pins	False	
Library File	subckt_library.txt	
String Attributes		
Text Order	Invis.	Content
Name:	X2	
1st attribute	+RDIVIDERH2	

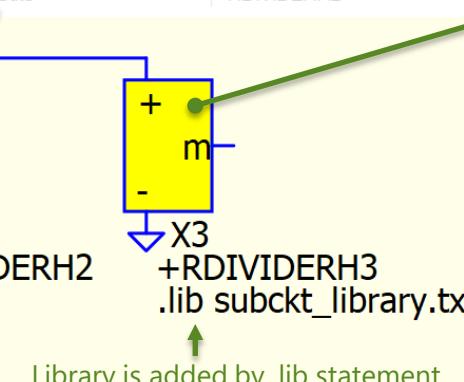

No Embed or Link

[For universal symbol]

Symbol Properties

Application		
Basics		
Symbol Type	X	
Description		
Allow Shorted Pins	False	
Library File		
String Attributes		
Text Order	Invis.	Content
Name:	X3	
1st attribute	+RDIVIDERH3	

```
subckt_library.txt
1 .subckt +RdividerH2 + - m
2 R1 + m 1K
3 R2 m - 2K
4 .ends +RdividerH2
5
6 .subckt +RdividerH3 + - m
7 R1 + m 1K
8 R2 m - 3K
9 .ends +RdividerH3
```

Hierarchical and Sub-circuit Sub-Topics

- Part 2A : Hierarchical Block
 - Create hierarchical block from child to parent or parent to child schematic
 - Create symbol for hierarchical block
 - Get .subckt from hierarchical block to convert into an embedded subckt symbol
- Part 2B : Symbol for Subckt [Embedded Subckt]
- Part 2C : Symbol for Subckt [Link to Library]
- Part 2D : Convert MOSFET M to subckt Symbol
 - Demonstrate how to convert a MOSFET M symbol into subckt to save effort in creating a MOSFET symbol for .subckt MOSFET model from 3rd party vendor
- Part 2E : Bus and Hierarchical Block


Part 2A

Hierarchical Block

Hierarchical Block : From Child to Parent

Qspice : filter_circuit.qsch | filter_circuit_app.qsch

- [1] Create a child schematic (.qsch) with circuit and net label
- [2] Right click on net label and select "This is a Port"

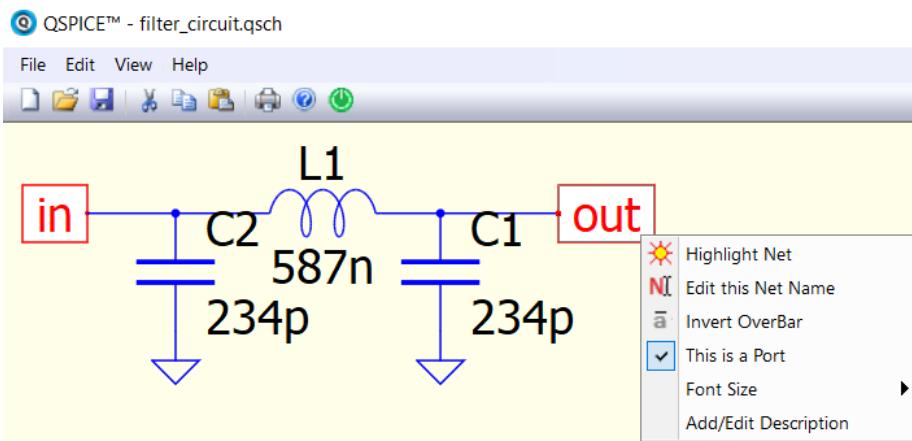


Method #1

- [3] Create a new schematic which will call to use hierarchical
- [4] Edit → Draw Hierarchical Entry

Method #2

- [3] In child schematic, Right click > Open Parent Schematic
This will automatically create a parent schematic contains hierarchical symbol, with all Port automatically created

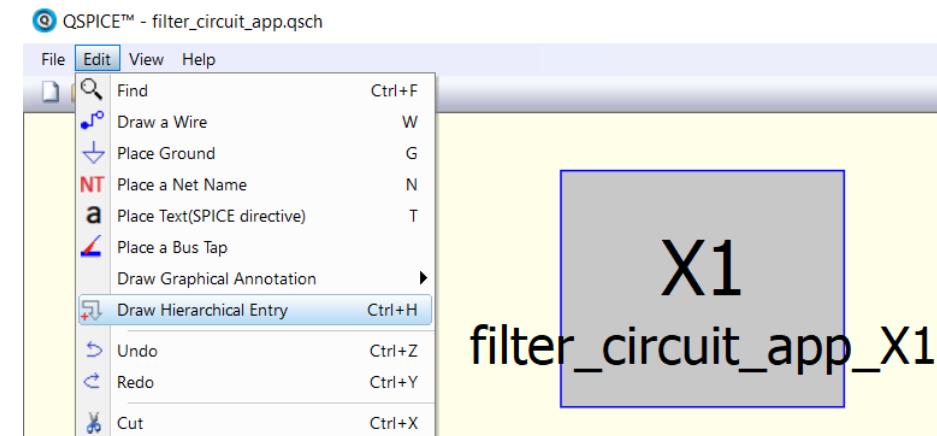

Hierarchical Block : From Child to Parent


Qspice : filter_circuit.qsch | filter_circuit_app.qsch

[5] Change component text (1st attribute) to match child schematic name


[6] Right click hierarchy component and "Add Port"

[7] Name ports as port name defined in child schematic

[8] Right click hierarchy component and "Enter Schematic" should open child schematic

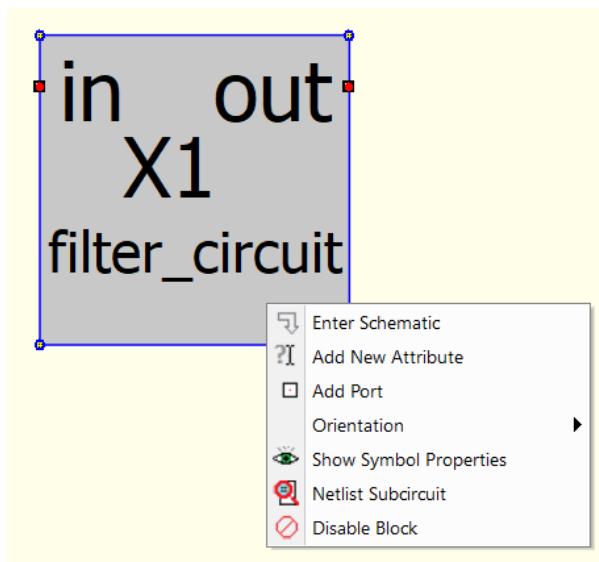


A completed example

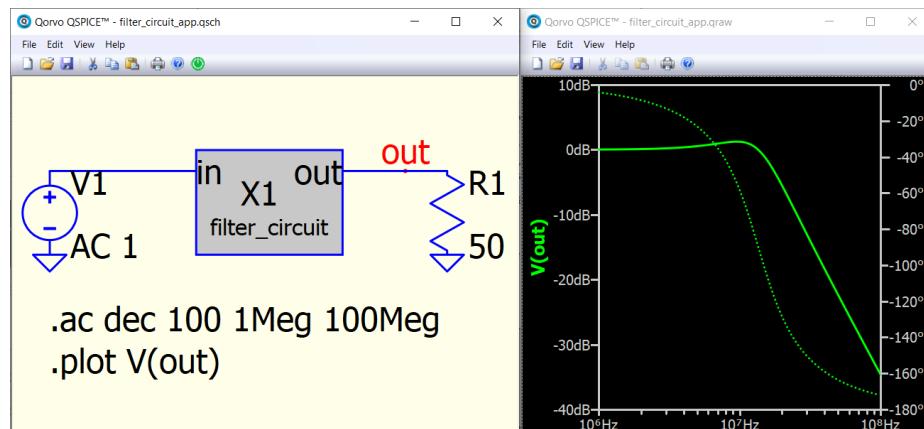


Hierarchical Block : From Parent to Child

- [1] Right click > Draw Hierarchical Entry
- [2] Rename component text (1st attribute) to child schematic name
** Child schematic will be created later
- [3] Right click within Hierarchical Block > Add Port
- [4] Right click > Enter Schematic, it will create a child .qsch

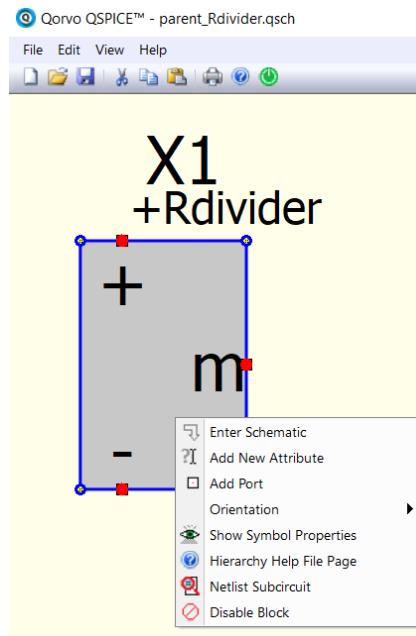


- [5] Create circuit in child schematic

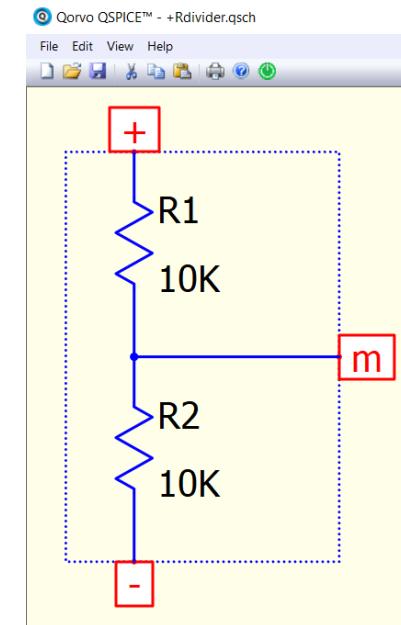

Hierarchical Block : Create Symbol (.qsym) for Hierarchical

Qspice : parent_Rdivider.qsch | +Rdivider.qsym


- [1] In a parent schematic which contains a hierarchical block
- [2] Hold Shift, draw a selection box to select Hierarchical
- [3] Press Ctrl-C to copy
- [4] File > New > New Symbol
- [5] In New Symbol window, Press Ctrl-V to paste
- [6] A symbol for a hierarchical block has been created, and now you have the option to edit this symbol. However, please keep in mind that the "Symbol Type" field must be left blank for a hierarchical symbol

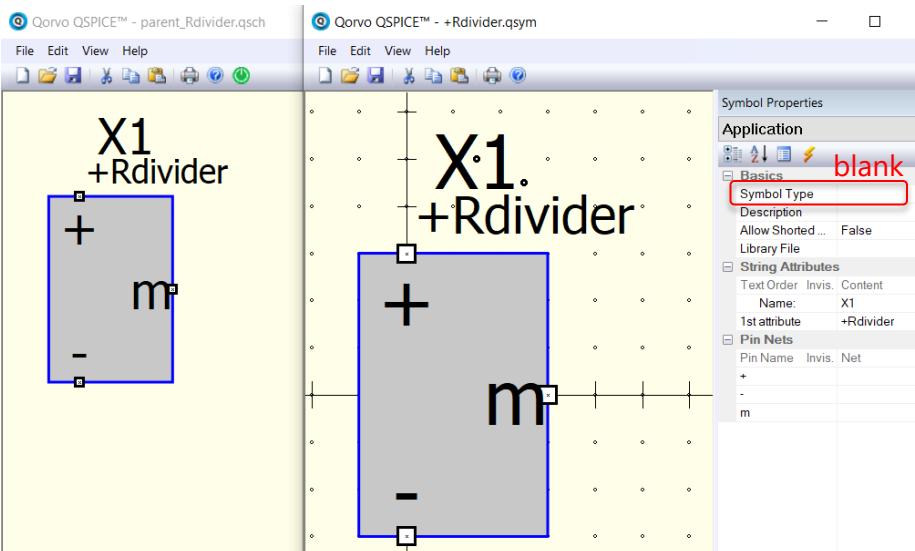

- [7] Save this symbol (.qsym) in the same directory as the hierarchical schematic (.qsch)

How to use .qsym with .qsch

- [8] To place this symbol in the schematic window, drag it from the File Explorer and drop it into the schematic window

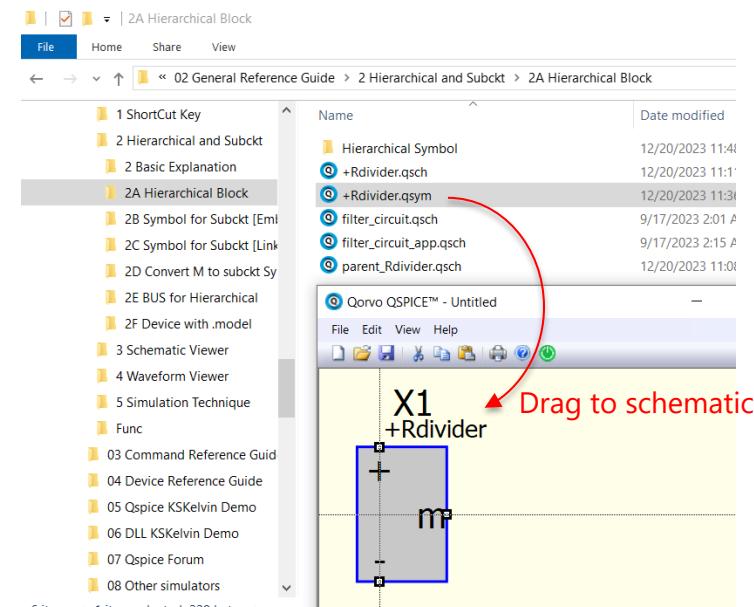


Create Hierarchical Symbol (.qsym) for Hierarchical : Method #1

Qspice : RC_sch.qsym ; RC_sch.qsch

[1] Draw a schematic


This example has

- Two ports : **in** and **out**

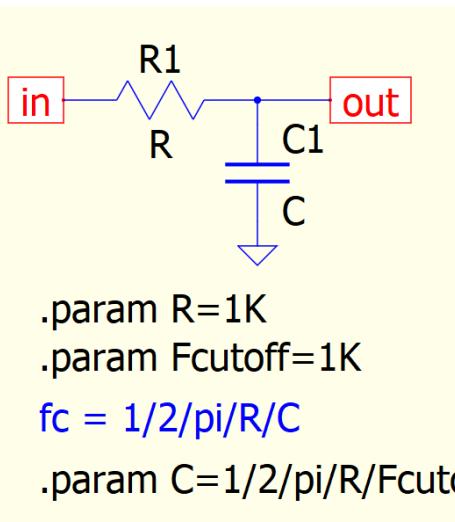

[2] Create a symbol

- Pin name needs to match schematic ports (order not important)
- Use Text to assign
 - Name : X1
 - 1st attribute : [schematic name]
- Symbol Type : Blank (nothing)**
 - Don't assign a X (X for subckt), hierarchical entry no symbol type

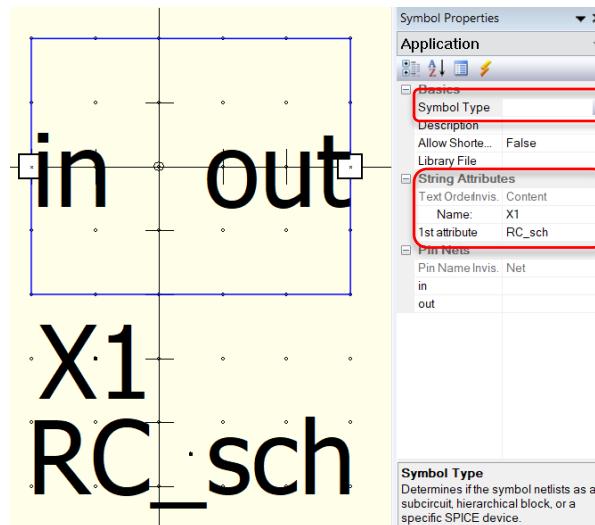

Remark :

Major Different for Symbol to call schematic (hierarchical entry) and subckt

- To call schematic (hierarchical entry)
 - Symbol Type : Blank
 - Name : X1
 - 1st attribute : schematic name
- To call subckt
 - Symbol Type : X
 - Name : X1
 - 1st attribute : subckt name

Create Hierarchical Symbol (.qsym) for Hierarchical : Method #2

Qspice : RC_sch.qsym ; RC_sch.qsch


[1] Draw a schematic

This example has


- Two ports : **in** and **out**
- Right click these nets and select "This is a port" (only these ports will auto generate hierarchical entry)

[2] Right Click > Open Parent Schematic

It will ask to automatically generate a parent schematic

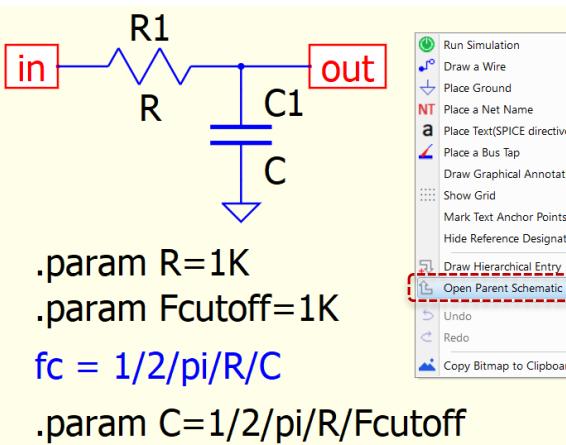


[3] Copy hierarchical block in parent with Ctrl-C

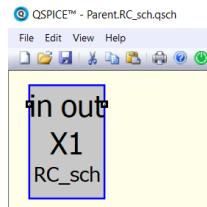

[4] File > New > New Symbol, paste with Ctrl-V

**** Symbol Type : Blank (nothing)**

- Don't assign a X (X for subckt), hierarchical no symbol type. If you re-open a hierarchical symbol, please pay attention in here as it may auto assign an X into Symbol Type

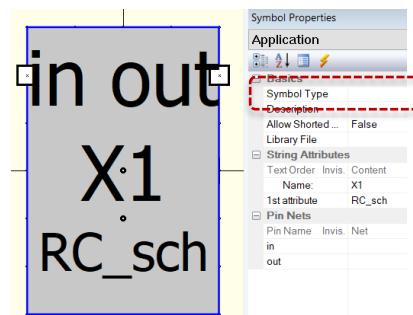

[5] Save as a .qsym symbol

Remark :

Major Different for Symbol to call schematic (hierarchical entry) and subckt

- To call schematic (hierarchical)
 - Symbol Type : Blank
 - Name : X1
 - 1st attribute : schematic name
- To call subckt
 - Symbol Type : X
 - Name : X1
 - 1st attribute : subckt name


Qspice HELP Reference

Help > Schematic Capture > Schematic Hierarchy


Create Subckt Symbol (.qsym) from Hierarchical Circuit (.qsch)

[Step 1 to 4]


[1] In hierarchical schematic
Right Click > Open Parent Schematic
It will generate a .qsch with prefix Parent.

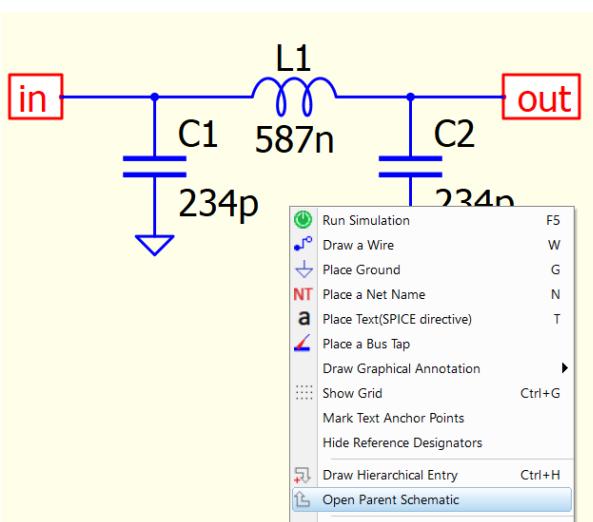

[2] In Parent Schematic, verify/change Pin Order if a particular pin name order you need for .subckt

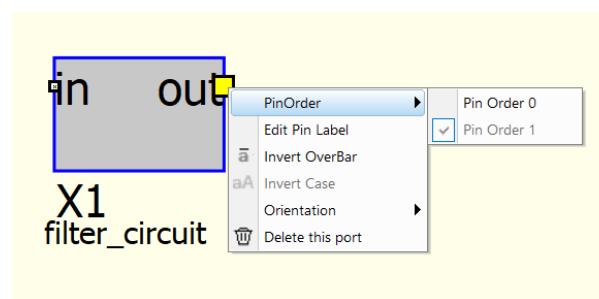

[3] Right Click on Hierarchical Symbol, select Netlist Subcircuit
[4] select all and copy .subckt netlist with Ctrl-C


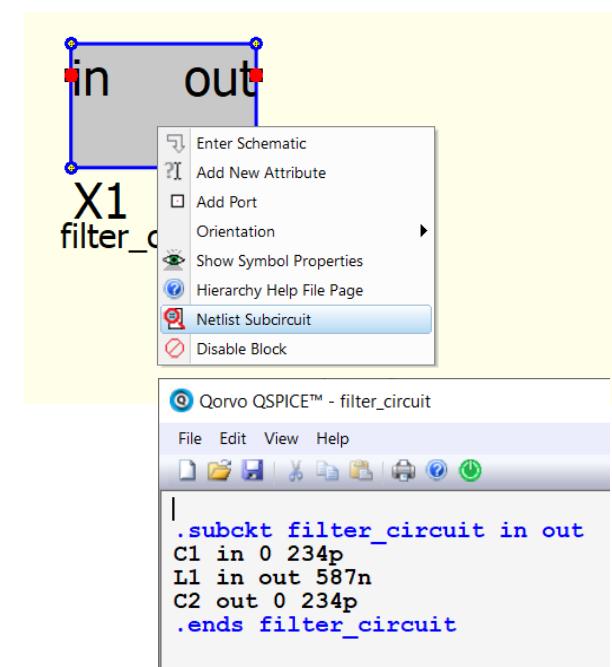


Create Subckt Symbol (.qsym) from Hierarchical Circuit (.qsch)

[Step 5 to 6]

[5] Ctrl-V to paste the text into a schematic (or a blank symbol) to invoke the 3rd party import routine

[6] A subckt symbol is generated with embedded .subckt which contain the circuitry that you can use in any schematic in any directory

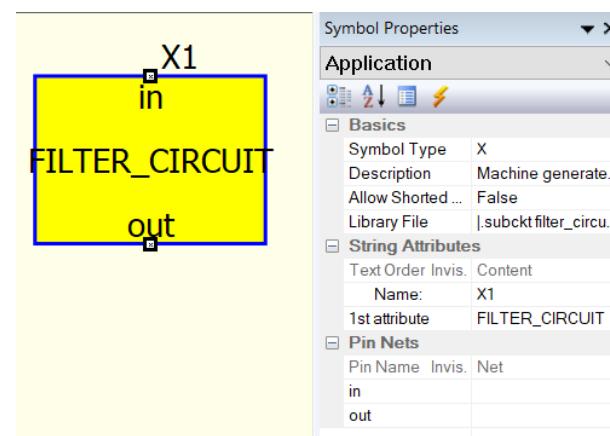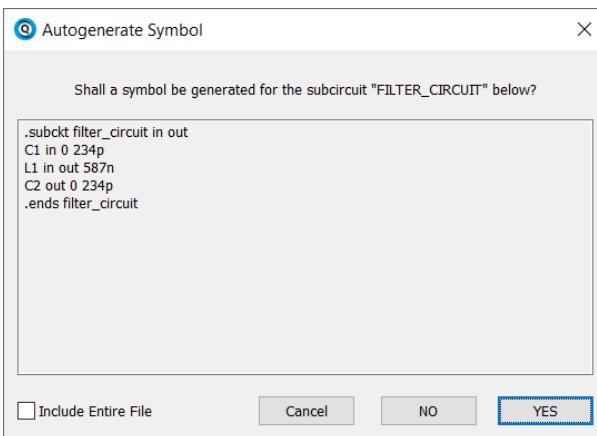


Part 2B

Symbol for Subckt

[Embedded Subckt]


Symbol for Subckt [Embedded Subckt]

- [1] Assume user has a sub-circuit .subckt in text format library file
- [2] Use a text editor to open library file, copy text for sub-circuit
- [3] In Qspice schematic, paste the text (Ctrl-V) to generate symbol

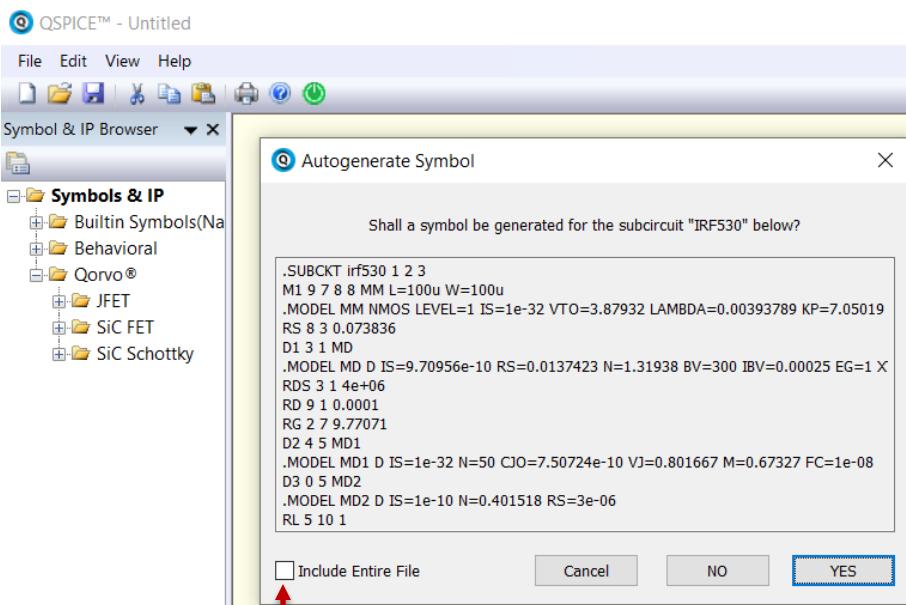


** If sub-circuit consist of other .subckt,
click this block to include entire file

- [4] Rename pins by referring to description in model file
(this is optional step)

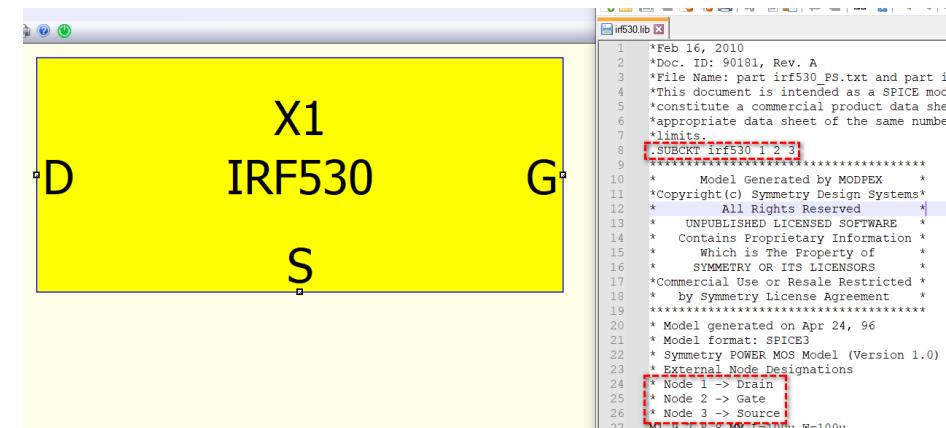


Symbol for Subckt [Embedded Subckt]

- [5] File > New > New Symbol to open a **Symbol Window**
- [6] In schematic, Ctrl-C to copy Component X1
- [7] Goto Symbol Window, Ctrl-V to paste component

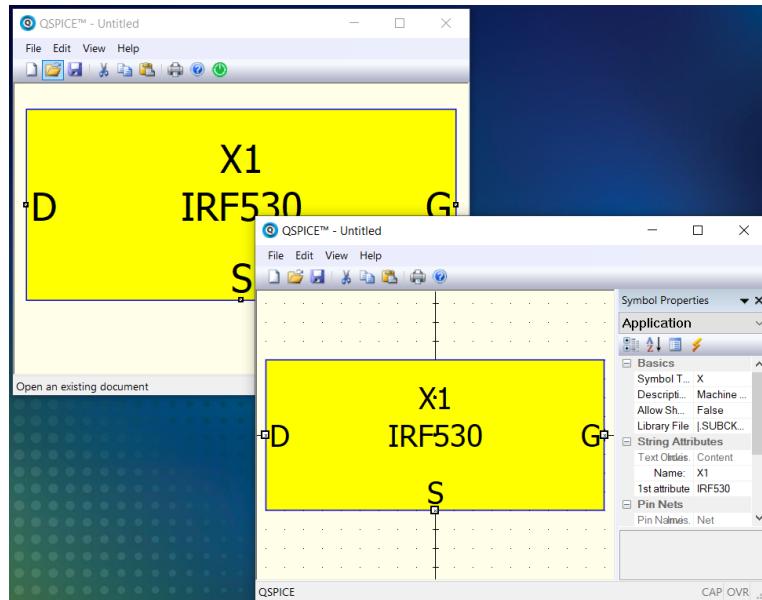

- [8] Now can rearrange pins location and re-draw the symbol
- [9] Save as a .qsym symbol format

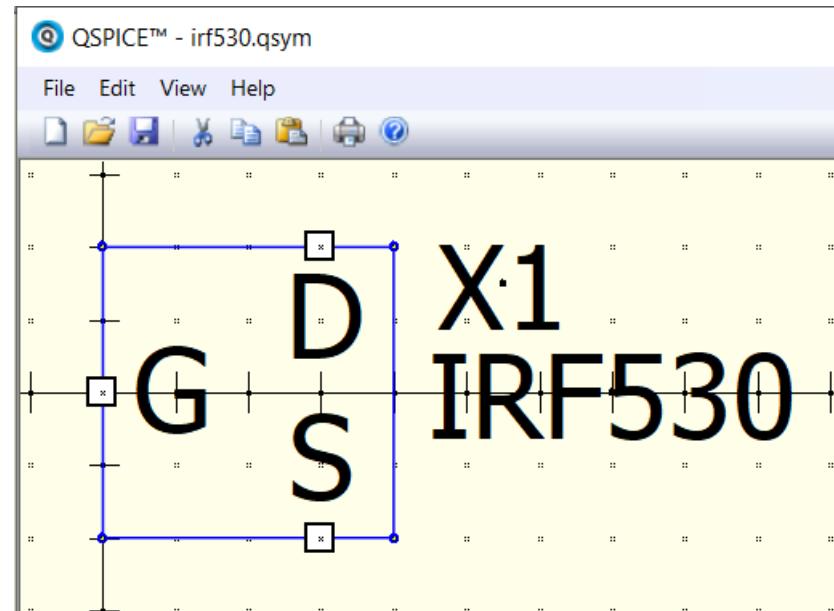


Symbol for Subckt [Embedded Subckt]


[10] In Schematic, Symbol & IP Browser (F2), Right Click to "Add a symbol directory" which contain symbol (.qsym) files

[11] Drag created component to schematic

[12] ** text library is no longer required as .subckt is integrated into symbol
(You can also directly drag a .qsym symbol file from window explorer to schematic)

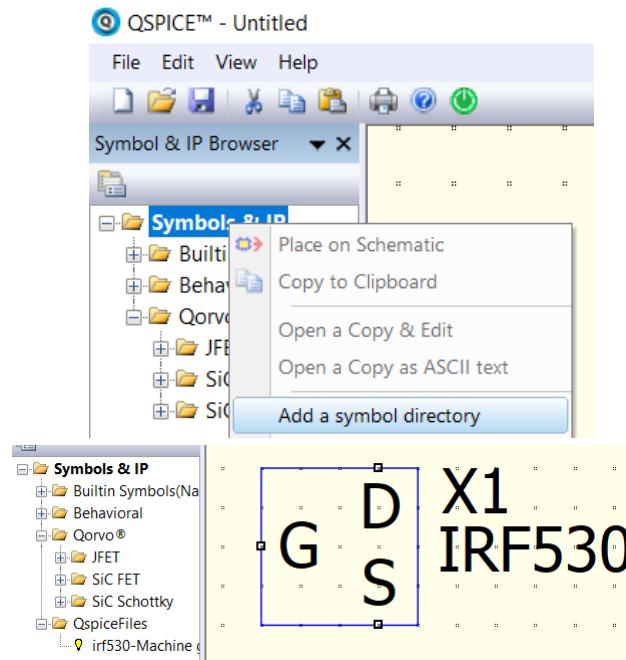



A completed example

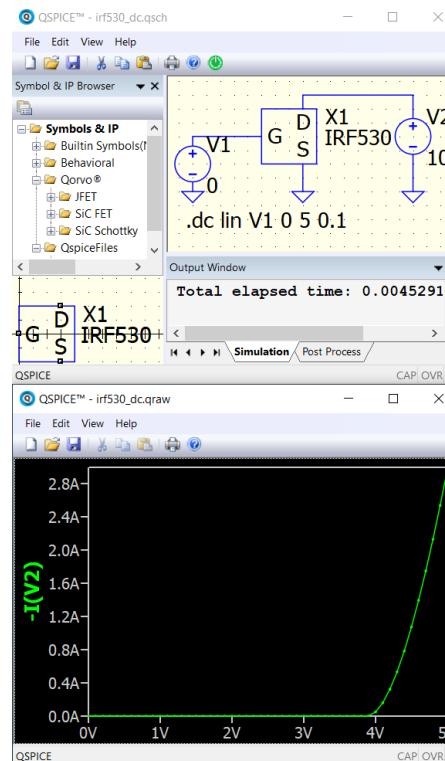

Symbol for Subckt [Embedded Subckt] : Label with Text

Qspice : irf530 with text.qsym

- Text can be used in label
 - For example, instead of changing net name, you can
 - Right click > Text
 - Right click on text > Select "Comment"
 - Text not comment will become valid item in netlist
 - Can change font size and color
 - Be careful 1st attribute is device name (e.g. IRF530 in example), and doesn't comment it

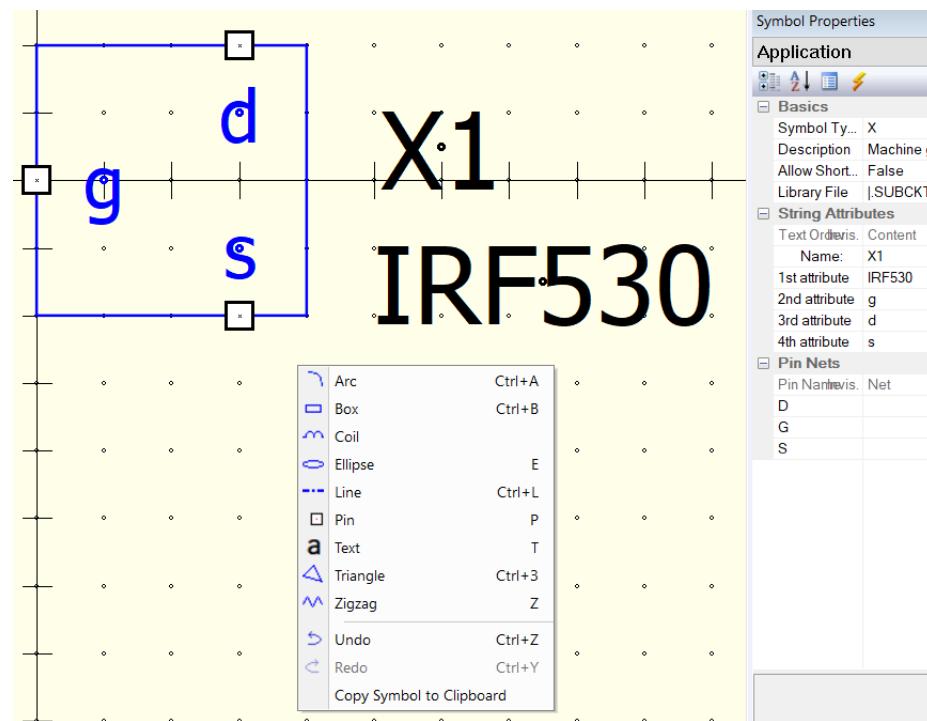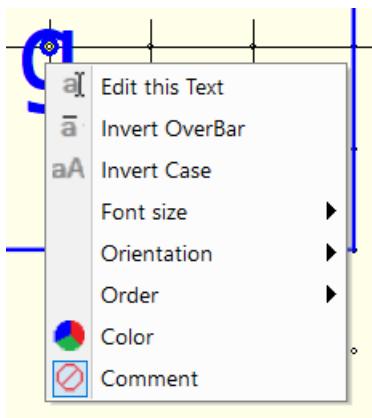

** Procedure to Create embedded SUBCKT symbol from Hierarchy : Method #1


Qspice : RC_sch.qsch

[1] Draw a schematic (hierarchy)

This example has

- Two ports : **in** and **out**
(for subckt I/O port, right click net name, set "This is a Port")
- Two input params : **R** and **Fcutoff**
(comment input parameter, we will add it from symbol later)
- One calculated parameter : **C**

```
; input parameters
.param R=1K
.param Fcutoff=1K
```

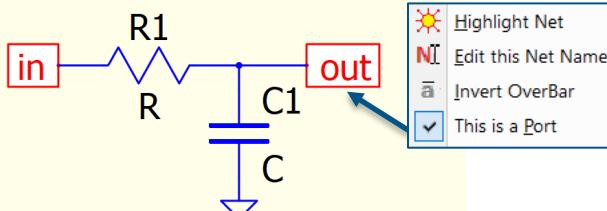

```
; calculated parameters
.param C=1/2/pi/R/Fcutoff
```

[2] Right click on schematic > Open Parent Schematic

- this will auto generate a Parent hierarchical block


[3] In .suckt netlist, Ctrl-A to select all and Ctrl-C to copy

[4] Return to schematic, Ctrl-V to paste netlist and auto generate a symbol

- this is a symbol with embedded .subckt

[5] Click on this symbol, Ctrl-C to copy it


[6] File > New > New Symbol , Ctrl-V to paste symbol in Symbol Viewer

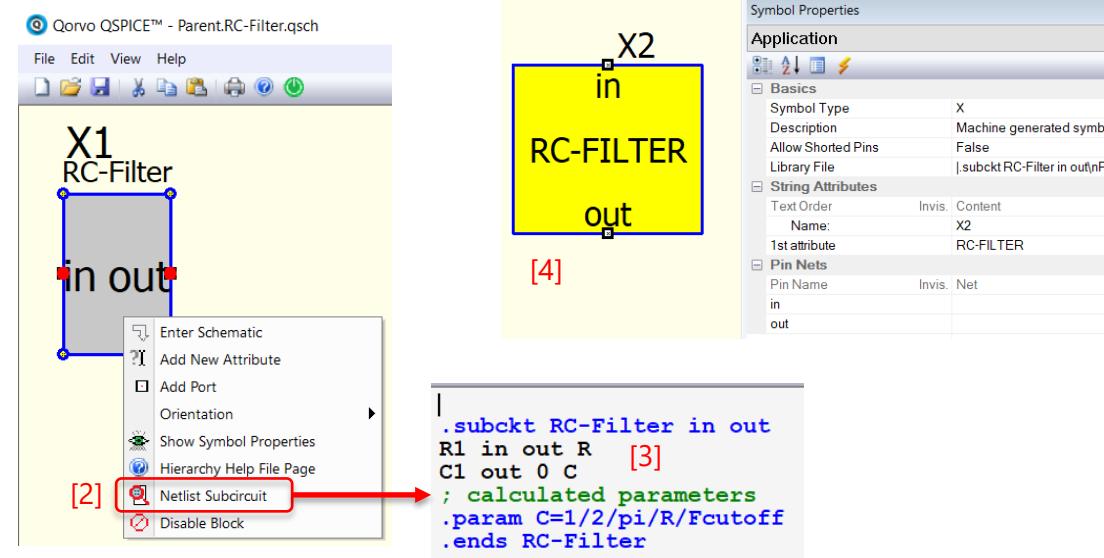


** Procedure to Create embedded SUBCKT symbol from Hierarchy : Method #1

Qspice : RC_sch.qsch

- [7] In Symbol Viewer, re-arrange symbol layout as you want
[8] To add input parameter R and Fcutoff, type "T" to enter new attribute. In this example, two attributes are added, and with arrow brackets <>. This syntax allows only to change value when this symbol is called

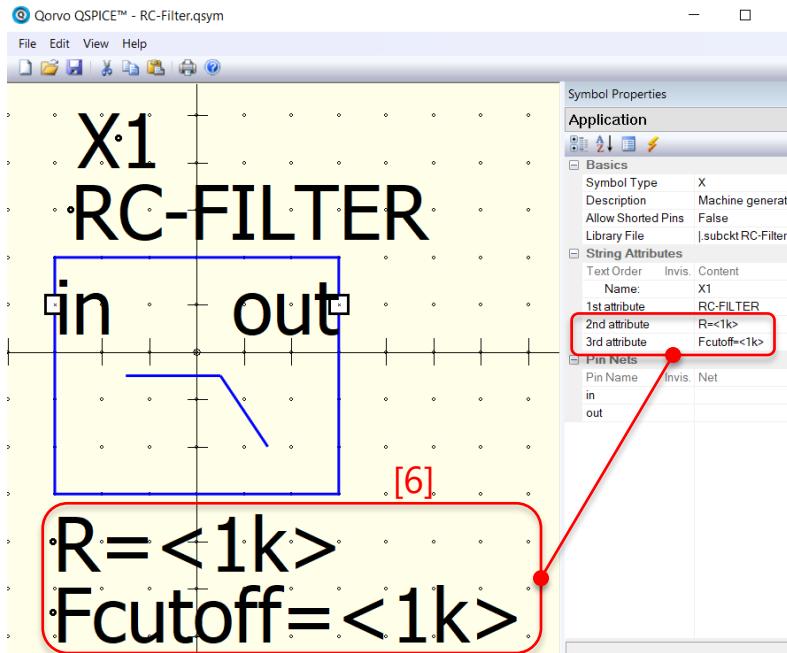

- [9] Now, you can use this symbol for simulation

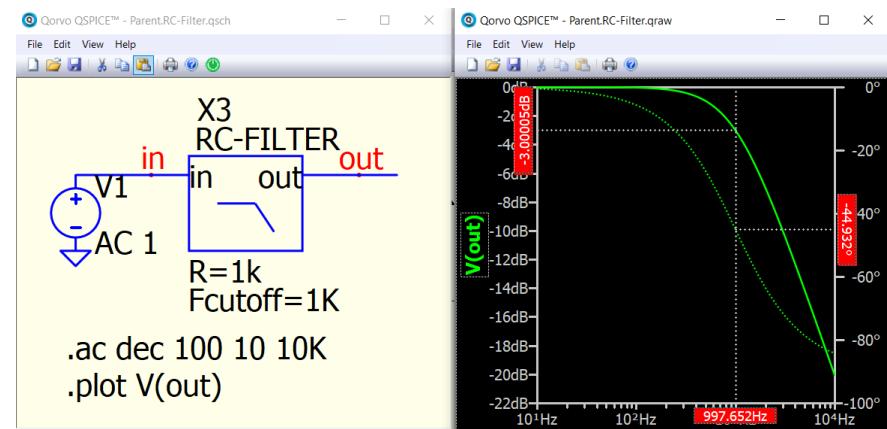

Technique if hierarchy circuit needs update

It is not required to re-draw the symbol. When hierarchy is updated, re-perform step [1] to [4]. Right click new auto generated symbol to show symbol properties. Click on .subckt in library file, Ctrl-A to select all, Ctrl-C to copy it. Open symbol .qsym, replace Library File with this new embedded .subckt line.

** Procedure to Create embedded SUBCKT symbol from Hierarchy : Method #2


Qspice : RC_Params.qsym | RC_sch.qsch

** This method was used before Qspice new feature added, for reference ONLY

[1] Draw a schematic (hierarchy)

This example has

- Two ports : **in** and **out**
- Two input params : R and Fcutoff
- One calculated parameter : C

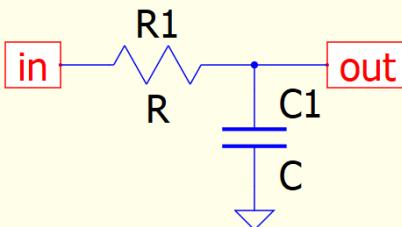

```
.param R=1K  
.param Fcutoff=1K  
fc = 1/2/pi/R/C  
.param C=1/2/pi/R/Fcutoff
```

[2] View > Netlist, copy this netlist

```
* C:\QspiceKSKelvin\01 User G
R1 in out R
C1 out 0 C
.param R=1K
.param Fcutoff=1K
.param C=1/2/pi/R/Fcutoff
.ends
```

Subcircuit Definition

Syntax: .subckt NAME N1 N2 N3 ...
...
...
.ends NAME


[3 : Method#1] Convert netlist to subckt

- First line add **.subckt**
- **RC** is NAME of subckt determined by user
- Follow with ports (net) : **in out**
- Follow with params : **R=1K Fcutoff=1K**
- Remove **.param R=1K** and **.param Fcutoff=1K**
- Last line add **.ends RC**

This is the finished version

```
.subckt RC in out params: R=1K Fcutoff=1K
R1 in out R
C1 out 0 C
.param C=1/2/pi/R/Fcutoff
.ends RC
```

Copy and paste .subckt script to schematic, then follow standard symbol creation procedure for embedded SUBCKT symbol creation

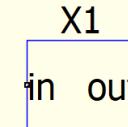

params: R=1K Fcutoff=1K

** Procedure to Create embedded SUBCKT symbol from Hierarchy : Method #2

Qspice : RC_noParams.qsym

[3 : Method#2] Convert netlist to subckt

- First line add `.subckt`
- **RC** is NAME of subckt determined by user
- Follow with ports (net) : **in out**
- Remove `.param R=1K` and `.param Fcutoff=1K`
- Last line add `.ends RC`


This is the finished version

```
.subckt RC in out
R1 in out R
C1 out 0 C
.param C=1/2/pi/R/Fcutoff
.ends RC
```

Copy and paste `.subckt` script to schematic, then follow standard symbol creation procedure for embedded SUBCKT symbol creation


[4 : Method#2] Add input param into symbol

- Two input params : **R=1K** and **Fcutoff=1K**
- Type T or Right Click > Text, input
 - **R=1K**
 - **Fcutoff=1K**
- This will create 2nd and 3rd attribute in String Attributes, where you can select to visible or not in symbol

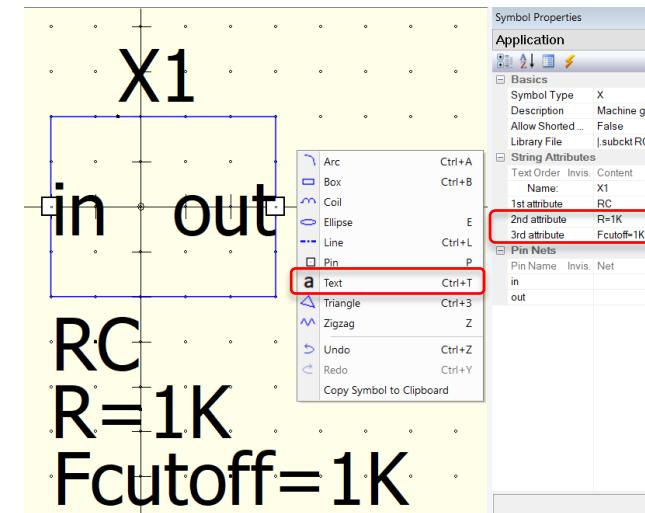

Autogenerate Symbol Pin Assignment

Qspice : Autogenerate Symbol Pin Assignment.qsch

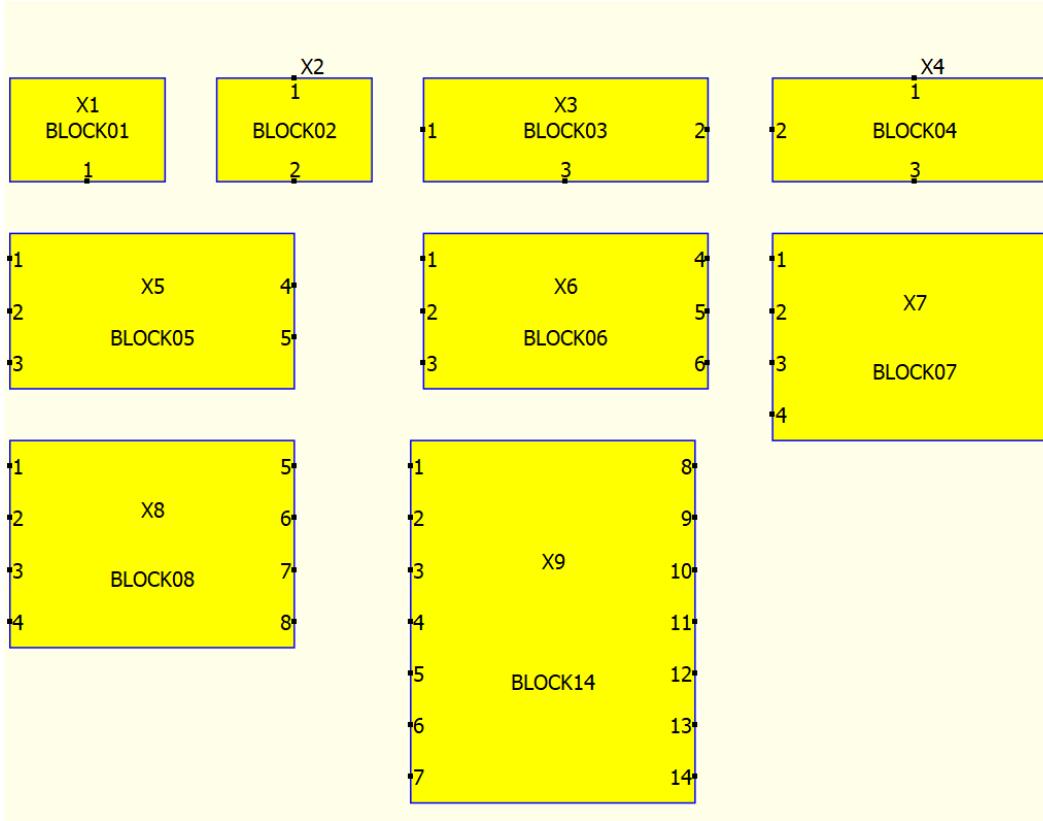

```
.subckt Block01 1  
.ends Block01
```

```
.subckt Block02 1 2  
.ends Block02
```

```
.subckt Block03 1 2 3  
.ends Block03
```

```
.subckt Block04 1 2 3 4  
.ends Block04
```

```
.subckt Block05 1 2 3 4 5  
.ends Block05
```

```
.subckt Block06 1 2 3 4 5 6  
.ends Block06
```

```
.subckt Block07 1 2 3 4 5 6 7  
.ends Block07
```

```
.subckt Block08 1 2 3 4 5 6 7 8  
.ends Block08
```

```
.subckt Block14 1 2 3 4 5 6 7 8 9 10 11 12 13 14  
.ends Block14
```

Part 2C


Symbol for Subckt

[Link to Library]

Symbol for Subckt [Create Symbol and Link to Library]

Example to create subckt symbol for irf530

- [1] File → New → New Symbol
- [2] Right Click → Pin (to add 3 pins with order D, G, S)
- [3] Right Click at center of Pin to review PinOrder and PinLabel

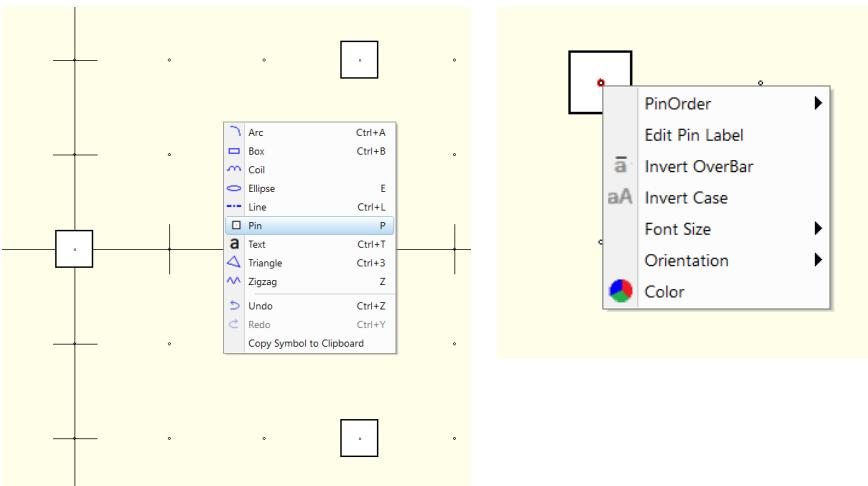

```
irf530.lib x
1 *Feb 16, 2010
2 *Doc. ID: 90181, Rev. A
3 *File Name: part irf530_PS.txt and part irf
4 *This document is intended as a SPICE model
5 *constitute a commercial product data sheet
6 *appropriate data sheet of the same number
7 *limits.
8 .SUBCKT irf530 1 2 3
9 ****
10 *      Model Generated by MODPEX      *
11 *Copyright(c) Symmetry Design Systems*
12 *          All Rights Reserved        *
13 *          UNPUBLISHED LICENSED SOFTWARE  *
14 *          Contains Proprietary Information *
15 *          Which is The Property of      *
16 *          SYMMETRY OR ITS LICENSORS      *
17 *Commercial Use or Resale Restricted   *
18 *      by Symmetry License Agreement    *
19 ****
20 * Model generated on Apr 24, 96
21 * Model format: SPICE3
22 * Symmetry POWER MOS Model (Version 1.0)
23 * External Node Designations
24 * Node 1 -> Drain
25 * Node 2 -> Gate
26 * Node 3 -> Source
27 M1 9 7 8 8 MM L=100u W=100u
28 * Default values used in MM:
```

Symbol for Subckt [Create Symbol and Link to Library]

[4] Draw a box for outline



[5] Put an "X" in Symbol Type in Symbol Properties

[6] Right Click → Text → Put an "X"

[7] To justify Pin label, double click center of Pin


[8] Click red dot other than its centered justification

[9] Save symbol file as .qsym

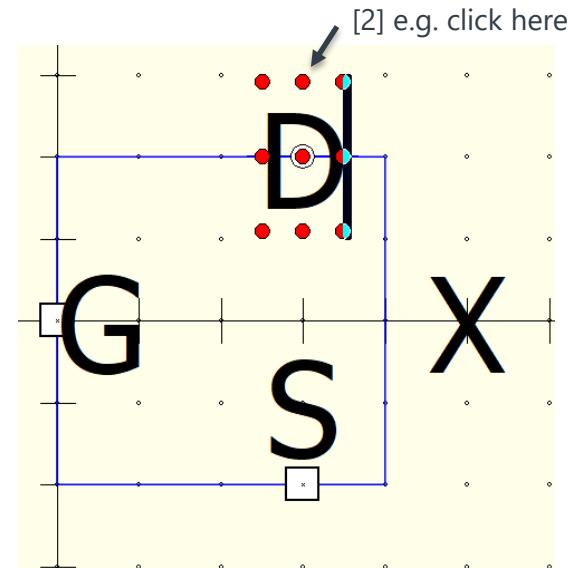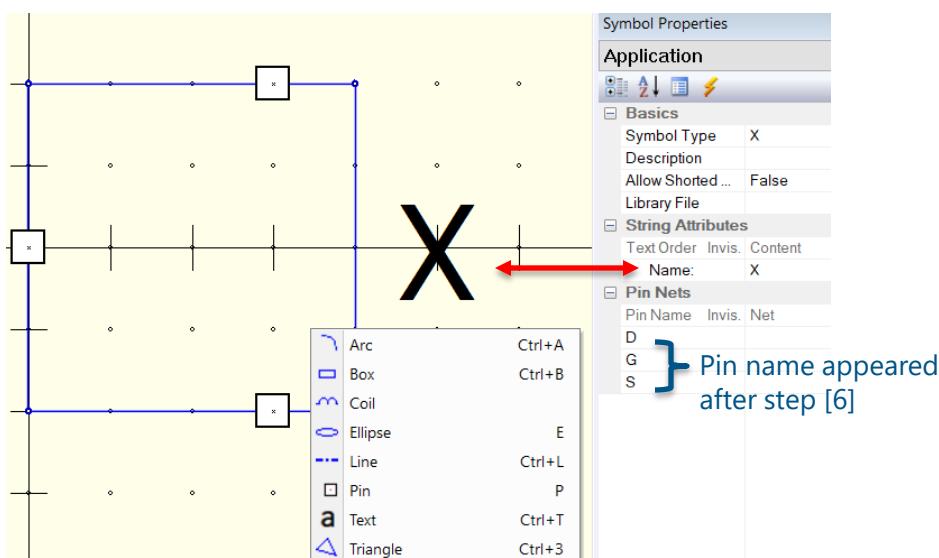


Symbol for Subckt [Create Symbol and Link to Library]

- [10] In Schematic, Symbol & IP Browser, Right Click to "Add a symbol directory"
- [11] Drag created component to schematic

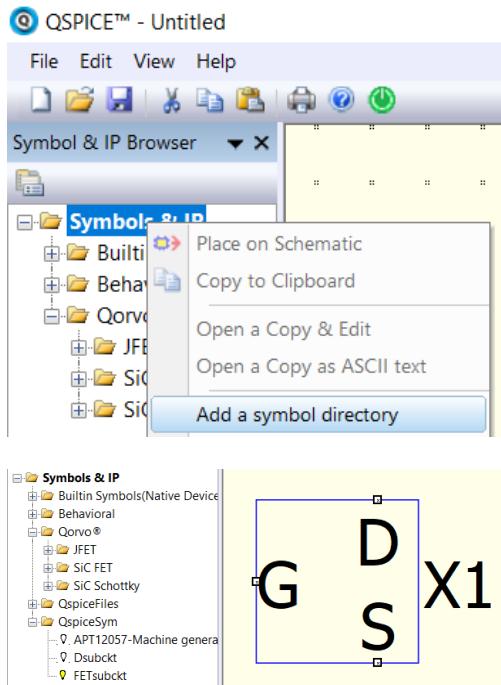

- [12] Right Click on symbol, "Add New Attribute" as irf530
- [13] In Symbol Properties, add "Library File" as irf530.lib
** library file is required to be put in schematic directory


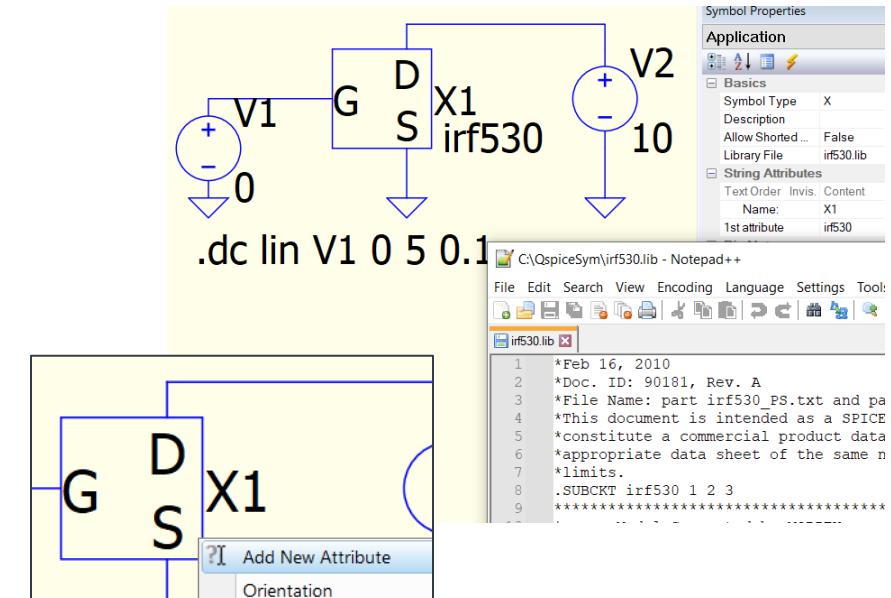


Part 2D

Convert MOSFET M to subckt Symbol

Convert MOSFET M to subckt Symbol

Qspice : Call Lib from M.qsch

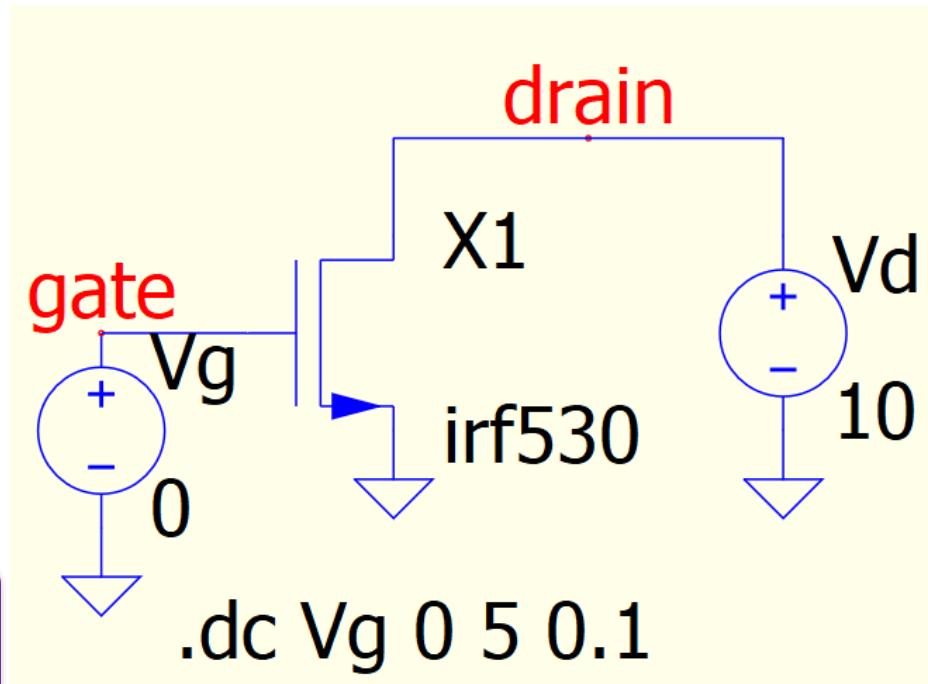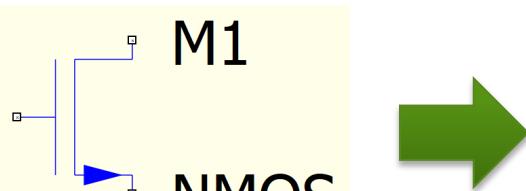

Symbol Properties

Application

Basics

- Symbol Type: X
- Description: N-Channel MOSF...
- Allow Shorted ...: False
- Library File: irf530.lib

String Attributes

Text Order Invis. Content


- Name: X1
- 1st attribute: irf530

Pin Nets

Pin Name	Invis.	Net
D		drain
G		gate
S		GND

It is possible to convert MOSFET symbol M into a sub-circuit symbol by


1. Change Symbol Type from MN to X
2. Library File as subckt library file
3. 1st attribute as subckt name
4. [Optional] Change Symbol Name to X?

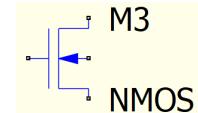

** this alternative symbol is 4 pins (+ base), which cannot support 3 pin subckt


Pin Order in Symbol MN and MP

Pin Order for Symbol MN (NMOS)

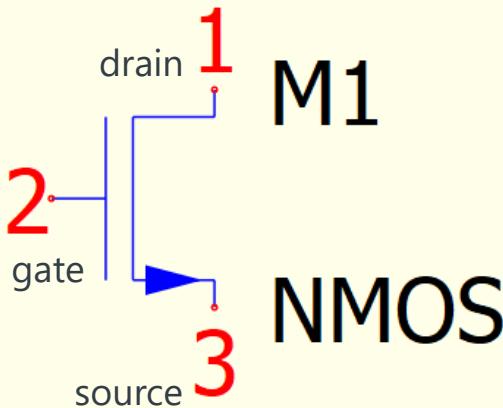

Application			
<input type="checkbox"/>	Basics		
	Symbol Type	MN	
	Description	N-Channel MOSF...	
	Allow Shorted ...	False	
	Library File	NMOS.txt	
<input type="checkbox"/>	String Attributes		
	Text Order Invis.	Content	
	Name:	M1	
	1st attribute	NMOS	
<input type="checkbox"/>	Pin Nets		
	Pin Name	Invis.	Net
D		1	
G		2	
S		3	

Pin Order for Symbol MP (PMOS)

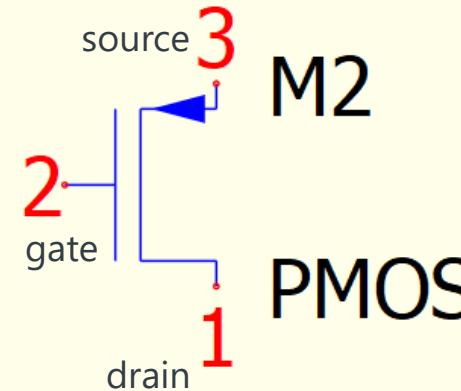

Application			
<input type="checkbox"/>	Basics		
	Symbol Type	MP	
	Description	P-Channel MOSF...	
	Allow Shorted ...	False	
	Library File	PMOS.txt	
<input type="checkbox"/>	String Attributes		
	Text Order Invis.	Content	
	Name:	M2	
	1st attribute	PMOS	
<input type="checkbox"/>	Pin Nets		
	Pin Name	Invis.	Net
D		1	
G		2	
S		3	

Part 2E


Bus and Hierarchical Block

Bus and Hierarchical Block

- Bus and Hierarchical Block
 - With Bus, data is defined as Data[n:m]
 - In Qspice, this net name format create a series of net names from Data[n] to Data[m]
 - If $n < m$, net name are Data[n], Data[n+1], Data[n+2], ... , Data[m]
 - If $n > m$, net name are Data[n], Data[n-1], Data[n-2], ... , Data[m]
 - For hierarchical block, subckt bus net names are assigned according to index sequence
 - To use data bus, it is recommending bus, hierarchical block and subckt with same data bus index, which can prevent unexpected behavior in net assignment

Bus and Hierarchical Block

Qspice : Parent-BUS.qsch / BUS_Hierarchical.qsch / bus_dll.cpp

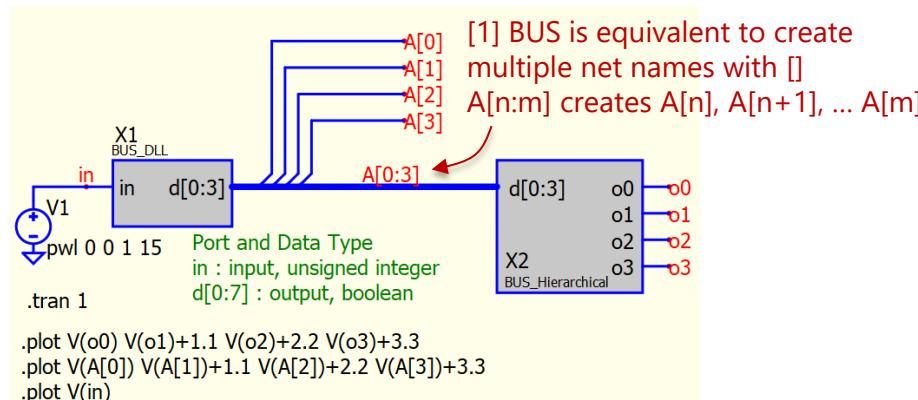



```

  /* C:\QspiceKSKelvin\01 User Guide and Script\01 Qspice Reference \01
  Ø†X1 «in'ui» «A[0]'b A[1]'b A[2]'b A[3]'b» »» BUS_DLL
  V1 in 0 pwl 0 0 1 15
  X2 A[0] A[1] A[2] A[3] o0 o1 o2 o3 BUS_Hierarchical

  .subckt BUS_Hierarchical d[0] d[1] d[2] d[3] o0 o1 o2 o3
  V1 d[0] o0 0
  V2 d[1] o1 0
  V3 d[2] o2 0
  V4 d[3] o3 0
  .ends BUS_Hierarchical


  .tran 1
  .plot V(o0) V(o1)+1.1 V(o2)+2.2 V(o3)+3.3
  .plot V(A[0]) V(A[1])+1.1 V(A[2])+2.2 V(A[3])+3.3
  .plot V(in)
  .end
  
```

[2] Subckt X1, hierarchical X2 are all feed in same name and order

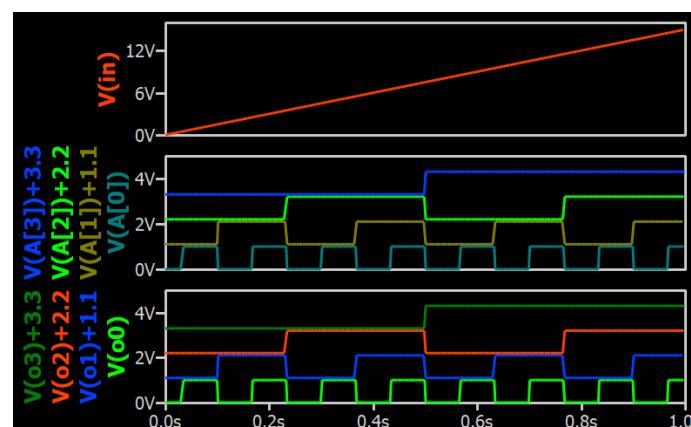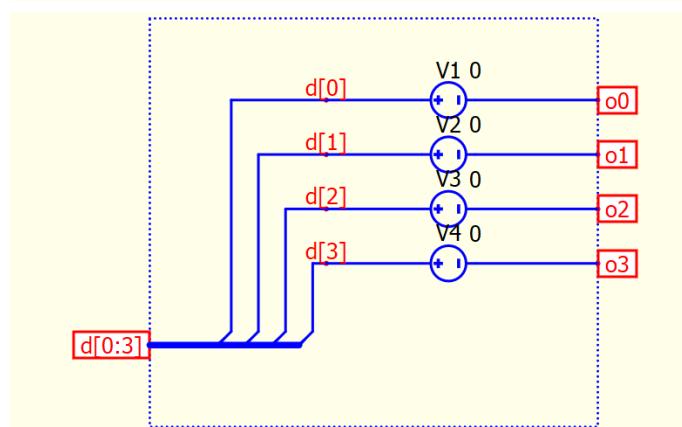

Bus and Hierarchical Block : Change BUS name order



Qspice : Parent-BUS.qsch / BUS_Hierarchical.qsch / bus_dll.cpp

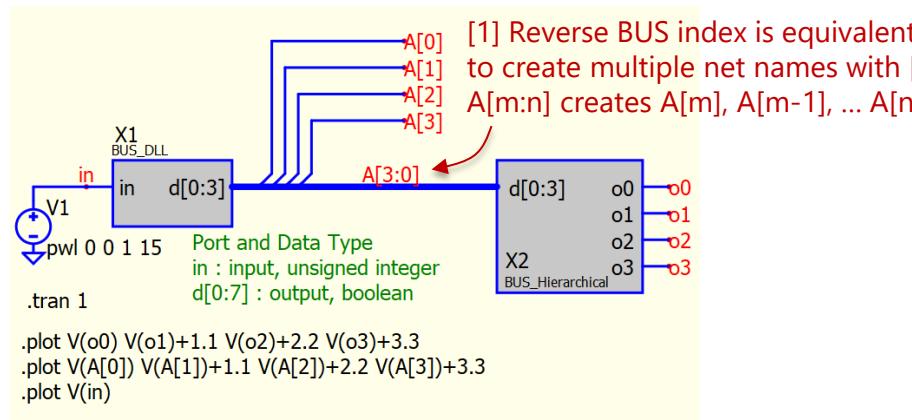

* C:\QspiceKSKelvin\01_User_Guide_and_Script\01_Qspice Reference (0
 $\otimes X1$ «in'ui» «A[3]'b A[2]'b A[1]'b A[0]'b» »» BUS_DLL
V1 in 0 pw1 0 0 1 15
X2 A[3] A[2] A[1] A[0] o0 o1 o2 o3 BUS_Hierarchical



.subckt BUS_Hierarchical d[0] d[1] d[2] d[3] o0 o1 o2 o3
V1 d[0] o0 0
V2 d[1] o1 0
V3 d[2] o2 0
V4 d[3] o3 0
.ends BUS_Hierarchical
[2] Subckt X1-d[0] is connected to A[3]
[3] This order is feed into hierarchical block
X2, e.g. A[3] is feed into X2-d[0]

.tran 1
.plot V(o0) V(o1)+1.1 V(o2)+2.2 V(o3)+3.3
.plot V(A[0]) V(A[1])+1.1 V(A[2])+2.2 V(A[3])+3.3
.plot V(in)
.end

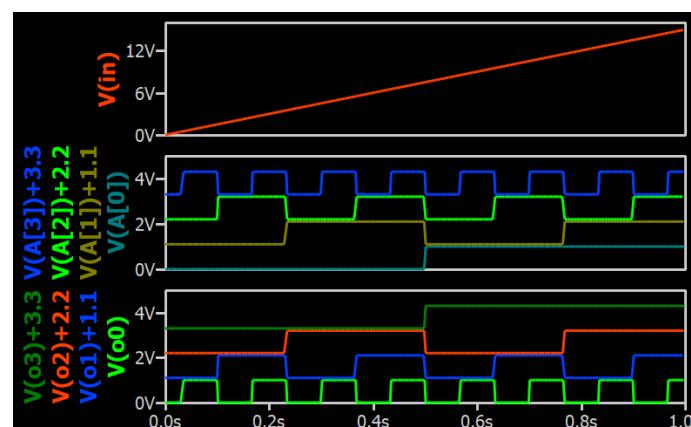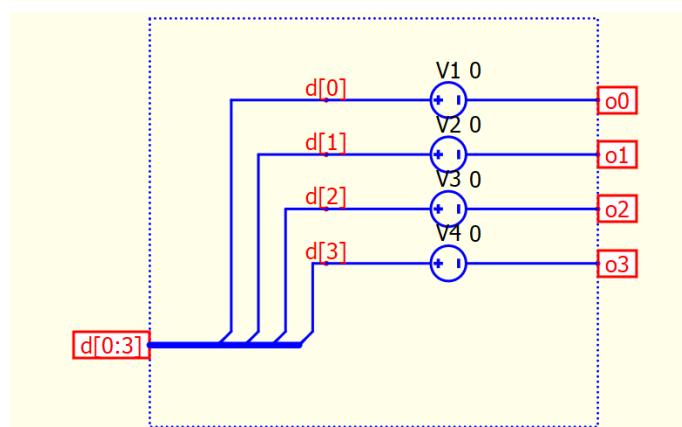

Bus and Hierarchical Block : Change Hierarchical net label order

Qspice : Parent-BUS.qsch / BUS_Hierarchical.qsch / bus_dll.cpp

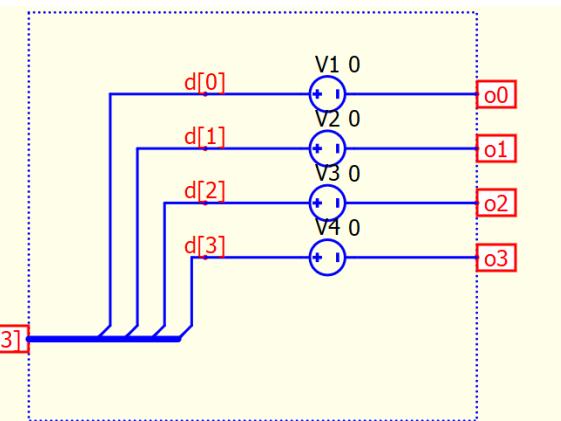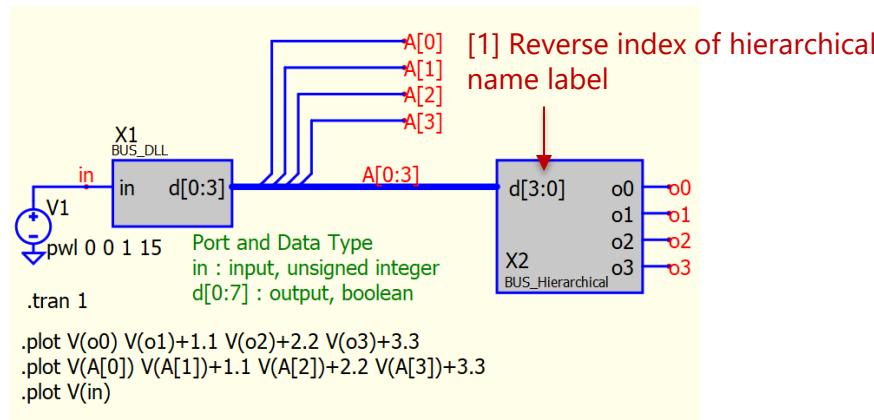


```
* C:\QspiceKSKelvin\01 User Guide and Script\01 Qspice Reference \0
\*X1 «in'ui» «A[0]'b A[1]'b A[2]'b A[3]'b» » BUS_DLL
V1 in 0 pwl 0 0 1 15
X2 A[0] A[1] A[2] A[3] o0 o1 o2 o3 BUS_Hierarchical

.subckt BUS_Hierarchical d[3] d[2] d[1] d[0] o0 o1 o2 o3
V1 d[0] o0 0
V2 d[1] o1 0
V3 d[2] o2 0
V4 d[3] o3 0
.ends BUS_Hierarchical

.tran 1
.plot V(o0) V(o1)+1.1 V(o2)+2.2 V(o3)+3.3
.plot V(A[0]) V(A[1])+1.1 V(A[2])+2.2 V(A[3])+3.3
.plot V(in)
.end
```

[2] Hierarchical block X2 name is reversed, but Hierarchical / Subckt net assignment is based on order, therefore, A[0] is feed to hierarchical subckt d[3] in this case

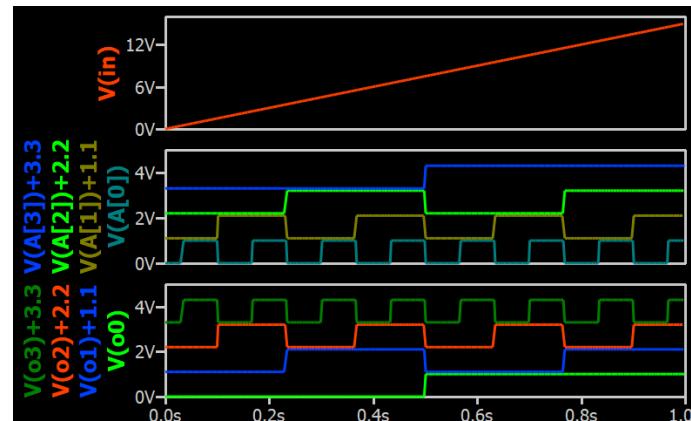


Part 2F

Device with .model

Device with .model

Qspice : Diode - .model and embedded .model.qsch


- Device with .model
 - .model can be added with a text in schematic
 - For embedded .model, the symbol character “|” need to be added at beginning of .model in Symbol Properties > Library File
 - Without symbol “|”, .lib will be used in netlist to look for a library file name in this field

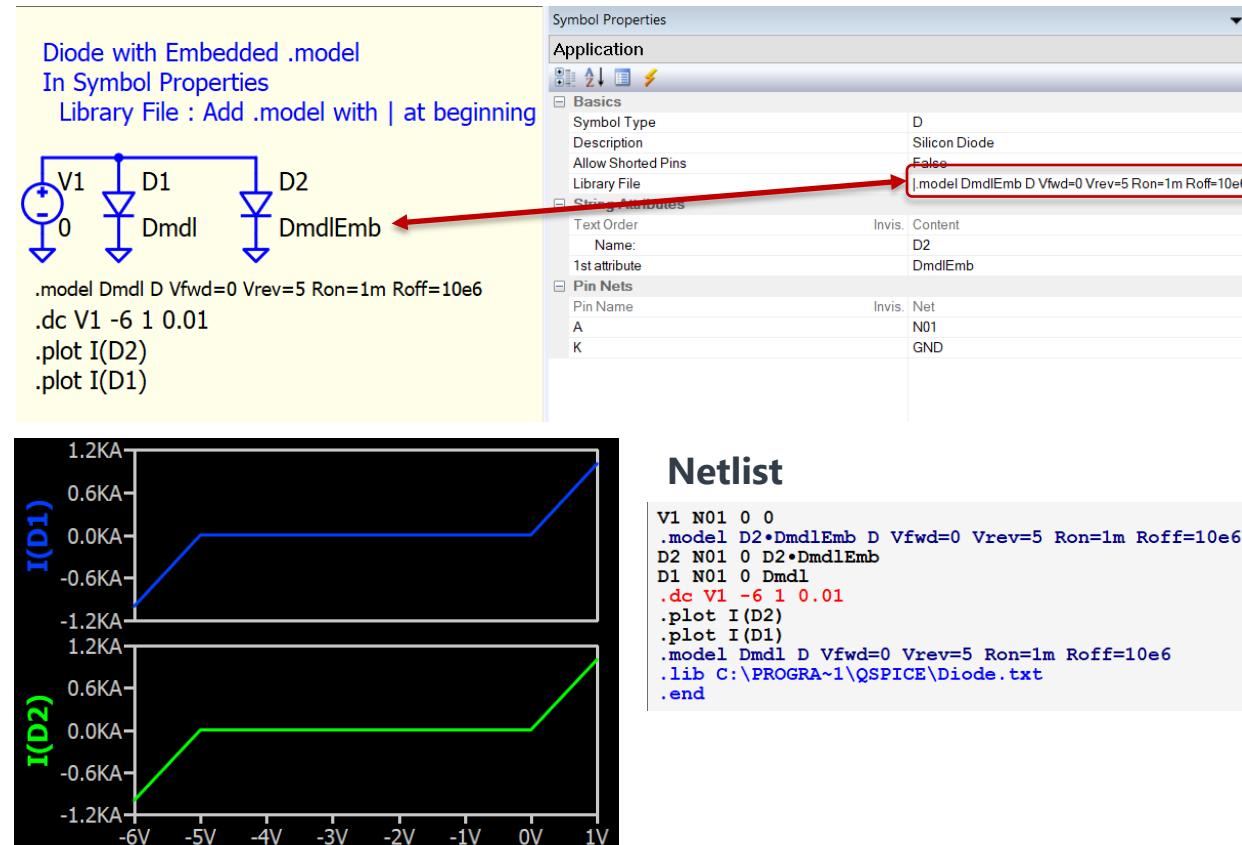


Schematic Viewer

Selection Guide for Qspice symbols and library files

1. Assume user has a user-supplied library files in C:\QspiceLib

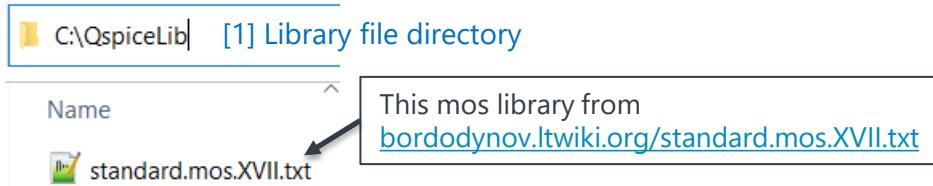


2. In Qspice : View > Symbol & IP Browser
 - Right click "Symbols & IP", Add a symbol directory
 - Add C:\QspiceLib

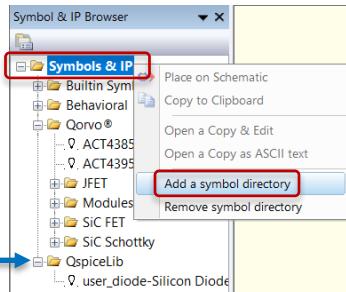


** If a path without .qsym, it will not show in Symbols & IP browser. But the path can still be added. **Right Click > Edit User-Supplied Directories** will shown that

3. Place Qspice symbol to schematic

- Place Qspice symbol, replace Library File name with user-supplied library name

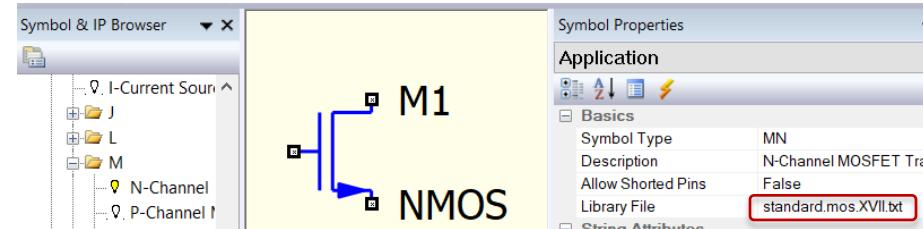


4. Selection Guide

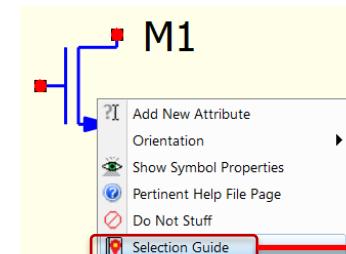


P/N	Manufacturer	Vds[V]	Ids[A]	Rds(on)[mΩ]	Qg[nC]
VT6K1_AB	ROHM	20	3000.0	0.7	
FDY301N_AB	Fairchild	25	5000.0	0.7	
KP505A	USSR	50	300.0		
kp505g	USSR	8	1000.0		
KP301B	USSR	-20	100000.0		
KP305	USSR	15			
KP723A	INTEGRAL	60	28.0		
KP723G	INTEGRAL	60	28.0		
KP501A	USSR	240	10000.0		

Selection Guide for user-supplied symbols and library files

1. Assume user has a user-supplied symbols and library files in C:\QspiceLib

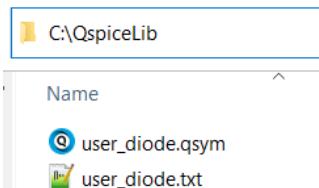


[1] Symbol and Library in same directory

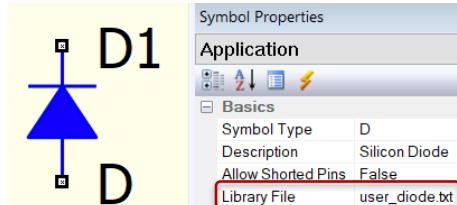

[2] Library File in user symbol is library name (e.g. user_diode.txt)



2. In Qspice : View > Symbol & IP Browser
 - Right click "Symbols & IP", Add a symbol directory
 - Add C:\QspiceLib

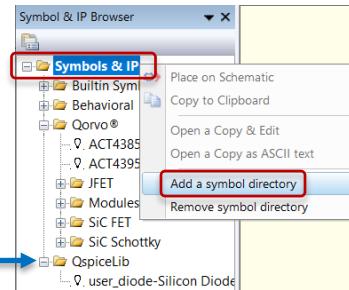

When add a symbol directory, it will add following in netlist .libpath "C:\QspiceLib"


3. Drag user symbol to schematic

- Right click on symbol, "Selection Guide" is available

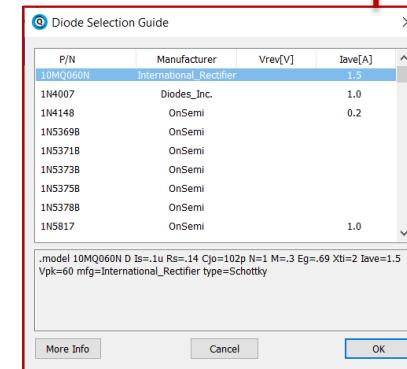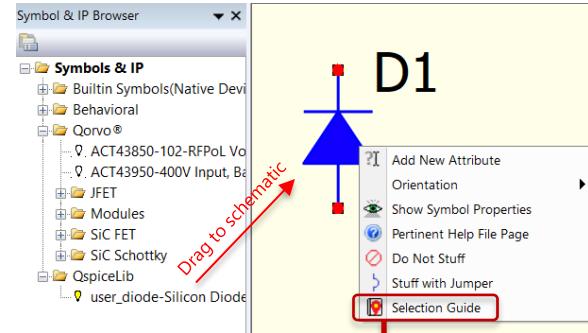


Eliminate the use of absolute path in user-symbols

1. Assume user has a user-supplied symbols and library files in C:\QspiceLib

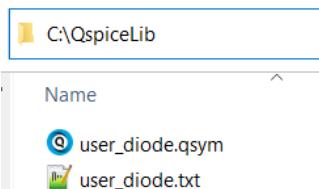


[1] Symbol and Library in same directory

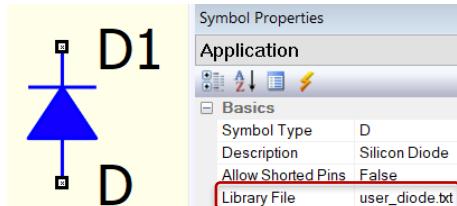

[2] Library File in user symbol is library name (Not absolute path)


2. In Qspice : View > Symbol & IP Browser
 - Right click "Symbols & IP", Add a symbol directory
 - Add C:\QspiceLib

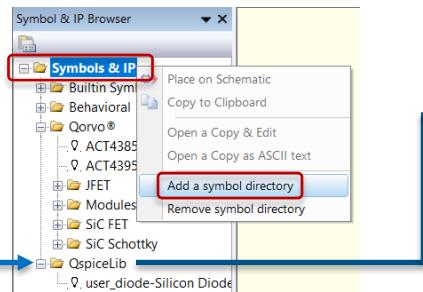

When add a symbol directory, it will add following in netlist
.libpath "C:\QspiceLib"

3. Draw a schematic in other folder

- Now you can use user-symbol or Qspice symbol but change library file from diode.txt to user_diode.txt

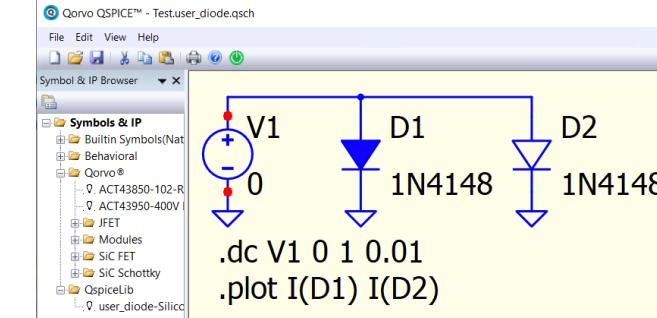

```
V1 N01 0 0
D1 N01 0 1N4148
.dc V1 0 1 0.01
.plot I(D1)
.lib user_diode.txt
.end
```

Qspice search path for files

1. If specified as an absolute path, only that is used.
2. Current working directory
3. Directories supplied in .libpath command(s)
4. QSPICE installation directory

Waveform Viewer

Waveform Viewer Plot Config File (*.pfg) and .plot directive

- Waveform Viewer Config File (*.pfg) and .plot
 - In waveform viewer, plot config can be saved with File > Save Config : [qschname].pfg
 - This config file save windows, traces and axis setting
 - Press spacebar in waveform viewer can re-load config file [qschname].pfg
 - Two unique feature [qschname].pfg can provide but not support by .plot
 - Pre-define x-axis Quantity
 - Pre-define x and y-axis range

Waveform Viewer	Plot Config File [1] [qschname].pfg	.plot command in schematic	Outcome
Closed before Simulation	No	No	A blank waveform viewer
	No	Yes	Plot according to .plot command
	Yes	[ignore]	Plot according to [qschname].pfg config
Opened before Simulation	[ignore]	[ignore]	Keep windows and traces setting from last plot, reset x and y-axis


[1] Save plot config in Waveform Viewer : File > Save Config

** In Waveform Viewer, press Spacebar to reload [qschname].pfg plot config file


** to use .plot, delete [qschname].pfg and close waveform viewer before run of simulation

Data Export in Waveform Viewer – with @ in expression for .step

Qspice : waveform - with @ for step.qsch

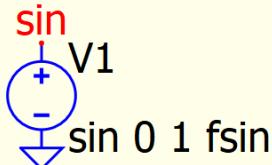

```
.step param fsin list 40G 80G  
.tran 1/fsin  
.plot V(sin)
```

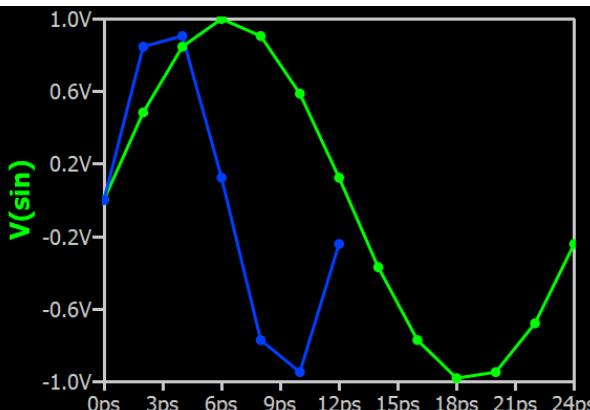

- Data Export
- Setup Data Export
 - File > Export Data
 - Number Points : All
 - Expression(s) : V(sin),FSIN
- Data Export with @
 - Setup Data Export
 - File > Export Data
 - Number Points : All
 - Expression(s) : V(sin)@1,V(sin)@2

```
Time,V(sin),FSIN  
0,0,40000000000  
2.001953125e-12,0.482183772079123,40000000000  
4.00390624999999e-12,0.844853565249706,40000000000  
6.00585937500001e-12,0.998118112900149,40000000000  
8.00781250000003e-12,0.903989293123441,40000000000  
1.0009765625e-11,0.58579785745643,40000000000  
1.2011718750001e-11,0.122410675199201,40000000000  
1.40136718750001e-11,-0.371317193951856,40000000000  
1.6015625e-11,-0.773010453362737,40000000000  
1.80175781249999e-11,-0.983105487431211,40000000000  
2.00195312499998e-11,-0.949528180593055,40000000000  
2.20214843749997e-11,-0.680600997795516,40000000000  
2.4023437499995e-11,-0.242980179903377,40000000000  
0,0,80000000000  
2.001953125e-12,0.844853565249706,80000000000  
4.00390625000001e-12,0.903989293123441,80000000000  
6.00585937500003e-12,0.122410675199201,80000000000  
8.0078125e-12,-0.773010453362736,80000000000  
1.00097656249999e-11,-0.949528180593055,80000000000  
1.20117187499998e-11,-0.242980179903377,80000000000
```


```
Time,V(sin)@1,V(sin)@2  
0,0,0  
2.001953125e-12,0.482183772079123,0.844853565249706  
4.00390624999999e-12,0.844853565249706,0.903989293123441  
6.00585937500001e-12,0.998118112900149,0.12241067519921  
8.00781250000003e-12,0.903989293123441,-0.773010453362739  
1.0009765625e-11,0.58579785745643,-0.9495281805930593  
1.20117187500001e-11,0.122410675199201,-0.596254180248215  
1.40136718750001e-11,-0.371317193951856,-0.596254180248215  
1.6015625e-11,-0.773010453362737,-0.596254180248215  
1.80175781249999e-11,-0.983105487431211,-0.596254180248215  
2.00195312499998e-11,-0.949528180593055,-0.596254180248215  
2.20214843749997e-11,-0.680600997795516,-0.596254180248215  
2.4023437499995e-11,-0.242980179903377,-0.596254180248215  
0,0,0  
2.001953125e-12,0.482183772079122,0.844853565249706  
4.00390625000001e-12,0.844853565249707,0.903989293123441  
6.00585937500003e-12,0.998118112900148,0.122410675199201  
8.0078125e-12,-0.773010453362736,-0.773010453362736  
1.00097656249999e-11,0.585797857456455,-0.949528180593055  
1.20117187499998e-11,0.122410675199269,-0.242980179903377
```

Snapshot Data Method – Export Data with Single Number Points

Qspice : waveform - time snapshot.qsch


- Snapshot Data

- To create a snapshot dataset (e.g. all calculated results at particular time)
- This example demonstrate a snapshot data in csv format with export data method
- Idea is to force number points in data export to 1
 - Output two row but both are identical if start and stop are same
 - If start and stop are not same, output two row with time=start and time=stop

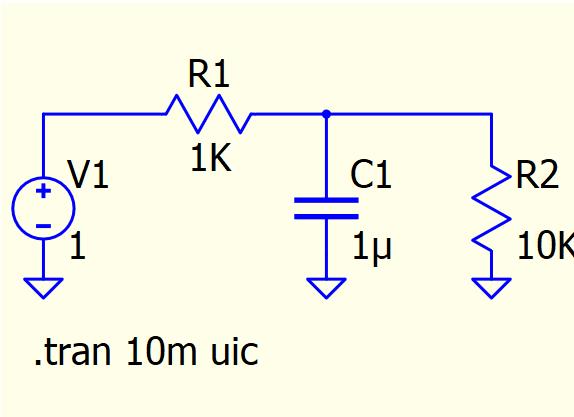

In waveform viewer

1. File > Export Data
2. Change Number Points to 1
3. File Format : CSV
4. Abscissa Extent : 1, Start = Stop
5. Select All

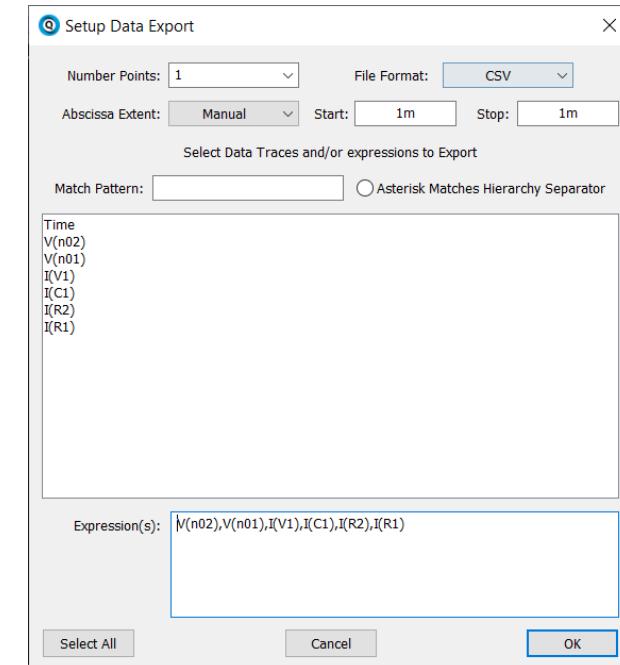



Result in exported csv

Time	V(n02)	V(n01)	I(V1)	I(C1)	I(R2)	I(R1)
0.001	1	0.606398	-0.00039	0.000333	6.06E-05	0.000394
0.001	1	0.606398	-0.00039	0.000333	6.06E-05	0.000394

Data export in .ac analysis – Complex format

Qspice : waveform - complex format (.ac).qsch

- Data export in .ac analysis
 - Data export in waveform viewer from .ac analysis is complex format
 - In .qraw data file, Flags : complex
 - Complex format data in ascii (.csv) is as R,X
 - where R is real and X is imaginary
 - If assume data is complex voltage $V_{complex} = V_r + jV_x$
 - $|V_{complex}| = \sqrt{V_r^2 + V_x^2} = \text{abs}(V_{complex})$
 - Magnitude in dB : $V_{complex,dB} = 20 \log_{10} |V_{complex}| = 20 * \log_{10} (\text{abs}(V_{complex}))$
 - $\angle V_{complex} = \tan^{-1} \frac{V_x}{V_r} = \text{atan2d}(\text{imag}(V_{complex}), \text{real}(V_{complex})) = \text{angle}(V_{complex}) * 180/\pi$

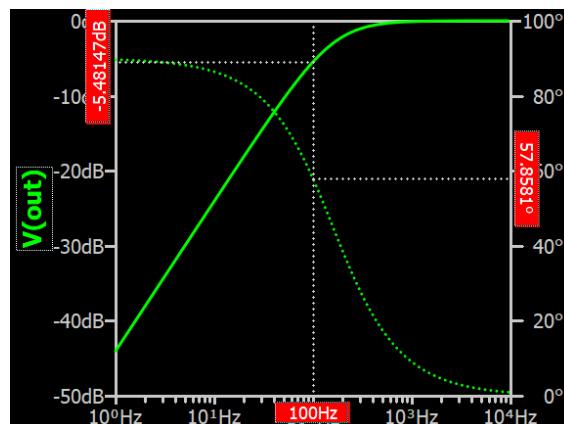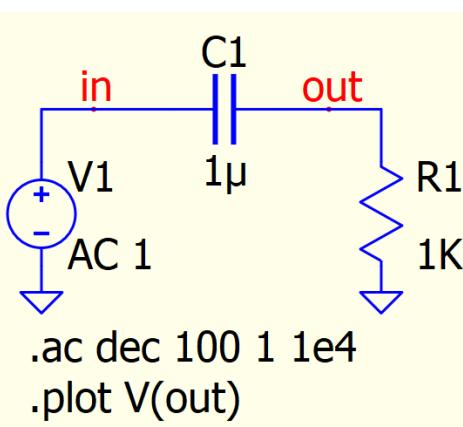

```
vout = 0.2830 + 0.4505i
vout_db = -5.4815 dB @ 100Hz
vout_ph = 57.8585 Phase @ 100Hz
```

Frequency, V(out)	V(out)_db	V(out)_phase
1 3.94768591214272e-05, 0.00628293726675837		
3 1.02329299228075 4.13372692659287e-05, 0.00642927371443294		
4 :		
6 97.7237220955805 0.273792005193308, 0.445903513201606		
7 99.9999999999995 0.2830431996751, 0.450477243368387		
8 102.329299228075 0.292481088087185, 0.45490207869224		
9 104.712854805089 0.302101072770688, 0.459168830171961		

@100Hz, $V(\text{out}) = 0.28304 + j*0.45048$

Waveform Viewer – FFT (Fast Fourier Transform)

Qspice : waveform - FFT.qsch

- FFT
 - Fast Fourier Transform (FFT) is a right-click option in waveform viewer
 - A Setup FFT window will pop up to select which expression for FFT, number of points (affect post-processing time), window function etc...




sgl
V1

pulse 0 1 0 1n 1n duty/frq 1/frq

.param duty=0.5 frq=10

.tran 100/frq

.plot V(sgl)

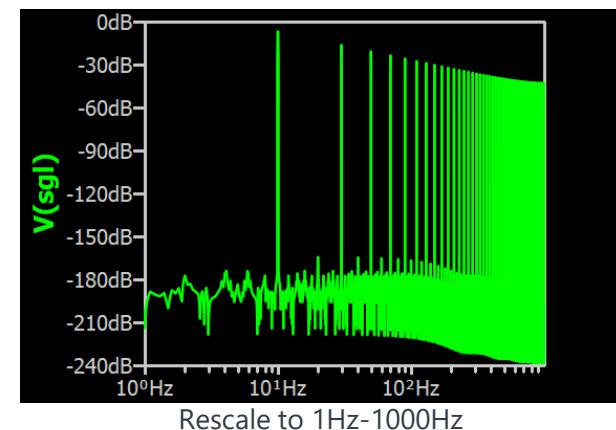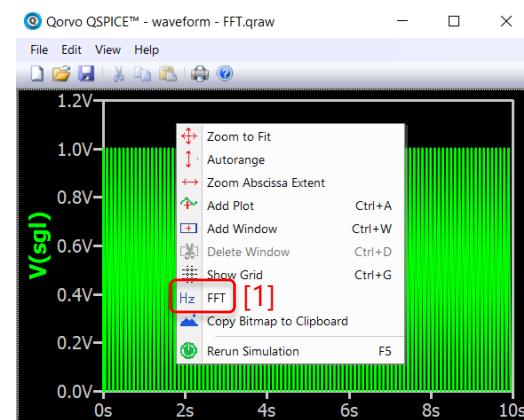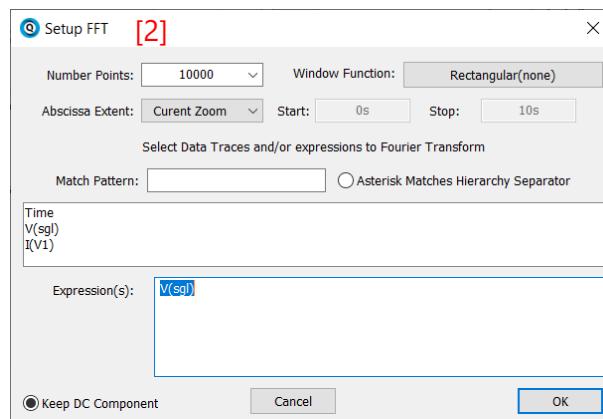


Waveform Viewer – Run a .meas script

Qspice : waveform - meas script.qsch | waveform - meas script.txt


- Run a .meas script
 - File > Run a .meas script
 - load a .meas script from a text file to post-processing (QPOST.exe) the waveform
 - Preparation of .meas script
 - First line needs to be comment (add a * at beginning) as this line will be ignored

.meas script in text file

** first line needs to be comment

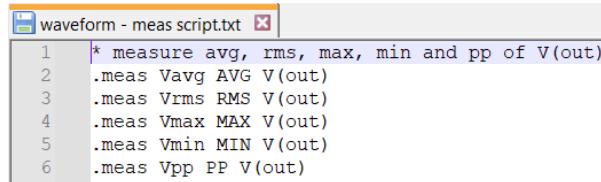



```
1 * measure avg, rms, max, min and pp of V(out)
2 .meas Vavg AVG V(out)
3 .meas Vrms RMS V(out)
4 .meas Vmax MAX V(out)
5 .meas Vmin MIN V(out)
6 .meas Vpp PP V(out)
```

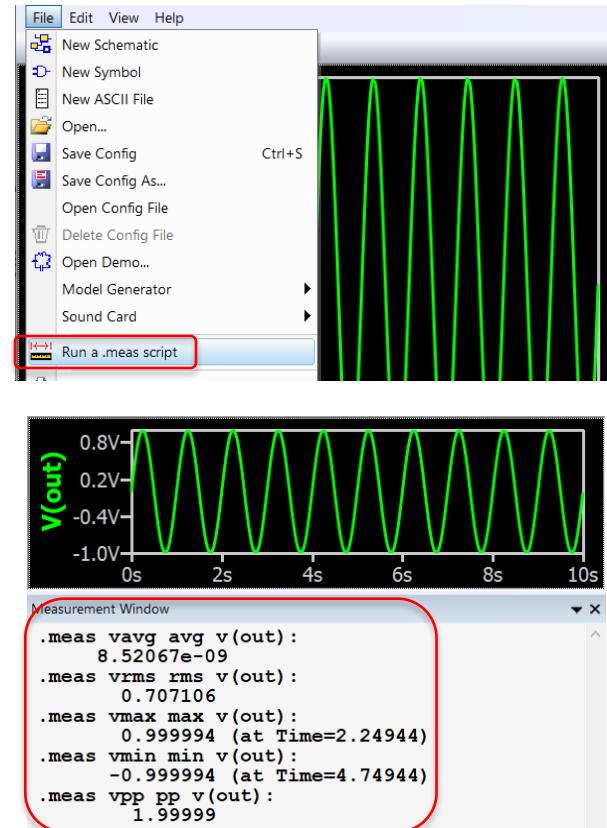

Waveform Viewer – Minimum Tick and Waveform Measure



- Minimum Tick

- Maximum number of ticks in x- and y-axis are 11
- Depends on windows size, maximum number of ticks can reduce to 6
- Therefore, minimum allowable tick is $\frac{\text{Right}-\text{Left}}{10}$ or $\frac{\text{top}-\text{bottom}}{10}$

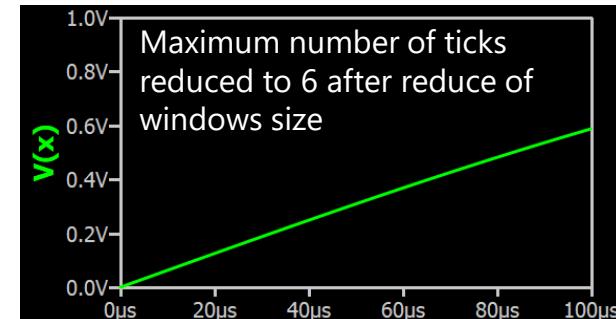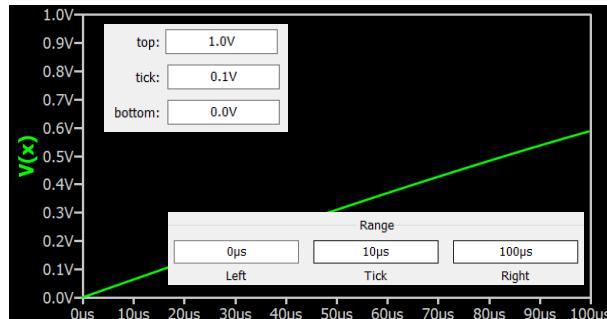


- Waveform Measure

- Ctrl + Right Click on plot label
- 7-types of measurement
 - Average
 - Maximum
 - Minimum
 - Peak-to-Peak
 - RMS
 - AC_RMS
 - Integrate

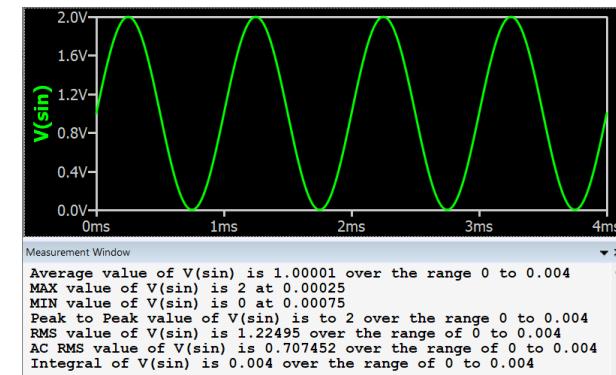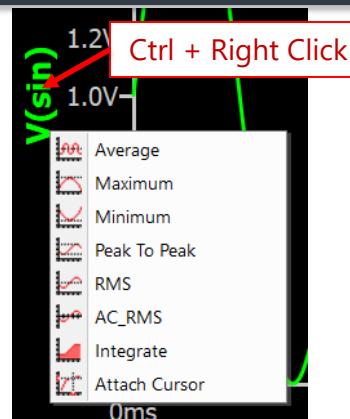


Waveform Viewer – Linear Scale in .AC, Polar vs Cartesian

- Linear Scale in .ac
 - Right Click on Y-axis
 - In Axis Setup, de-select both Log and dB
 - In Polar representation, left y-axis is magnitude which represent value is always absolute (no negative value)

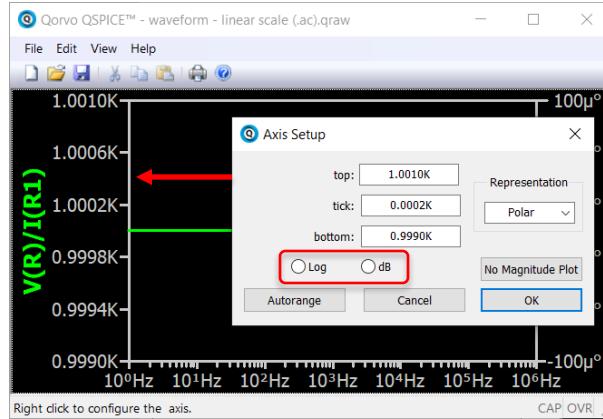


- Polar vs Cartesian
 - Waveform viewer default representation of .ac is Polar representation (mag,phase)
 - Right Click on Y-axis to change to Cartesian representation (real,imag)
 - Polar is normally for bode plot and cartesian is for impedance plot

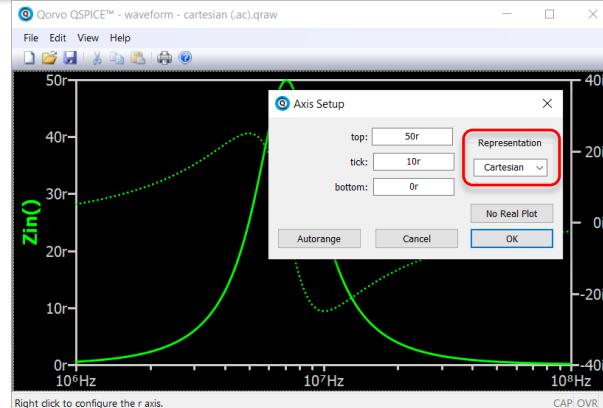

Waveform Viewer – Listen to Trace

Qspice : waveform - Listen to Trace.qsch


- Listen to Trace
 - Send a time domain data trace to the sound card
 - This option is only available for data $\geq 1\text{ms}$
 - In waveform window, **Ctrl + Right Click** on the plot label, then select **Listen to Trace**
 - The playback keeps looping

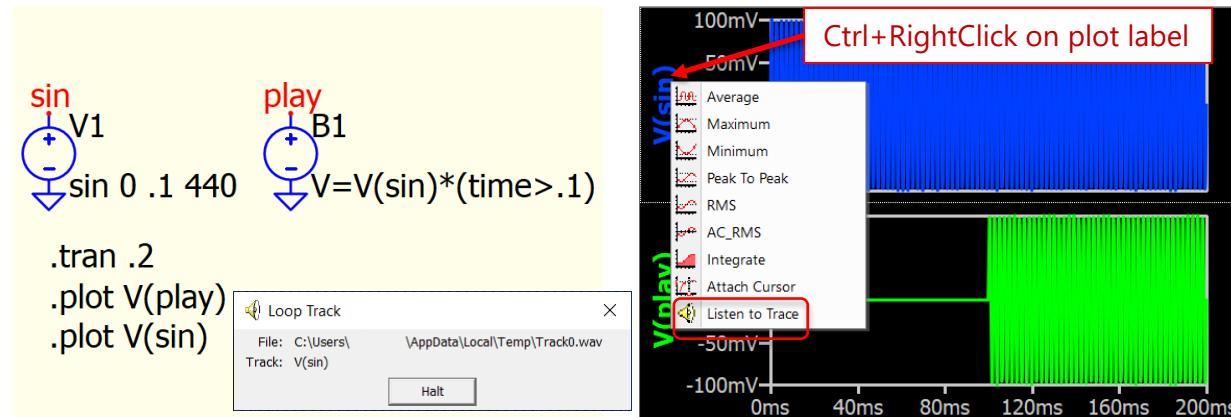



Waveform Viewer – Plot Reflection Coefficient (Γ)

Qspice : waveform - cartesian (Gamma).qsch

- Impedance Trajectory
 - .ac analysis can be used to calculate impedance Z or reflection coefficient
$$\Gamma = \frac{Z-Z_o}{Z+Z_o}$$
 - Trajectory can be plot with Cartesian plot by setting x-axis to plot real part and y-axis to plot imaginary part
 - Right-axis : Cartesian
 - Left-axis : No Real Plot
 - X-axis : Quantity changed to Re(<var>)

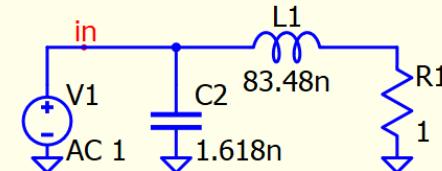


```
.ac dec 100 1Meg 100Meg  
; Calculate Reflection Coefficient  
.func Z() V(in)/-I(V1)  
.func gamma() (Z()-50)/(Z()+50)  
.plot gamma()
```

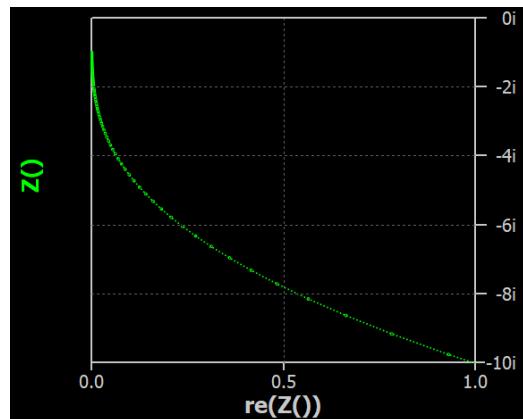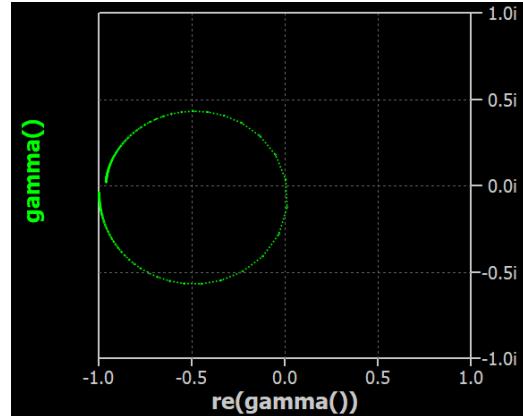

Waveform Viewer – Suspend Cross Probing



- Suspend cross probing
 - After a simulation run, a new trace can be inserted into the waveform viewer by clicking on a node or device, but this action may unintentionally disrupt the waveform configuration
 - To edit a schematic without altering the waveform setup, right-click in the schematic window and select "Suspend Cross-Probing"
 - This option will only appear in an active waveform window that has cross-probing to the schematic after a simulation run

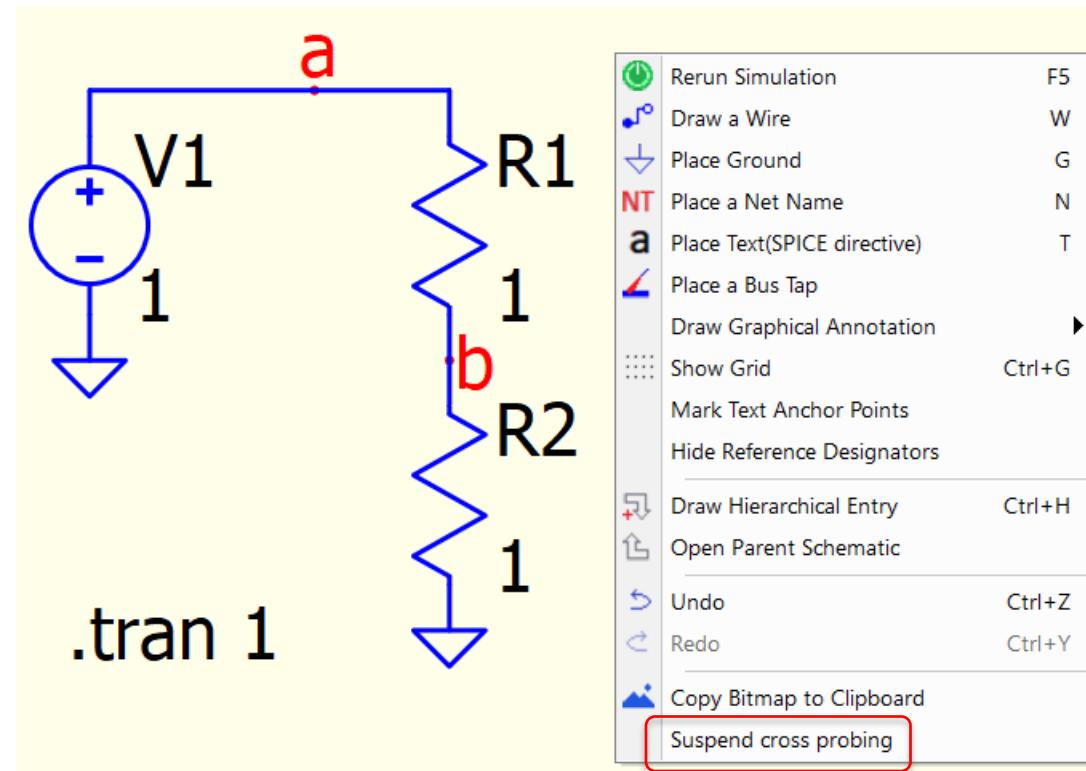

Probe .subckt or hierarchy voltage and current

Qspice : waveform - probe subckt.qsch


- Probe .subckt or hierarchy voltage and current
 - In default, Qspice only returns parent schematic voltage and current expression
 - However, if you open a .qraw data file, you can observe that the voltage and current expressions for .subckt or hierarchical components are stored, such as in the format V(1•x1)
 - In the waveform viewer, **right-click > add plot > "Asterisk Matches Hierarchy Separator"** to enable probing into subckt or hierarchical components

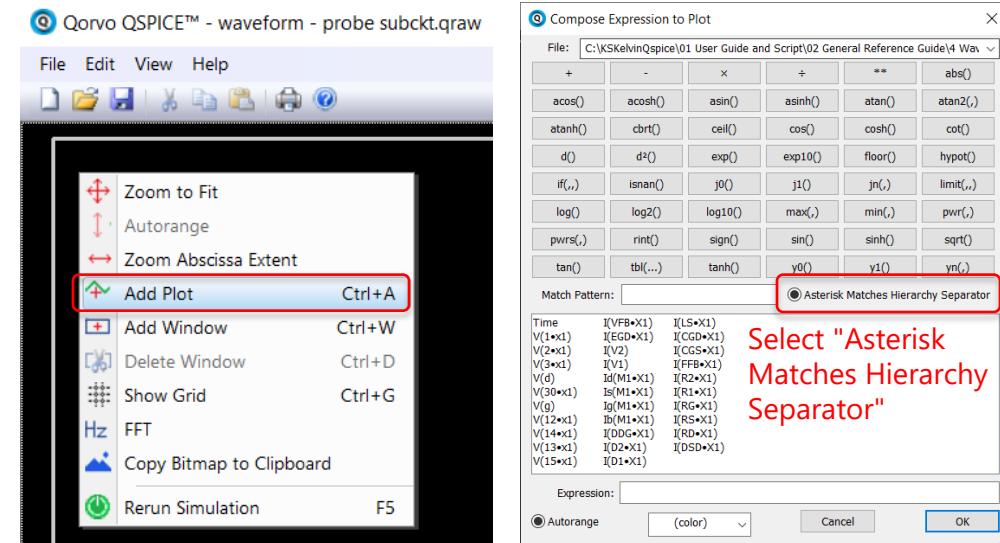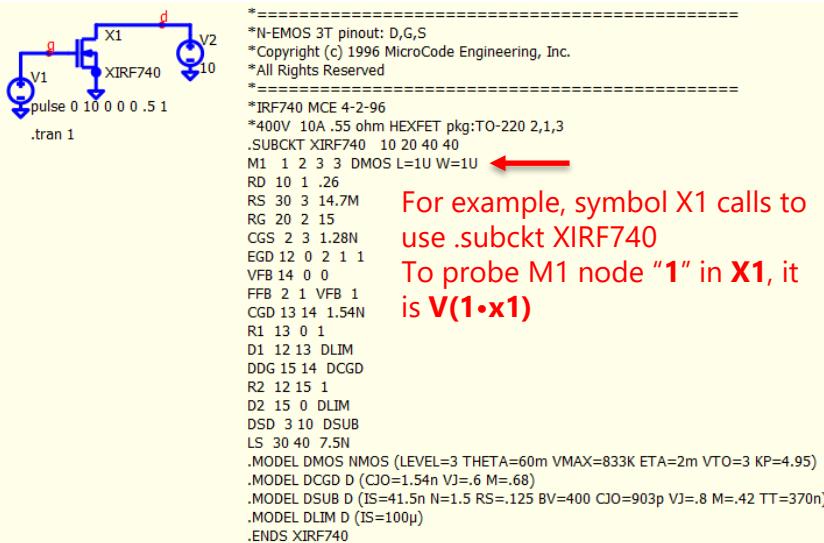



Waveform Viewer – Draw a Line

Qspice : waveform - draw loadline.qsch | waveform - draw line with table.qsch

- Draw a Line
 - .func can be used to plot a line in the waveform viewer where this line follows a mathematical formula or table relationship

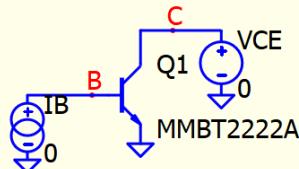


```
.dc VCE 0 5 0.01 IB 0 1m 1m/5  
.param VCC=3.5  
.param RL=30  
.func loadline() (-1/RL*V(C)+VCC/RL)/1V*1A  
  
.plot Ic(Q1) loadline()
```

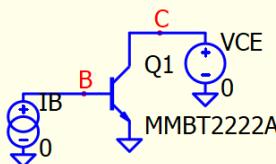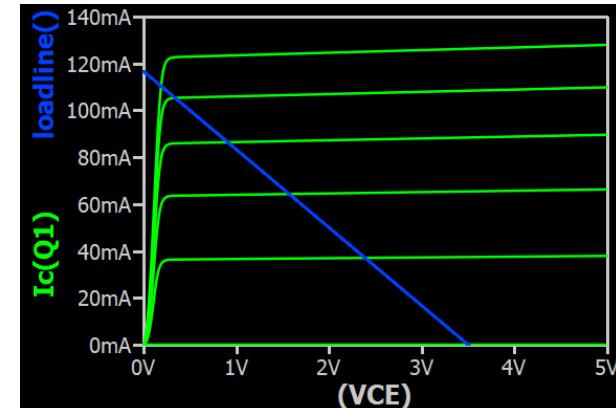

```
table  
B1  
V=table(V(C),0,0.14, 1,.14, 3,.1, 5,0)  
.func tableline() V(table)/1V*1A
```


```
.dc VCE 0 5 0.01 IB 0 1m 1m/5  
.plot Ic(Q1) tableline()
```

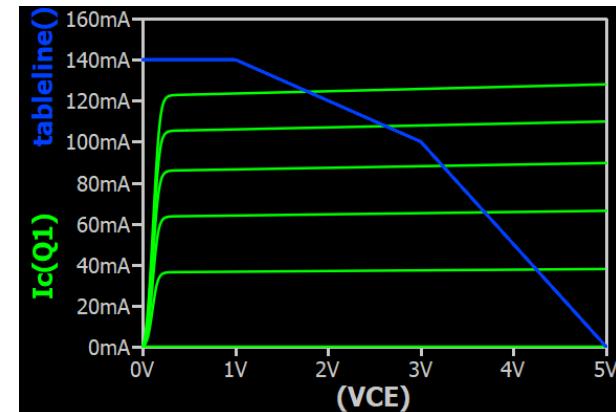



Waveform Viewer – Draw a Line

Qspice : waveform - draw vertical line.qsch


- Draw a Line
 - Example to draw vertical line with if(x,y,z) function

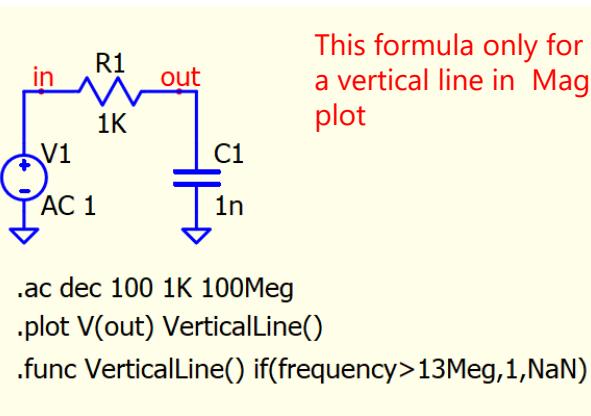

This formula only for a vertical line in Mag plot

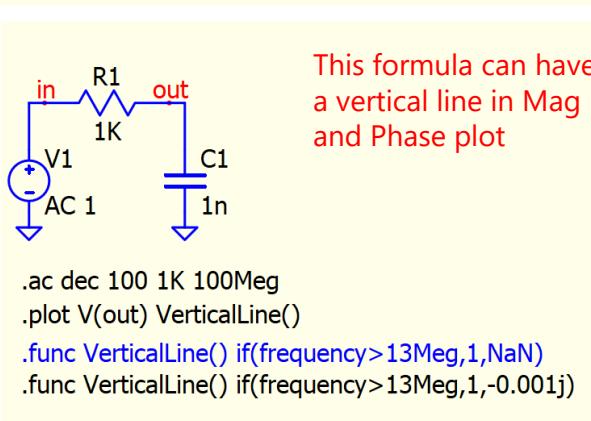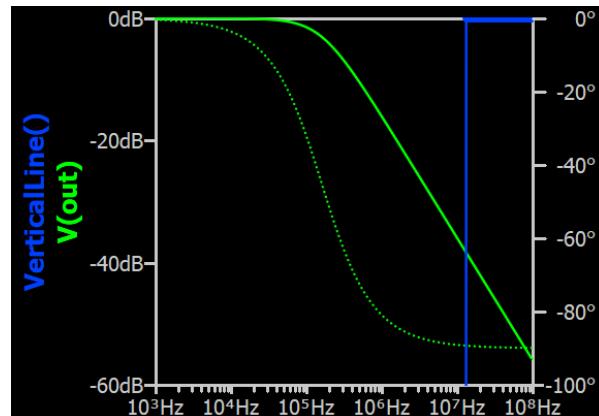

This formula can have a vertical line in Mag and Phase plot

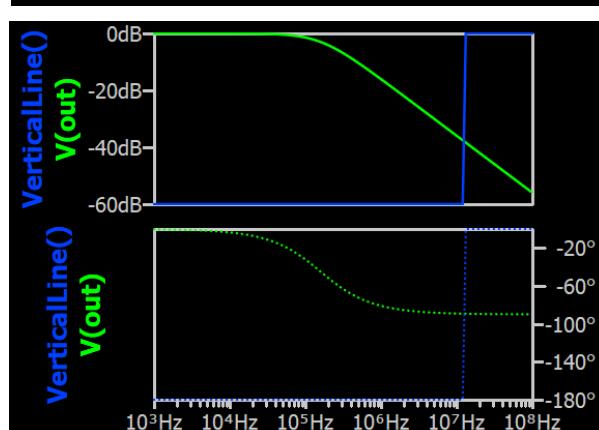


Waveform Viewer – Overlay (method 1)

Qspice : (Folder : overlay) Sim1.qsch | Sim2.qsch



- Overlay – method 1
 - In waveform viewer, multiple .qraw data files can be drag into waveform viewer for overlay comparison
 - In an overlay condition
 - Ctrl-L : toggle plotting overlay data, it can toggle .qraw data which drag into active waveform viewer
 - Ctrl-O : manage overlay datasets

Step 1 : Run simulation (e.g. two different .qsch) to generate multiple .qraw data files

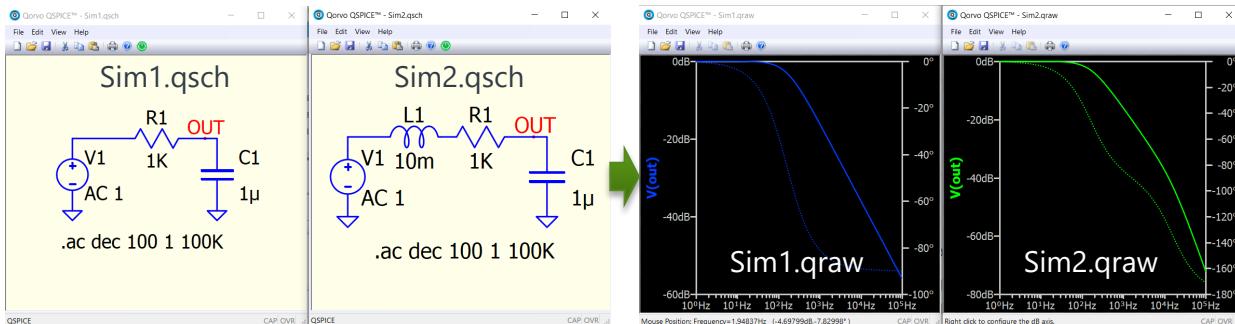

Step 2


- Keep one active waveform viewer
- Drag other .qraw into this waveform viewer

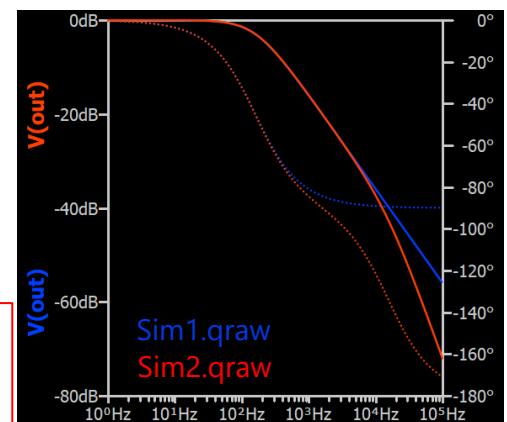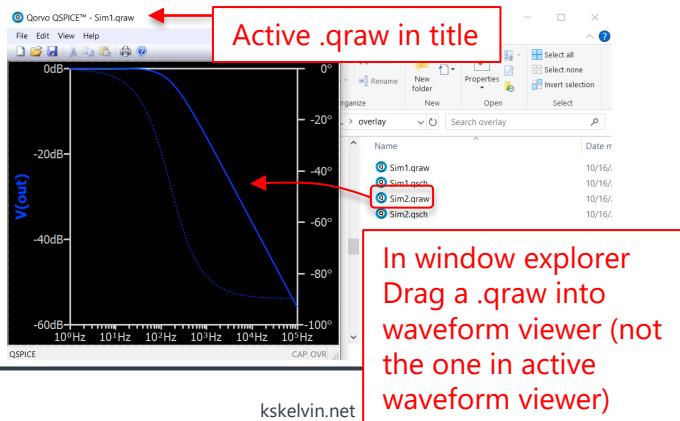

Waveform Viewer – Overlay (method 2)

Qspice : (Folder : overlay) Sim2.qsch

- Overlay – method 2
 - In Preferences, enable “Overlay new simulation on prior”
 - Now, each time you run simulation, it will generate a new .qraw with [fname].n.qraw, where n = 0,1,2,3,...

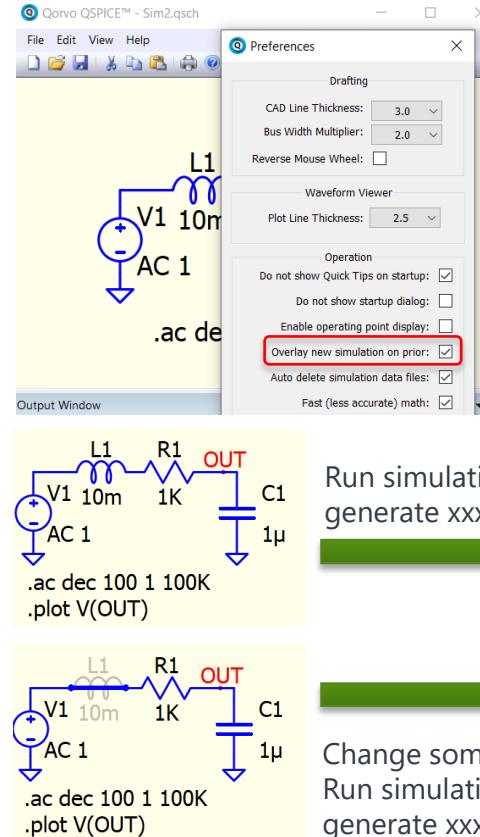


Run simulation to generate xxx.0.qraw

Change something, Run simulation to generate xxx.1.qraw

** Right click can view its .qraw name
Compose Expression to Plot




File: C:\temp\Sim2.1.qraw

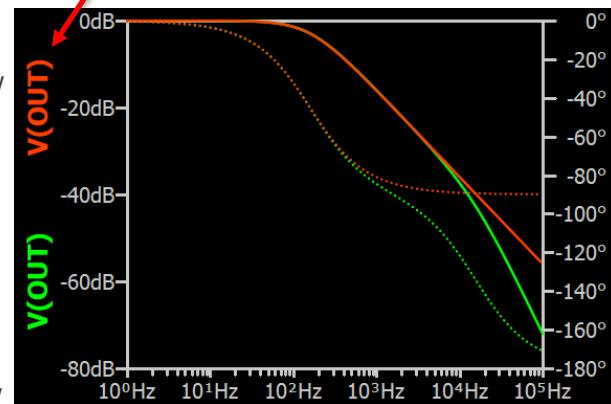

Symbol Viewer


Attribute with Angle Brackets < >

- Attribute with brackets
 - The 1st attribute of a symbol is its name, and starting from the 2nd attribute are the instance parameters
 - When angle brackets (< >) are used for instance parameters, they can restrict the user-editable section of the text attribute
 - Each attribute only allows for one bracket; any text after the bracket is ignored

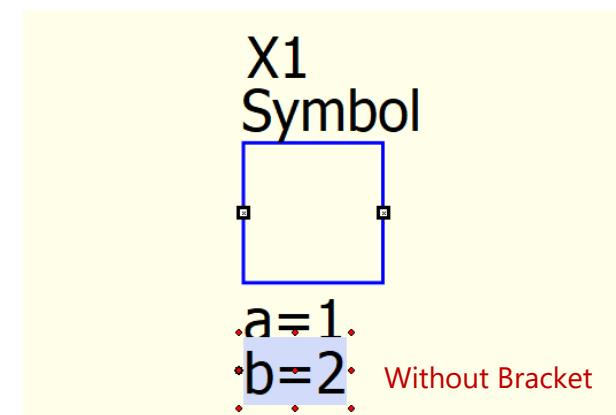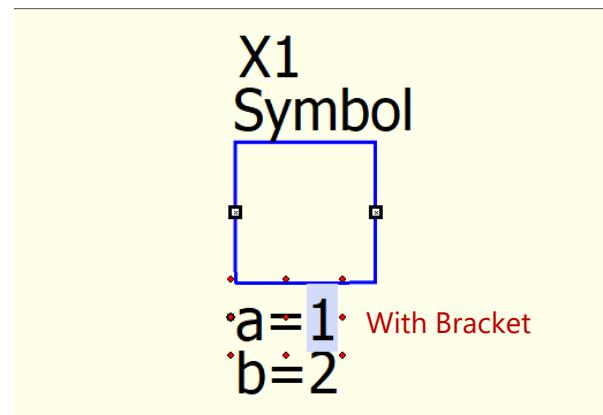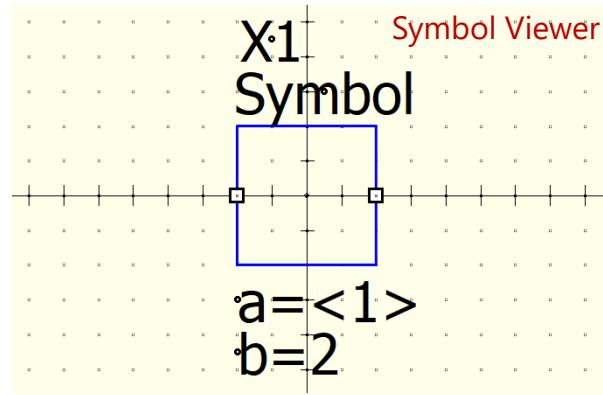

Placement Resolution in Symbol Window

- Placement Resolution
 - In the symbol window, coordinates are displayed in status bar
 - To place an arc, box, line etc., the minimum resolution can be changed by holding the **Ctrl**, **Alt** or **Shift** key as follows
 - No holding key : step by 50
 - Holding one key : step by 10
 - Holding any two keys : step by 5
 - Holding all three keys : step by 1
 - However, Pin always stick to the major grid, which is set at a step of 100

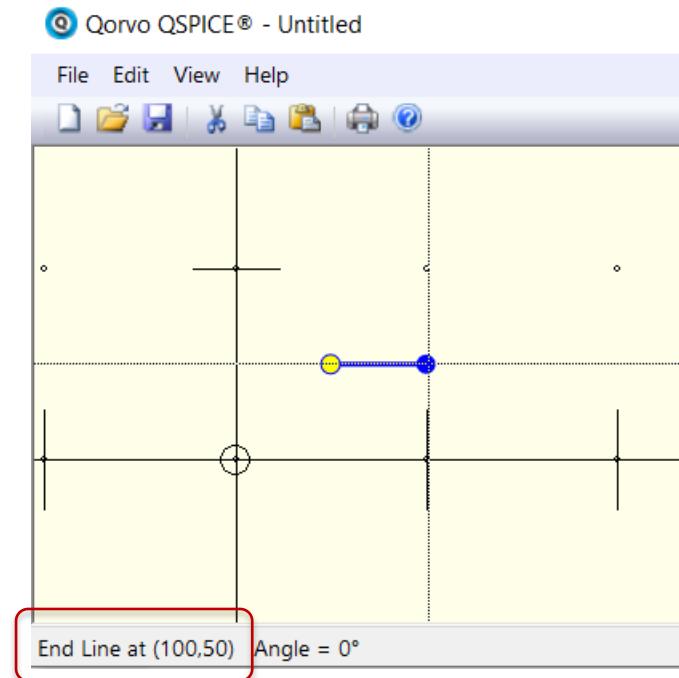

Simulation Technique

Max Time Step in .tran (and .bode) : Two methods

Qspice : MaxTimeStep.qsch



`V1G
V1
sin 0 1 1G .plot V(V1G)`

Method 1 : Traditional Berkeley Syntax

`.tran IGNORED TSTOP [TSTART [MAXSTEP]] [UIC]`

`.tran 0 10n 0 10p`


↑ Max Time Step

Method 2 : MAXSTEP in Simulator Option

`.tran 10n`

`.options MAXSTEP=10p`


↑ Max Time Step
(this method apply to .tran and .bode)

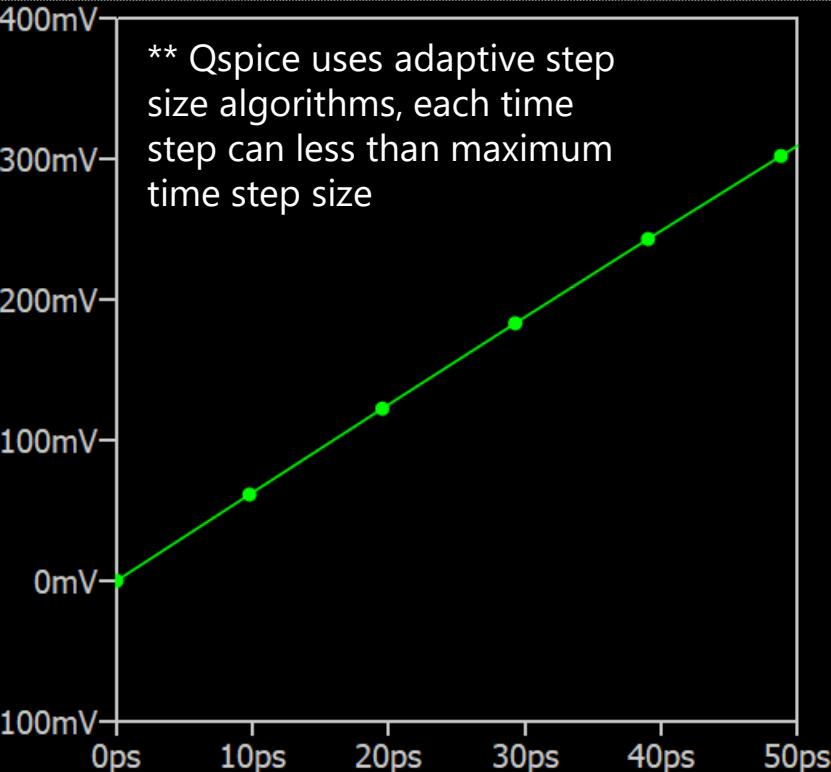

Add Attribute [e.g. add instance parameters]

1. Right Click on Component
2. Select "Add New Attribute"
3. Type parameter name and value [refer to help for full list of instance parameters]

This is an example to assign 0.2 ohms series resistance to inductor L1

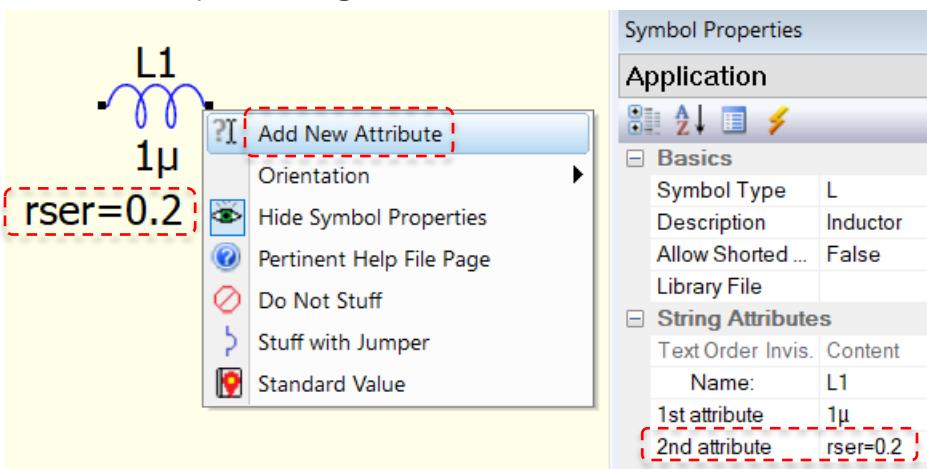

Inductor Instance Parameters


Name	Description	Units	Default
AG	Wire or stripline is made of gold		
AL	Wire or stripline is made of aluminum		see below
AU	Wire or stripline is made of silver		
BEND	Fractional inductance correction for wire bend or proximity effects		1.
CPAR	Parallel capacitance	F	0.
CU	Wire or stripline is made of copper		see below
DIAMETER	Diameter of wire or air coil	m	
FREQUENCY	Frequency at Q. Also used to compute Rser due to skin effect		
HEIGHT	Height of PCB stripline above ground plane	m	
IC	Initial current if uic is specified on .tran statement	A	none
INDUCTANCE	Inductance of inductor	H	0.0
ISAT	Current causing inductance to drop to SATFRAC×INDUCTANCE	A	Infinite
LENGTH	Length of wire, stripline, or air coil	m	
LSAT	Inductance asymptotically approached in saturation	H	10% of INDUCTANCE
M	Number of parallel inductors		1.0
NI	Wire is made of nickel		
Q	Quality factor at FREQUENCY		
RPAR	Equivalent parallel resistance	Ω	Infinite
RSER	Equivalent series resistance	Ω	0.0
SATFRAC	Fractional drop in inductance at ISAT		0.7
THICK	Thickness of stripline on top of a PCB	m	0.0
TURNS	Number of turns of an air coil		
VERBOSE	Print wire L, Rser, Rpar results on the console		(not set)
WIDTH	Width of stripline on top of a PCB	m	

AC and DC Attribute in Source

Qspice : AC with Transient Source.qsch ; AC with Bias.qsch


Technique to perform AC analysis with a transient source

1. Right Click on Voltage/Current source
2. Select "Add New Attribute"
3. Type "AC 1" to define a 1V source for AC sweep
4. Add a .ac analysis statement, and comment transient analysis

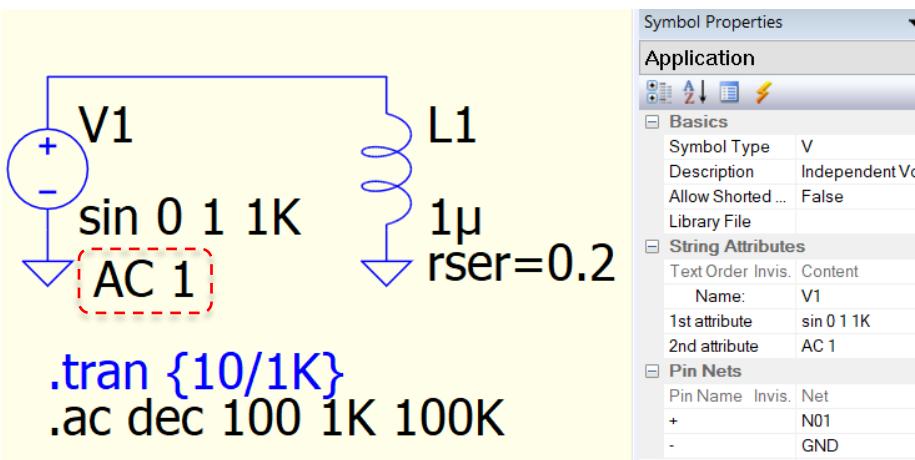

Technique to perform AC analysis with DC in source

1. Right Click on Voltage/Current Source, Add New Attribute
2. To add DC source, type "DC ..."
 - If without DC, simulator may not interpret the DC voltage during simulation. Best practice is to add DC

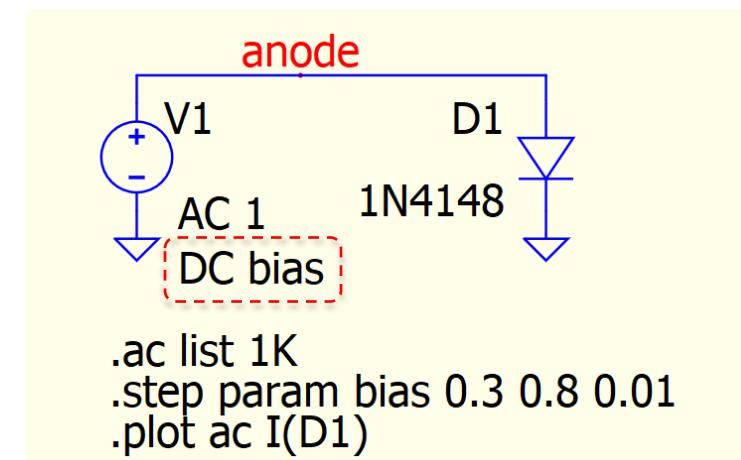

Laplace Time and Frequency Domain Simulation


Qspice : Laplace Simulation - Fdomain.qsch ; Laplace Simulation - Tdomain.qsch

2nd-order system step response


transfer function : $\omega^2/(s^2+2\zeta\omega s+\omega^2)$

```
.param zeta = 0.7
.param omega = 1
```



```
.tran {eT}
.param eT=25
```

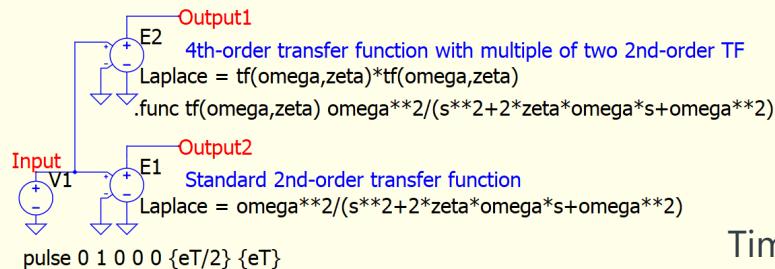

Time Domain

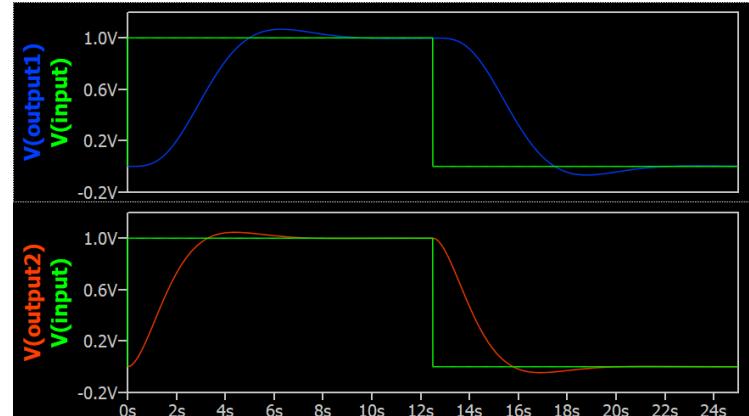



Frequency Domain

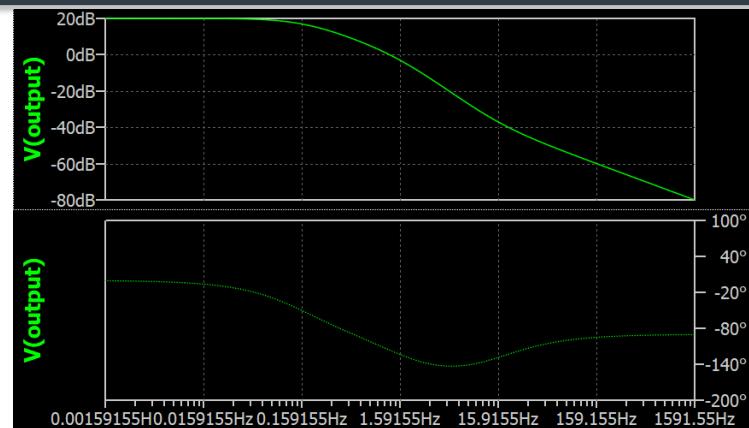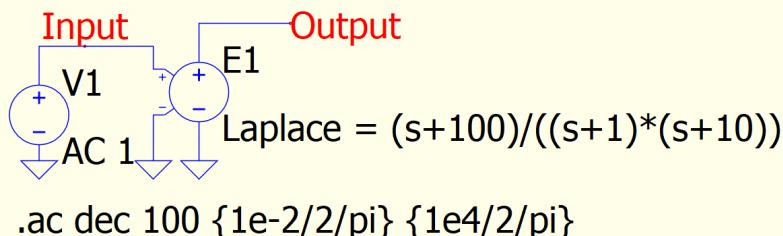

Laplace Time and Frequency Domain Simulation


Qspice : Laplace Close Loop.qsch

- Close Loop System Time and Bode
 - A technique to get $G_p(s)$ and $G_H(s)$ is to add a perturbing source between output and feedback and perform ac analysis
 - In this example, Laplace function can collect in series for both .tran and .ac directive

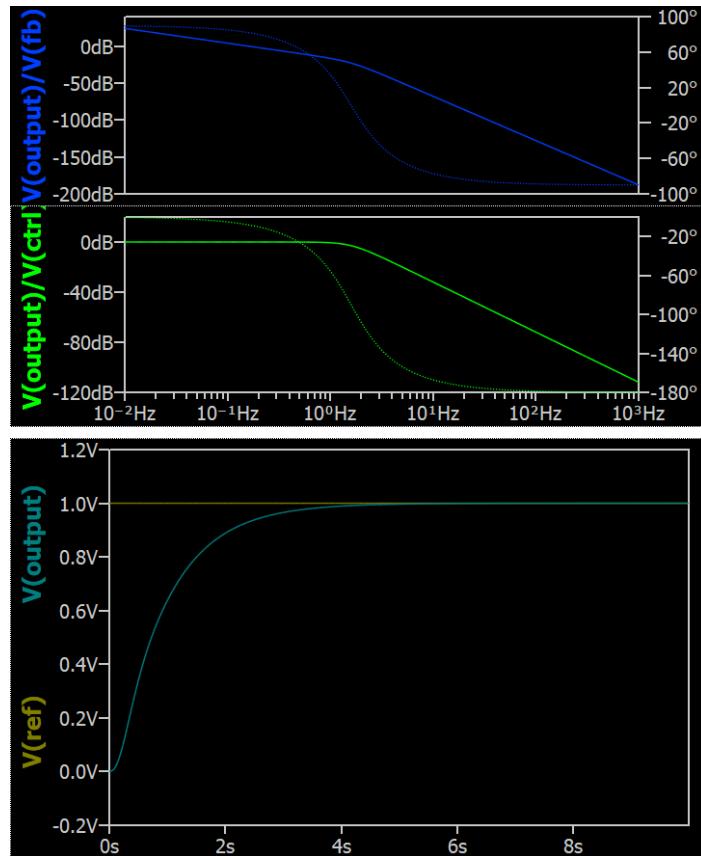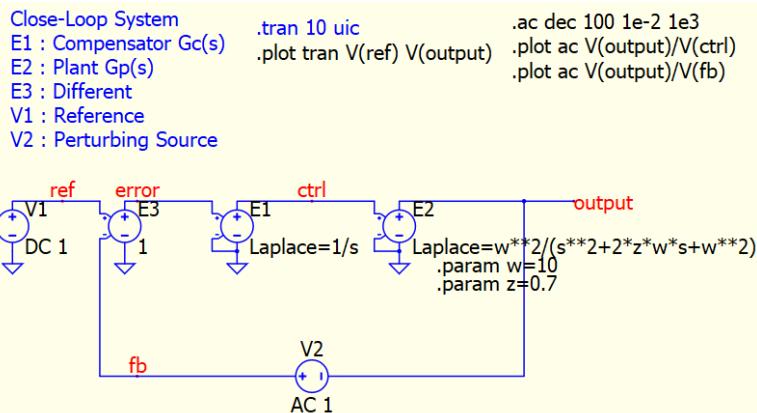

AC (.ac) and Frequency Response Analysis (.bode)



Qspice : ACmethod.qsch ; BODEmethod.qsch

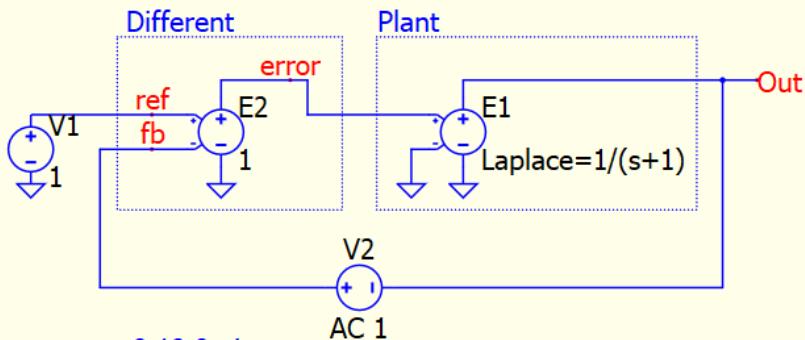

.tran 0 10 0 uic
.ac dec 100 1e-2 100


AC 1

.plot ac V(out)/V(fb)

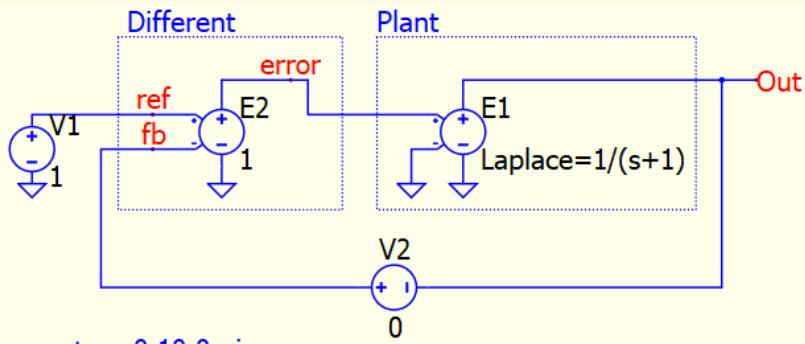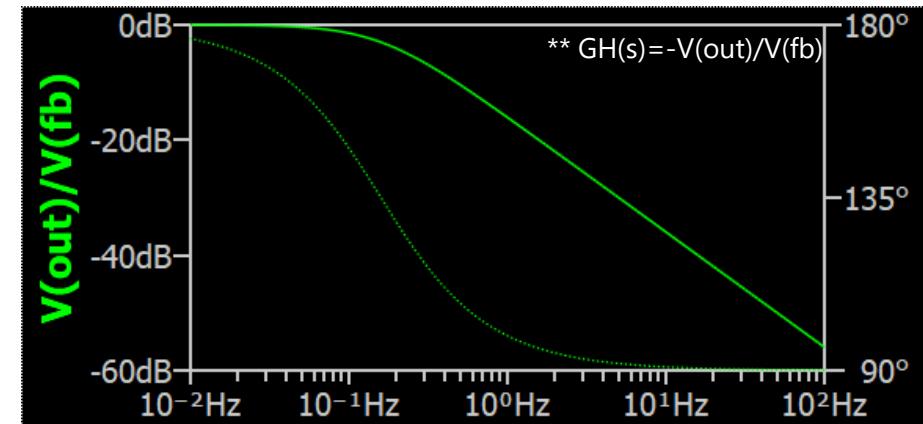

.tran 0 10 0 uic
.bode V2 10 1e-2 100



0

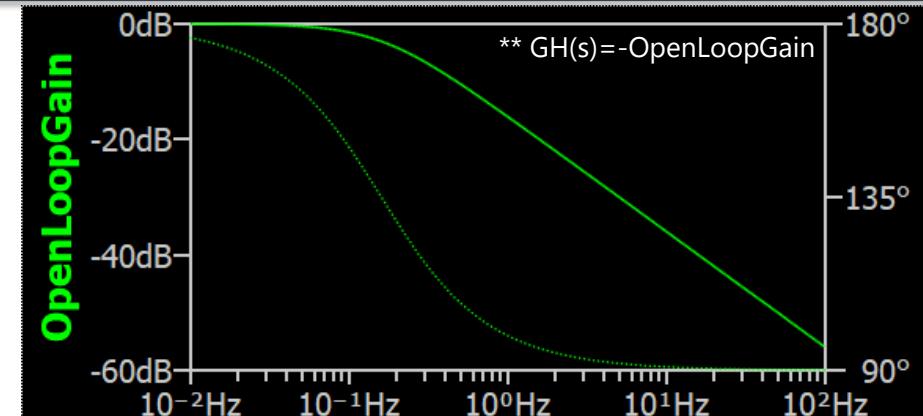

Technique to Probe NMOS Drain Current / General Current Probe

Qspice : Current Probe Method.qsch



- Current probe method
 - Method #1 : Resistor
 - Add a series resistor (small value) and probe R current
 - Method #2 : 0V Voltage
 - Add 0V voltage source and probe current of this voltage source.
 - +ve represent current flow from + to – direction within symbol (i.e. +ve current represent current flow downward in this example)
 - Hold SHIFT key in Qspice to probe voltage source current can give default +ve current, otherwise it will assign –ve to current
- Method #3 : Probing
 - Probe current by hover point at device terminal
 - Not support sub-circuit yet
 - OR Ctrl-A (Add Plot) in waveform viewer and select $I_d(Mnnn)$

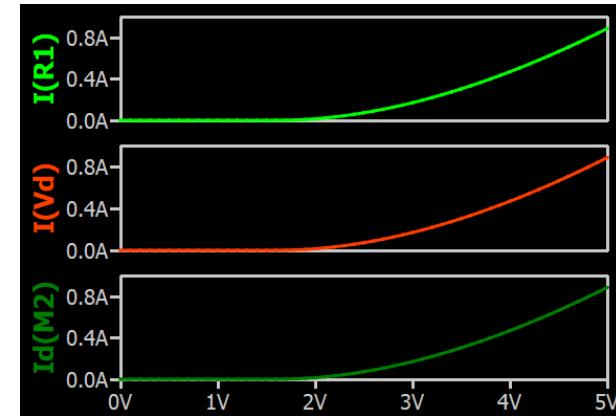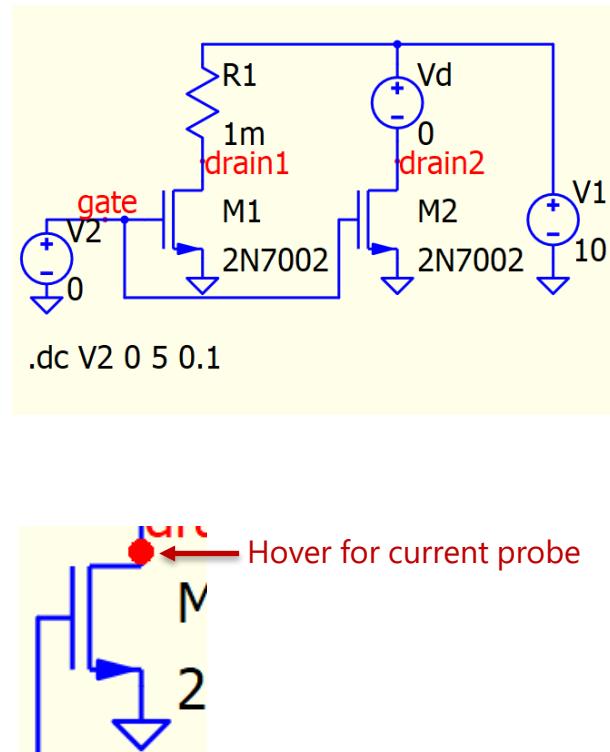

Technique to Probe NMOS Drain Current / General Current Probe

Qspice : Current Probe with Resistor - Limitation

- Limitation in R current
 - If sensing resistor with extremely small value compares to its measurement object, current reading from this resistor will be incorrect
 - Use 0V voltage source approach as replacement

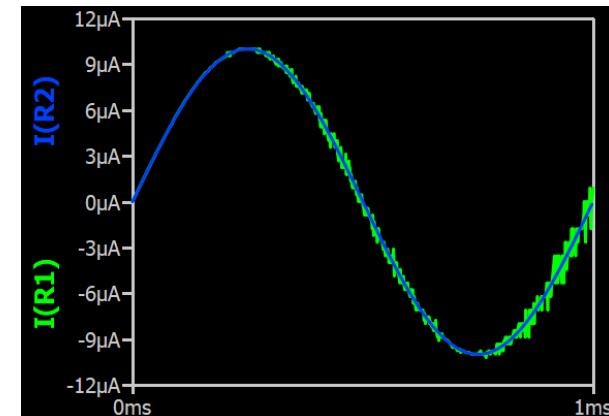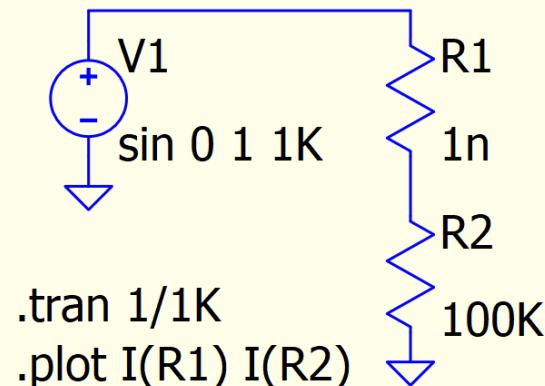

- Explanation – by frank.widmann in Qspice forum
 - <https://forum.qorvo.com/t/persistent-bug-warning-singular-matrix-check-node-b/17636/21>



frank.wiedmann

30m

Here is the explanation for the behavior observed by @KSKelvin : SPICE uses [Modified nodal analysis](#) - [Wikipedia](#) which directly calculates the node voltages and the currents through voltage sources. The current through the small resistor, on the other hand, is calculated indirectly by dividing the voltage difference between its terminals by its resistance. With a resistance of 1u, the tolerances of the voltages are almost as large as the voltage difference, causing the observed imprecise results.

B-Source as Comparator

Qspice : B-Source as Comparator.qsch

- Concept of Ideal Comparator with Behavioral Voltage Source
 - Formula of B-source is : if(V(pos)>V(neg),V(Vdd),V(Vss))
 - Practical comparator output normally is open-drain configuration, this is just for simulation purpose




```
.tran 1/Fsgl  
.plot V(out)  
.plot V(pos) V(neg)
```

```
pos  
V3 .param Fsgl=10K  
sin 0.5 0.3 Fsgl
```

```
neg  
V4 .param Fsw=100K  
pulse 0 1 0 0.5/Fsw 0.5/Fsw 0 1/Fsw
```

```
B1 out  
V = if(V(pos)>V(neg),V(Vdd),V(Vss))
```


B-source as Ideal Comparator

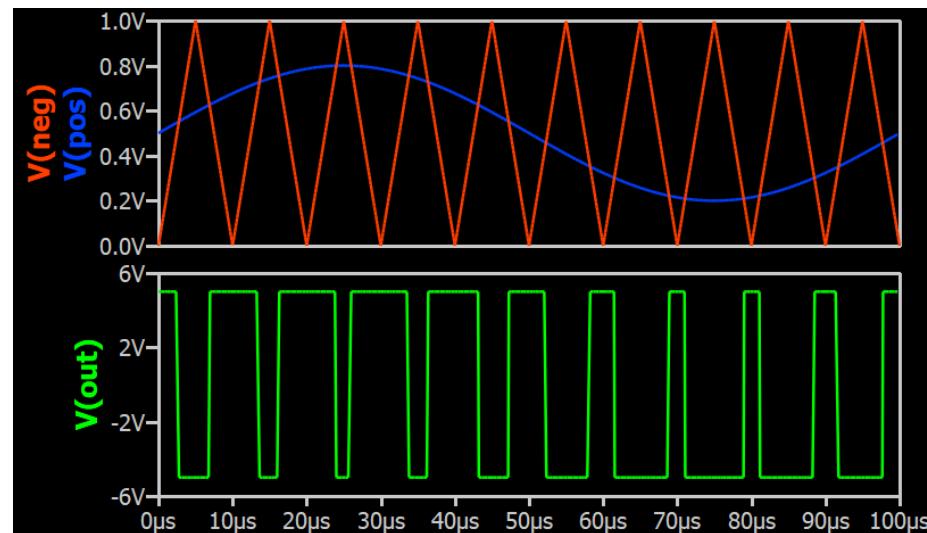

Monte Carlo

Qspice : Monte Carlo.qsch


Random number from 0 to 1 depending on the seed

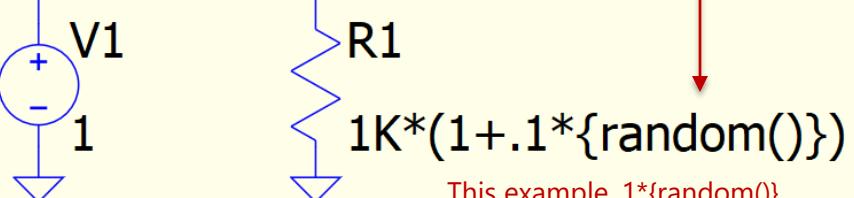

This example $.1*{\text{random}()}$
equivalent +0% to +10% change

```
.op  
.step param dummy 0 100 1  
.plot I(R1)
```

```
.options seedclock ← This enable random seed to  
be generated  
.options seed=5 ← This assign manual seed
```

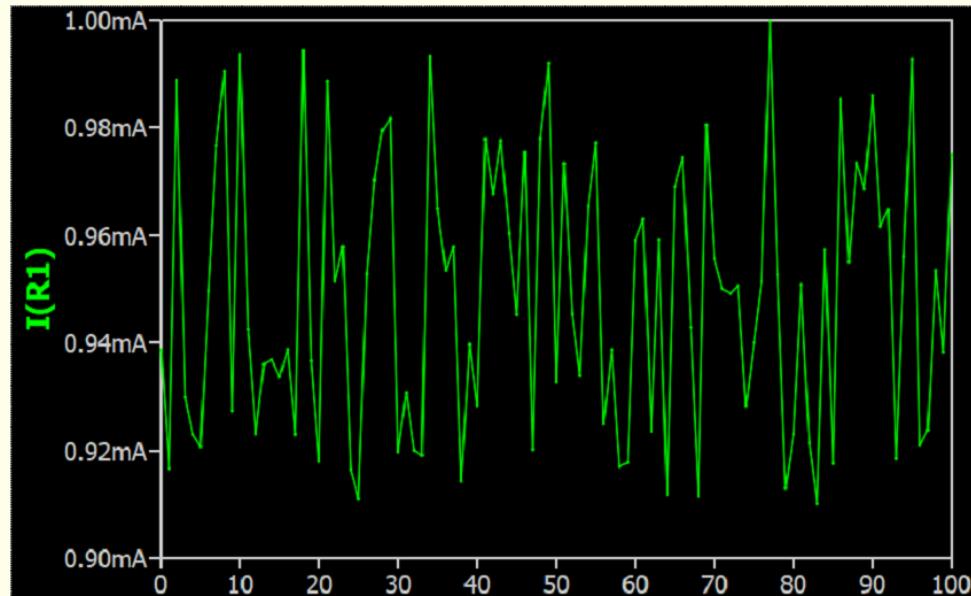

Engelhardt Ⓛ

OK, I just implemented

.options seedclock

It convolutes a 10MHz system clock with the simulation process ID to generate a physically random integer to seed the Mersenne Twister.




9-4-2023

Flat(x) and MC(x,y) functions equivalent to Ltspice

Qspice : Flat and MC Function.qsch

- Uniform random distribution
 - LTspice offers flat(x) and mc(x,y) functions, but not in Qspice (last check 10-3-2023)
- Function for flat(x) and mc(x,y)
 - `.func flat(x) x*((random()*2)-1)` ← Generate random [-x, x]
 - `.func mc(x,y) x*(1+y*(random()*2-1))` ← Generate random [x*(1-y), x*(1+y)]


```
.step param x 1 200 1 Dummy For Loop  
.op
```

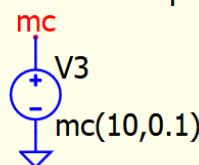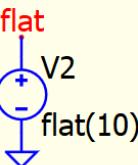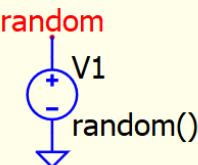

```
.plot V(mc)  
.plot V(flat)  
.plot V(random)
```

`flat(x)` : Random number between -x and x with uniform distribution
`.func flat(x) x*((random()*2)-1)`


`mc(x,y)` : A random number between
 $x*(1+y)$ and $x*(1-y)$ with uniform distribution
`.func mc(x,y) x*(1+y*(random()*2-1))`

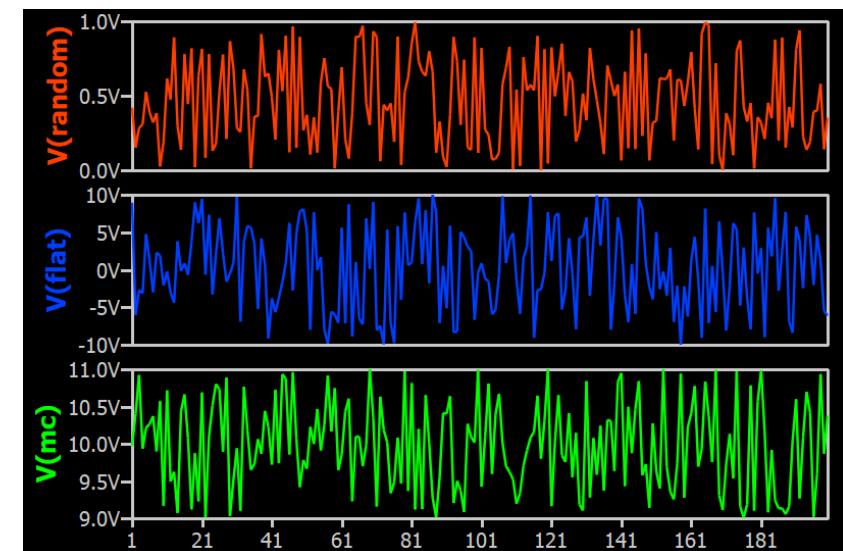


Time in .tran and Logic Diagram in Waveform Viewer with .plot

Qspice : Time in .tran.qsch ; Logic Signal Plot.qsch

- Time in .tran
 - In .tran, simulation time is stored as a parameter named **Time**
 - Therefore, use a B-source can convert Time into a voltage
 - Time can also be used in function

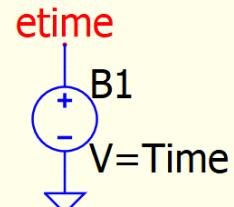


```
.tran 1 .func runtime() Time  
.plot V(etime)  
.plot runtime()
```

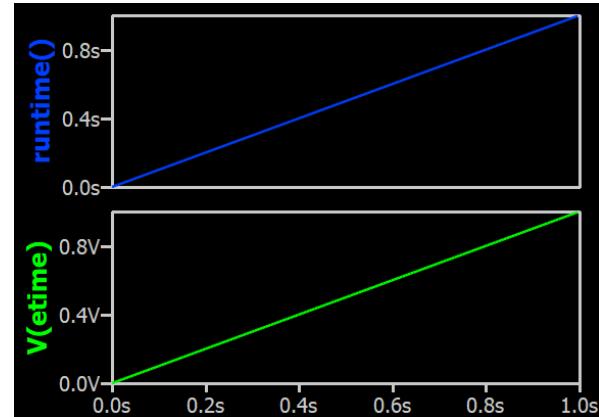

- Logic Diagram
 - A simple idea to plot logic signal into logic diagram format
 - Idea is to add an offset for each logic in .plot

Bit0
V1
pulse 1 0 0 0 0 0.5/f 1/f
Bit1
V2
pulse 1 0 0 0 0 0.5/f*2 1/f*2
Bit2
V3
pulse 1 0 0 0 0 0.5/f*4 1/f*4
Bit3
V4
pulse 1 0 0 0 0 0.5/f*8 1/f*8



```
.param f=1  
.tran 1/f*16  
.plot V(Bit3)+3.3 V(Bit2)+2.2 V(Bit1)+1.1 V(Bit0)
```

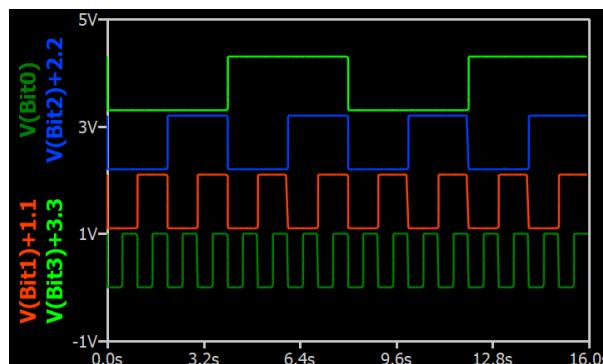

Dummy TTOL device to help in adaptive timestep

Qspice : TTOL - Dummy TTOL element - Enhance Timestep.qsch




- Dummy TTOL device
 - Qspice uses adaptive timestep
 - If a circuit uses a B-source, if(x,y,z) as a comparator, without TTOL device, its simulation timestep can far from compare instance and output looks weird
 - Example on Top Row
 - Precise time instance at compare action, but as no extra timestep after compare action, output looks like ramping as next timestep is far away (interpolation)
- To resolve this without using MAXSTEP to limit timestep, a dummy TTOL device can be used (e.g. Switch), with TTOL instance parameters included
 - Example on Bottom Row
 - Extra time steps are added after V(compare) flip the switch, with additional time steps, output looks reasonable
 - Smaller TTOL value can yield a better results but with longer elapsed time

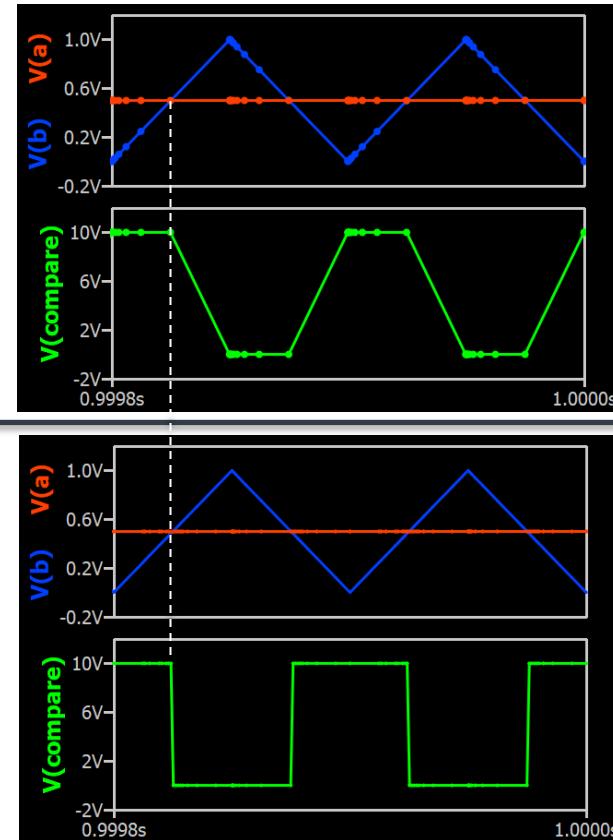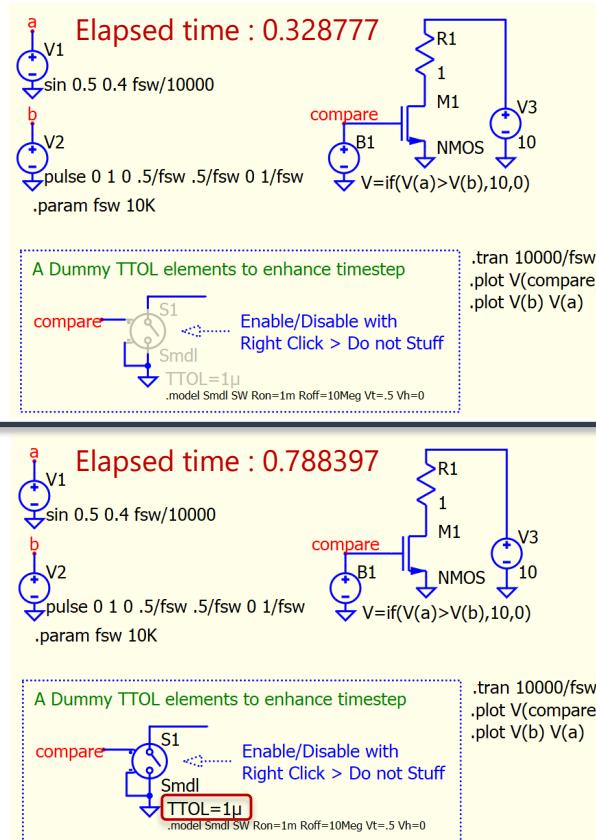

TTOL device to help in adaptive timestep (e.g. function IF)

Qspice : TTOL - TTOL device to Interface Analog and Digital.qsch

- TTOL device interface
 - Qspice uses adaptive timestep
 - If a circuit uses a B-source, if(x,y,z) as a comparator, without TTOL device, its simulation timestep can far from compare instance and output looks weird
 - Example in Top Figure
 - Precise time instance at compare action, but as no extra timestep at compare action, output looks like trapezoidal as next timestep is far away
 - To resolve this without using MAXSTEP to limit timestep, a TTOL device can be used (e.g. buffer, with default TTOL=1μ)
 - Example in Bottom Figure
 - Extra time steps are added after V(cmpA) flip the buffer, with additional time steps, output looks square waveform
 - Smaller TTOL value can yield a better results but with longer elapsed time

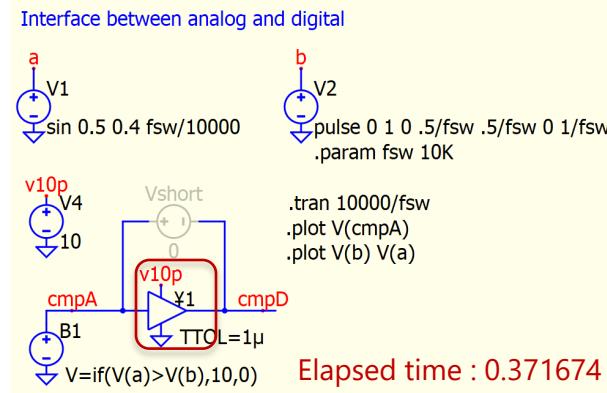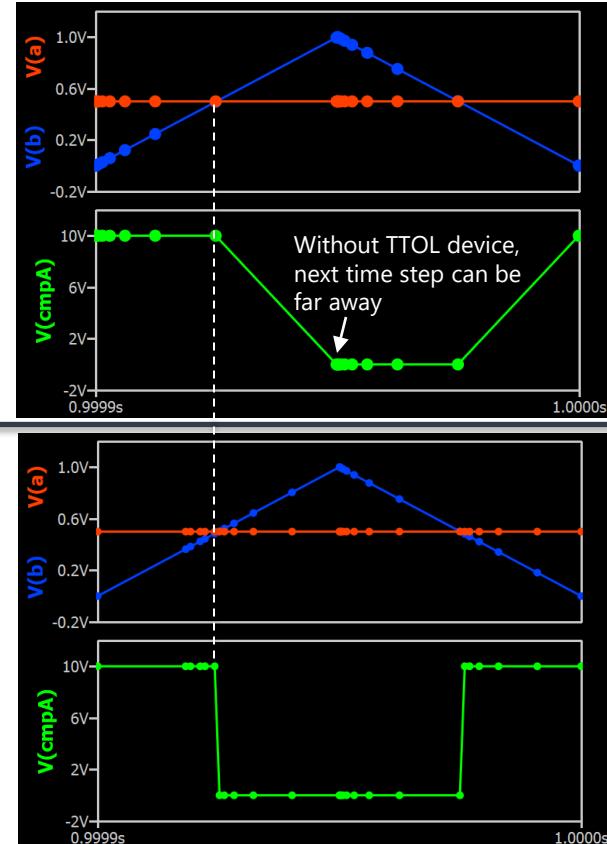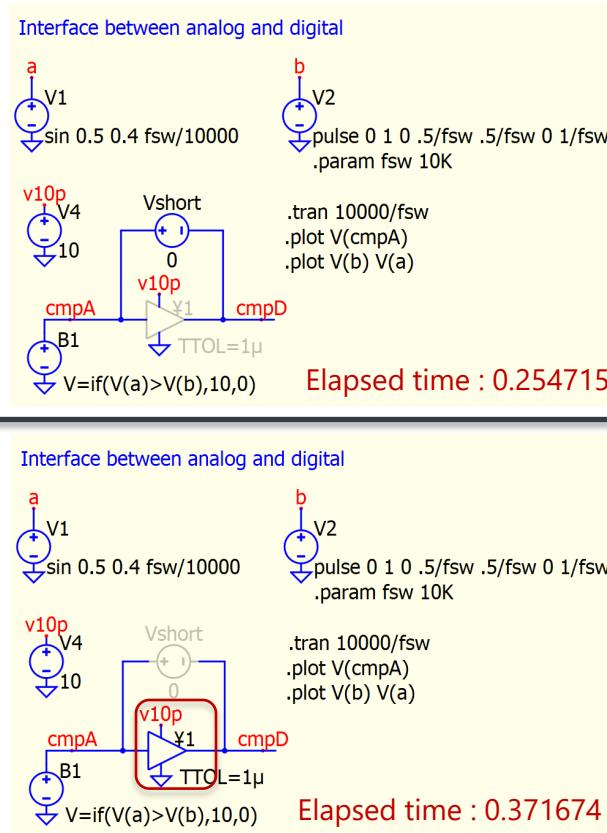

TTOL device to help in adaptive timestep (e.g. function DELAY)

Qspice : TTOL - TTOL for Pulse Delay.qsch

- TTOL device interface



- Pulse source has instance parameter TimeCtrl to determine timestep at each breakpoint (default is TimeCtrl=Limits), therefore, extra timestep at its rising/falling edge

- Example in Top Figure
- But the edge of delayed signal from behavioral source has no information of extra timestep is required, therefore, delayed signal looks like trapezoid



- A buffer with TTOL is used to improve sharpness of pulse edge

- Example in Bottom Figure
- Buffer is triggered when its input cross REF voltage, with TTOL instance parameter, extra timestep is added at such moment

Delay with Delay(x,y,z)

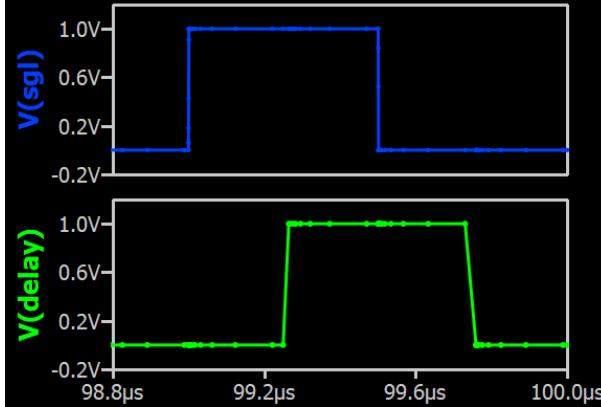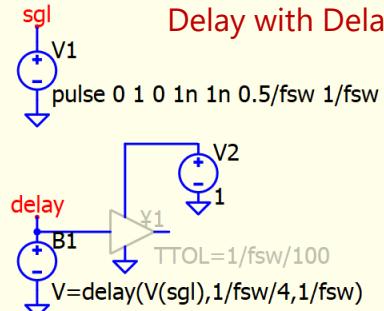





Delay with Delay(x,y,z) + Buffer with TTOL

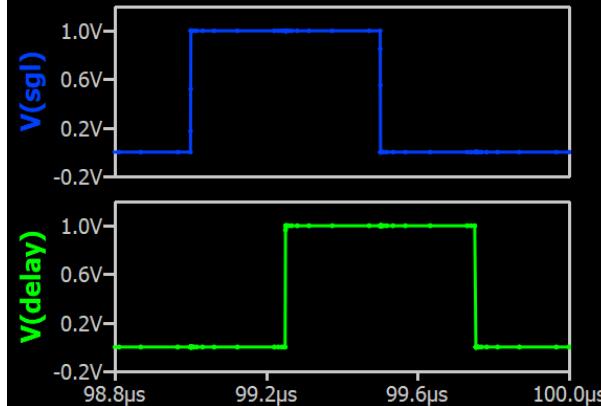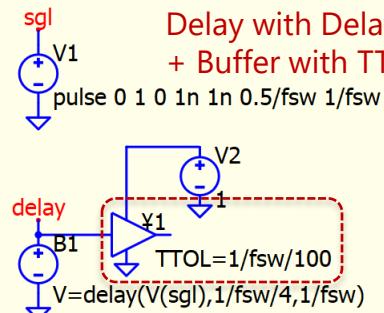

Delay with Transmission Line (alternative way for delay function)

Qspice : Transmission Line for Pulse Delay.qsch



- Delay with Transmission Line
 - Beside of `delay(x,y,z)` function in behavioral source, delay can be generated with transmission line terminate with Z_0
 - However, this approach may generate overshoot/undershoot if maximum time step is not defined, this crux is related to Qspice design as a trade between simulation time and accuracy

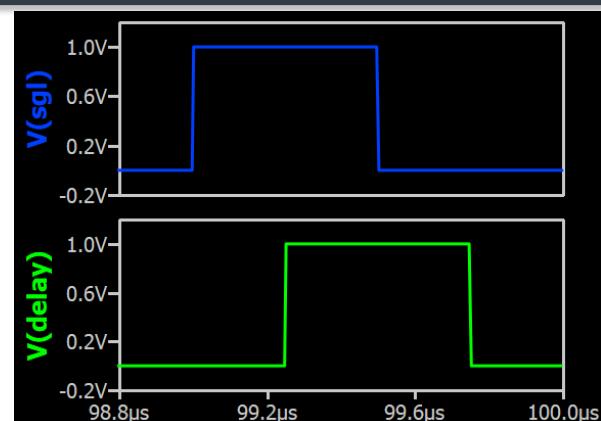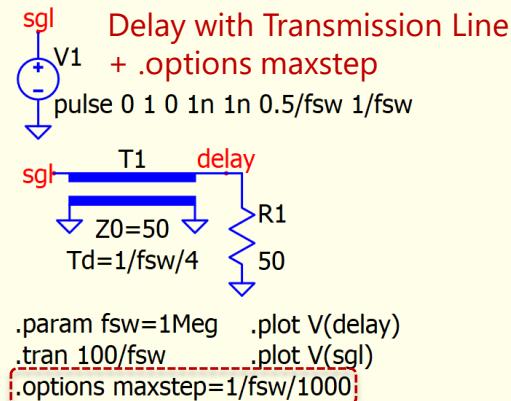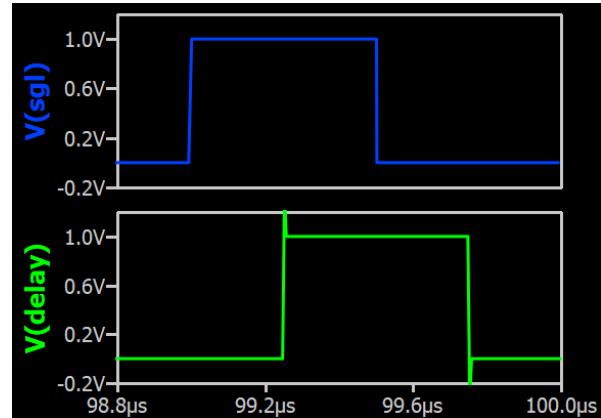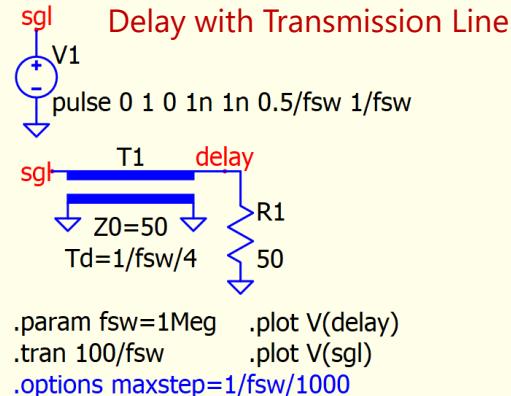


Phasor simulation technique in .ac

Qspice : Phasor - Source.qsch | Phasor - Dependent Source with j.qsch


- Active Source
 - Voltage / Current Source
 - With formula $A\angle\theta$

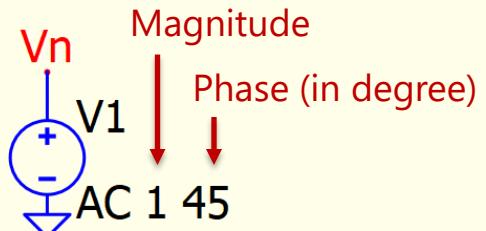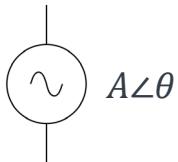

```
.ac dec 100 1 100  
.plot V(Vn)
```

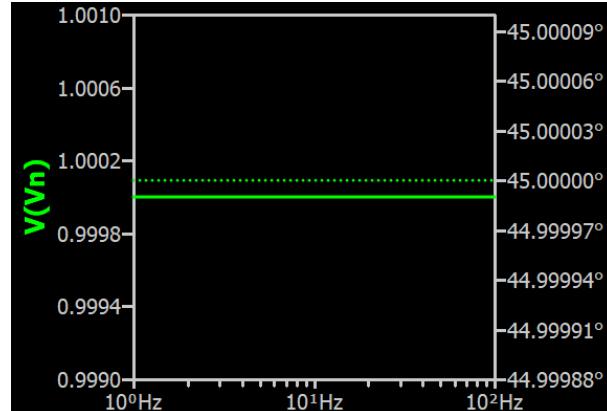


- Dependent Source
 - A dependent source with j to an active source

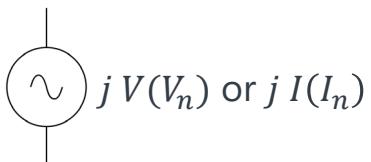

V_n V1 .plot V(jVnB)
AC 1 .plot V(jVnE)
Vn90d V2 .plot V(Vn) V(Vn90d)
AC 1 90 .step param freq 1 100 1
.ac list freq
.param omega=2*pi*freq



V_n E1 Use Laplace for j part in .ac analysis
Laplace=s/omega In definition, $s=j*\omega$
Therefore, $jVnE = j*Vn$ in E1 and B1
 $jVnE$ E1
 $jVnB$ B1
 $V=V(Vn)$ Laplace=s/omega

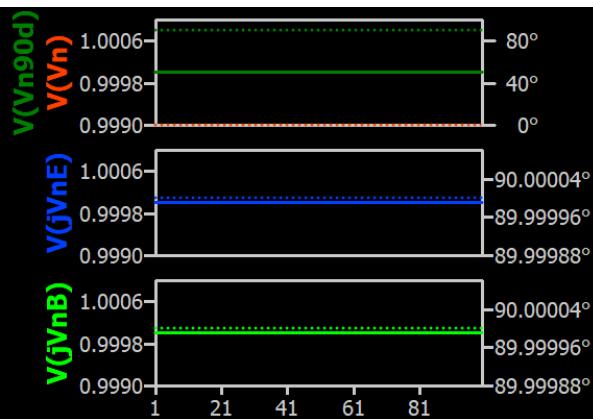

Phasor simulation technique in .ac

Qspice : Phasor - jX.qsch


- $+jX$ or $-jX$
- jX and $-jX$ can be simulate with normalized inductance and capacitance
- $jX_L = j\omega L \rightarrow L = \frac{X_L}{\omega}$
- $-jX_C = -j\frac{1}{\omega C} \rightarrow C = \frac{1}{\omega X_C}$

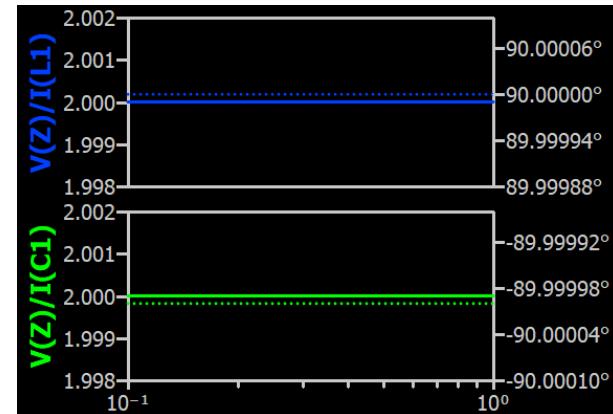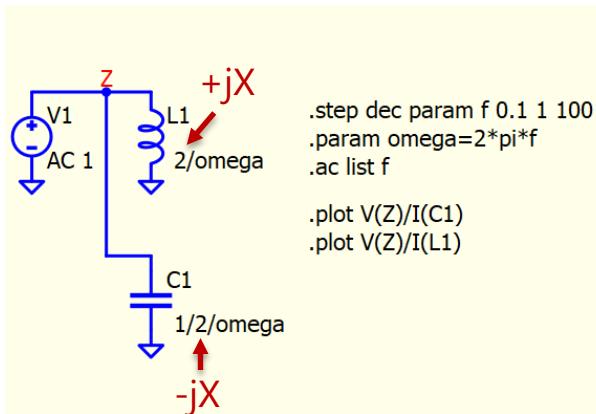

General form of impedance calculation in .ac (series model)



Qspice : General Form R_s - C_s Or R_s - L_s in .ac.qsch

- Impedance in .ac
 - Impedance
 - $Z = \frac{V}{I}$
 - R_s - C_s model
 - $R_s = \text{re}(Z)$
 - $C_s = -\frac{1}{2\pi f \times \text{im}(Z)}$
 - R_s - L_s model
 - $L_s = \frac{\text{im}(Z)}{2\pi f}$

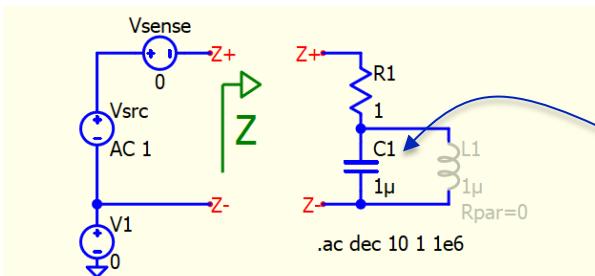


Equivalent Rs-Cs or Rs-Ls from Vsrc

```
.func Z() V(Z+,Z-)/I(Vsense)
.func Rs() re(Z())
.func Cs() -1/2/pi/freq/im(Z())
.func Ls() im(Z())/2/pi/freq
```

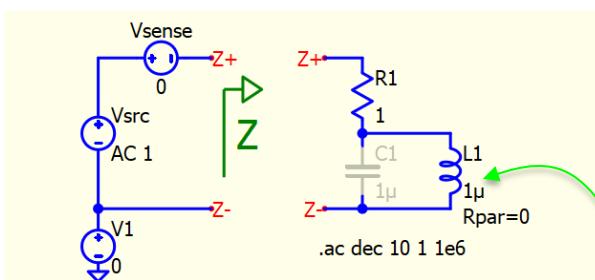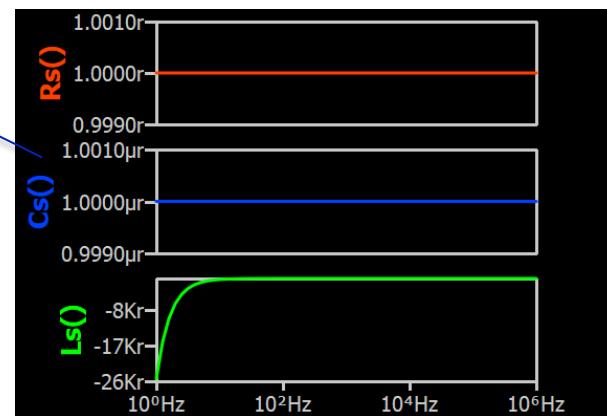

Equivalent Rs-Cs or Rs-Ls from Vsrc

```
.func Z() V(Z+,Z-)/I(Vsense)
.func Rs() re(Z())
.func Cs() -1/2/pi/freq/im(Z())
.func Ls() im(Z())/2/pi/freq
```

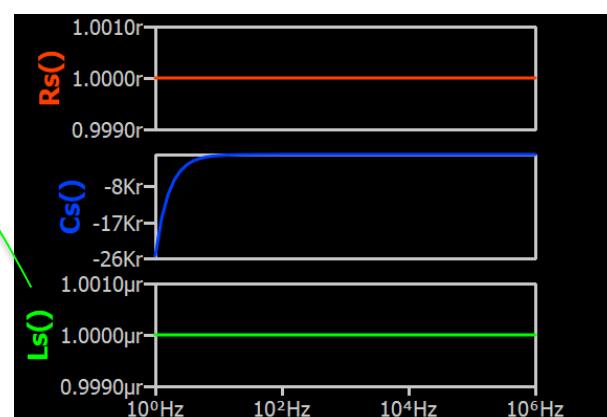

General form of admittance calculation in .ac (parallel model)

Qspice : General Form Rp-Cp Or Rp-Lp in .ac.qsch

- Admittance in .ac

- Admittance





- $Z = \frac{V}{I}$
- $Y = \frac{1}{Z}$

- Rp-Cp model

- $R_p = \frac{1}{\text{re}(Y)}$
- $C_p = \frac{\text{im}(Y)}{2\pi f}$

- Rp-Lp model

- $L_p = -\frac{1}{2\pi f \times \text{im}(Y)}$

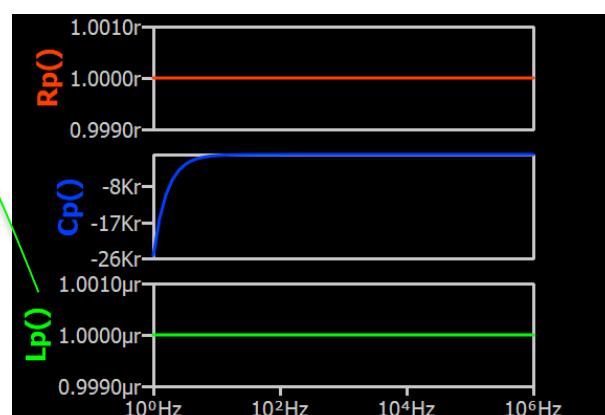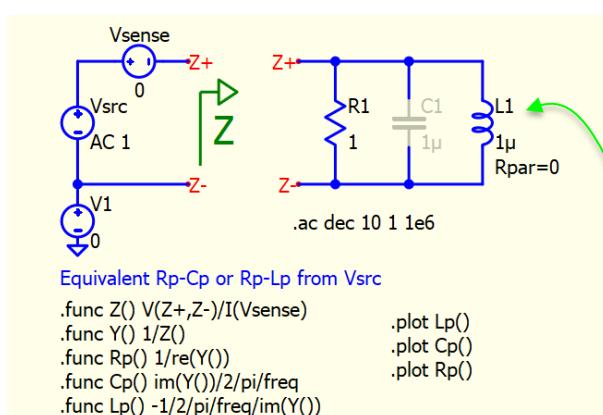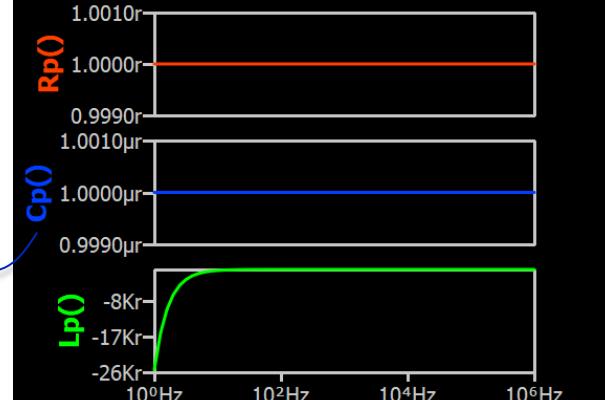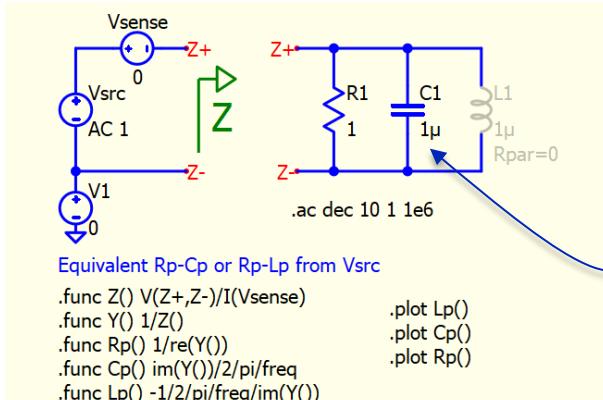

General form of impedance / admittance calculation in .ac

- Qspice function formula : 2 elements series model

```
.func Z() V(Z+,Z-)/I(Vsense)  
.func Rs() re(Z())  
.func Cs() -1/2/pi/freq/im(Z())  
.func Ls() im(Z())/2/pi/freq
```

- Qspice function formula : 2 elements parallel model

```
.func Z() V(Z+,Z-)/I(Vsense)  
.func Y() 1/Z()  
.func Rp() 1/re(Y())  
.func Cp() im(Y())/2/pi/freq  
.func Lp() -1/2/pi/freq/im(Y())
```

Impedance calculation in .ac with frequency or DC sweep

Qspice : Rs-Cs in .ac (vs freq).qsch | Rs-Cs in .ac (vs dc).qsch

- Calculate Rs-Cs in .ac

- Impedance of Rs-Cs model

- $Z = \frac{V}{I} = R_s + \frac{1}{j2\pi f C_s}$

- $R_s = \text{re}\left(\frac{V}{I}\right)$


- $C_s = -\frac{1}{2\pi f \times \text{im}\left(\frac{V}{I}\right)}$

- Example #1



- In .ac analysis, FREQ is a reserved variable. Utilize it to assist in calculating Cs

- Example #2


- To sweep DC voltage, set .ac to a single frequency measurement (.ac list 1Meg) and employ .step to sweep the DC voltage

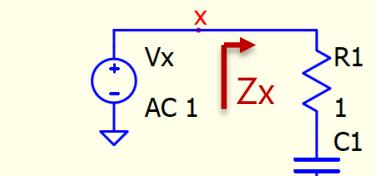

```
.ac dec 10 100 1Meg  
;plot I(Vx)  
.func Rs() re(V(x)/-I(Vx))  
.func Cs() -1/2/pi/freq/im(V(x)/-I(Vx))  
.plot Cs()  
.plot Rs()
```

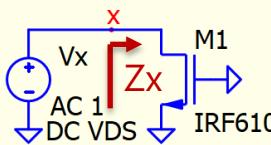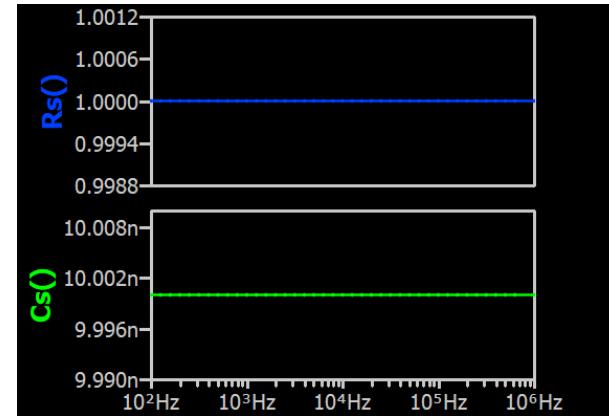


```
.step param VDS 0 100 1  
.param frq=1Meg  
.ac list frq  
;plot I(Vx)  
.func Rs() re(V(x)/-I(Vx))  
.func Cs() -1/2/pi/frq/im(V(x)/-I(Vx))  
.plot Cs()  
.plot Rs()
```

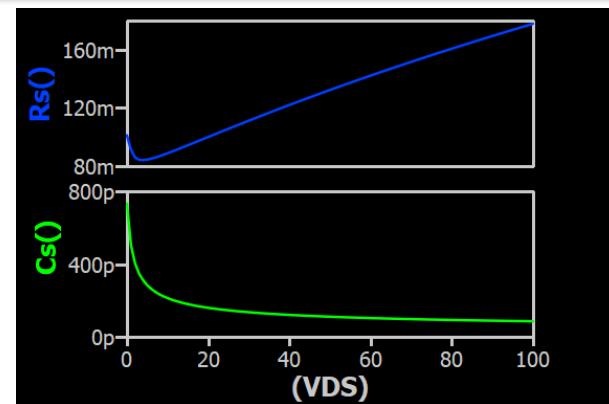

Bussing of Connections and Array of Components

Qspice : Array - LC example.qsch

- Bus and Array
 - Arrays can be defined with square brackets [n:m], which can be used for bus connections or component definitions
 - This example demonstrates using the array method to replicate a lumped LC filter network
 - To tap a single node from a bus, right-click and place a bus tap on the bus wire
 - It is recommended for the user to verify the array structure from the netlist

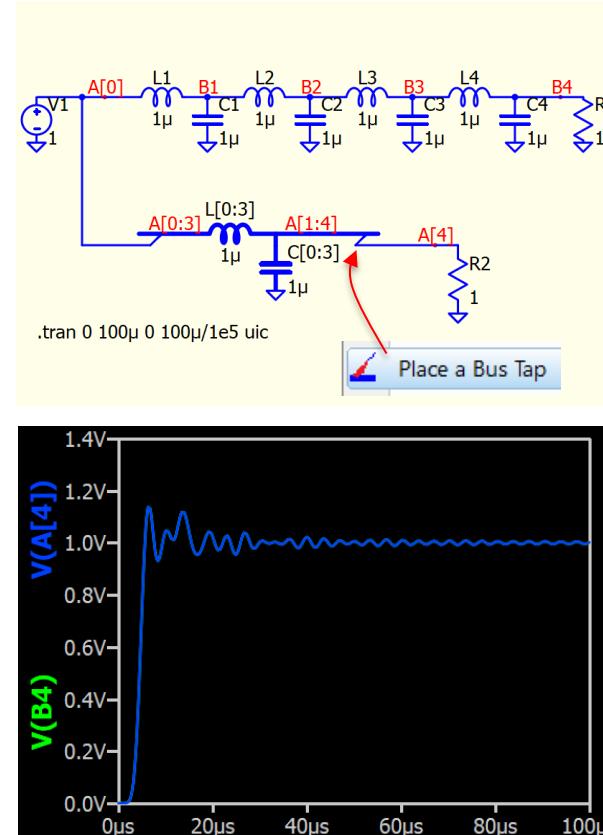

Netlist

```
L1 A[0] B1 1μ
C1 B1 0 1μ
L2 B1 B2 1μ
C2 B2 0 1μ
L3 B2 B3 1μ
C3 B3 0 1μ
L4 B3 B4 1μ
C4 B4 0 1μ
R1 B4 0 1
L[0] A[0] A[1] 1μ
L[1] A[1] A[2] 1μ
L[2] A[2] A[3] 1μ
L[3] A[3] A[4] 1μ
C[0] A[1] 0 1μ
C[1] A[2] 0 1μ
C[2] A[3] 0 1μ
C[3] A[4] 0 1μ
R2 A[4] 0 1
V1 A[0] 0 1
.tran 0 100μ 0 100μ/1e5 uic
.plot V(B4) V(A[4])
.end
```

Bussing of Connections and Array of Components

- Array
 - An array of components can be used to simplify paralleling .subckt X-device

