
01 CHECK THE PARTS


Two boards and two antennas. Leave USB power disconnected.

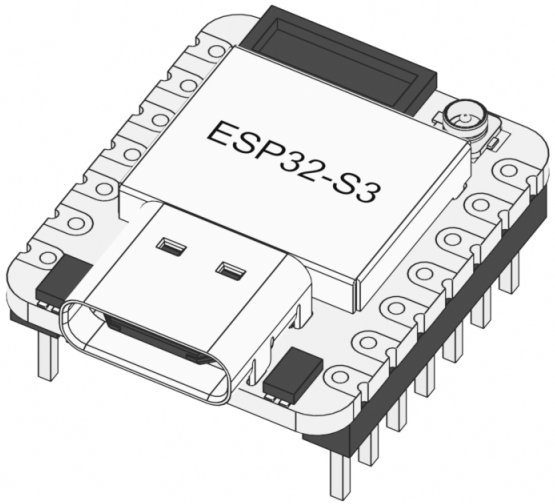

A 1x

XIAO ESP32S3


Main board

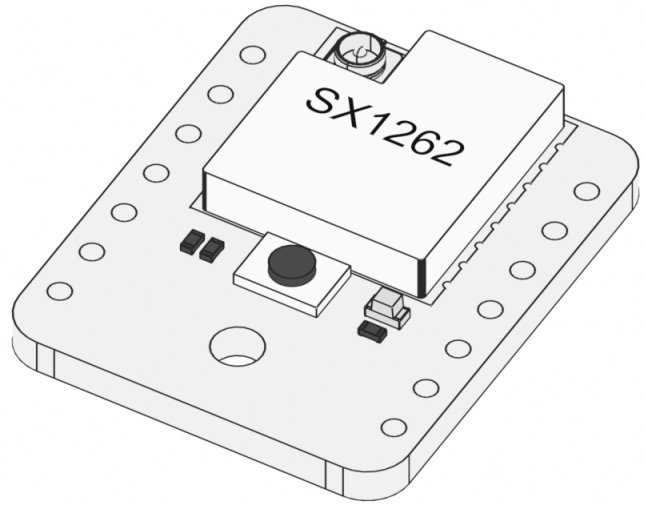

B 1x

Wio-SX1262

LoRa board

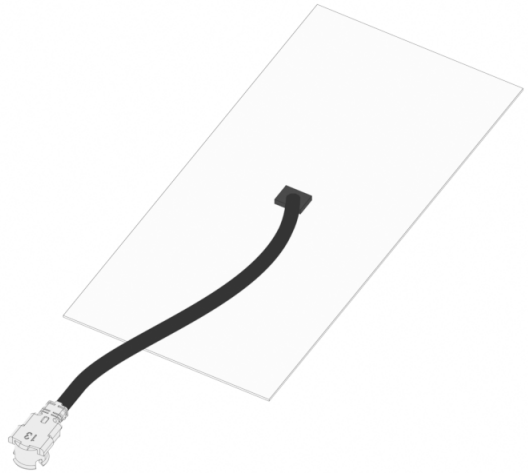

C 1x

Wi-Fi antenna

Broad, 2.4 GHz




D 1x

LoRa antenna

Long and narrow


02 CONNECT WI-FI

Broad antenna C + board A

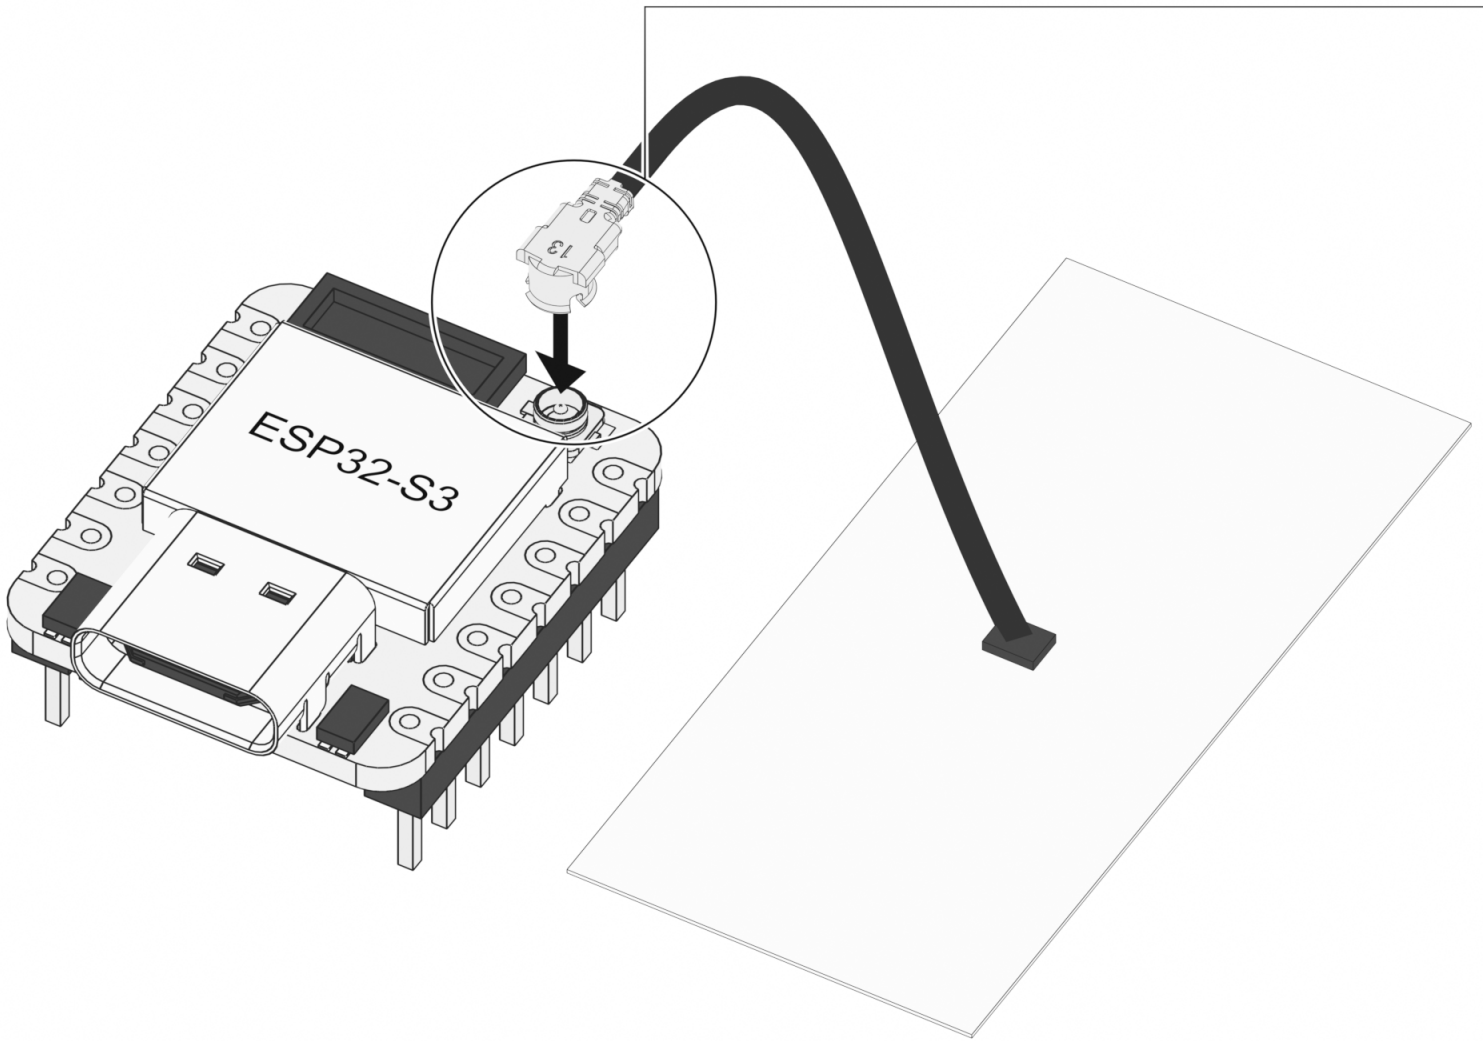


Keep the plug level. Press the metal cap, not the cable.

ANTENNA PLUG / ENLARGED

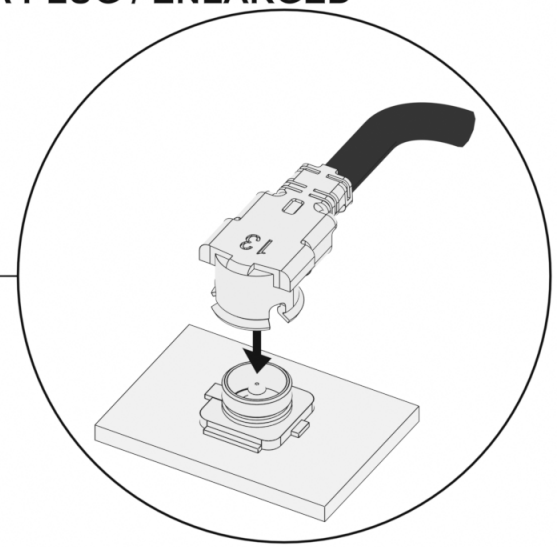


Center it over the socket.

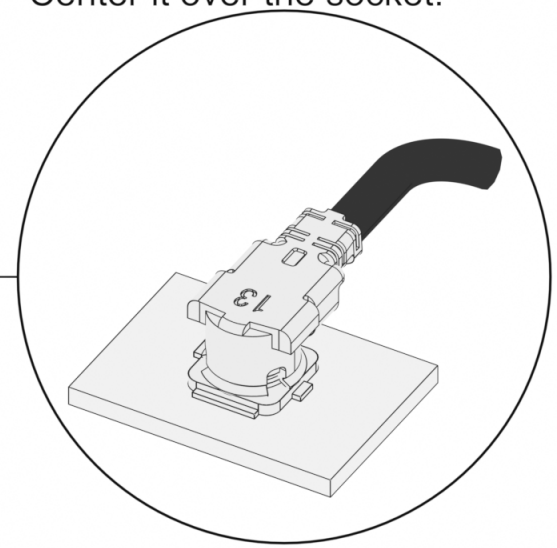

Press straight down until seated.


03 CONNECT LORA

Narrow antenna D + board B

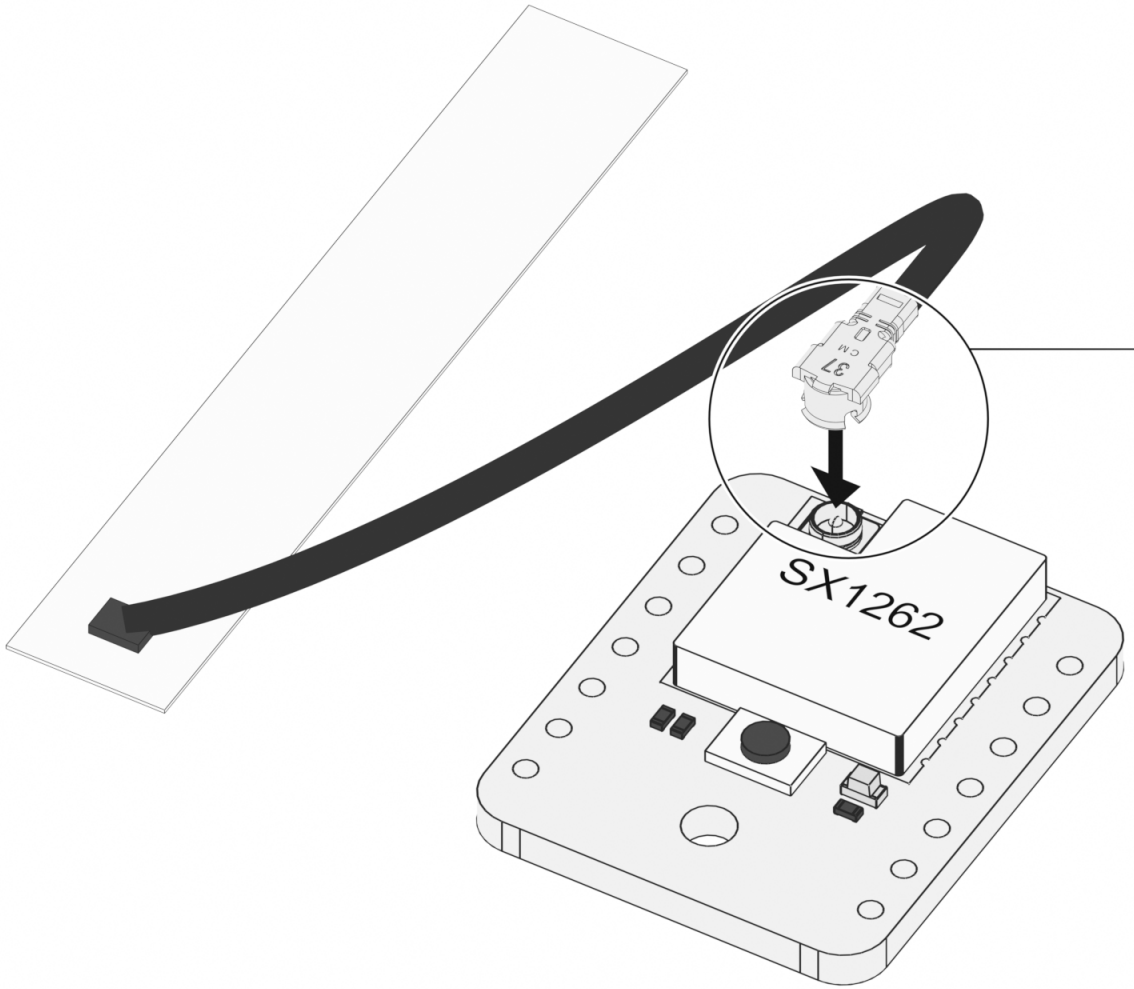


Keep the plug level. Press the metal cap, not the cable.

ANTENNA PLUG / ENLARGED

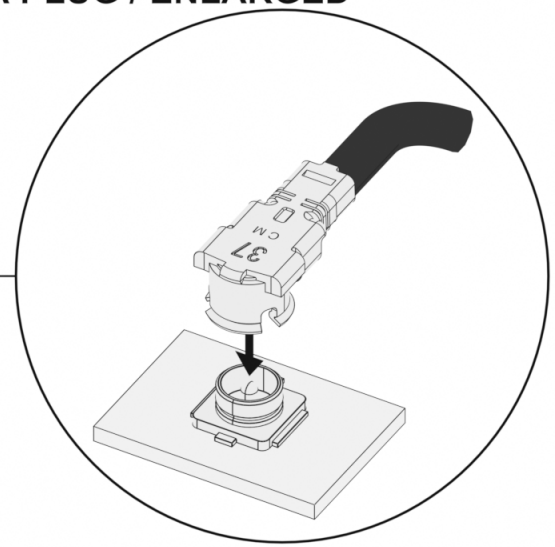

Center it over the socket.

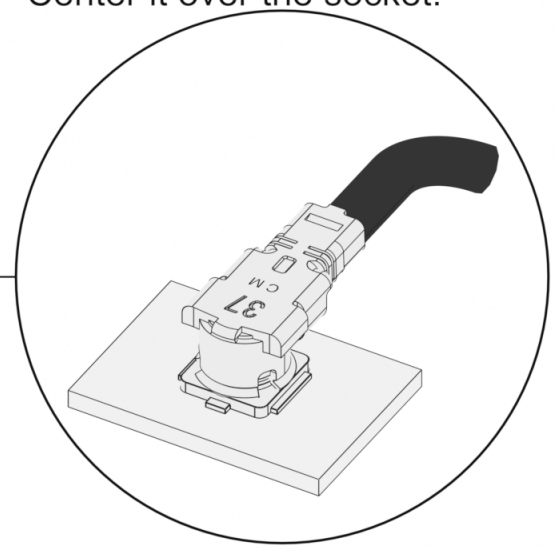


Press straight down until seated.

04 JOIN THE BOARDS


Wio above XIAO. Keep both antennas connected and both shields facing up.

ALIGN THE BOARDS

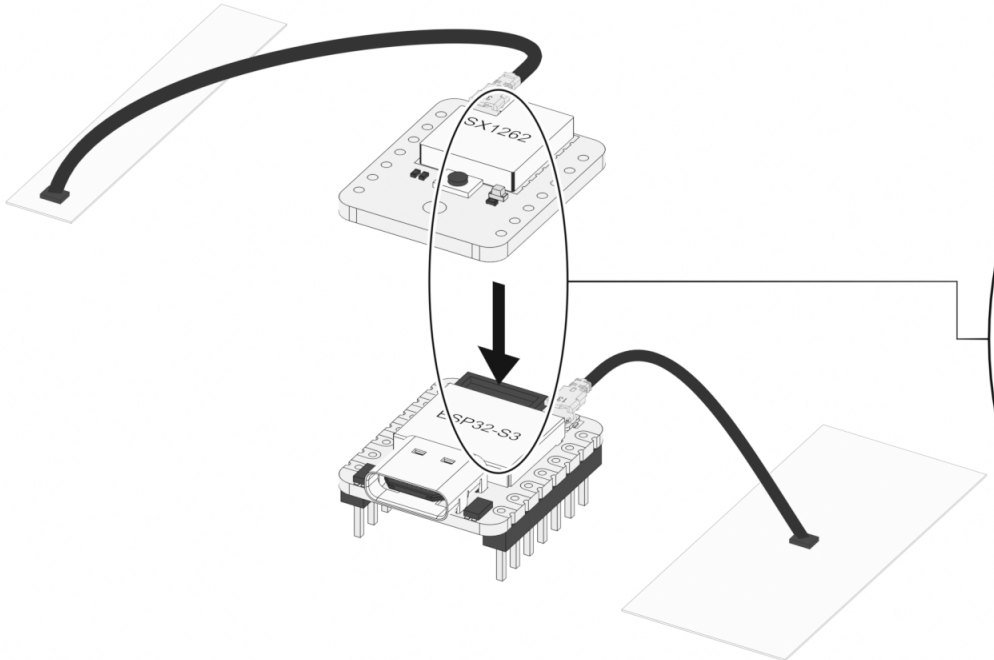


Align the small connector,
then press straight down.

REAR CONNECTOR

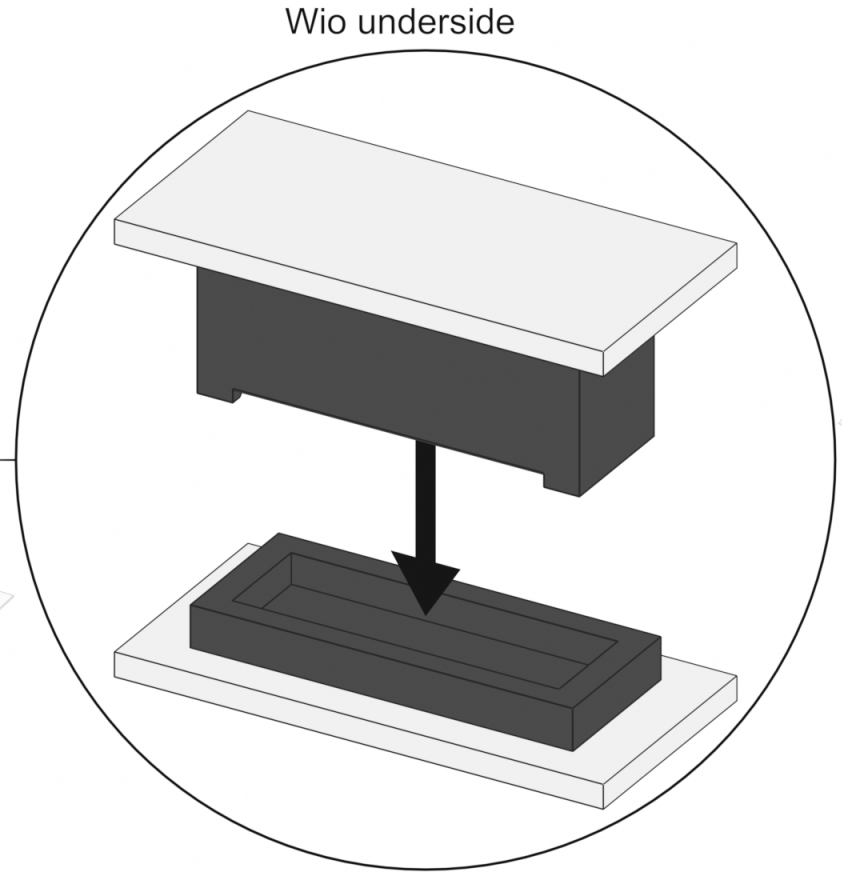

XIAO socket shown simplified.

JOINED

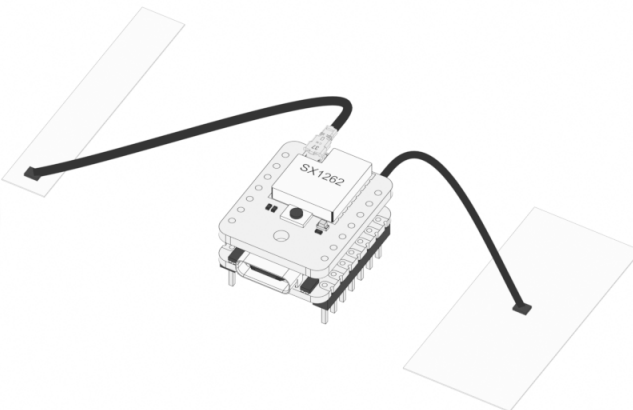


Side header pins point down.

MESH KIT / STEPS 01-04


XIAO ESP32S3 + Wio-SX1262

01 CHECK THE PARTS

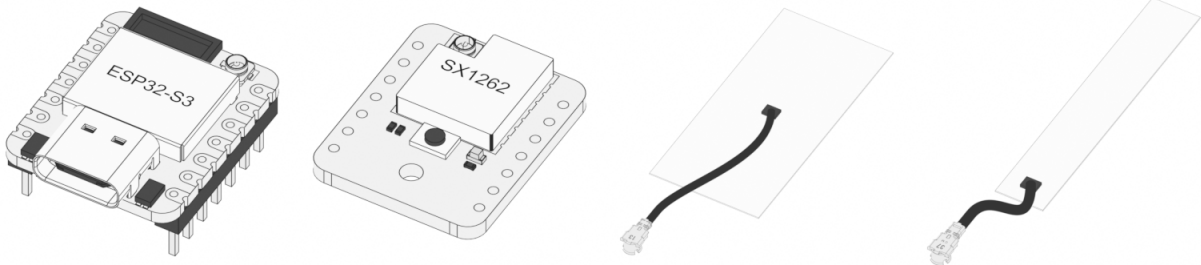


A XIAO B Wio C Wi-Fi D LoRa

02 CONNECT WI-FI

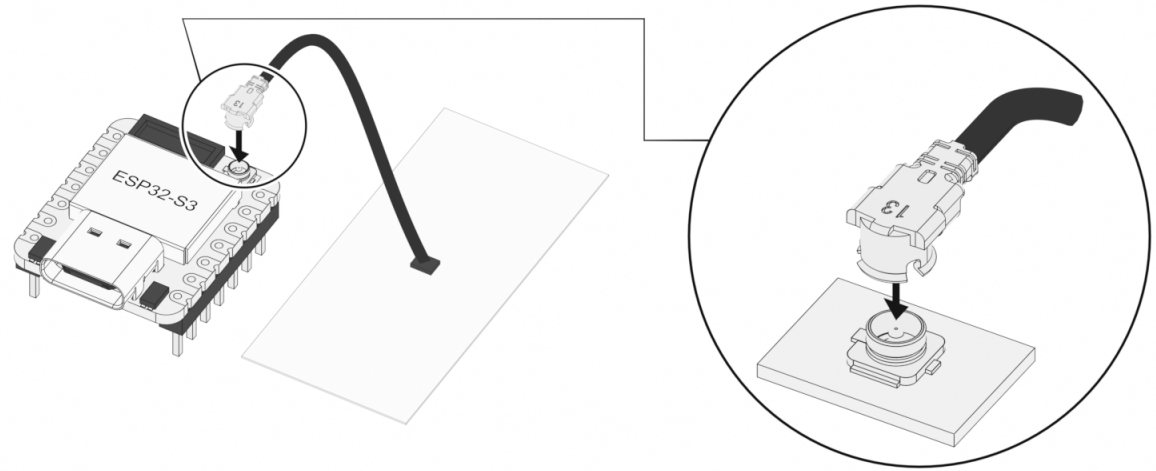


Broad antenna to XIAO. Press straight down.

03 CONNECT LORA

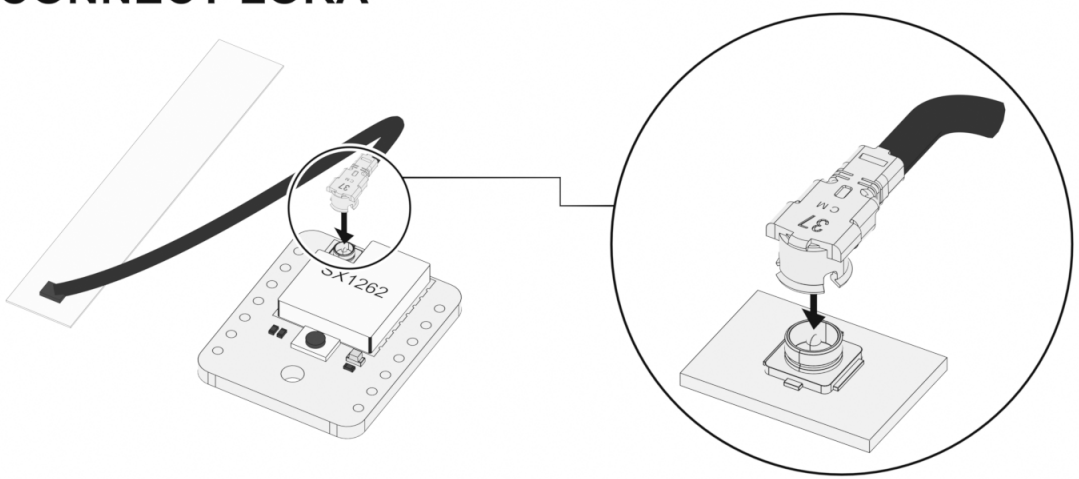

Narrow antenna to Wio. Press straight down.

04 JOIN THE BOARDS

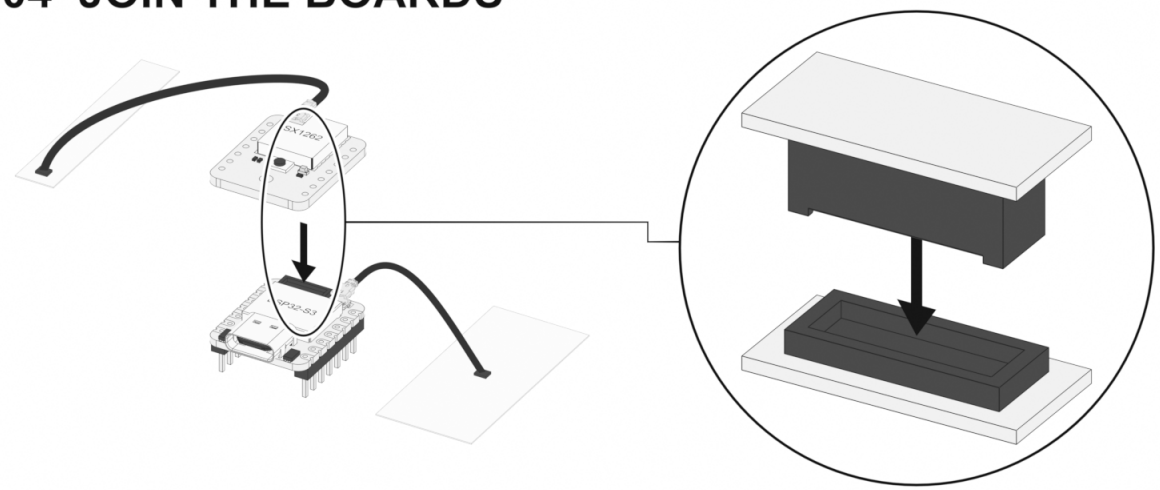

Wio above XIAO. Press straight down.

XIAO socket simplified.