
01 CHECK THE PARTS


Two boards and two antennas. Leave USB power disconnected.

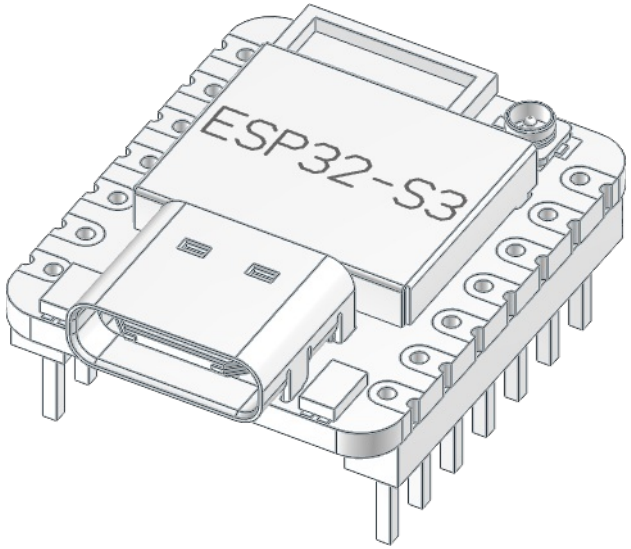

A 1x

XIAO ESP32S3


Main board

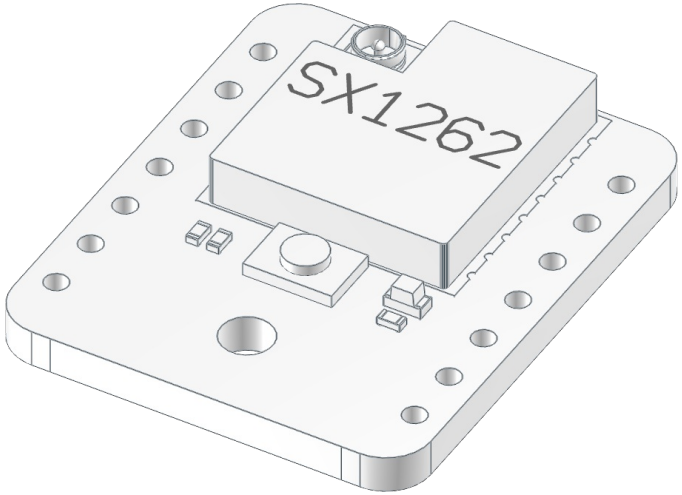

B 1x

Wio-SX1262

LoRa board

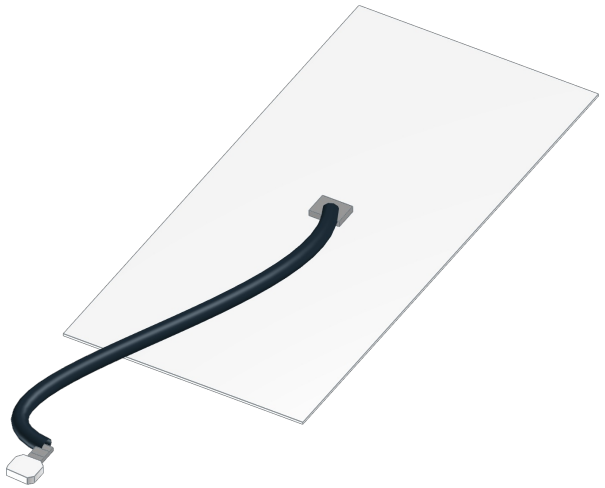

C 1x

Wi-Fi antenna

Broad, 2.4 GHz




D 1x

LoRa antenna


Long and narrow

02 CONNECT WI-FI


Broad antenna C + board A

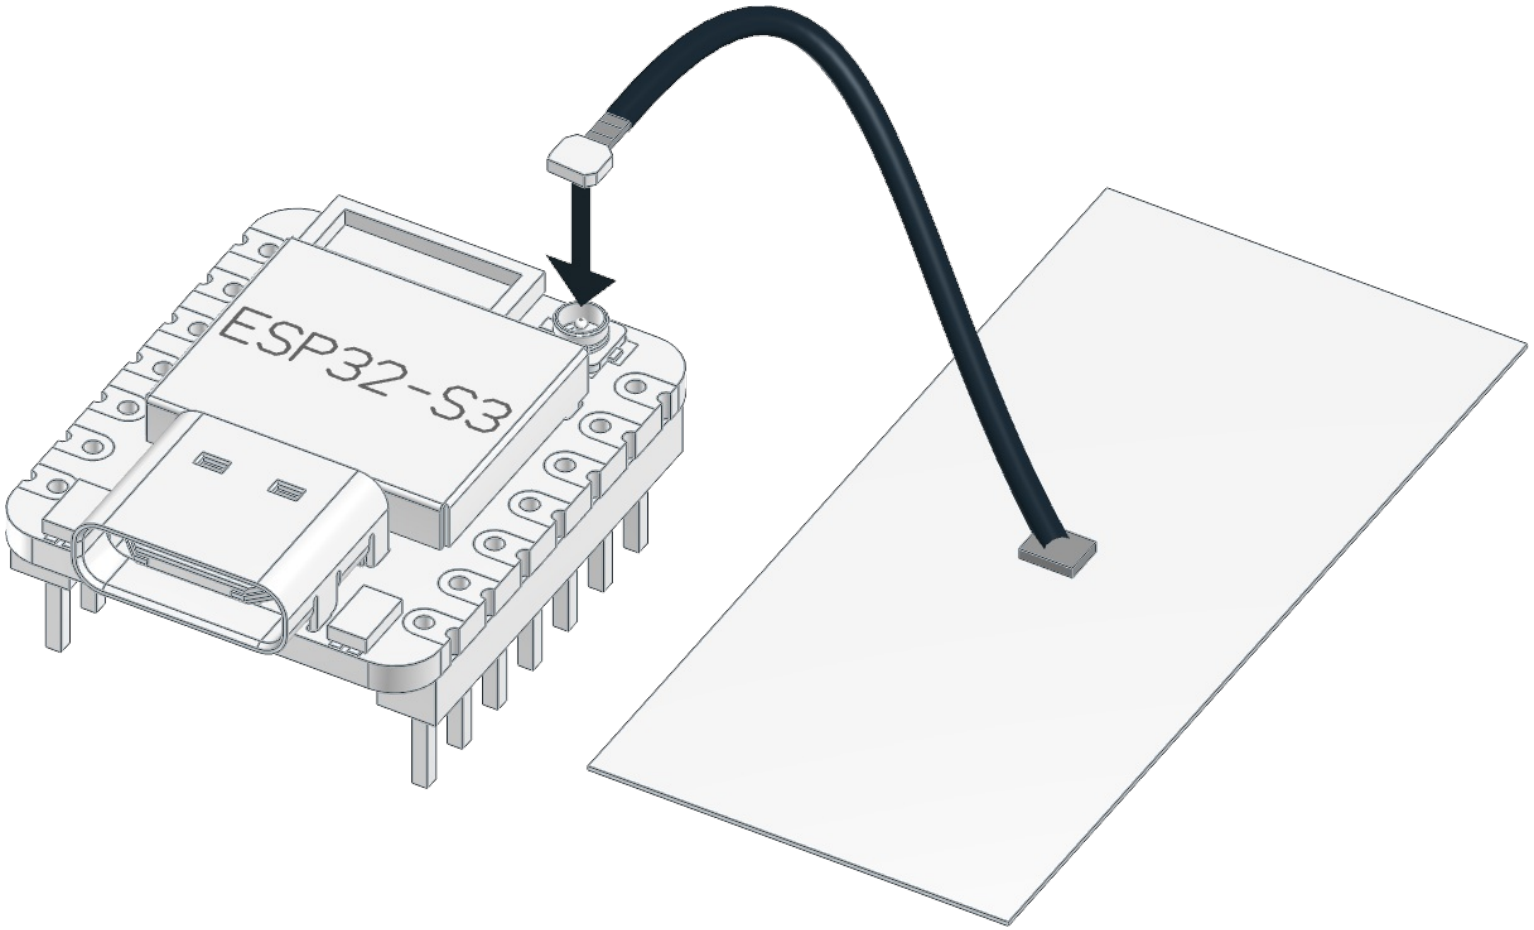

PLUG CLOSE-UP

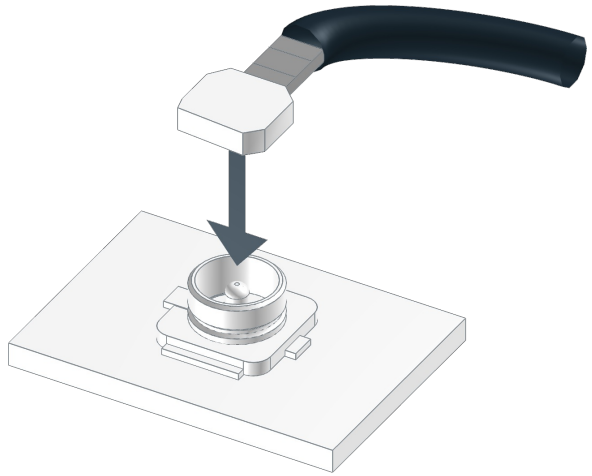

Center it over the socket.

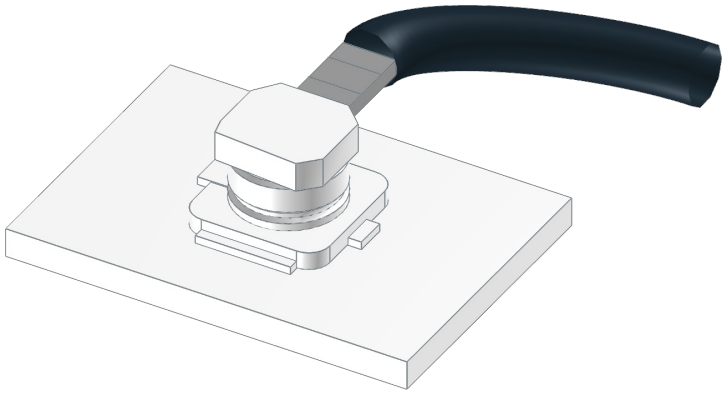


Press straight down until seated.


Keep the plug level. Press the metal cap, not the cable.

03 CONNECT LORA


Narrow antenna D + board B

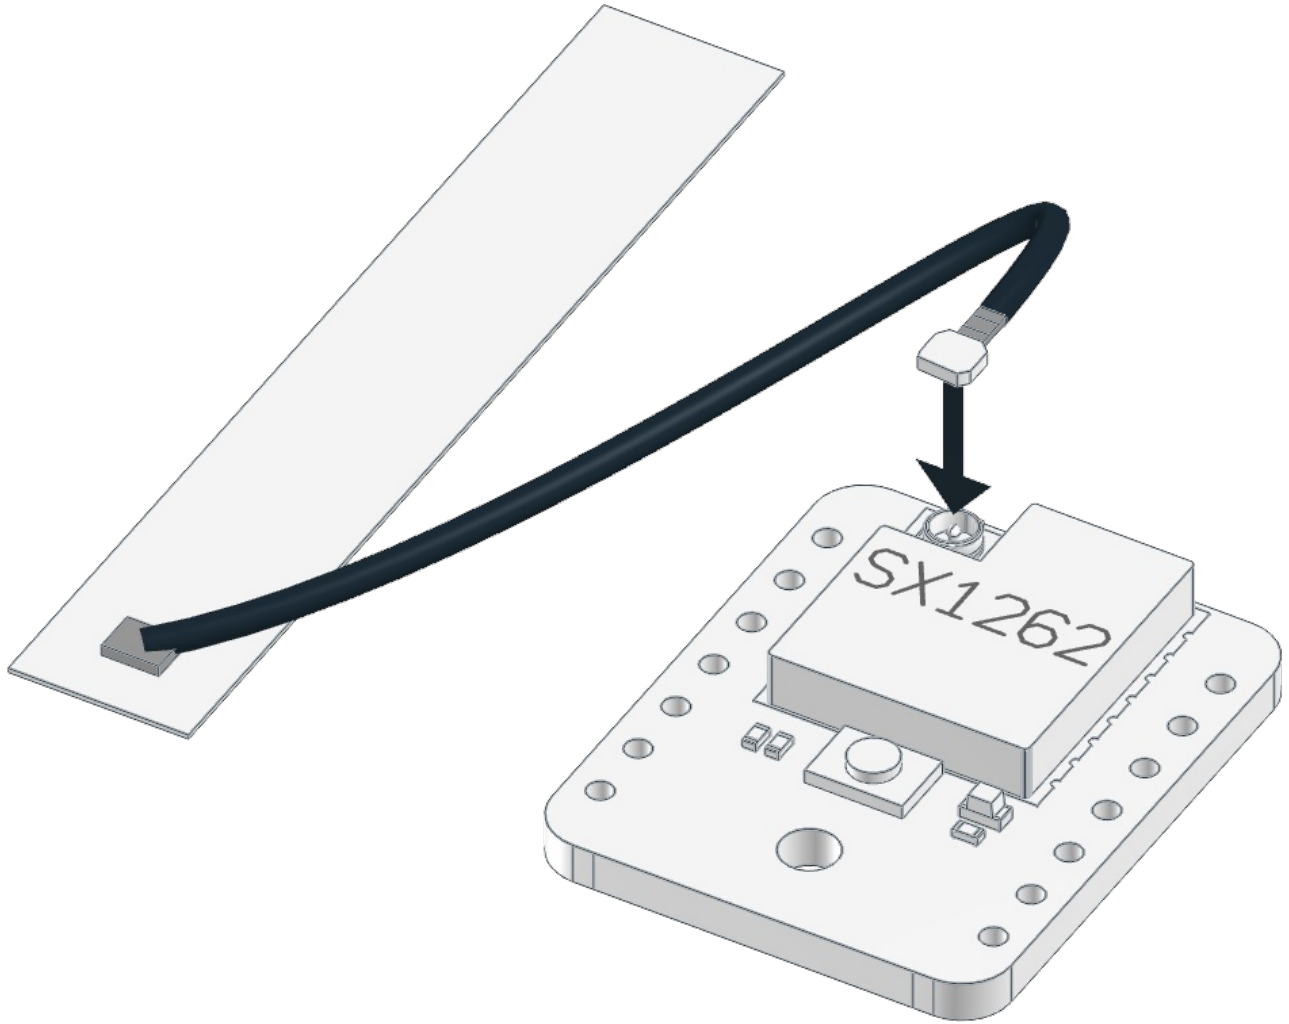

PLUG CLOSE-UP

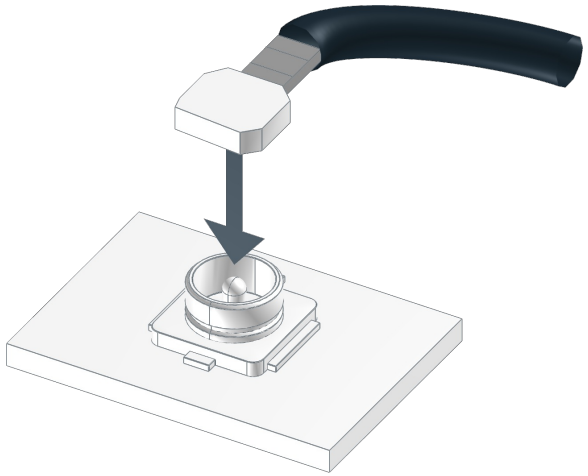

Center it over the socket.

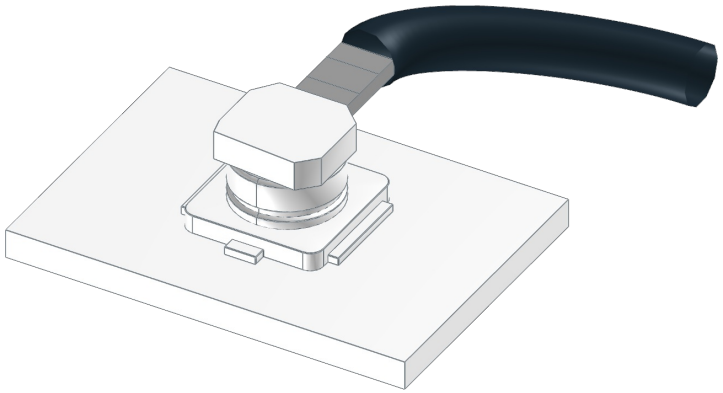


Press straight down until seated.

Keep the plug level. Press the metal cap, not the cable.

04 JOIN THE BOARDS

Wio above XIAO. Keep both antennas connected and both shields facing up.


ALIGN THE BOARDS

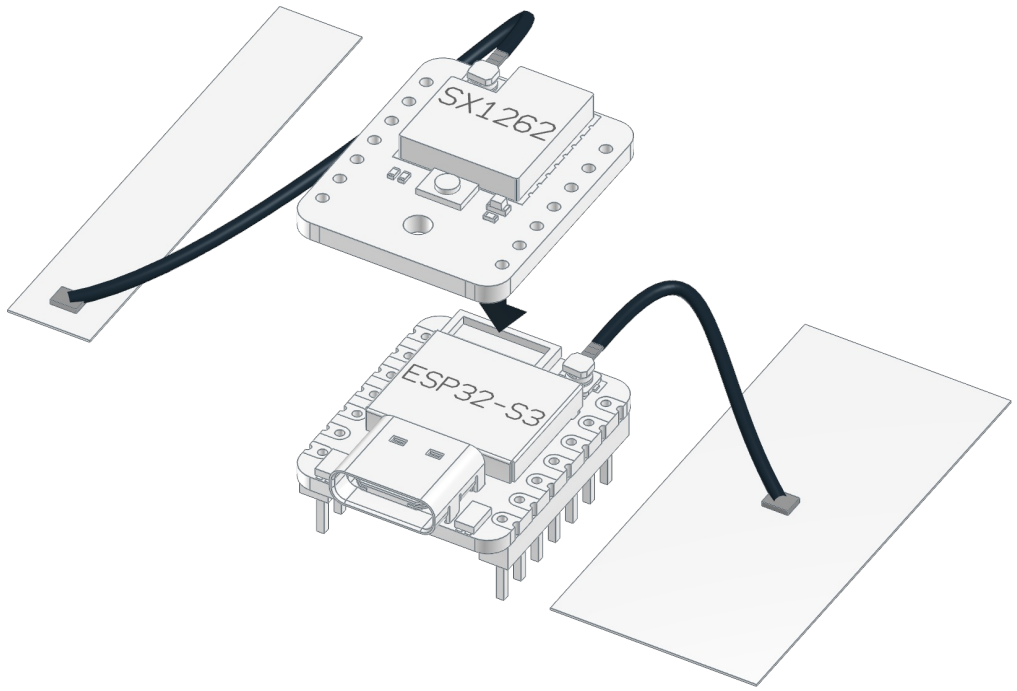

Align the small connector,
then press straight down.

REAR CONNECTOR CLOSE-UP


Wio underside

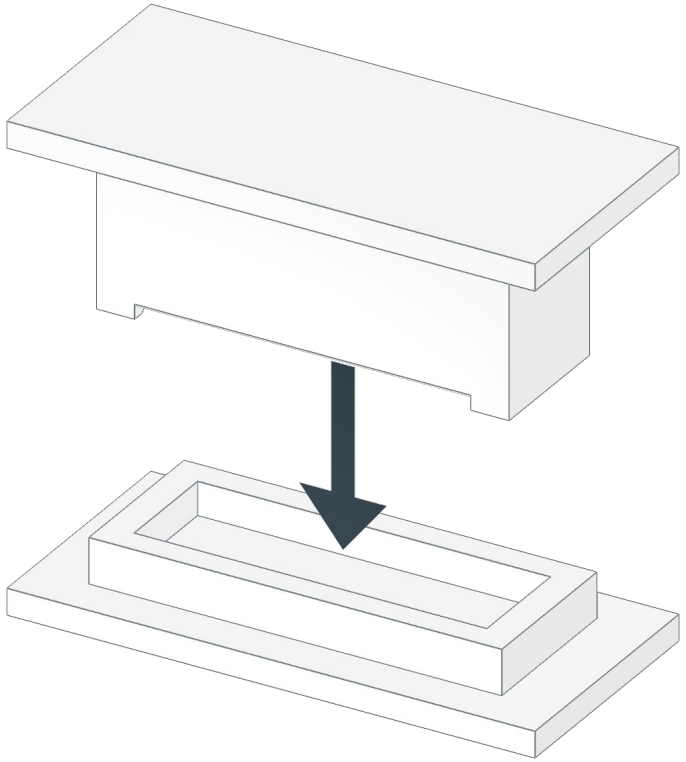

XIAO top

XIAO socket shown simplified.

JOINED

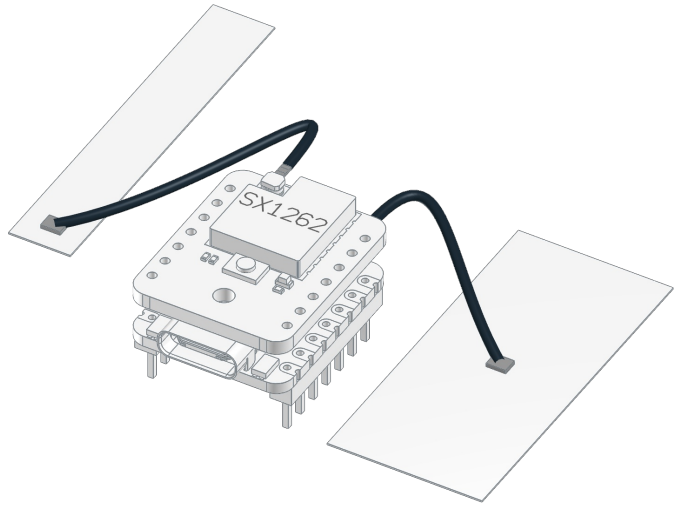


Side header pins point down.

MESH KIT / STEPS 01-04


XIAO ESP32S3 + Wio-SX1262

01 CHECK THE PARTS

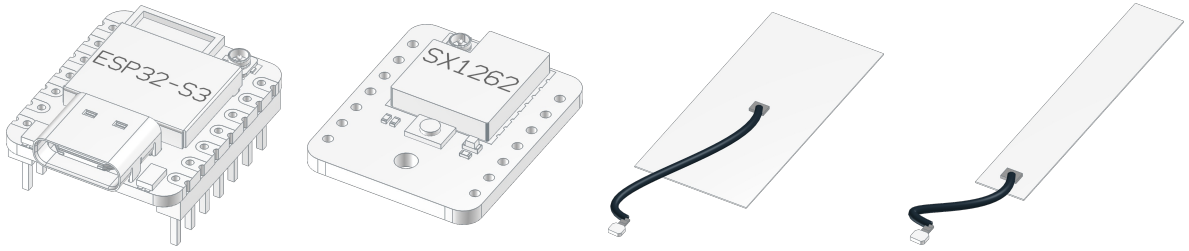


A XIAO B Wio C Wi-Fi D LoRa

02 CONNECT WI-FI

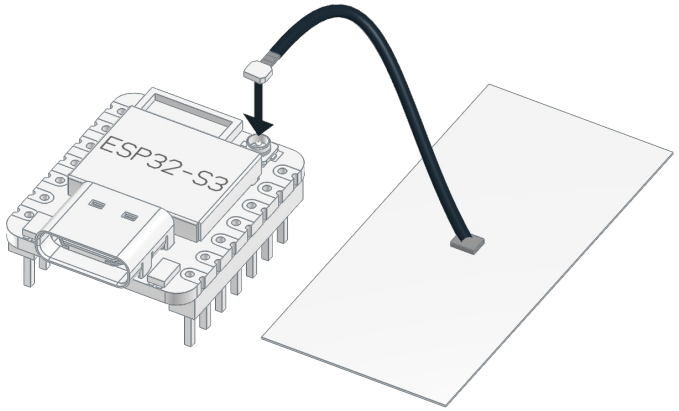


PLUG CLOSE-UP

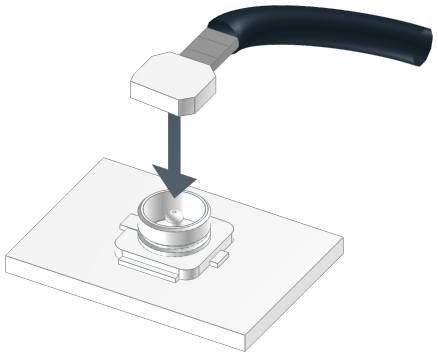


Broad antenna to XIAO. Press straight down.

03 CONNECT LORA

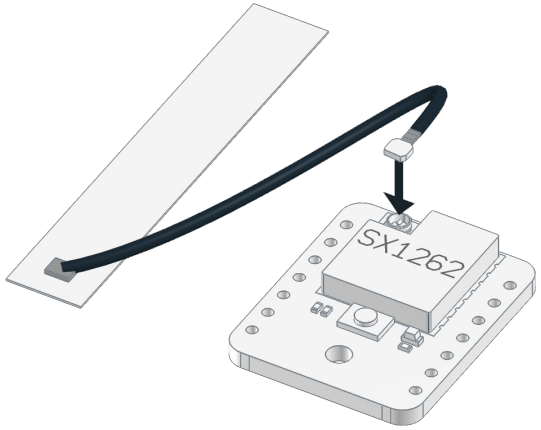


PLUG CLOSE-UP

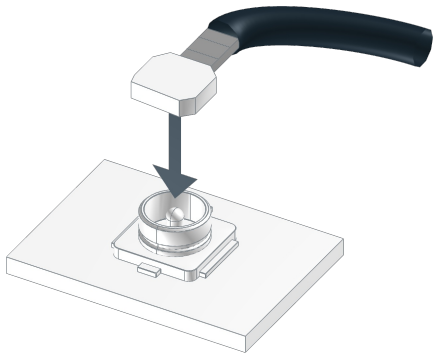


Narrow antenna to Wio. Press straight down.

04 JOIN THE BOARDS

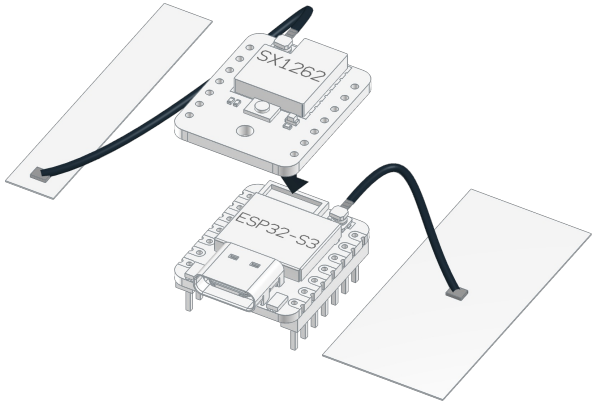

Wio above XIAO. Press straight down.

REAR CONNECTOR

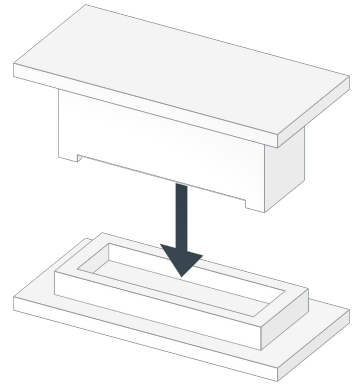

XIAO socket simplified.