
01 CHECK THE PARTS


MESH KIT

XIAO ESP32S3 + Wio-SX1262

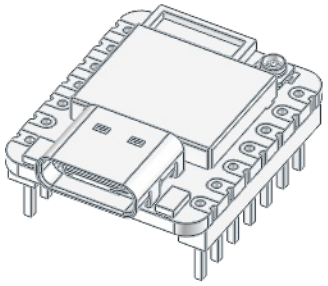


A XIAO ESP32S3

1x

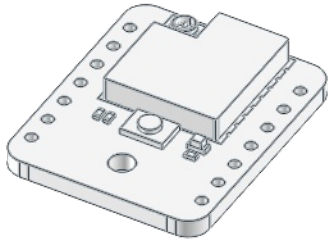

B Wio-SX1262

1x

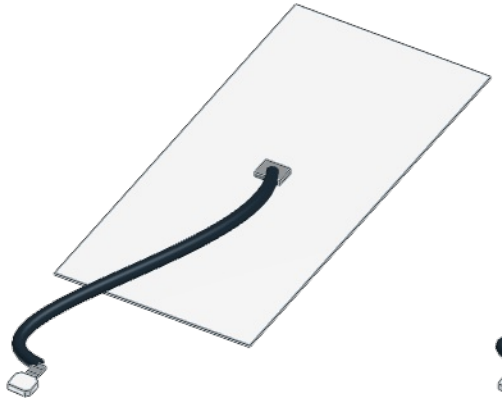

C Wi-Fi antenna

1x




D LoRa antenna

1x

Keep USB power disconnected while you assemble the kit.

02 CONNECT WI-FI

Broad antenna C + XIAO board A

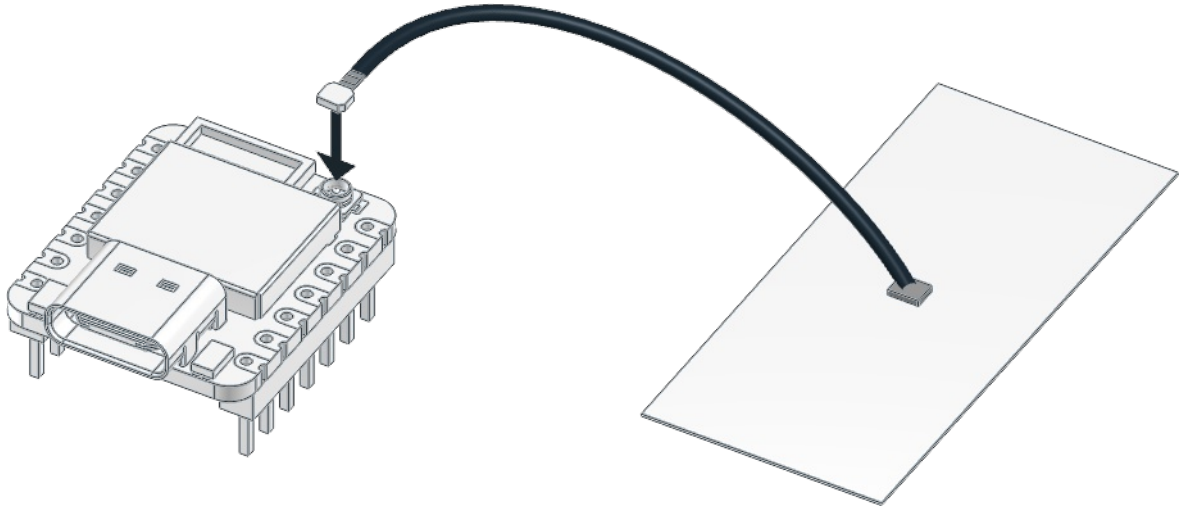


Align the plug with the small antenna socket.

Keep it level, then press straight down.

Use the broad 2.4 GHz antenna. Hold the plug, not the cable.

03 CONNECT LORA

Narrow antenna D + Wio board B

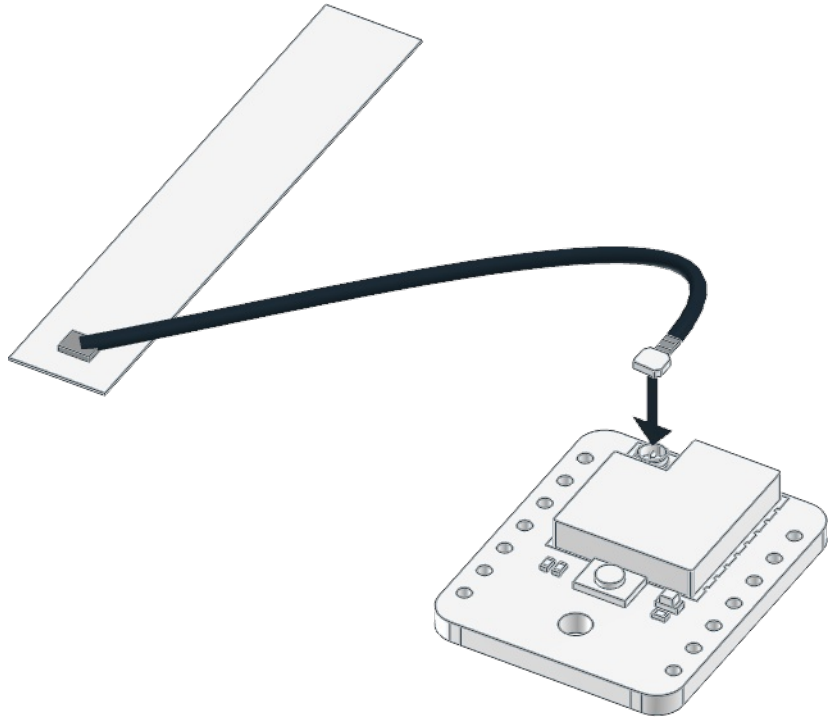


Align the plug with the small antenna socket.

Keep it level, then press straight down.


Use the long, narrow LoRa antenna.

04 JOIN THE BOARDS

Keep both antennas connected

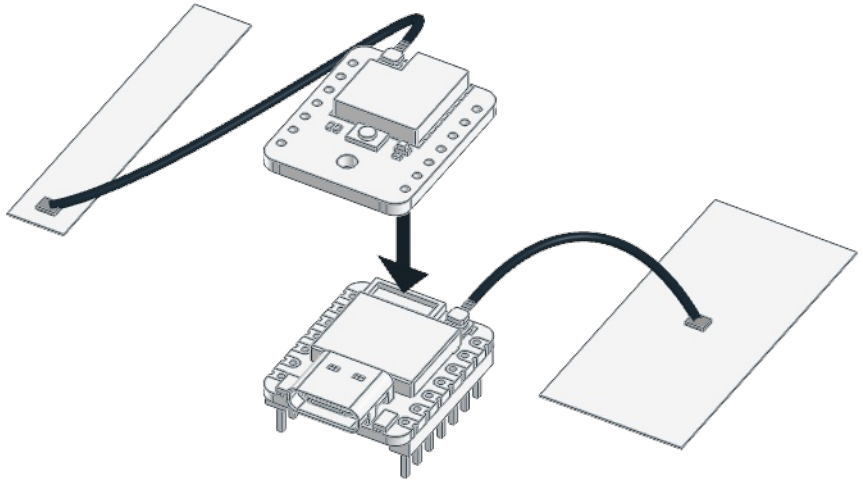

ALIGN THE REAR CONNECTOR

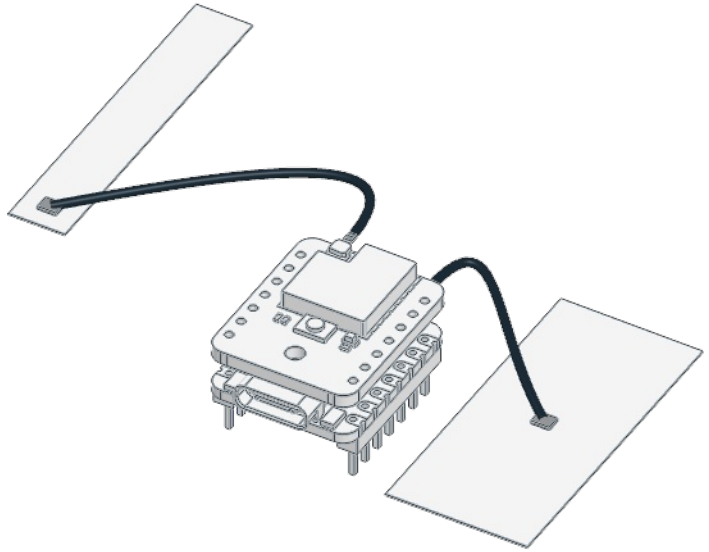

ASSEMBLED

Wio above XIAO, both shields facing up.

Mate the small board-to-board connector. The side header pins point down.